


PBN-LC – Plant Bench



35 min

Thank you for choosing this furniture.

PLEASE RETAIN PACKAGING UNTIL YOU HAVE COMPLETED ASSEMBLY.

Information about your furniture:

Our furniture ranges have been carefully crafted from solid wood and natural wood veneers. Each piece of furniture has unique characteristics such as knots, variances and graining. These are part of the natural character of the furniture itself.

Caring for your furniture:

Extreme temperature can cause slight movements in the wood itself so please avoid placing your furniture close to radiators or other direct sources of heat. Humidity should also be avoided. Please avoid exposing your furniture to continued bright sunlight as it can affect the color. Any fluid should be removed as quickly as possible. Always lift your furniture when moving, as dragging can cause damage to your furniture or flooring. Extreme changes in temperature and humidity during transit may result in a powder residue forming so silica gel bags have been included to alleviate this natural occurrence. This residue is harmless and can easily be removed before assembly with a damp cloth and mild detergent.

After care:

Wipe the surfaces with a dry cloth and an occasional use of normal household polish. We also recommend you use household spray polish occasionally on the drawer grooves and runners as this will aid use. Please do not use detergents or chemicals on your furniture.

Before you start assembly.:


Please check that you have all the correct parts and fittings as detailed below. In the unlikely event of a part being damaged or missing please check the component or part number on the diagram below and contact your retailer for corrective action.

In the unlikely event of a part being damaged or missing please mark the component or part of the diagram and email to:

support@mountainsideproducts.com

Please provide your name, address and phone number so that we can ship a replacement part to you.

Part 2
Left Panel

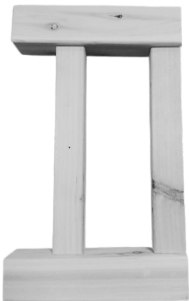


Part 1
Top



Part 3
Right Panel



Part 4
Support Bar



Part 4
Support Bar



A = x4
Dowel




B = x8
1.5" Screw

Step 1: Arrange pieces as per the diagram above

Step 2: Insert 2 wooden dowels into the tops of Part 2 (Left Panel). With the top upside down (Part 1) insert the left panel (part 2) upside down aligning the dowels in the left panel with the holes provided in the top. Use 2 of the screws provided to secure the panel to the top.



Step 3: Align the support bar (1 of 2 pc) between the brace (located on the bottom of the top piece) and the bottom arm of the left panel. Use 2 of the screws provided to secure the panel to the top.

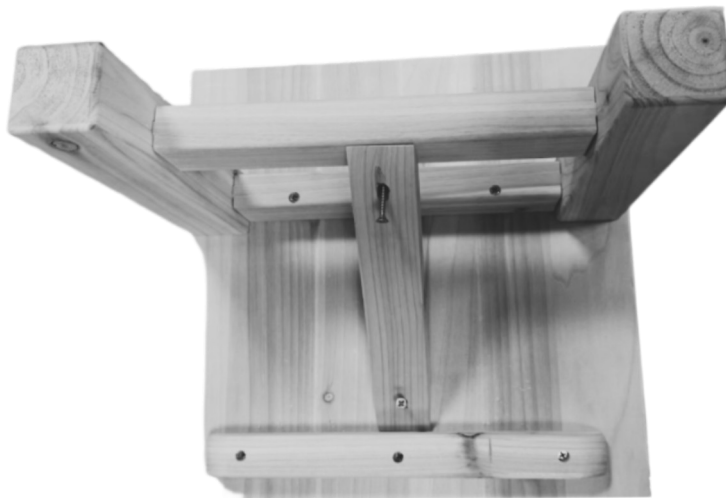

Step 4: Repeat steps 2 and 3 using the remaining Right Panel (Part 3).

