


WOOD FRAME MIRROR INSTALLATION GUIDE

Included hardware: 2 expansion screws


Before installation:

Before installing, please check that the 2 hooks on the back of the mirror are secure, and make sure the wall is suitable for expansion screw installation.

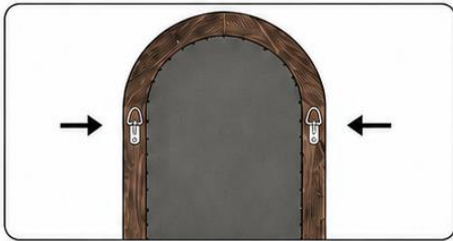


1 Check the hooks

Place the mirror face down on a soft surface. Locate the two hooks on the back and measure the distance between them.

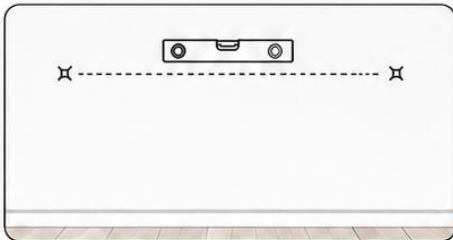


2 Mark the wall

Transfer the hook spacing to the wall. Mark 2 points at the same height, using a level if needed.

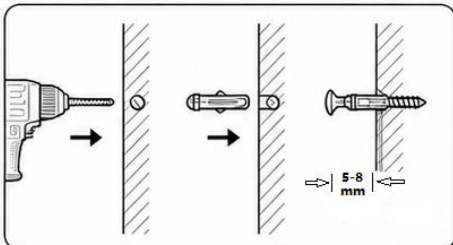


3 Drill and install anchors

Drill holes at the marked points. Insert the expansion anchors, then tighten the screws. Leave about 5–8 mm between the screw heads and the wall.

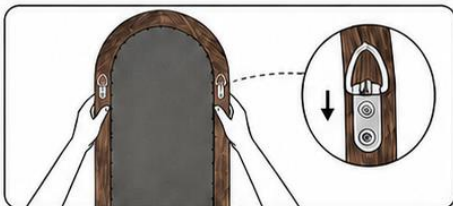

4 Hang the mirror

Align both hooks with the screw heads and gently lower the mirror until it is securely hung.

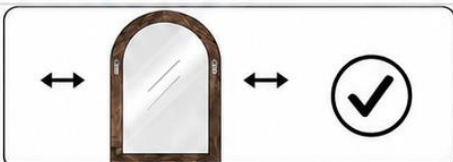

5 Check stability

Gently move the mirror to confirm both hooks are fully engaged and the mirror is level and stable.



IMPORTANT NOTES

- Use the included expansion screws on solid walls such as concrete or brick.
- For drywall, hollow walls, or wood walls, use suitable wall anchors based on the wall type.
- Make sure the wall and hardware can support the weight of the mirror.
- For large or heavy mirrors, two-person installation is recommended.