


Installation and Care Guide


Rain Showerheads

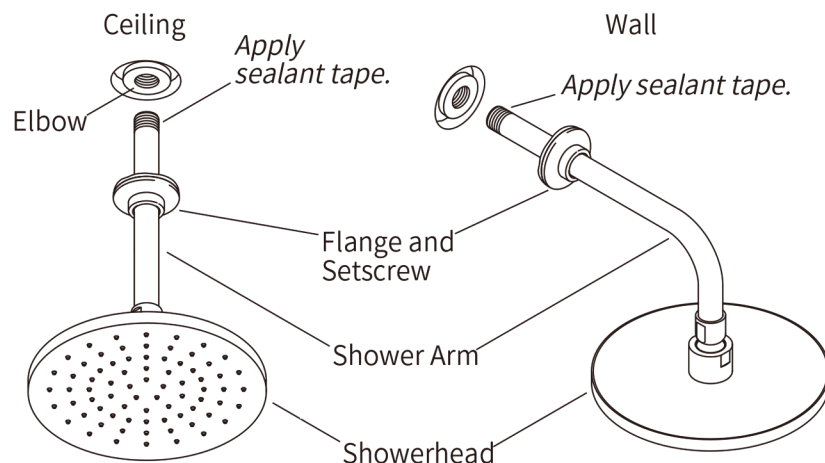

Install the Showerhead

- ❑ Remove the existing showerhead and shower arm, if applicable.
- ❑ Install the shower elbow. Make sure the elbow is securely mounted and has adequate strength to support the showerhead.
- ❑ Apply a bead of plumbers putty or other sealant to the back of the flange.
- ❑ Place the flange onto the long end of the shower arm as shown.
- ❑ Apply sealant tape to the threads of each end of the shower arm.
- ❑ Install the shower arm to the shower elbow and tighten securely with a clean strap wrench.
- ❑ Press the flange against the finished wall/ceiling and secure to the shower arm by tightening the setscrew.
- ❑ Remove any excess plumbers putty.
- ❑ Turn on the water to flush any debris through the shower arm.
- ❑ Turn off the water.
- ❑ Install the showerhead to the shower arm and tighten securely with a clean strap wrench.
- ❑ Check all connections for leaks.

NOTE: After each use some water may remain in the showerhead. To prevent dripping, tilt the showerhead to drain.

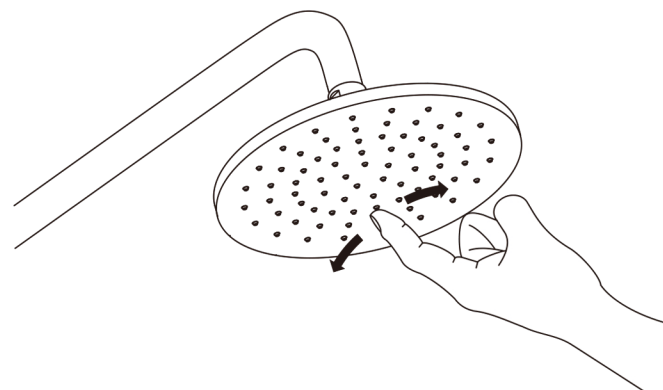

Clean the Spray Holes

To dislodge debris and mineral build-up:

- ❑ Run water through the showerhead.
- ❑ Firmly rub your finger back and forth across the spray holes in the showerhead face.
- ❑ If this procedure fails to improve the performance of the showerhead, proceed to the "Clean the Screen Washer" section of this guide.


Tools




Plumbers Putty



Sealant Tape

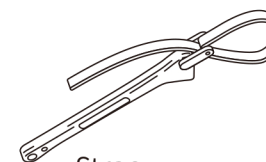

Strap Wrench



Thin Bladed Screwdriver

Important Information



WARNING: Risk of scalding. High water temperature can cause severe burns. Set the water temperature at or below 120°F (49°C) following the adjustment procedure in the valve Installation and Care Guide.

NOTICE: Choose an automatic compensating valve with the appropriate minimum flow rating to ensure your valve will provide safety at the lowest flow rates.

- ❑ Observe all local plumbing and building codes.

NOTE: After each use, tilt the showerhead to drain.