


Pedicure Chair Instruction

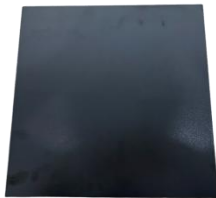


Part List

					
A.Seat Cushion 1PC	B.Armrest 2 PCS	C.Backrest 1PC	D.Base 1PC		
					
E.Leg support 1PC	F.Leg Cushion 1PC	G.Foot Bar 1PC	H.Connecting Iron 4PCS	I.Bolts 6PCS	
					
J. Pump 1PC	K. Stool Base 1PC	L. Gas pump 1PC	M.Stool Cushion 1PC	N. Wheel 5PCS	
					
O. Foot Basin 1PC	P. Plank 1PC	Q. Base bracket 2PCS	R. Screw 4PCS	S. Gasket 4PCS	T. Screw 4PCS


Step 1: Insert two base brackets "Q" into the base "D" by screws "R" and gaskets "S" ,tighten .(pay attention to the direction of base bracket)




Step 2: Insert plank "P" into the base "D" by screws "T",tighten .(Please tighten the screws after you align the plank)

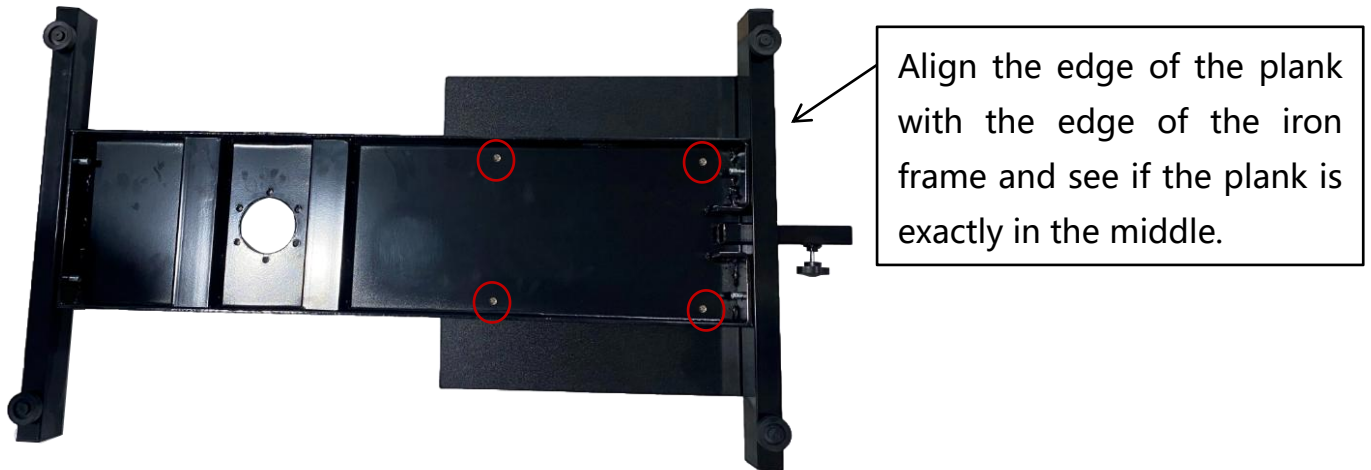

Step 3: Insert threaded bolts on bottom of pump "J" into the holes on top of base "D" .Tighten and locking 6 nuts "E" onto threaded bolts.

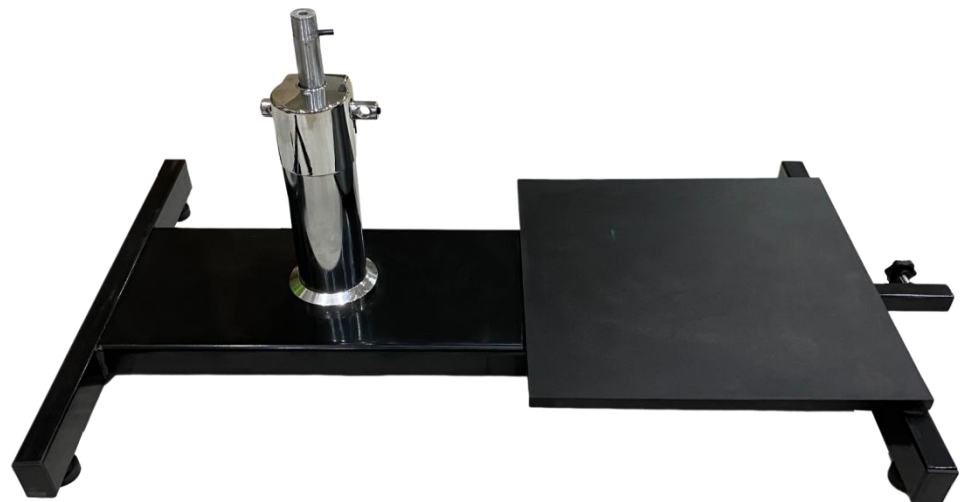

Step 4:Insert foot bar "G" into the assembled hydraulic pump "J" ,tighten the black set screws to firmly hold the foot bar in place.(pay attention to the direction of foot bar)

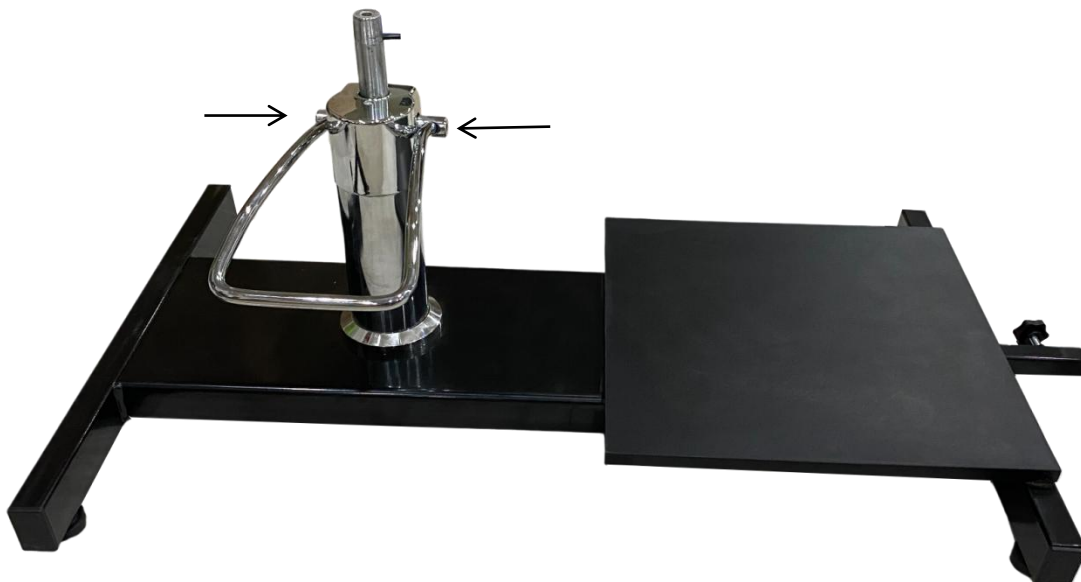

Step 5: Unscrew embedded screws on the both sides of the armrests "B", assemble connecting iron "H" to armrests by those screws. Tighten. (Noted: The direction of connecting iron)



Step 6: Unscrew embedded 8 screws on the seat cushion "A", assemble the armrests "B" to the seat cushion by those screws, make sure the angle of chair is correct and tighten. (Please pay attention to the direction of the armrests and install it exactly as shown in the picture)




Step 7: Firstly: Loosen the 2 embedded black screws on the both sides of the round tube under the bottom of the backrest iron. Photo ① for reference

Secondly: Attach the backrest to the assembled seat of chair, make sure the angle of backrest correct, Tighten by the 2 black screws in last step (Noted: Need tighten the two screws in the middle of the round tube as well). Photo ①② for reference

Finally: Loosen nut and bolt on the iron of backrest, Link gas pump and the iron on backrest by the nut and bolt as photo ③④ .


Do not rotate the gas pump to change the distance between the gas lever and the rocker lever!

③

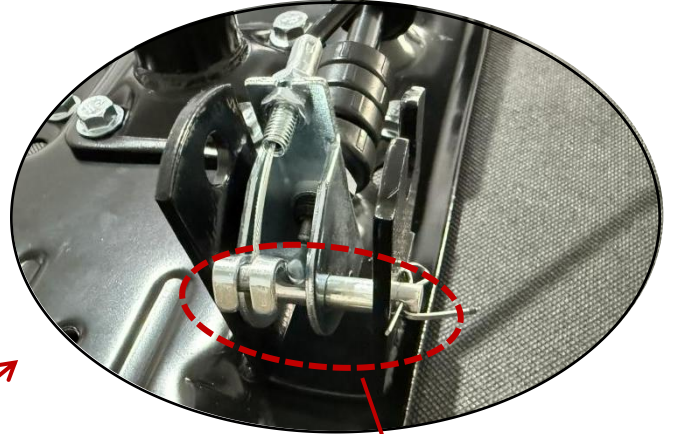

Unscrew the bolt on the black metal of part "A", assemble the one side of gas rod as picture by the bolt.


②

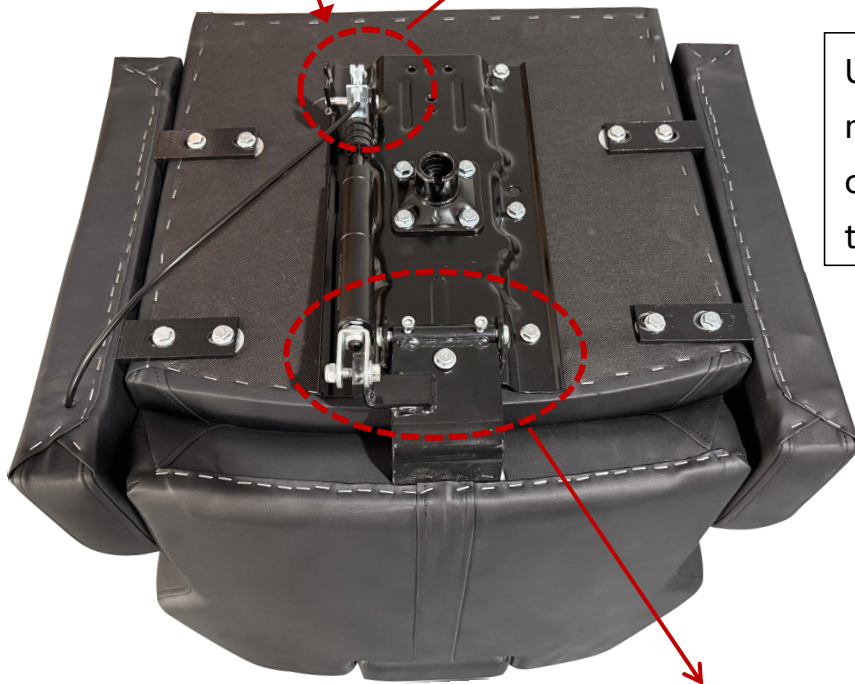


Attach backrest and assembled seat of chair by the 2 screws

Tighten the two screws after attached the backrest to the assembled seat of chair.

①

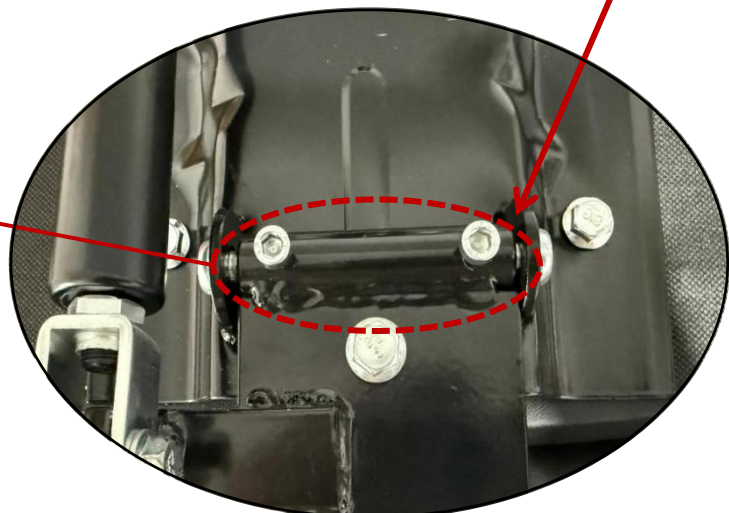

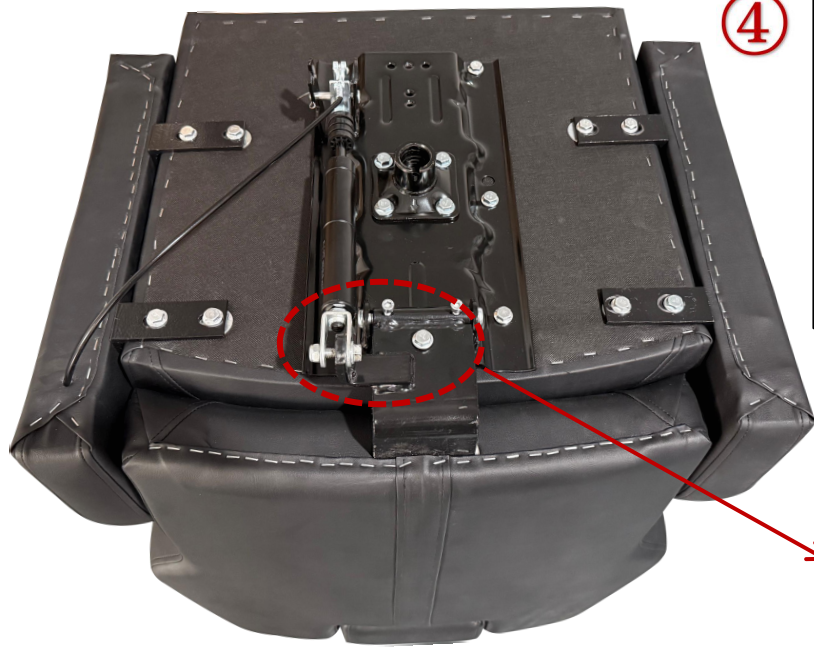

④

Tighten this screw after assembled gas pump (Noted: Please push the reclining lever backwards, make the backrest reclining a little bit, then the iron on the backrest will be much closer to the gas pump. When you feel it's hard to link the gas pump and the iron of backrest)



If the hole between the gas rod and the backrest is not aligned, you can loosen the screw and tighten the screw after installing the gas rod.

Step 8: Put the assembled seat to the hydraulic pump.



Noted: the tray under the seat plate must be aligned with the black pin of hydraulic pump.

Step 9: Loosen the embedded hand wheel on the base, insert leg support "E" into the hose of base of the chair. Adjust the leg support at your desired length. Tighten.




Loosen the hand wheel
before install the leg
support.

Step 10: Insert leg cushion "F" into the holes of leg support, Adjust the height of leg support by the hand wheel.



Loosen the hand wheel
before assemble the leg
cushion.

Step 11:Insert 5 wheels “N” into the each holes of the plastic stool base “K” .

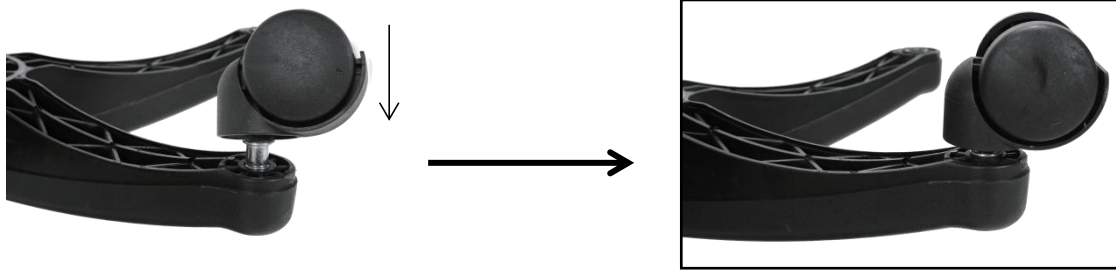

Step 12:Insert the gas pump “L” into the holes of assembled stool base.



Step 13:Put stool cushion “M” to the assembled base.Sit on the stool and adjust the height by the hand bar under the seat.

