


Assembly Instructions

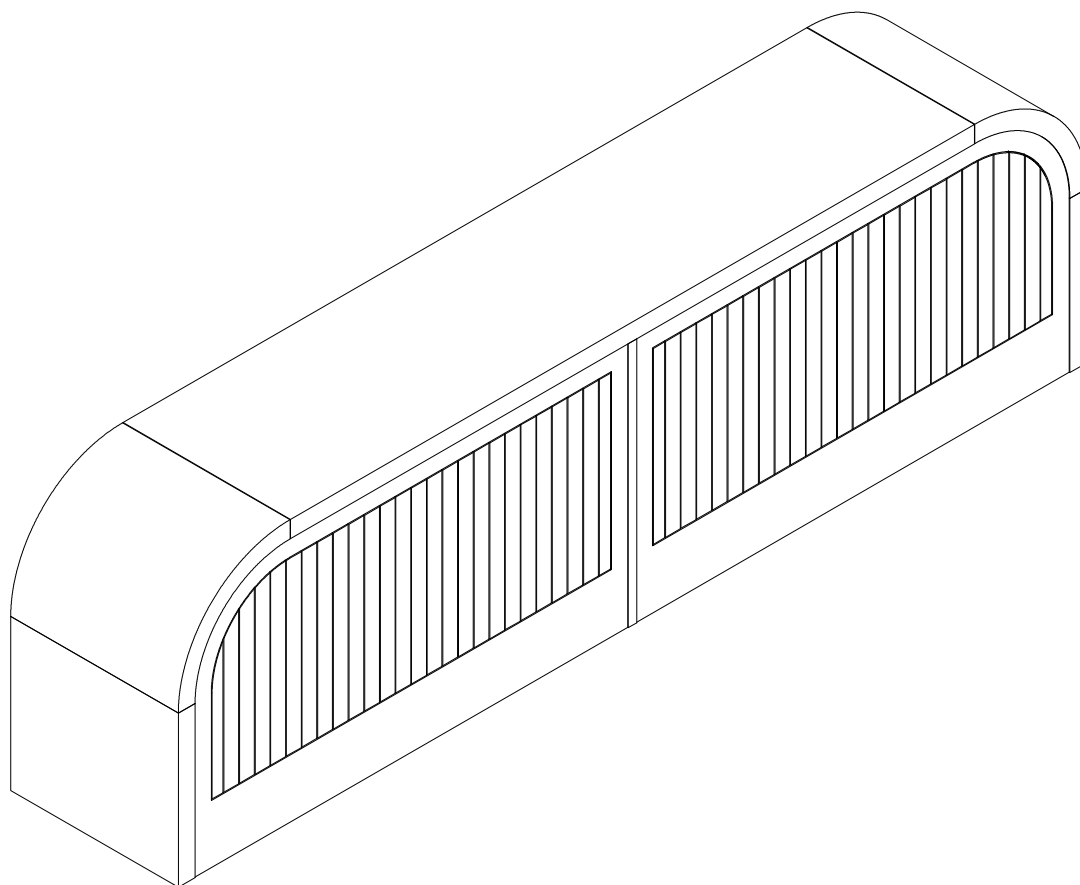


Before Assembly

1. Assembly requires two or more people to complete.
2. Using power tools will make the installation finish faster.

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

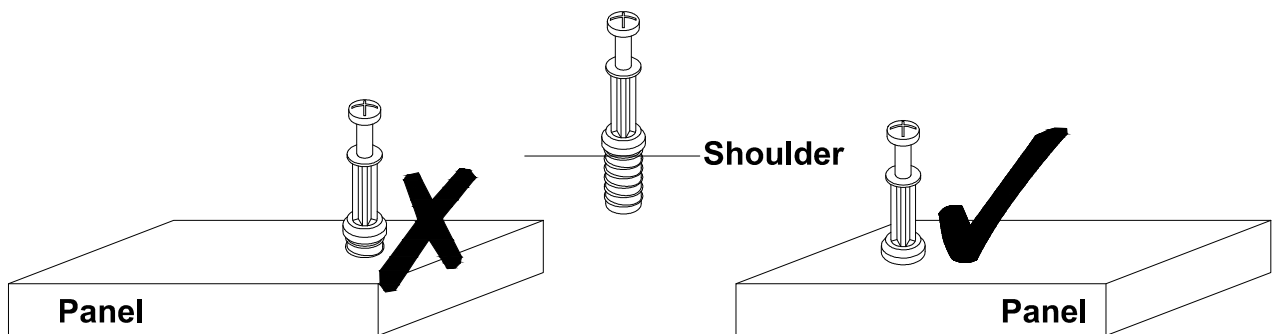


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

CAM LOCK

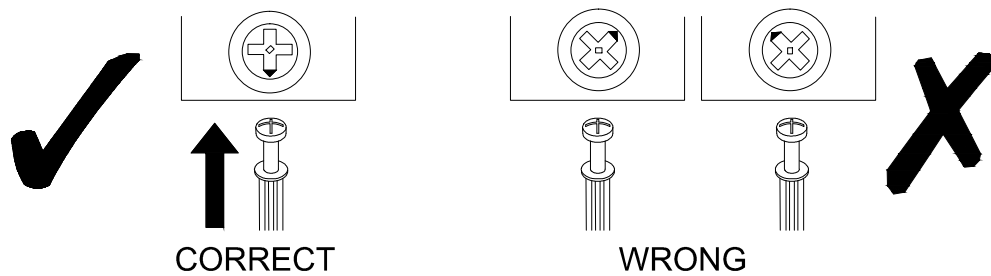


When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT

"Ensure the arrow on the Cam Lock (B) is pointing towards the hole for the Cam Lock Dowel (A) before inserting."

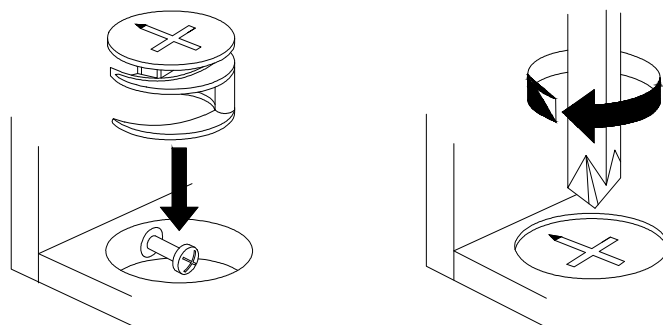

Turn cam lock clockwise to tighten.

Product structure

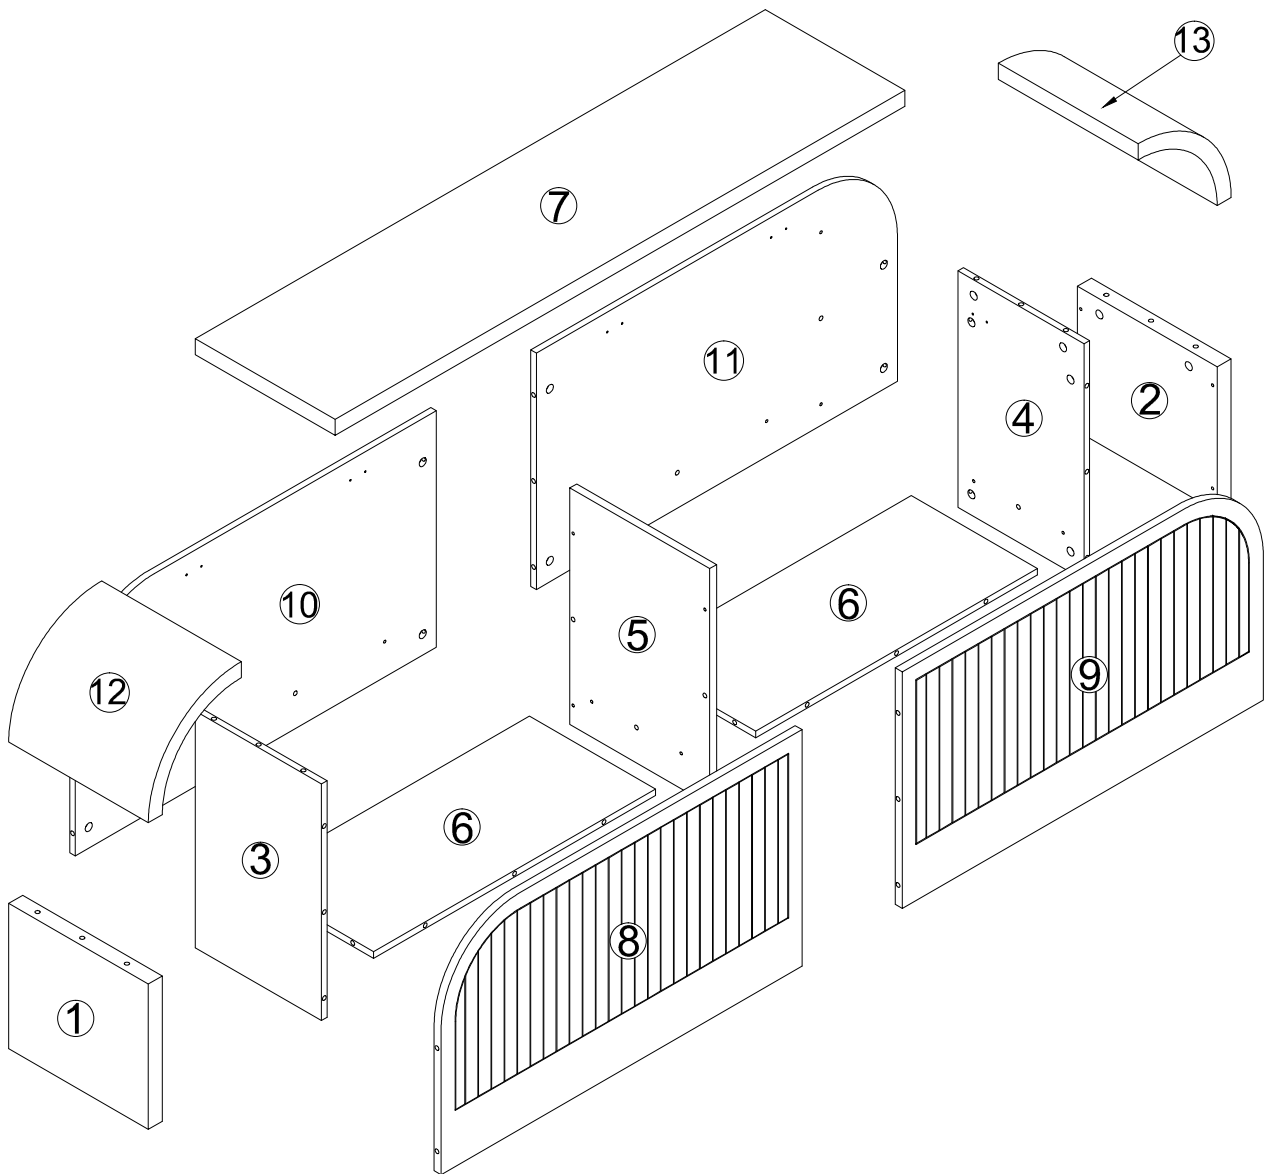

“Assemble on a soft surface, such as a carpet or the original packaging box, to avoid scratches to the panels.”


Part List



“Please check all parts and hardware against the list before assembly. If any parts are missing or damaged, please contact us immediately.”

No. A

Quantity:48 Pcs
Cam Lock Dowel
8*28mm



No. B

Quantity:48 Pcs
Cam
φ15




No. C

Quantity:48 Pcs
Sticker
Ø20



No. D

Quantity:20 Pcs
Dowel
8*30mm




No. E

Quantity:28 Pcs
Screw
M3.5*12mm




No. F

Quantity:4 Pcs
Straight Bend Door Hinge



No. G

Quantity:1 Pc
Support rod

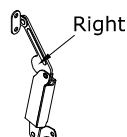


No. H

Quantity:6 Pcs
Foot Pad
Ø15



STEP 1

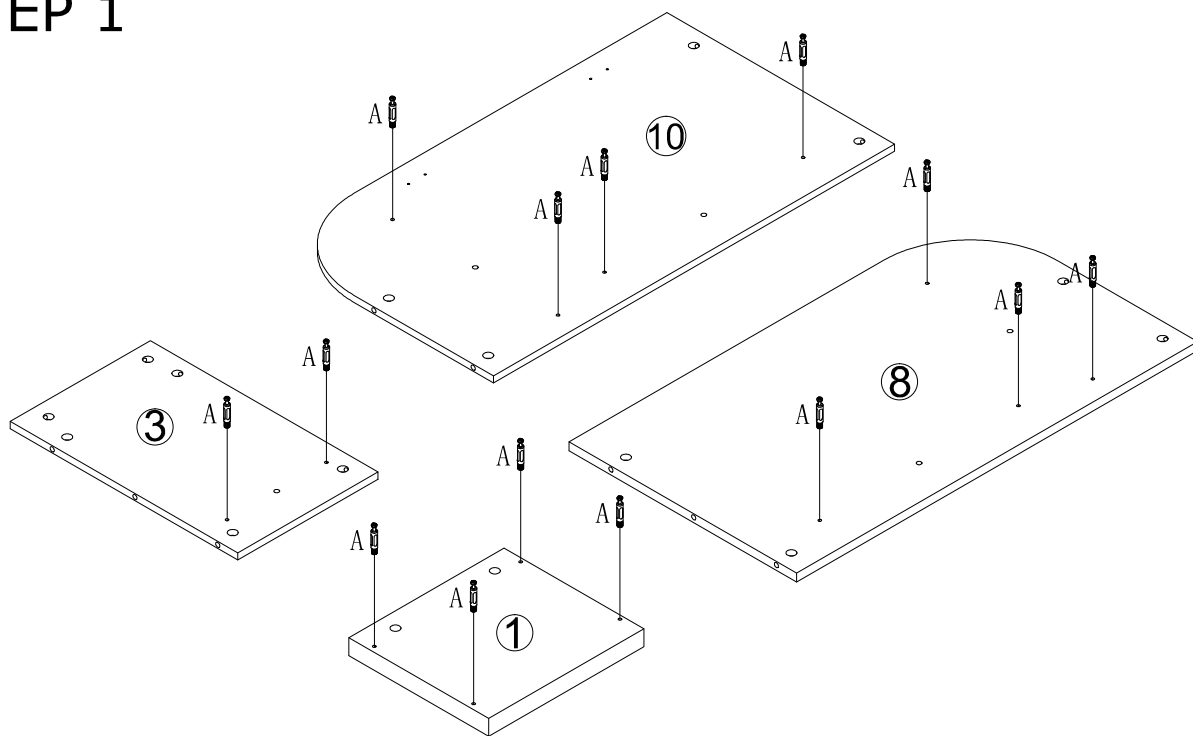


No. A
Quantity: 14 Pcs
8*28 mm



Please note: There are similar panels, please carefully distinguish the part numbers before installation.

STEP 2

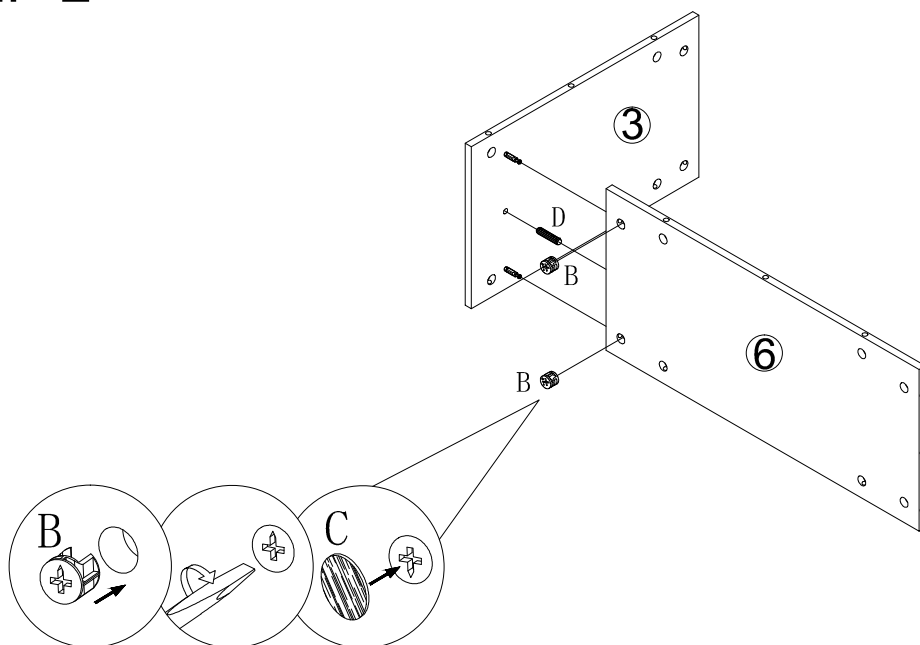


No. B
Quantity: 2 Pcs
Ø15




No. C
Quantity: 2 Pcs
Ø20



No. D
Quantity: 1 Pcs
8*30mm



STEP 3

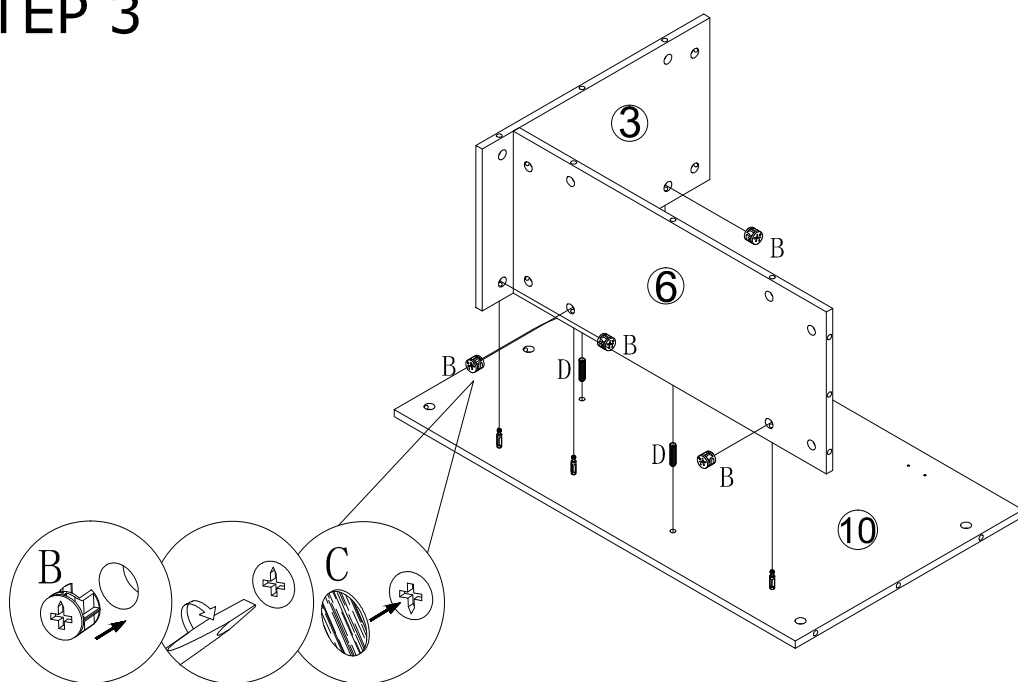


No. B
Quantity: 4 Pcs
Ø15




No. C
Quantity: 4 Pcs
Ø20



No. D
Quantity: 2 Pcs
8*30mm



STEP 4

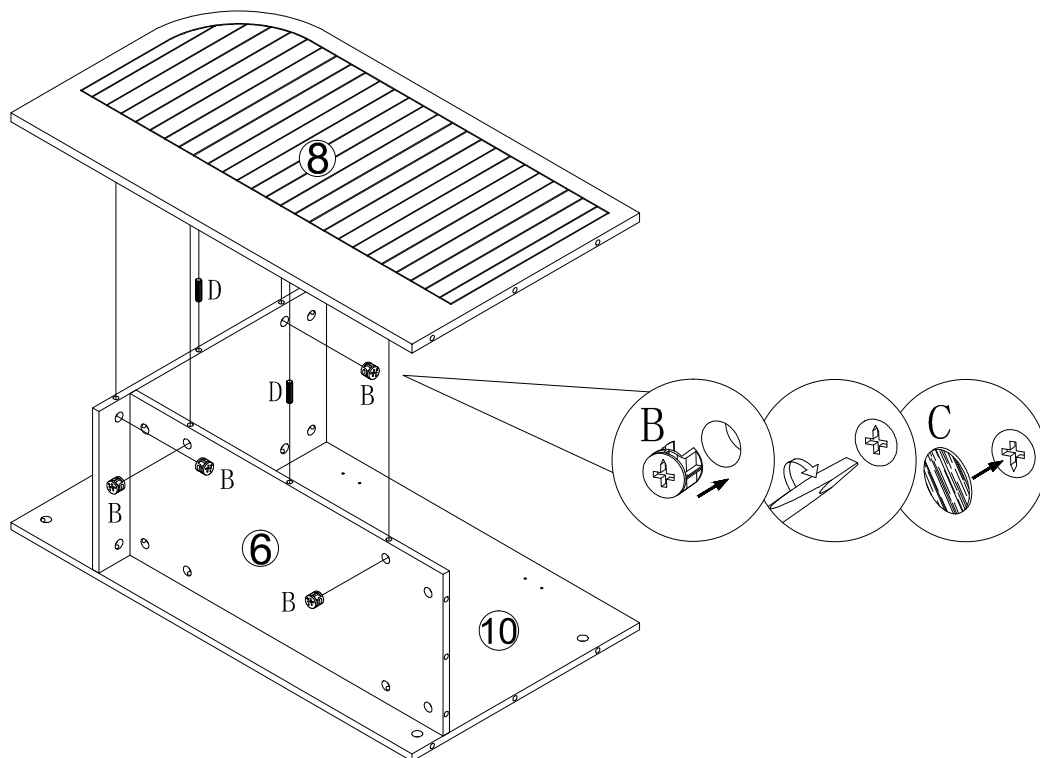


No. B
Quantity: 4 Pcs
Ø15



No. C
Quantity: 4 Pcs
Ø20




No. D
Quantity: 2 Pcs
8*30mm



STEP 5

Note: The side with the holes should face up, please distinguish the direction.

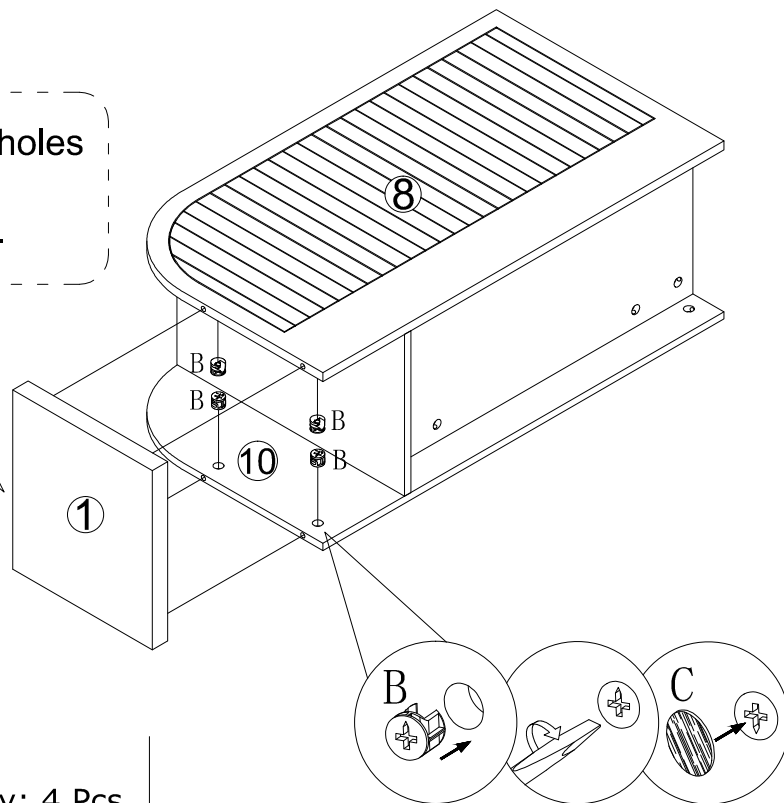


No. B
Quantity: 4 Pcs
Ø15




No. C
Quantity: 4 Pcs
Ø20




STEP 6

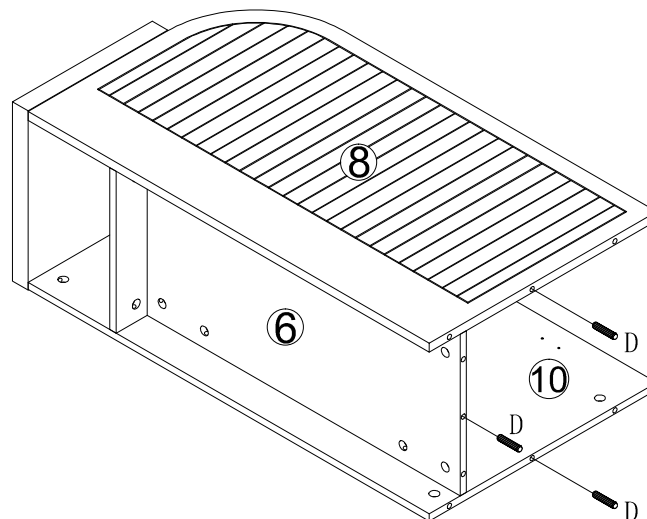


No. D
Quantity: 3 Pcs
8*30mm




STEP 7

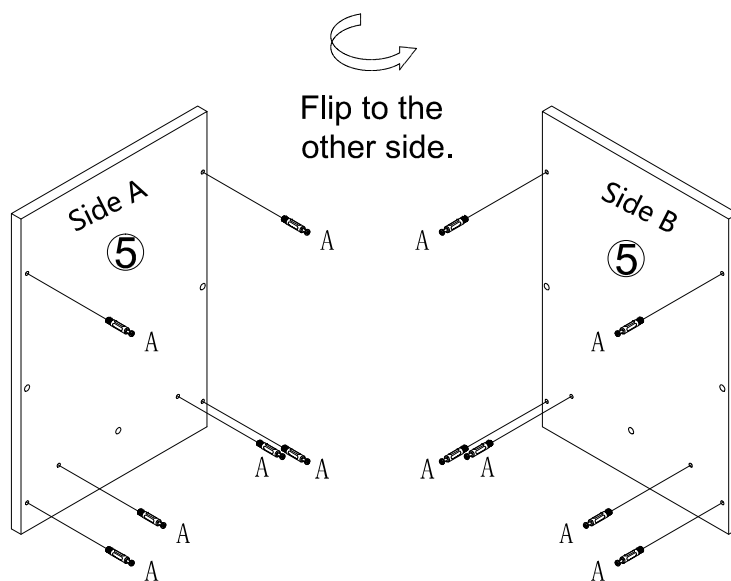

No. A
Quantity: 12 Pcs
8*28 mm





STEP 8

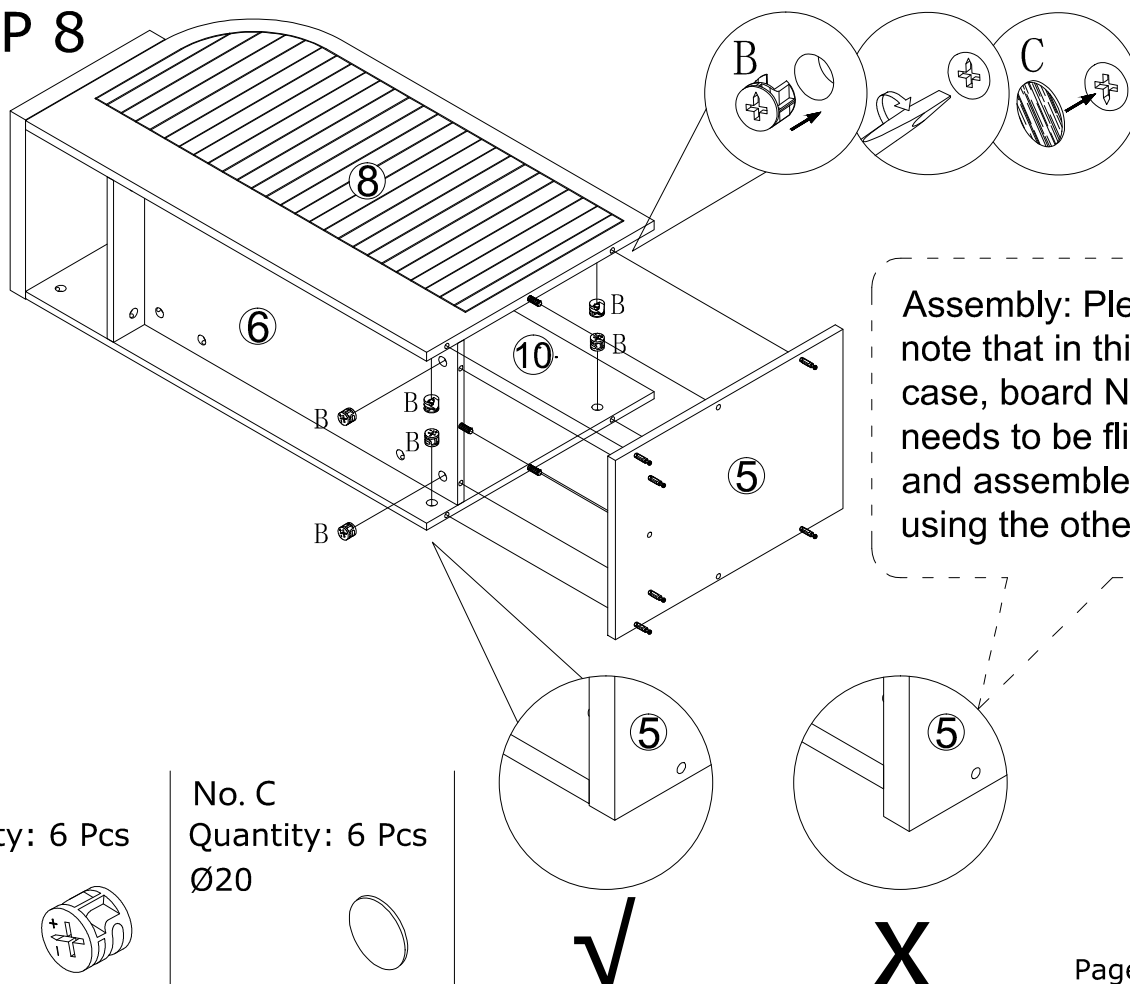


No. B
Quantity: 6 Pcs
Ø15




No. C
Quantity: 6 Pcs
Ø20

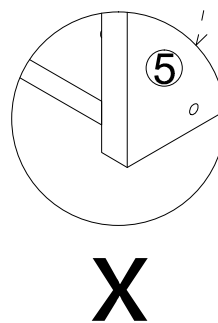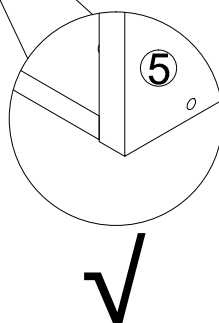

STEP 9

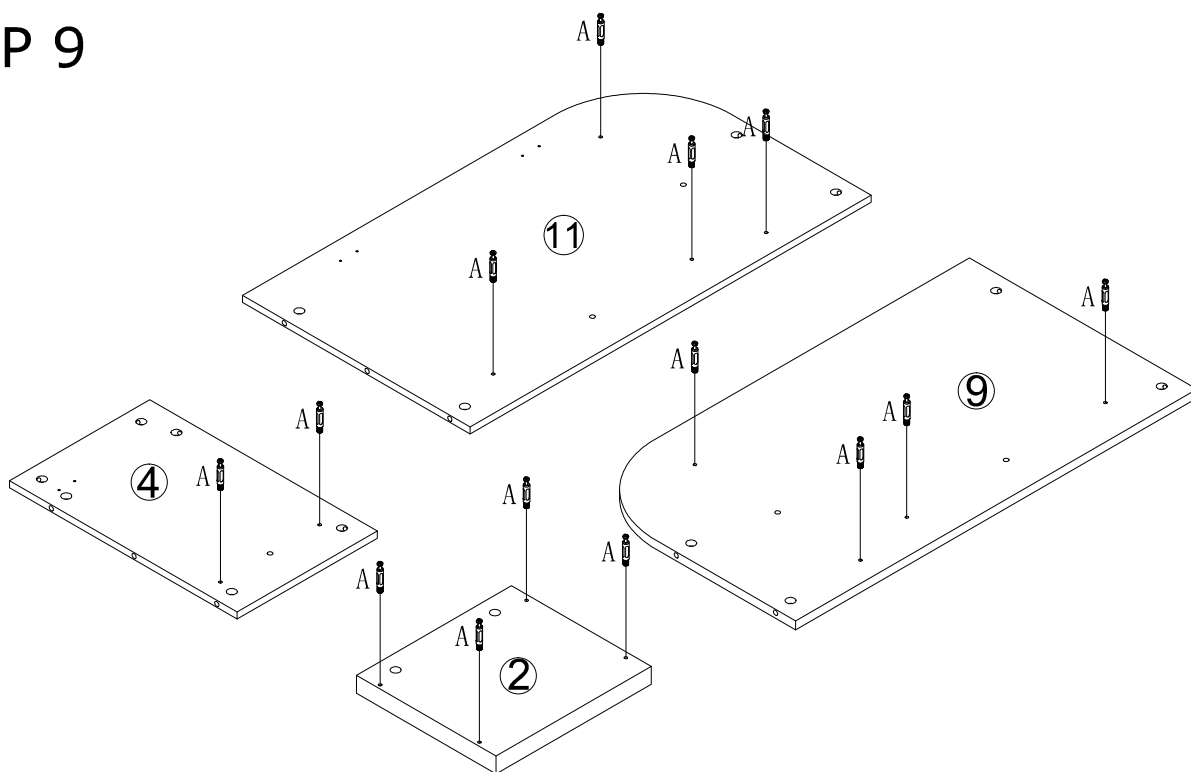


No. A
Quantity: 14 Pcs
8*28 mm



Please note: There are similar panels, please carefully distinguish the part numbers before installation.

STEP 10

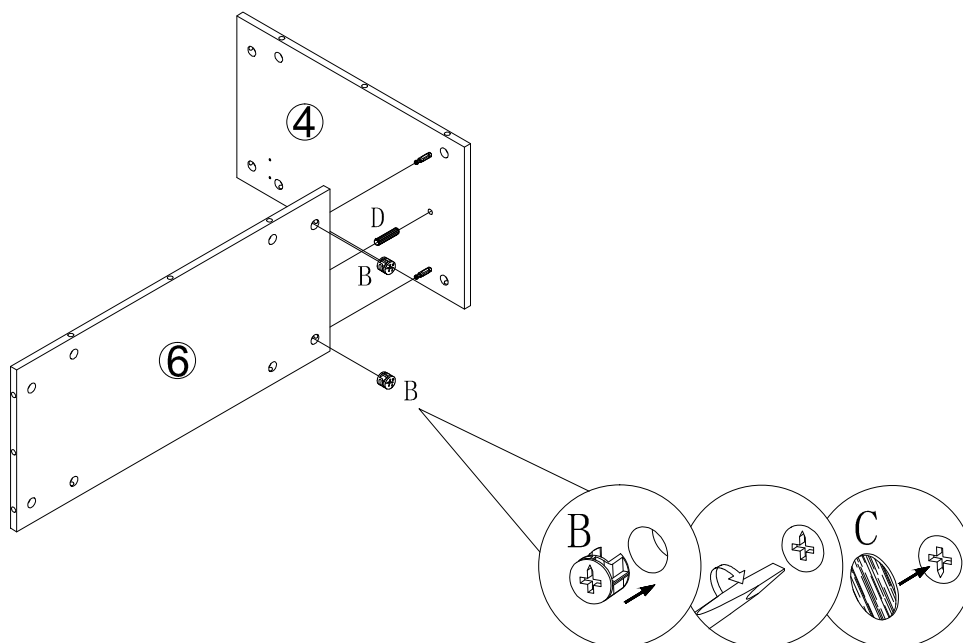


No. B
Quantity: 2 Pcs
Ø15




No. C
Quantity: 2 Pcs
Ø20



No. D
Quantity: 1 Pcs
8*30mm



STEP 11

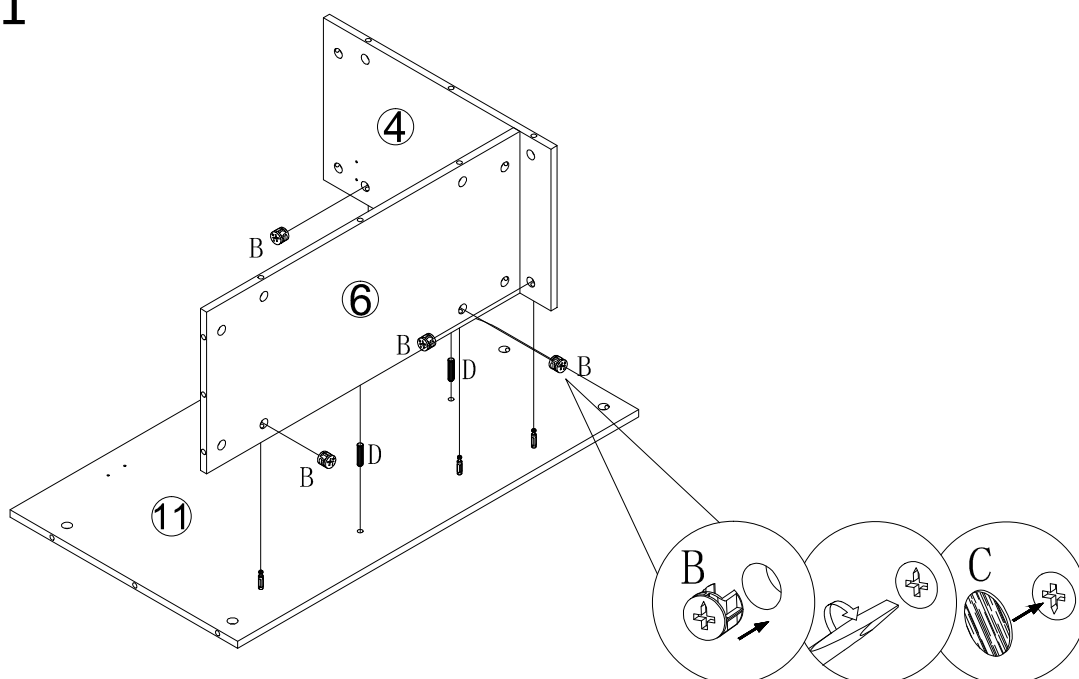


No. B
Quantity: 4 Pcs
Ø15




No. C
Quantity: 4 Pcs
Ø20



No. D
Quantity: 2 Pcs
8*30mm



STEP 12

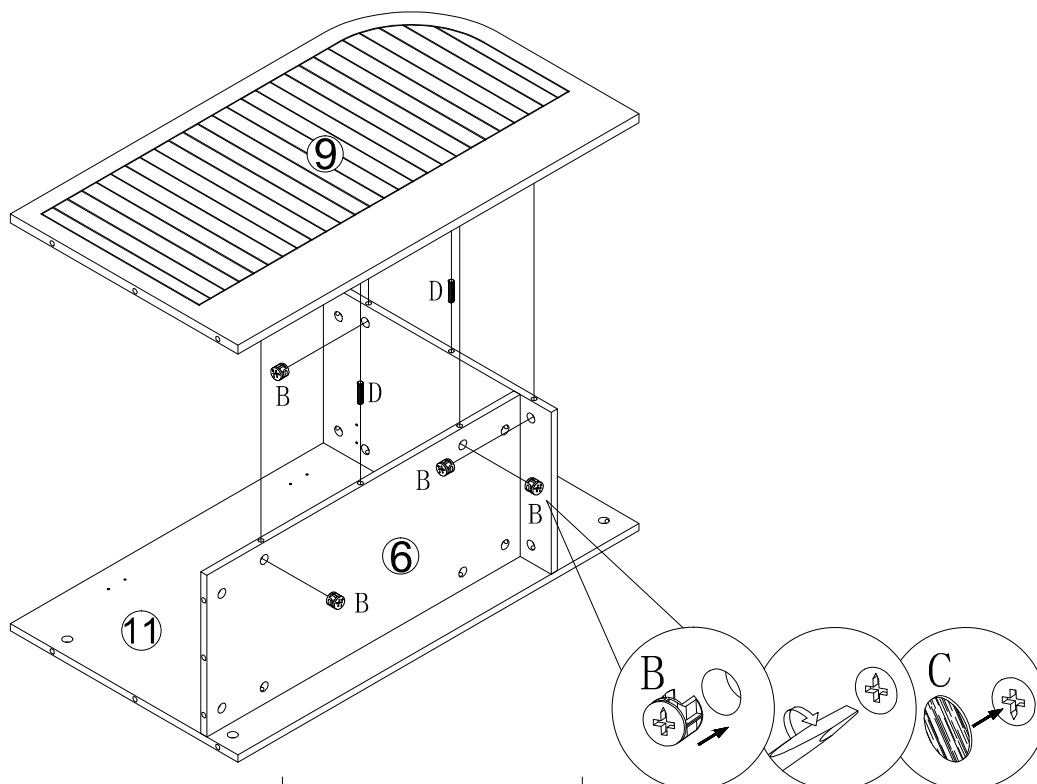


No. B
Quantity: 4 Pcs
Ø15




No. C
Quantity: 4 Pcs
Ø20




No. D
Quantity: 2 Pcs
8*30mm




STEP 13

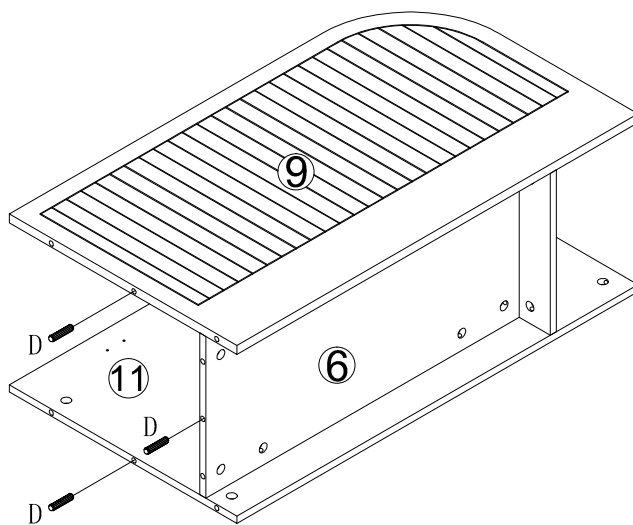

No. D
Quantity: 3 Pcs
8*30mm



STEP 14

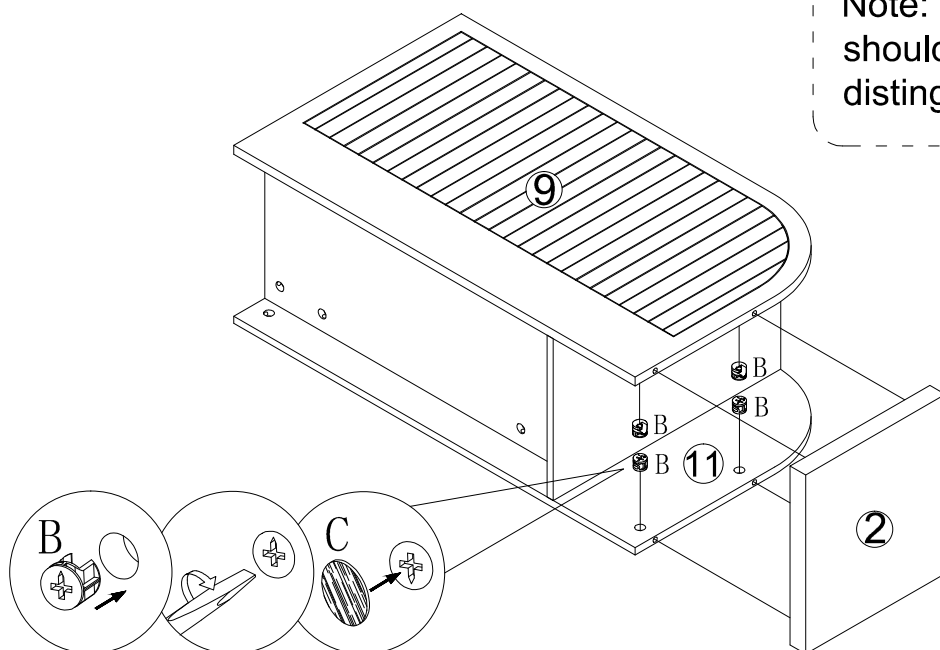

Note: The side with the holes should face up, please distinguish the direction.


No. B
Quantity: 4 Pcs
Ø15



No. C
Quantity: 4 Pcs
Ø20



STEP 15

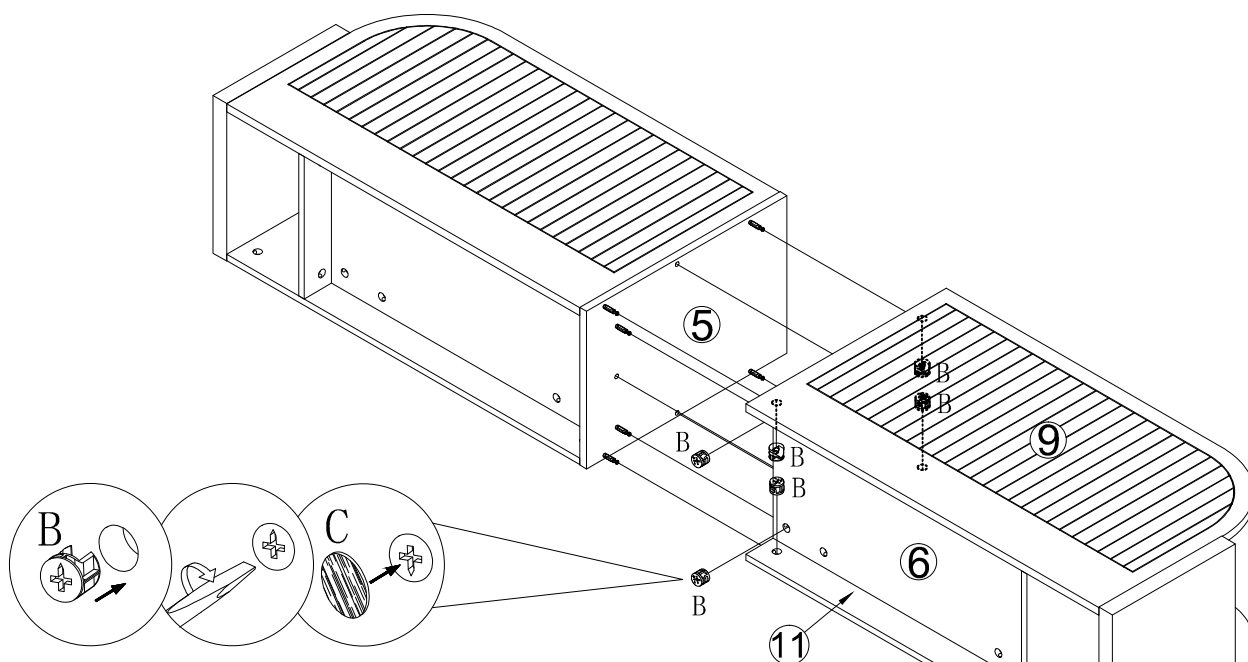


No. B
Quantity: 6 Pcs
Ø15



No. C
Quantity: 6 Pcs
Ø20





STEP 16

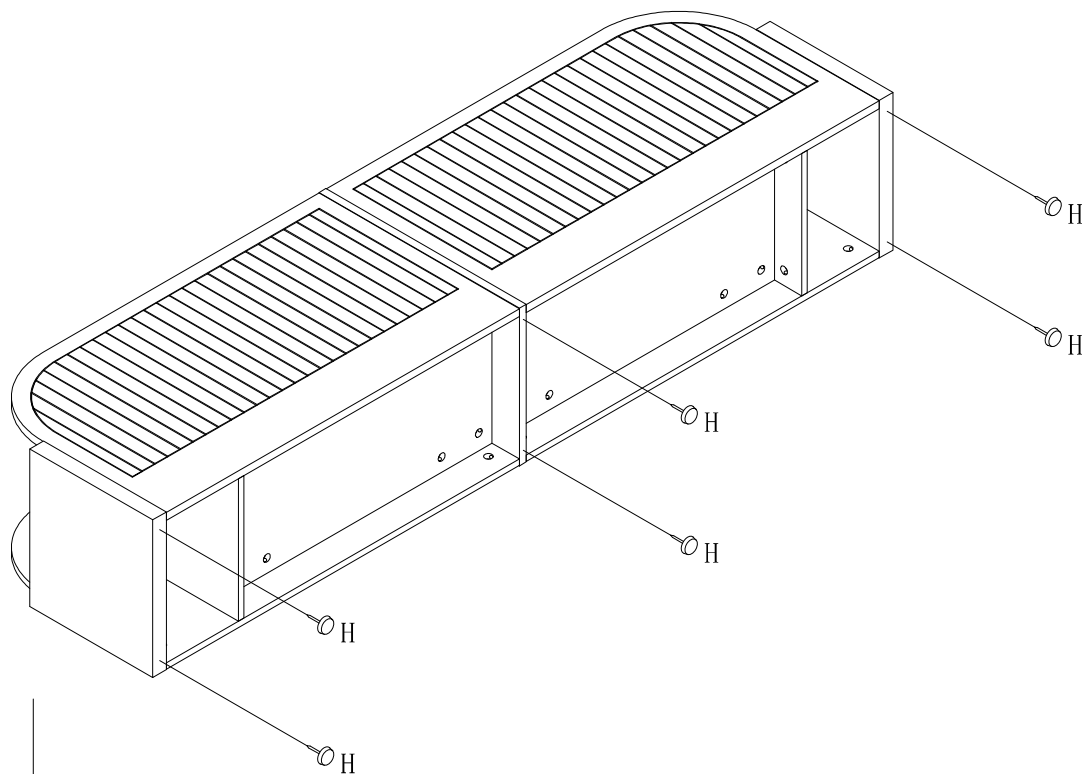

No. H
Quantity: 6 Pcs
Ø15




STEP 17

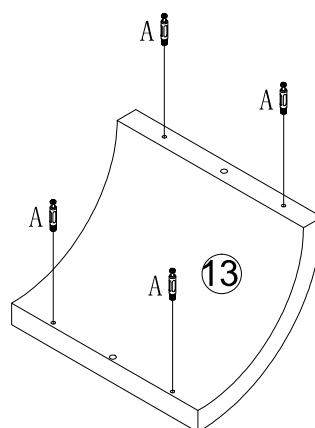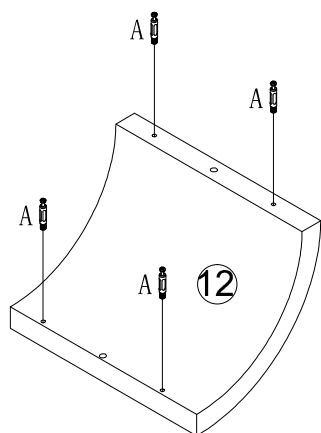

No. A
Quantity: 8 Pcs
8*28 mm



STEP 18

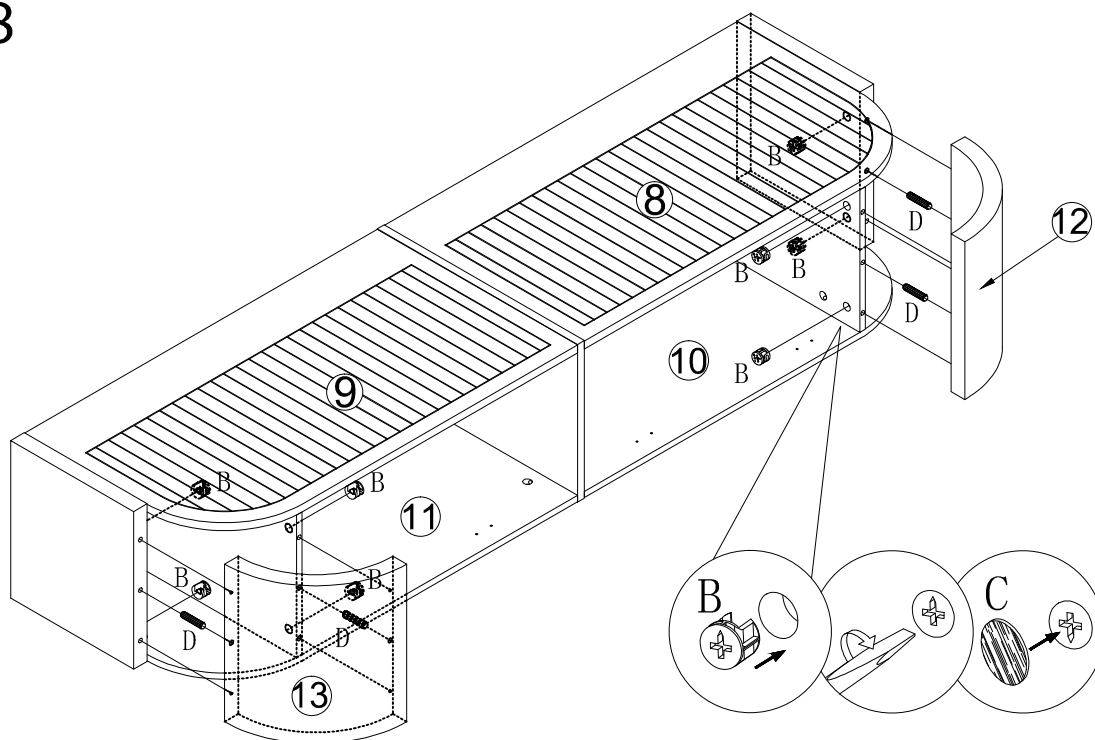


No. B
Quantity: 8 Pcs
Ø15




No. C
Quantity: 8 Pcs
Ø20



No. D
Quantity: 4 Pcs
8*30mm




STEP 19

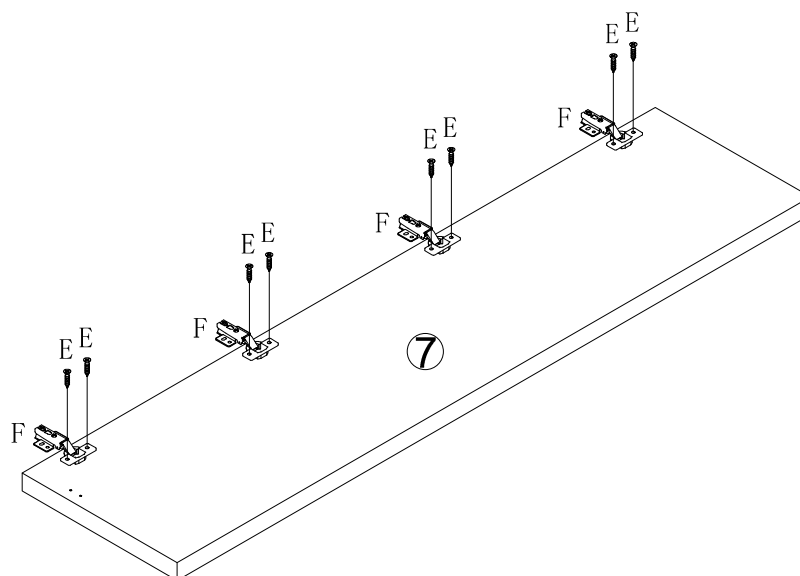


No. E
Quantity: 8 Pcs
M3.5*12mm






No. F
Quantity: 4 Pcs



STEP 20

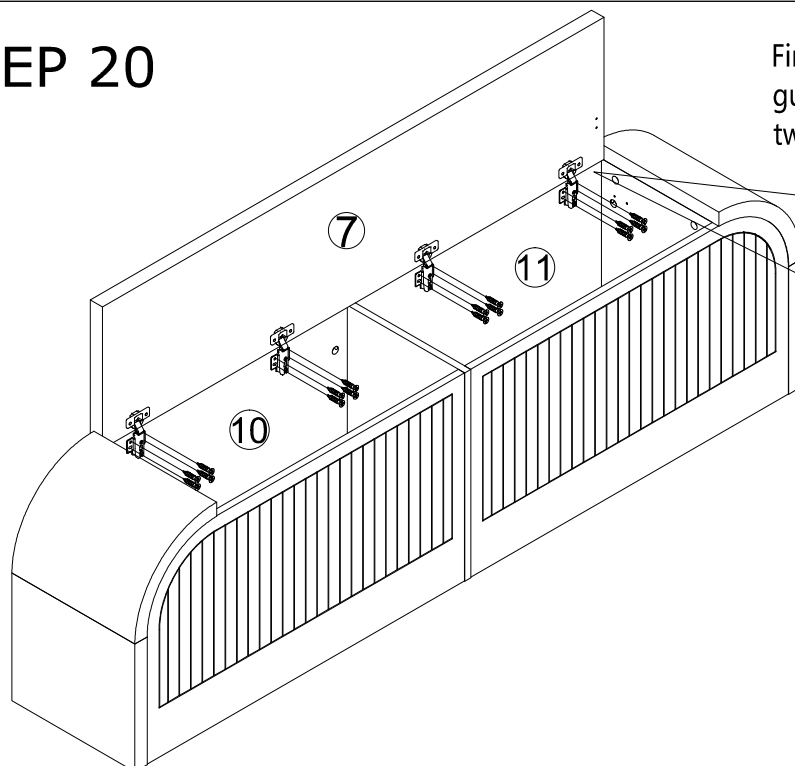

First, use screws to secure the two rear guide holes of the door hinge into the two guide holes of the side panel.

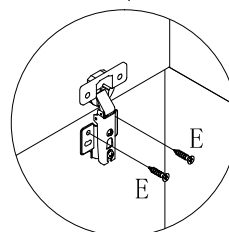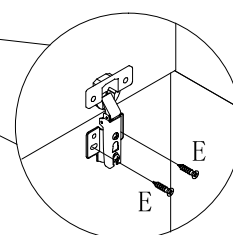


No. E
Quantity: 16 Pcs
M3.5*12mm




If you encounter difficulties during adjustment, please refer to the guidance on pages 14 and 15 to adjust the gaps of the cabinet doors. After making the gaps even, please tighten the two screws on the front side.

The way to adjust the door by hinge.


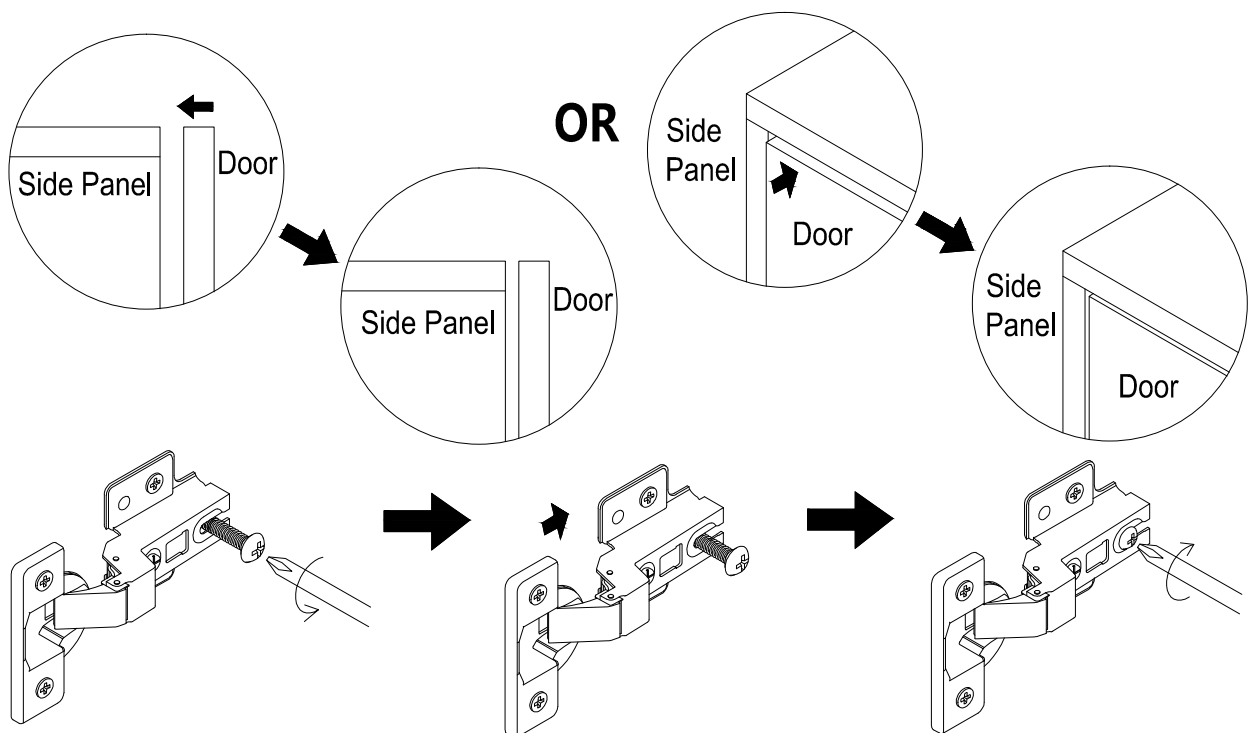


(In-and-Out Adjustment) : Adjust the front screw to ensure the door is flush with the cabinet side panel.


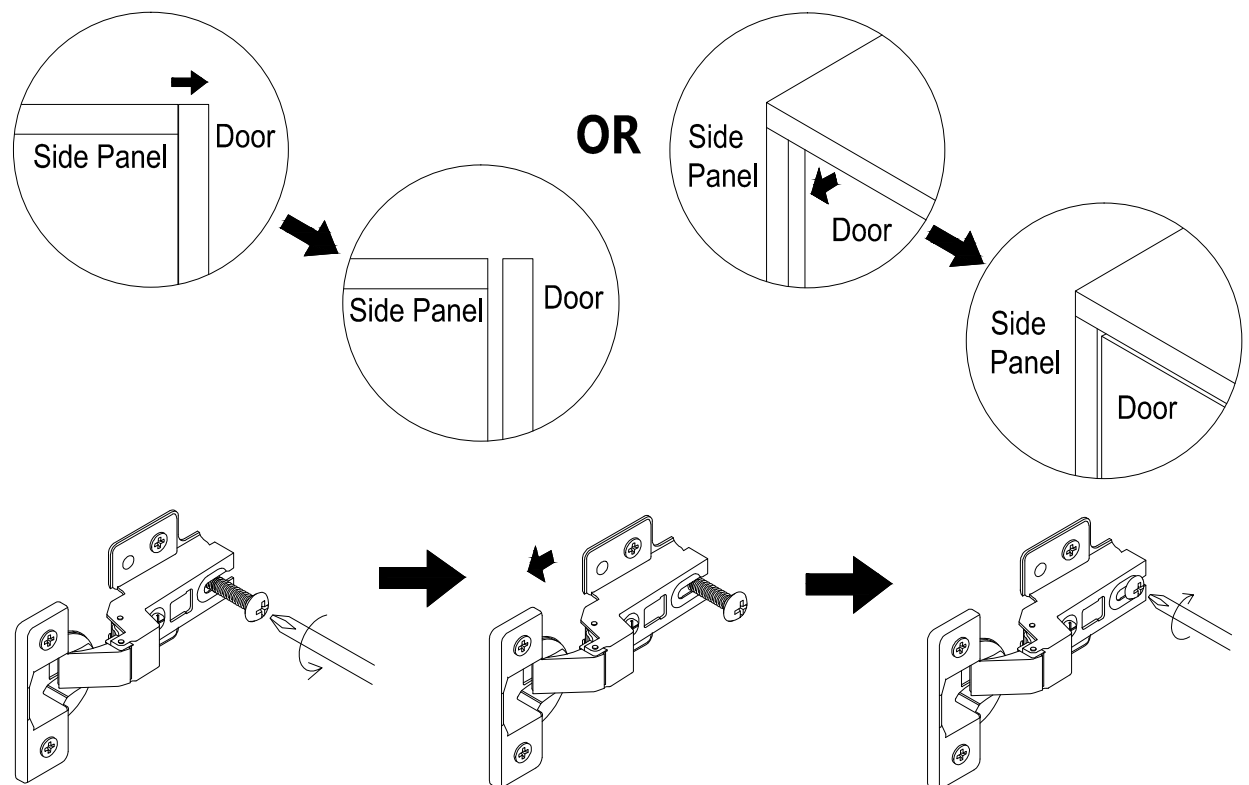


(In-and-Out Adjustment) : Adjust the front screw to ensure the door is flush with the cabinet side panel.



! IMPORTANT: When making height or depth adjustments, please ensure you adjust **BOTH** the top and bottom hinges of the door simultaneously. Adjusting only one hinge will be ineffective and may cause stress on the hardware.

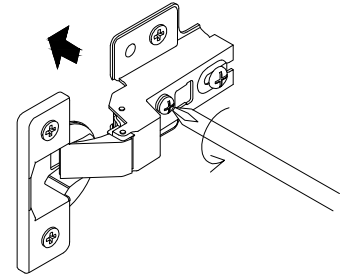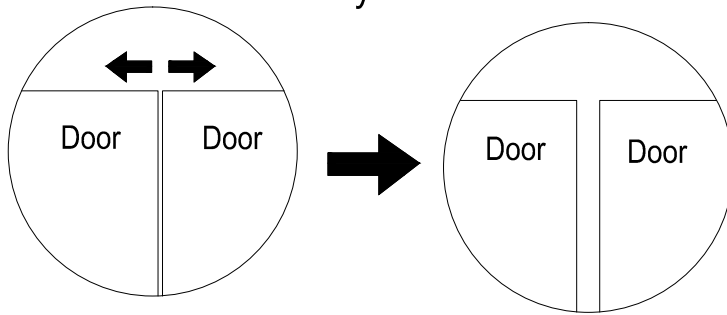


(Side-to-Side Adjustment) : Turn the middle screw to adjust the gap between the two doors.

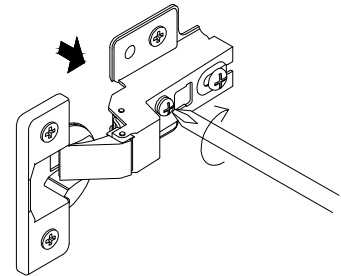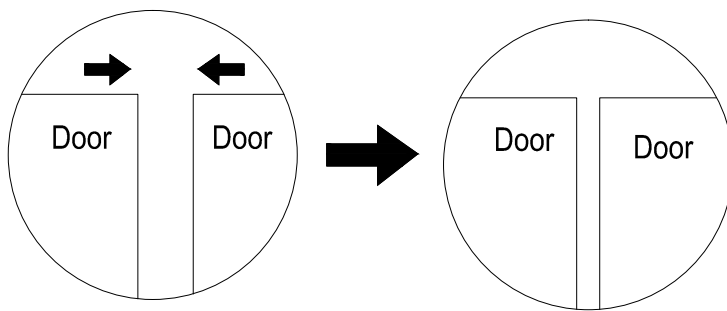

(Side-to-Side Adjustment) : Turn the middle screw to adjust the gap between the two doors.

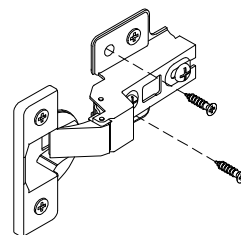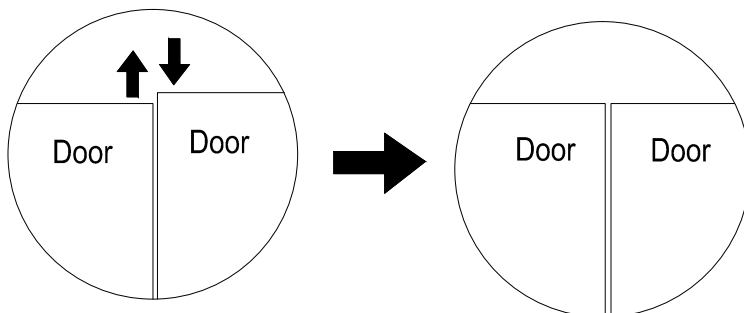


Attention:
After adjusted Hinges,
then lock screws.

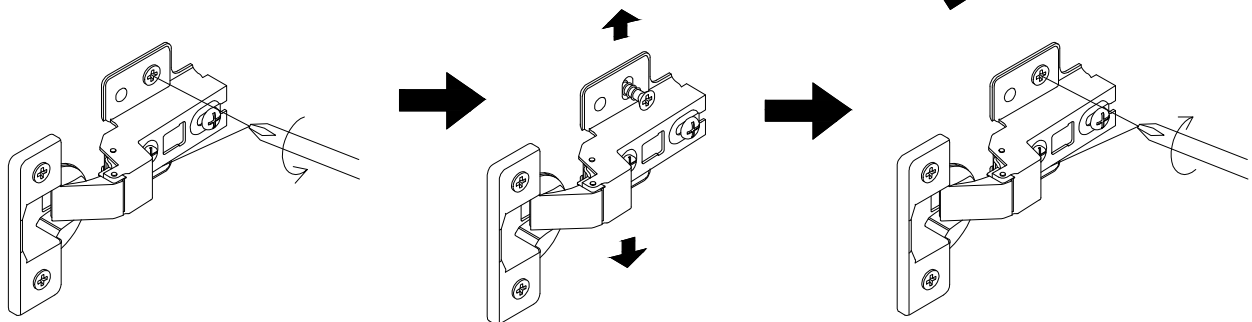

(Up-and-Down Adjustment) : Loosen the back screws on the hinge wing to shift the door up or down.


STEP 21

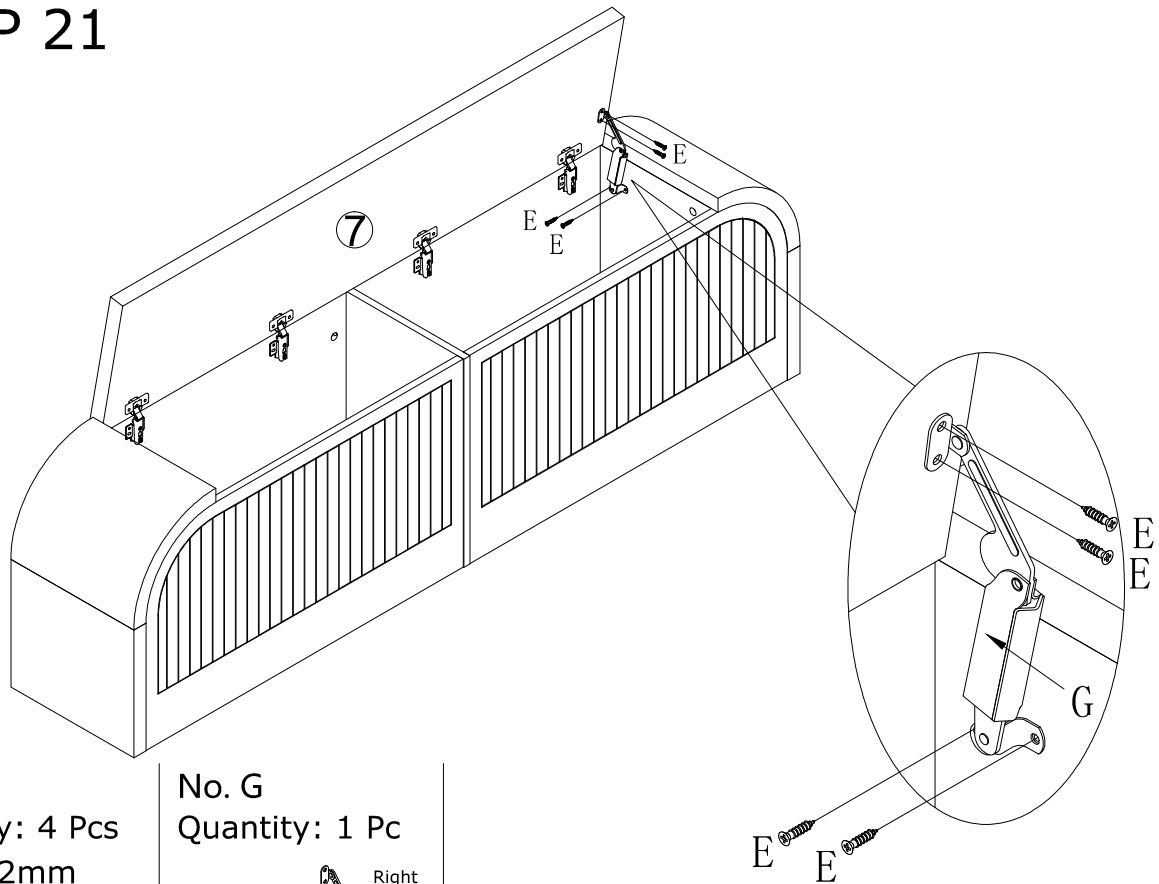

No. E
Quantity: 4 Pcs
M3.5*12mm



No. G
Quantity: 1 Pc



STEP 22

