


























I870100956D1 I870100956D2

Start furnishing your dreams !

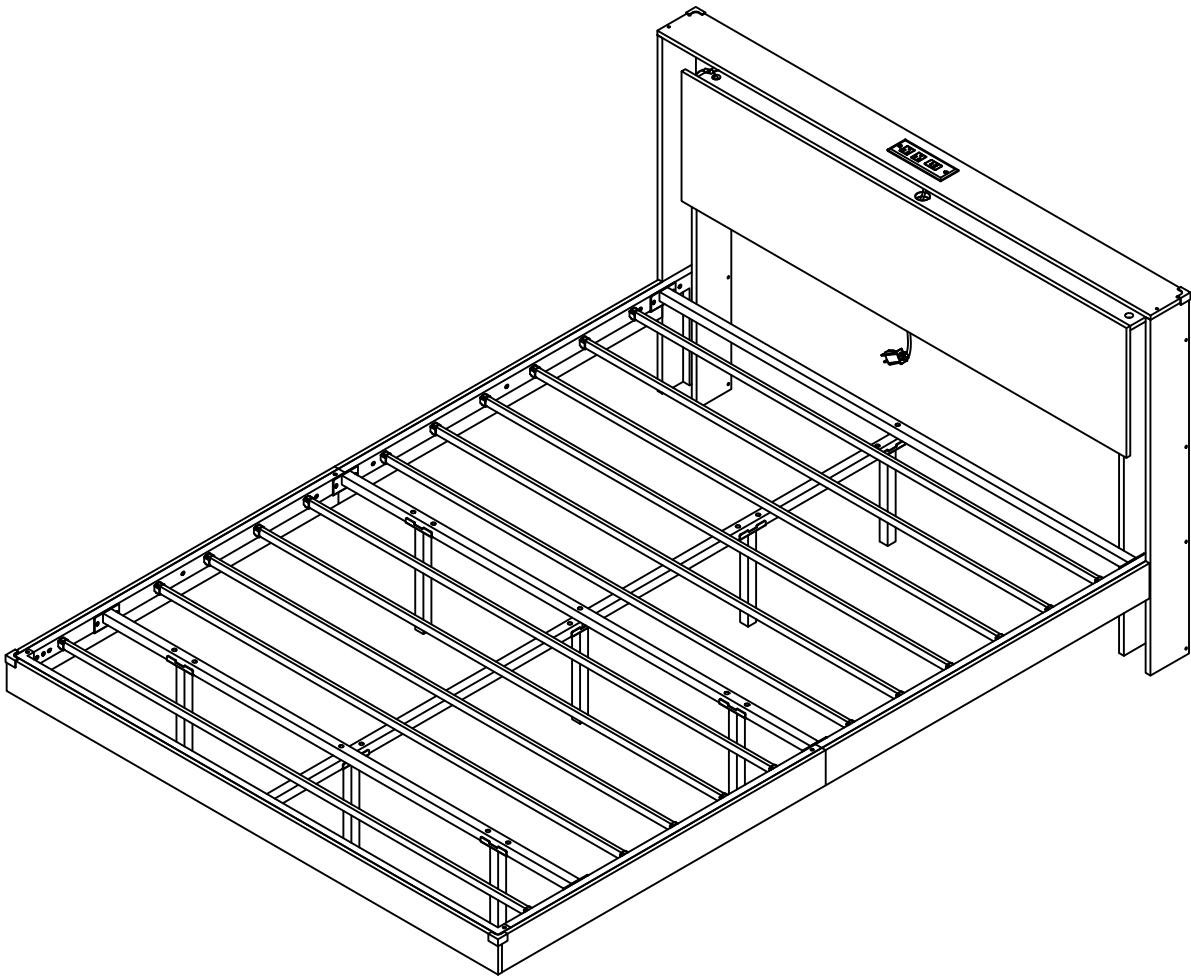


Please check that you have all the parts listed before you start assembling, if you do find that something is missing, do not continue assembly. Please contact us immediately.


NOTE: Please do not completely tighten all the hardware until the entire assembly is complete!

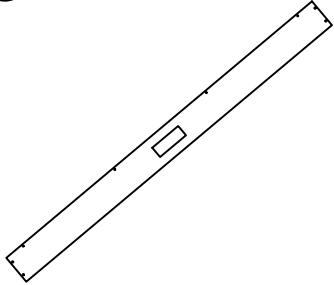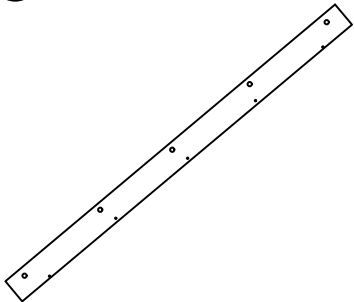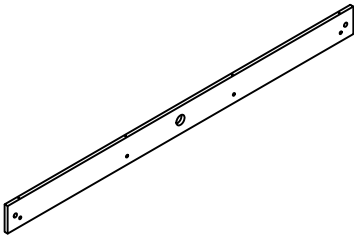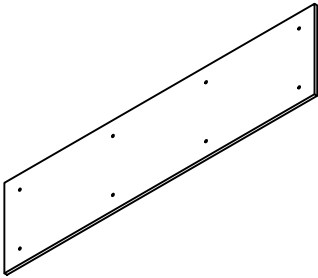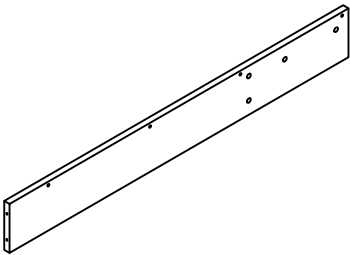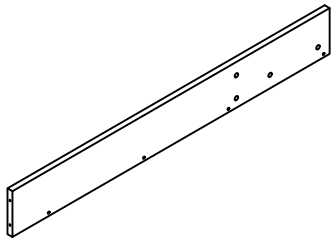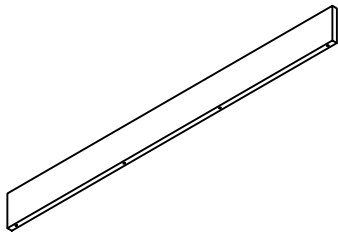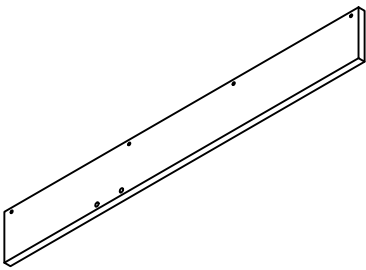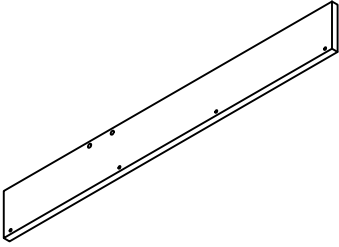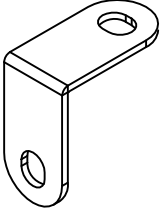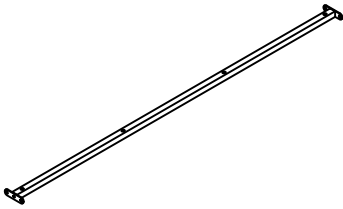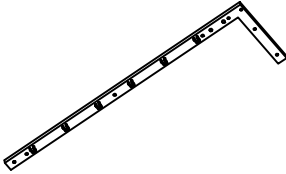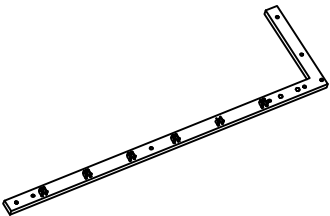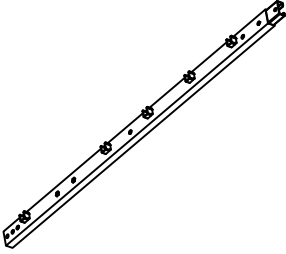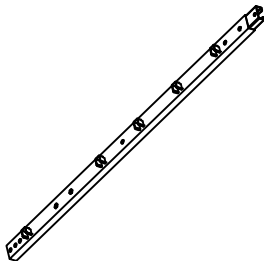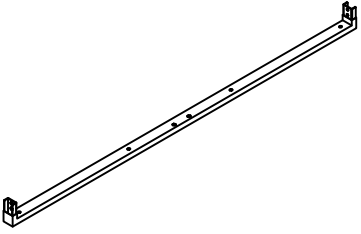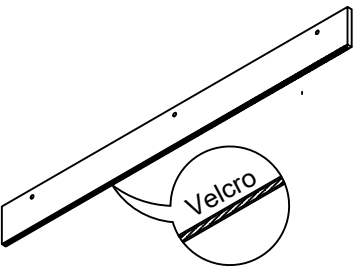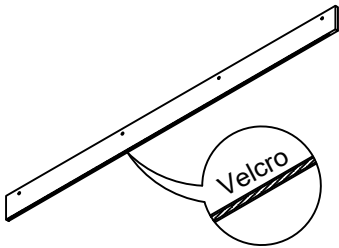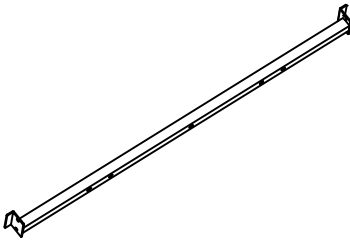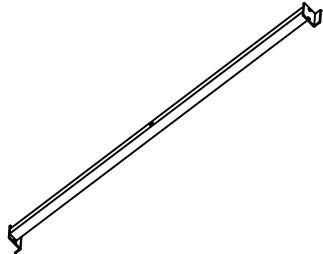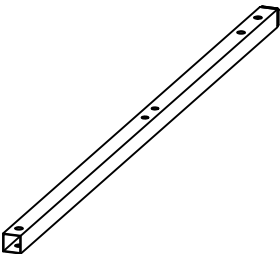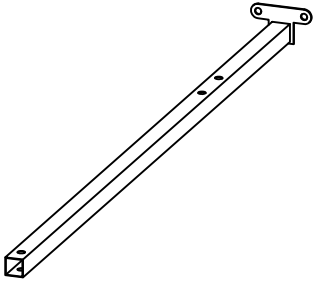① x 1 	② x 1 	③ x 1 	④ x 1 
⑤ x 1 	⑥ x 1 	⑦ x 2 	⑧ x 1 
⑨ x 1 	⑩ x 6 	⑪ x 1 	⑫ x 1 
⑬ x 1 	⑭ x 1 	⑮ x 1 	⑯ x 1 
⑰ x 4 	⑱ x 1 	⑲ x 2 	⑳ x 1 
㉑ x 1 	㉒ x 1 	㉓ x 4 	㉔ x 4 



25 x 4

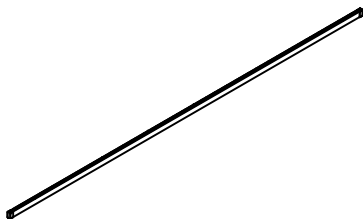

26 x 7

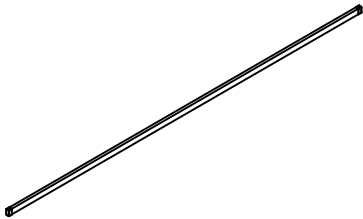

27 x 4










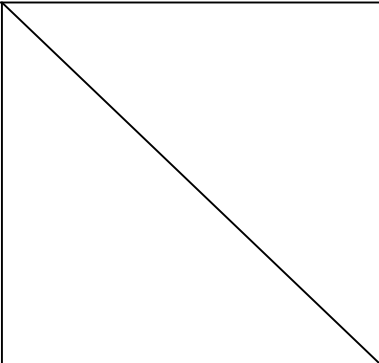



This exploded view diagram illustrates the assembly of a metal shelving unit. The components are numbered as follows:


- 1, 2, 3, 11:** Long horizontal rails or beams.
- 4:** A large rectangular panel, likely a backboard or divider.
- 5, 6, 7, 9, 17, 26:** Vertical support rails or posts of various lengths.
- 8, 10, 12, 13, 14, 15, 16, 18, 19, 20, 21, 22, 23, 24, 25:** Horizontal cross-braces and support rails.
- 27:** Small fasteners, likely screws or bolts, used throughout the assembly.

The diagram shows the relative positions and orientations of these parts, indicating how they fit together to form the shelving unit's frame and shelves.


M6x10mm A x 16+1	M6x28mm B x 22+2	M8x10mm C x 18+1	Ø5x35mm D x 25+2	Ø6x35mm E x 5+1




STEP 1

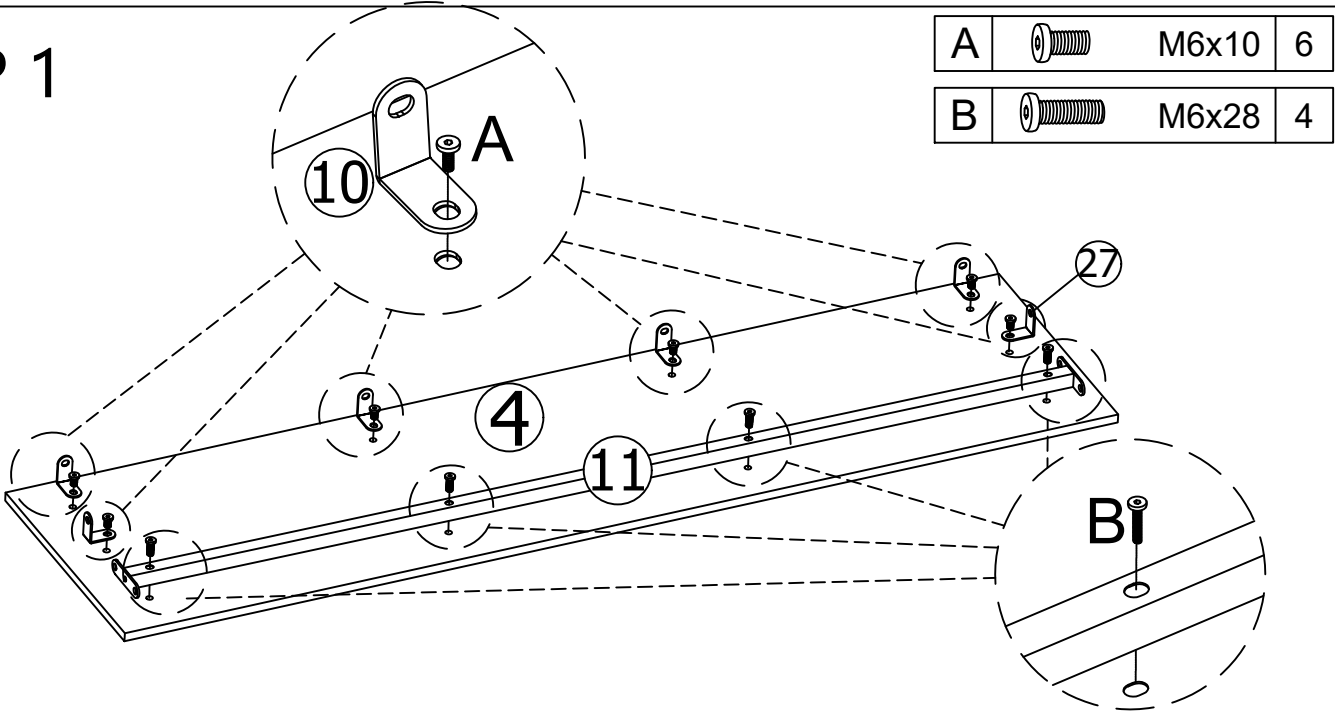



STEP 2

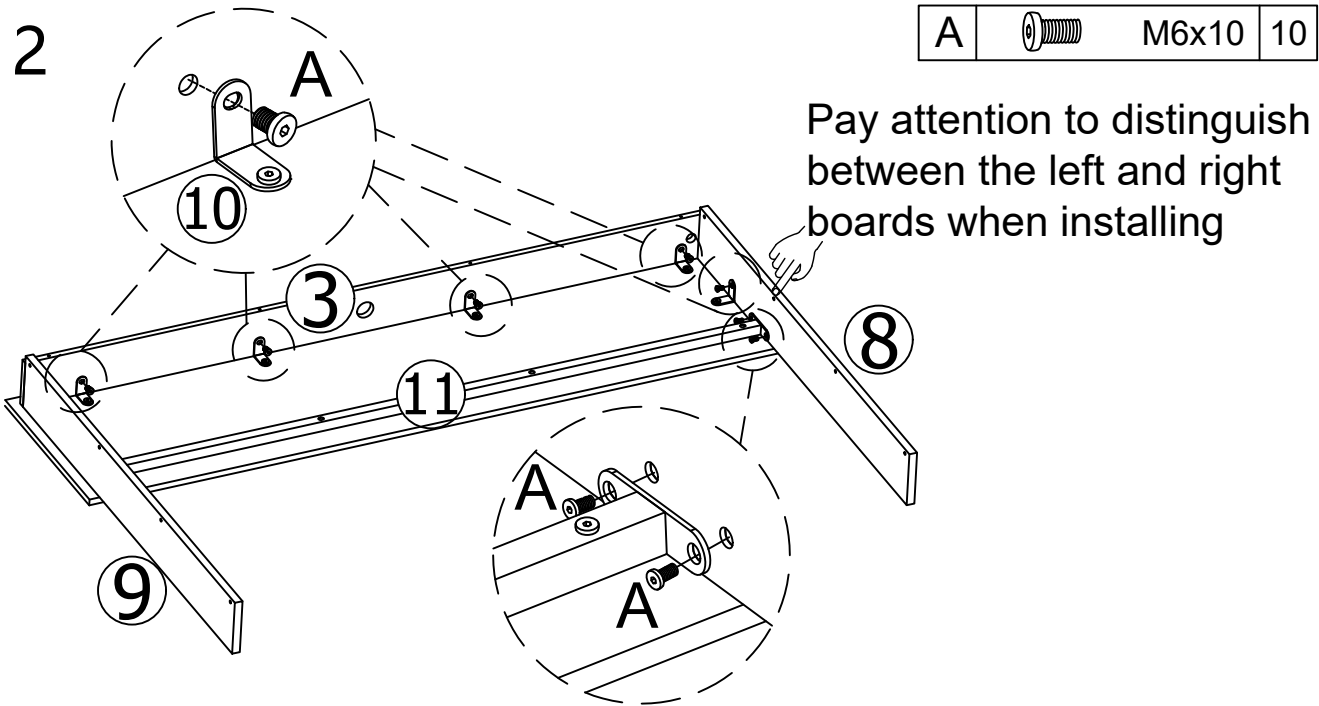


STEP 3

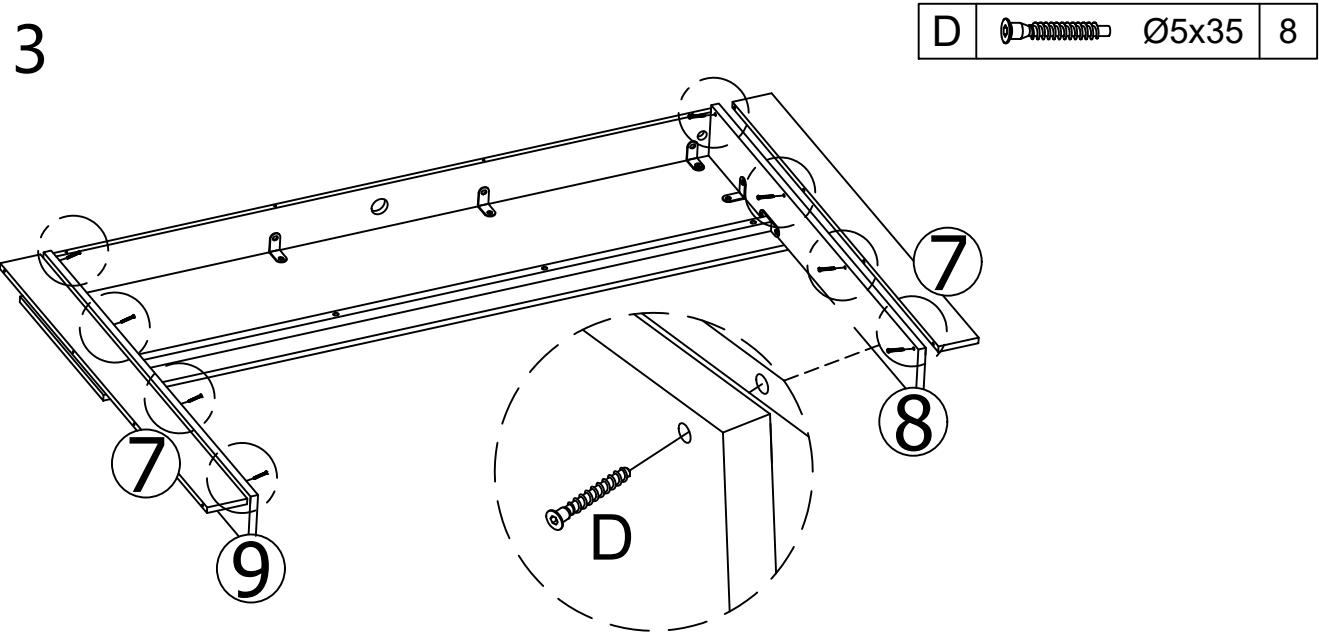


STEP 4

E		Ø6x35	5
O			1

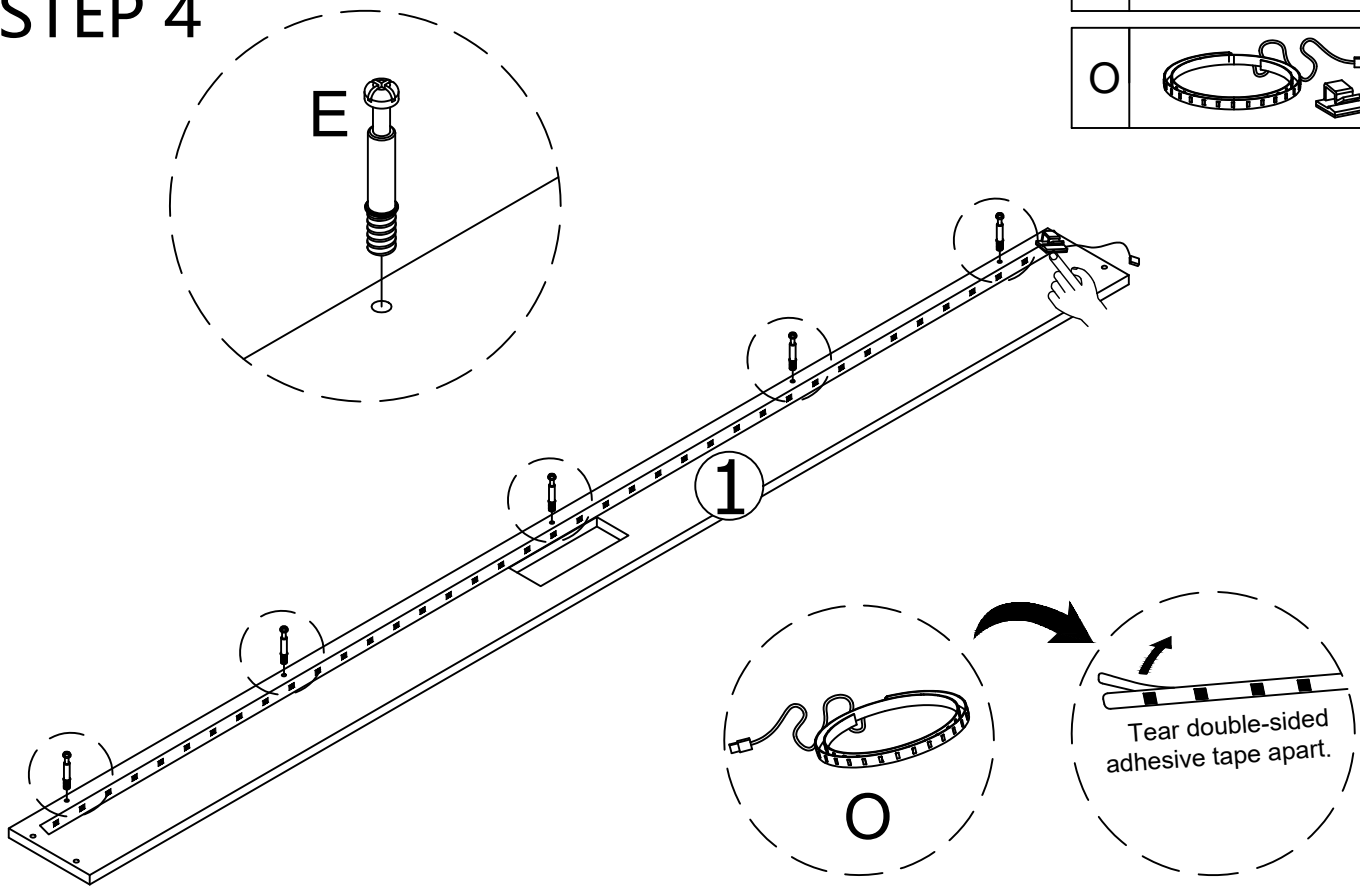

1. You can also install (O) on the right side according to your own choice.
2. Please tear off the light strip slowly when changing the position to prevent breaking.

STEP 5

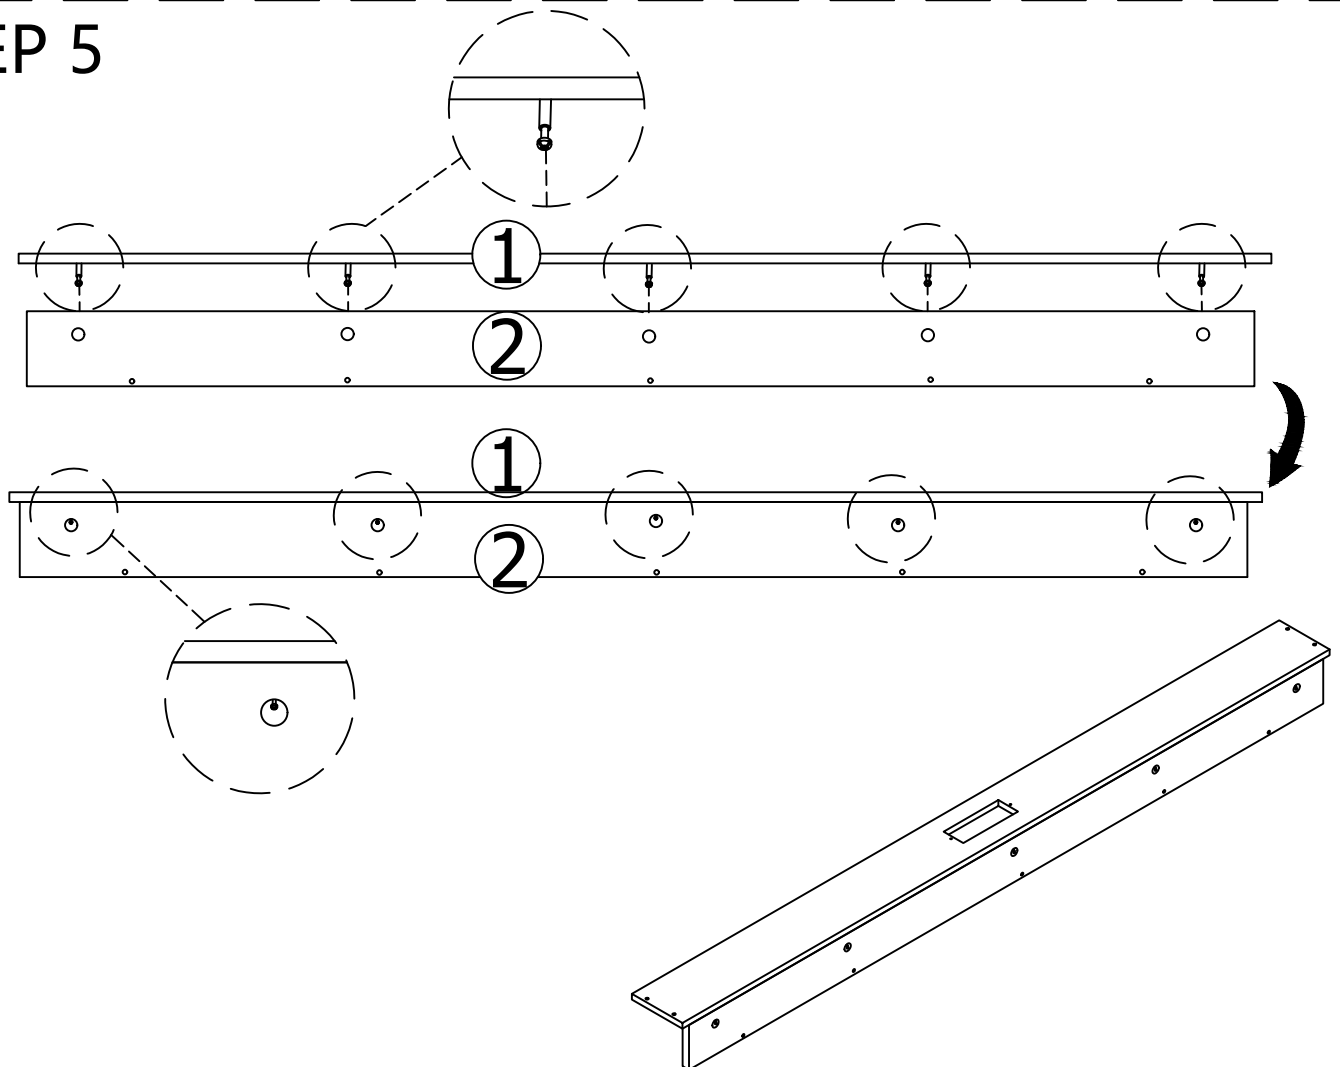


STEP 6

F




Ø15x9.5

5

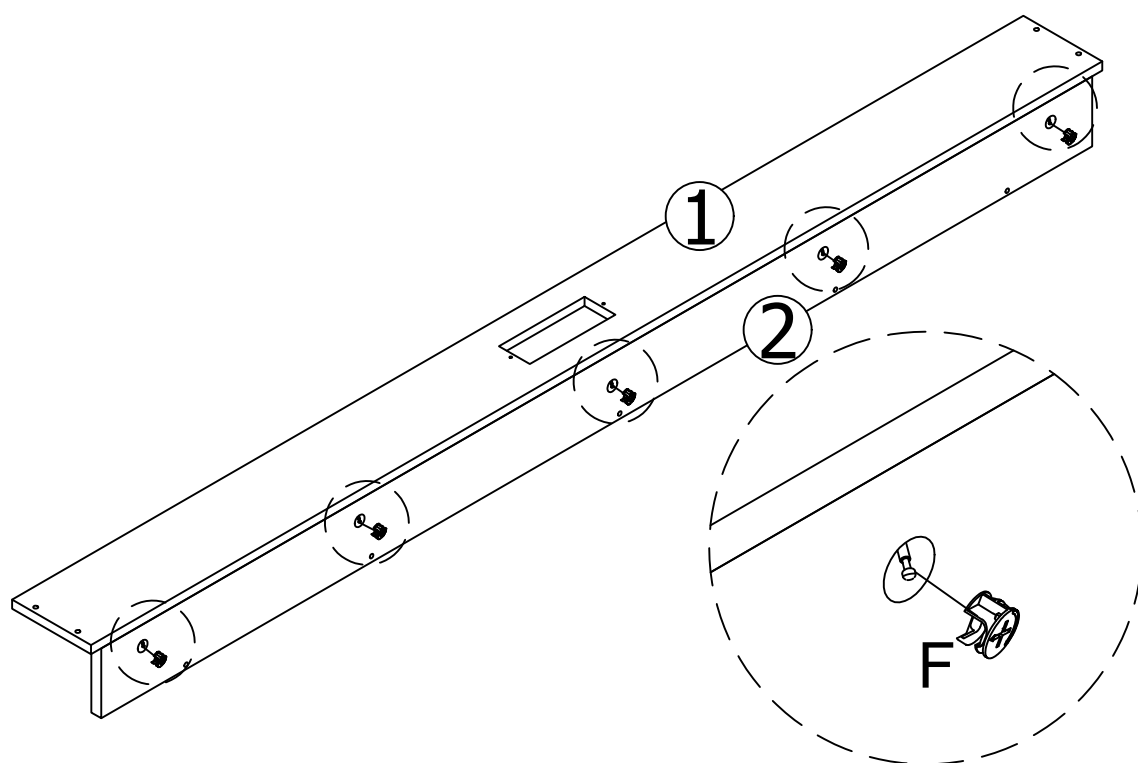


STEP 7

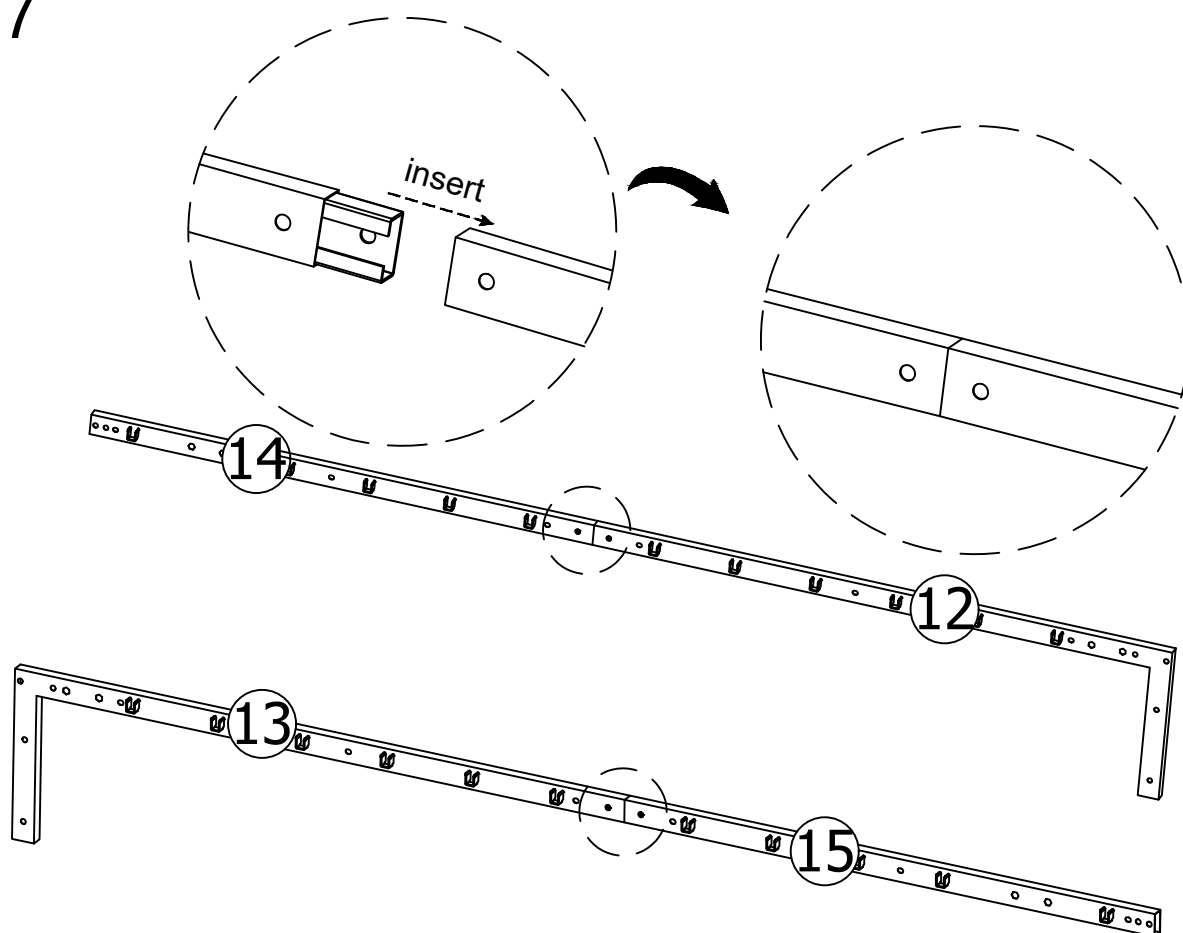

STEP 8


C		M8x10	4
---	---	-------	---

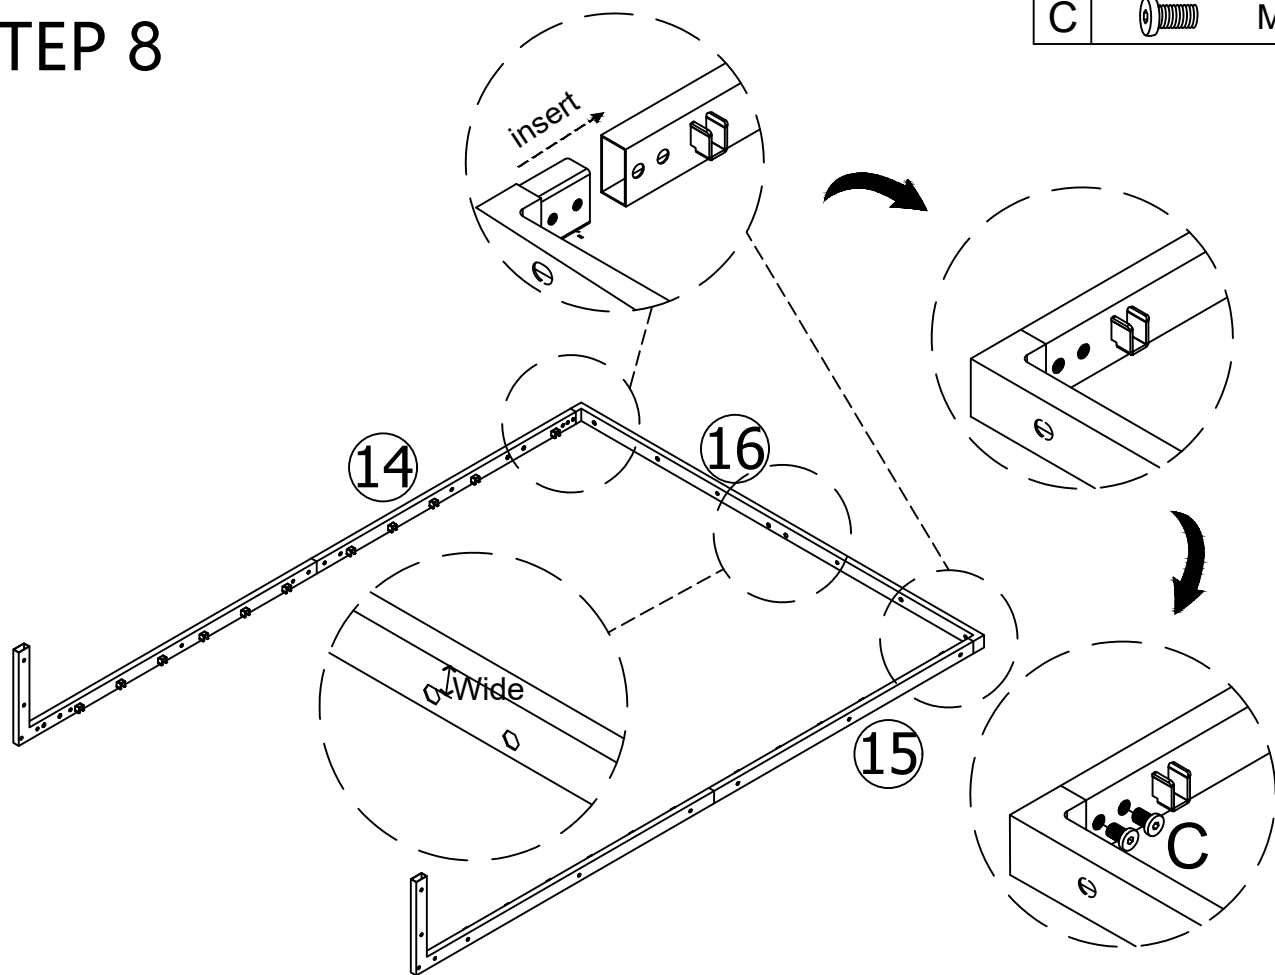

Please note that the parts are bottom side up.


STEP 9

G		M8x32	8
---	---	-------	---

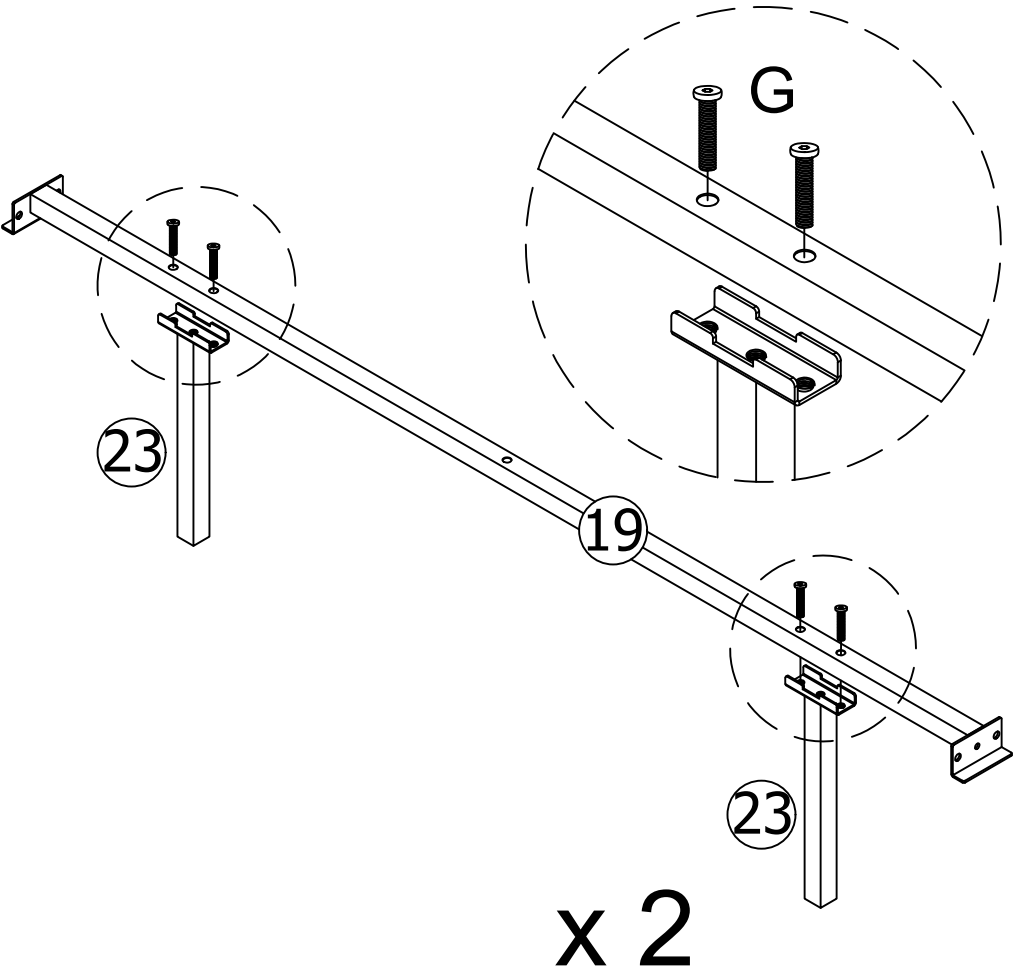


STEP 10

G		M8x32	6
---	---	-------	---

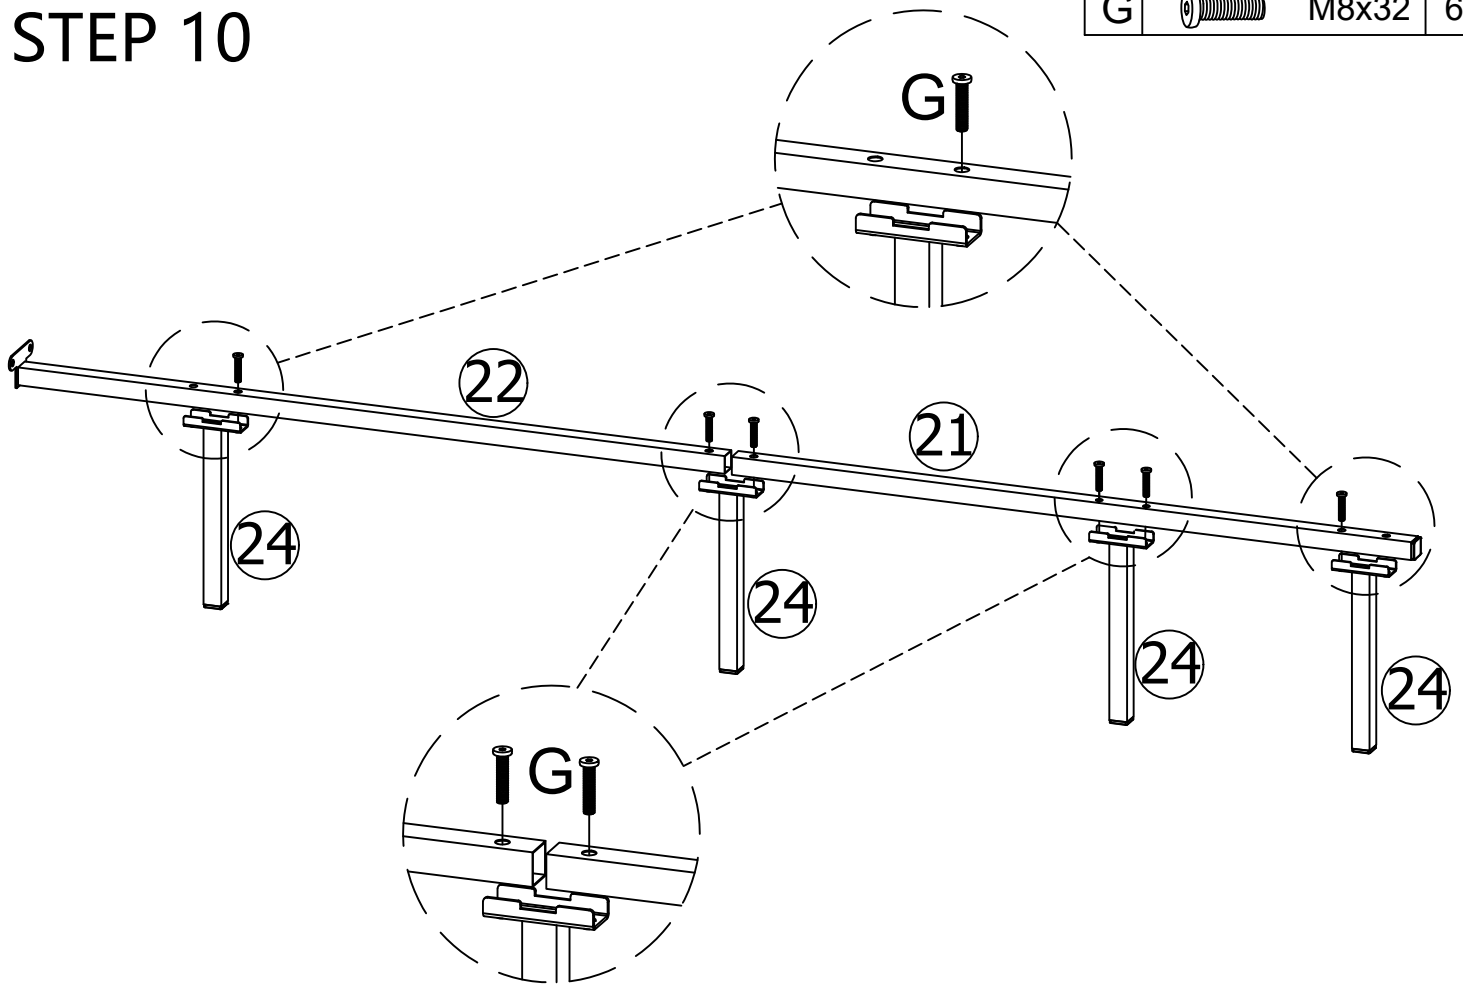

STEP 11


C		M8x10	12
---	---	-------	----

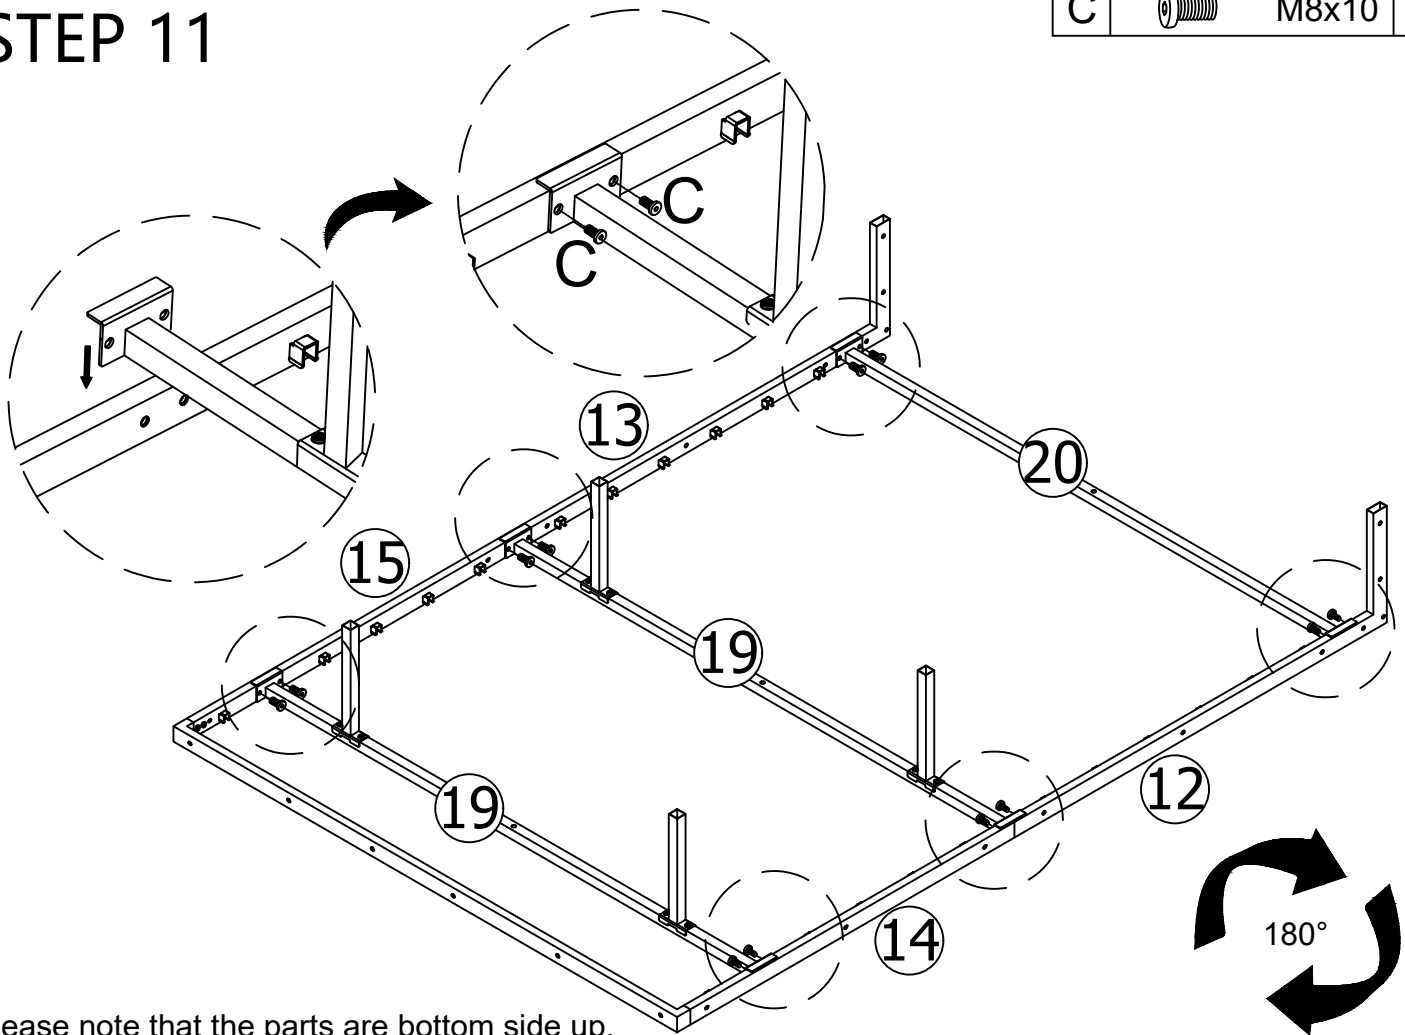

Please note that the parts are bottom side up.


STEP 12

H		M8x60	3
C		M8x10	2

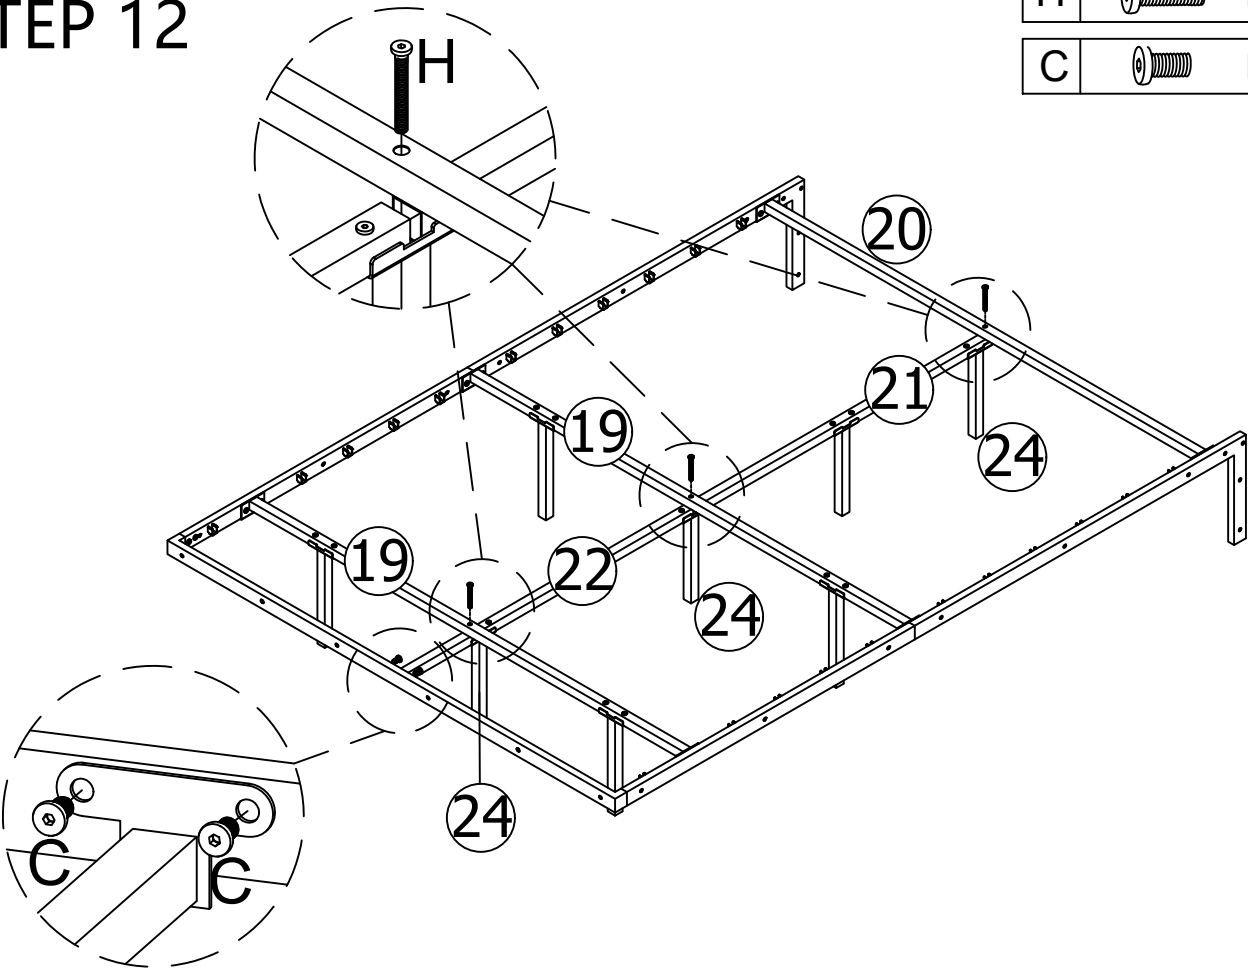



STEP 13

G		M8x32	8
---	---	-------	---

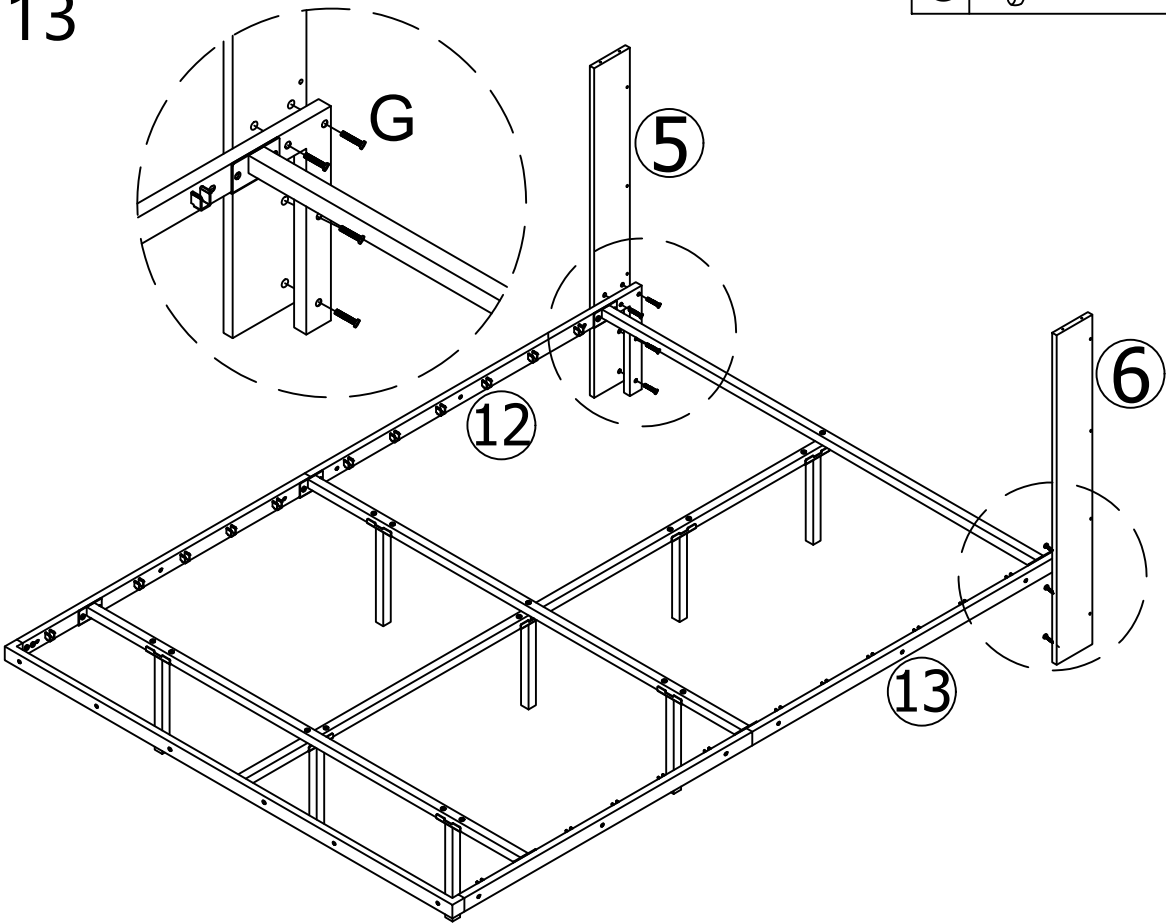


STEP 14

B		M6x28	16
---	---	-------	----

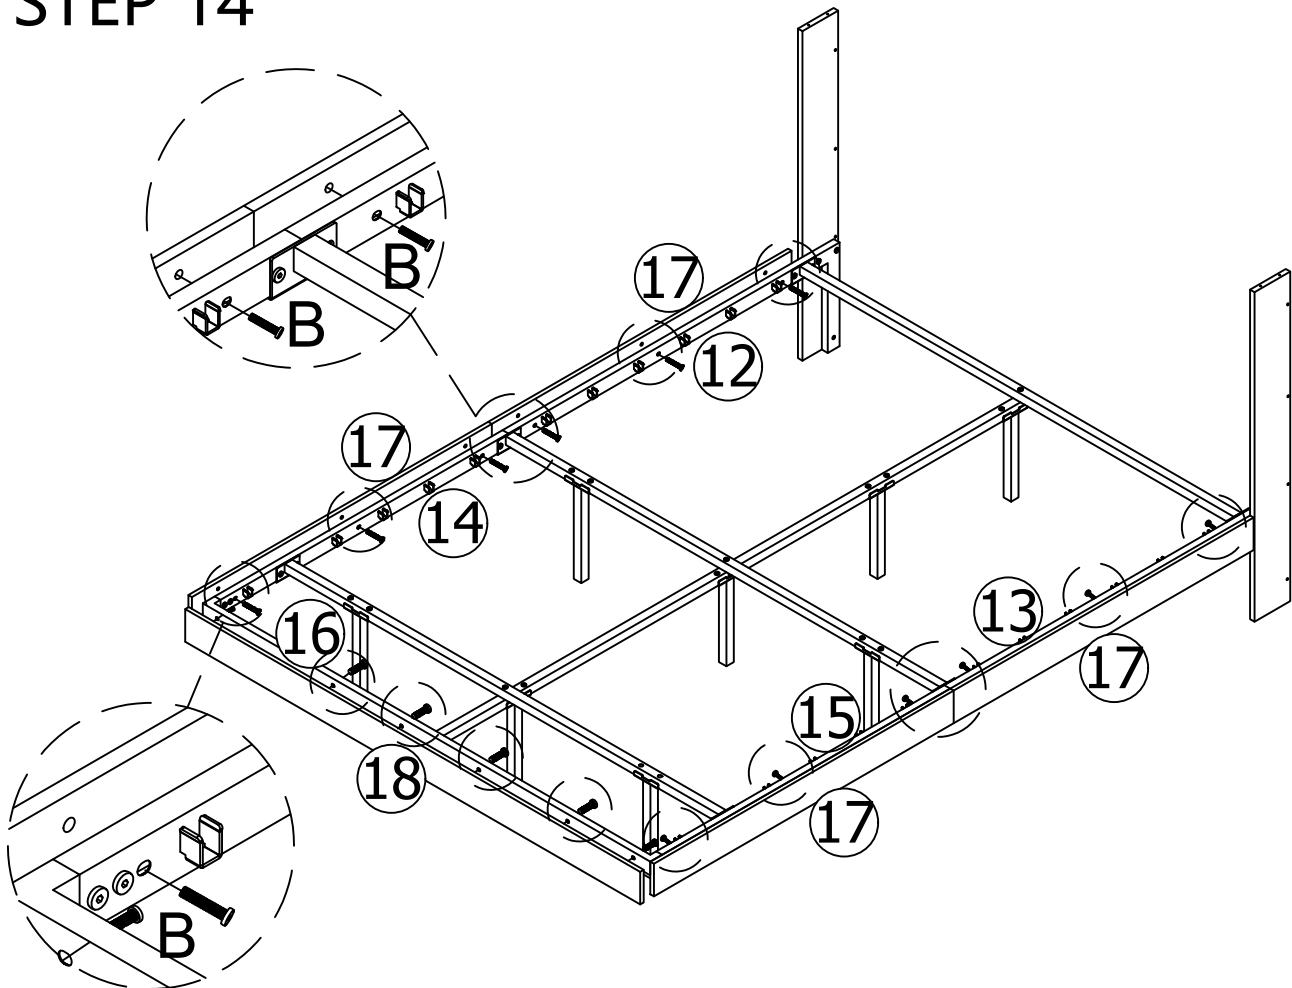


STEP 15

D		Ø5x35	8
---	---	-------	---

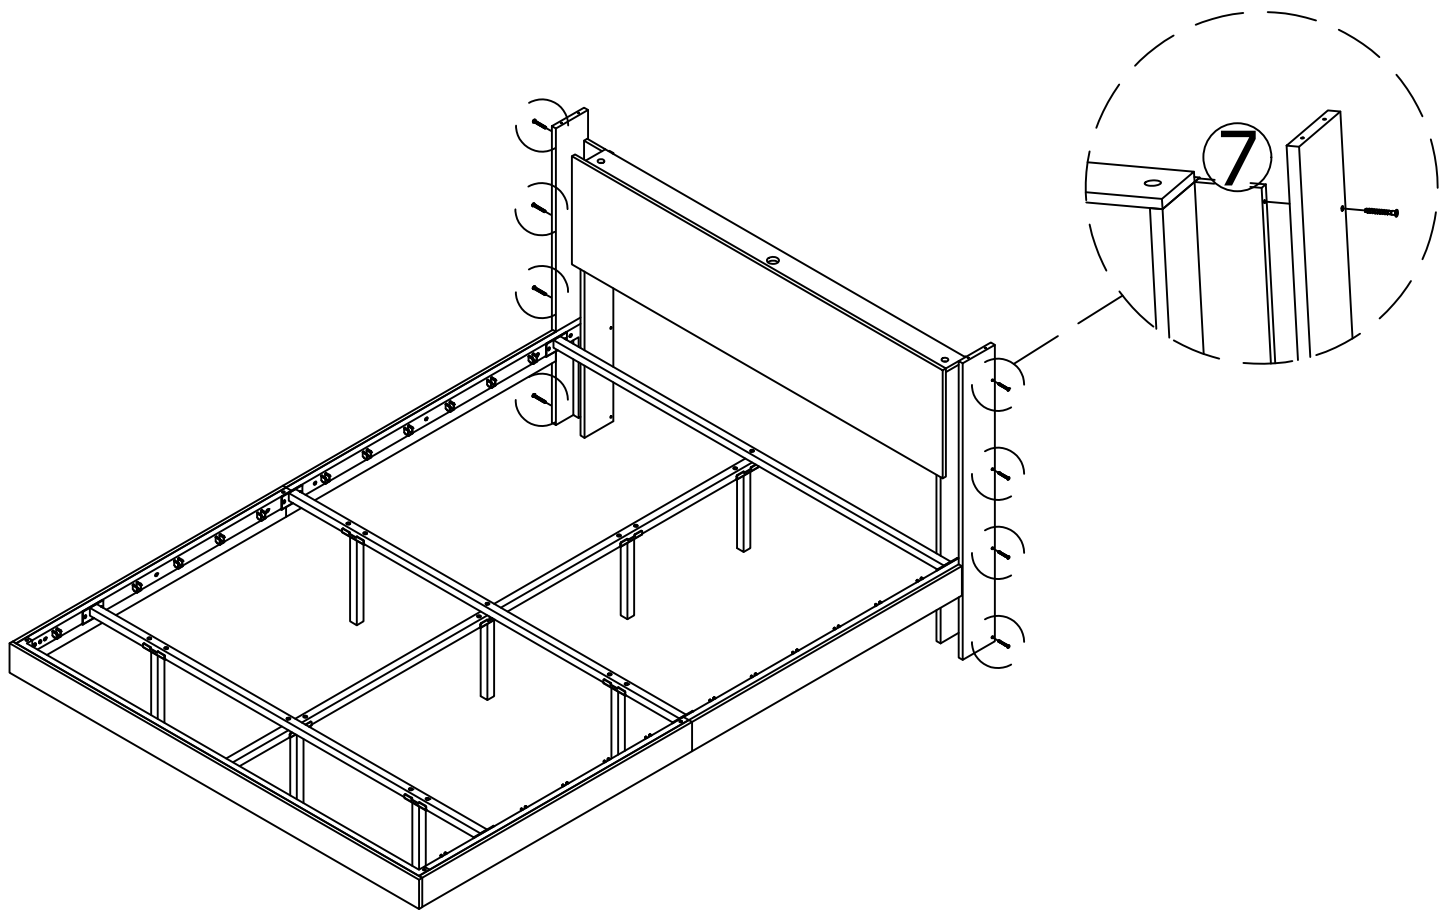


STEP 16

D		Ø5x35	9
---	---	-------	---

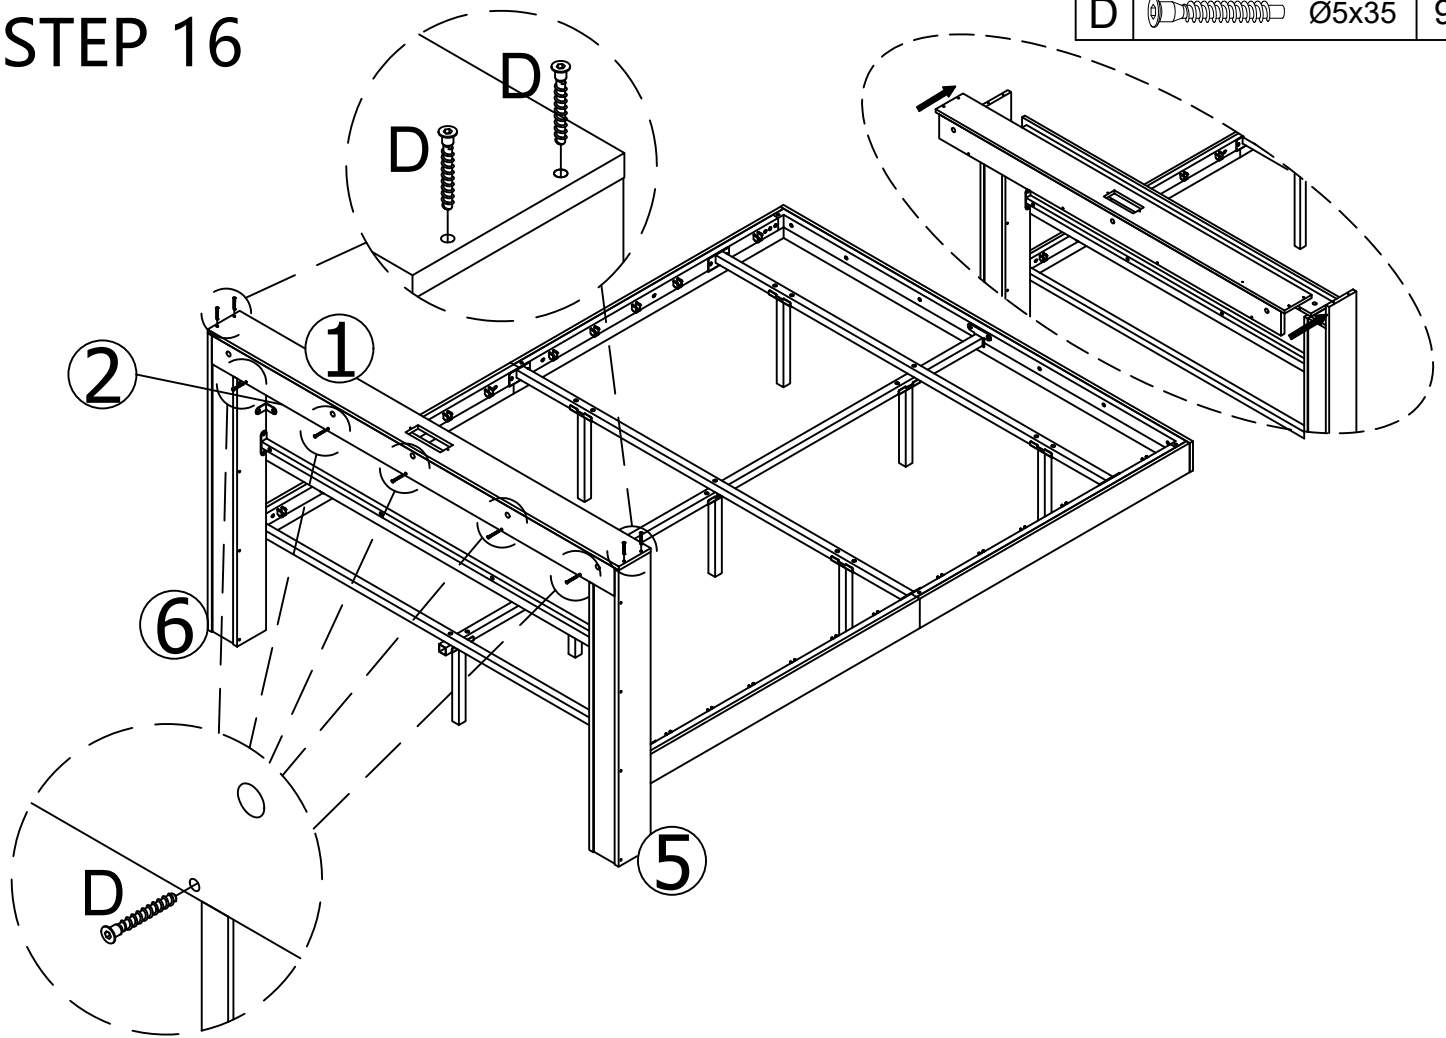


STEP 17

L		1
---	---	---

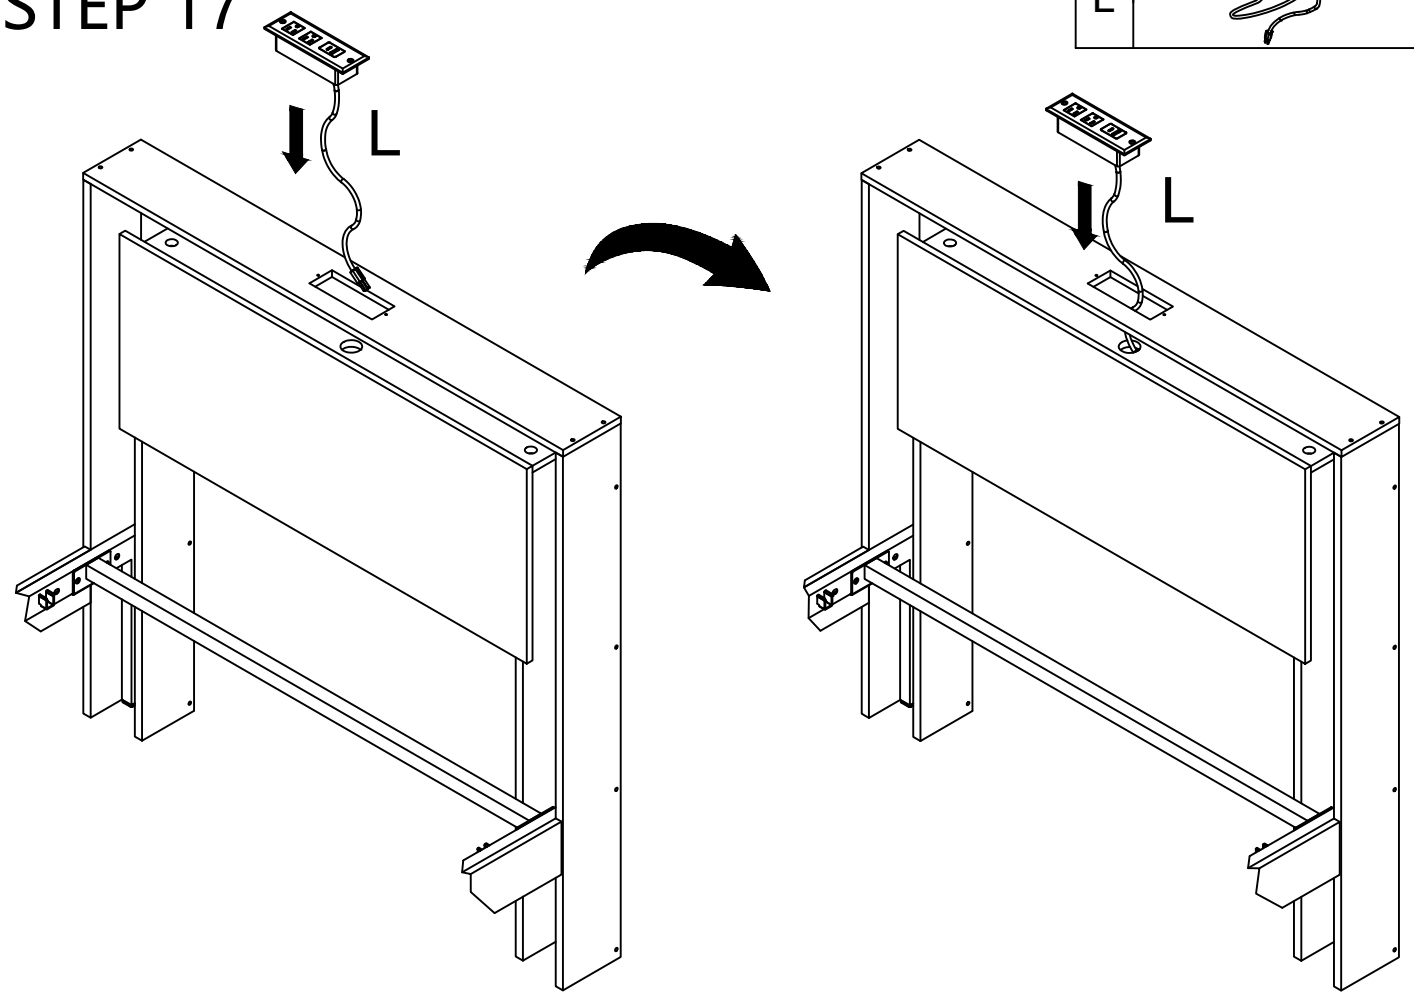

STEP 18


I		Ø4x10	2
---	---	-------	---

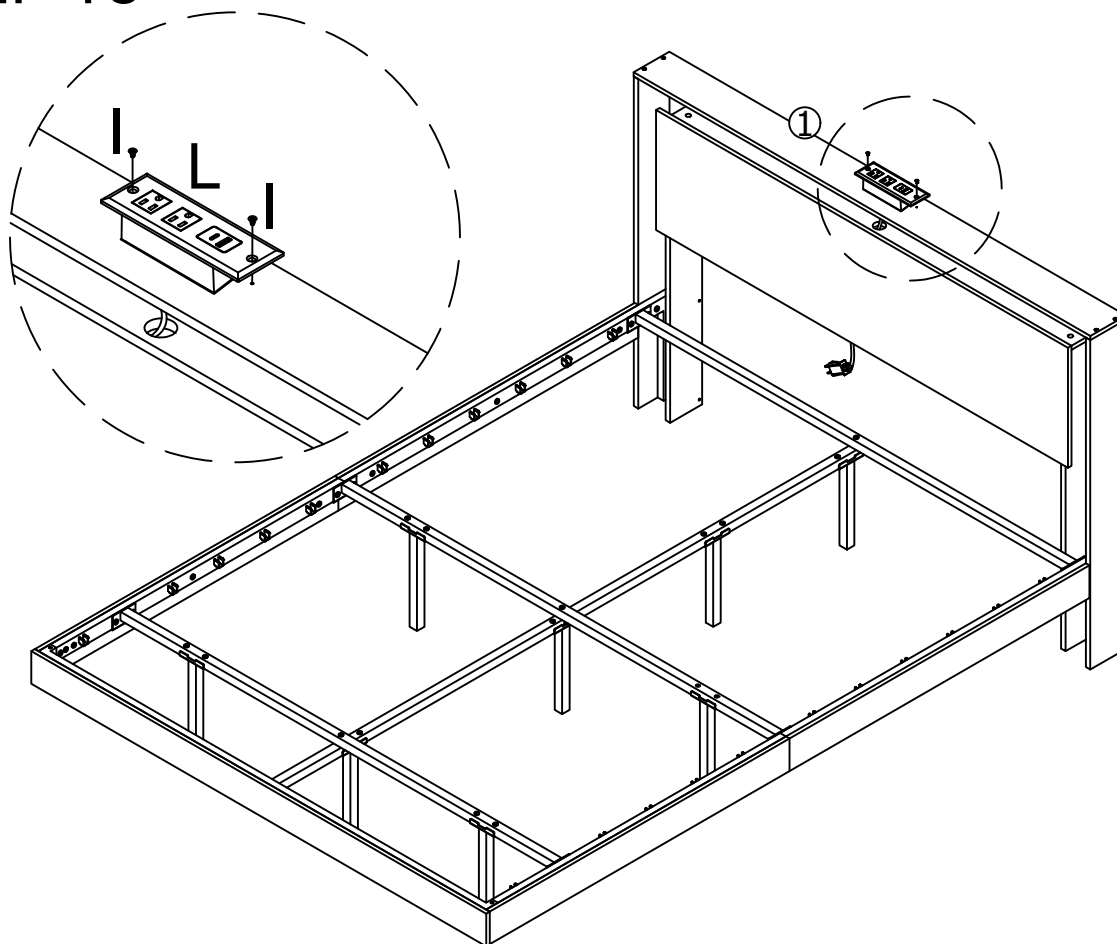


STEP 19

P		1
---	---	---


1. Paste the (P) light strip on the bottom of the bed edge and bed tail.
2. You can also install (P) on the right side according to your own choice.
3. Please tear off the light strip slowly when changing the position to prevent breaking.

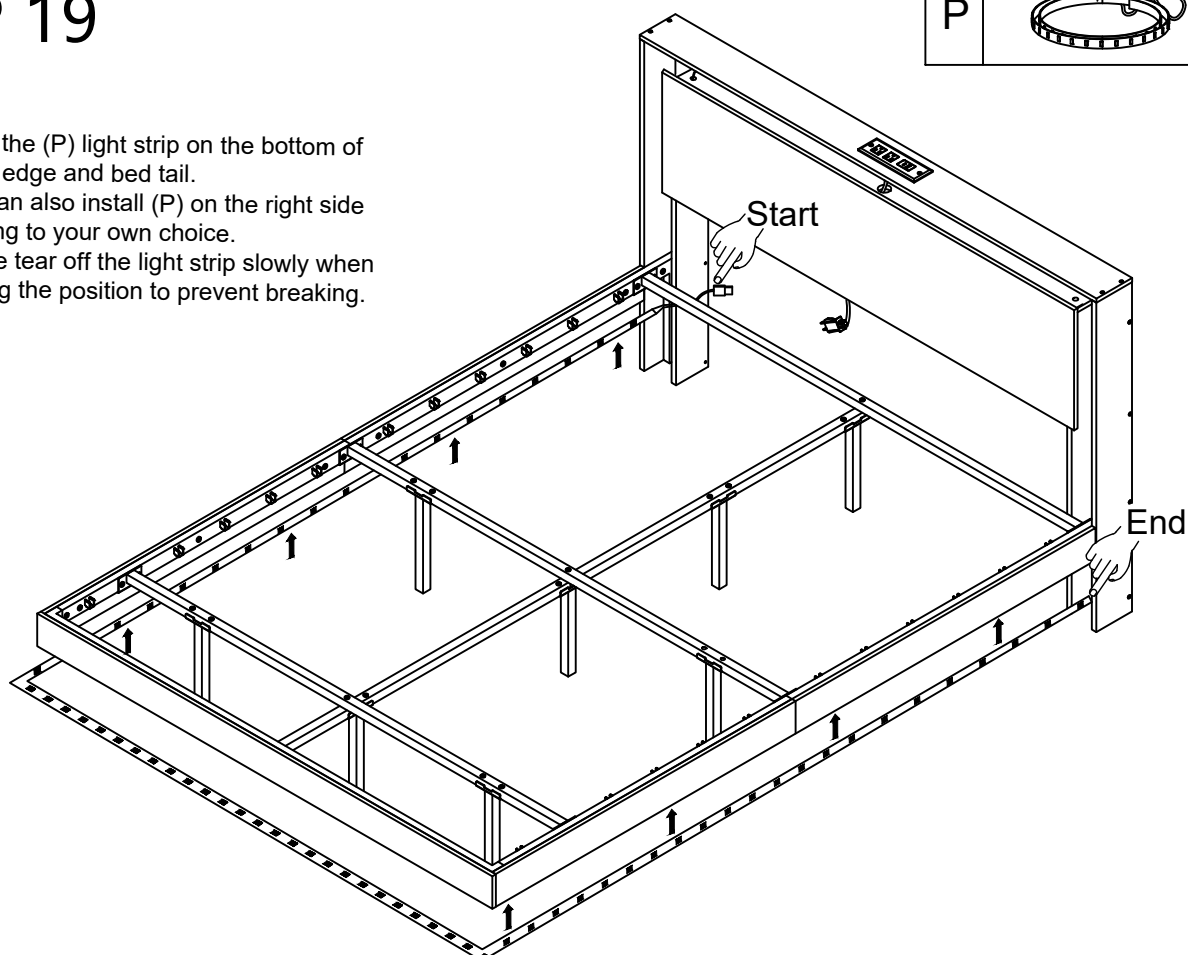

STEP 20

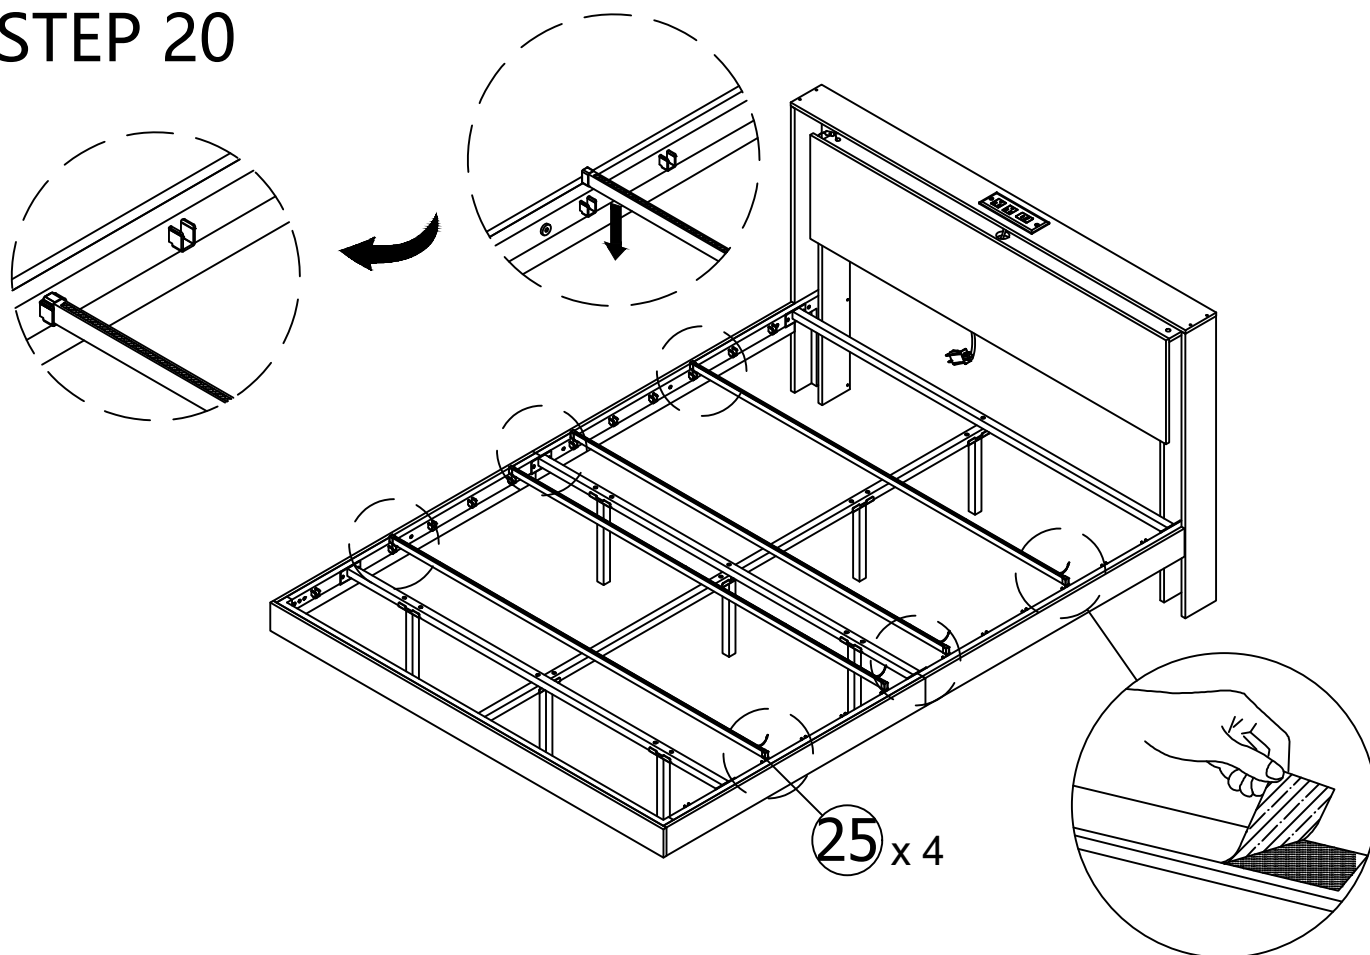


STEP 21

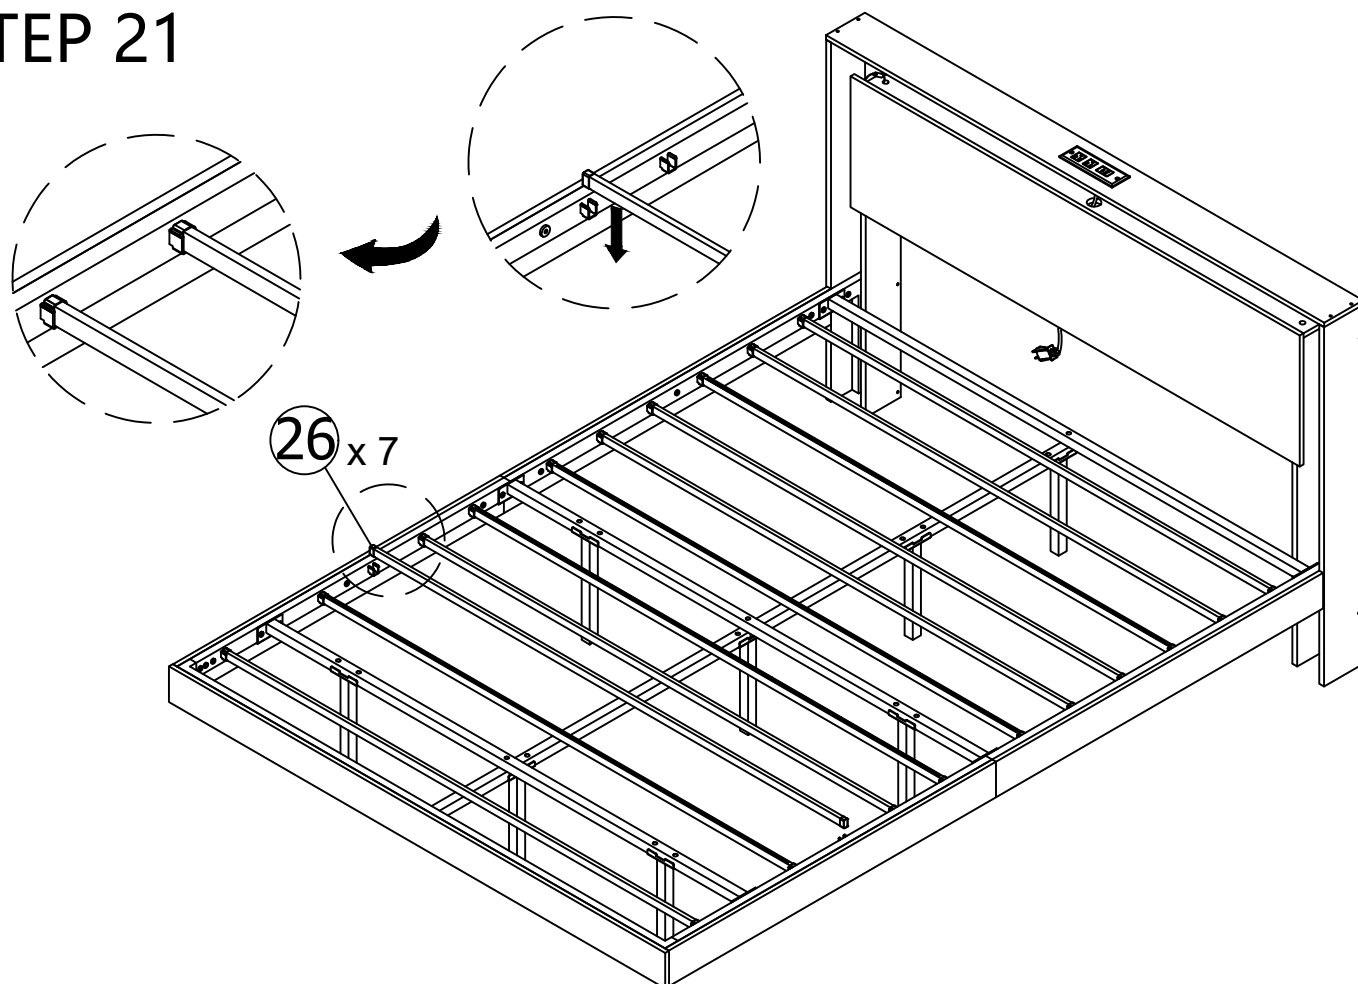


STEP 22

M		PowerAdapter	1
N		Wire Conversion	1

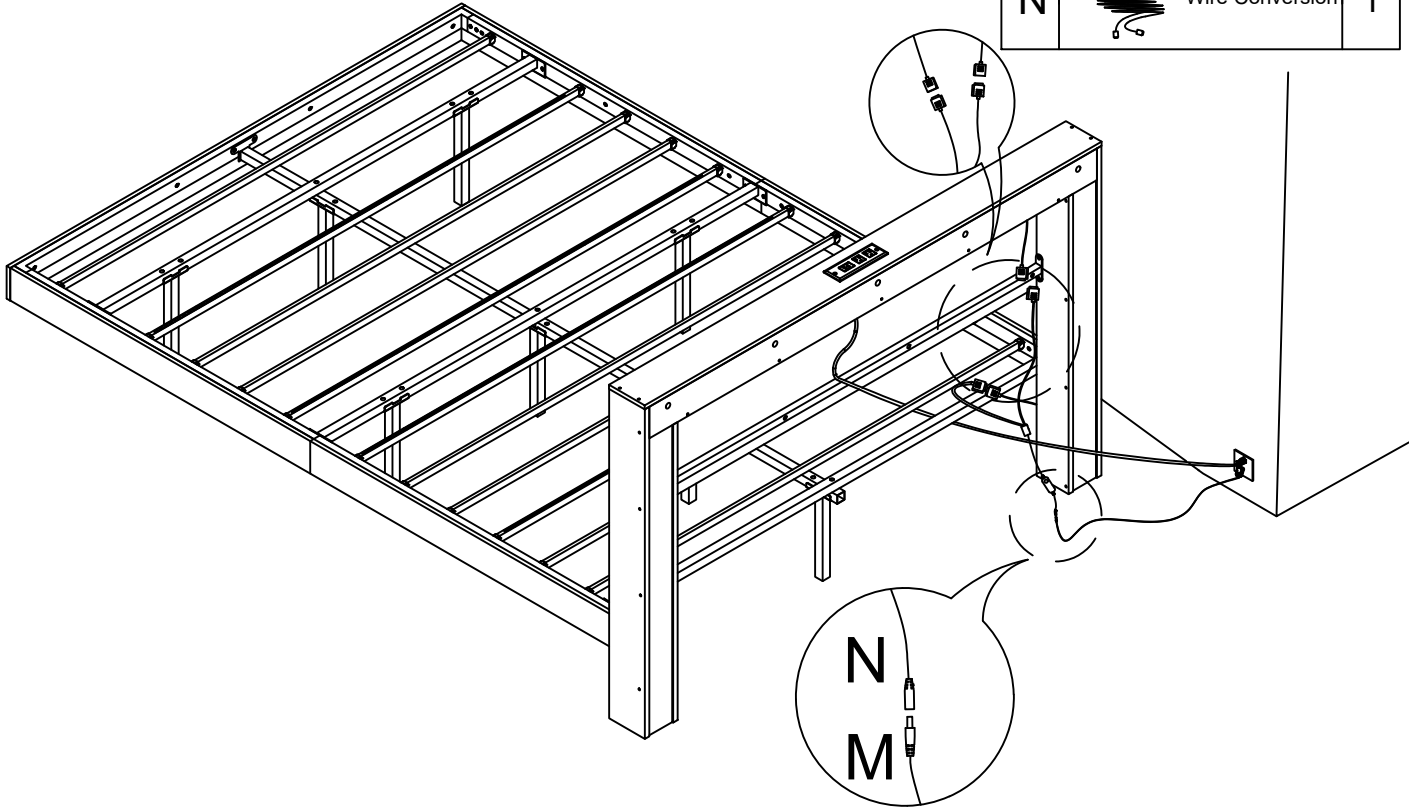

STEP 23

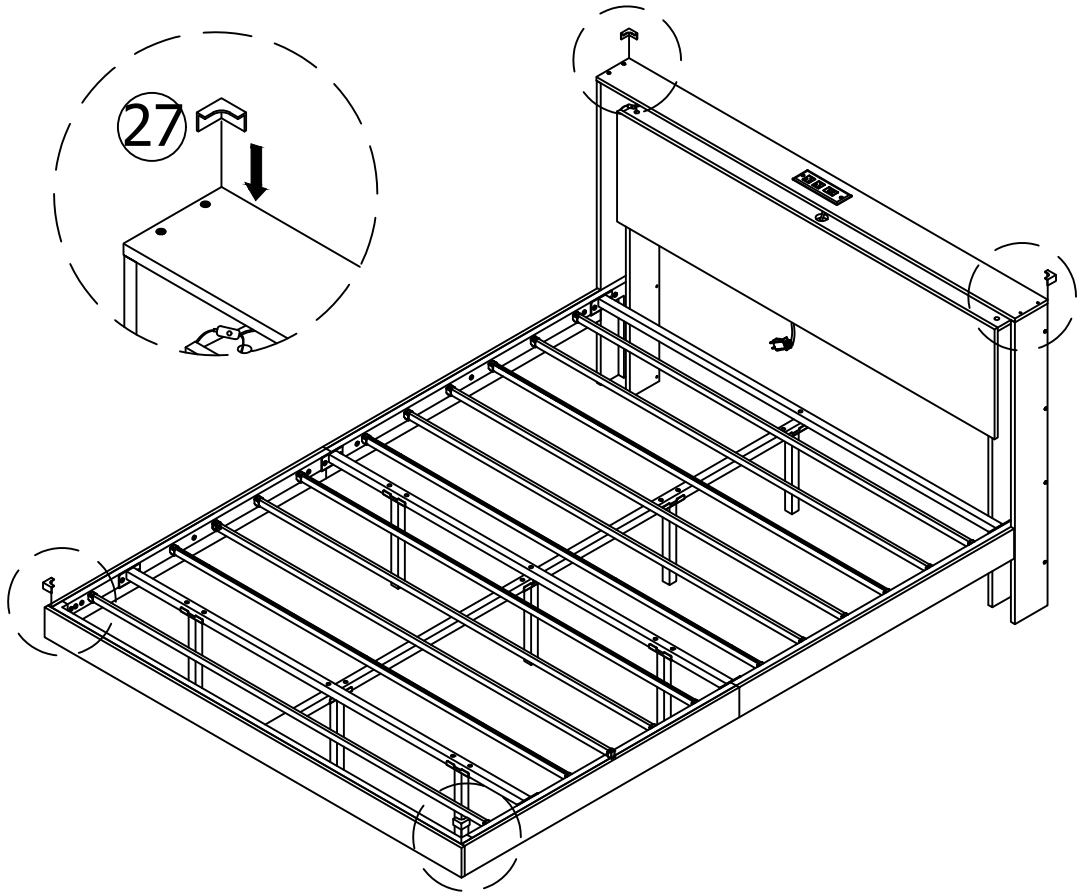

STEP 24

