


User's Manual

— Television Stand —

The picture is reference, the actual product shall prevail

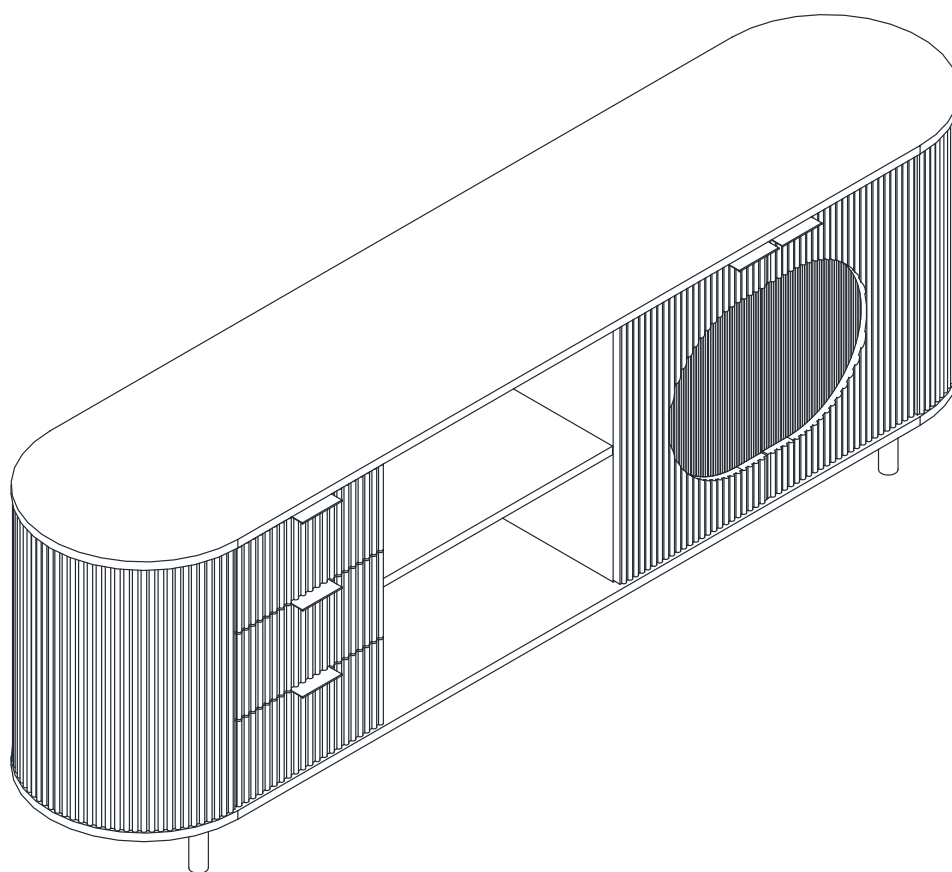

<http://www.viviaest.com/tvstandlrts005>

WARM REMIND



If you encounter any problems in the installation process, you can scan the QR code to watch the teaching video or contact us by email, we will reply you in time.
Email: clientservicehub@outlook.com; wearehere.help@outlook.com

SAFETY WARNINGS

1.WARNING: HEAVY PARTS!

Lift with care. Use two people to move large panels. Dropping parts may cause injury or damage floors.

2.WARNING: USE CORRECT TOOLS ONLY!


Assemble with provided tools. Do NOT use power drills/ excessive force. Forcing parts may crack wood or strip hardware.

3.CAUTION: PROTECT SURFACES!

Assemble on soft, flat flooring (e.g., carpet/blanket). Avoid dragging panels to prevent scratches.

4.WARNING: FOLLOW STEPS EXACTLY!

Read ALL instructions first. Skipping steps or incorrect assembly may cause instability, leading to tip-over hazards.















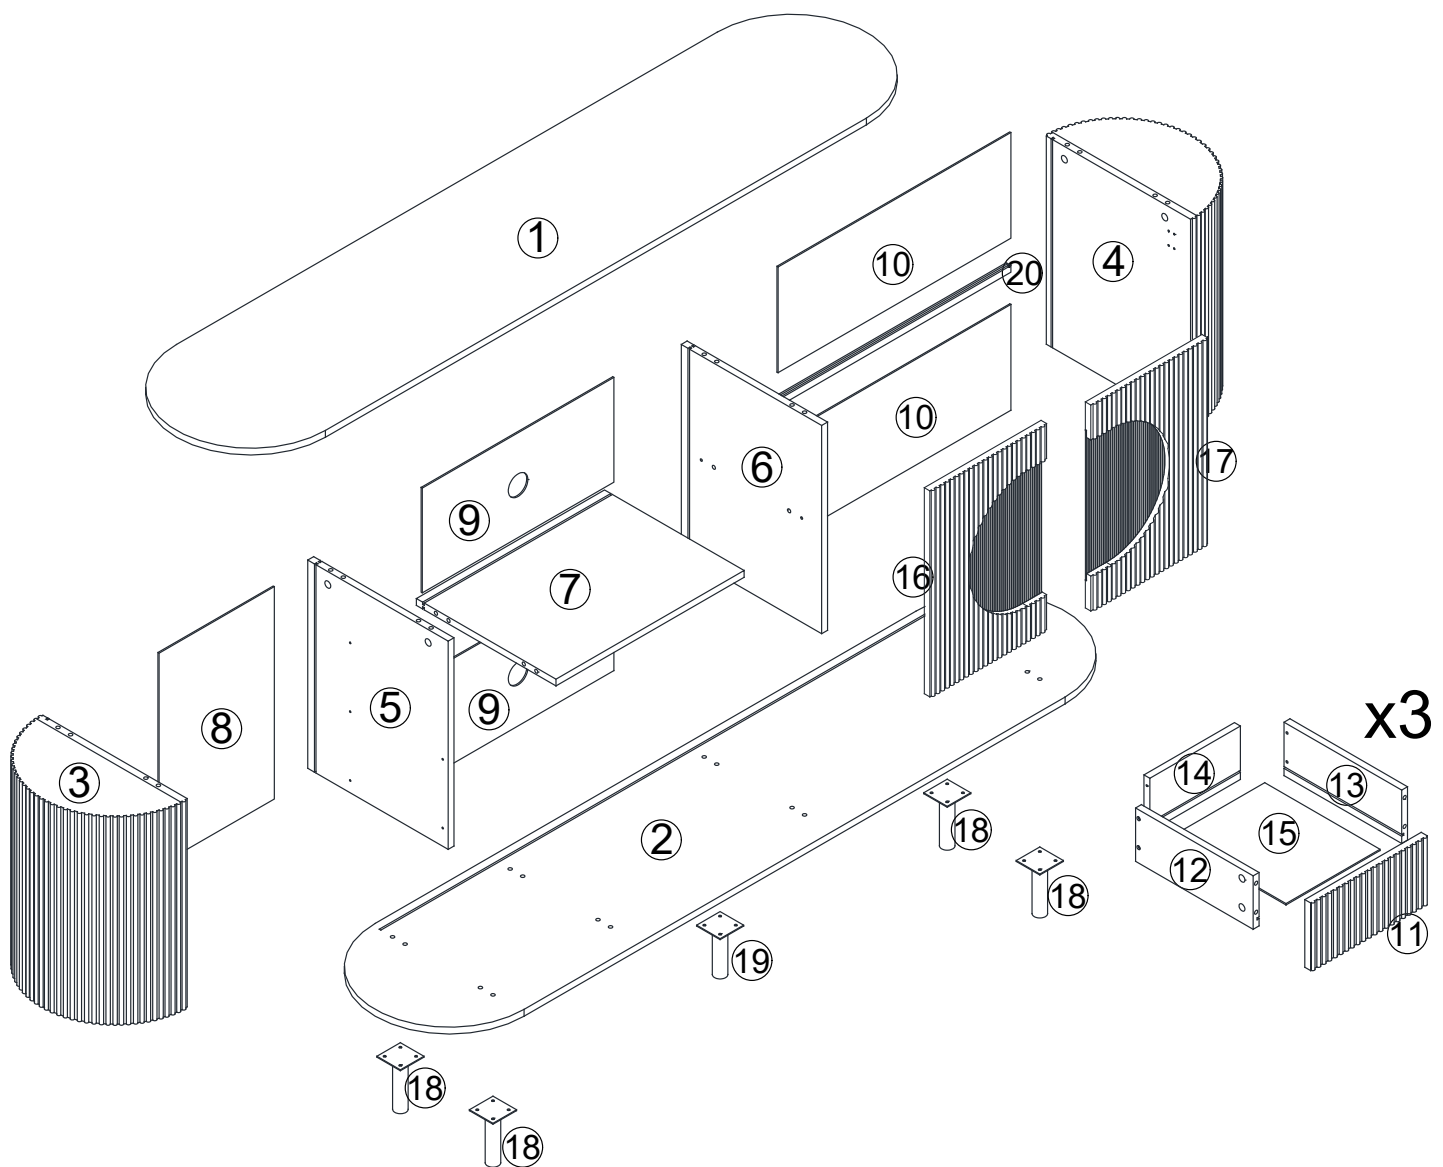


WARNINGS:












1. Before beginning assembly, please ensure that you have all the required parts if anything is missing, please contact us for assistance instead of immediately initiating a return. We are here to help.

2. Please put on gloves to avoid chafing.


hardware list

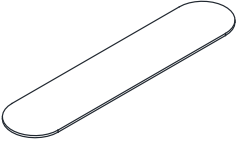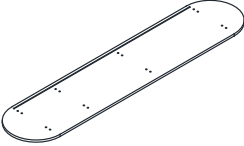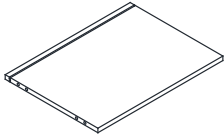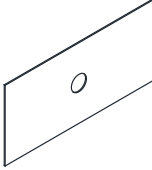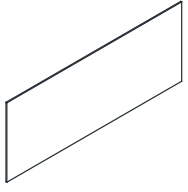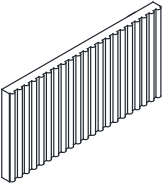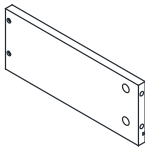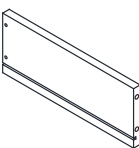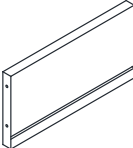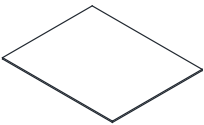1	1PC	2	1PC	3	1PC	4	1PC	5	1PC
									
6	1PC	7	1PC	8	1PC	9	2PCS	10	2PCS
									
11	3PCS	12	3PCS	13	3PCS	14	3PCS	15	3PCS
									
16	1PC	17	1PC	18	4PCS	19	1PC	20	1PC
									

hardware list

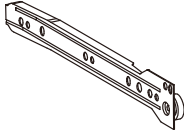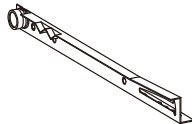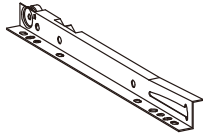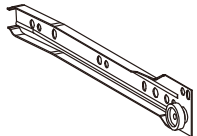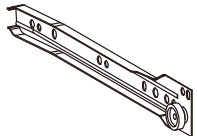A	24PCS			C	20+2PCS		D	8PCS		E	40+2PCS	
		Ø6x35mm	Ø15x12mm			Ø8x30mm			M7x38mm			M3x14mm
F	28PCS			H	24+2PCS		I	12PCS		J	1PC	
		14x14x10mm	M4x14mm			M3x12mm			M4x35mm			/
K	1PC			M	5PCS		N	1PC		O	1PC	
		M6	M4x12mm			/			M4			/
P	2PCS			R	17PCS		CL	3PCS		DL	3PCS	
		/	/									
DR	3PCS			CR	3PCS							

Anti-overturn hardware bag

S	2PCS		T	2PCS		U	2PCS		V	2PCS		W	4PCS	
		ø4x12mm			/			/			ø4x40mm			/


STEP1

HX12






M3x12

CLX3



CRX3

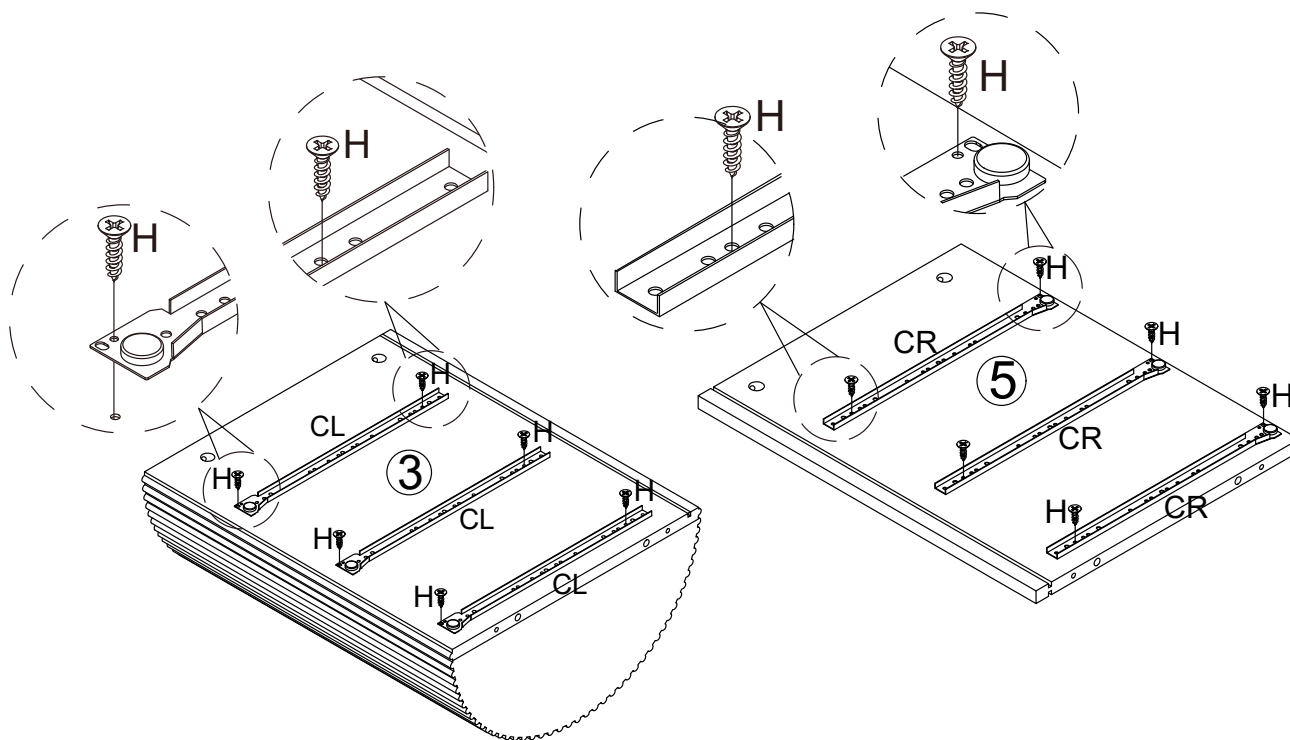

STEP2

AX4







M6x35

CX4








ø8x30

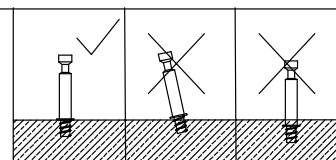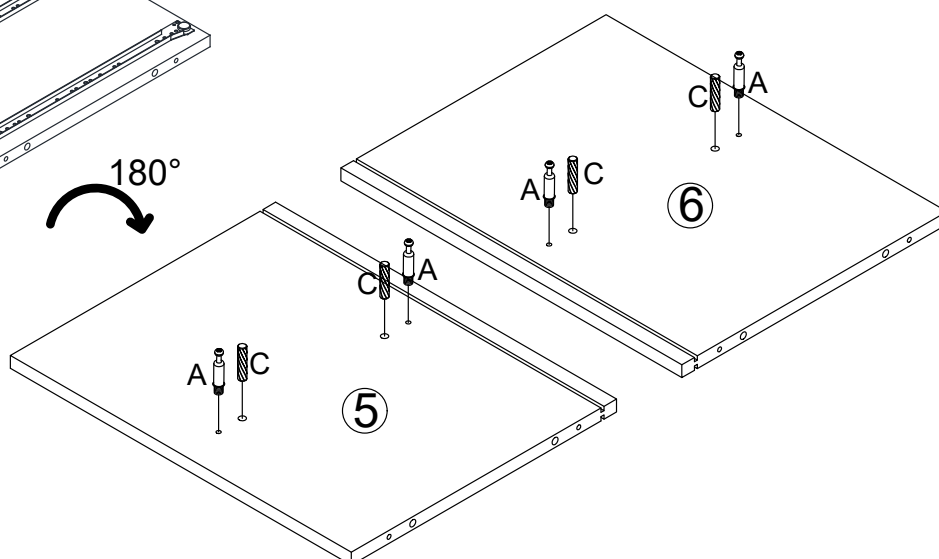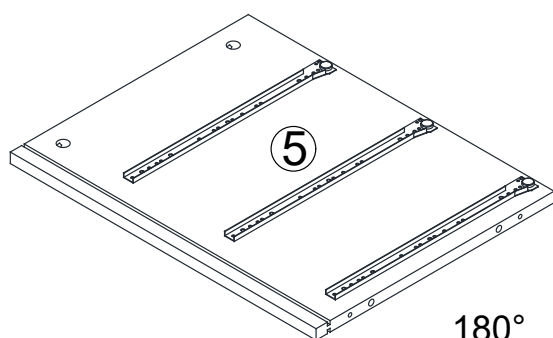


STEP3

Bx4

ø15x12

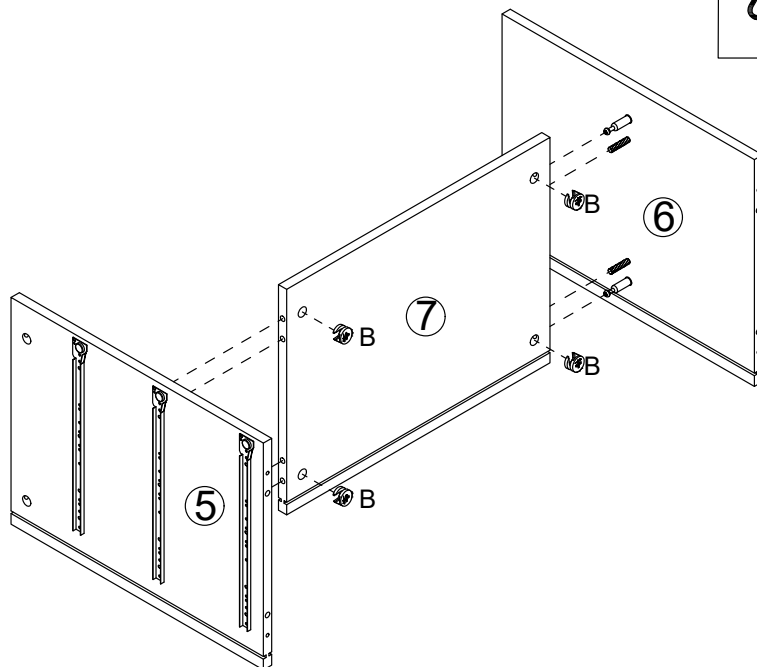






STEP4

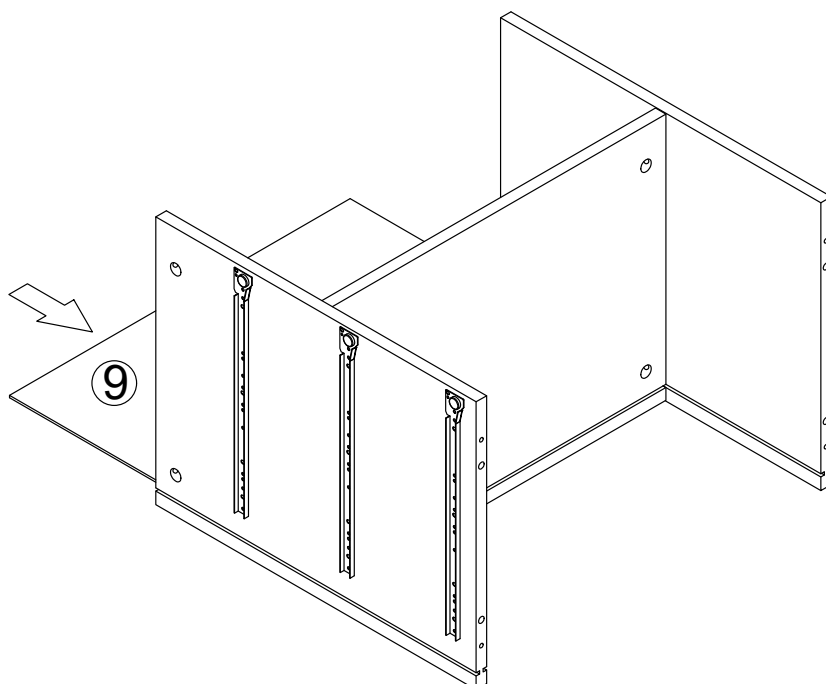

STEP5





Ax8
M6X35

Cx8
ø8X30

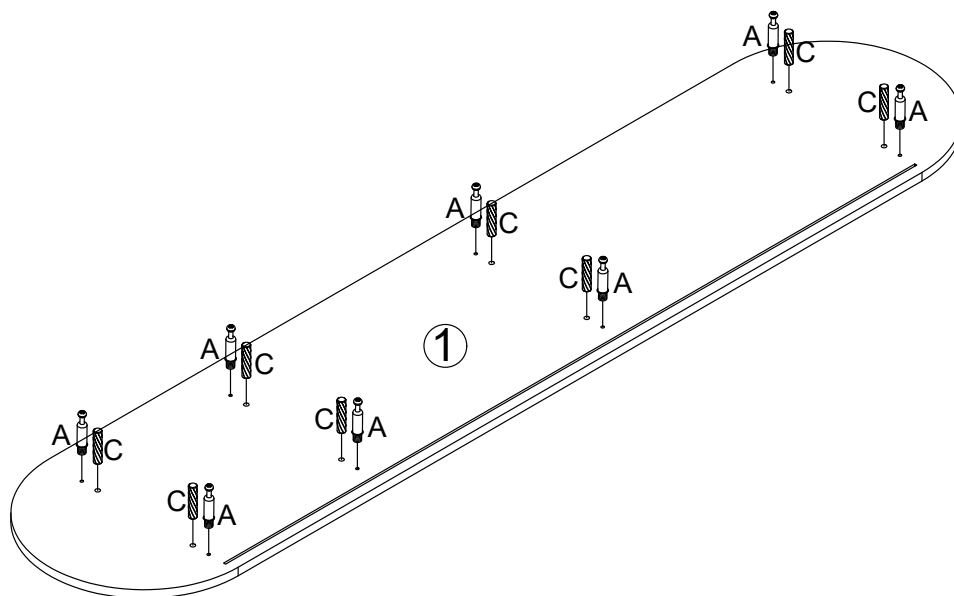


STEP6

Bx4
ø15x12



Connect board 1 with screws B at the same position on both sides.


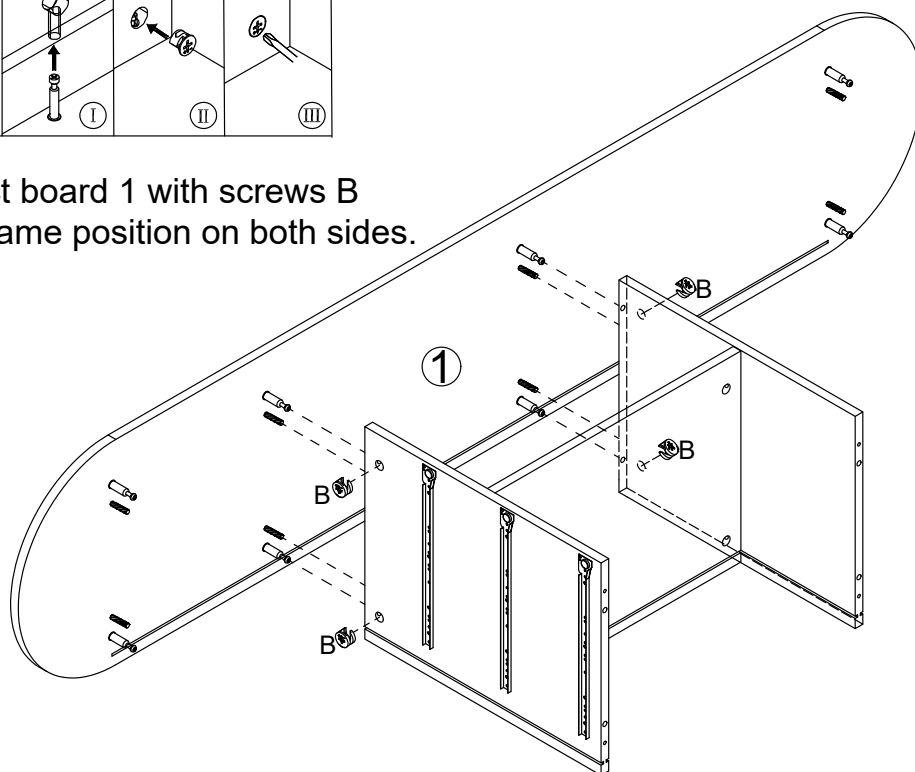


STEP7


Bx4




ø15x12

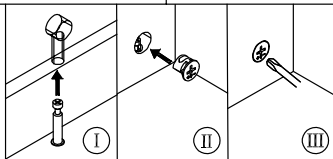

Install 2 B's on both the left and right sides

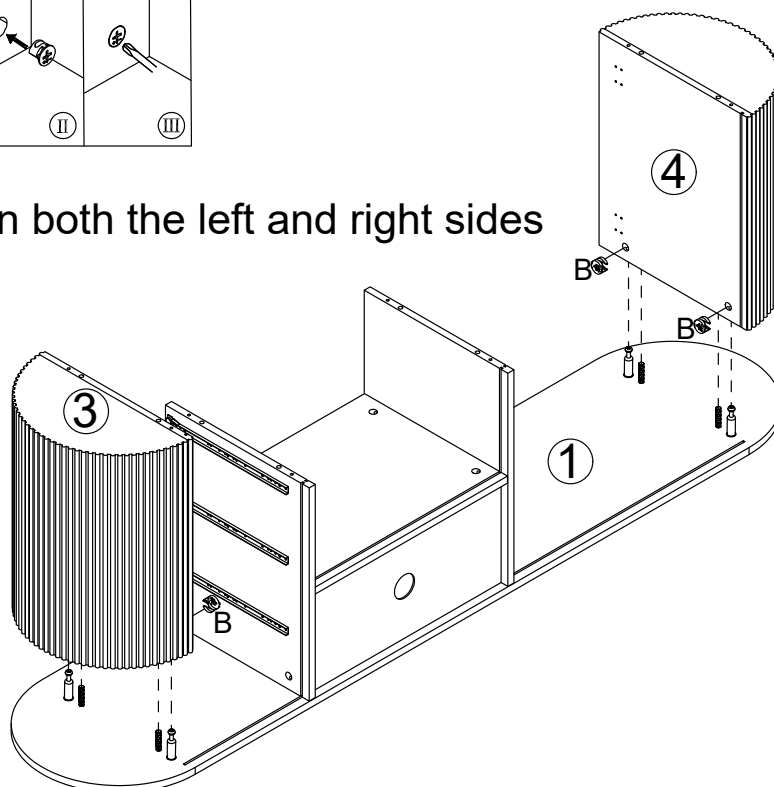


STEP8

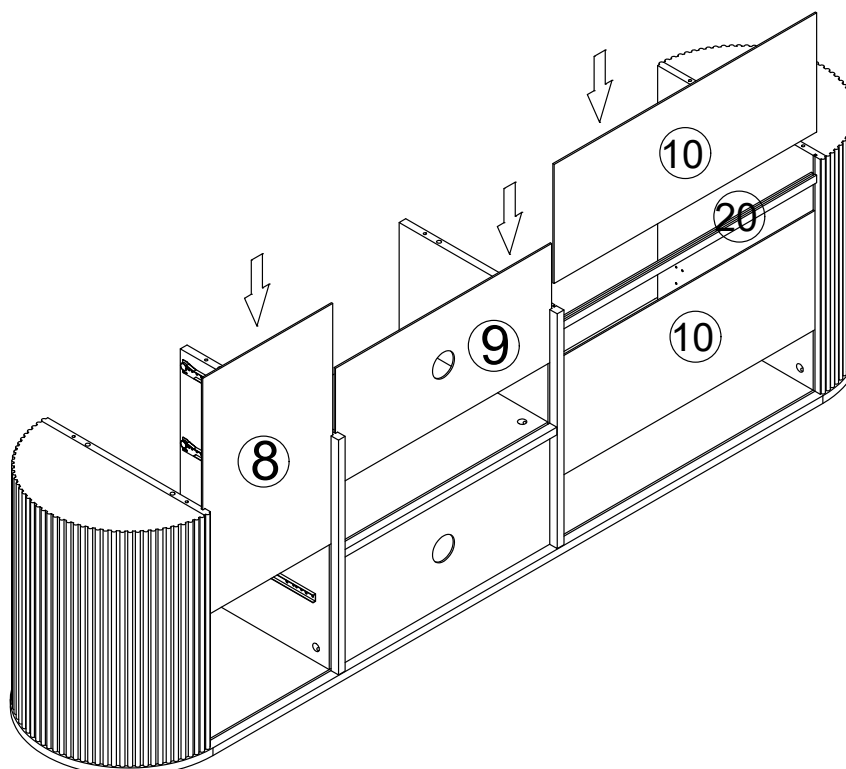


STEP9

Cx8





ø8x30

Dx8



M7x38

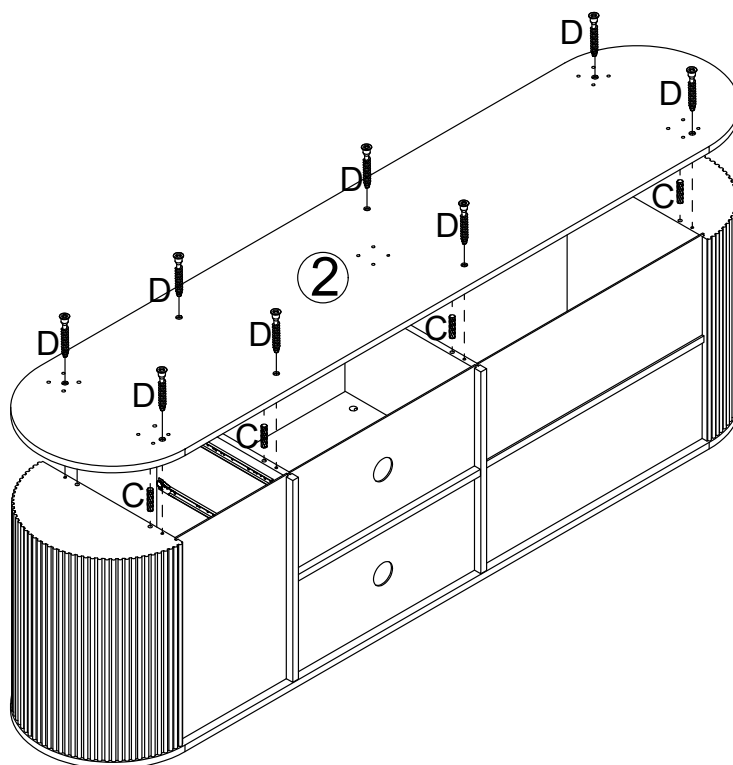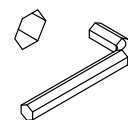

STEP10

Kx1





M6

Lx20



M4x12

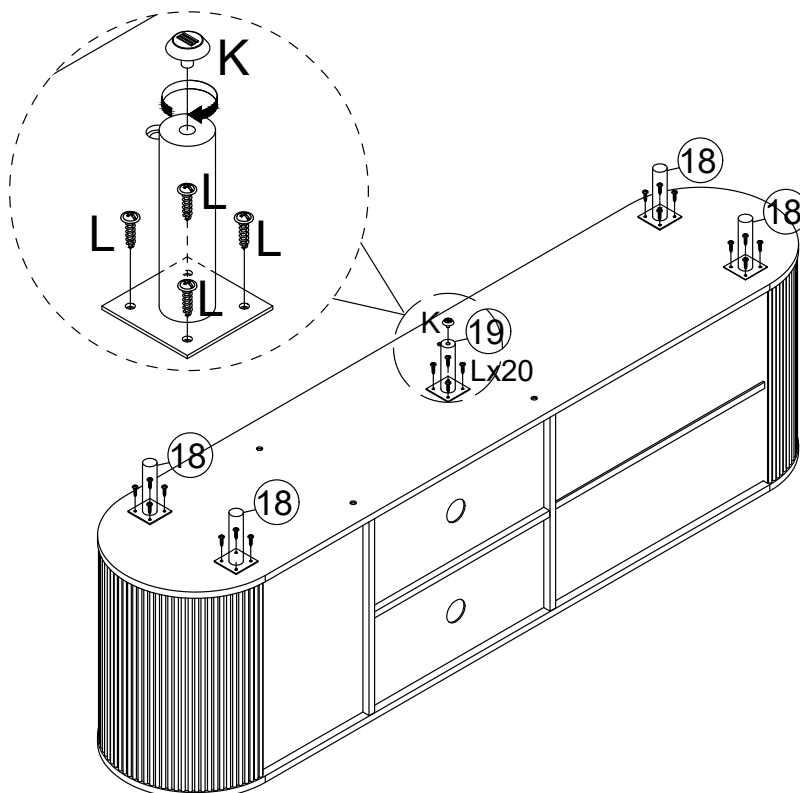



STEP11

Ex28



M3x14

Fx28

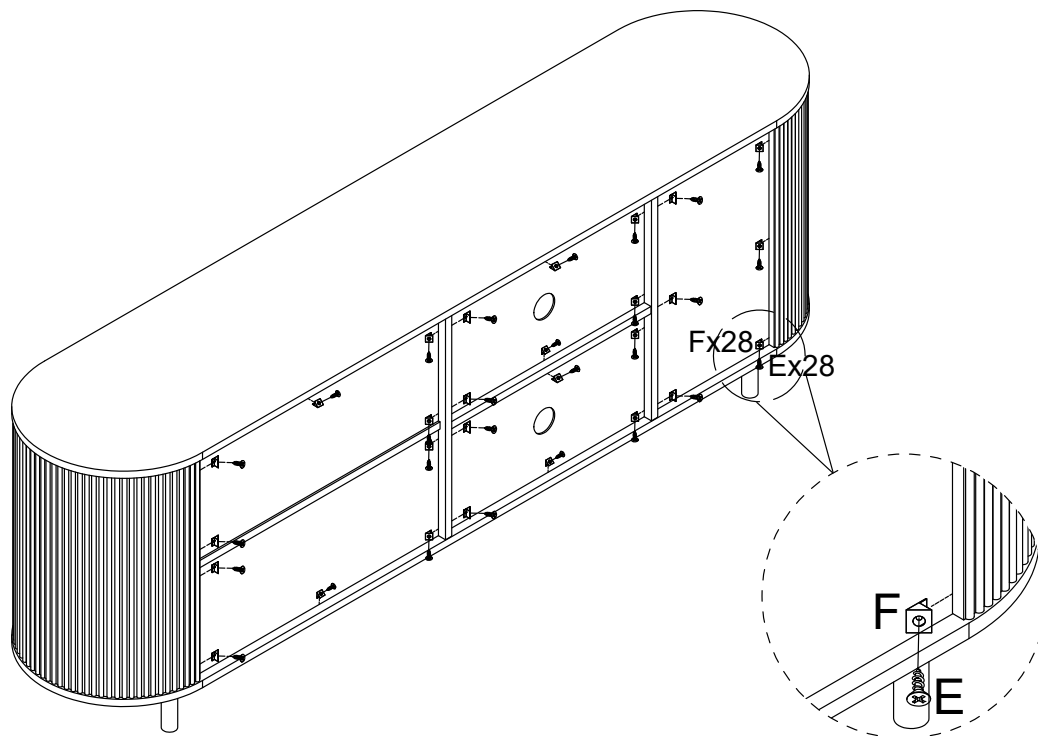

STEP12

Ex4



M3x14

Gx8



M4x14



Mx2



Px2






Qx2

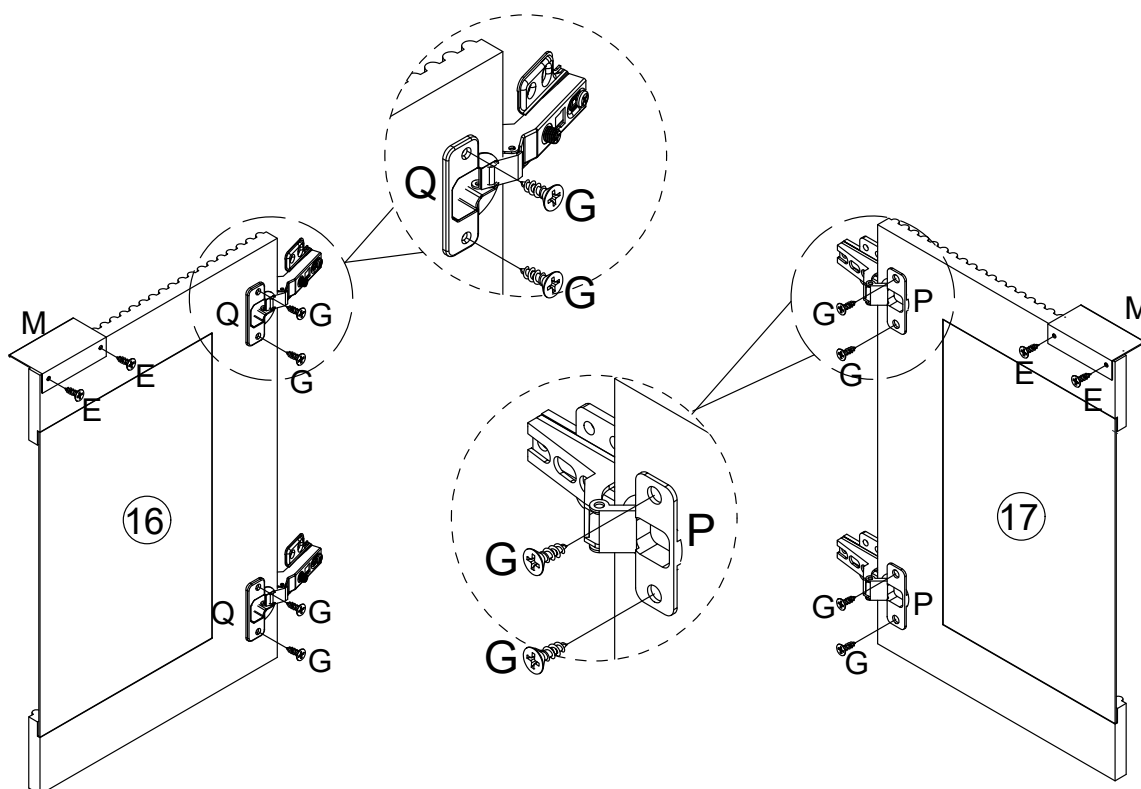

STEP13



Ex2
M3x14

Jx1

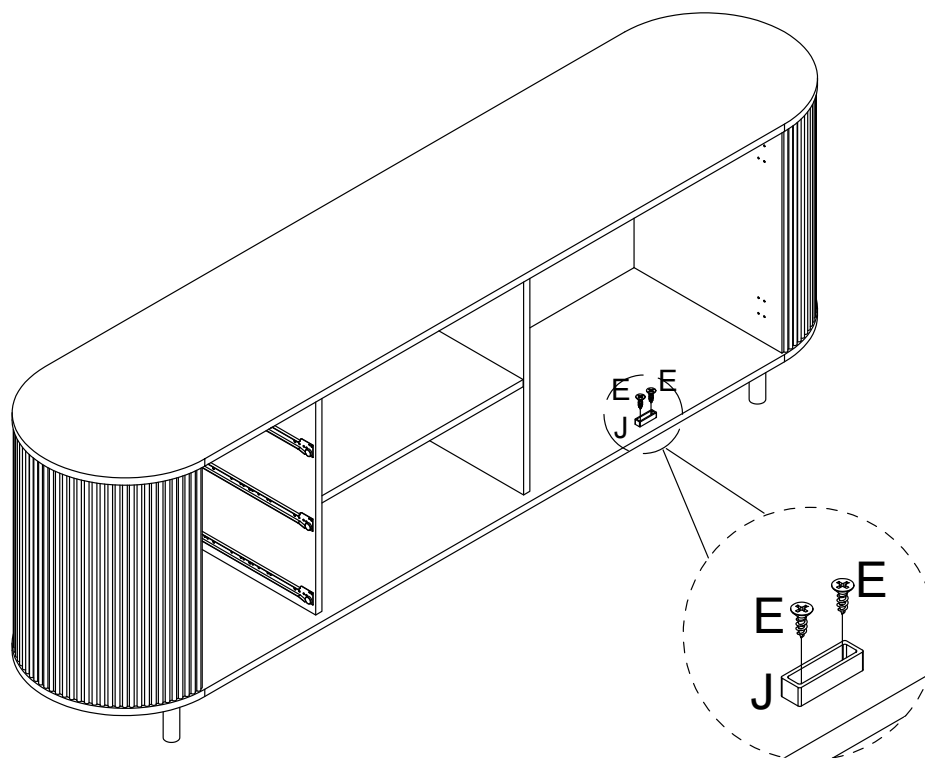

STEP14

GX8
M4x14

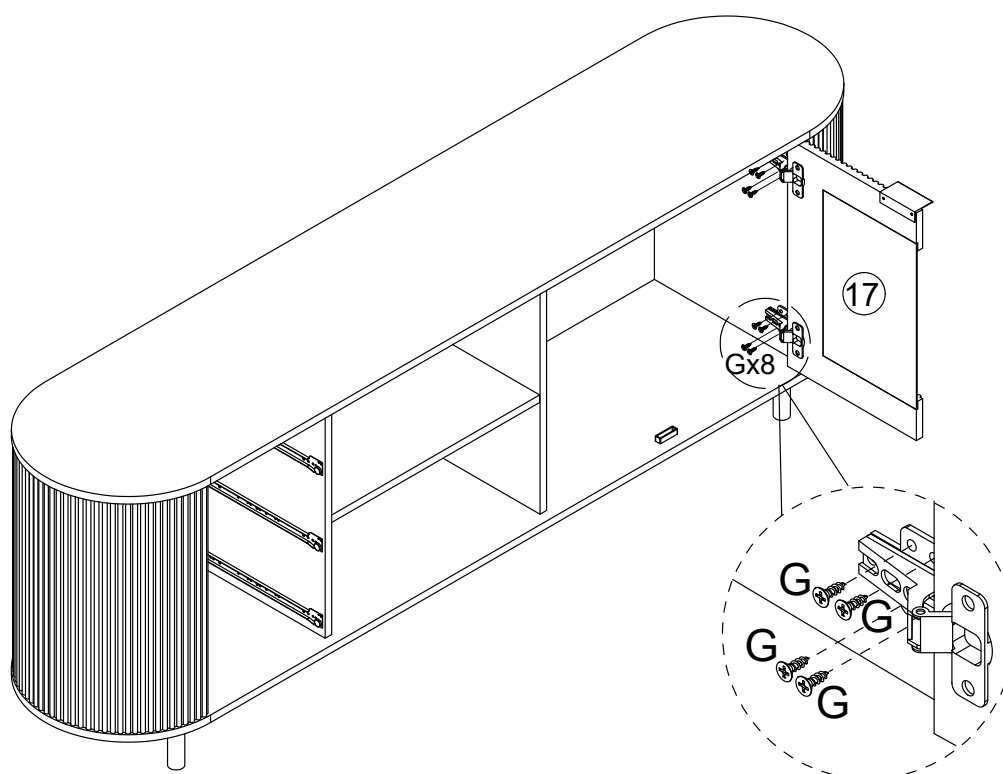



STEP15

GX8




M4x14

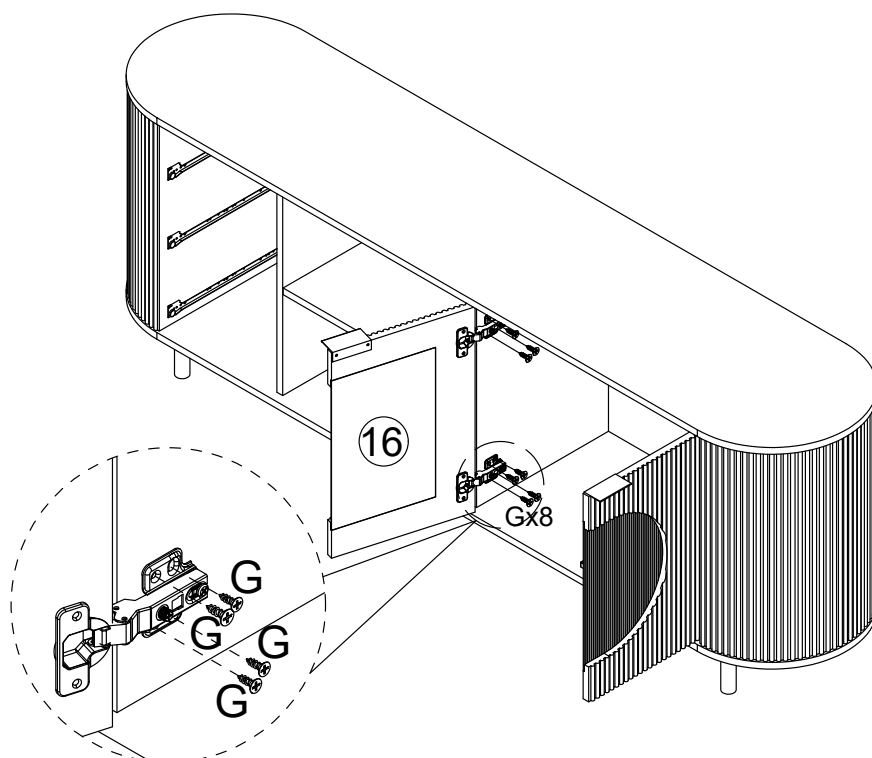


STEP16

Please adjust the door panel gap according to the following diagram

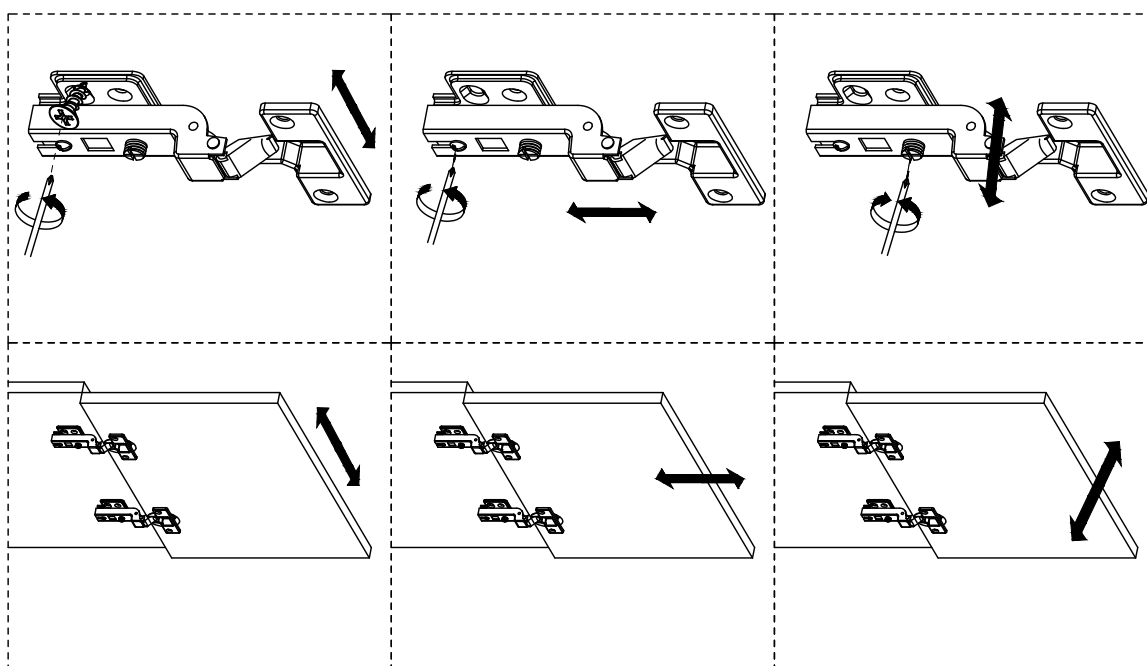


STEP17

IX12
M4x35



x3

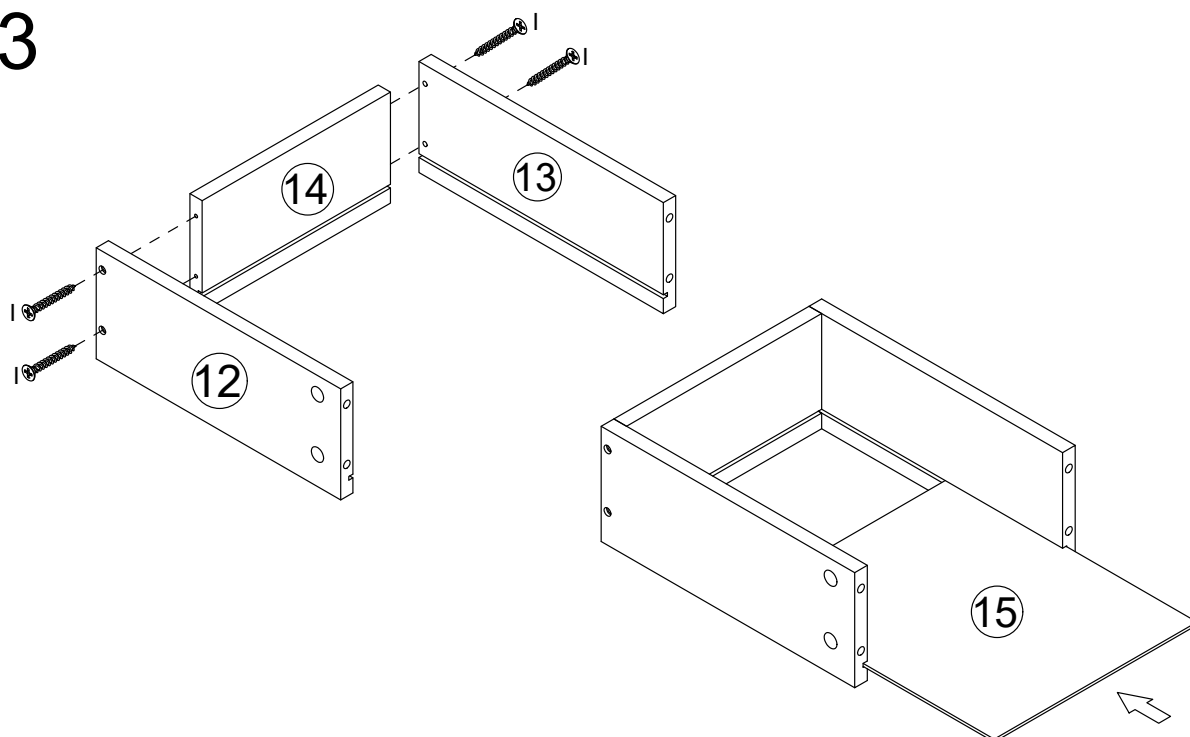


STEP18

Ax12
ø6x35




Bx12
ø15x12

Ex6
M3x14

Mx3



x3

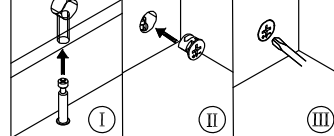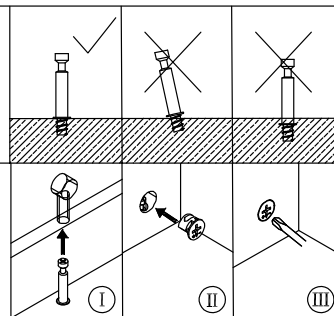
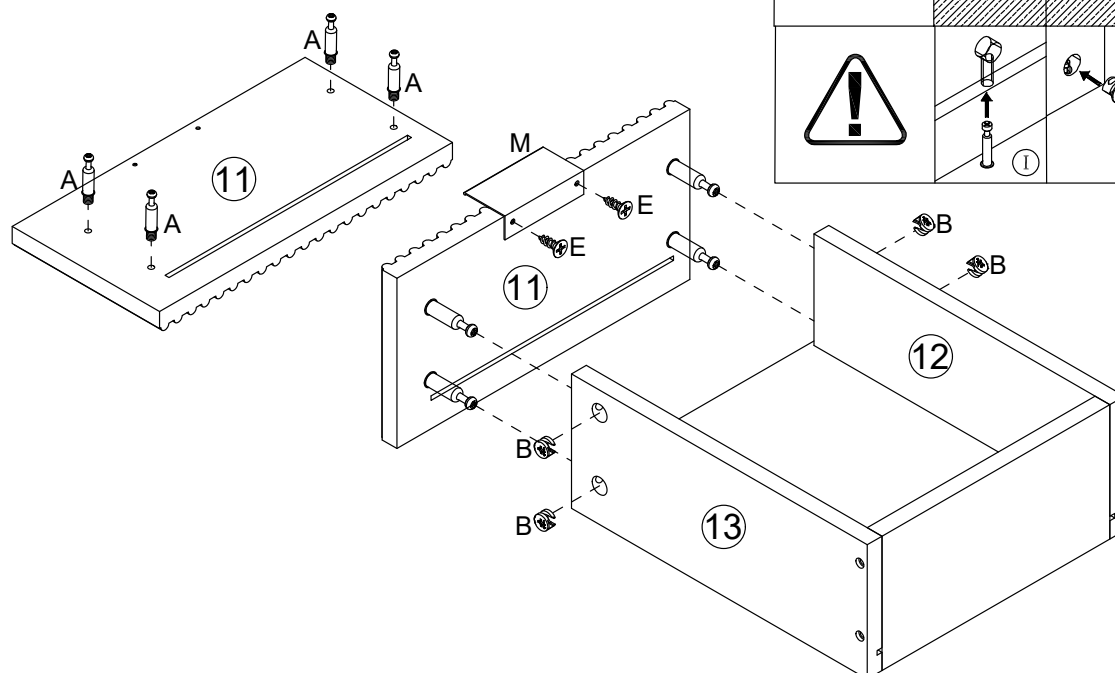


STEP19


Hx12
M3x12

DLx3

DRx3

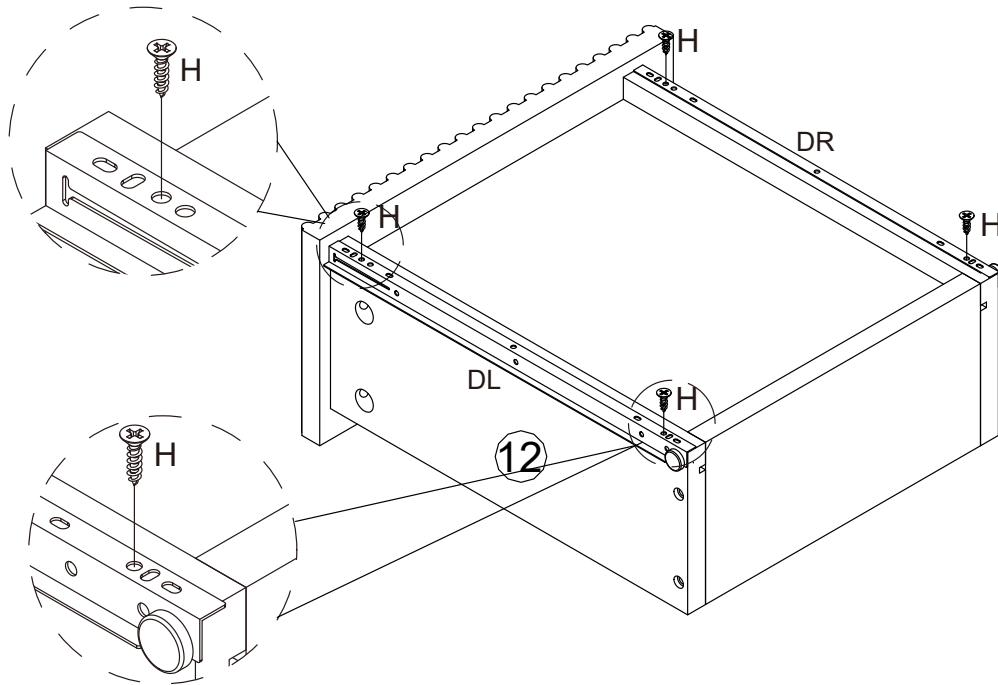

STEP20

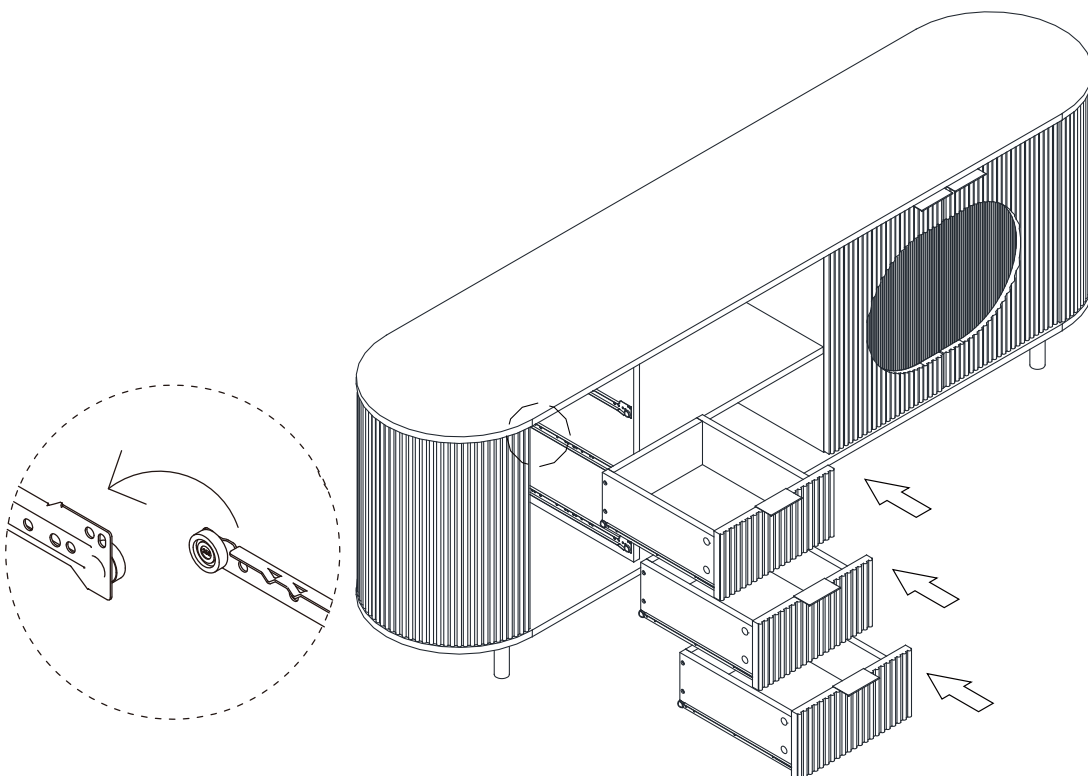

STEP21

Sx2

 ø4x12


Tx2


Ux2


Vx2


 ø4x40

Wx4





Step1



Wall



Step2



Step3

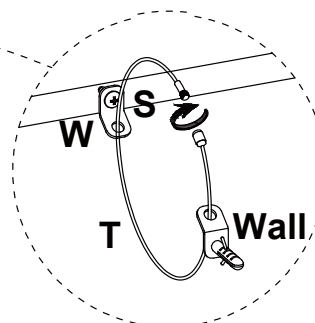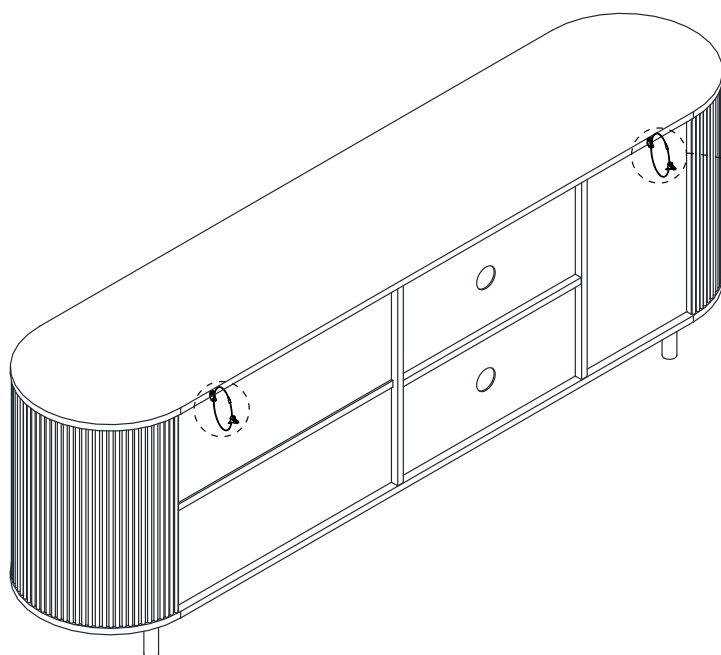

STEP22

Installation Completed

