



Bookcase

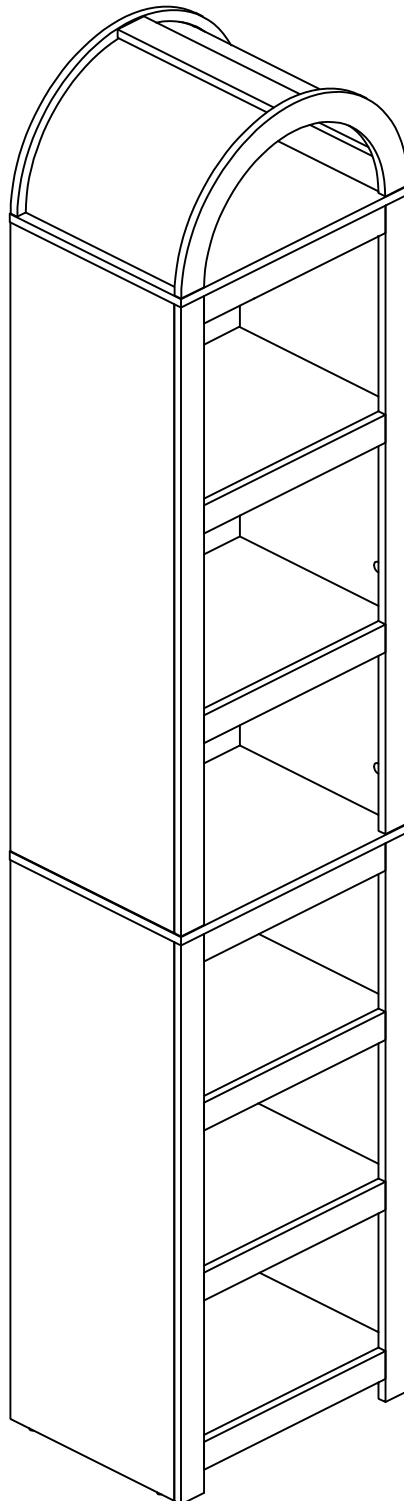


DJ504777
version: 1.0












ASSEMBLY INSTRUCTIONS

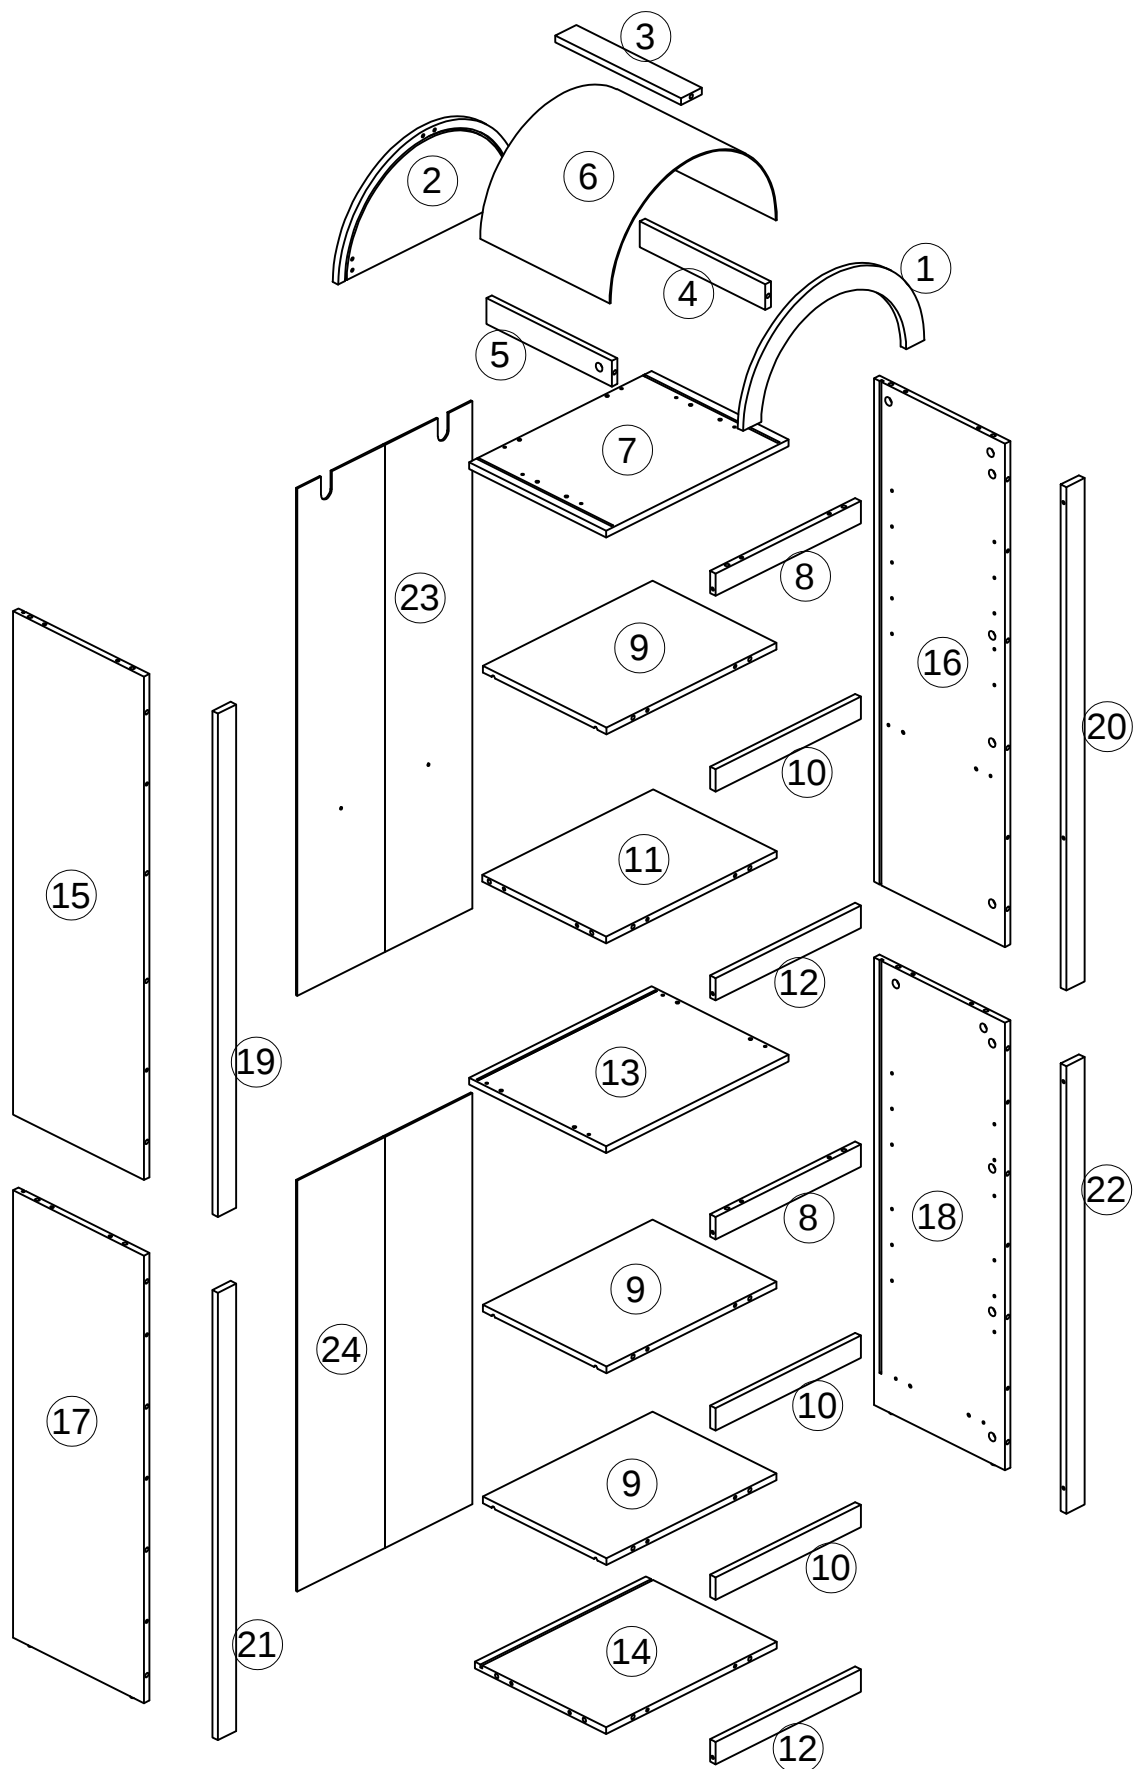


ASSEMBLY INSTRUCTIONS

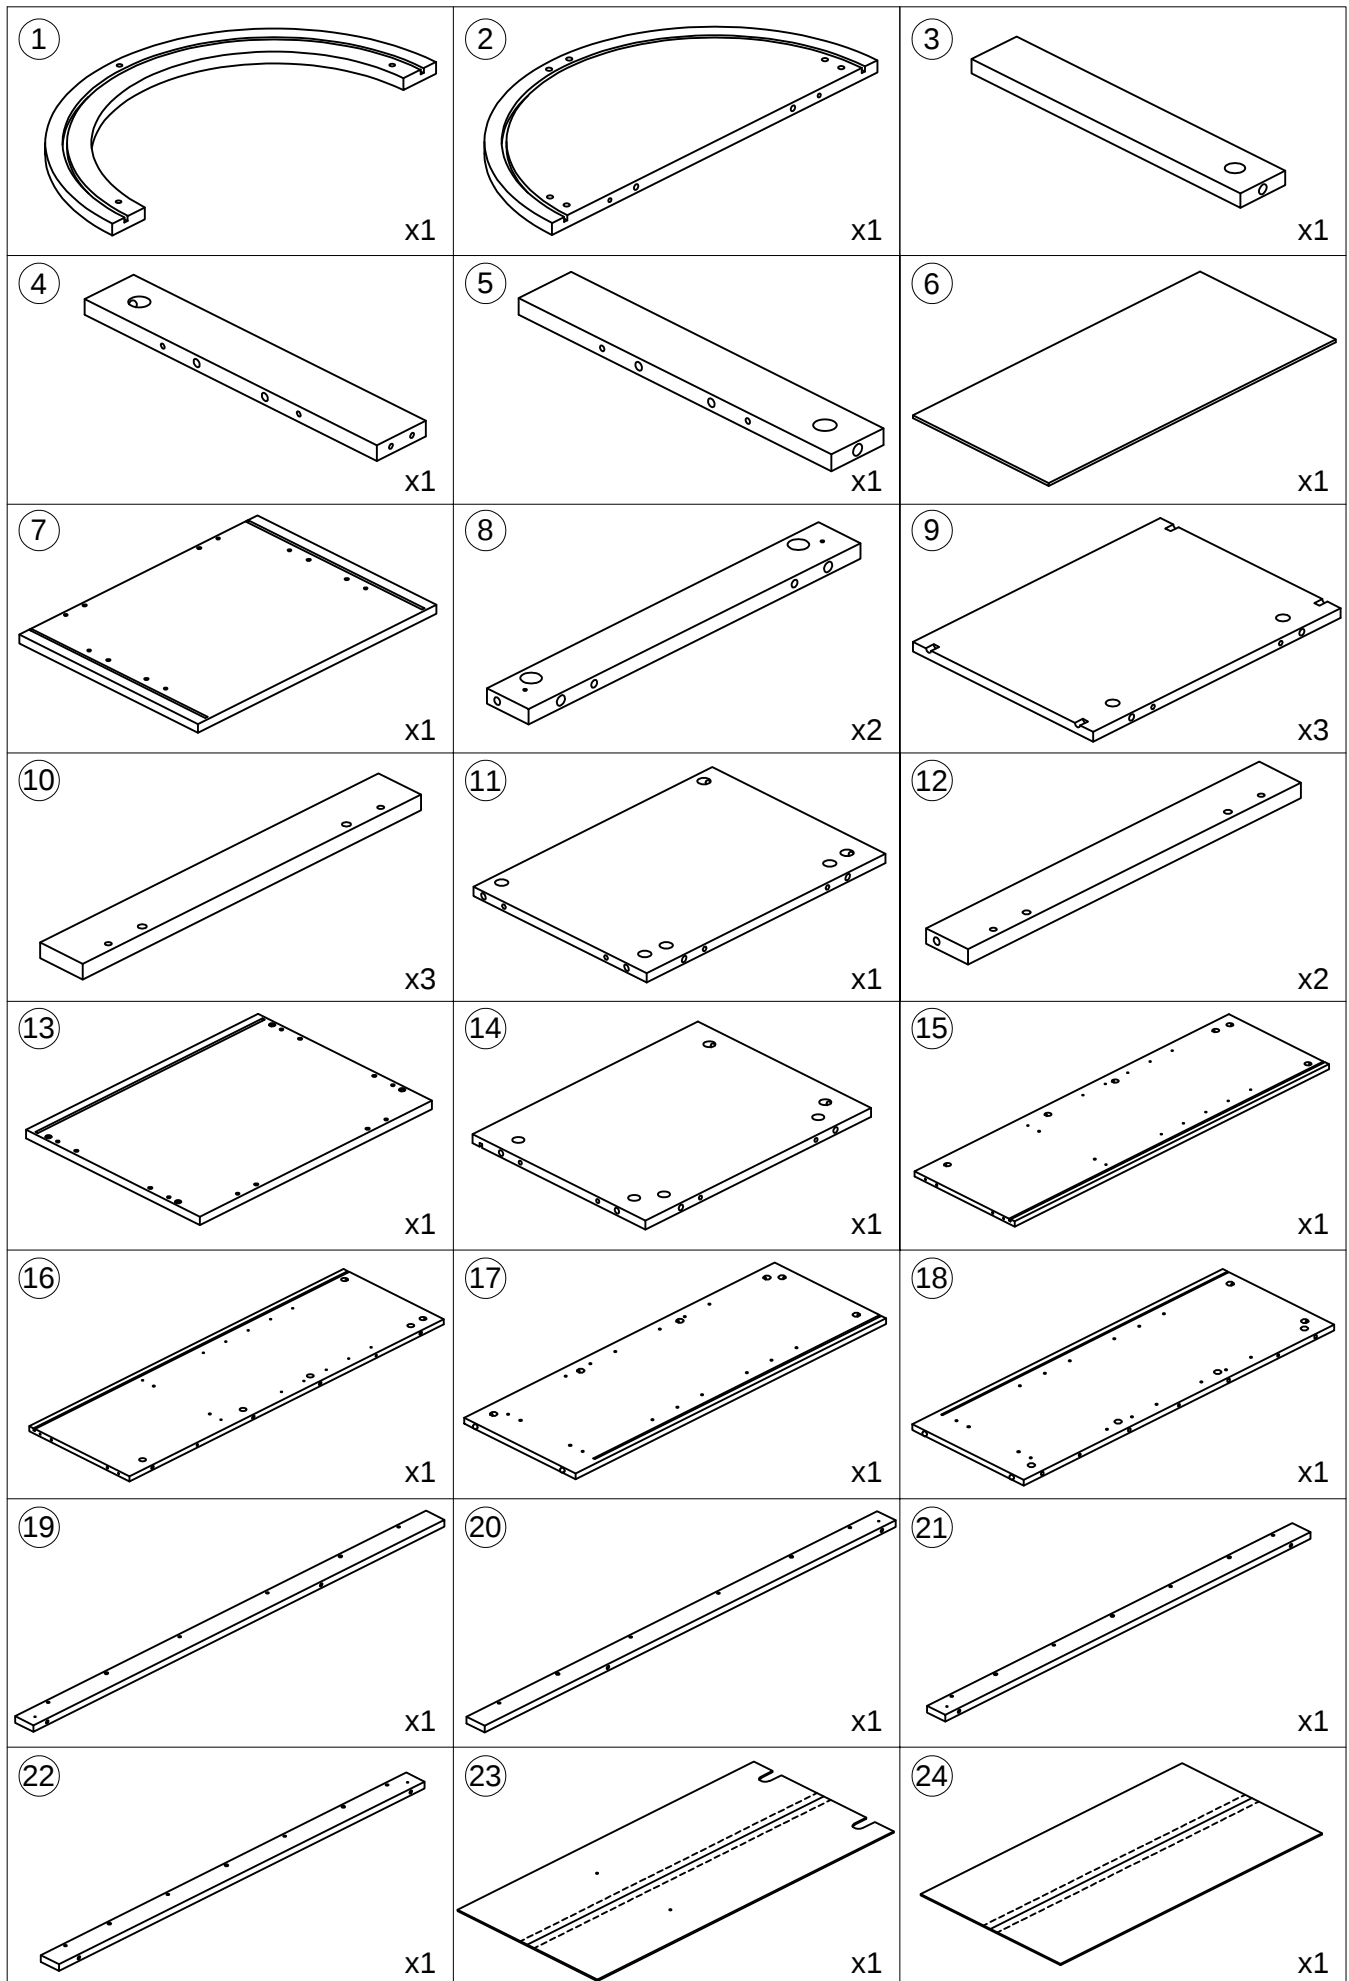


ASSEMBLY INSTRUCTIONS

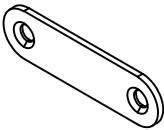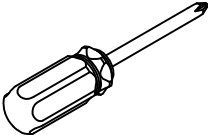A x58+4  $\varnothing 6 \times 30 \text{mm}$	B x49+3  $\varnothing 6 \times 35 \text{mm}$	C x49+3  $\varnothing 15 \times 10 \text{mm}$	D x16+1  $\varnothing 5 \times 38 \text{mm}$
E x8+1  $\varnothing 7 \times \varnothing 3.5 \times 12 \text{mm}$	F x4  	G x12+1  	H x49+3  $\varnothing 20 \text{mm}$
I x18+2  $\varnothing 6 \times 3 \times 16 \text{mm}$	J x2  $\varnothing 8 \times \varnothing 4 \times 40 \text{mm}$ $\varnothing 8 \times \varnothing 4 \times 12 \text{mm}$	K x1  3mm	L x2  $\varnothing 7 \times \varnothing 3.5 \times 14 \text{mm}$
			

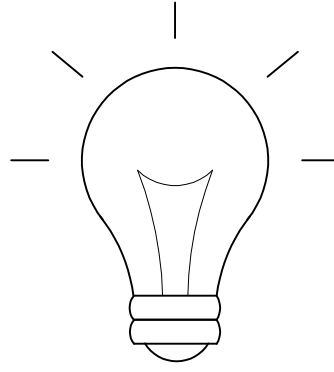


friendly reminder

To avoid errors and confusion during the installation of accessories, use the type and quantity of hardware accessories according to the installation procedure described in the instructions. First, unroll the accessories bag and lay out the hardware accessories, cut holes in the side, and take out the hardware accessories

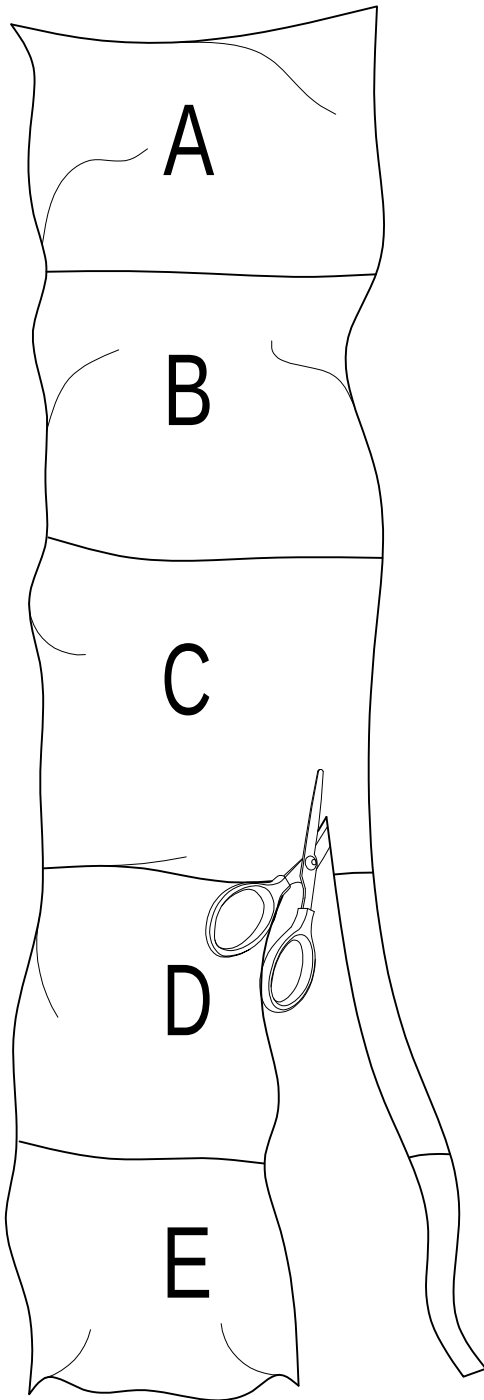


INSTALLATION INSTRUCTION

1

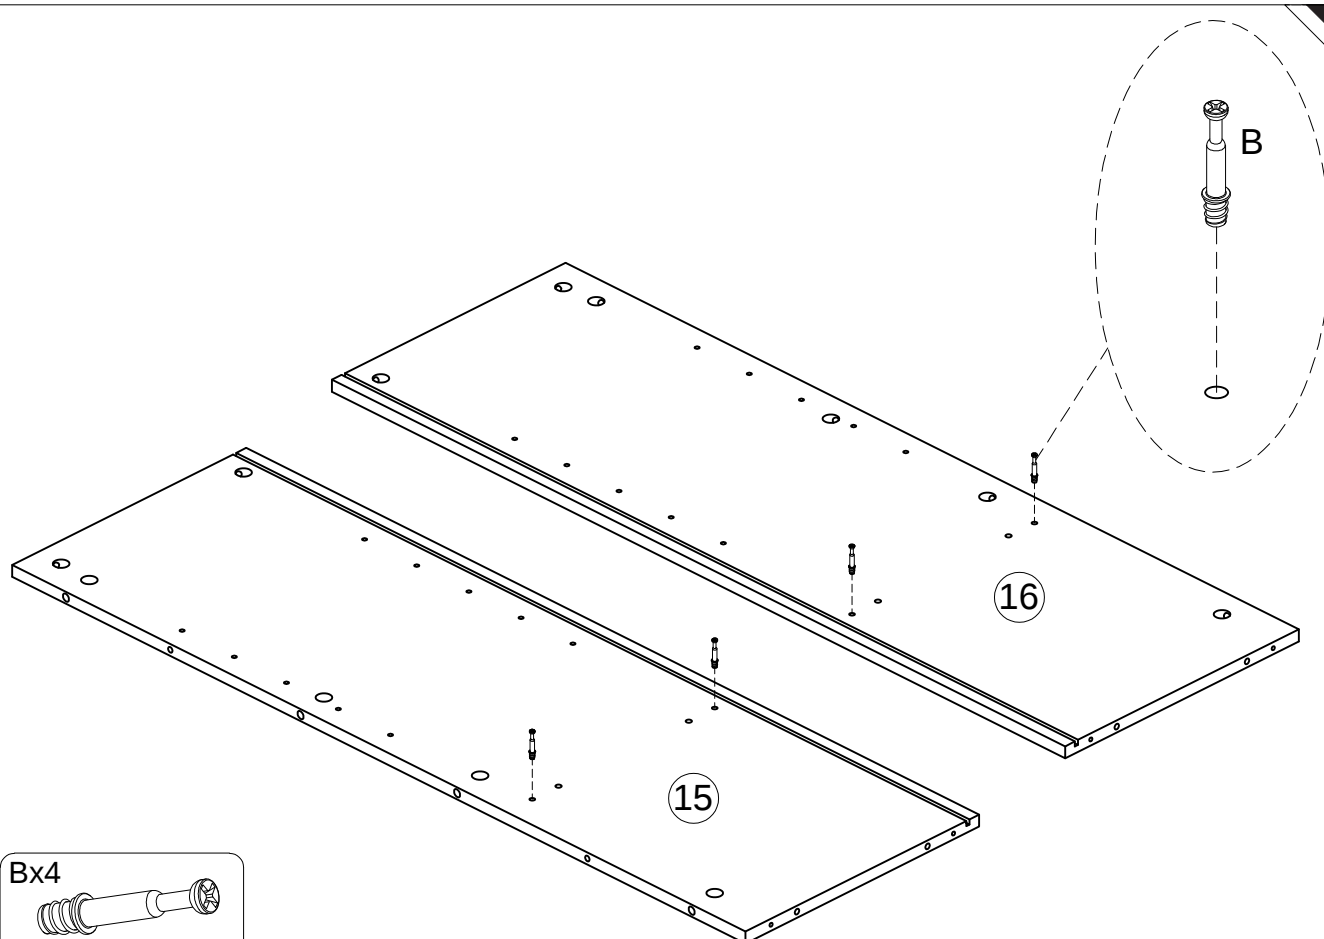


Bx4



Ø6x35mm

2

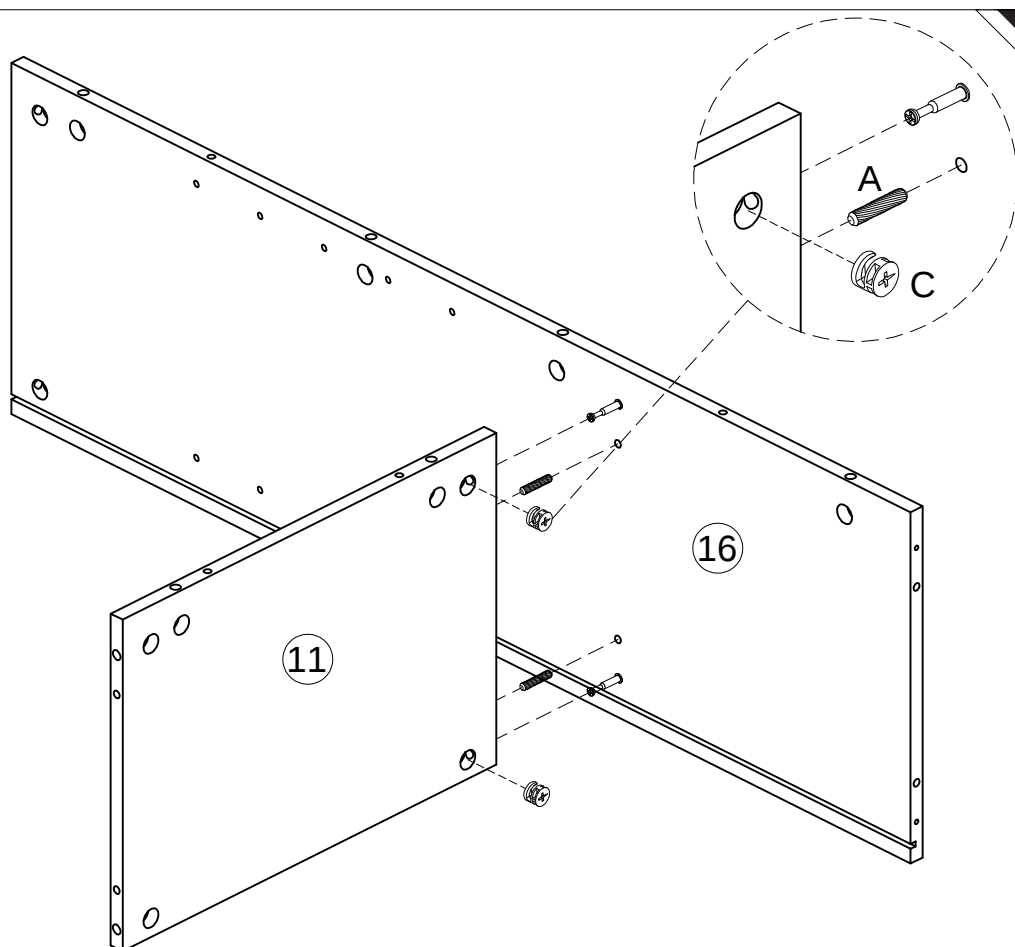

Cx2



Ø15x10mm


Ax2




Ø6x30mm

INSTALLATION INSTRUCTION

3

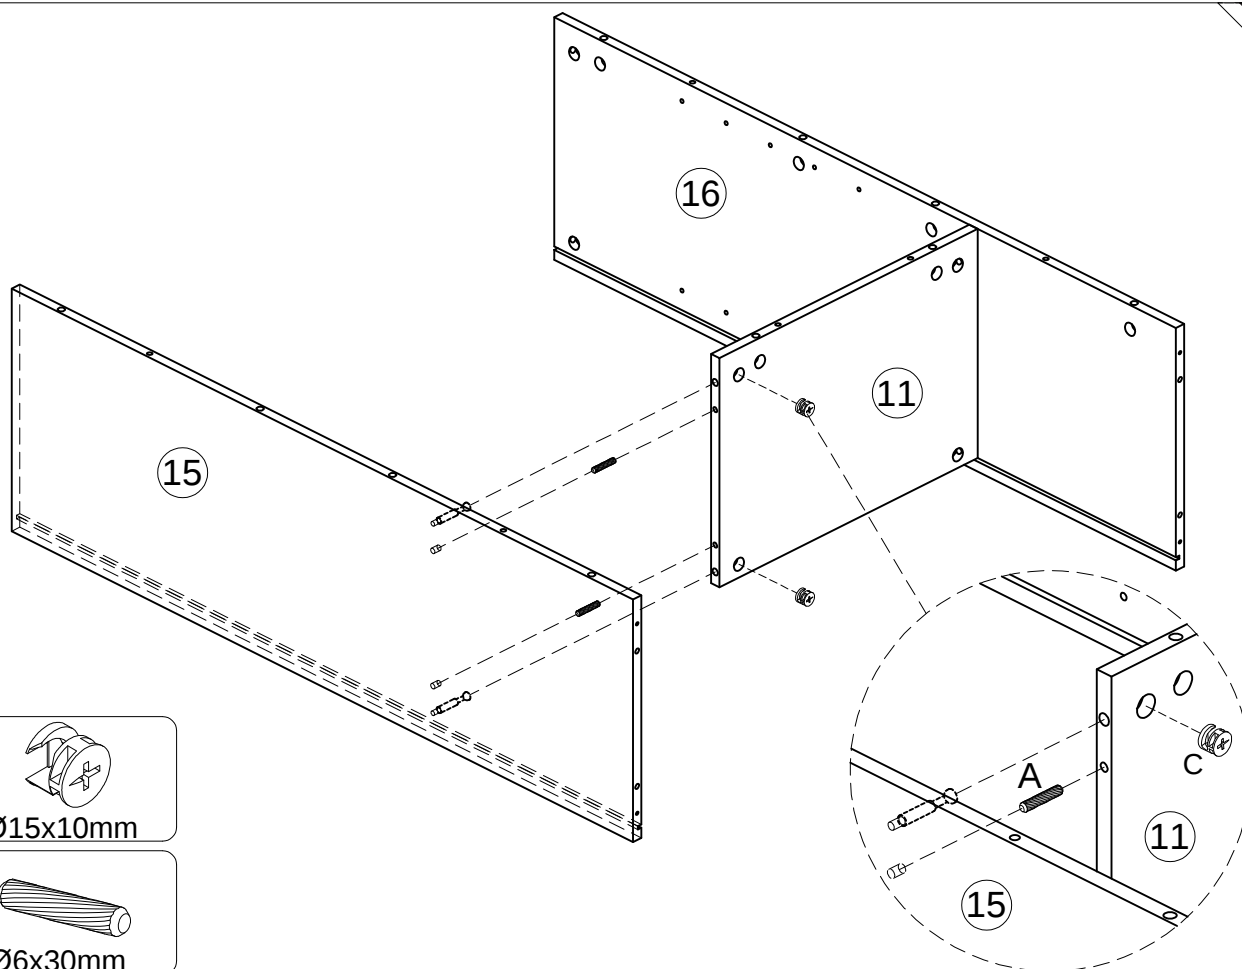


4

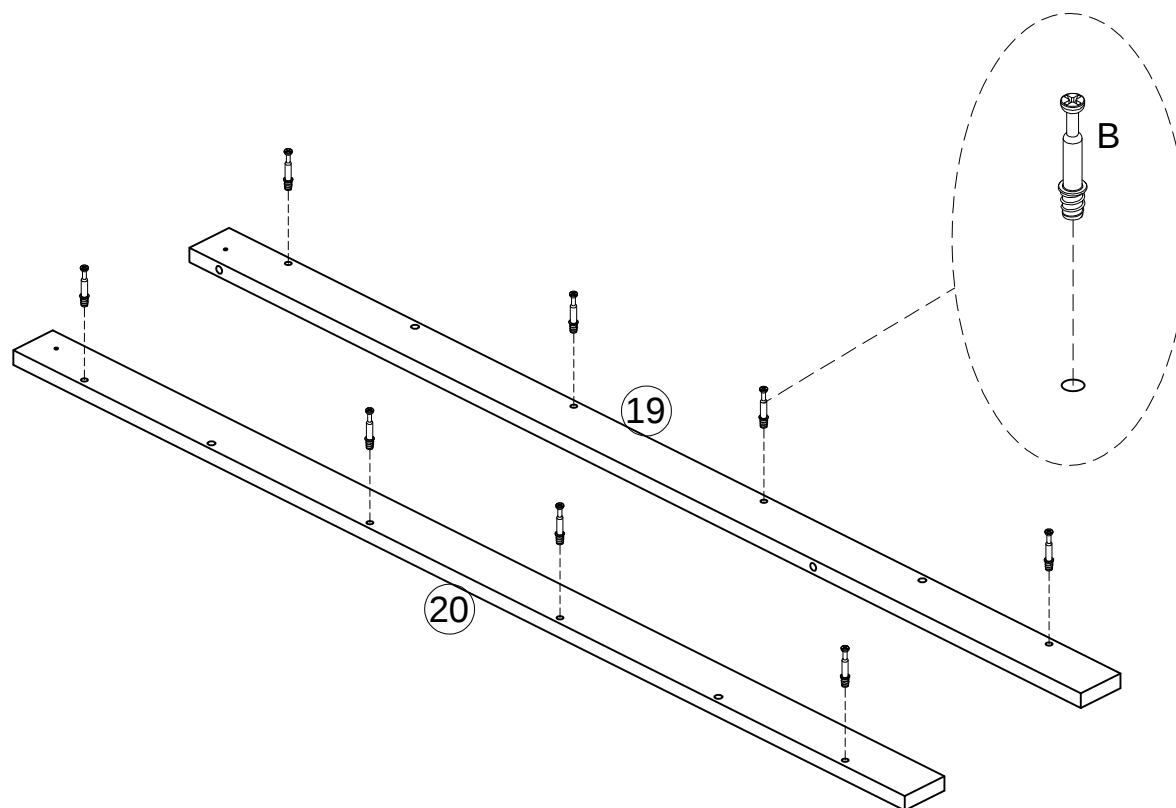


INSTALLATION INSTRUCTION

5

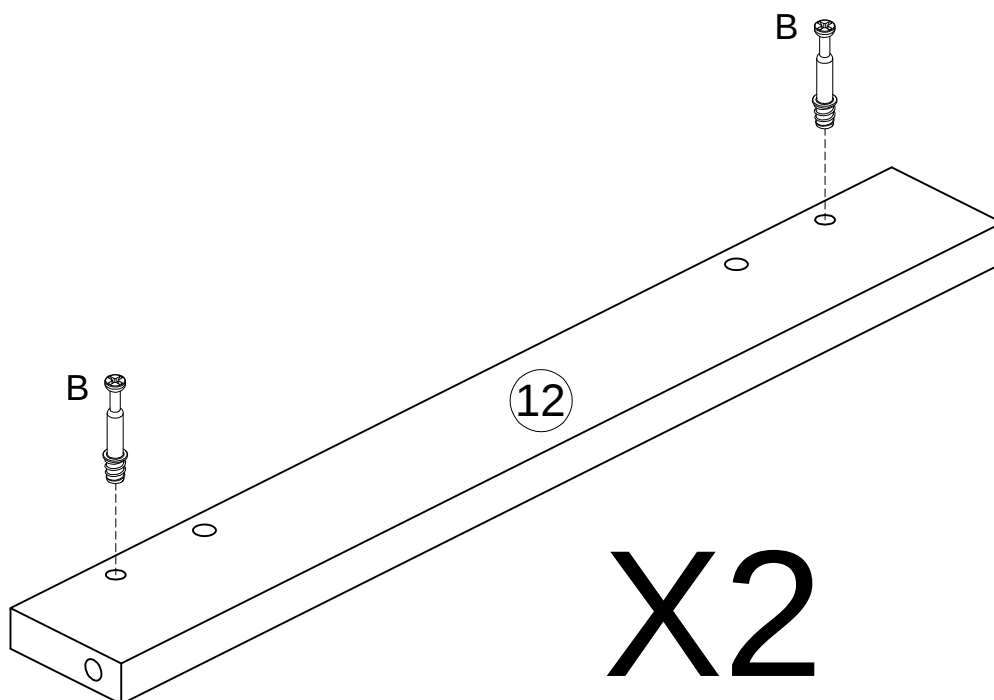


Bx4



Ø6x35mm

6

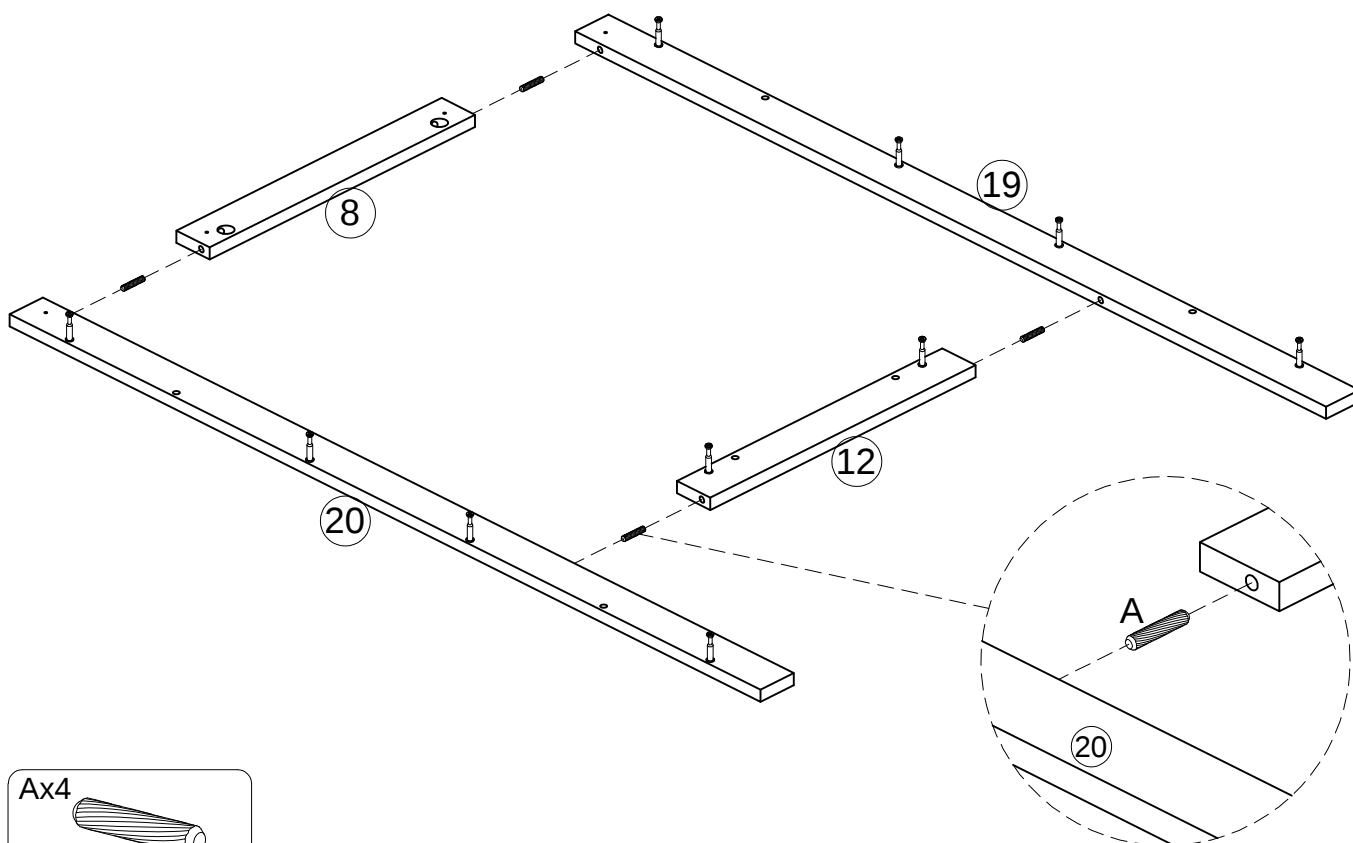


Ax4




Ø6x30mm

INSTALLATION INSTRUCTION



7

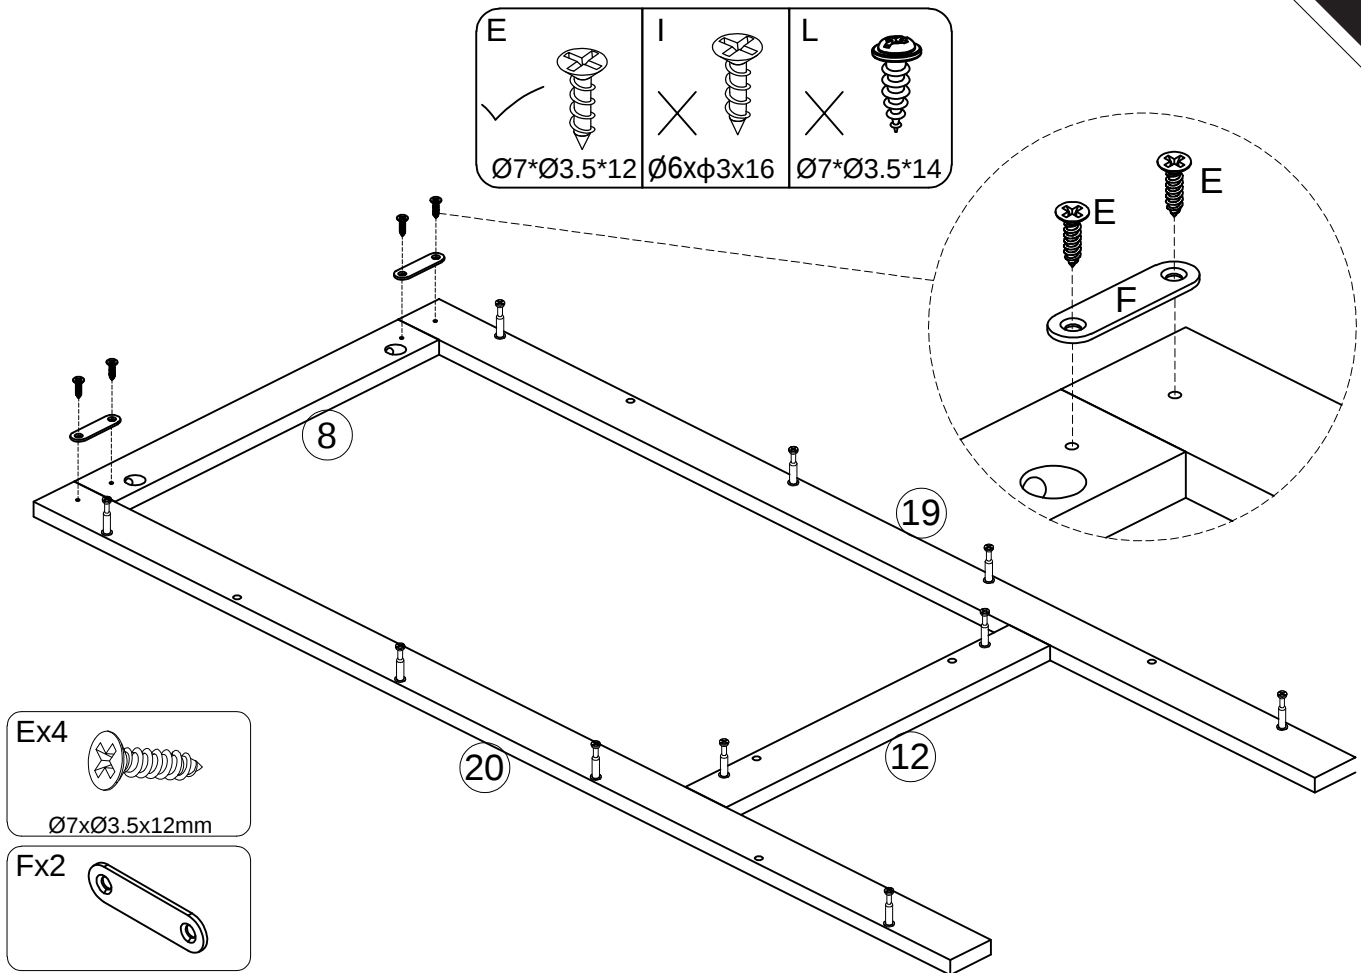

8

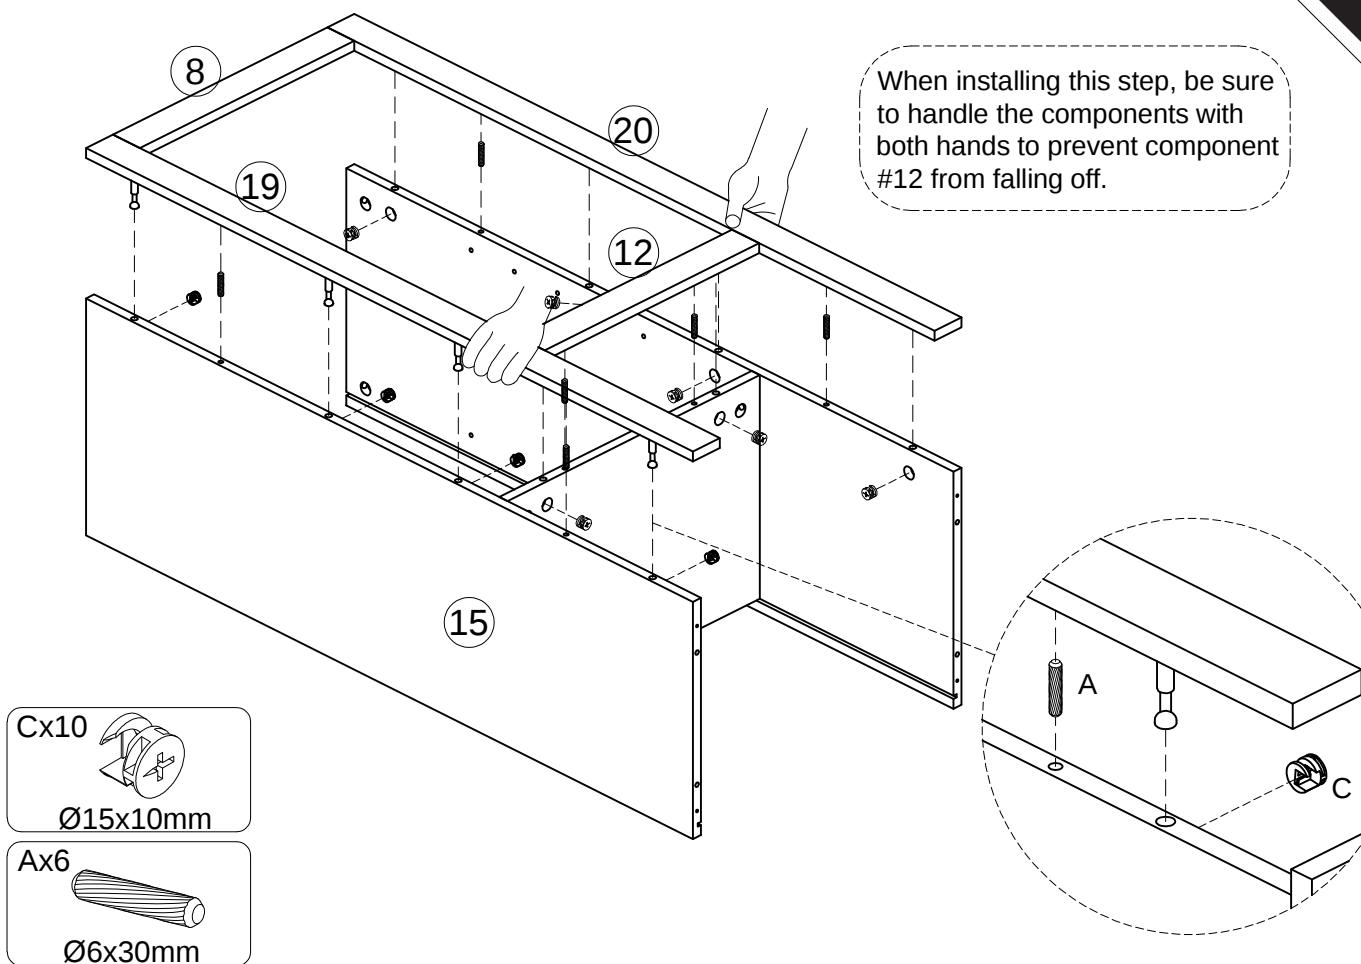


INSTALLATION INSTRUCTION

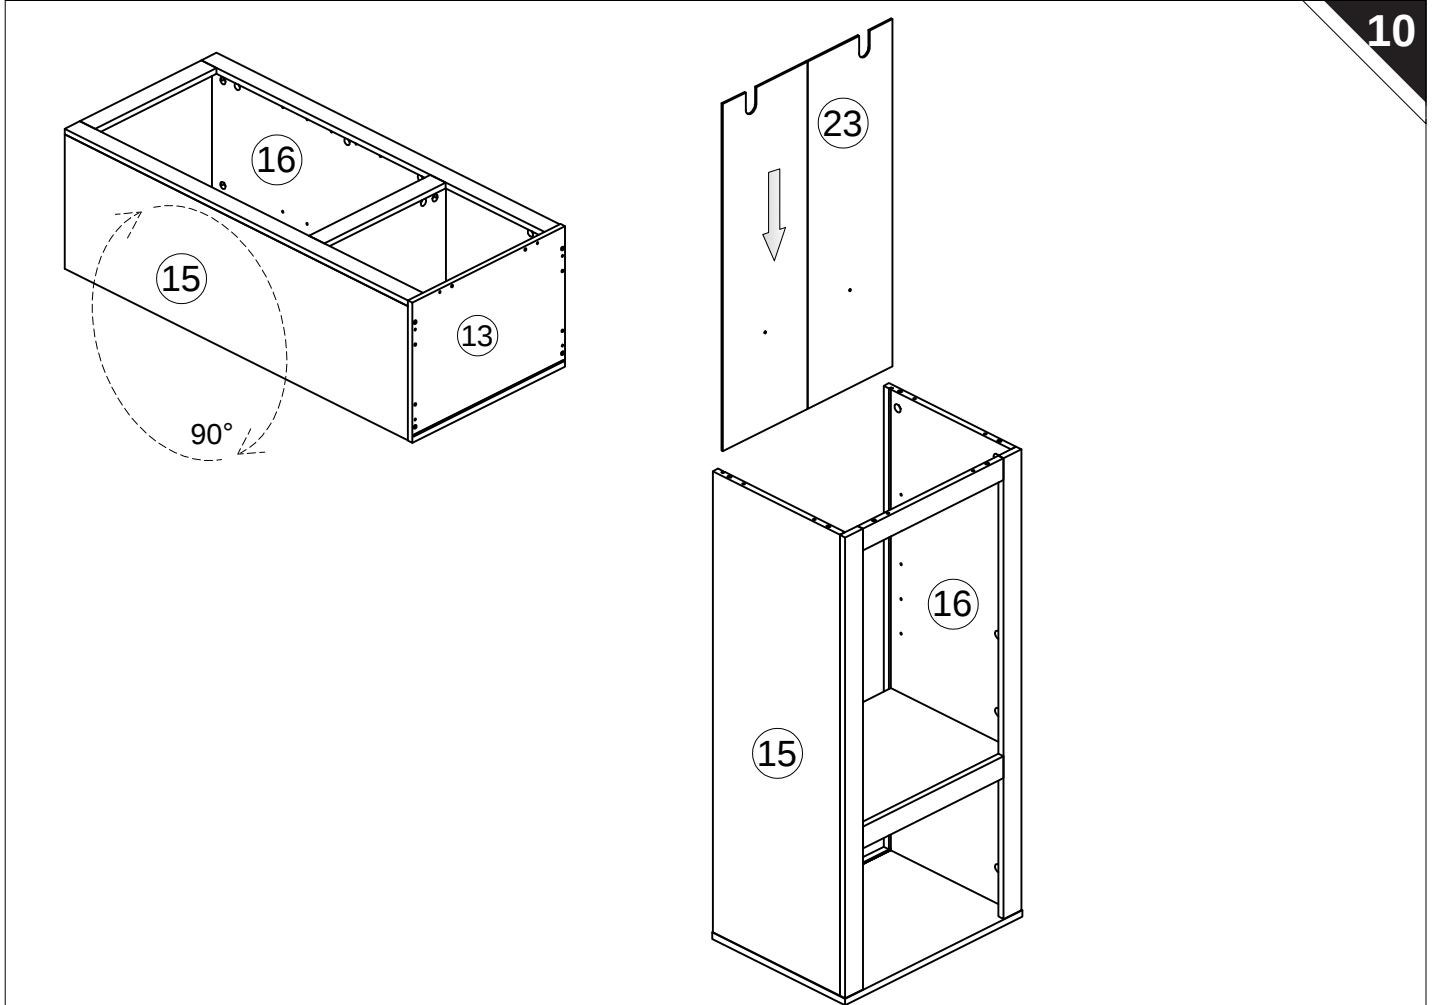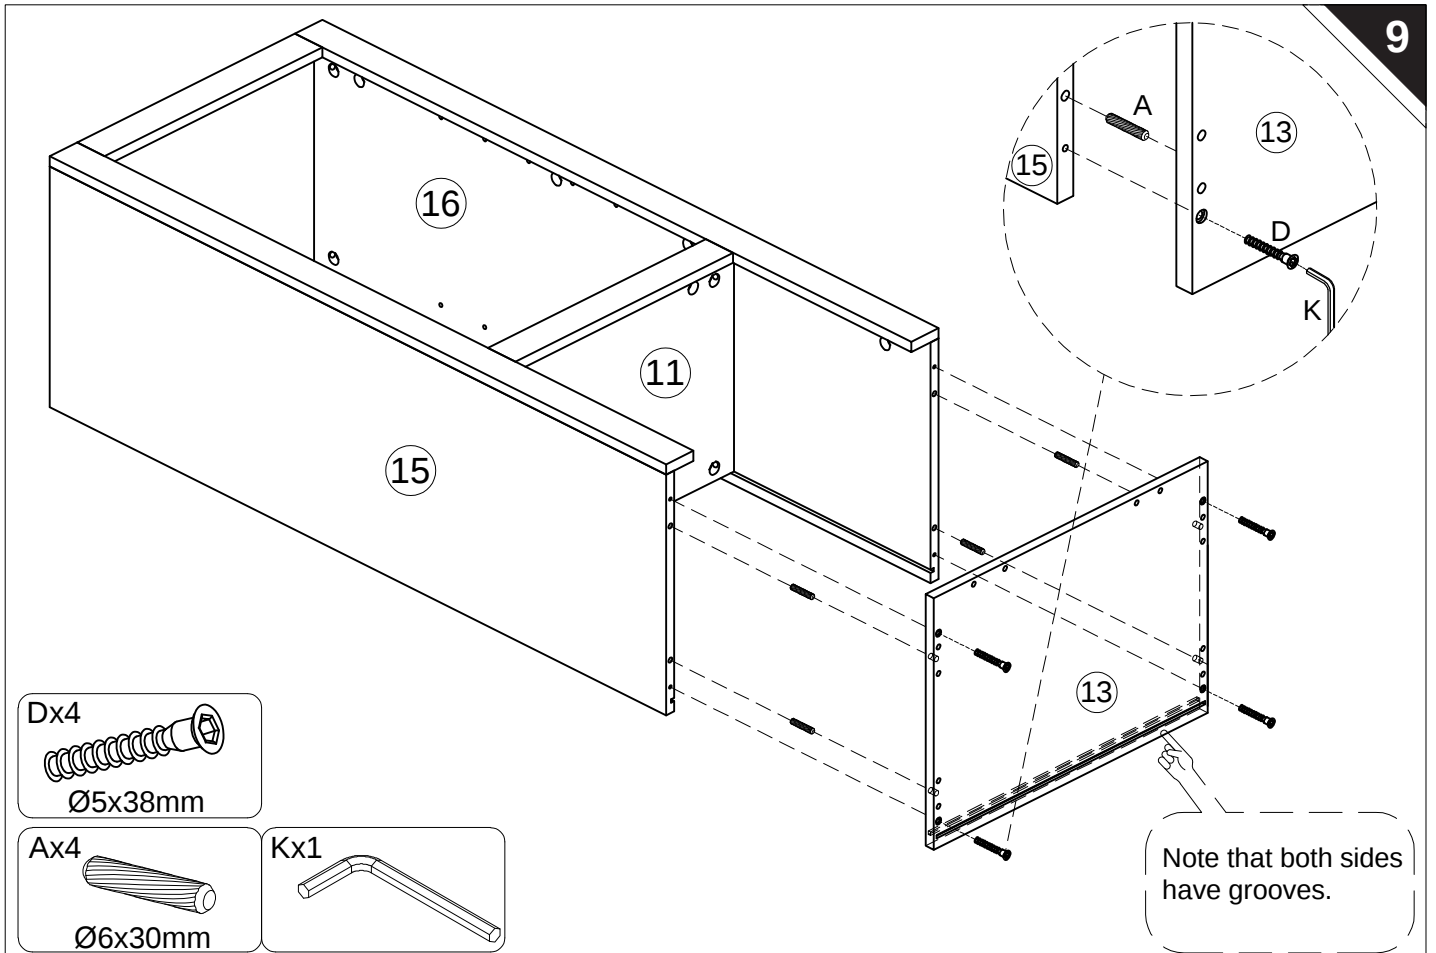


INSTALLATION INSTRUCTION

11

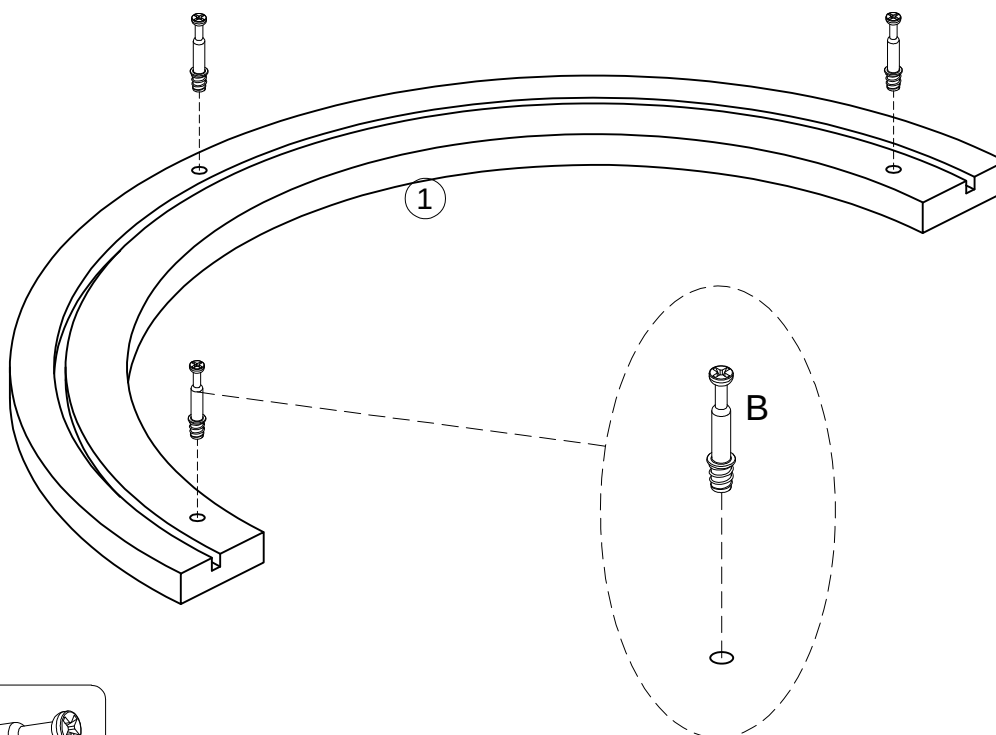


Bx3



Ø6x35mm


12

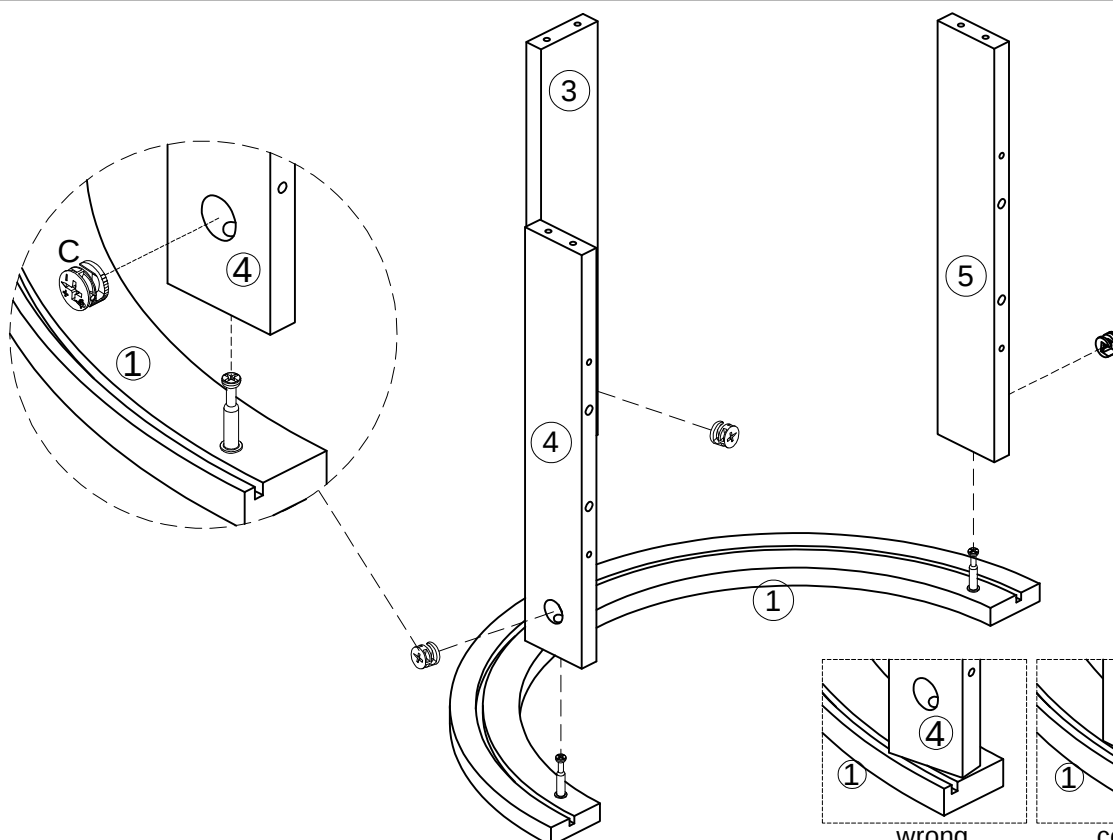

Cx3



Ø15x10mm

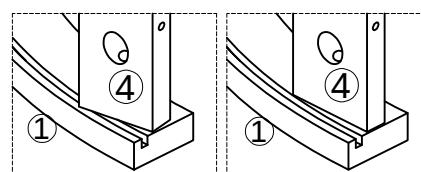




wrong

correct


The slot on Component No. 1 should not be blocked

INSTALLATION INSTRUCTION


13

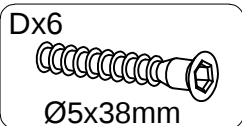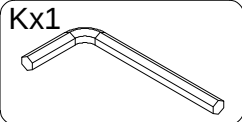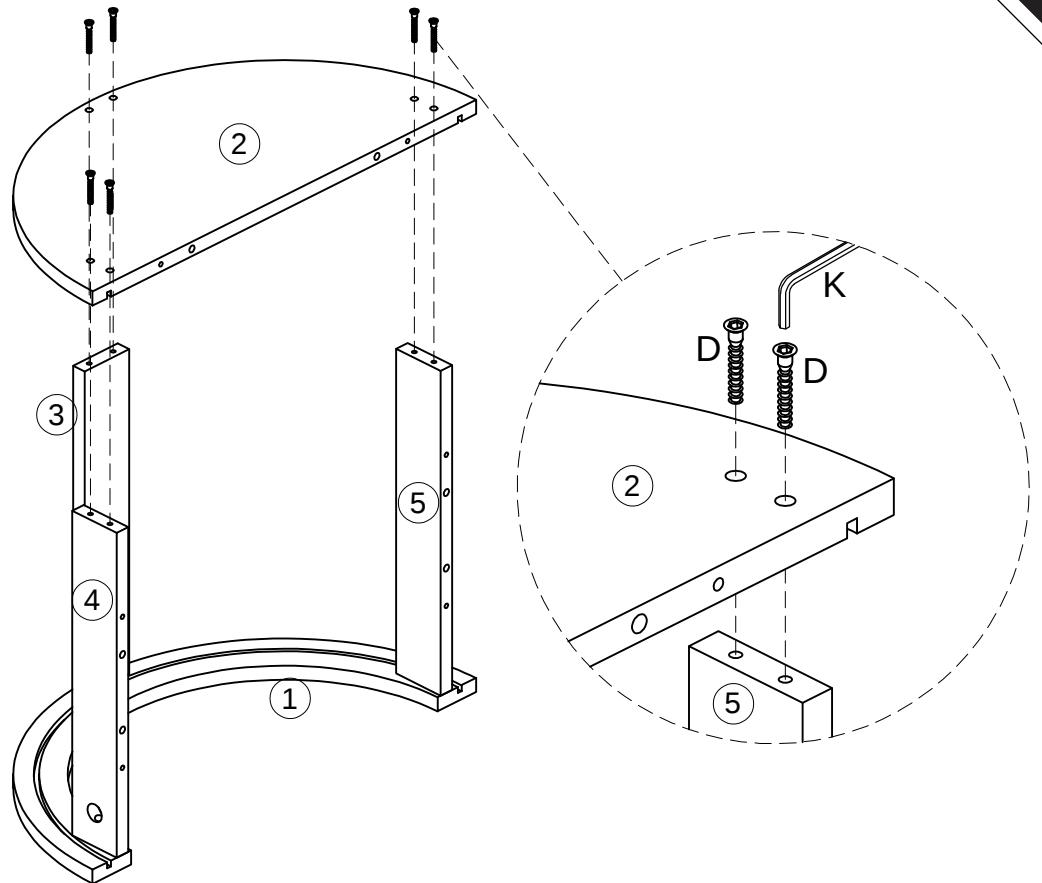

14

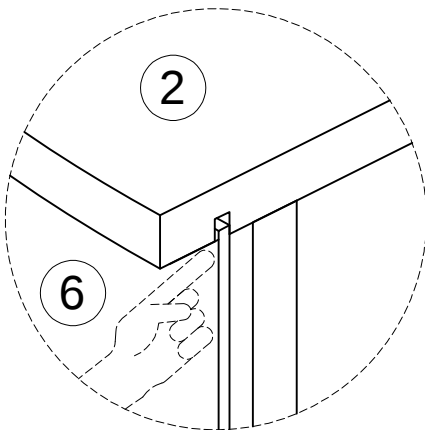


Note that both sides of Board No. ⑥ protrude by the same amount

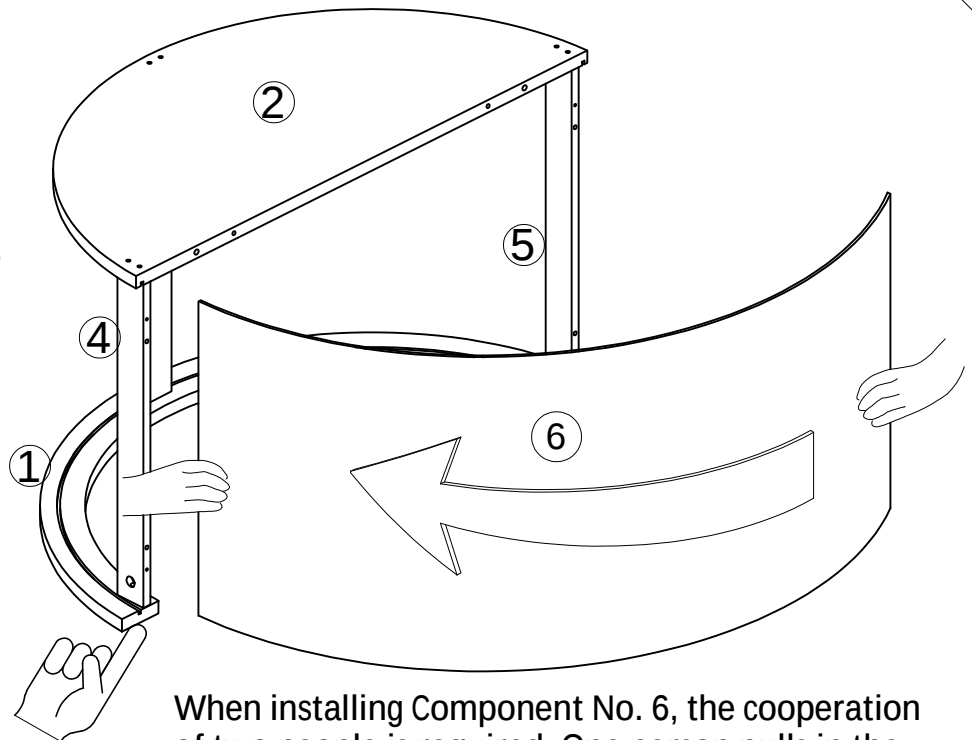


When installing Component No. 6, the cooperation of two people is required. One person pulls in the front and the other pushes from behind.

INSTALLATION INSTRUCTION

15

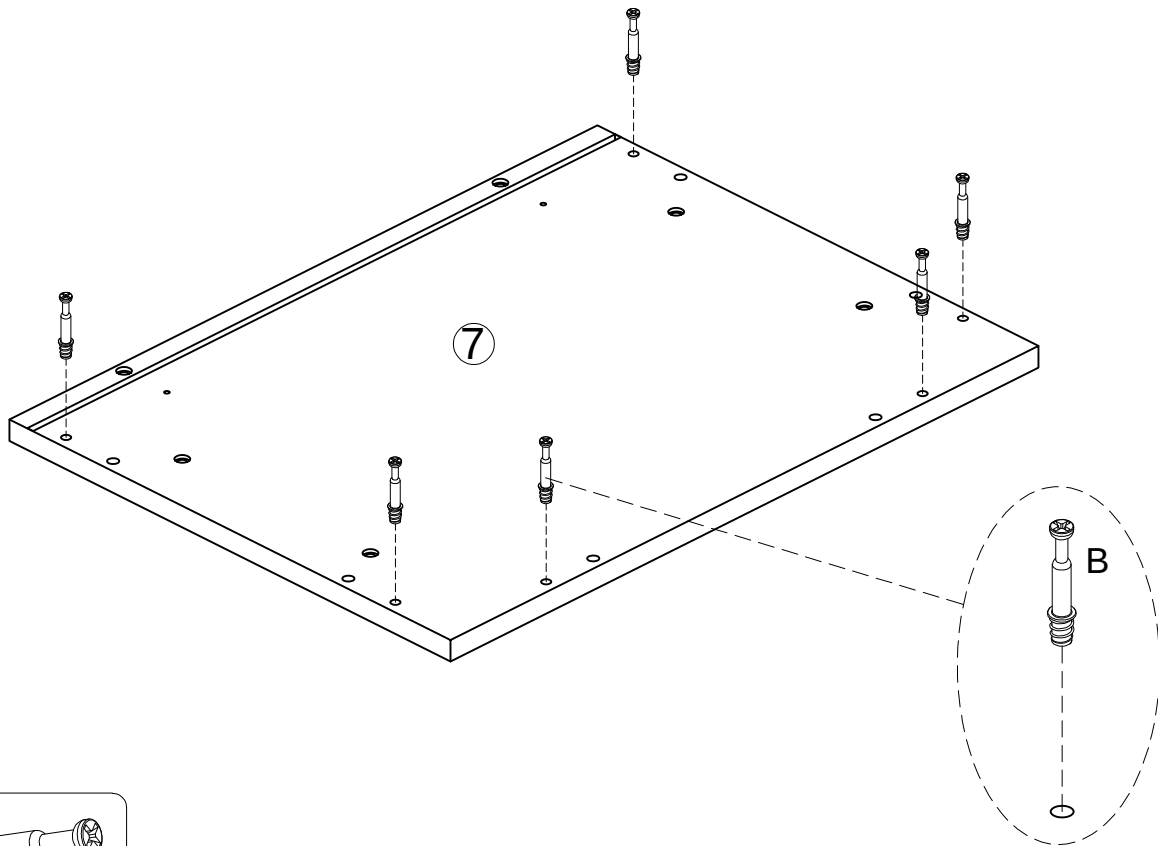


Bx6




Ø6x35mm

16

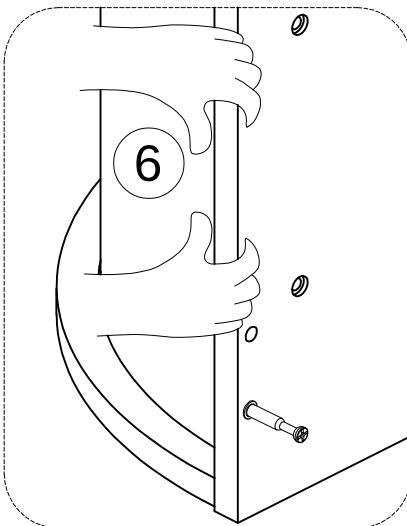

This step requires the cooperation of two people. First, insert the Dowel (A 6pcs). Then, one person uses both hands to push Part #((6)) inward so that it can fit into the slot of Part #((7)). The other person is preparing to carry out step 17.

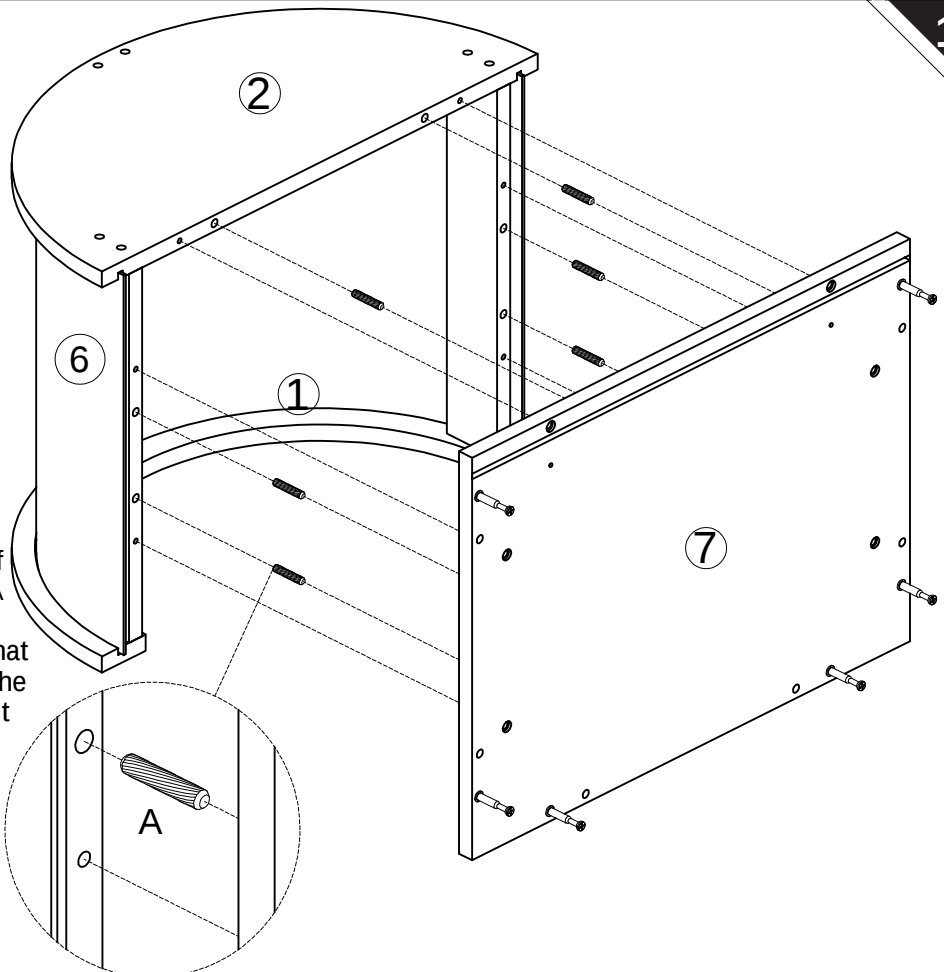


Ax6




Ø6x30mm

INSTALLATION INSTRUCTION

17

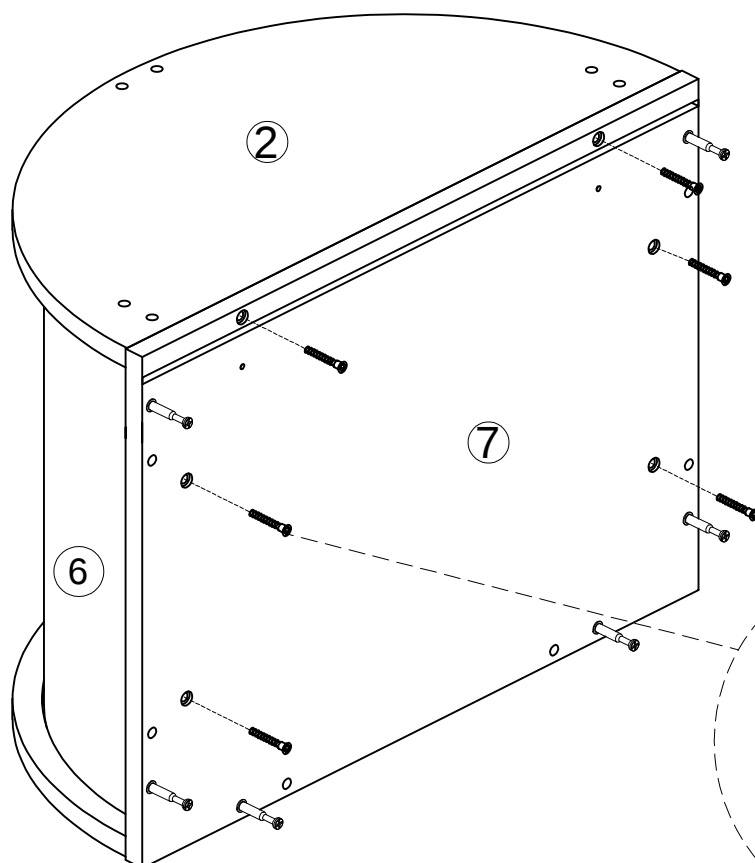

Kx1



Dx6




Ø5x38mm


D

K

18

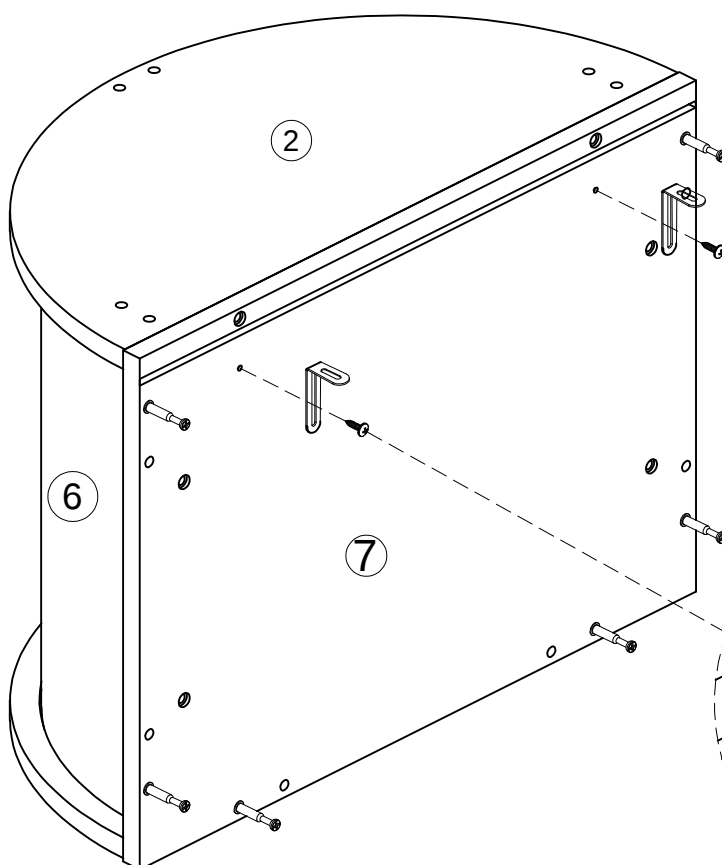

Jx2







J




J

INSTALLATION INSTRUCTION

19

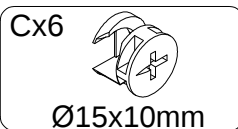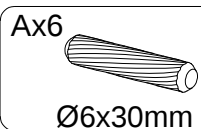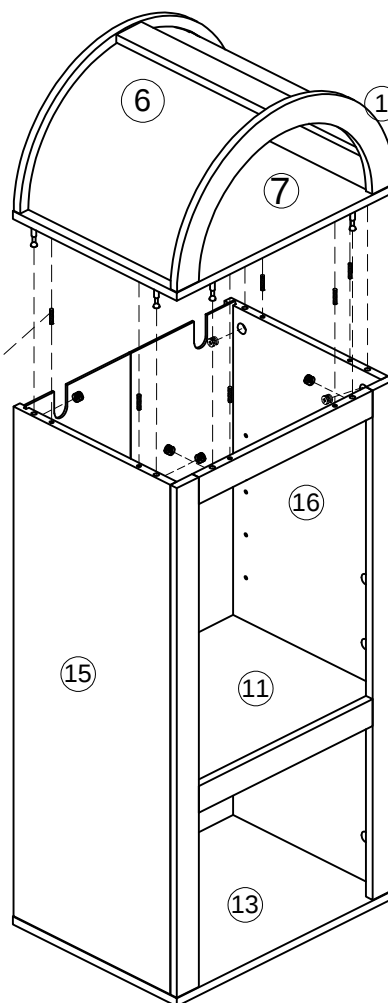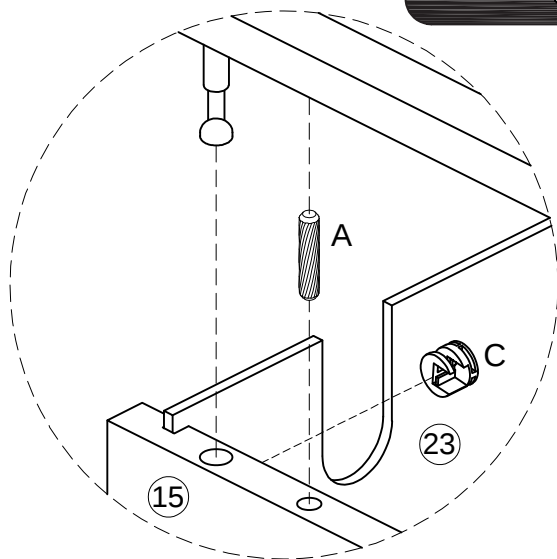


20

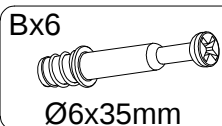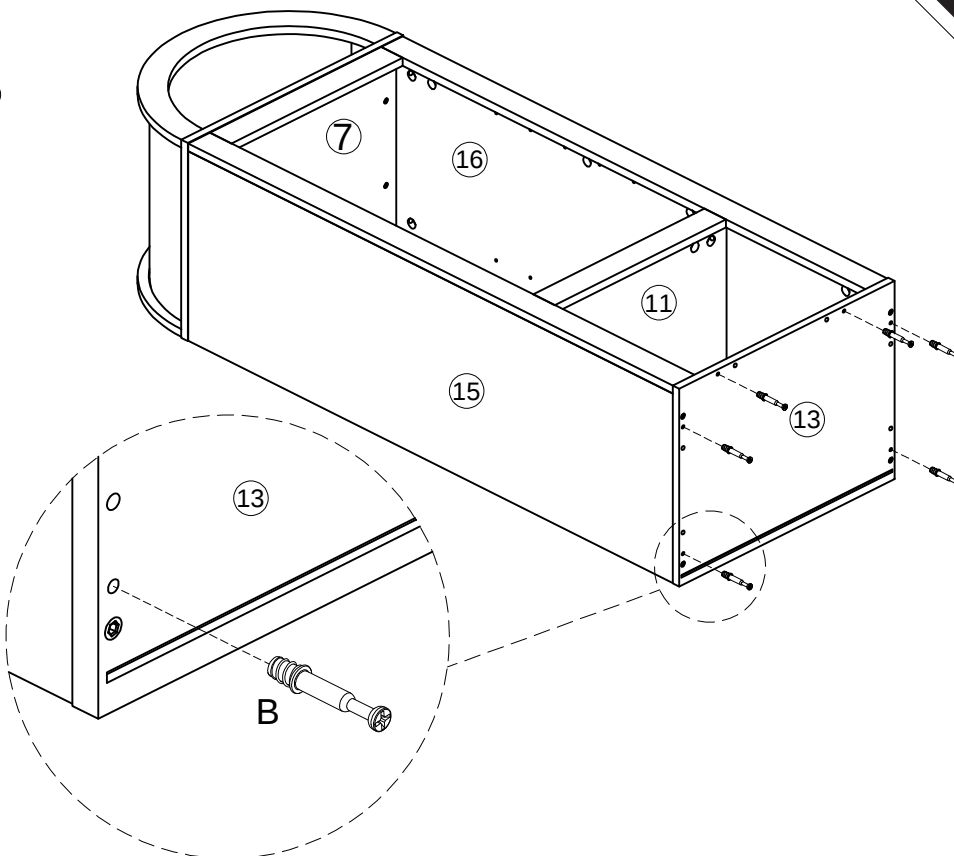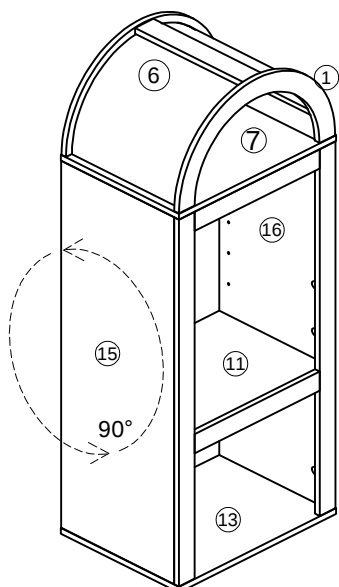


INSTALLATION INSTRUCTION

21

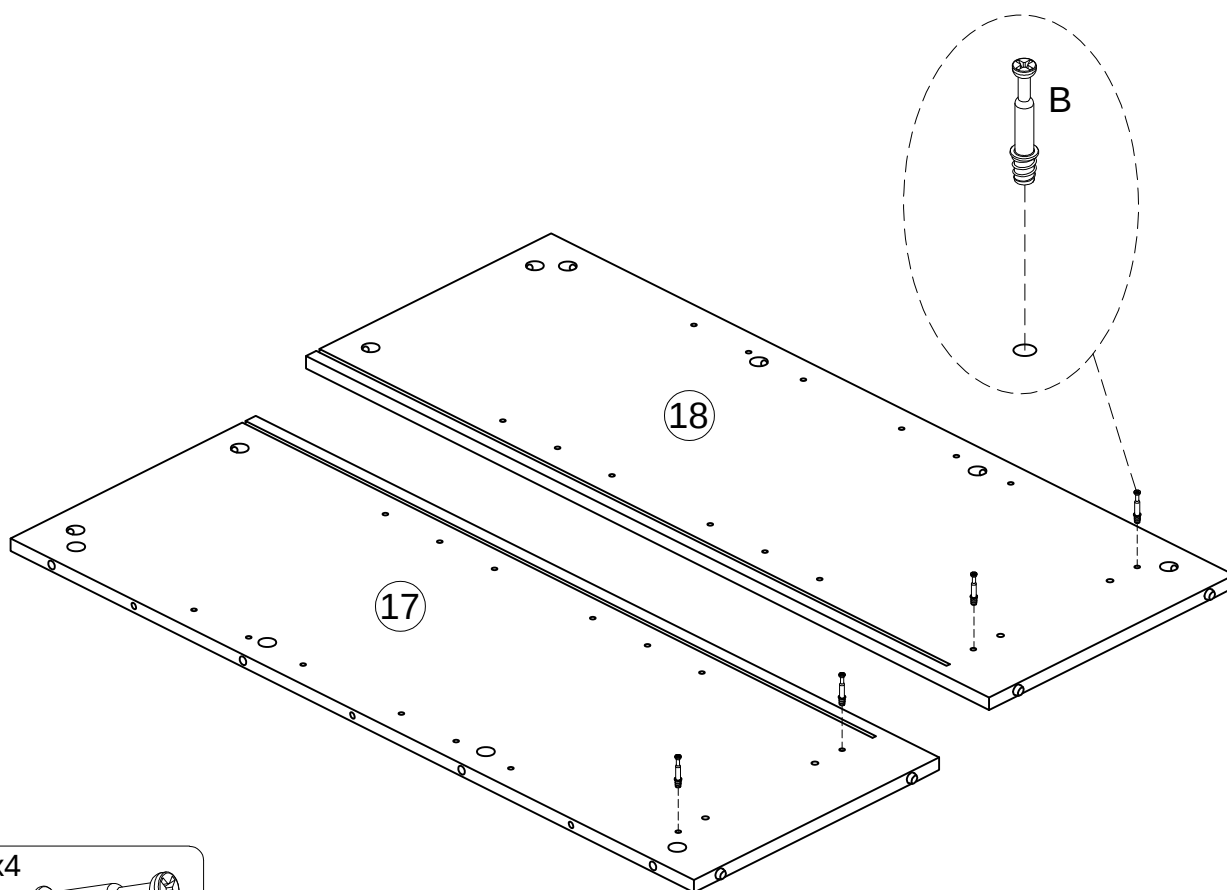


Bx4



Ø6x35mm

22

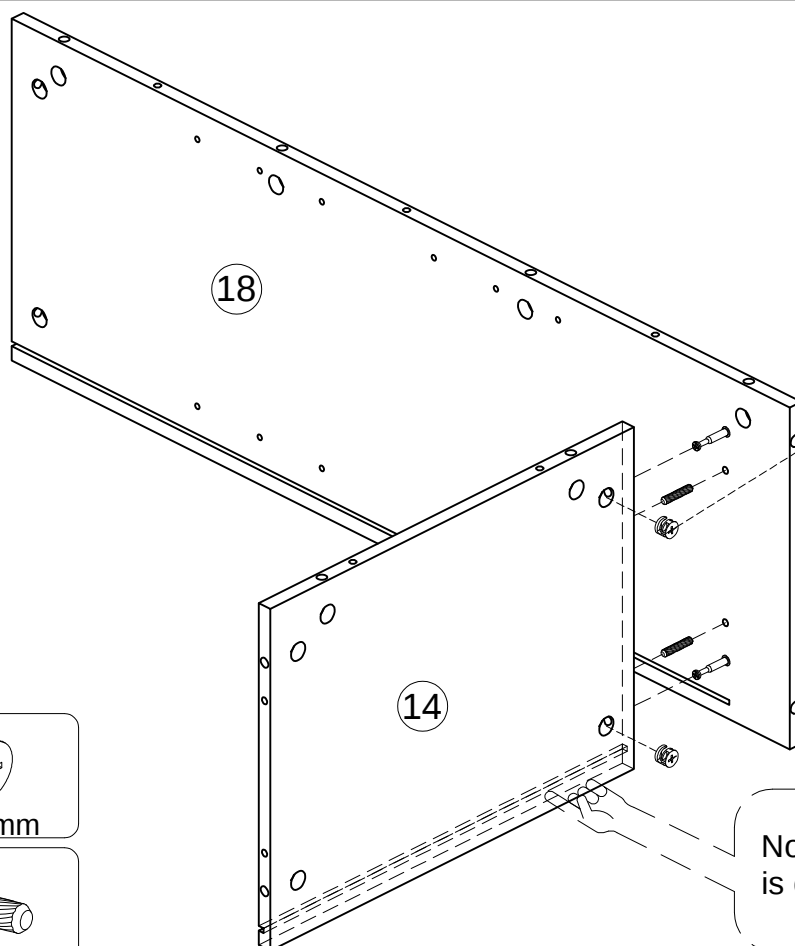

Cx2



Ø15x10mm

Ax2




Ø6x30mm


Notice that the groove is on the reverse side

INSTALLATION INSTRUCTION

23

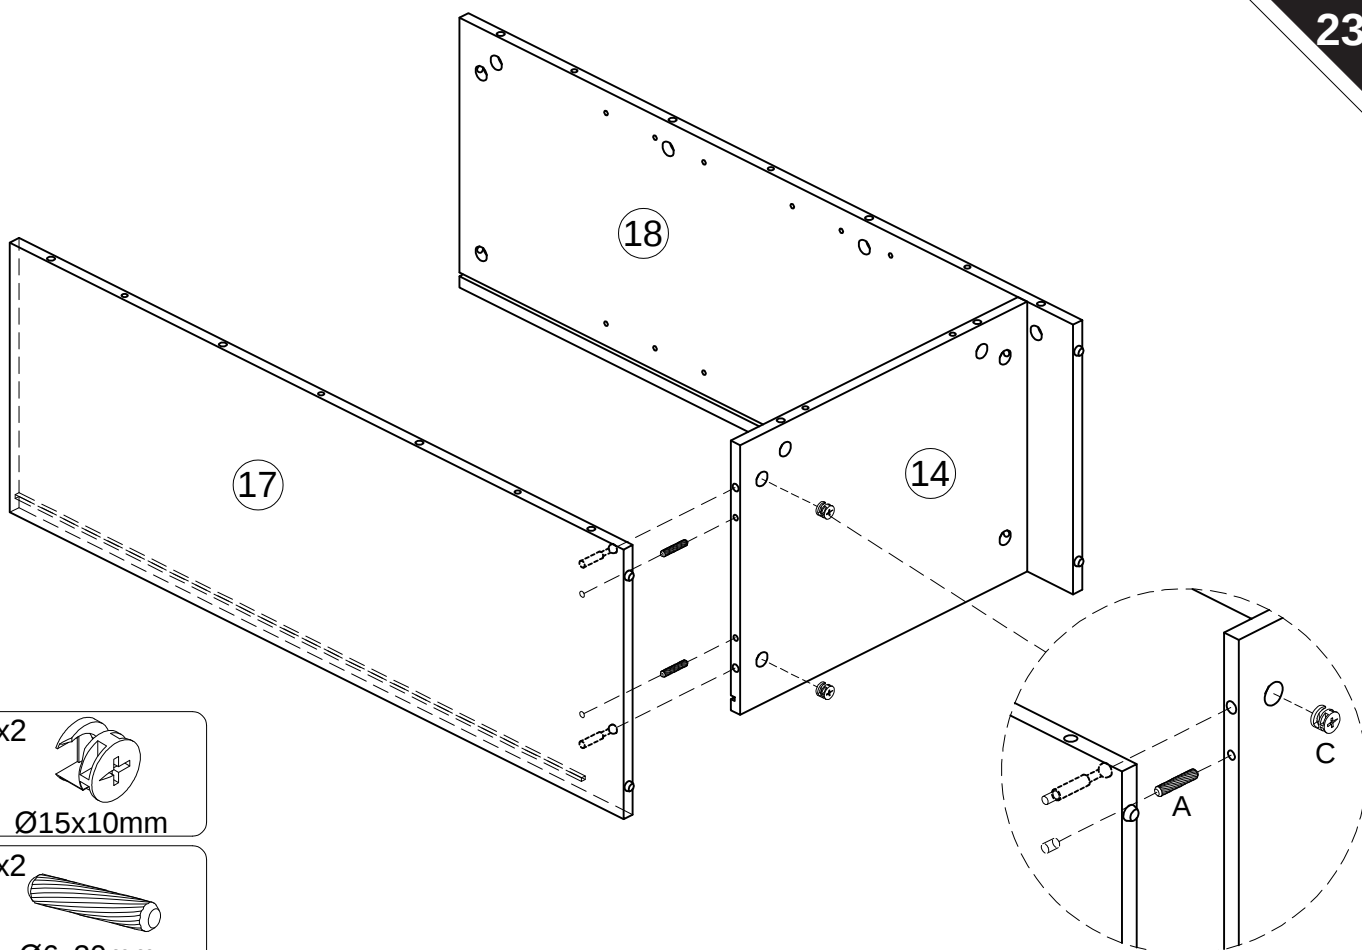


24

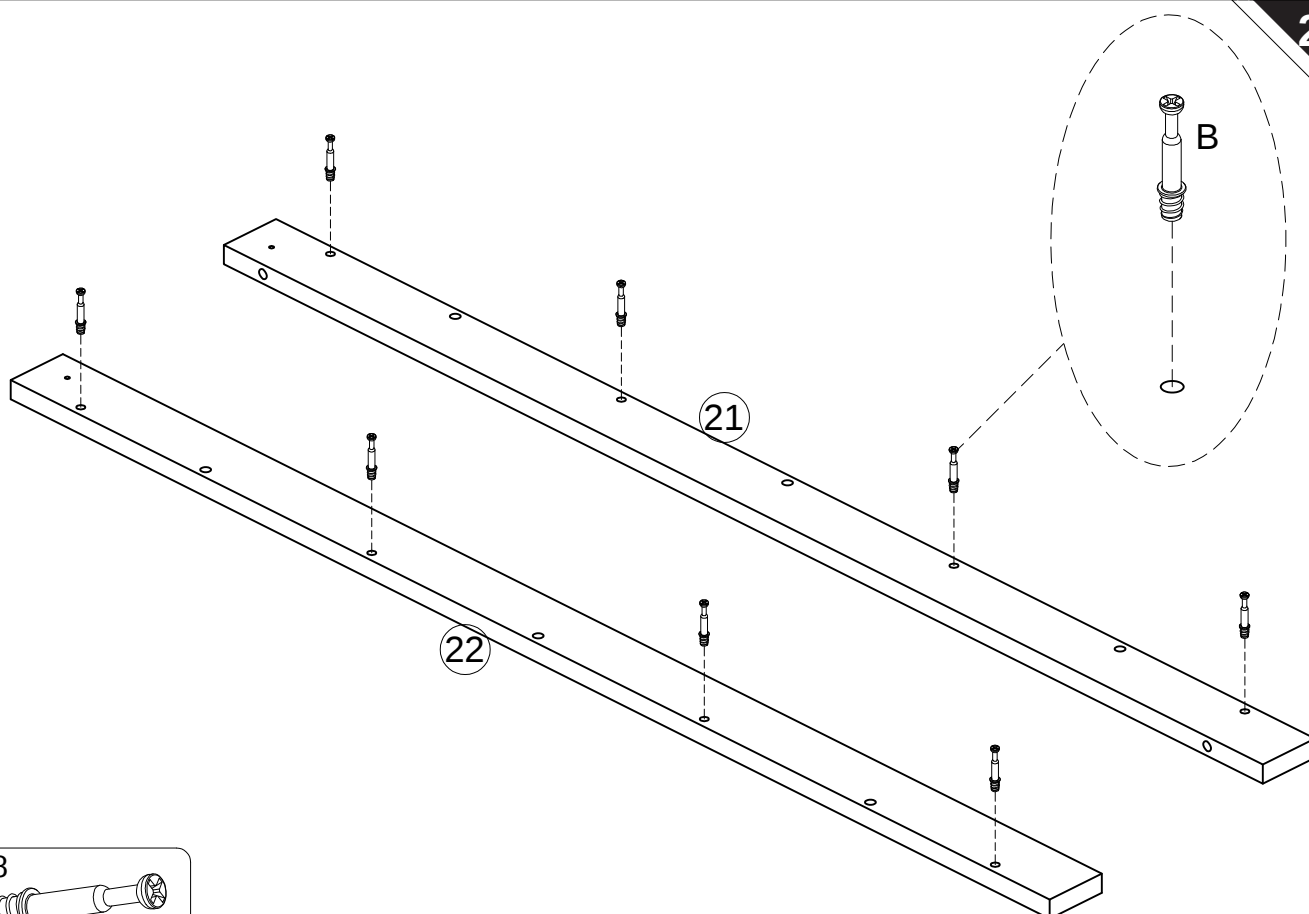


INSTALLATION INSTRUCTION




25

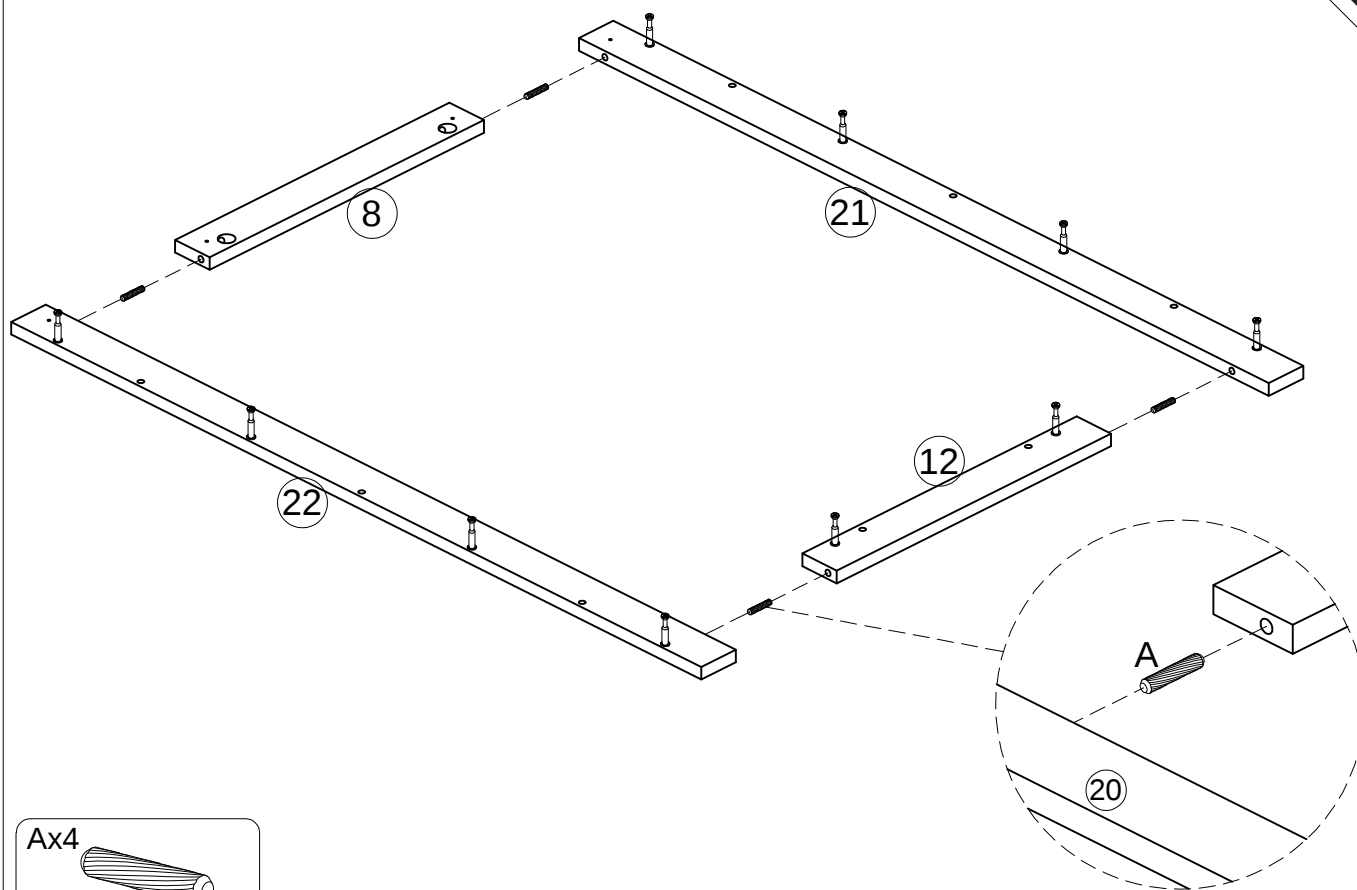


Ax4




26

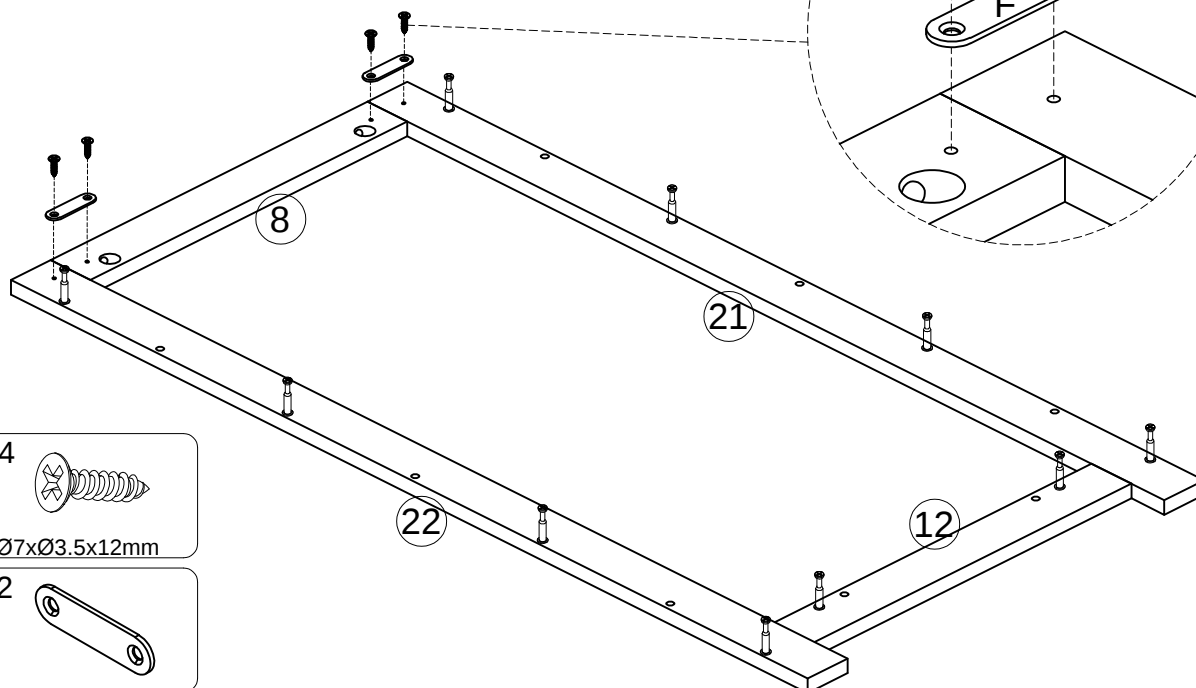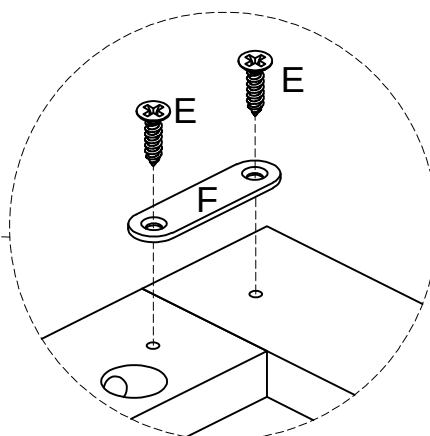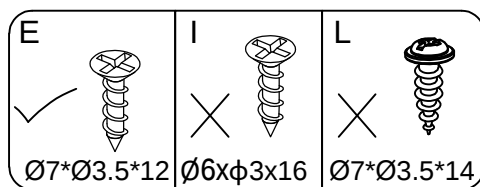

Ex4




Fx2




INSTALLATION INSTRUCTION





27

When installing this step, be sure to handle the components with both hands to prevent component #12 from falling off.

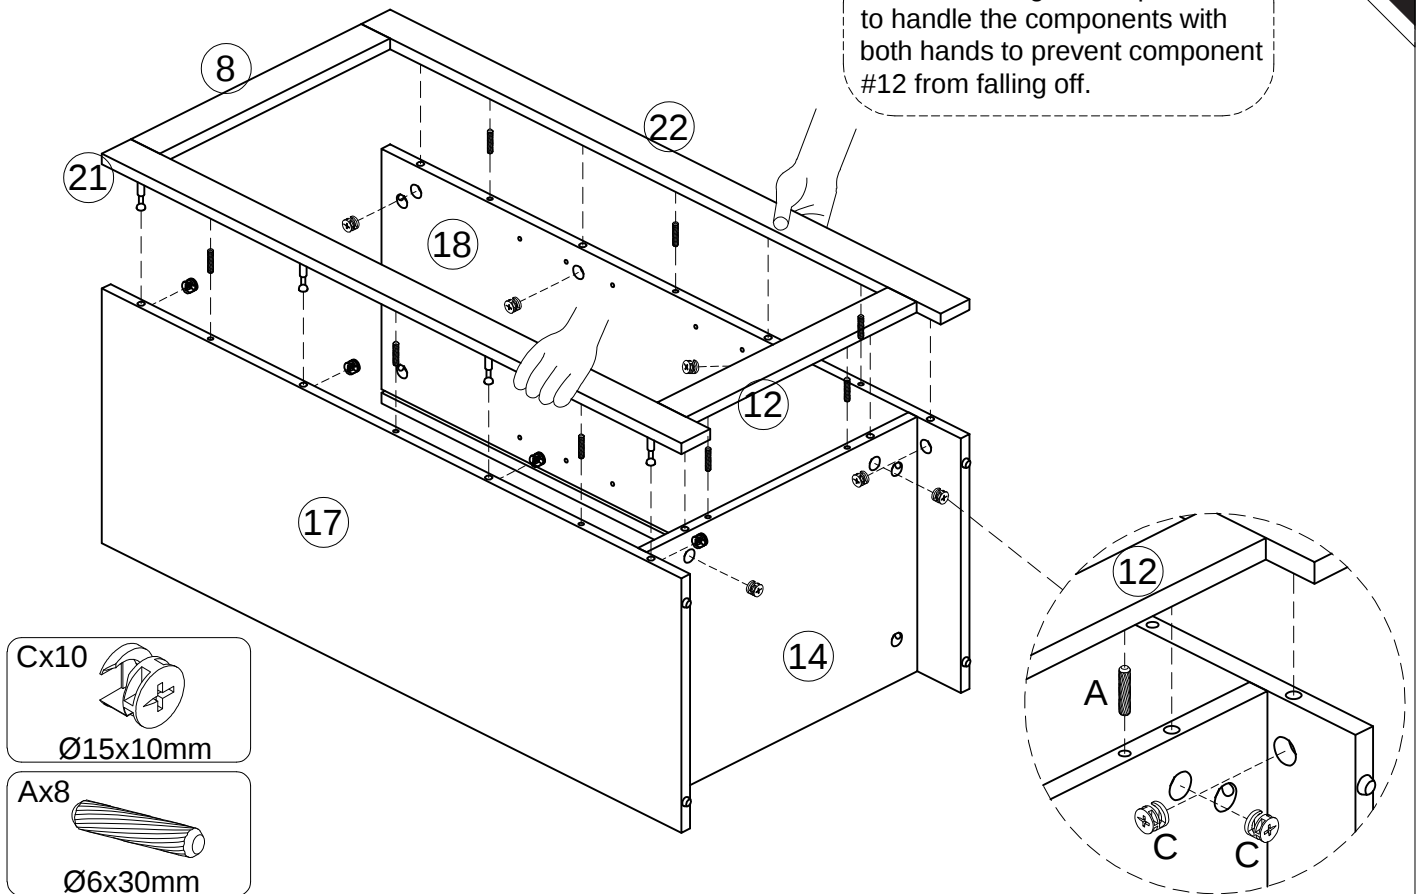








28

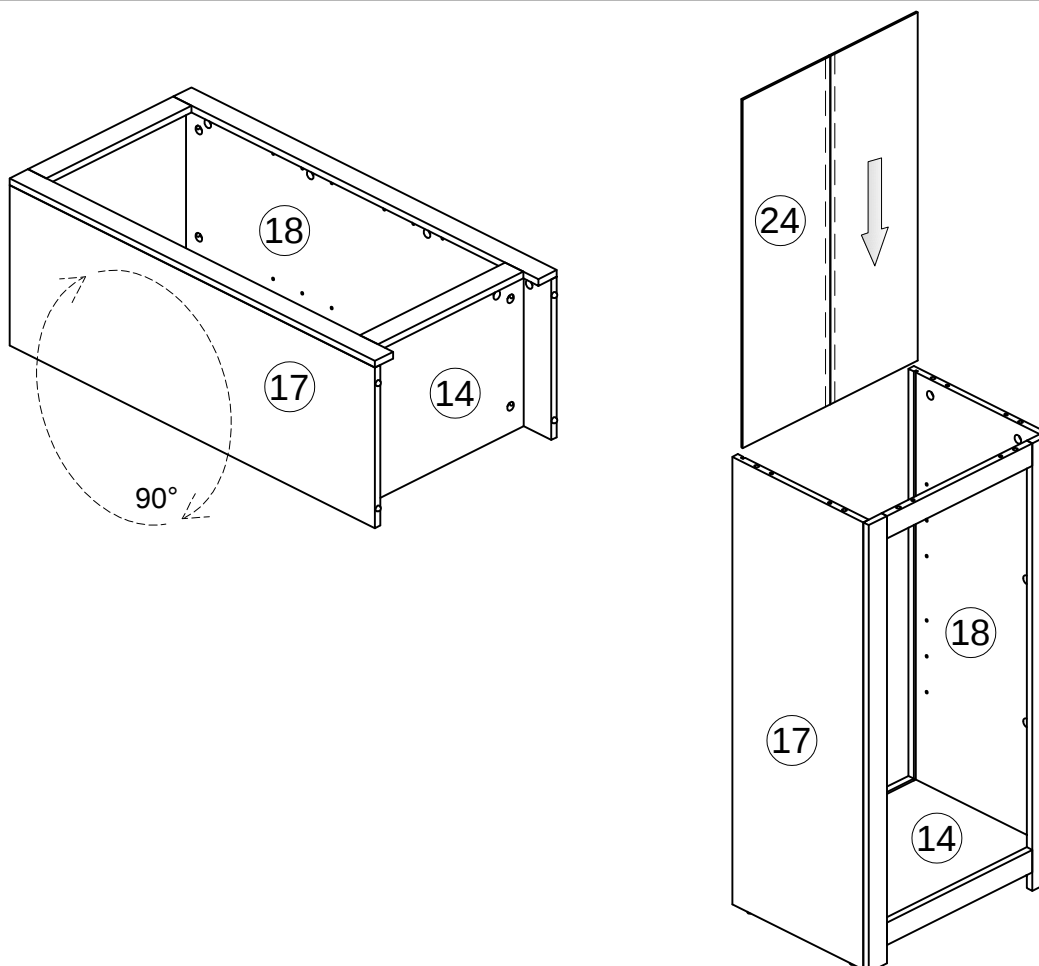

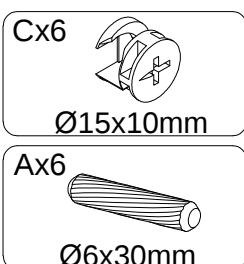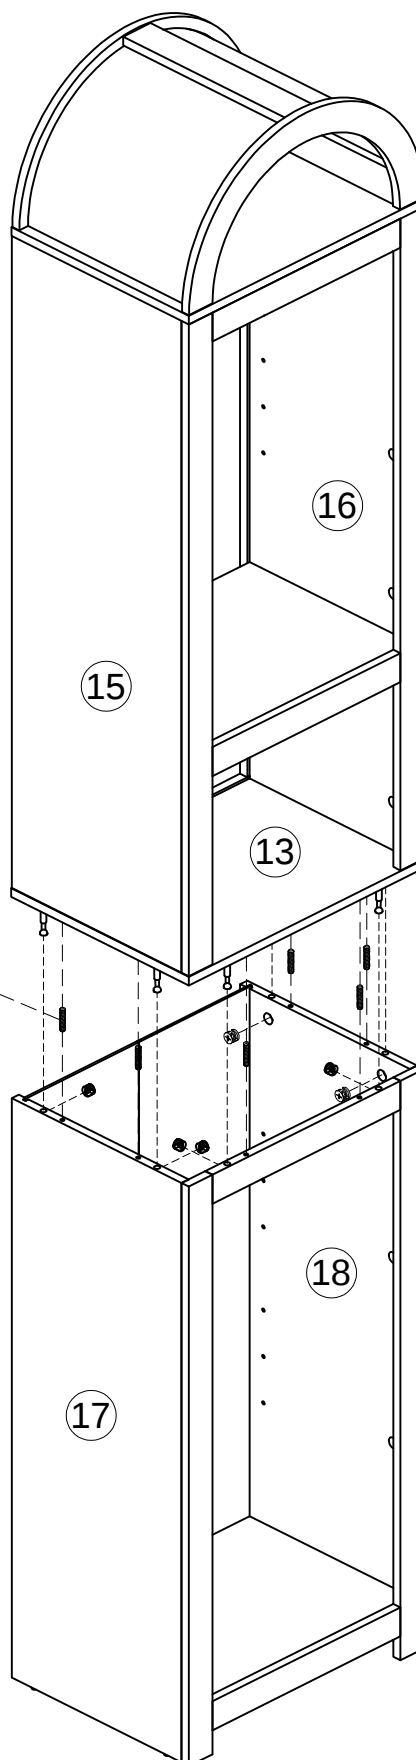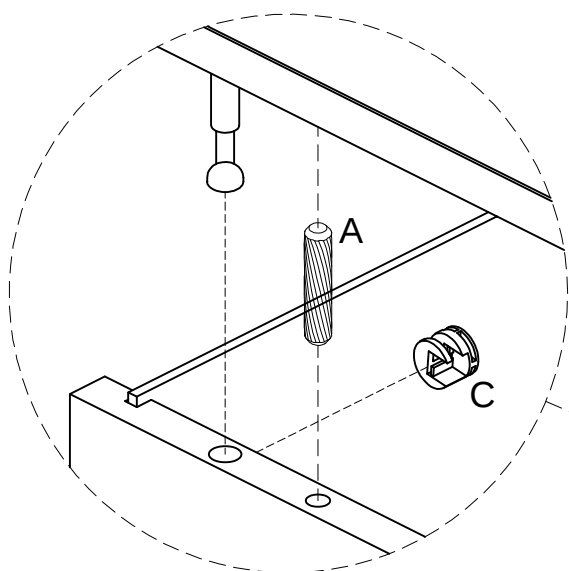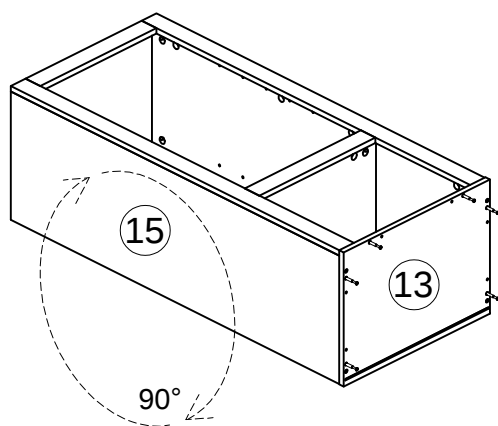


INSTALLATION INSTRUCTION

30

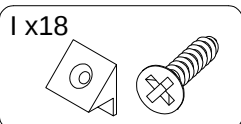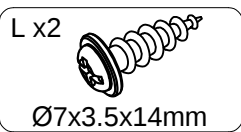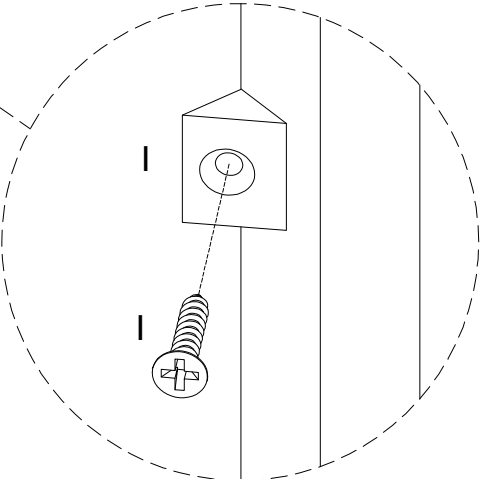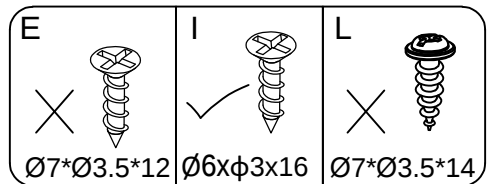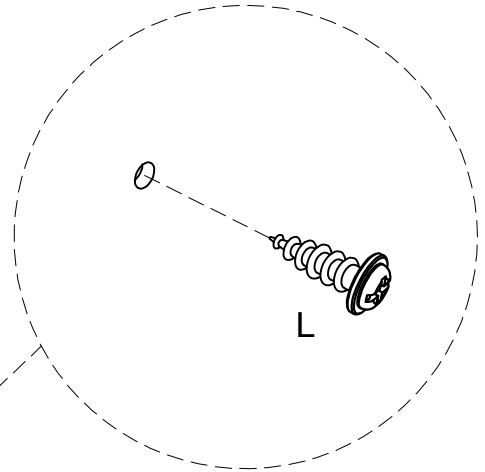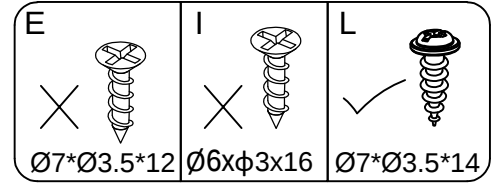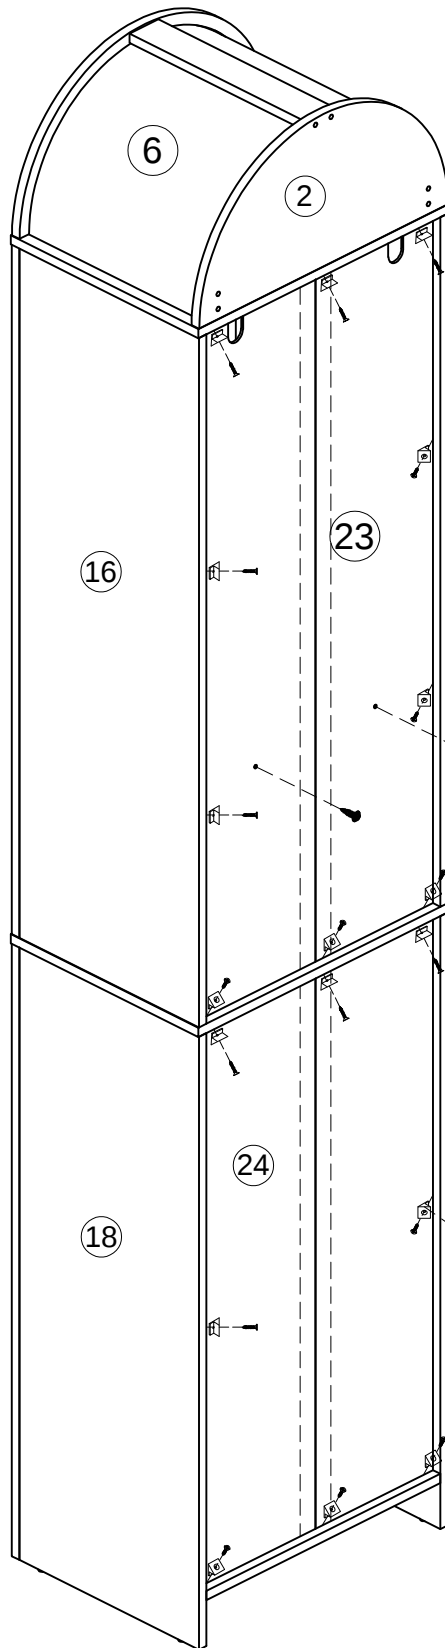


INSTALLATION INSTRUCTION

31

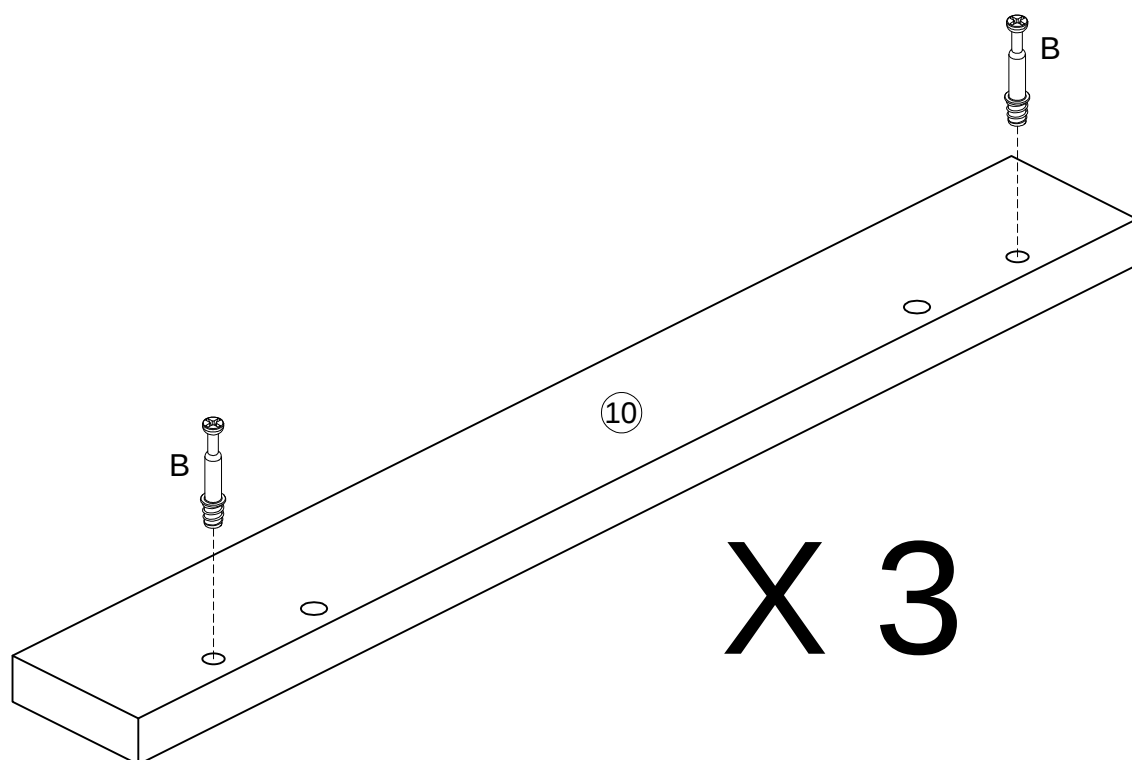

X 3


Bx6



Ø6x35mm

32

X 3

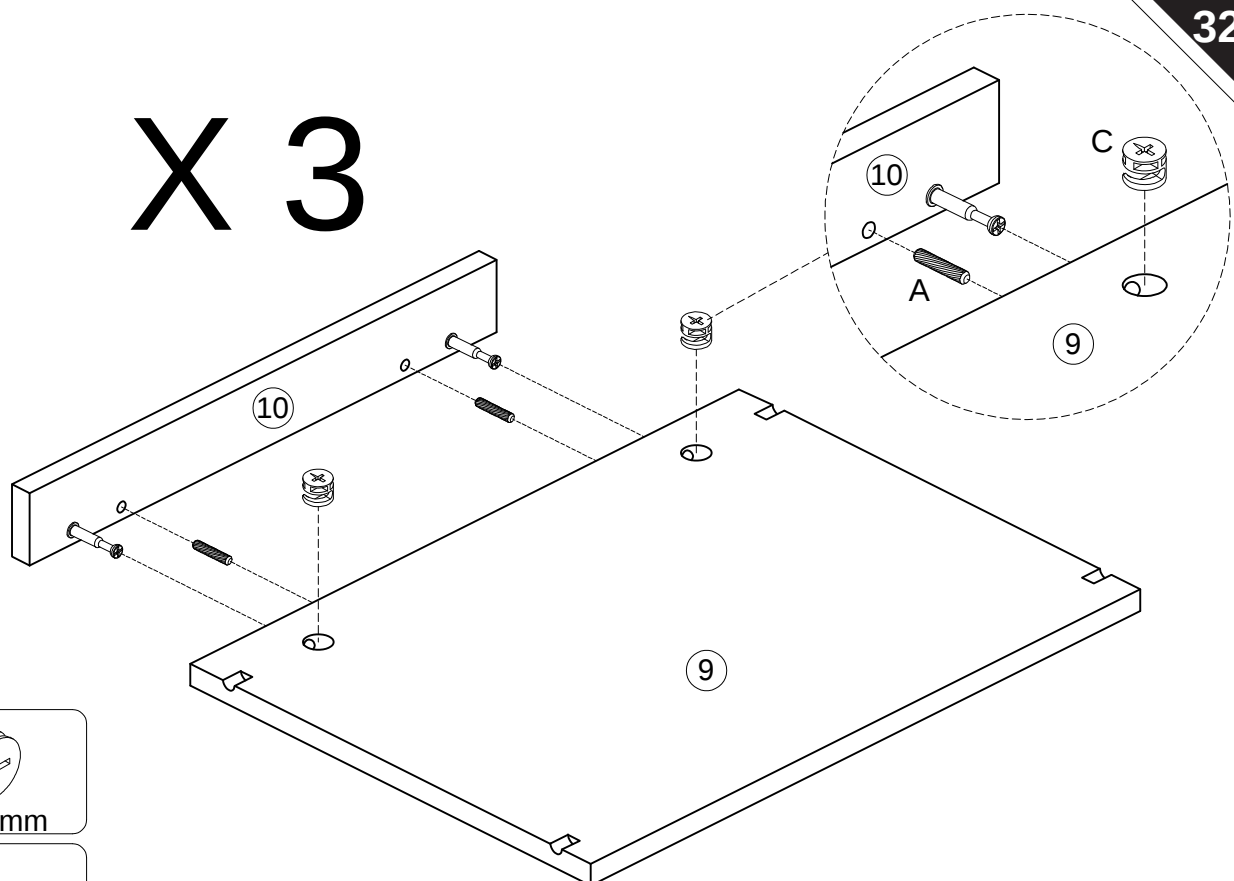

Cx6




Ø15x10mm


Ax6





Ø6x30mm

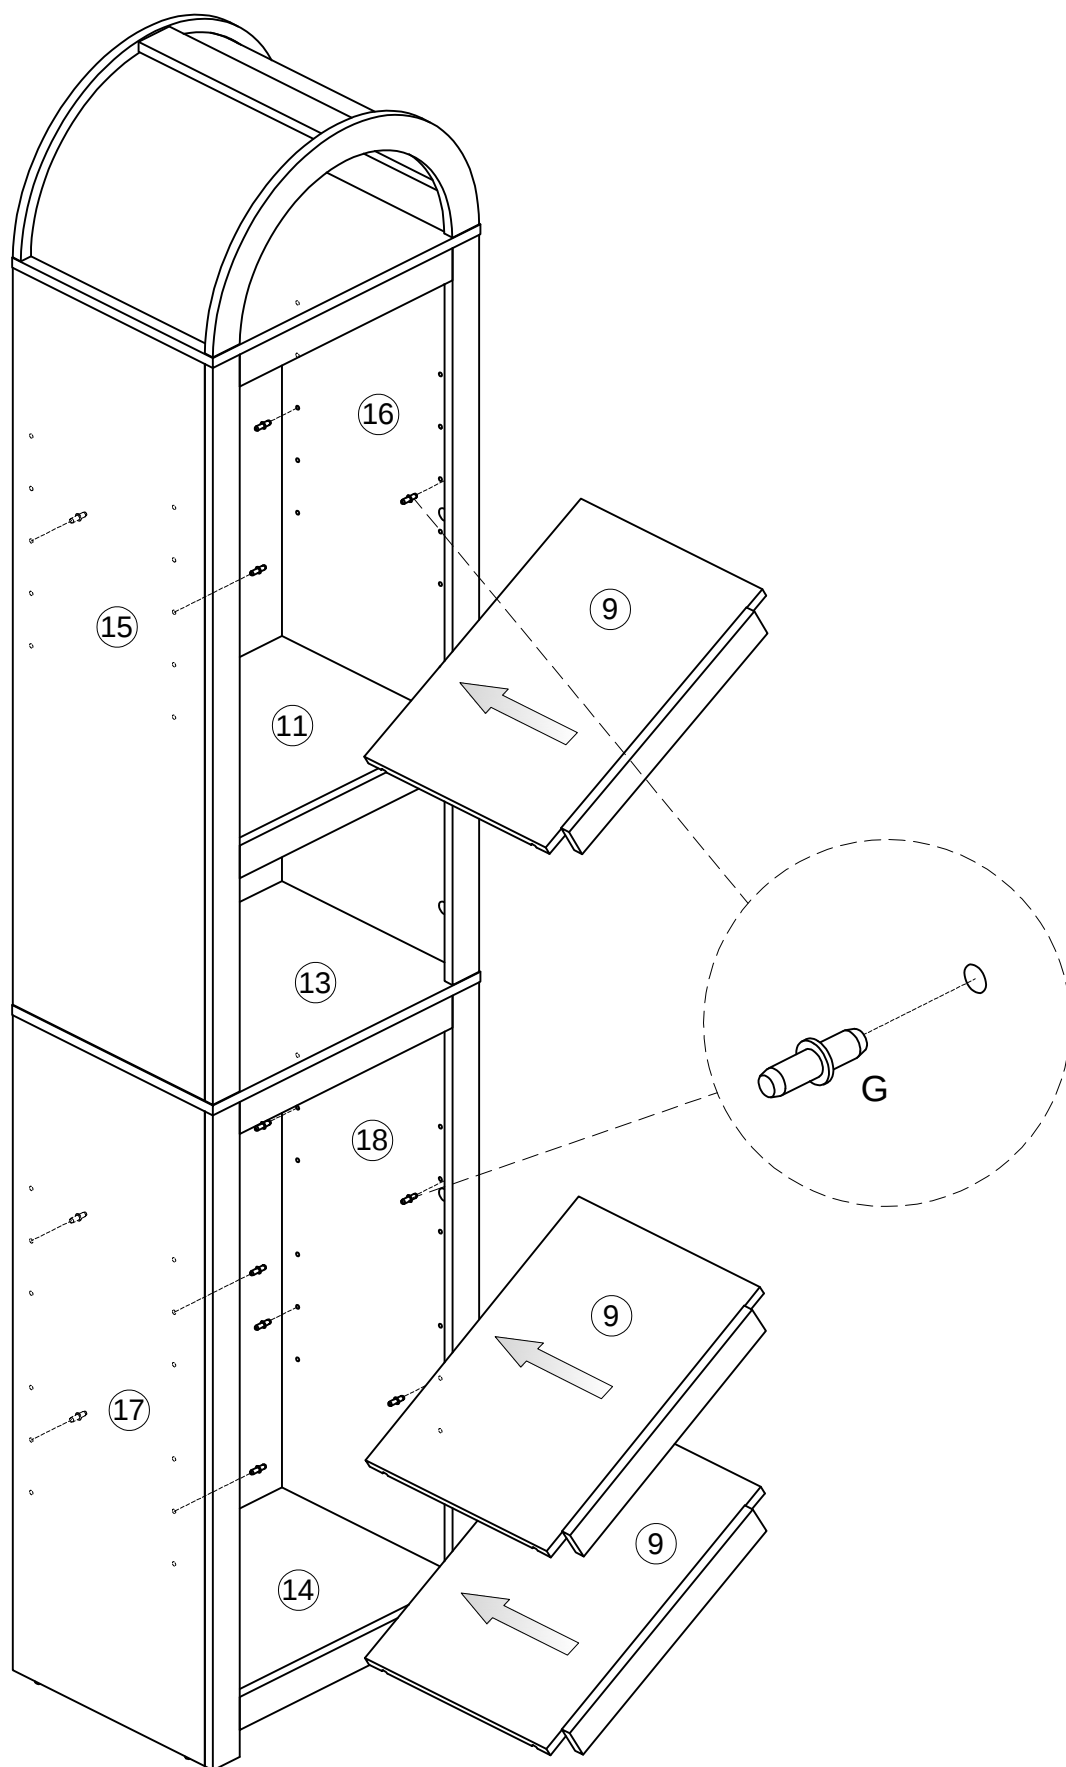


G x12




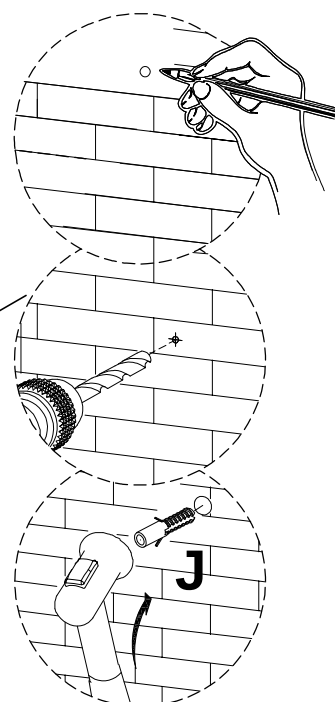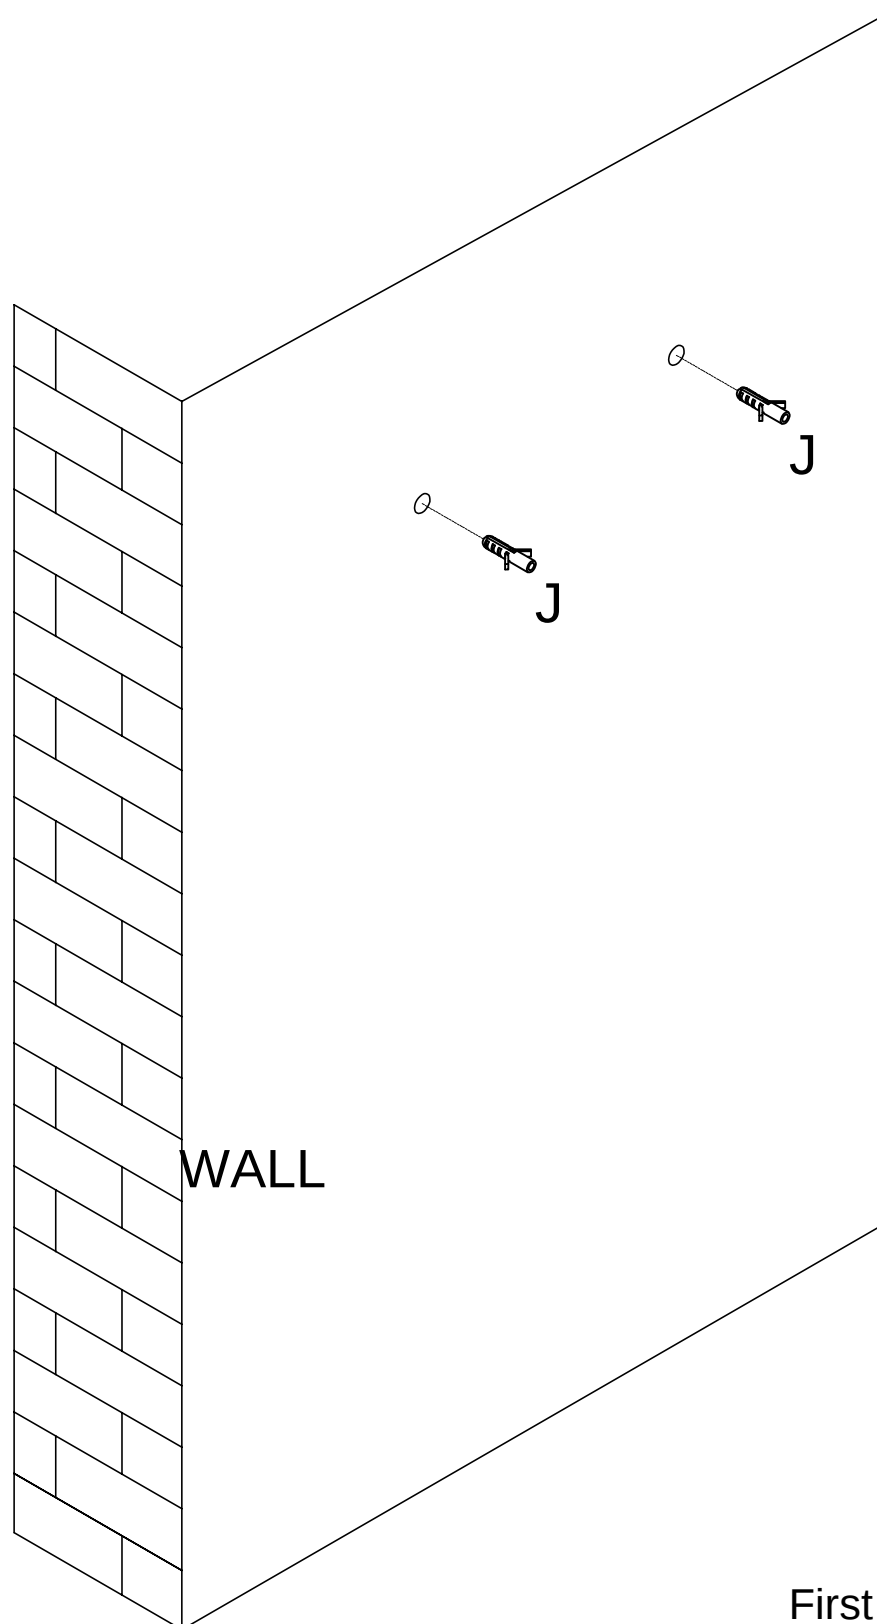

First mark the wall with a pencil, drill the hole to a depth of about 40mm, and knock in the accessory (J)




J x2



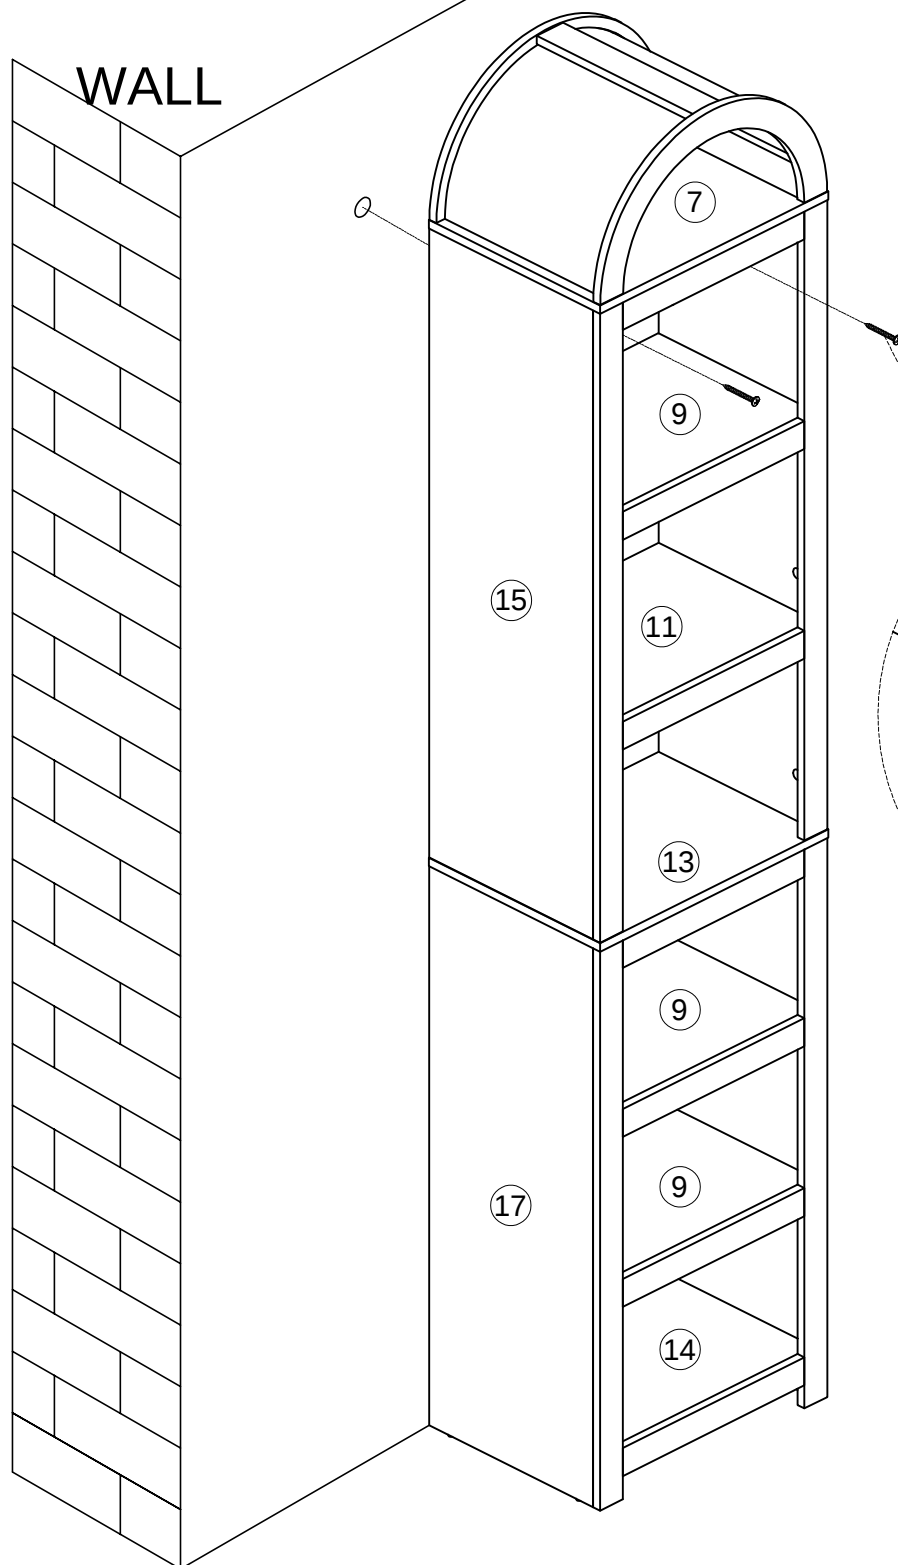

J x2



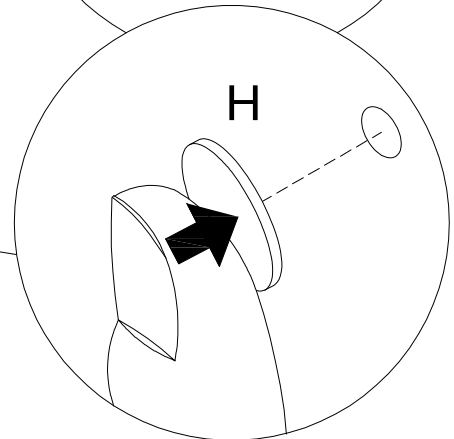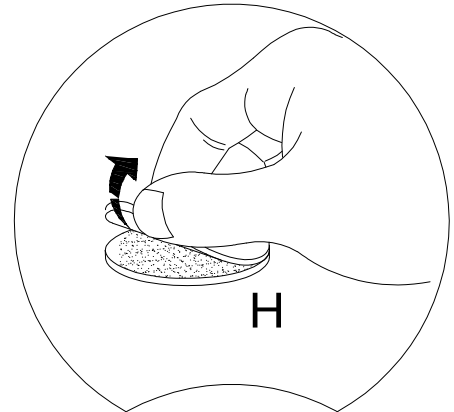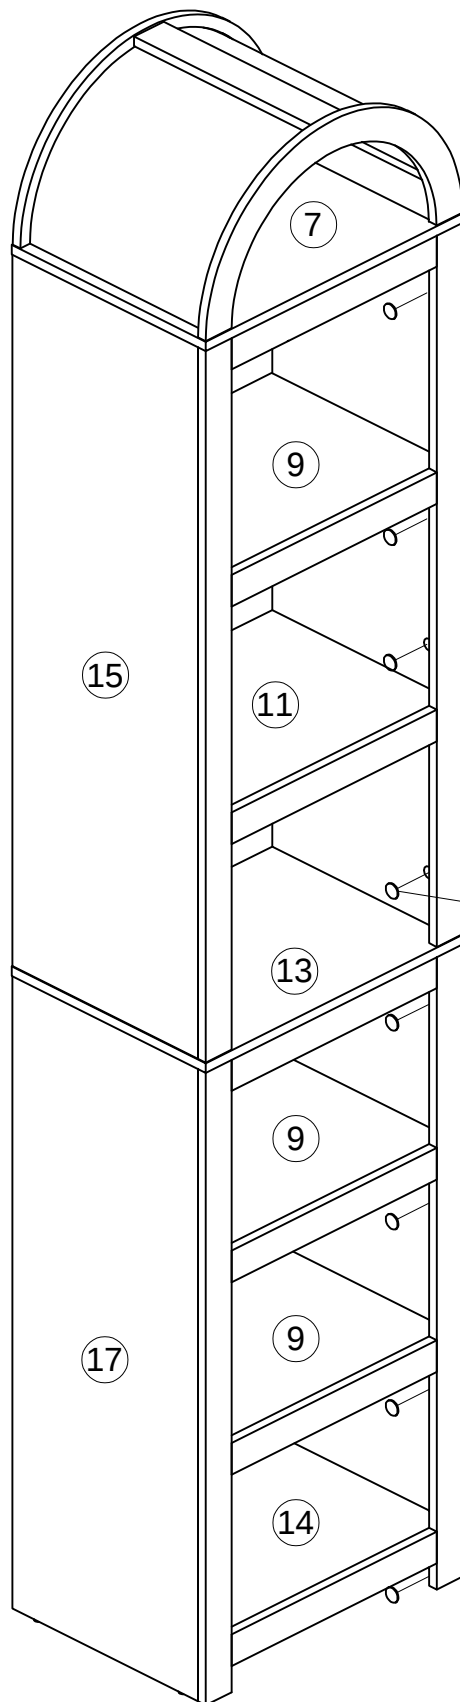

Cover the visible
hole with a cap

H x49



Ø20mm