



ASSEMBLY INSTRUCTIONS BEDHOUSE WITH TRUNDLE

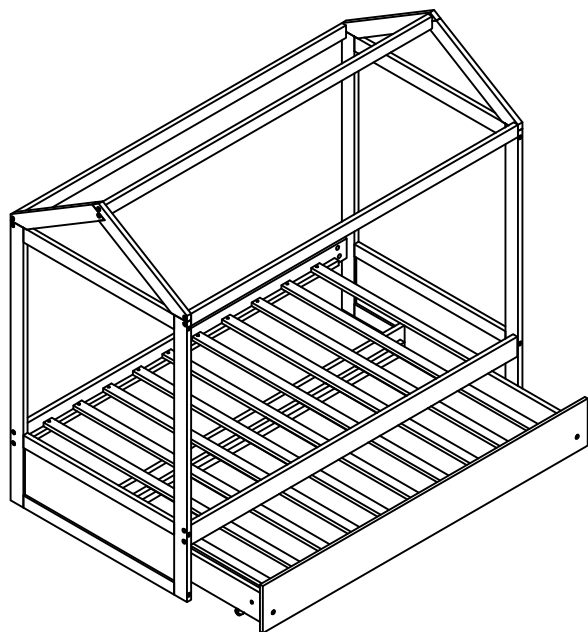

WF287825











1

DETAIL VIEW

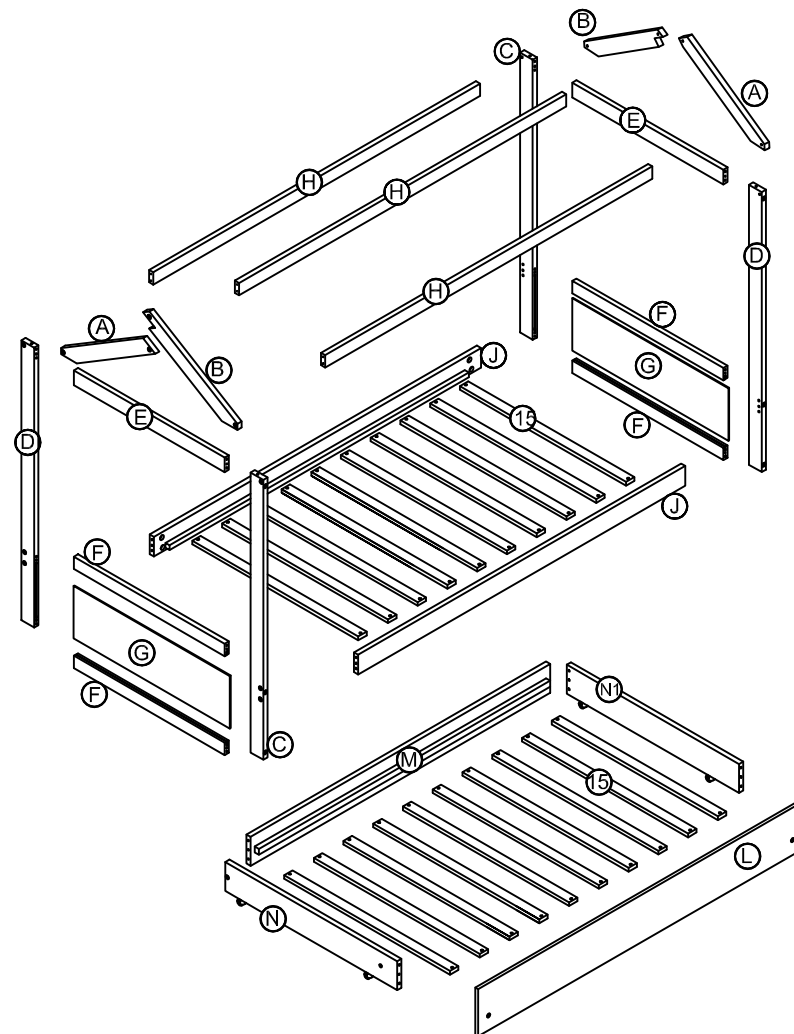


2


PART LISTS - WF287825

G		H		J	
	Side panel - 2pcs		Guard rail top 3pcs		Side rail upper -2pcs
15		L		M	
	Upper slat - 20pcs		Drawer front - 1pc		Drawer back - 1pc
A		B		C	
	Cap for lower HB&FB-2pcs		Cap for upper HB&FB-2pcs		Upper leg HB&FB -2pcs
D		E		F	
	Upper leg HB&FB -2pcs		Horizontal bar HB&FB-2pcs		Horizontal bar HB&FB-4pcs
N/N1					
	Drawer Left/Right - 2pcs				

HARDWARE LISTS - WF287825


1		2		3	
	Ø10 x 30 mm		Ø1/4" x 65 mm		Ø6" x 110 mm
	Wood dower 40pcs		Hex-Head bolts (12pcs)		Wood Screws (12pcs)
4		5		6	
	Ø6" x 70 mm		Ø1/4" x 15 mm(9.5mm)		# 4 x 30mm
	Hex-Head bolts (12pcs)		Horizontal-Hole bolts 12pcs		Wood Screws (40pcs)
7		8		9	
	# 4 x 20mm		Wheels Ø32 (4pcs)		(1/4")4.5*58mm
	Wood Screws (8pcs)				Allen Key (1pc)

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE
POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

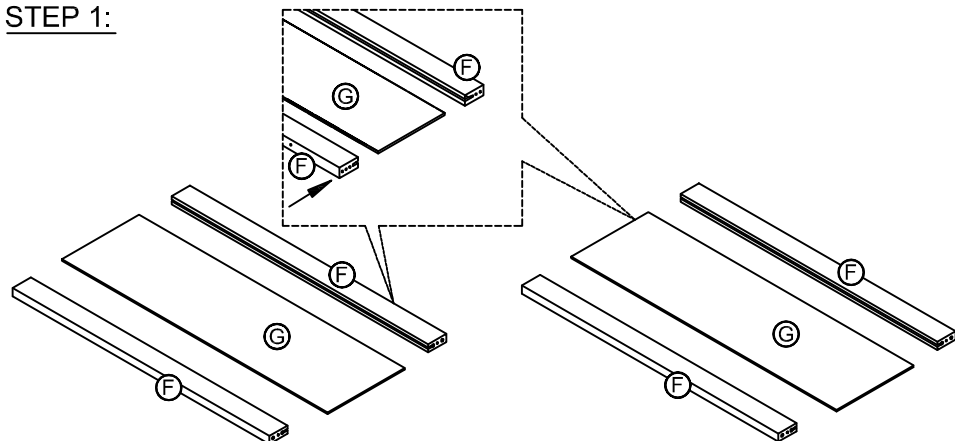


STEP 2:

01	03
	
24PCS	12PCS

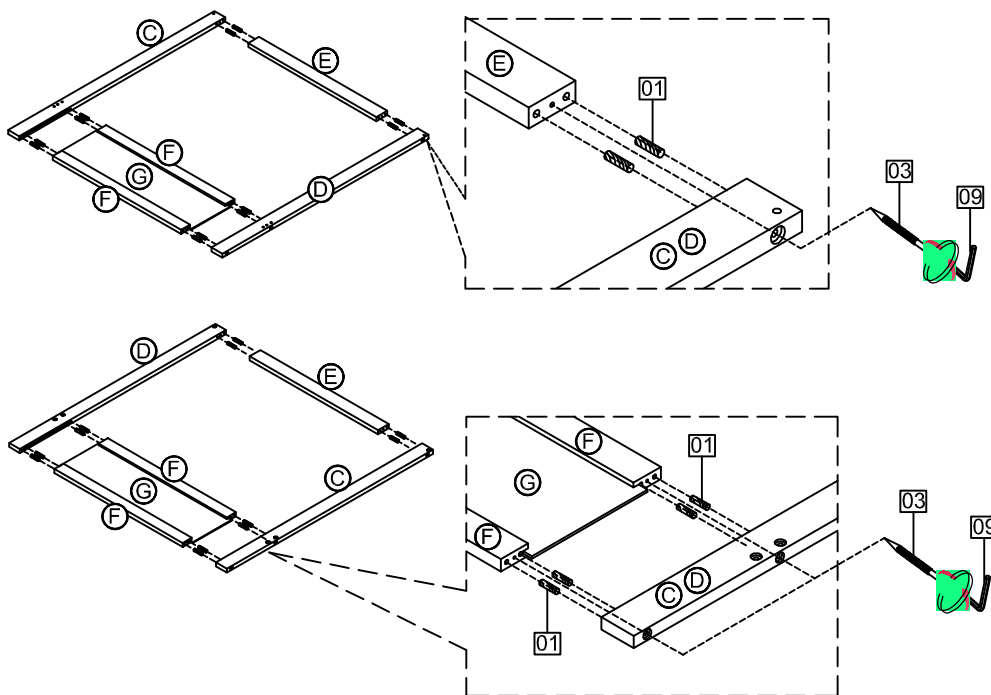

STEP 3:

05	01	02
		
8PCS	4PCS	8PCS

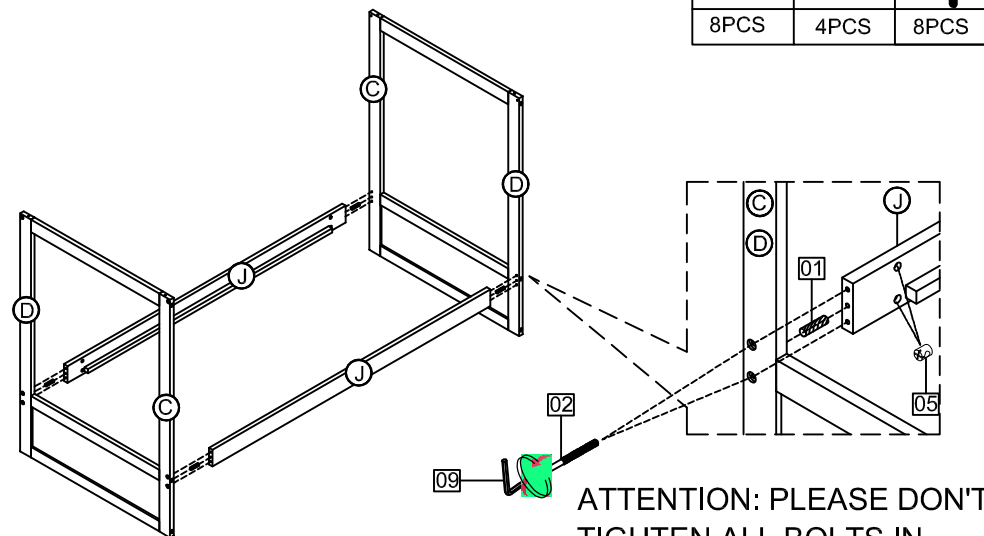


ATTENTION: PLEASE DON'T
TIGHTEN ALL BOLTS IN
THIS STEP, JUST TIGHTEN
80%

STEP 4:


04

8PCS

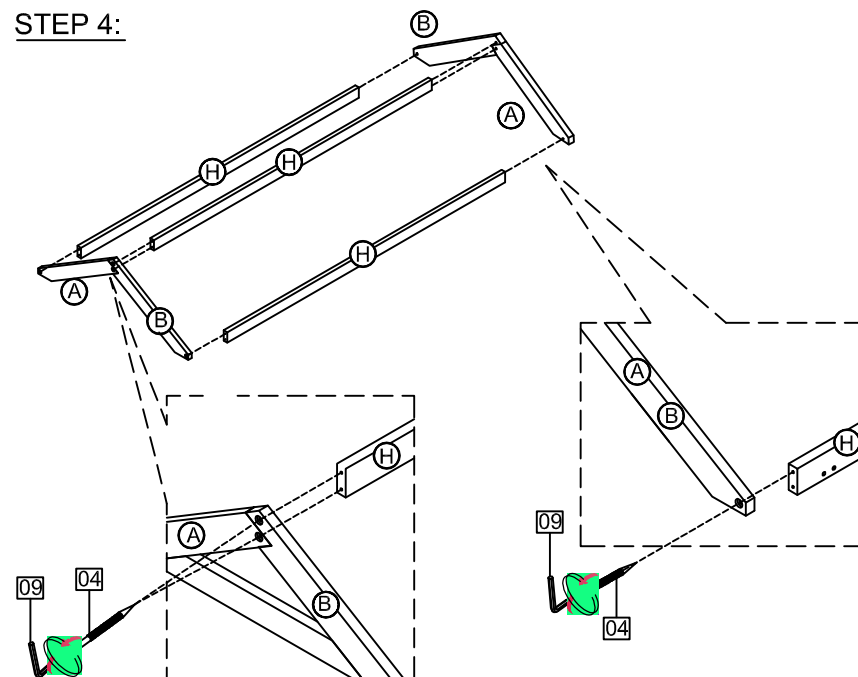


STEP 5:

01
4PCS

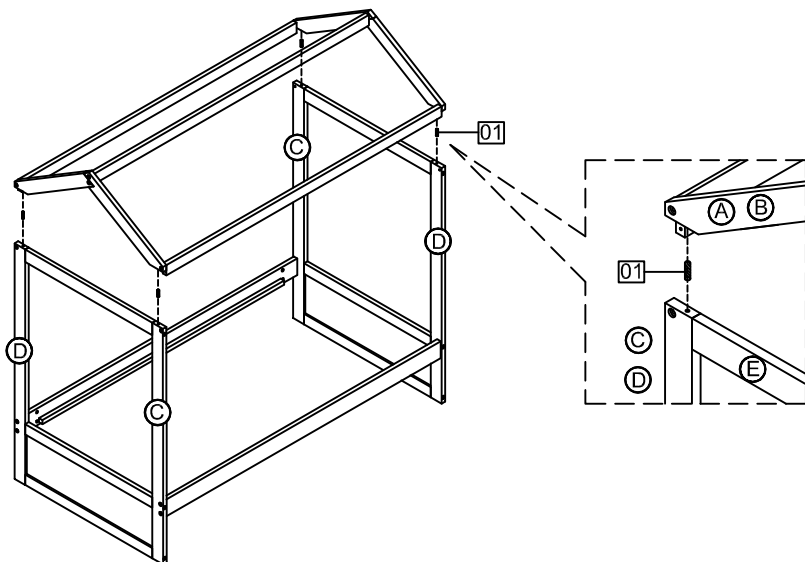


STEP 6:

04
4PCS

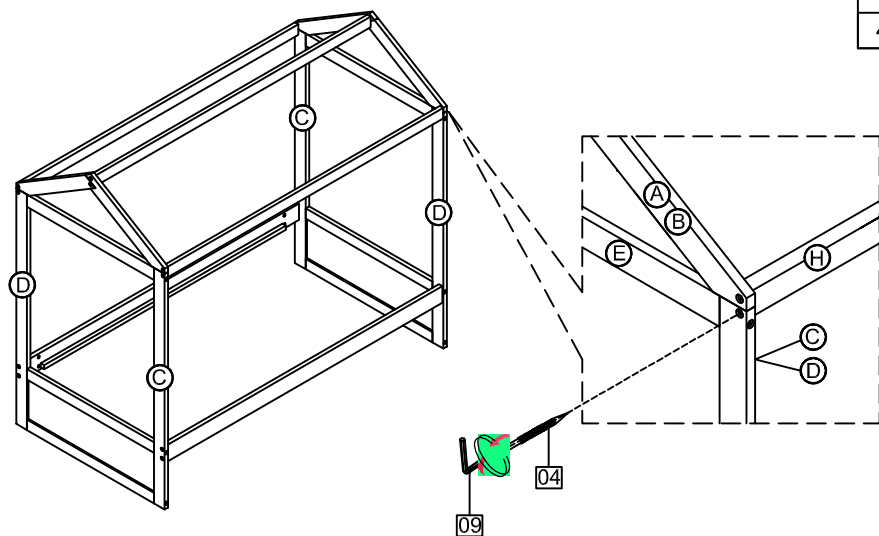

STEP 7:


01 02
8PCS 4PCS
05
4PCS

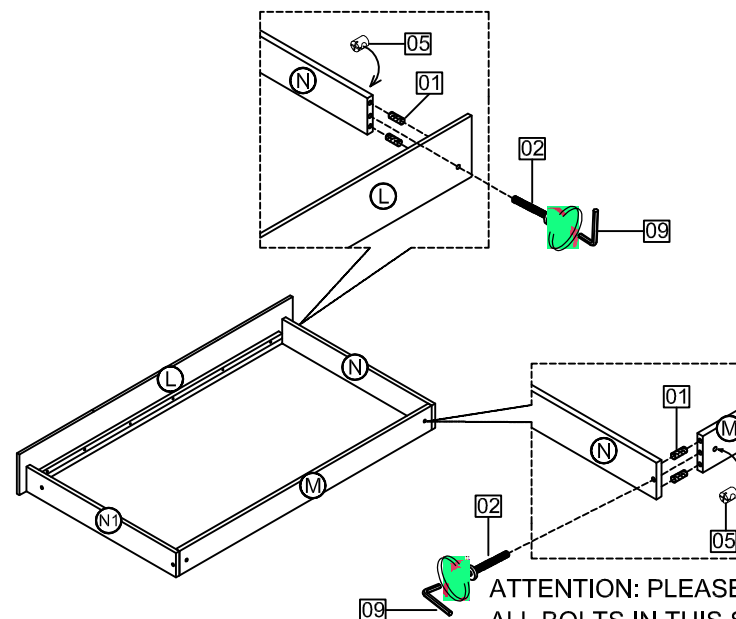

ATTENTION: PLEASE DON'T TIGHTEN ALL BOLTS IN THIS STEP, JUST TIGHTEN 80%

STEP 8:

07 06 08
8PCS 20PCS 4PCS

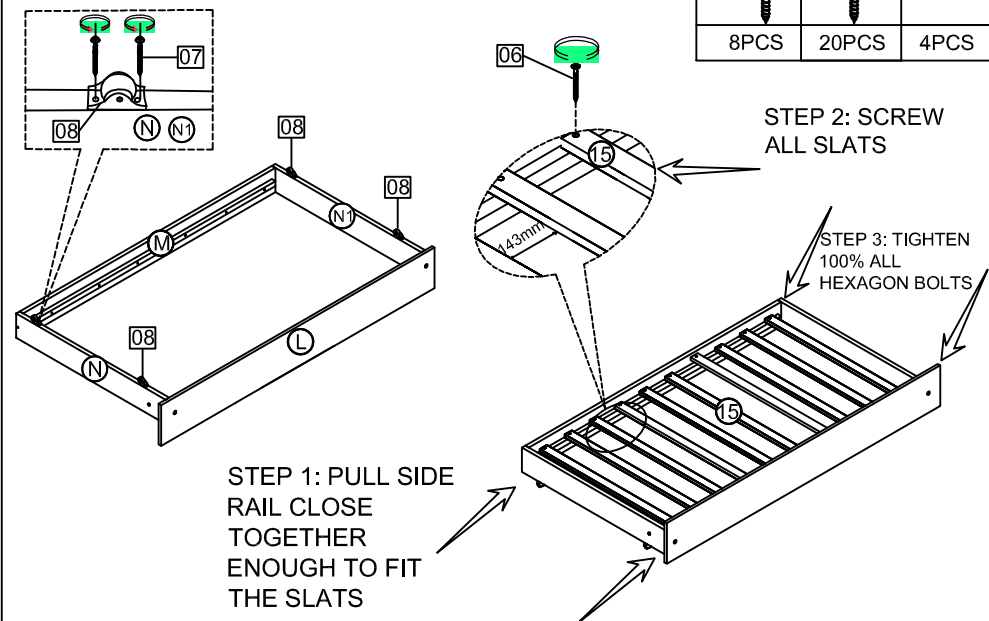



STEP 1: PULL SIDE RAIL CLOSE TOGETHER ENOUGH TO FIT THE SLATS

STEP 2: SCREW ALL SLATS

STEP 3: TIGHTEN 100% ALL HEXAGON BOLTS


STEP 9:

STEP 2: SCREW
ALL SLATS

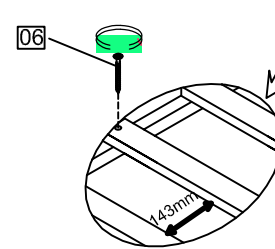

STEP 3: TIGHTEN
100% ALL
HEXAGON BOLTS

STEP 1: PULL SIDE
RAIL CLOSE
TOGETHER
ENOUGH TO FIT
THE SLATS

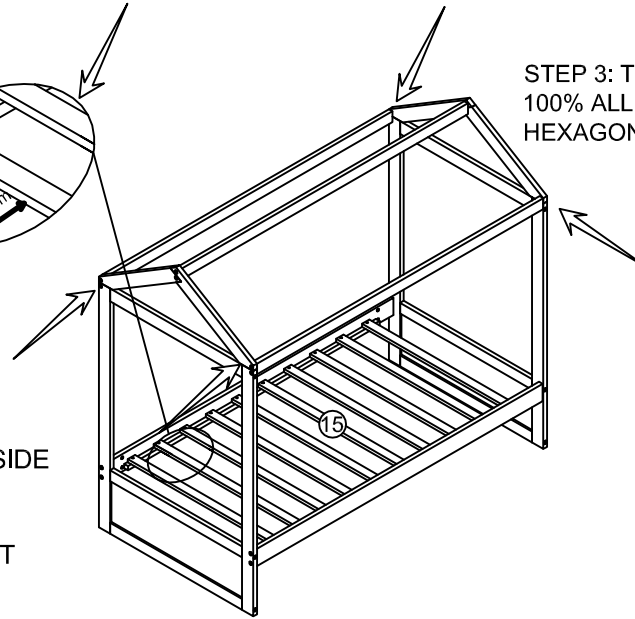

STEP 10:

Assembly Complete

