











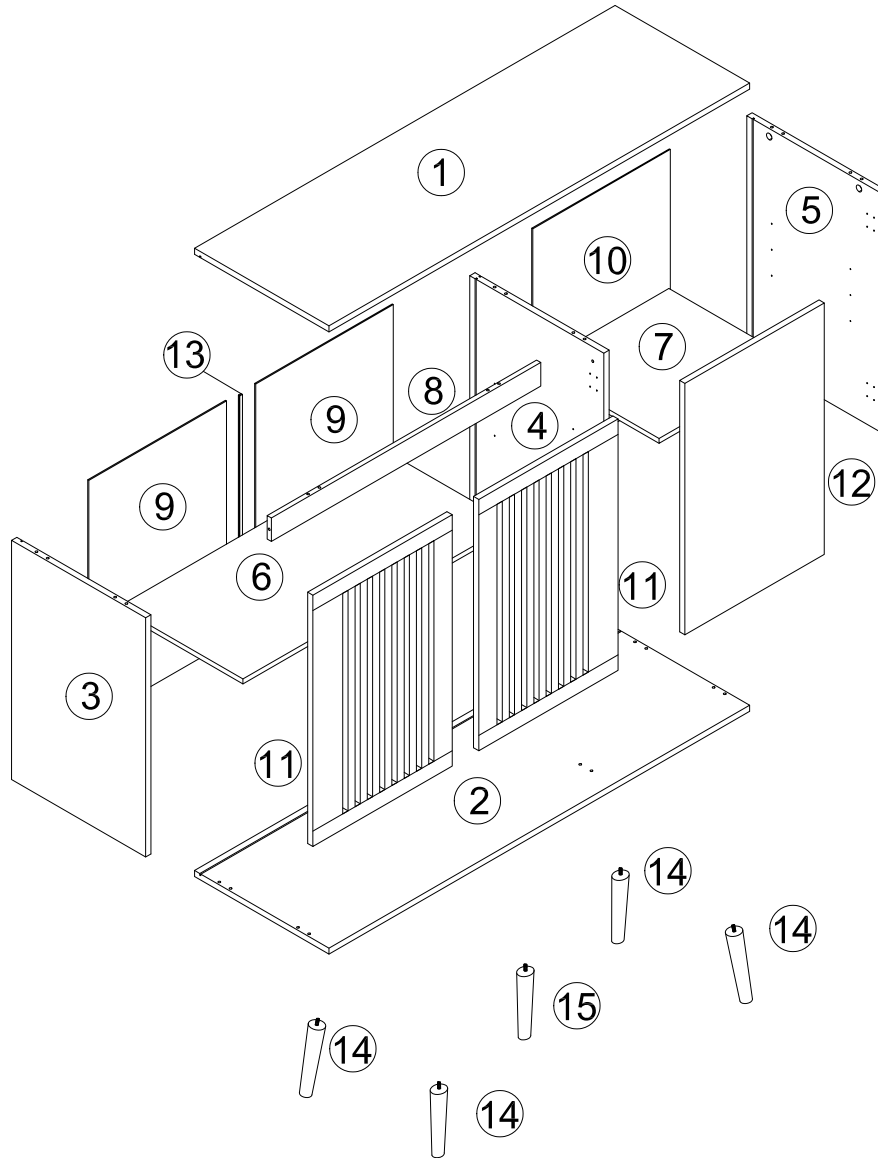






Installation instruction

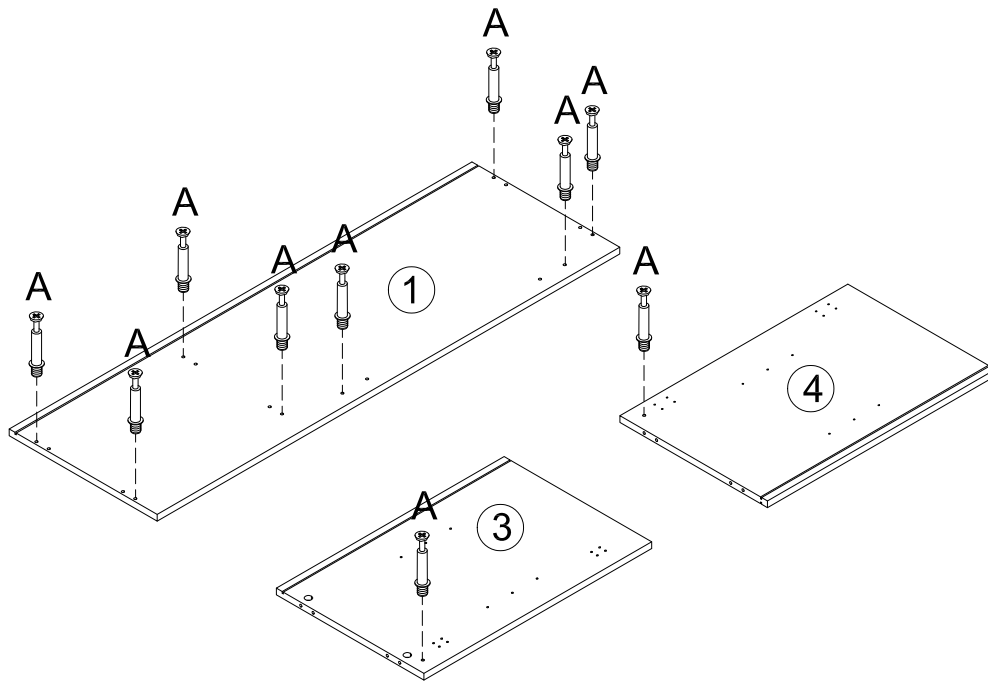




STEP 1

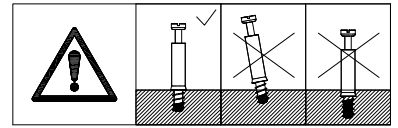


STEP 2

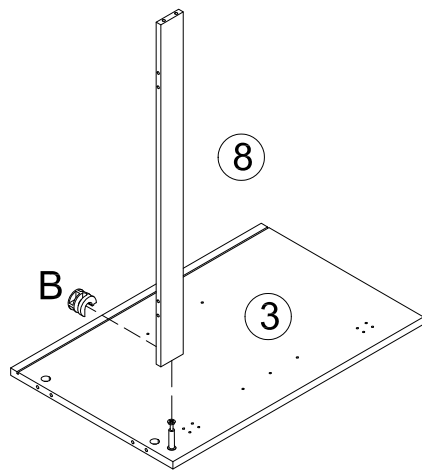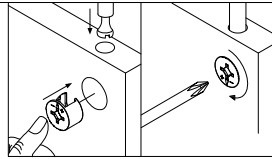


STEP 3

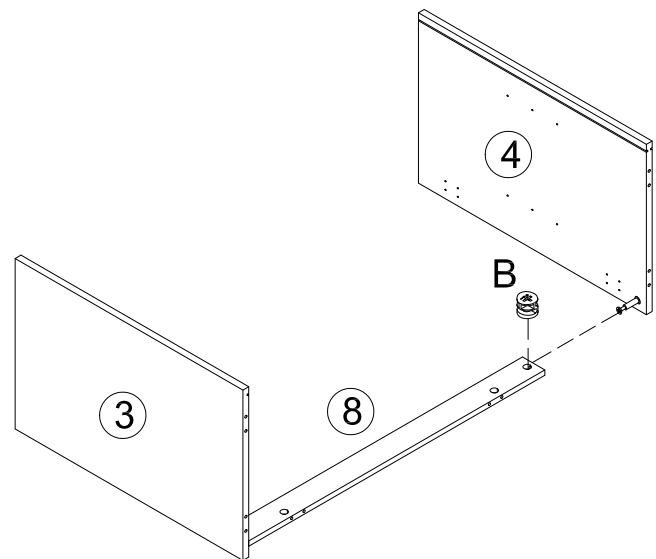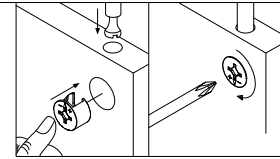

STEP 4

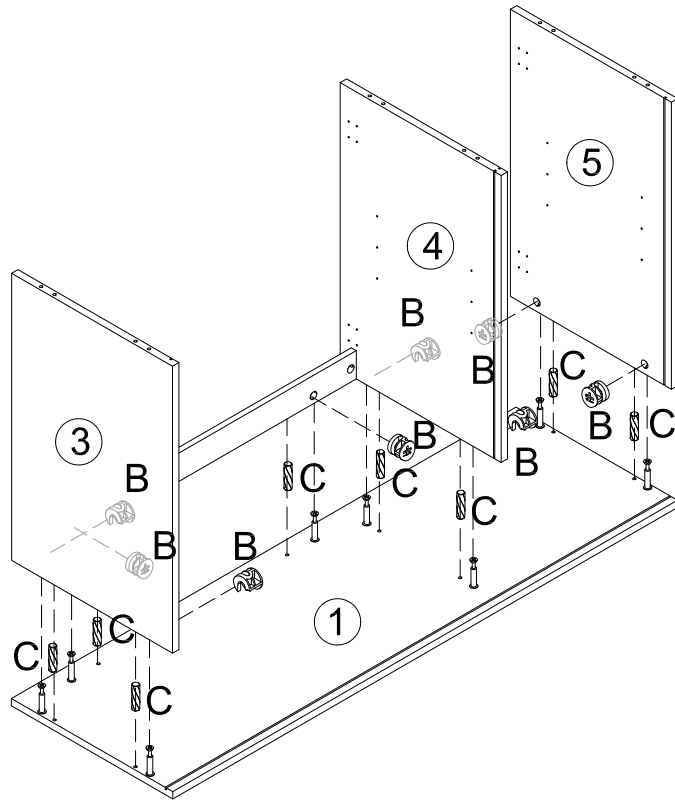


B x8
 $\varnothing 15 \times 10 \text{ mm}$






Cx8
 $\varnothing 6 \times 30 \text{ mm}$



STEP 5

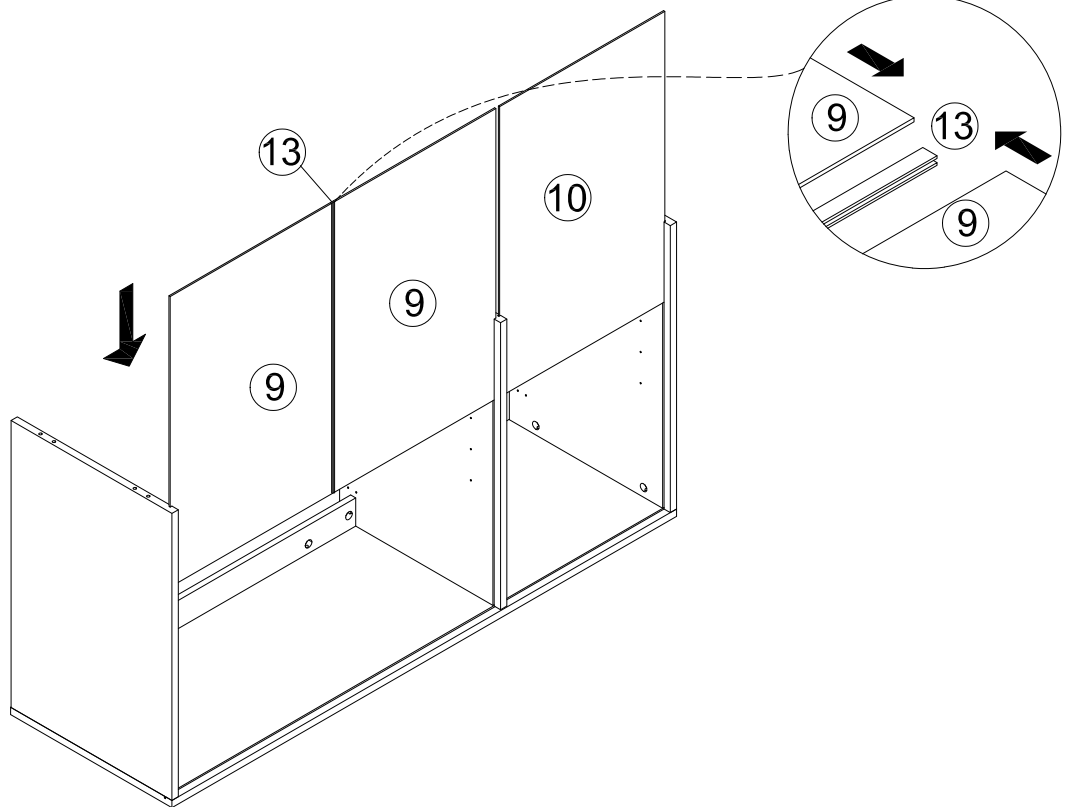



STEP 6

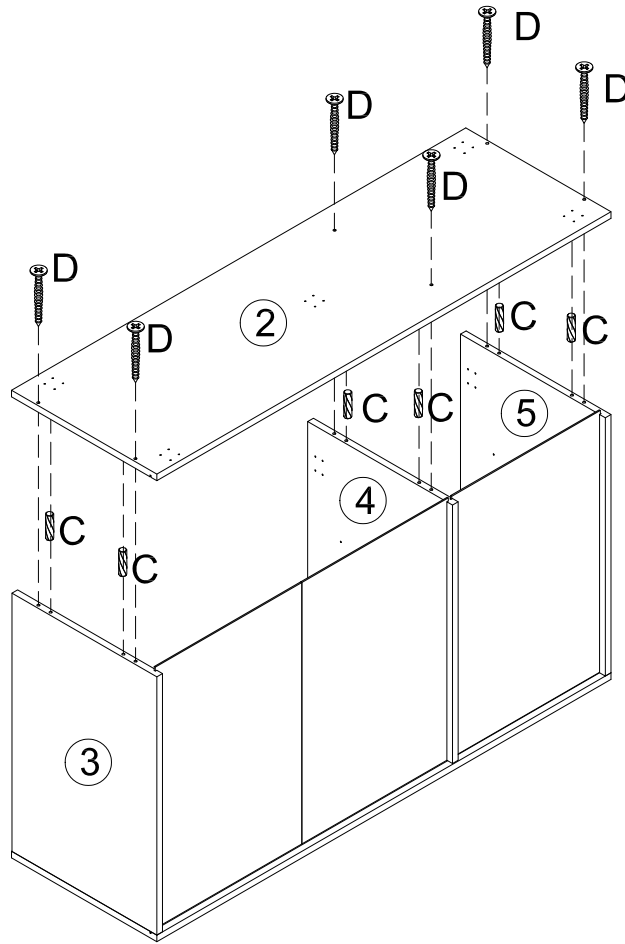



STEP 7

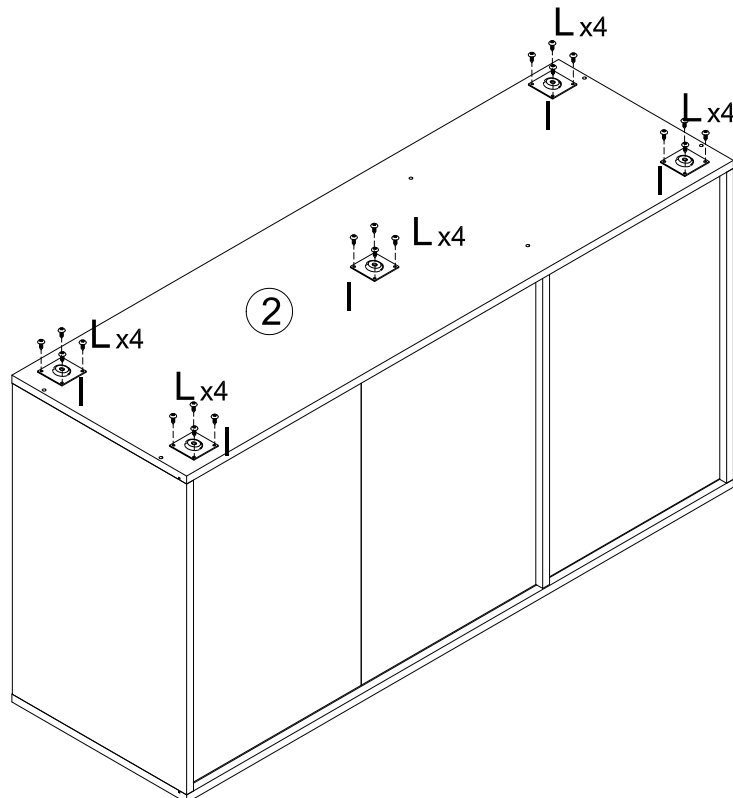



STEP 8

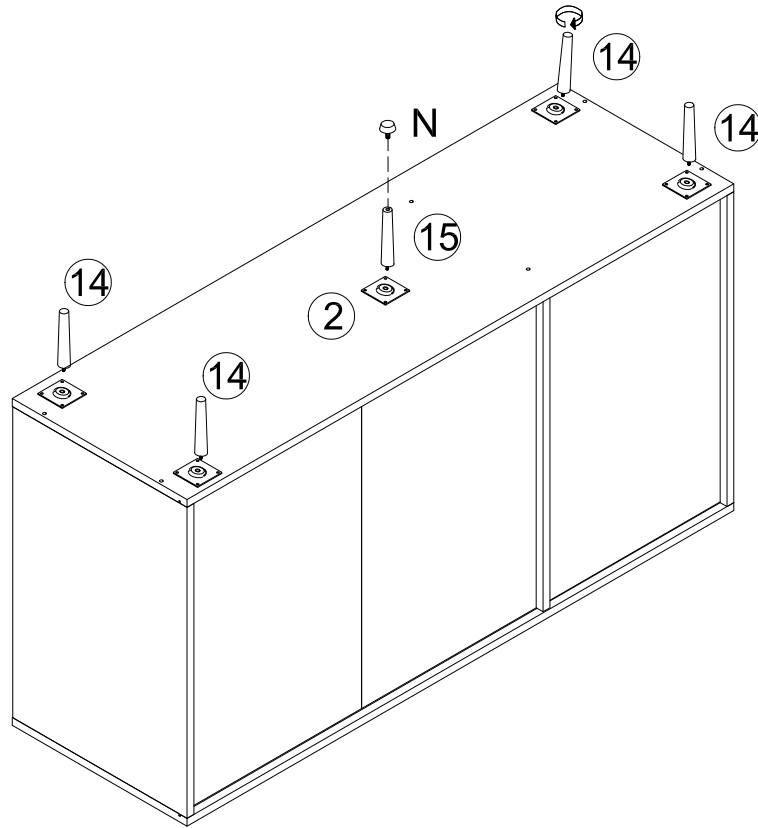

STEP 9

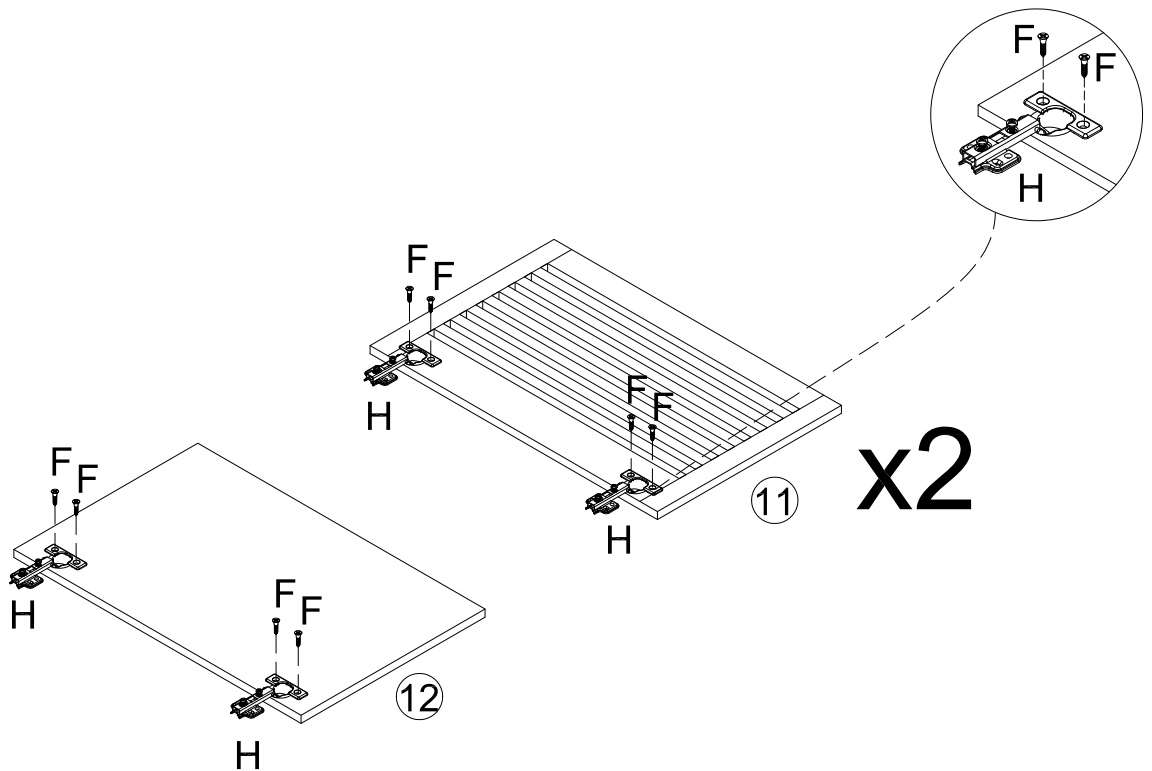


STEP 10

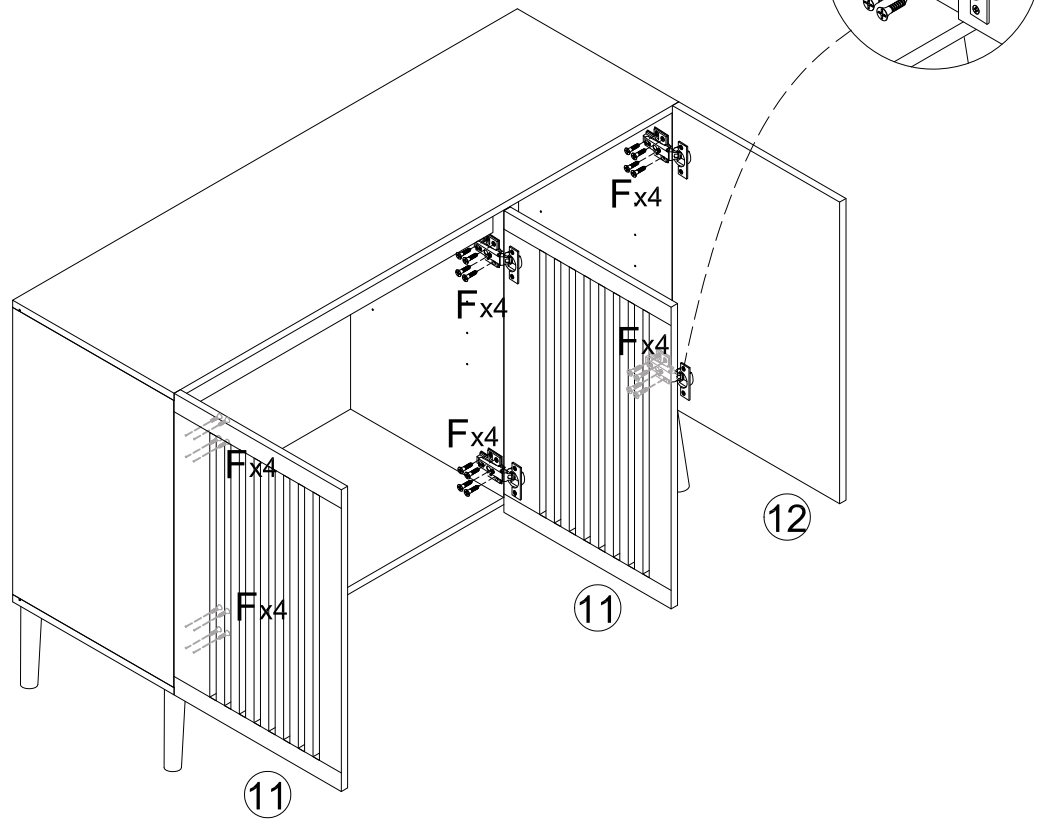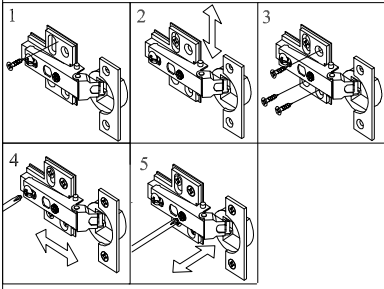


Fx24
 $\varnothing 3.5 \times 14 \text{ mm}$

STEP 11





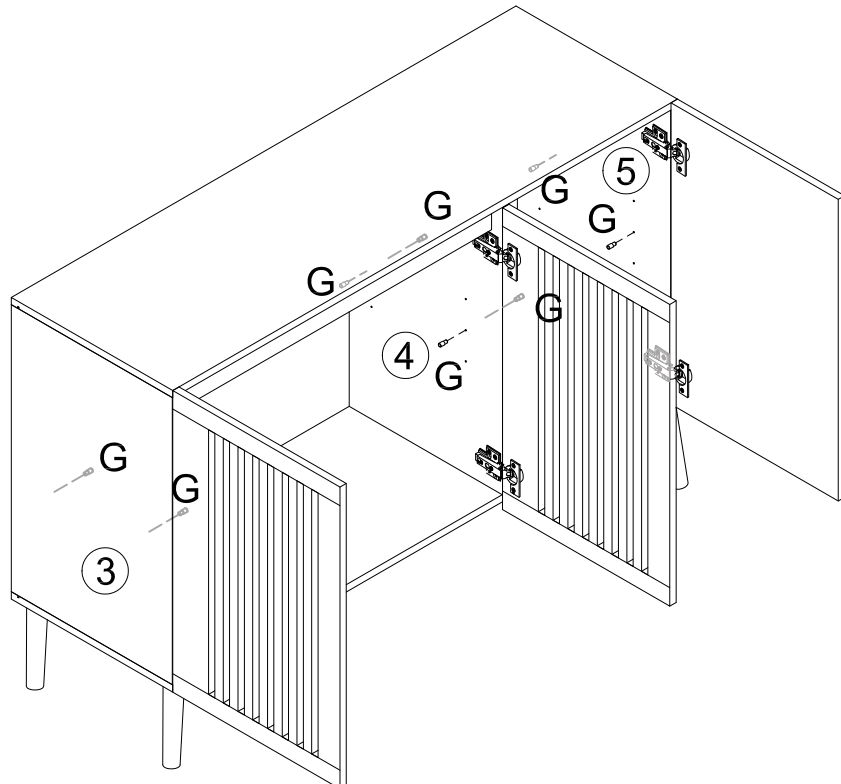


Gx8

STEP 12

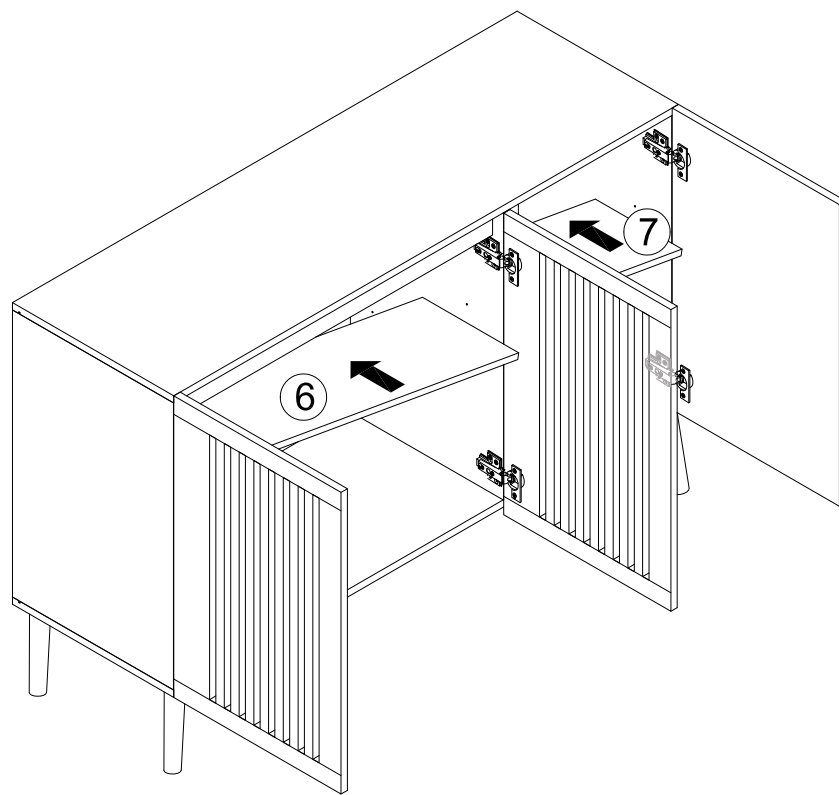

STEP 13

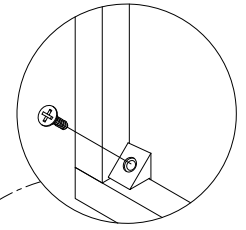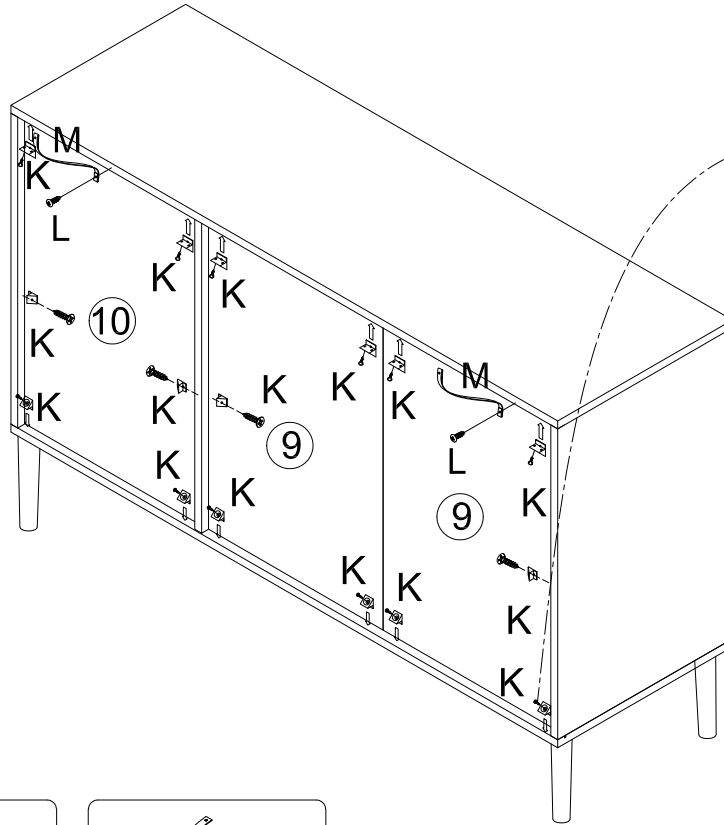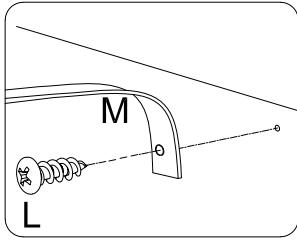

STEP 14

