

DESK

ASSEMBLY INSTRUCTION



ASSEMBLY INSTRUCTION


ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.













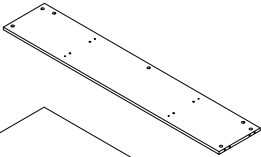

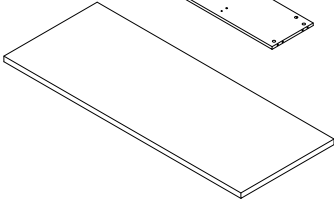





Warning !

- 1.Don't attempt to repair or modify parts that are broken or defective.Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.

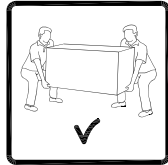


ASSEMBLY TIME PER UNIT: 40 MINUTES

PARTS IDENTIFICATION:

(A) LEFT SIDE PANEL		1 PC	(J) LEFT DRAWER LEFT SIDE PANEL		3 PCS
(B) LEFT DIVIDER PANEL		1 PC	(K) LEFT DRAWER RIGHT SIDE PANEL		3 PCS
(C) RIGHT DIVIDER PANEL		1 PC	(L) DRAWER BOTTOM PANEL		3 PCS
(D) RIGHT SIDE PANEL		1 PC	(M) RIGHT DRAWER FRONT PANEL		1 PC
(E) BOTTOM PANEL		2 PCS	(N) RIGHT DRAWER BACK PANEL		1 PC
(F) BACK PANEL		1 PC	(O) RIGHT DRAWER LEFT SIDE PANEL		1 PC
(G) TOP PANEL		1 PC	(P) RIGHT DRAWER RIGHT SIDE PANEL		1 PC
(H) LEFT DRAWER FRONT PANEL		2 PCS	(Q) MIDDLE DRAWER FRONT PANEL		1 PC
(I) LEFT DRAWER BACK PANEL		2 PCS	(R) MIDDLE DRAWER BACK PANEL		1 PC

PARTS IDENTIFICATION:

(S) MIDDLE DRAWER BOTTOM PANEL

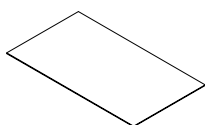


1 PC

(T) DRAWER SUPPORT




1 PC

(U) METAL FRAME

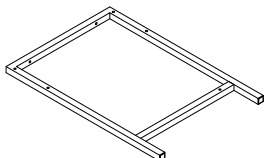

2 PCS

(V) CROSS BAR

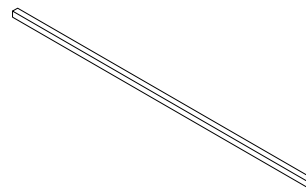


1 PC

Z	HARDWARE PACKAGE						
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	8	SCREW $\phi 3.5 \times 12 \text{mm}$ FOR RAIL		40 PCS
2	WOODEN DOWEL $\phi 8 \times 30 \text{mm}$		44 PCS	9	KNOB		4 PCS
3	CAM BOLT $\phi 7 \times 35.5 \text{mm}$		32 PCS	10	KNOB BOLT $\phi 4 \times 28 \text{mm}$		4 PCS
4	CAM LOCK $\phi 15 \times 12 \text{mm}$		32 PCS	11	BOLT M6x35mm		14 PCS
5	SCREW $\phi 4.5 \times 42 \text{mm}$		4 PCS	12	ALLEN WRENCH		1 PC
6	DRAWER SCREW $\phi 4.3 \times 35 \text{mm}$		17 PCS	13	STICKER $\phi 20 \text{mm}$		6 PCS
7	RAIL L = 350mm		4 SET				


Z7,Z8,Z9,Z10 not included in blister packaging.

ASSEMBLY INSTRUCTION


STEP 1 :

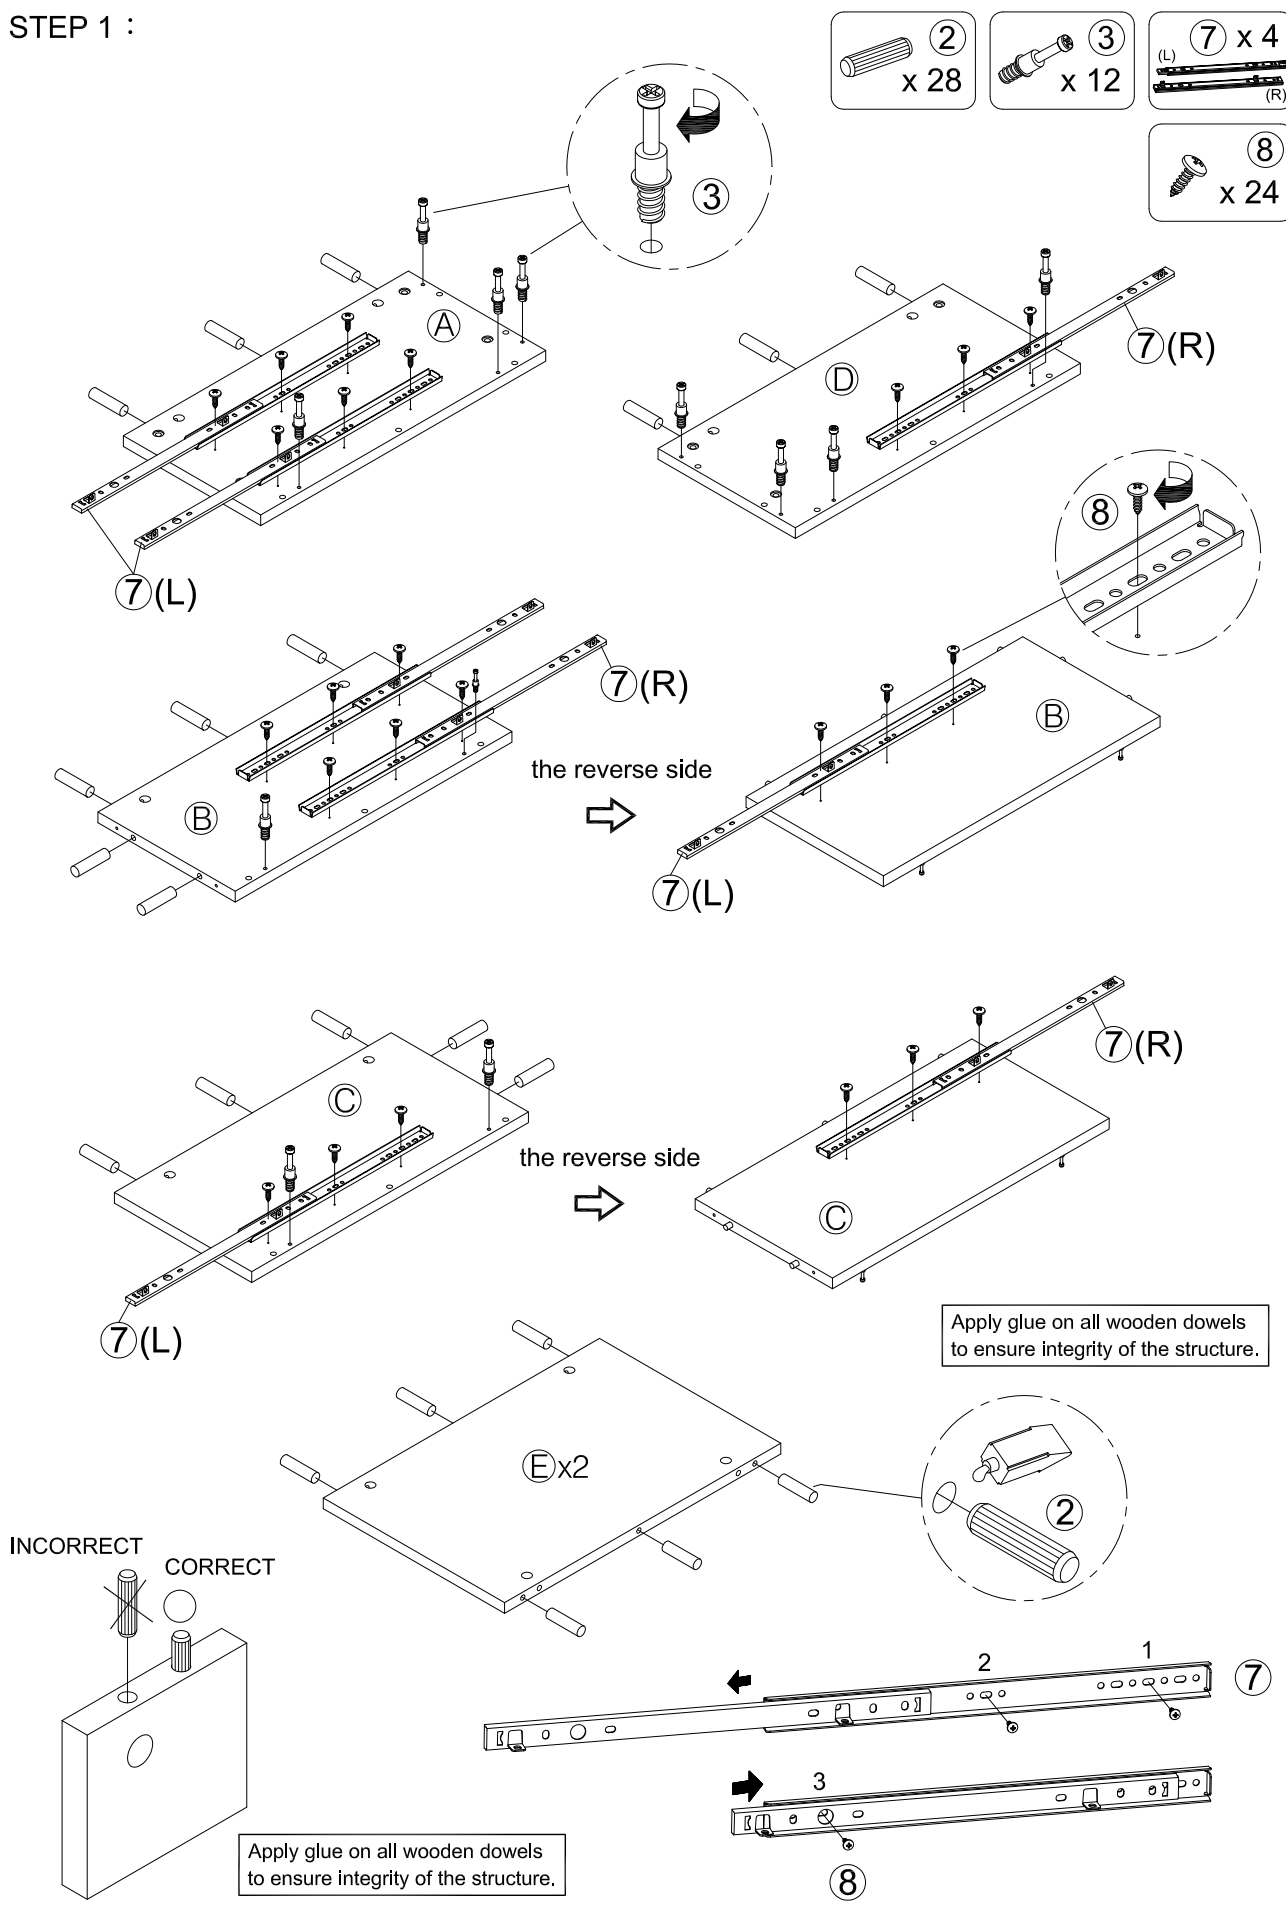



STEP 2 :

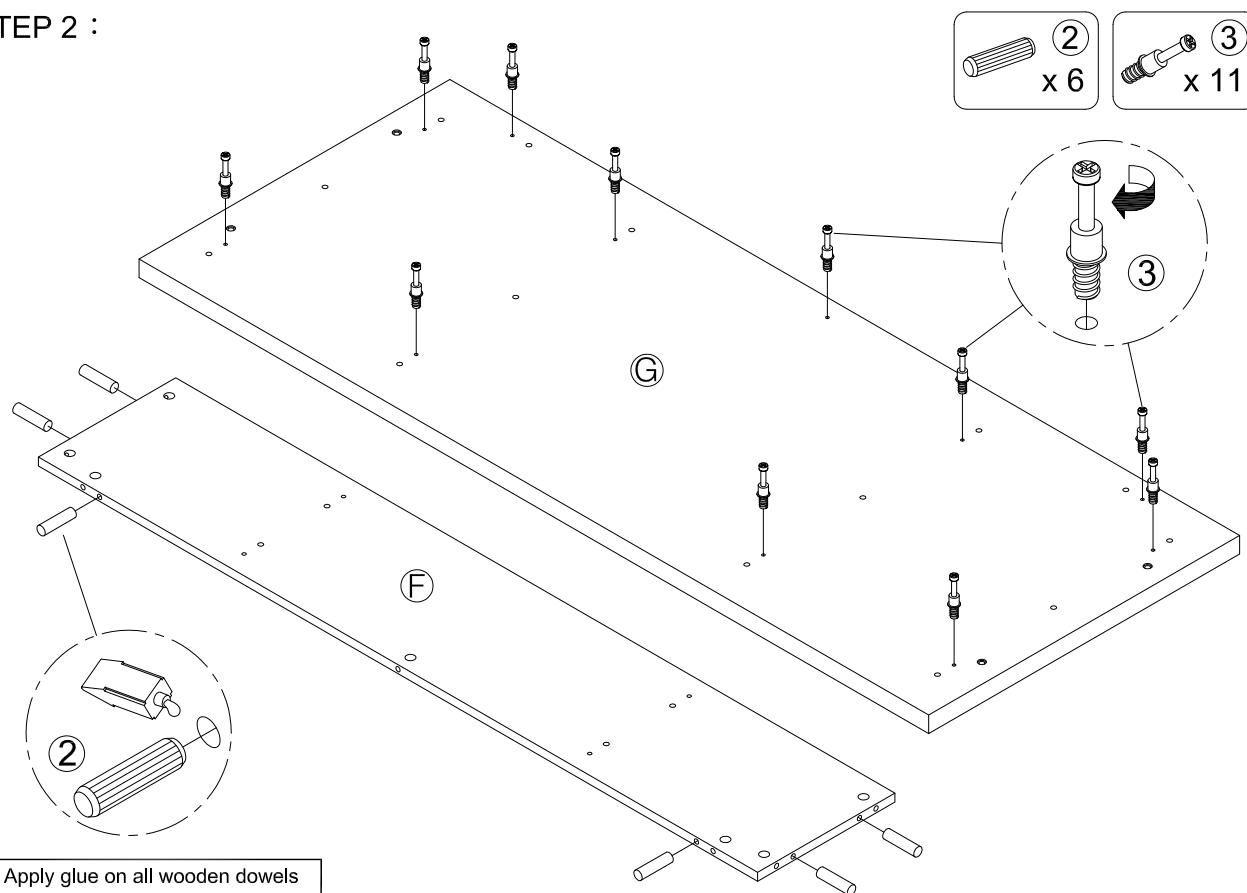


STEP 3 :

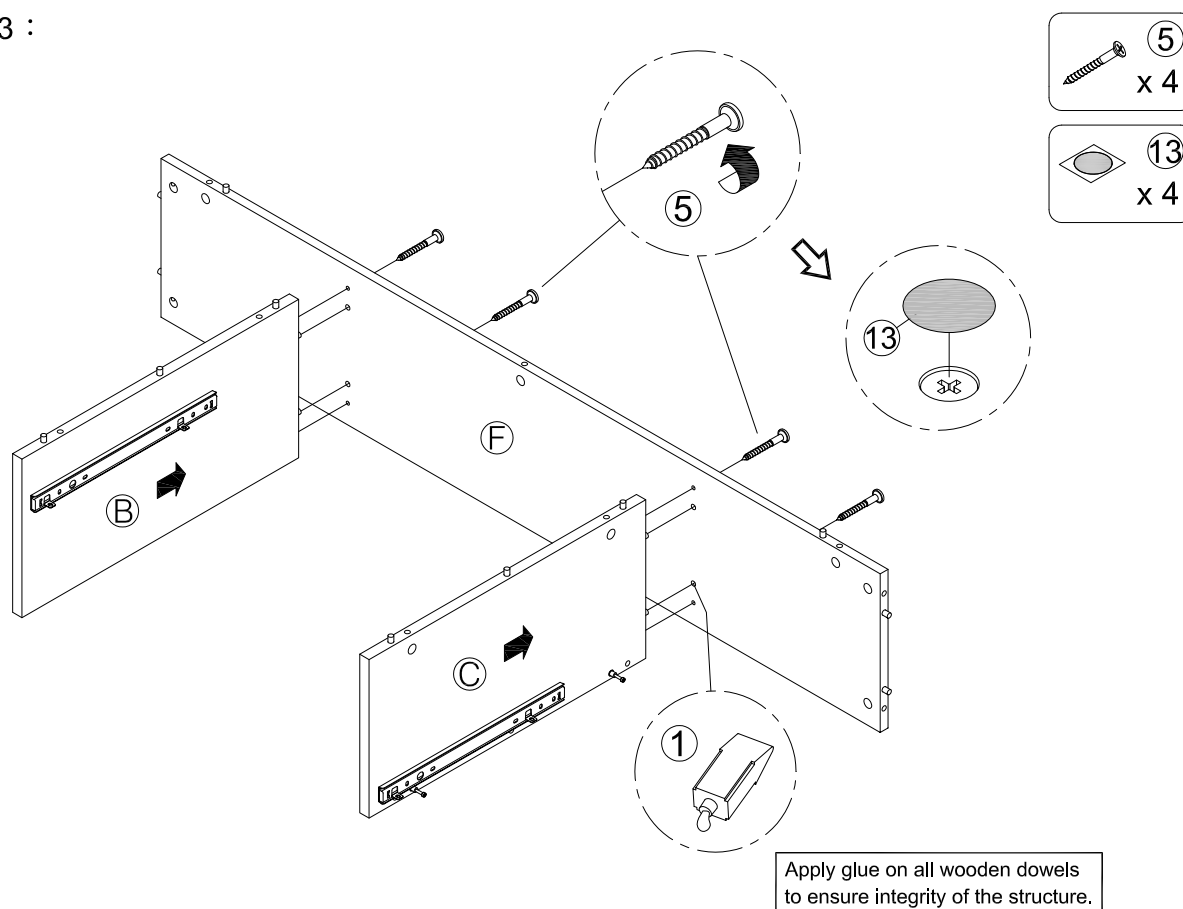



STEP 4 :

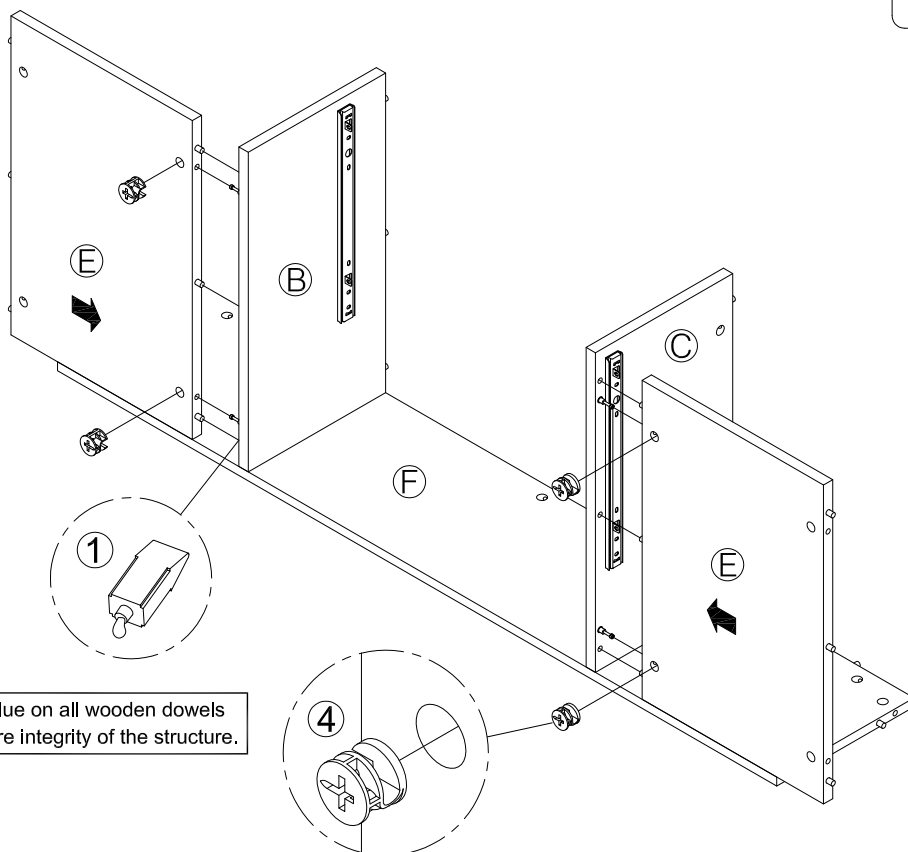

Apply glue on all wooden dowels to ensure integrity of the structure.

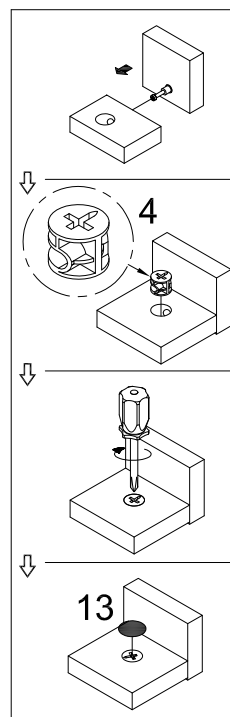


STEP 5 :

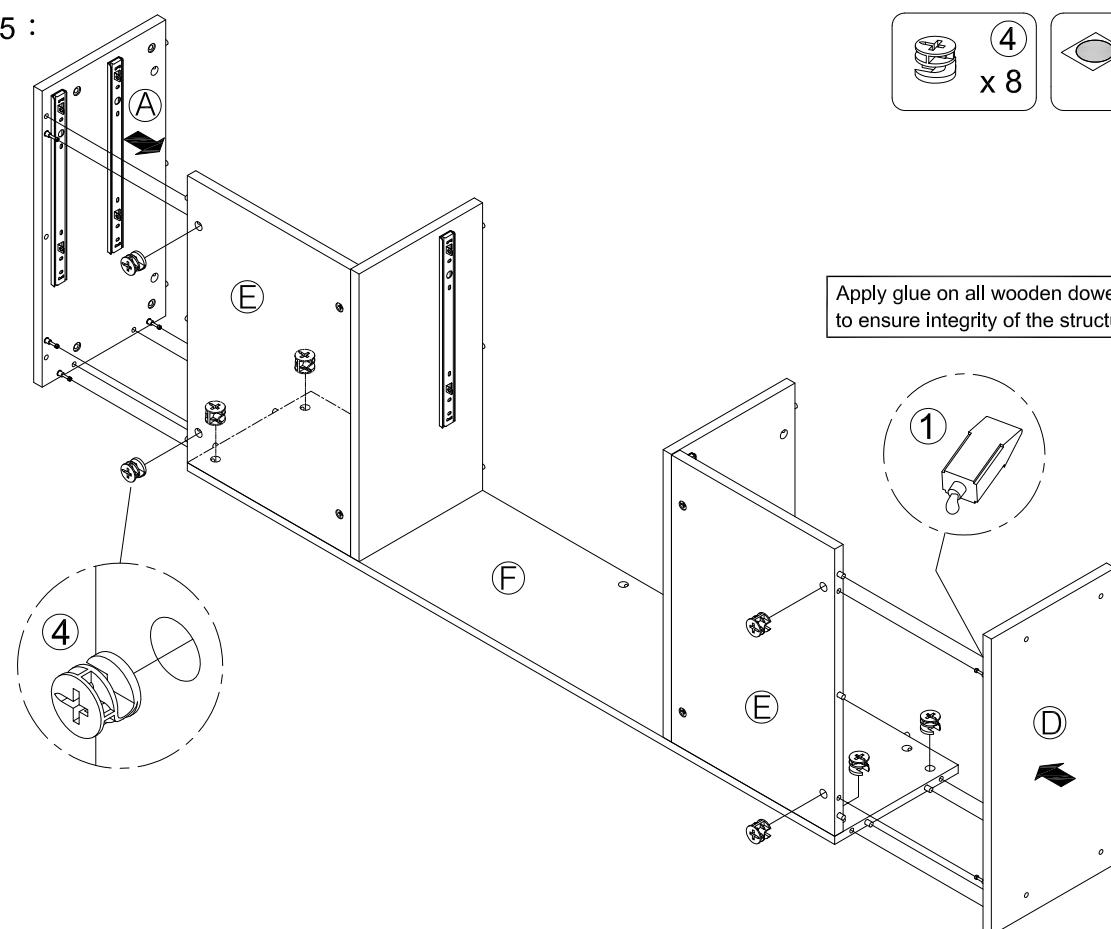



Apply glue on all wooden dowels to ensure integrity of the structure.





STEP 6 :

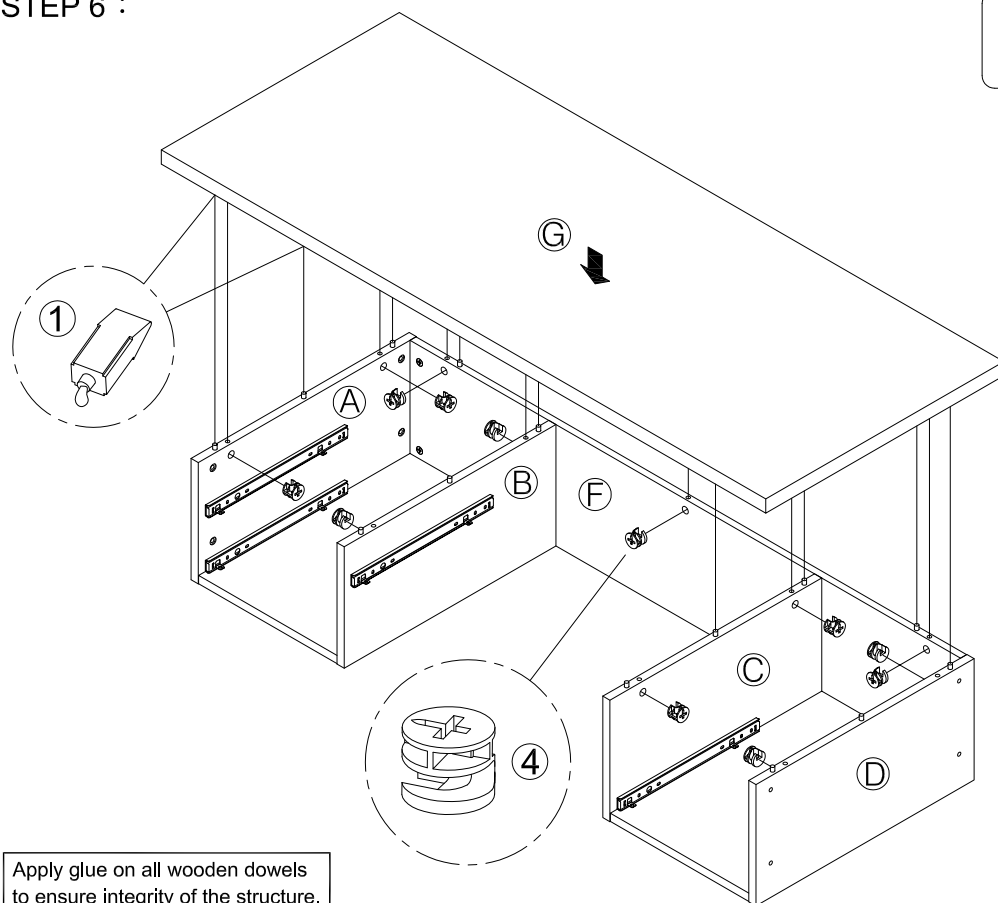


Apply glue on all wooden dowels to ensure integrity of the structure.

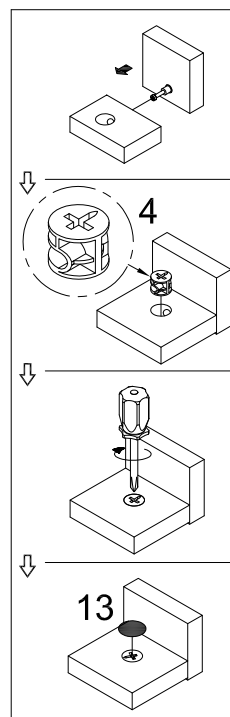


STEP 7 :

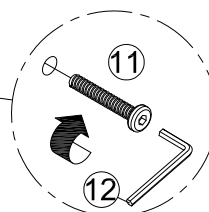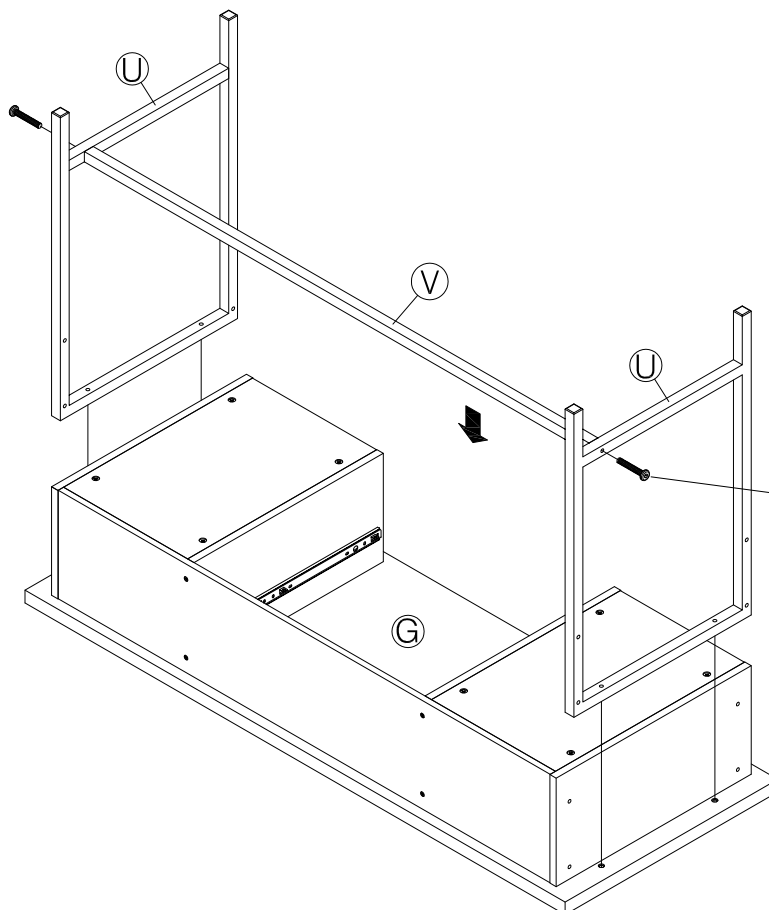


STEP 8 :

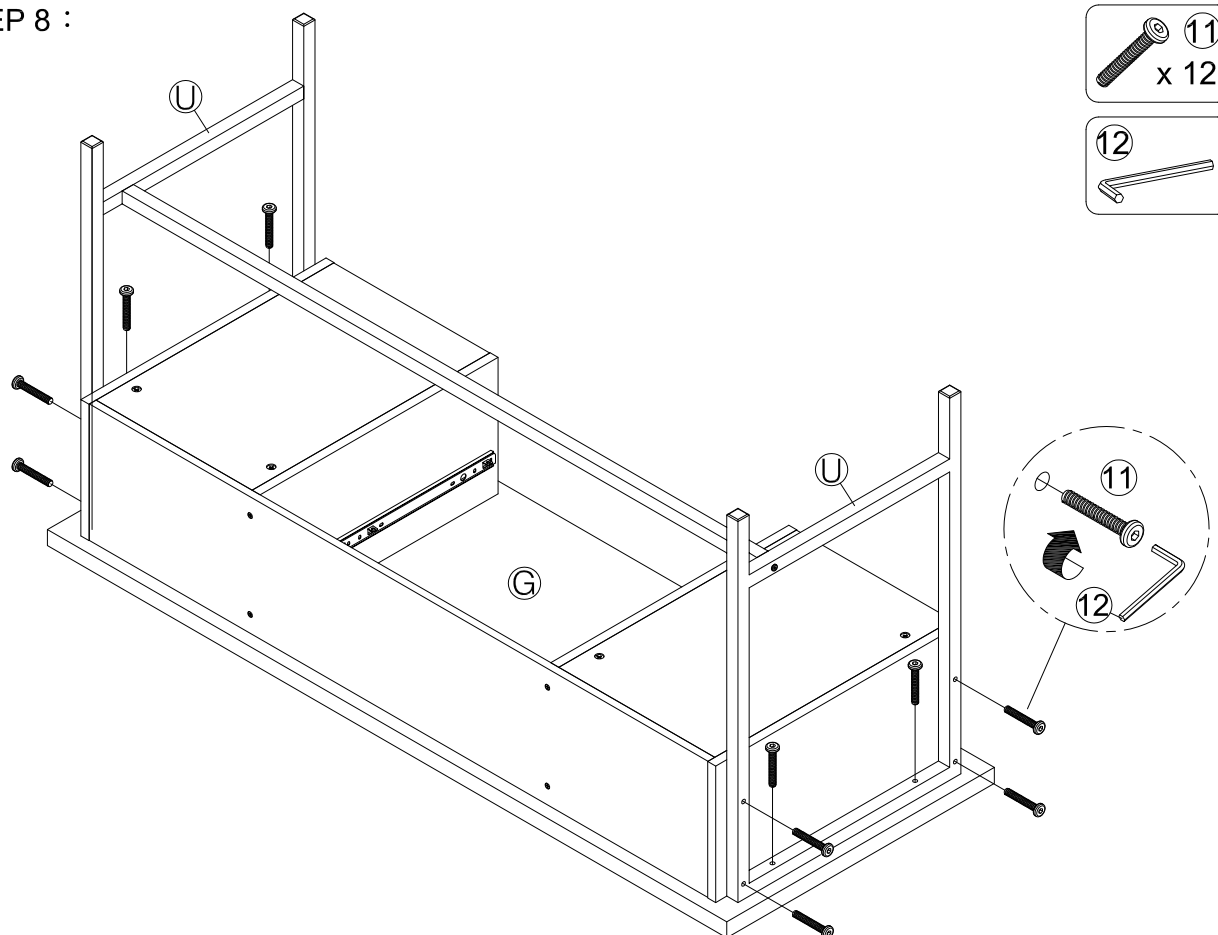


STEP 9-1 :

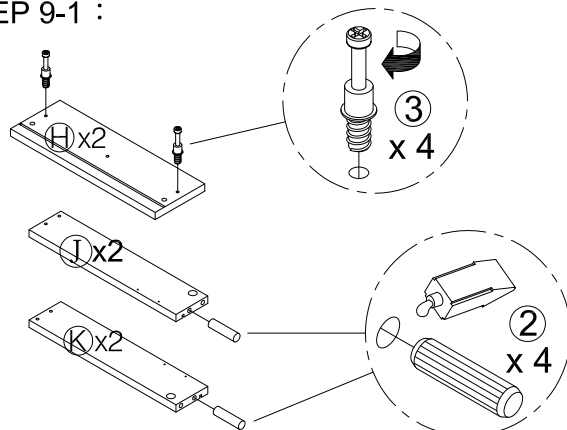


STEP 9-2 :

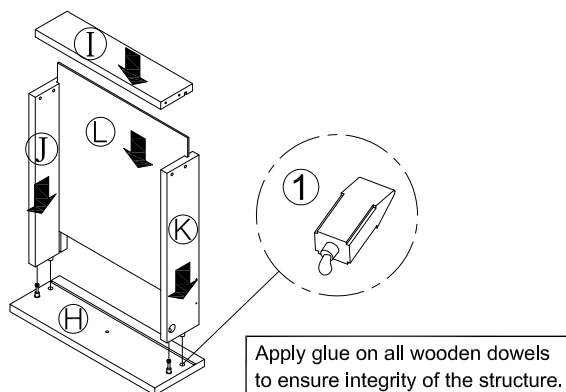


STEP 9-3 :

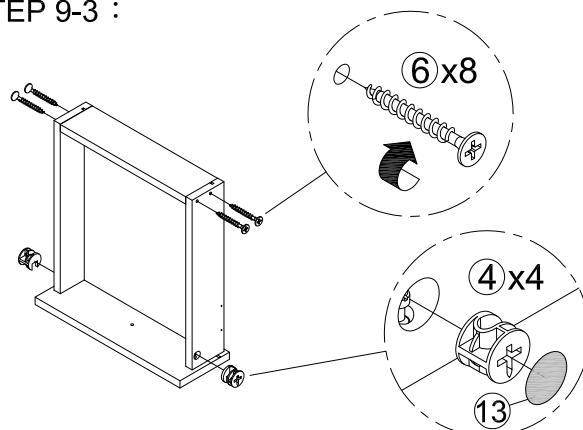


STEP 9-4 :

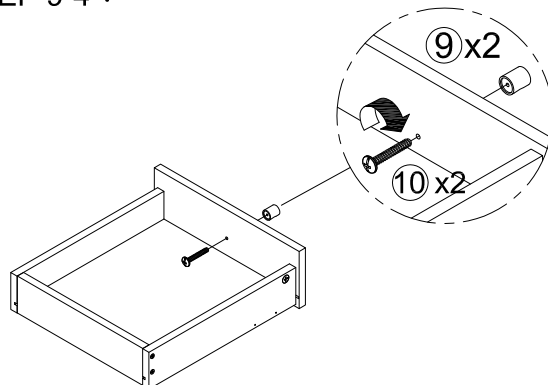


STEP 10-1 :

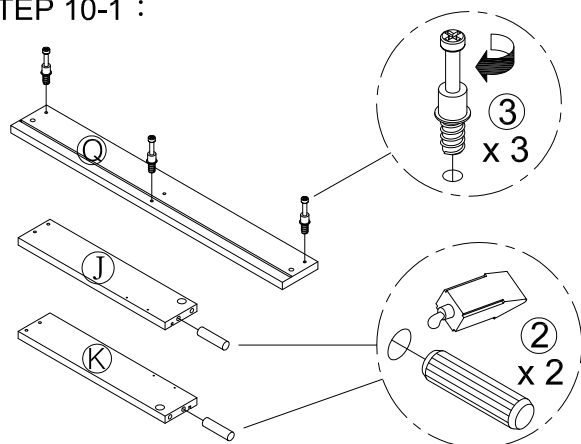


STEP 10-2 :

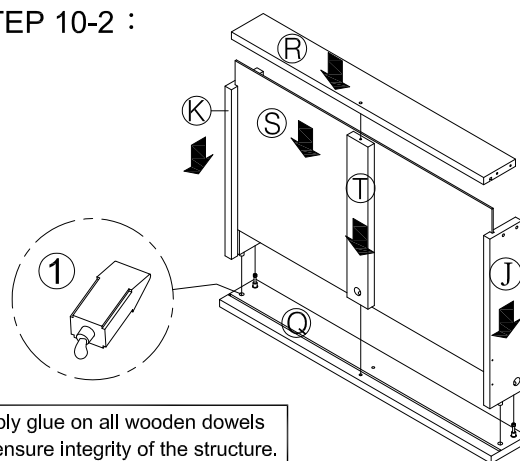


STEP 10-3 :

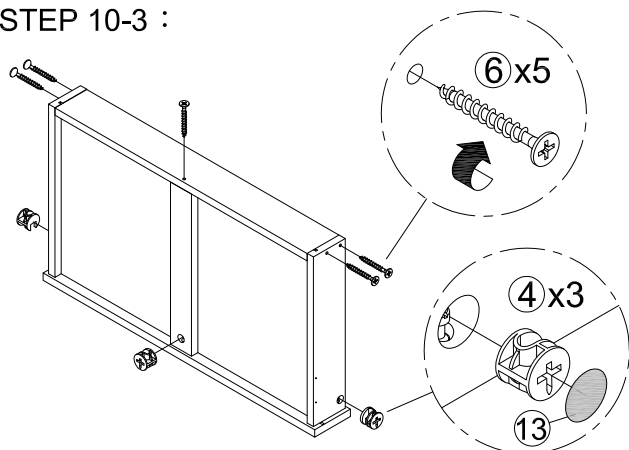


STEP 10-4 :

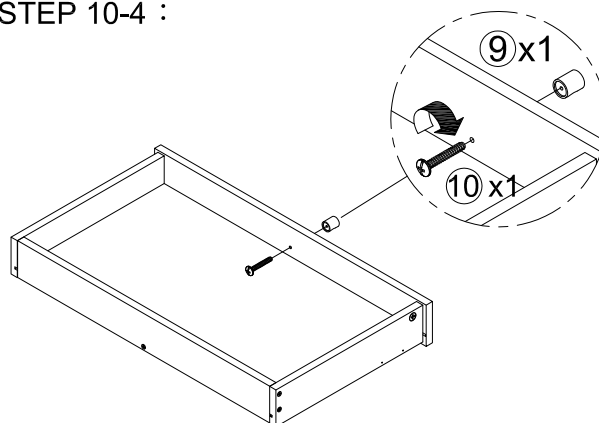


STEP 11-1 :

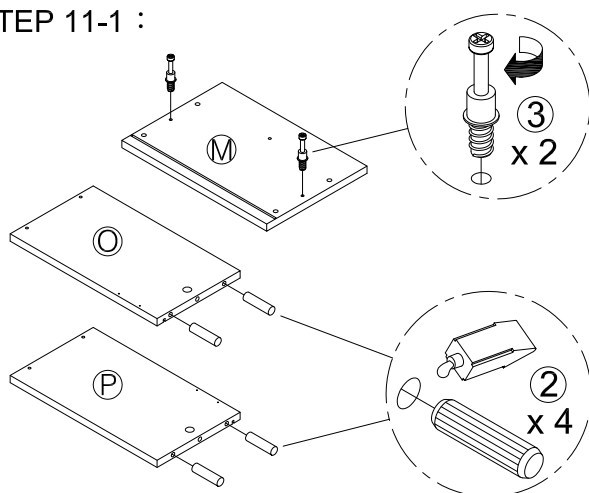


STEP 11-2 :

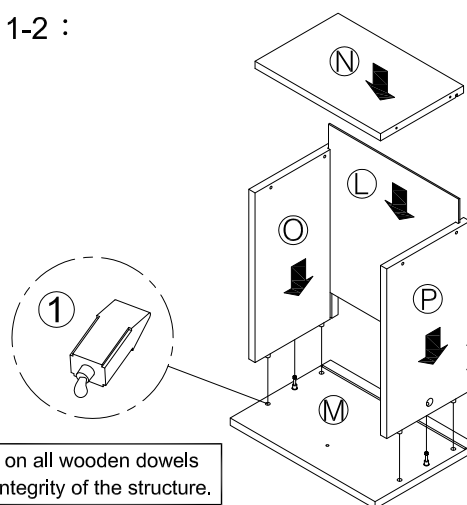



STEP 11-3 :

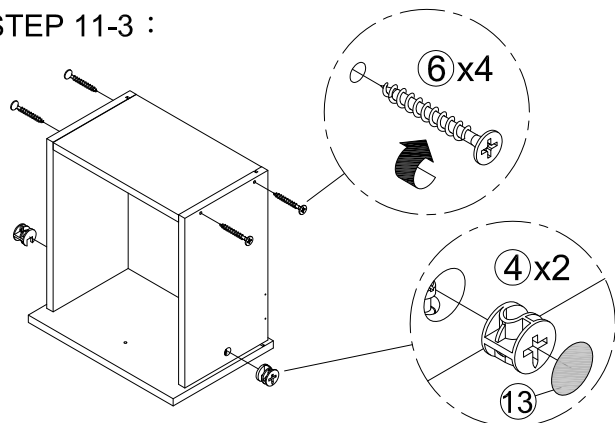

STEP 11-4 :

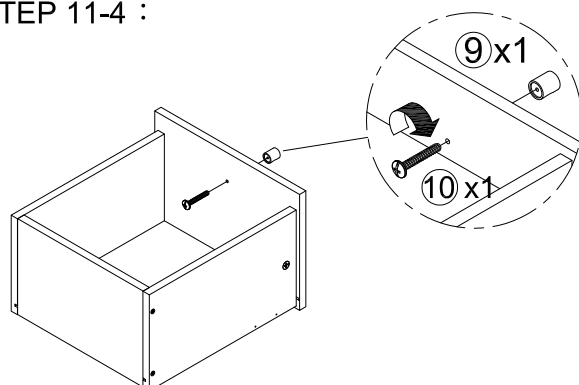

STEP 12 :

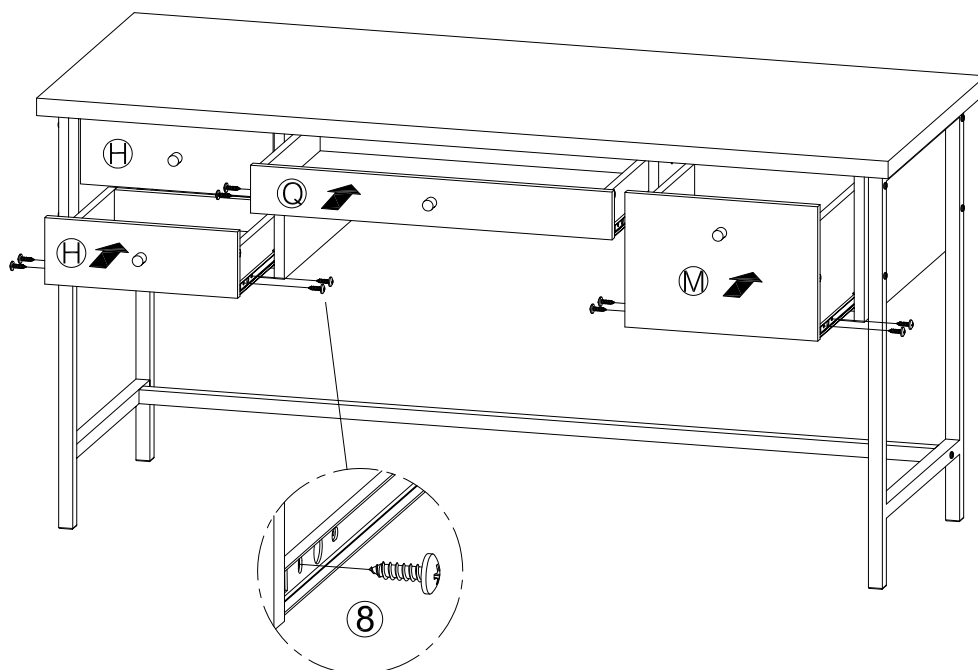

FINISH

