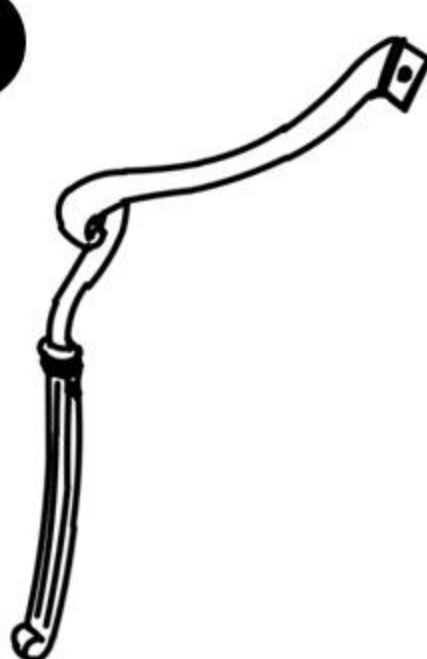
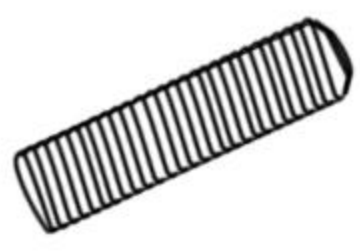
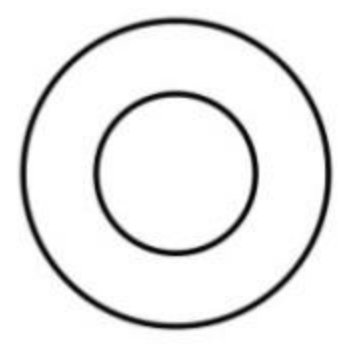
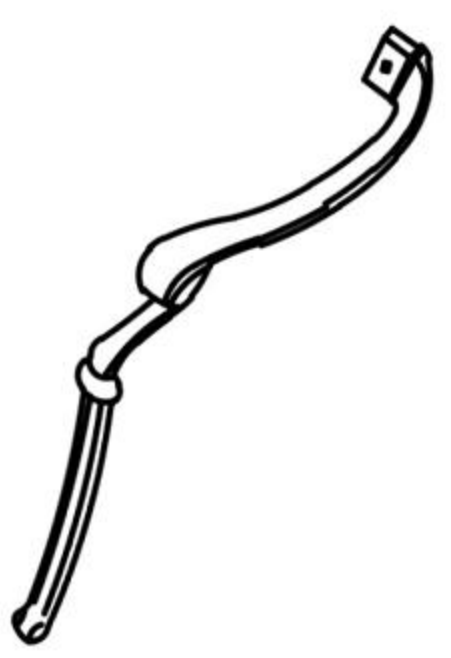
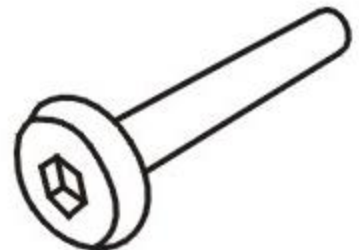
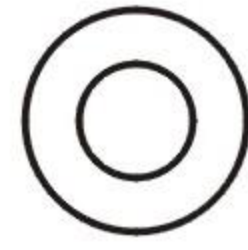
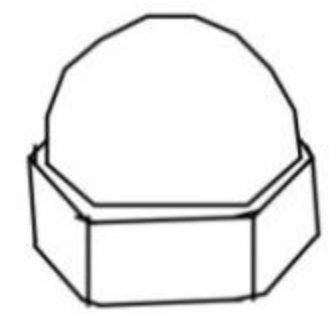
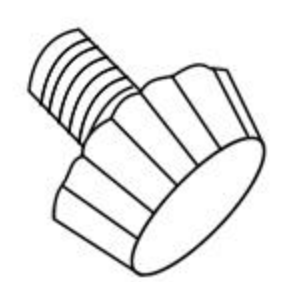


Assembly Instructions


1, Before installation, please confirm the type and quantity of all components.

2, Please install 50% of the screws first, wait until all the screws have been installed, and then install them all to 100%.

3, If you have any questions, please contact us through the platform email, we will reply within 24 hours and provide effective solutions.

A		C		E		F2		G		I		K		M	
Back*2pcs		Right-hand arm*2pcs		M8x35mm Closing screw*4pcs		M6x30mm Sleeve screw*8pcs		Big washer*4pcs		Nut*4pcs		Big Hex key*1pc		Wrench*1pc	
B		D		F1		F3		H		J		L		N	
Seat*2pcs		Left-hand arm*2pcs		M6x40mm Sleeve screw*8pcs		M6x16mm Flat head screw*16pcs		Small washer*16pcs		Cover*4pcs		Small Hex key*1pc		Spare feet screw*4pcs	

Email : support@ailisforest.com

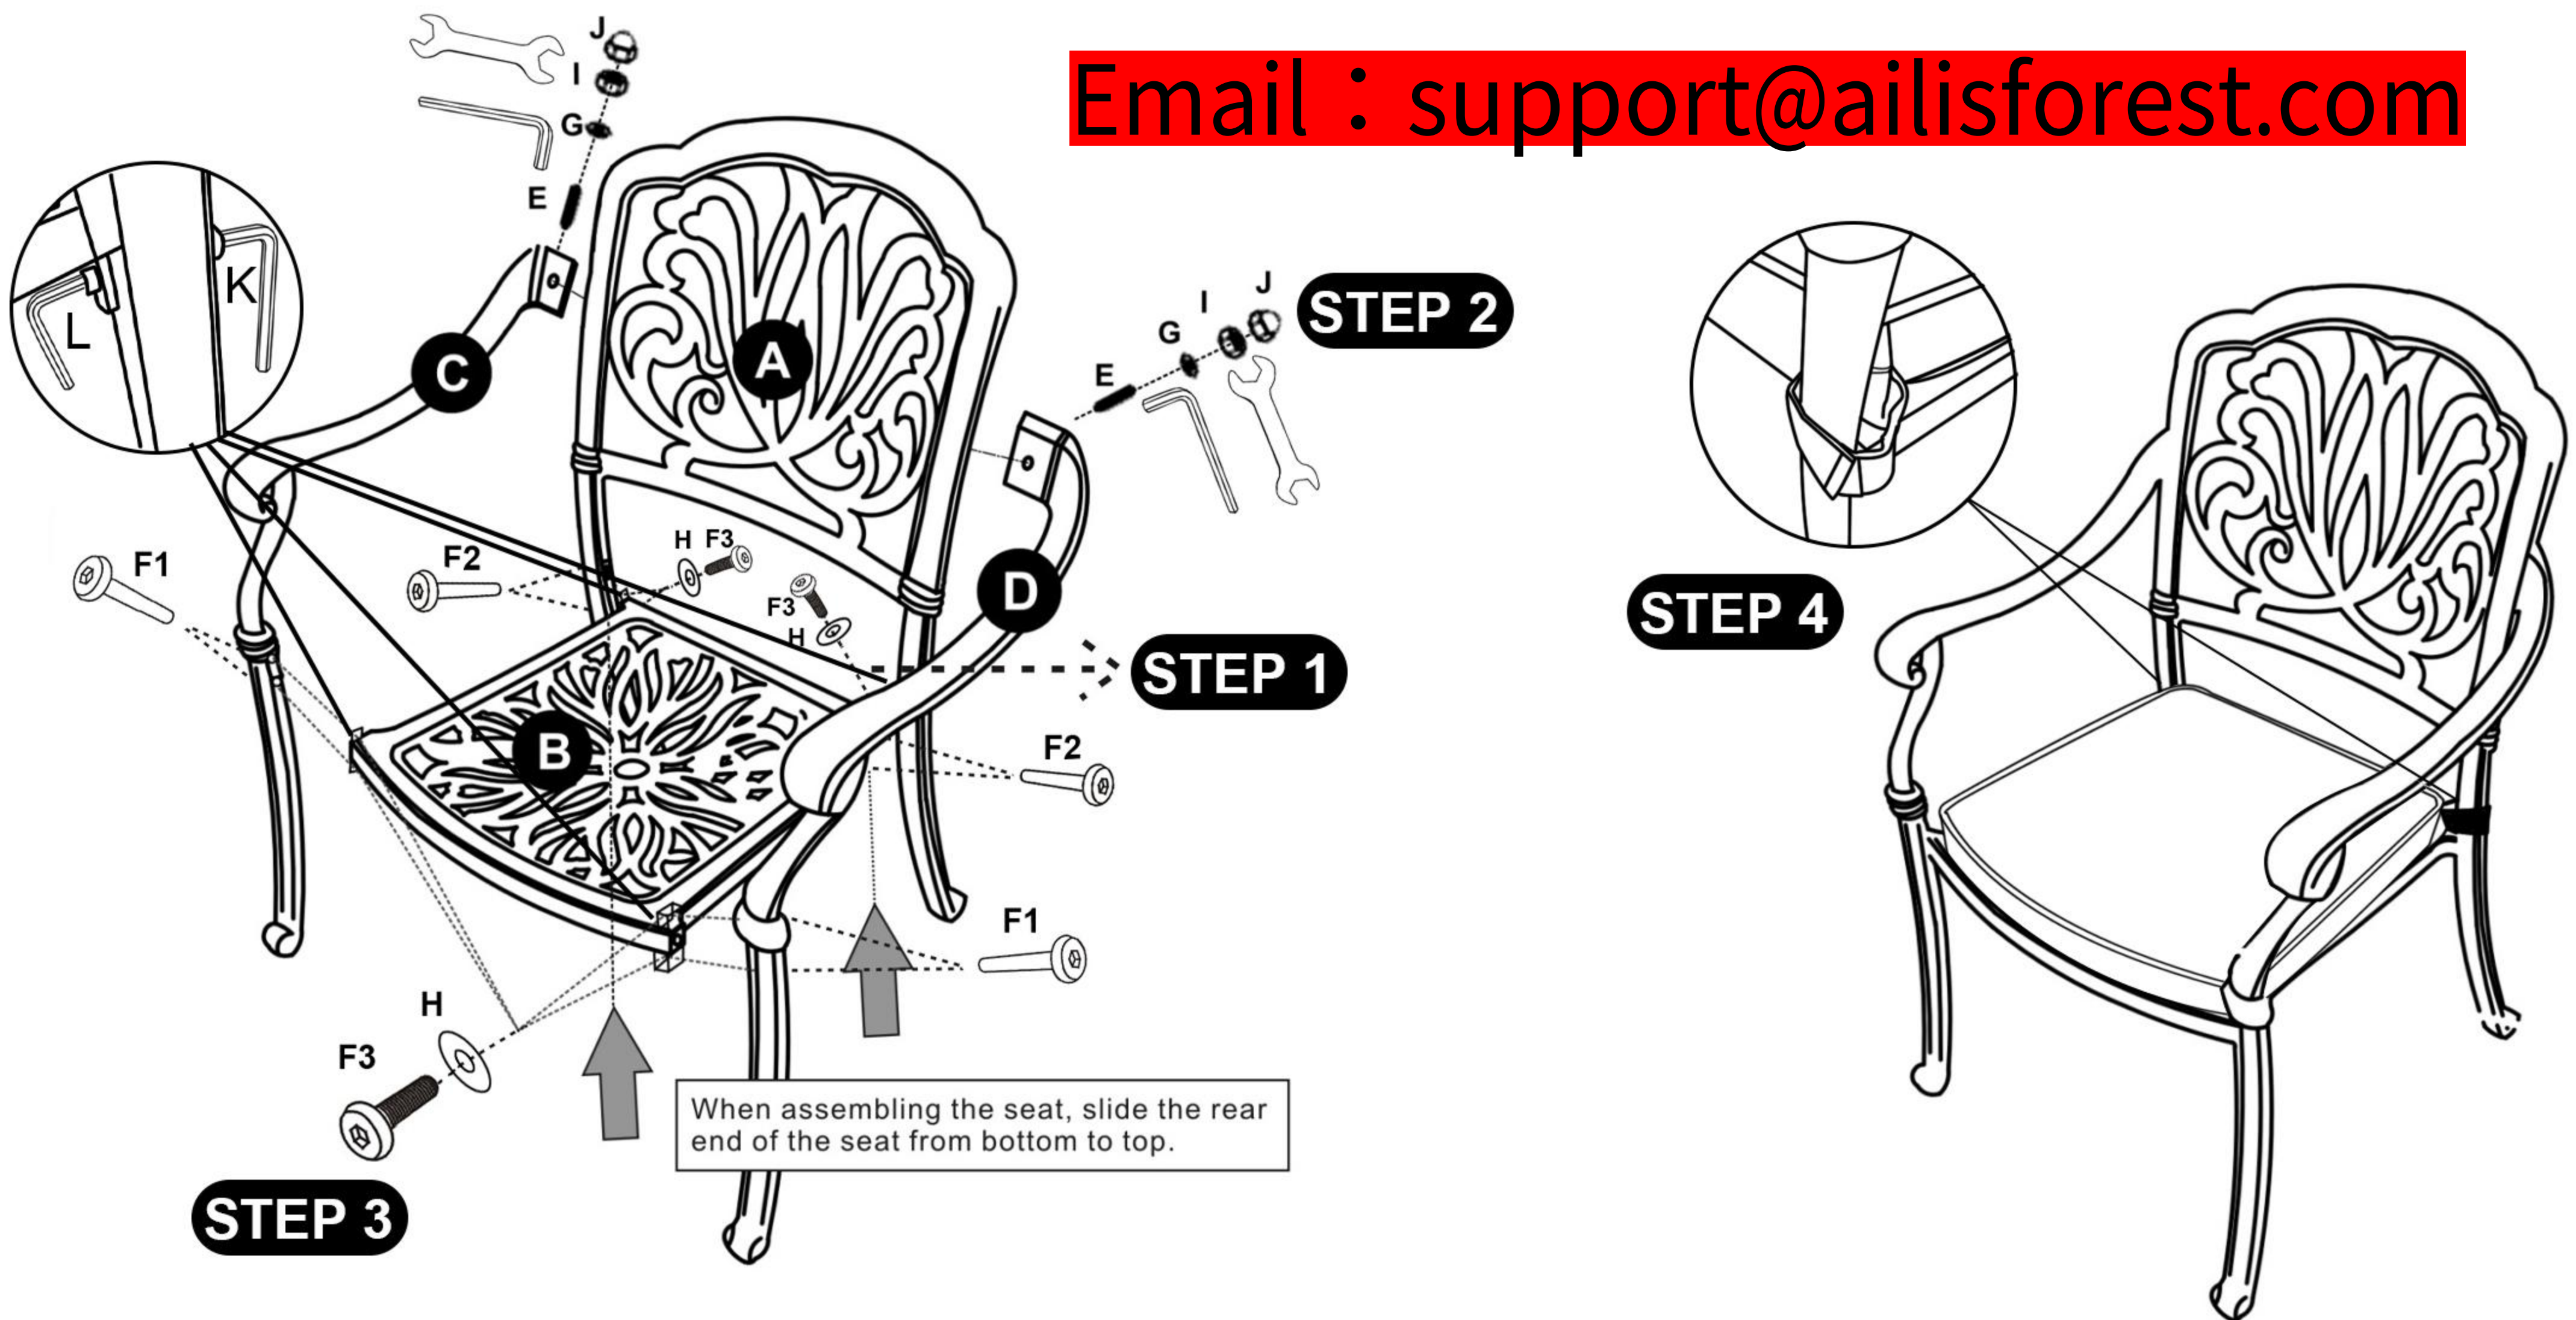

STEP 1:

Please connect the back and seat, Pay attention to the front and back of the seat, the curved side is towards the front of the chair. F2 is installed on the outside, F3+H is installed on the inside, and the screws are tightened by 50%.

STEP 2:

Please connect the backrest and armrest, please note that the closed screw (E) is installed with the hollow end facing outwards, which is convenient to tighten with Small Hex key(L), and only tighten 50% of the same.

STEP 3:

Please connect the armrest and the seat, F1 is installed on the outside of the armrest, and F3+H is installed on the inside of the armrest. With all the screws in place, you can now tighten them all to 100%.

STEP4:

Please place the cushion on the seat with the two velcro straps facing inwards on the cushion to secure the cushion.