



Installation & Assembly

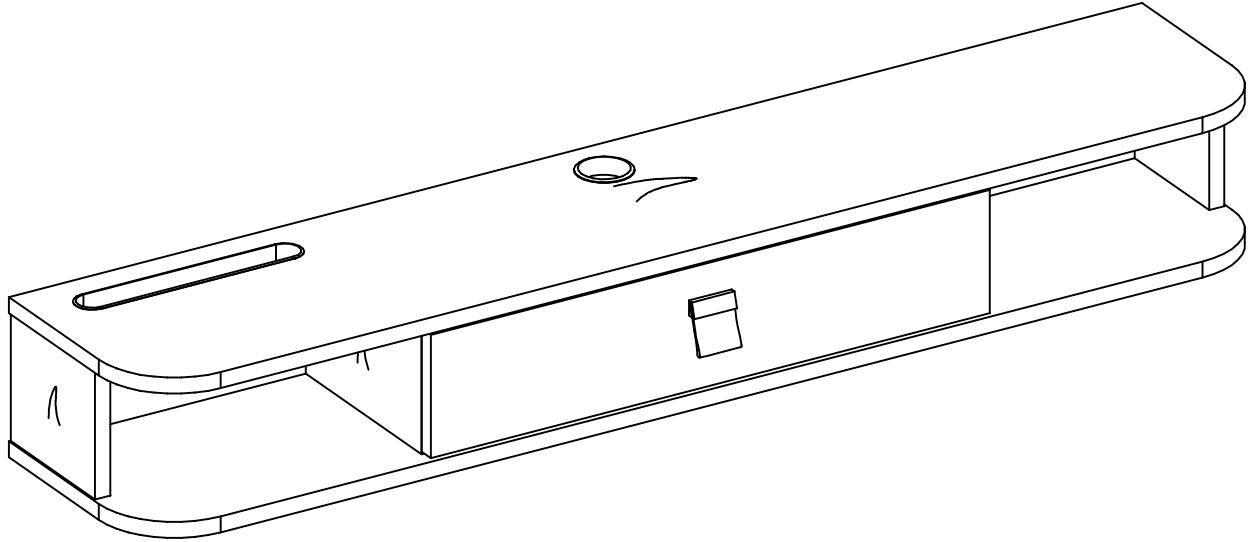

1. For solid brick walls, load-bearing walls, and fired hollow brick walls, we are equipped with 10mm wall fittings



1001





1002

2. If it is a wooden wall (the thickness of the wooden board needs to be at least 15 mm), you need to buy automatic screws locally.





15mm



Adjust left











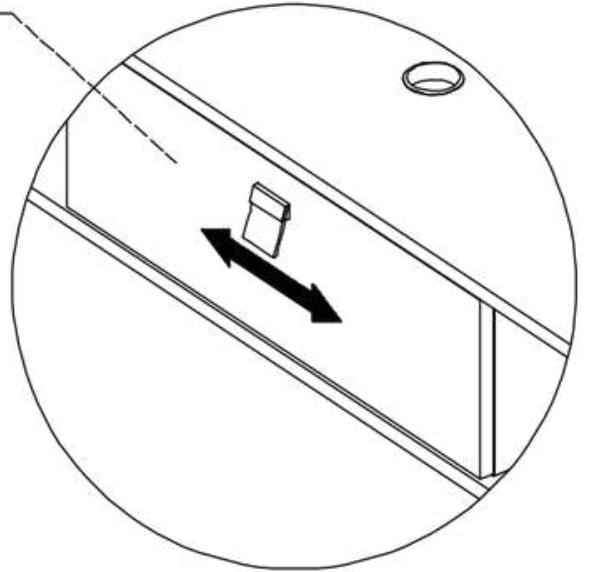
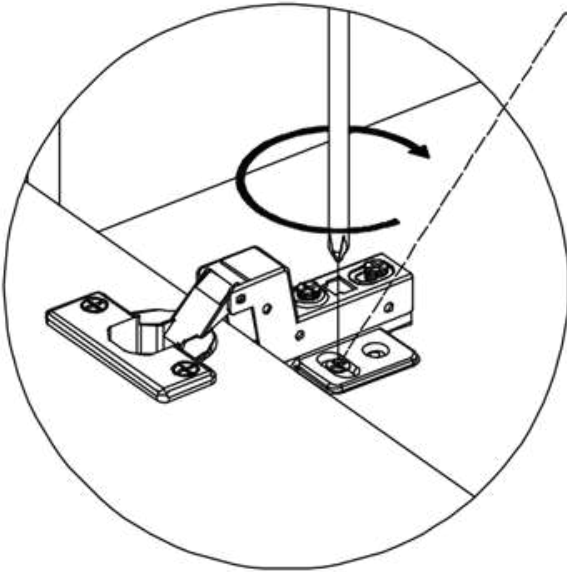


Adjust Height

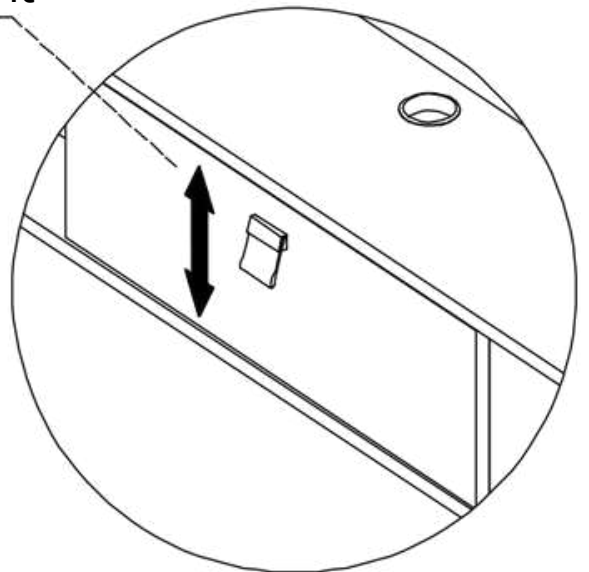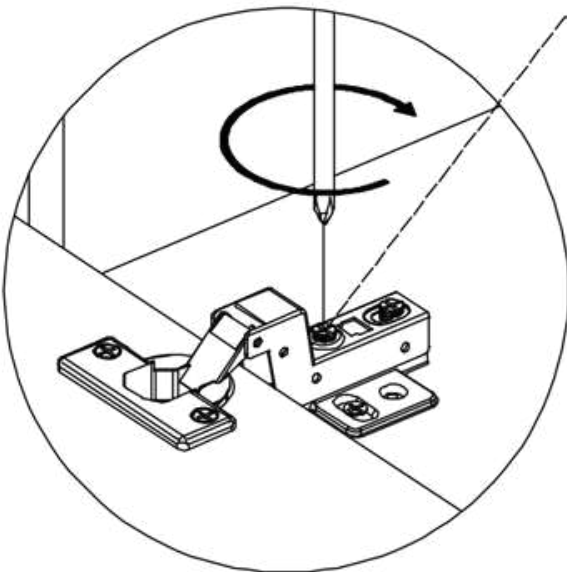


Adjust front

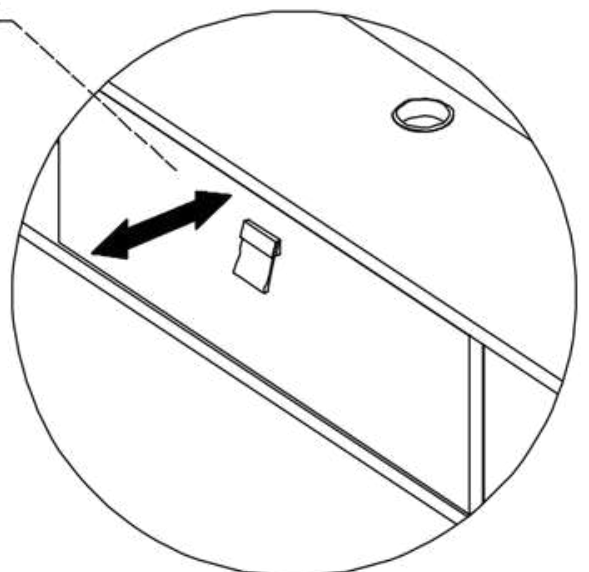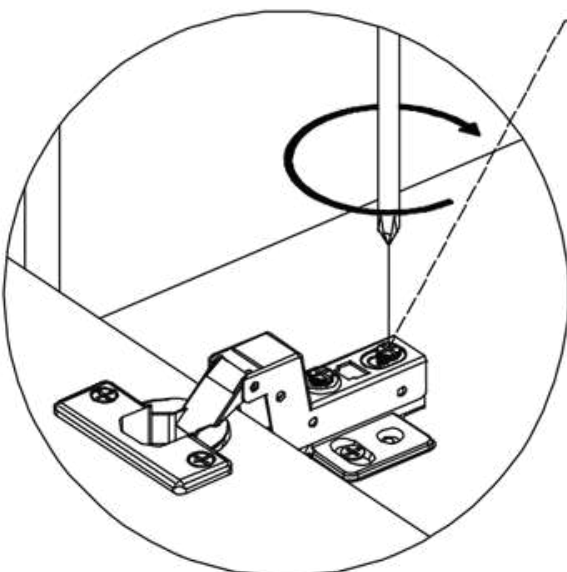


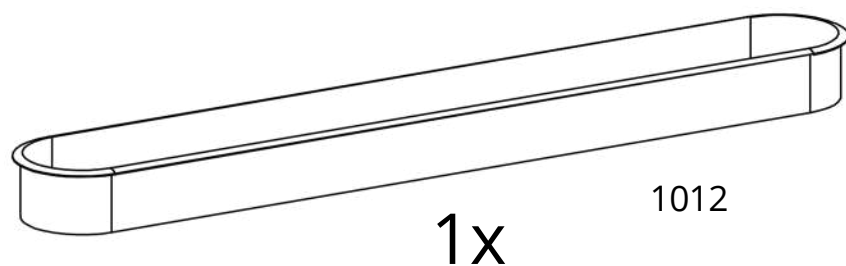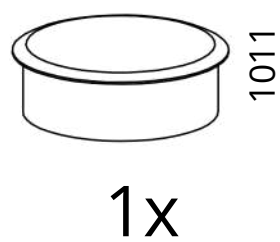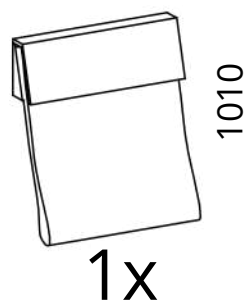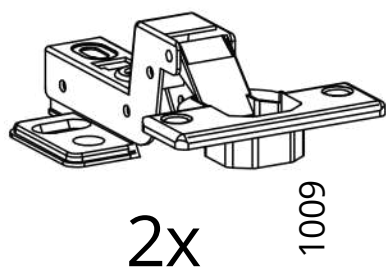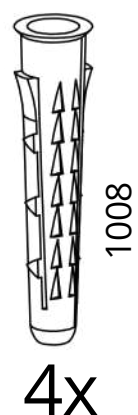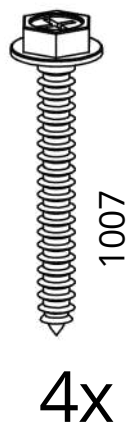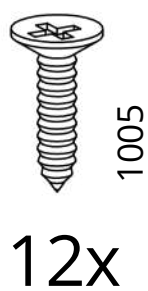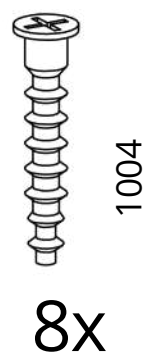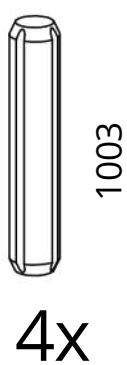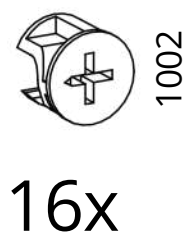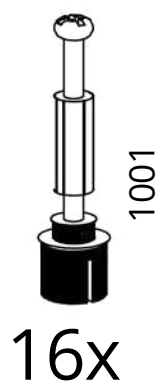


1

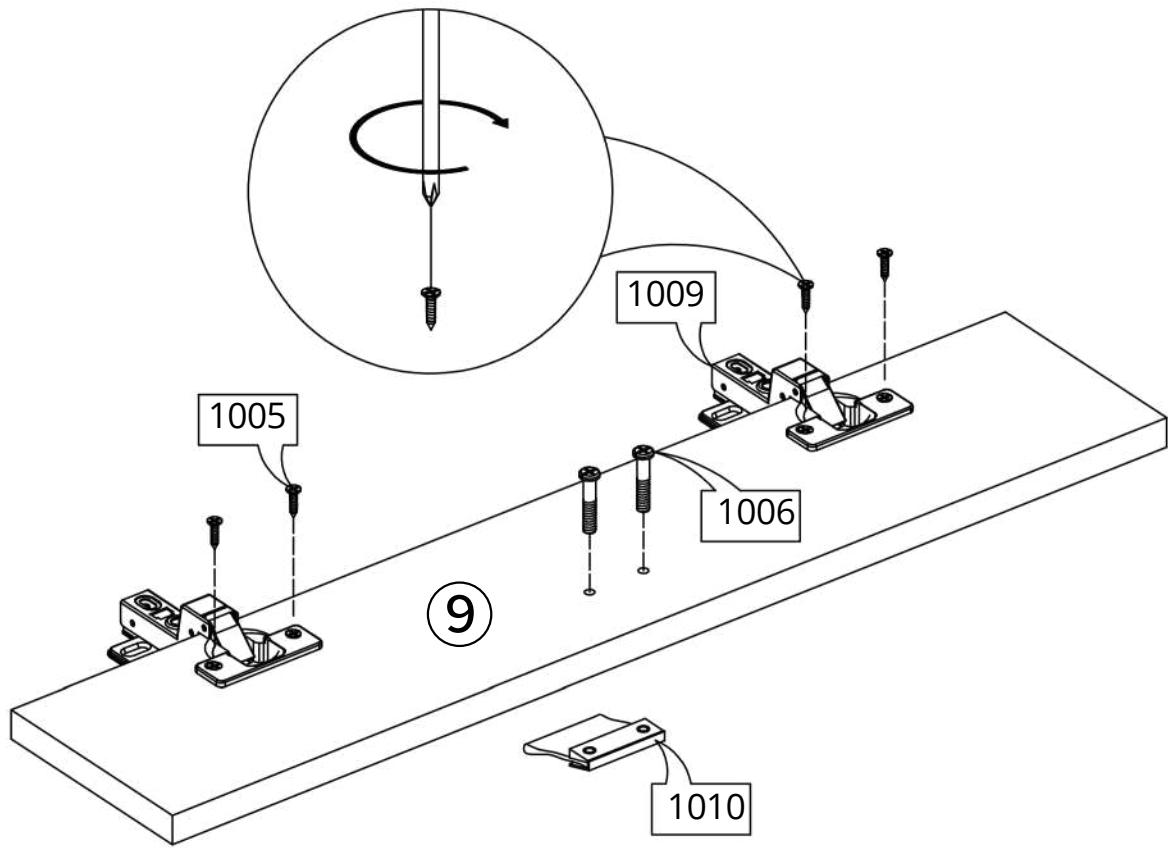


2

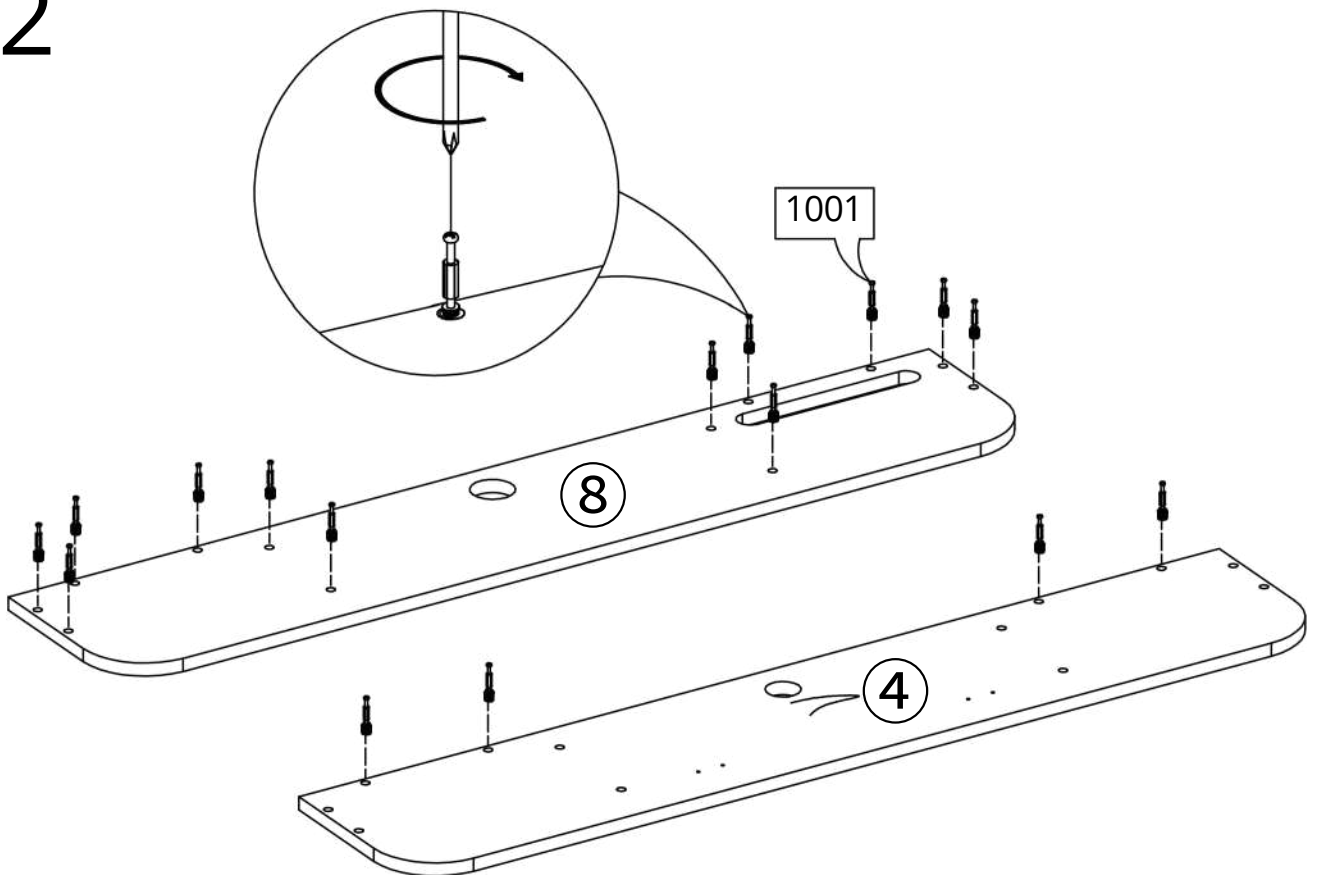


3

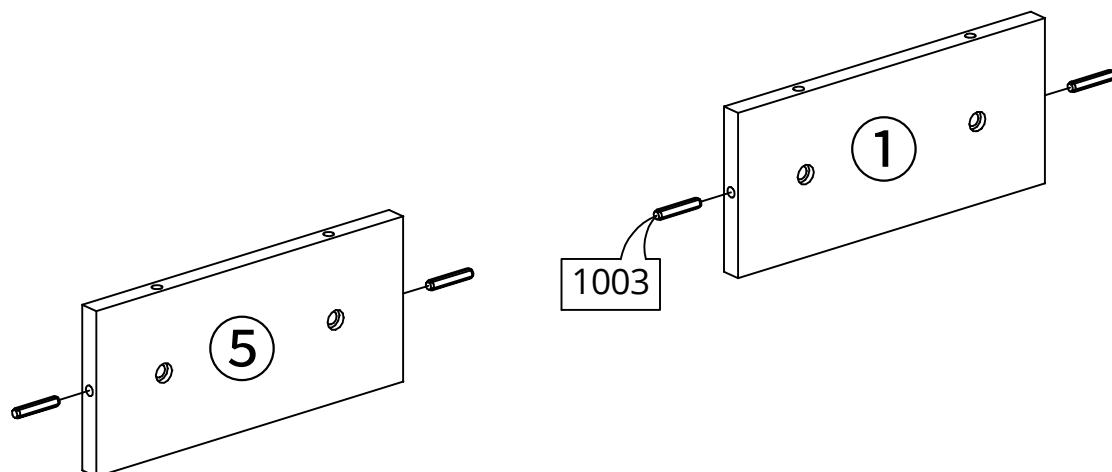


4

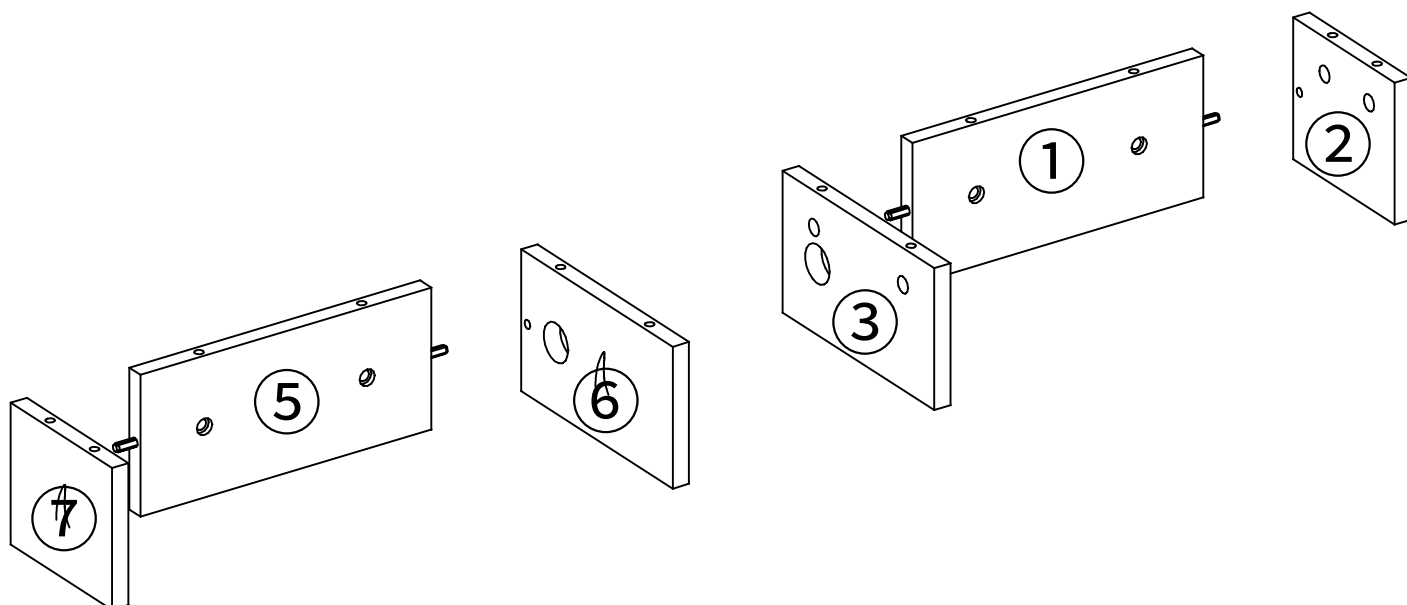


5

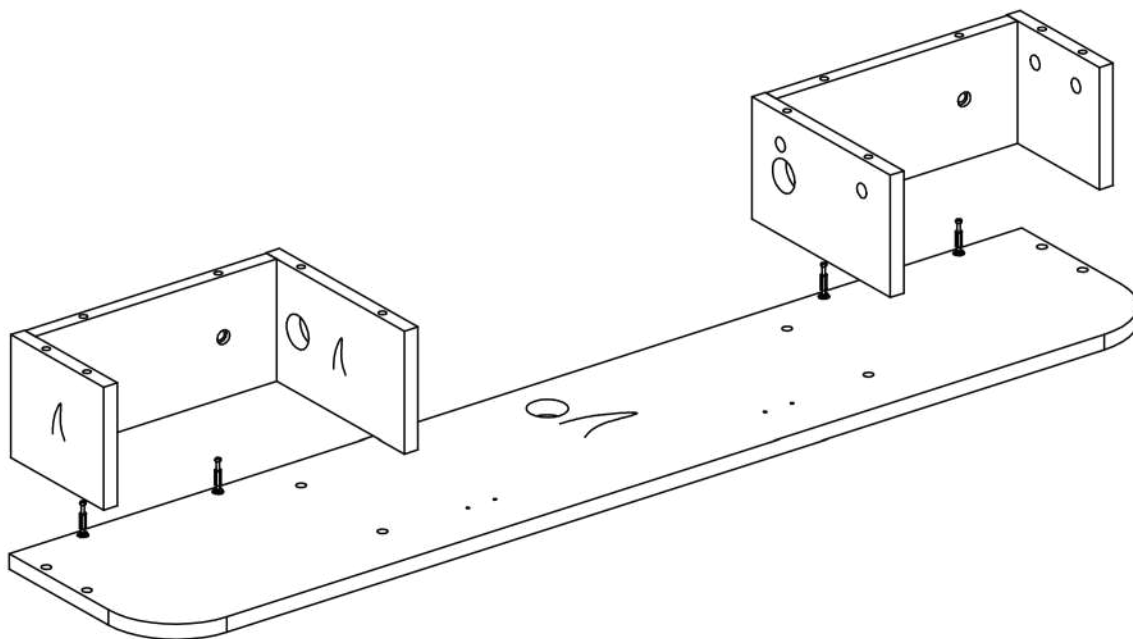


6

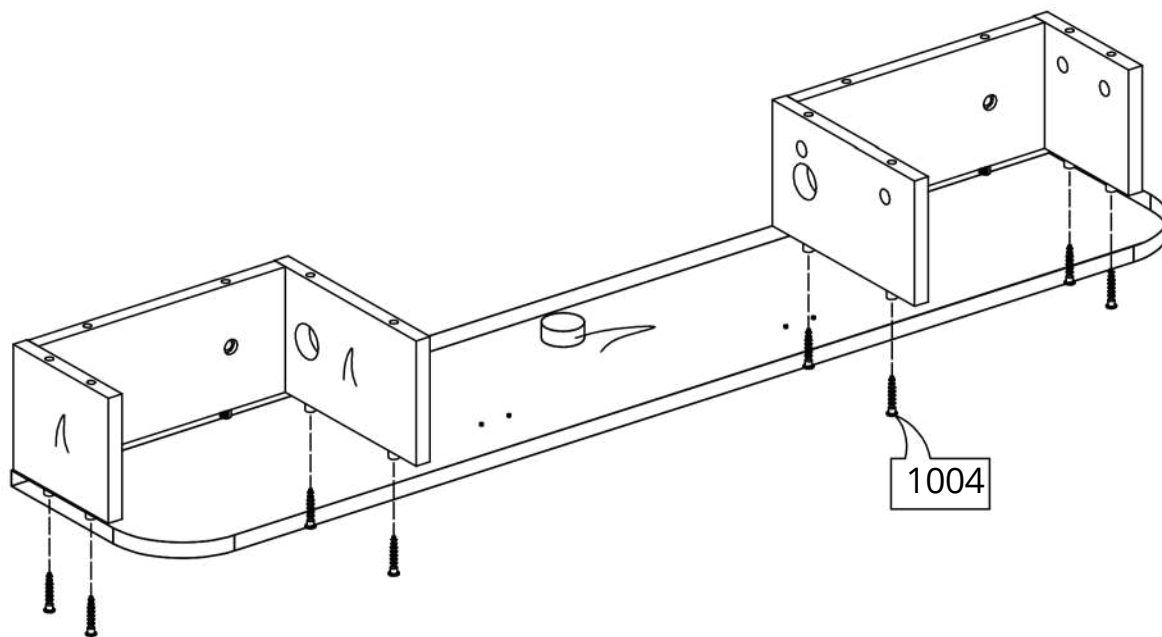


7

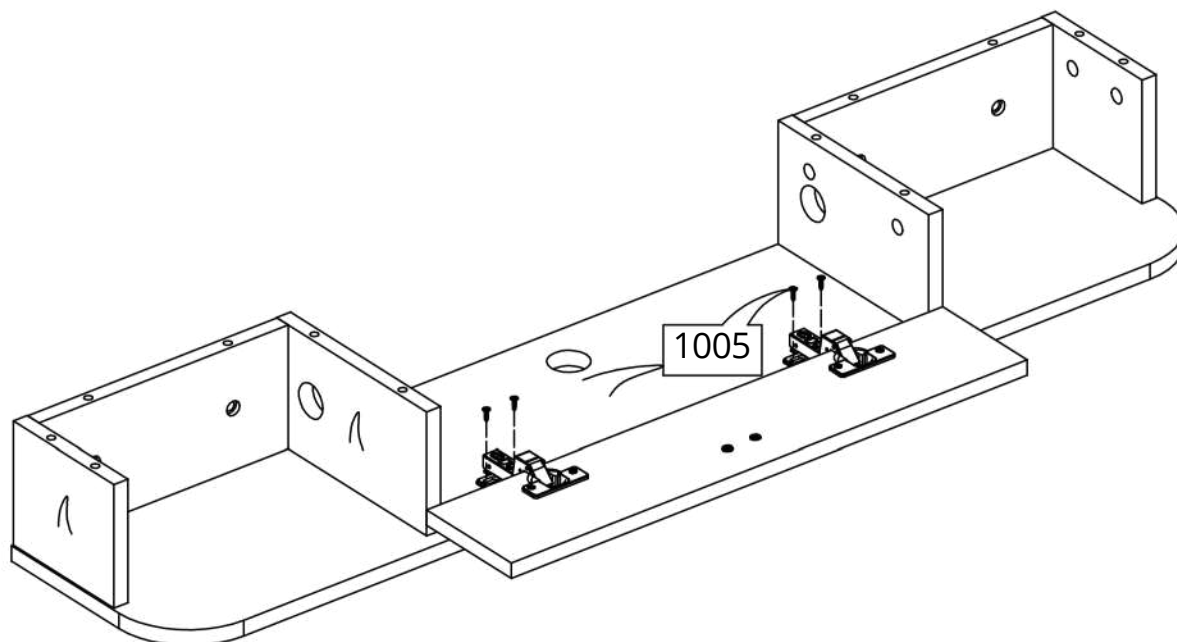

8

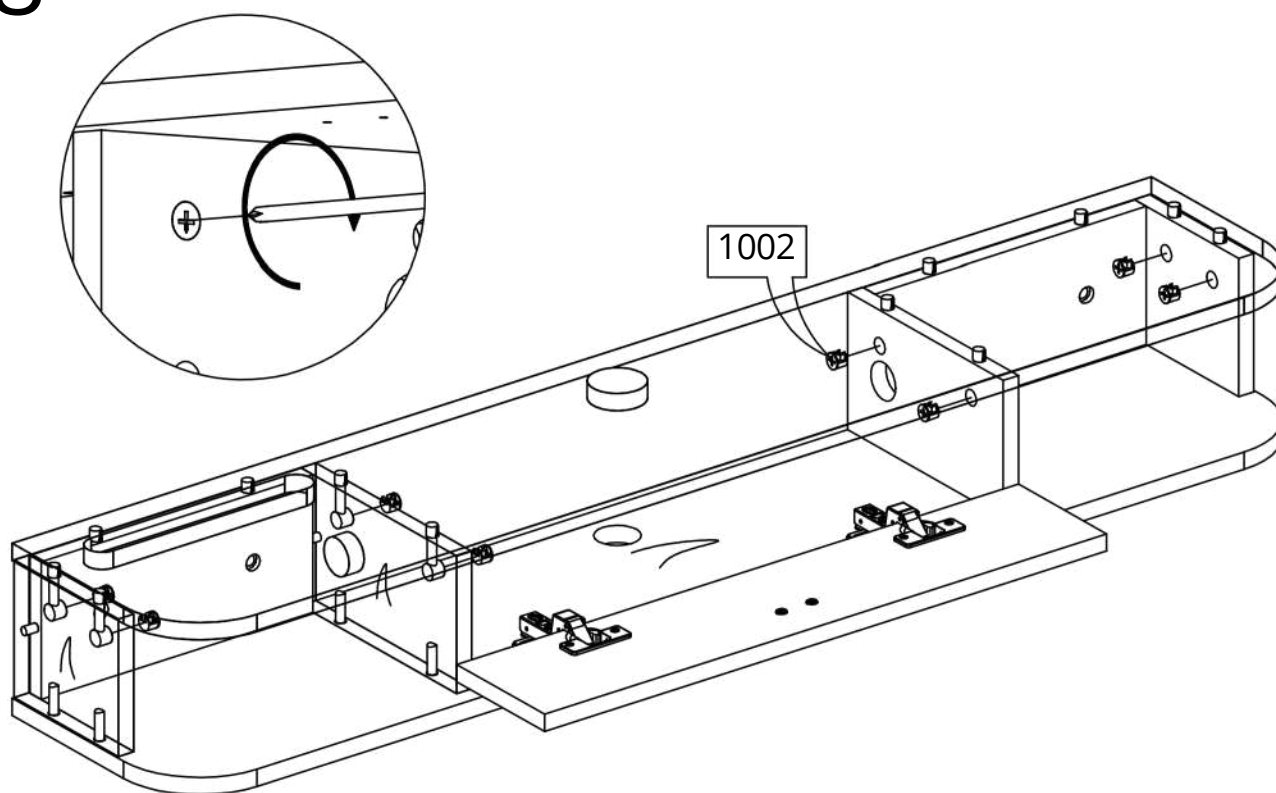


9

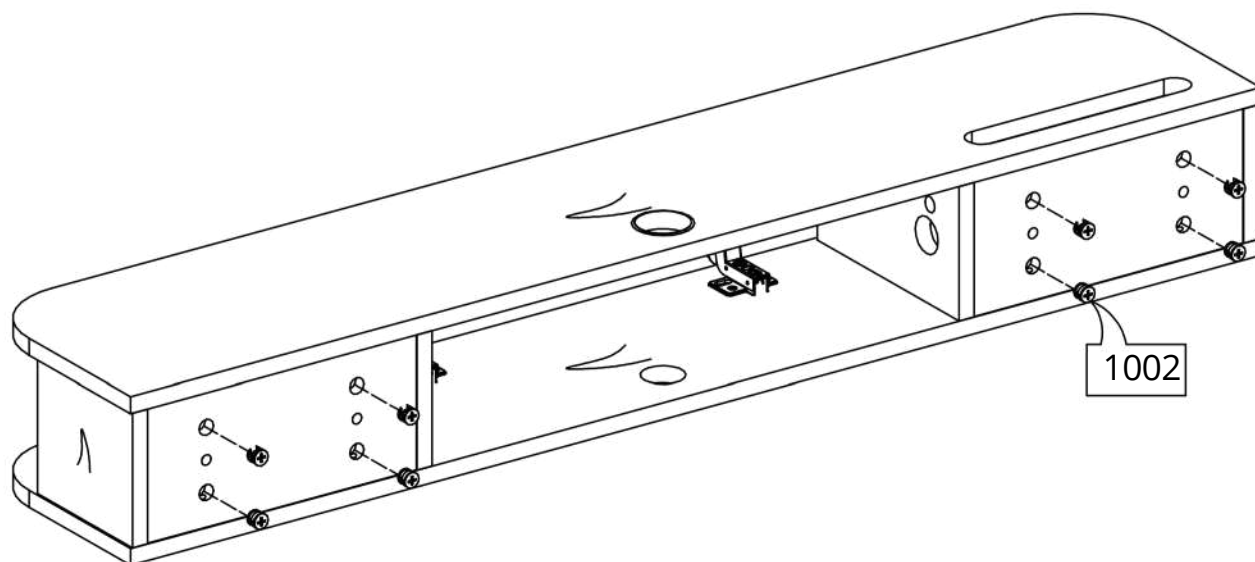



10

Locate the hole on the wall of the furniture according to the position of the spirit level

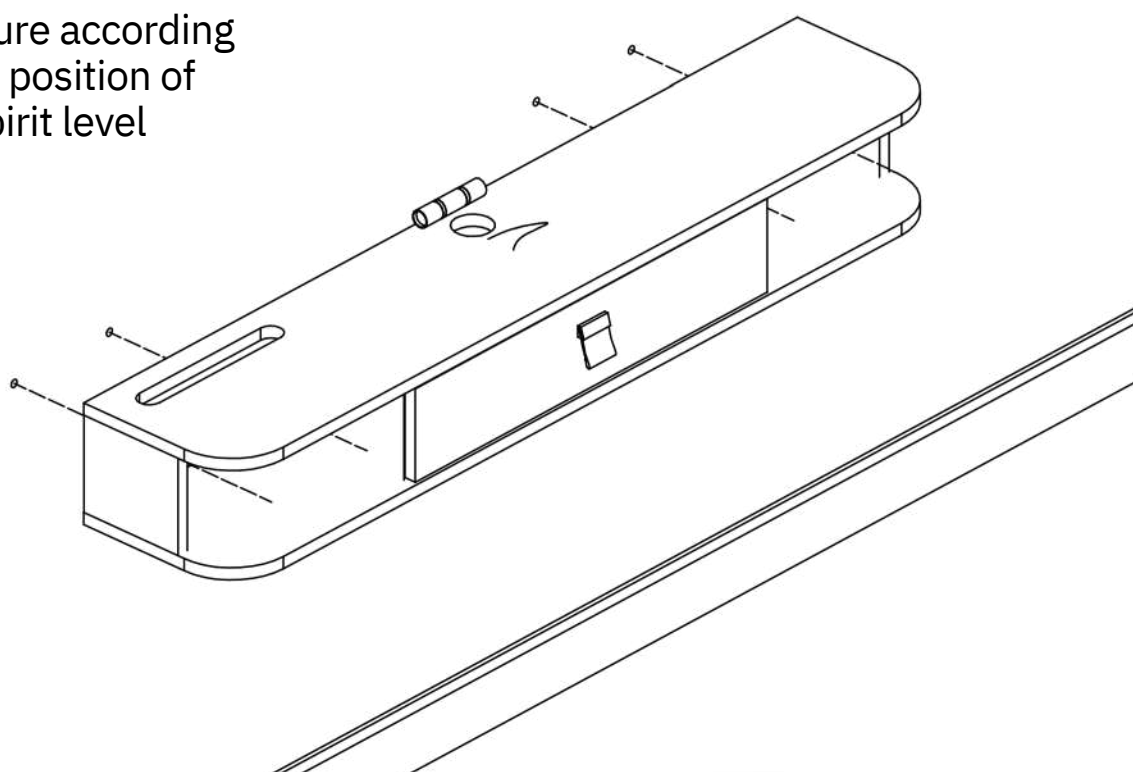


11

Make 10mm expansion holes on the wall

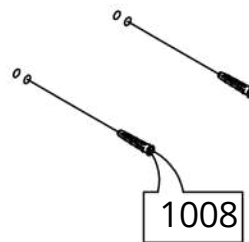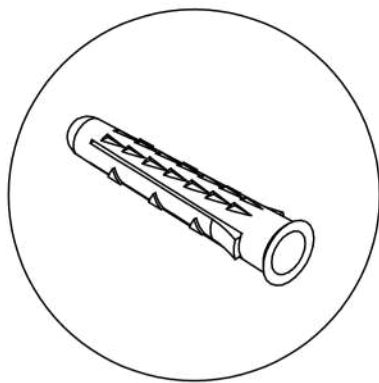

12

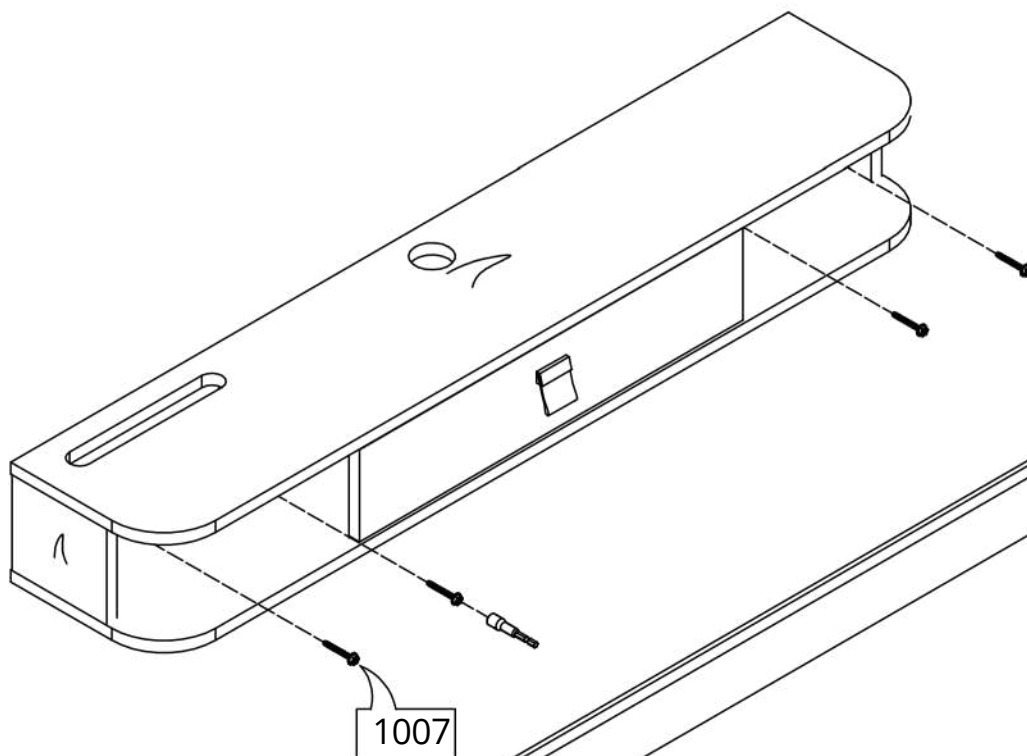

13

