

ASSEMBLY INSTRUCTION

ASSEMBLY TIPS:












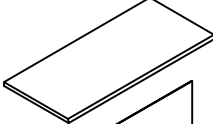

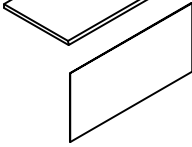




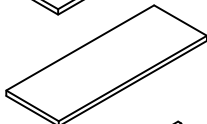



- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.














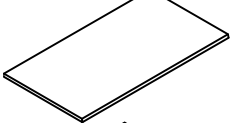



Warning !!

1. Don't attempt to repair or modify parts that are broken or defective .Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.


PARTS IDENTIFICATION

(A) DRAWER LEFT SIDE		4 PCS	(L) BOTTOM PANEL		1 PC
(B) DRAWER RIGHT SIDE		4 PCS	(M) BOTTOM SLAT		1 PC
(C) DRAWER BACK PANEL		4 PCS	(N) LEFT SIDE PANEL		1 PC
(D) DRAWER BOTTOM PANEL		4 PCS	(O) DRAWER DIVIDER		1 PC
(E) LEFT DRAWER FRONT PANEL		2 PCS	(P) RIGHT SIDE PANEL		1 PC
(F) RIGHT DRAWER FRONT PANEL		2 PCS	(Q) TOP		1 PC
(G) BAFFLE		3 PCS	(R) BACK PANEL		1 PC
(H) TOP SHELF		1 PC	(S) LEFT BOTTOM LEG		1 PC
(I) MIDDLE SHELF		1 PC	(T) LEFT TOP LEG		1 PC
(J) BOTTOM SHELF		1 PC	(U) RIGHT BOTTOM LEG		1 PC
(K) REAR BOTTOM SUPPORT		1 PC	(V) RIGHT TOP LEG		1 PC

ASSEMBLY INSTRUCTION

Z	HARDWARE PACKAGE		
NO	DESCRIPTION	FIGURE	Q' TY
1	SCREW $\varnothing 4 \times 30\text{mm}$		25 pcs
2	SMALL CAM BOLT L=20mm		16 pcs
3	SMALL CAM LOCK $\varnothing 12\text{mm}$		16 pcs
4	HANDLE M64mm		4 pcs
5	DOOR-HANDLE SCREW $\varnothing 4 \times 22\text{mm}$		8 pcs
6	DOWEL $\varnothing 8 \times 25\text{mm}$		19 pcs
7	LARGE CAM BOLT L=29mm		7 pcs
8	LARGE CAM LOCK $\varnothing 15\text{mm}$		7 pcs
9	NAIL		24 pcs
10	CONNECTION IRON $170 \times 24 \times 3$		2 pcs
11	SHORT MACHINE SCREW $\varnothing 6 \times 12\text{mm}$		8 pcs
12	HAMMER BOLT $\varnothing 6 \times 65\text{mm}$		8 pcs
13	HAMMER NUT $\varnothing 10 \times 15\text{mm}$		8 pcs
14	ALLEN WRENCH M4mm		1 pc
15	STICKER $\varnothing 18\text{mm}$		8 pcs
16	LARGE MACHINE SCREW $\varnothing 6 \times 25\text{mm}$		8 pcs
17	GLUE		1 pc


ASSEMBLY INSTRUCTION

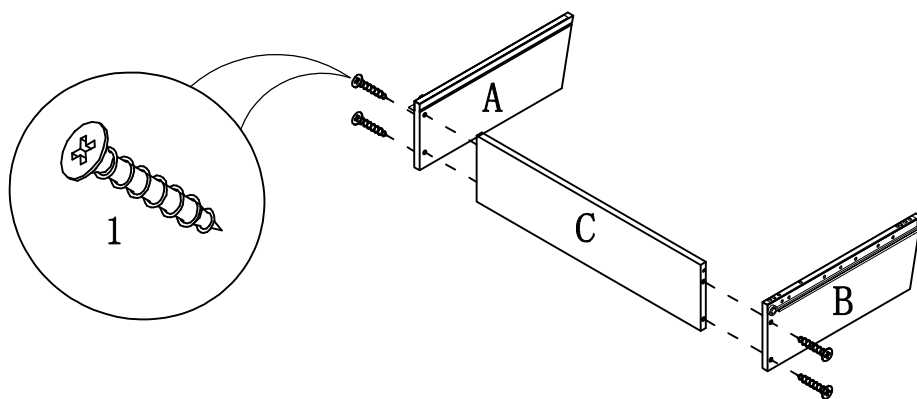


STEP1

Align A with C, B with C; 1 through A to C and screw down; 1 through B to C and screw down.

STEP2

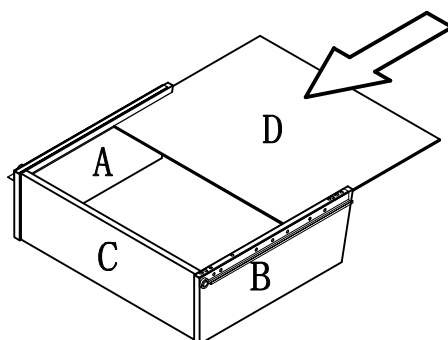


ASSEMBLY INSTRUCTION

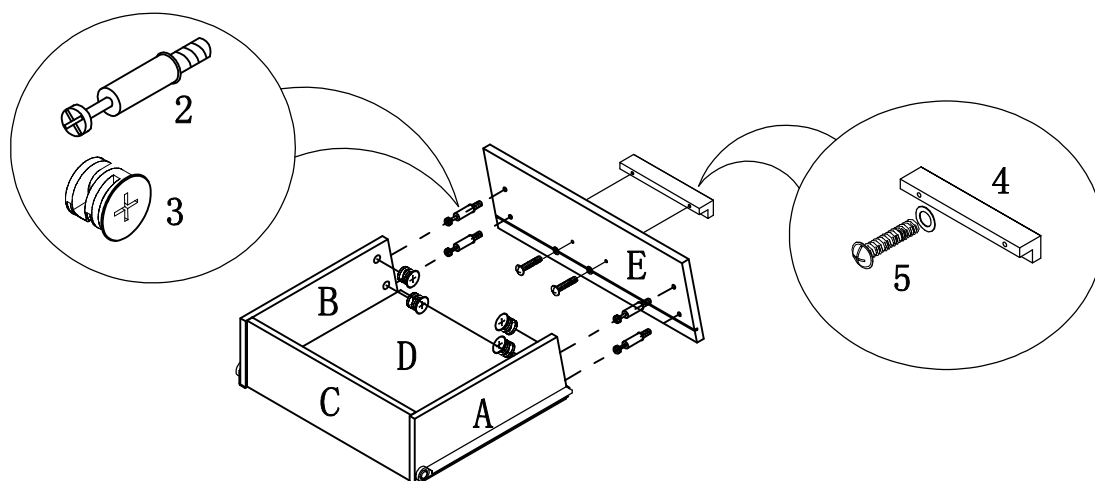

STEP3




- ①Screw 2 into E.
- ②Align A,B, with E, put 3 into A,B and screw down.
- ③Insert D to the groove of E.
- ④5 through E to 4 and screw down.

STEP4

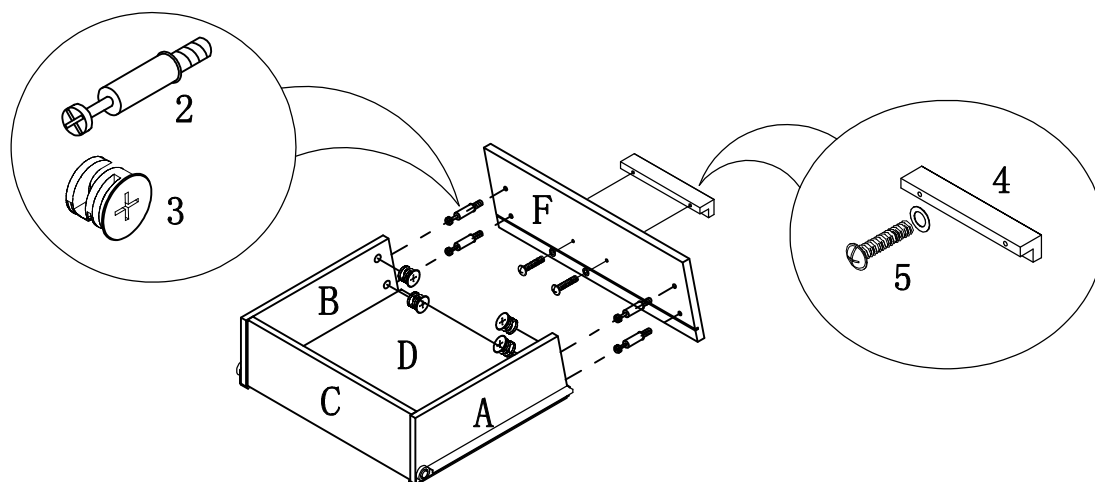

- ①Screw 2 into F.
- ②Align A,B with F, put 3 into A,B and screw down.
- ③Insert D into the groove of F.
- ④5 through F to 4 and screw down.


ASSEMBLY INSTRUCTION

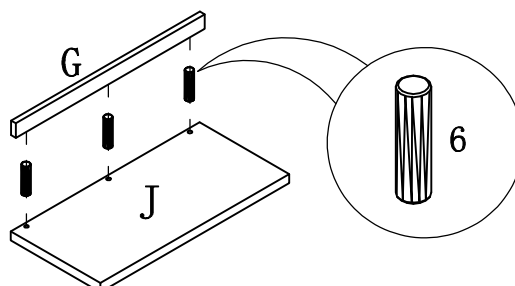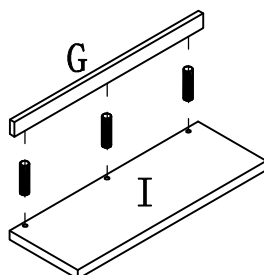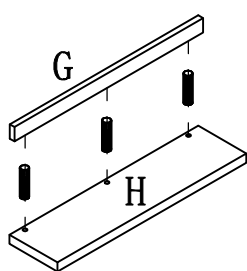

STEP5

- ①6 drop 17 and insert G
- ②Align G with H,I,J and fix tightly.


STEP6

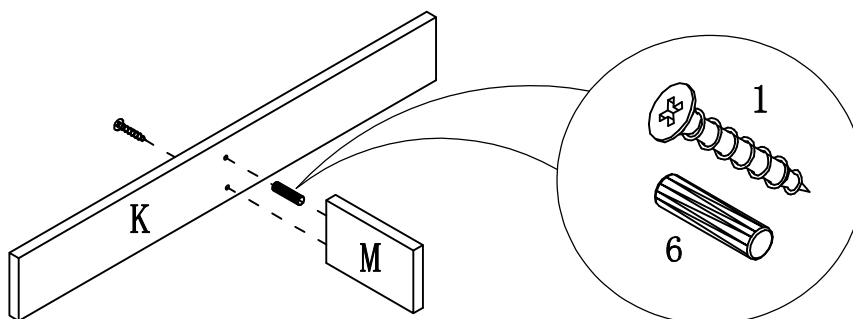


- ①6 drop 17 and insert M.
- ②Align M with K, 1 through M to K and screw down.

STEP7

- ①6 drop 17 and insert N,O,P; screw 7 into Q.
- ②Align N,O,P with L,Q; put 8 into N,O,P and screw down; 1 through L to N,O,P and screw down.

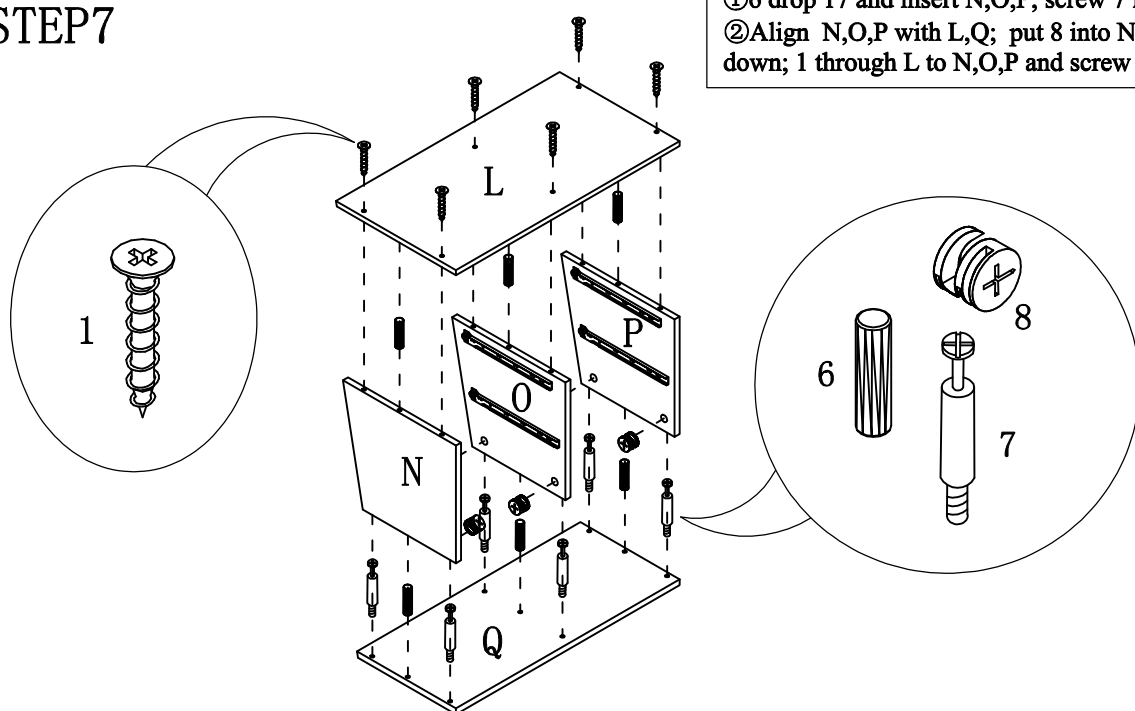


ASSEMBLY INSTRUCTION

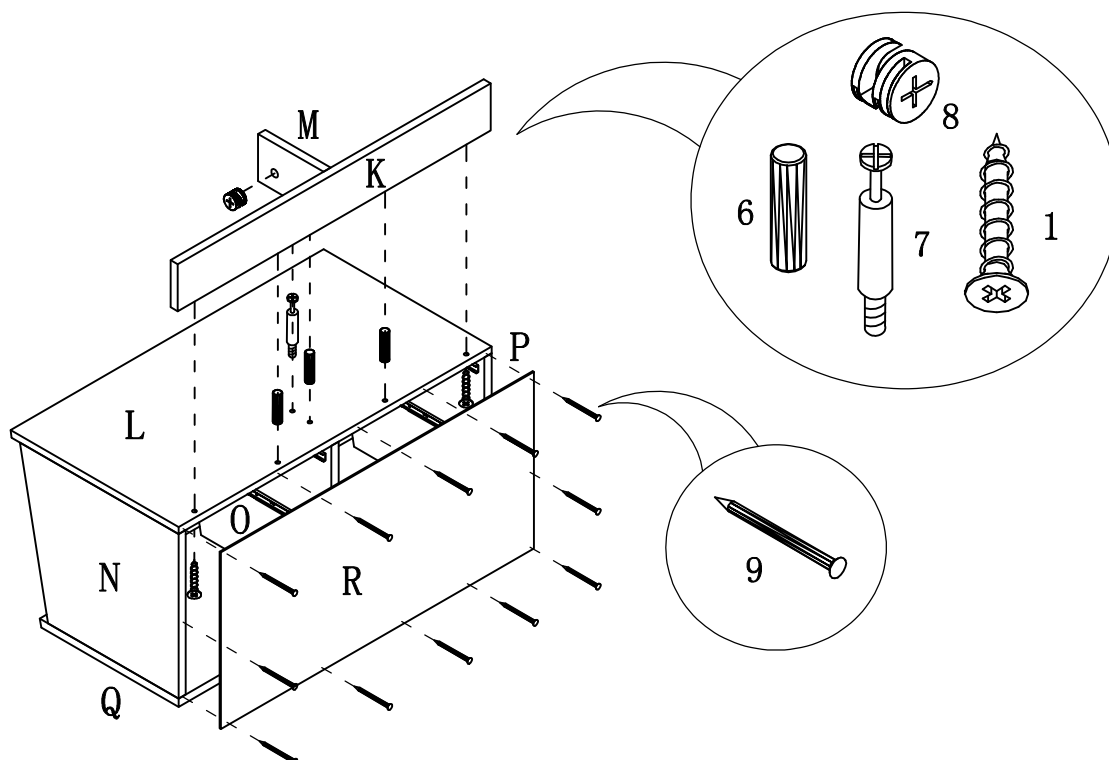

STEP8


- ①6 drop 17 and insert K,M. Screw 7 into L..
- ②Align K,M with L, put 8 into M and screw down.
- ③1 through L to K and screw down.
- ④9 through R to L,Q,N,O,P and screw down.

STEP9

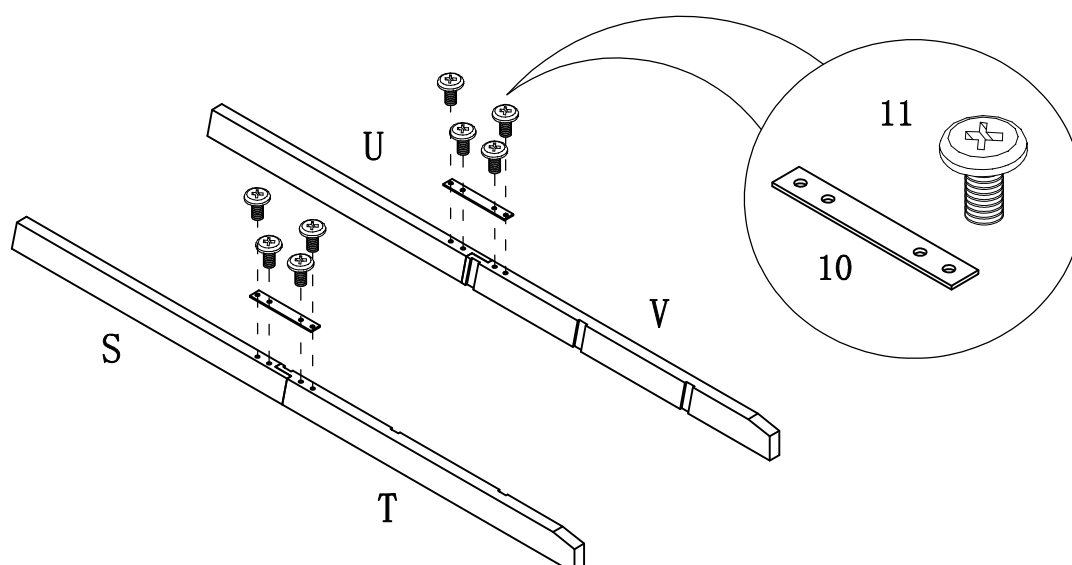

- 11 through 10 to U,V hole position and screw down;
- 11 through 10 to S,T hole position and screw down


ASSEMBLY INSTRUCTION

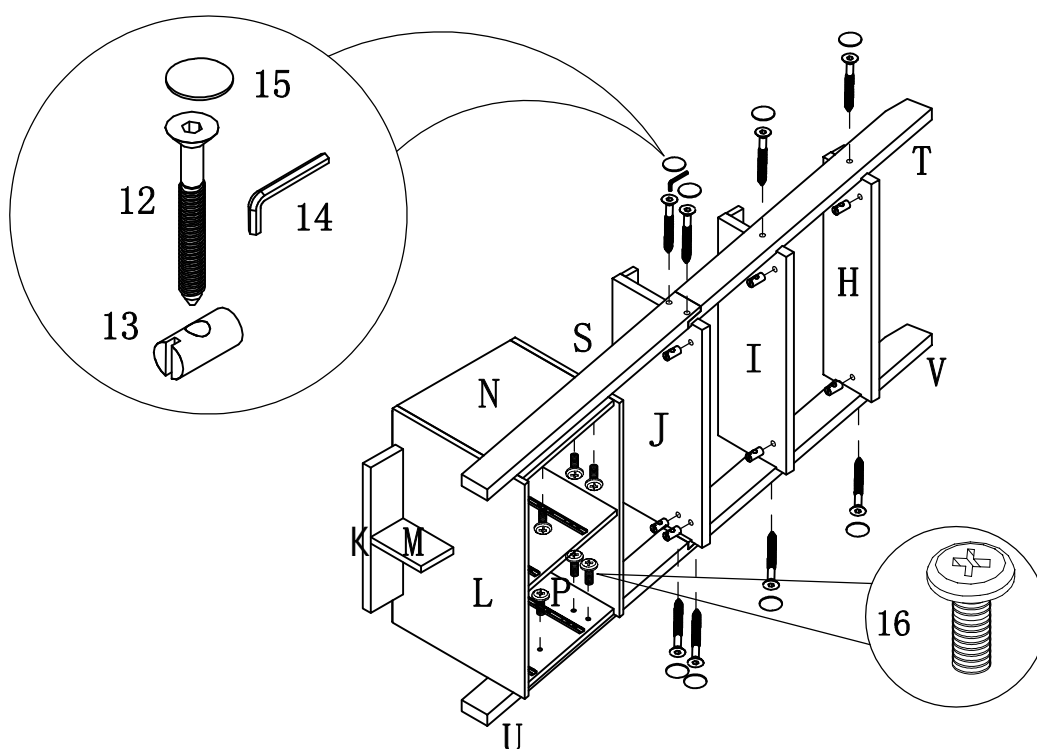

STEP10

- ①Put 13 into H,I,J; 12 through S,T,P,V to 13 hole position and screw down; cover 12 with 15.
- ②16 through N,P to S,P and screw down.

STEP11

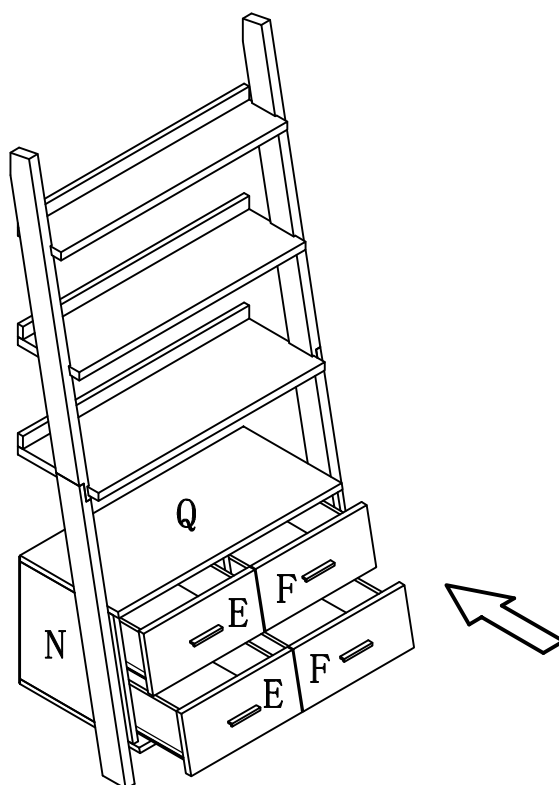

Put the drawers to their positions