

ASSEMBLY INSTRUCTIONS
24INCH BATH VANITY (COMBO)

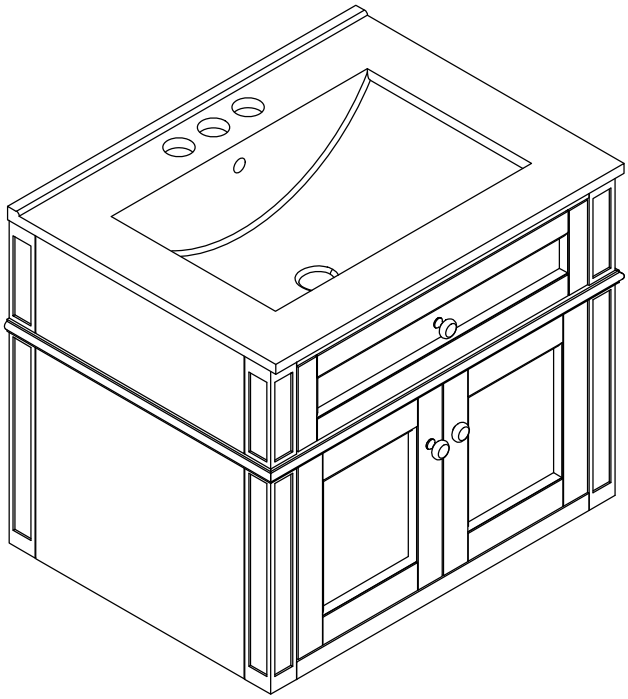

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present.
"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe!!!
* Please assemble on a clean soft surface to avoid damage.

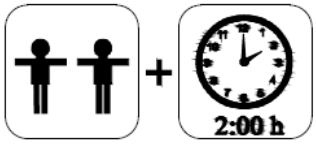



Tools Required



(Not Included) (Not Included)

IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



Please do not return this product to the retailer!!
We are able to assist you in ANY way

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.


Before Installation


Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly,and follow the assembly steps to assemble your newly purchased product correctly and efficently.


Cam Lock Assembly Instructions



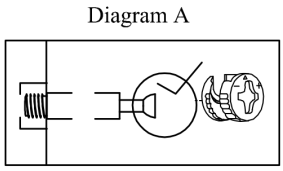



Insert Cam Bolt into hole as shown in diagram A.



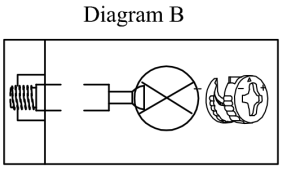


Make sure not to insert the Cam Bolt:
Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.




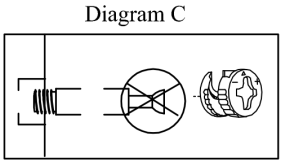


Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.

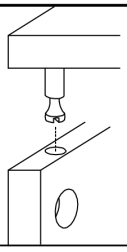

Connect the panels together.

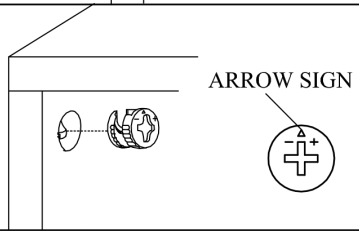


Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.

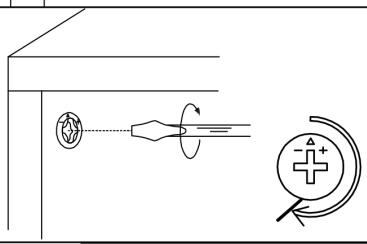













To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver.
**Do not use an automatic screwdriver as it may bend or break if too much power is imposed.*

Detail View - CABINET




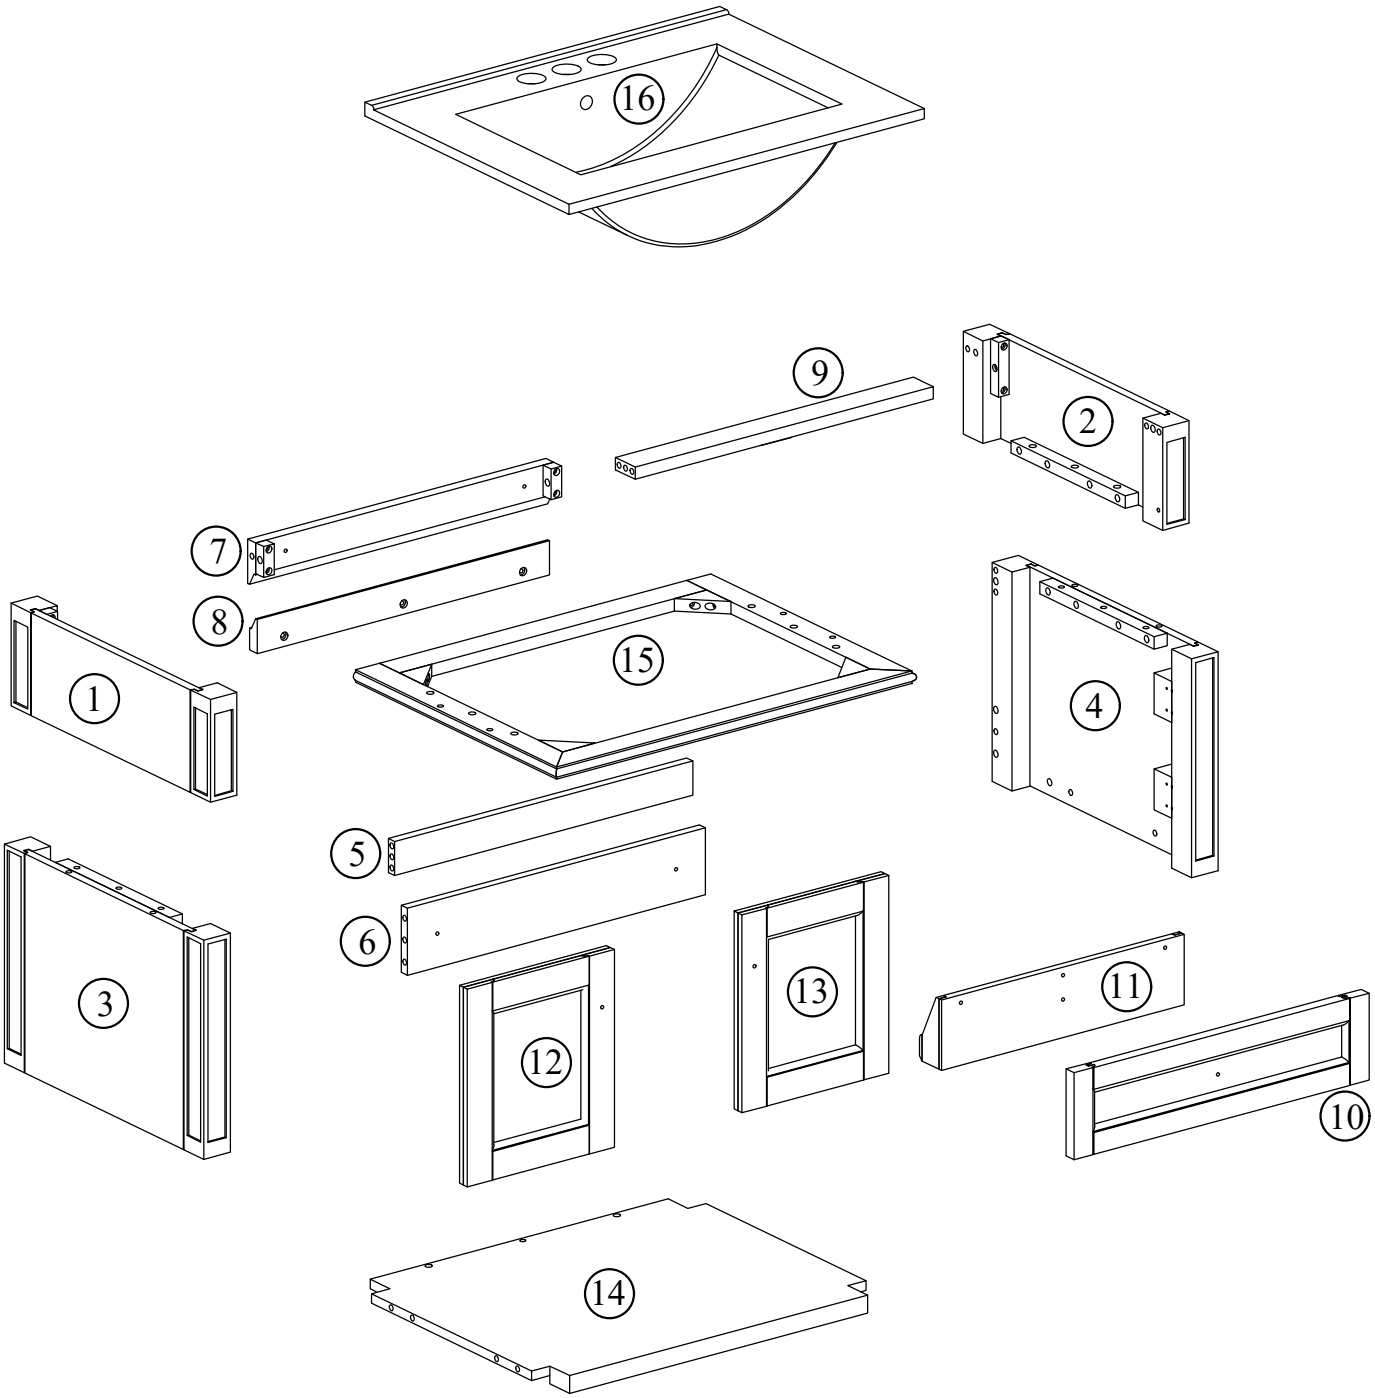


Identifying the Hardware-Identify the hardware using the illustrations below.












Part List

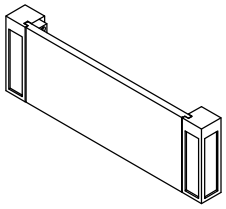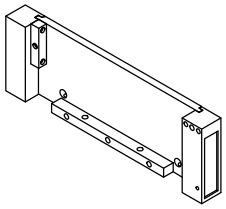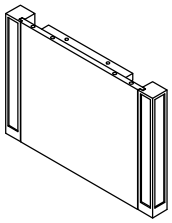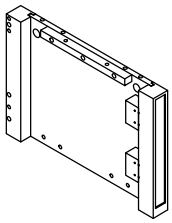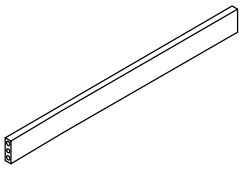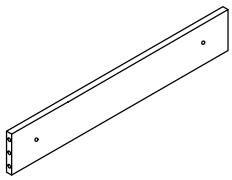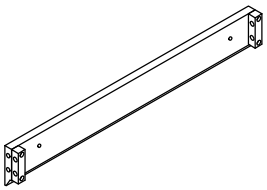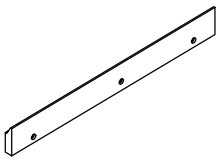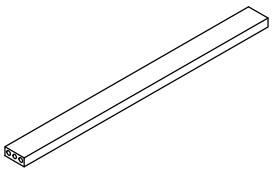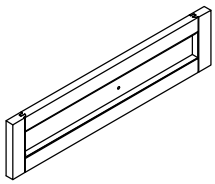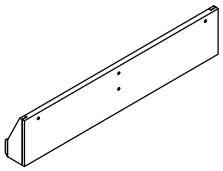1  Side Panel Top (L) - 1pc	2  Side Panel Top (R) - 1pc
3  Side Panel (L) - 1pc	4  Side Panel (R) - 1pc
5  Mid Panel Rear - 1pc	6  Bottom Panel Rear - 1pc
7  Top Panel Rear - 1pc	8  Connect Bar - 1pc
9  Crossbar Top - 1pc	10  Flip Drawer Face - 1pc
11  Flip Drawer - 1pc	12  Door(L) - 1pc


Part List

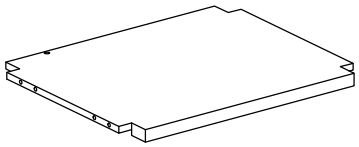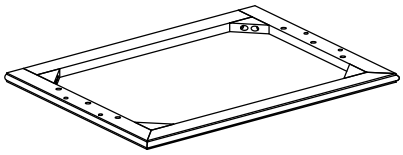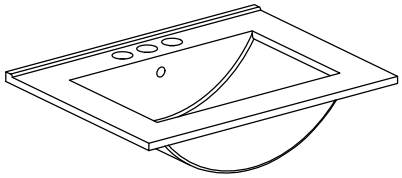
13  Door(R) - 1pc	14  Bottom Panel - 1pc
15  Frame Mid - 1pc	16  Sink - 1pc

Hardware List

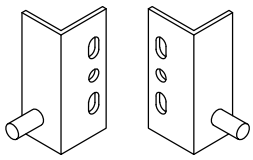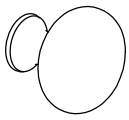A  ø6x35mm	B  ø14.5x12mm	C  ø8x30mm
Three in one bolts(14pcs)	Three in one lock(14pcs)	Wood dowel(25pcs)
D 	E  ø6xø3x12mm	F  ø7xø3.5x15mm
Rotary Hinge (2pcs)	Round head screw(8pcs)	Flat head screw(24pcs)
G  ø8xø4x20mm	H  ø13x1/4"x28mm	I  ø1/4"x16x1mm
Round head screw(3pcs)	Hex-Head bolts(2pcs)	Washer(12pcs)
J 	K  ø10xø5x60mm	L  ø12x55mm
Hinge(1pc)	Round head screw(7pcs)	Plastic stopper (7pcs)
M 	N  ø5/32"x28mm	O 
Handle (3pcs)	Handle screw(1pc)	Damping hinge (4pcs)
P  ø5/32"x25mm	Q  4mm	R  ø13x1/4"x70mm
Handle screw(2pcs)	Allen key - 1pc	Hex-Head bolts(6pcs)
S  ø1/4"x10x1.2mm		
Lock Washer - 6pcs		


STEP: 1

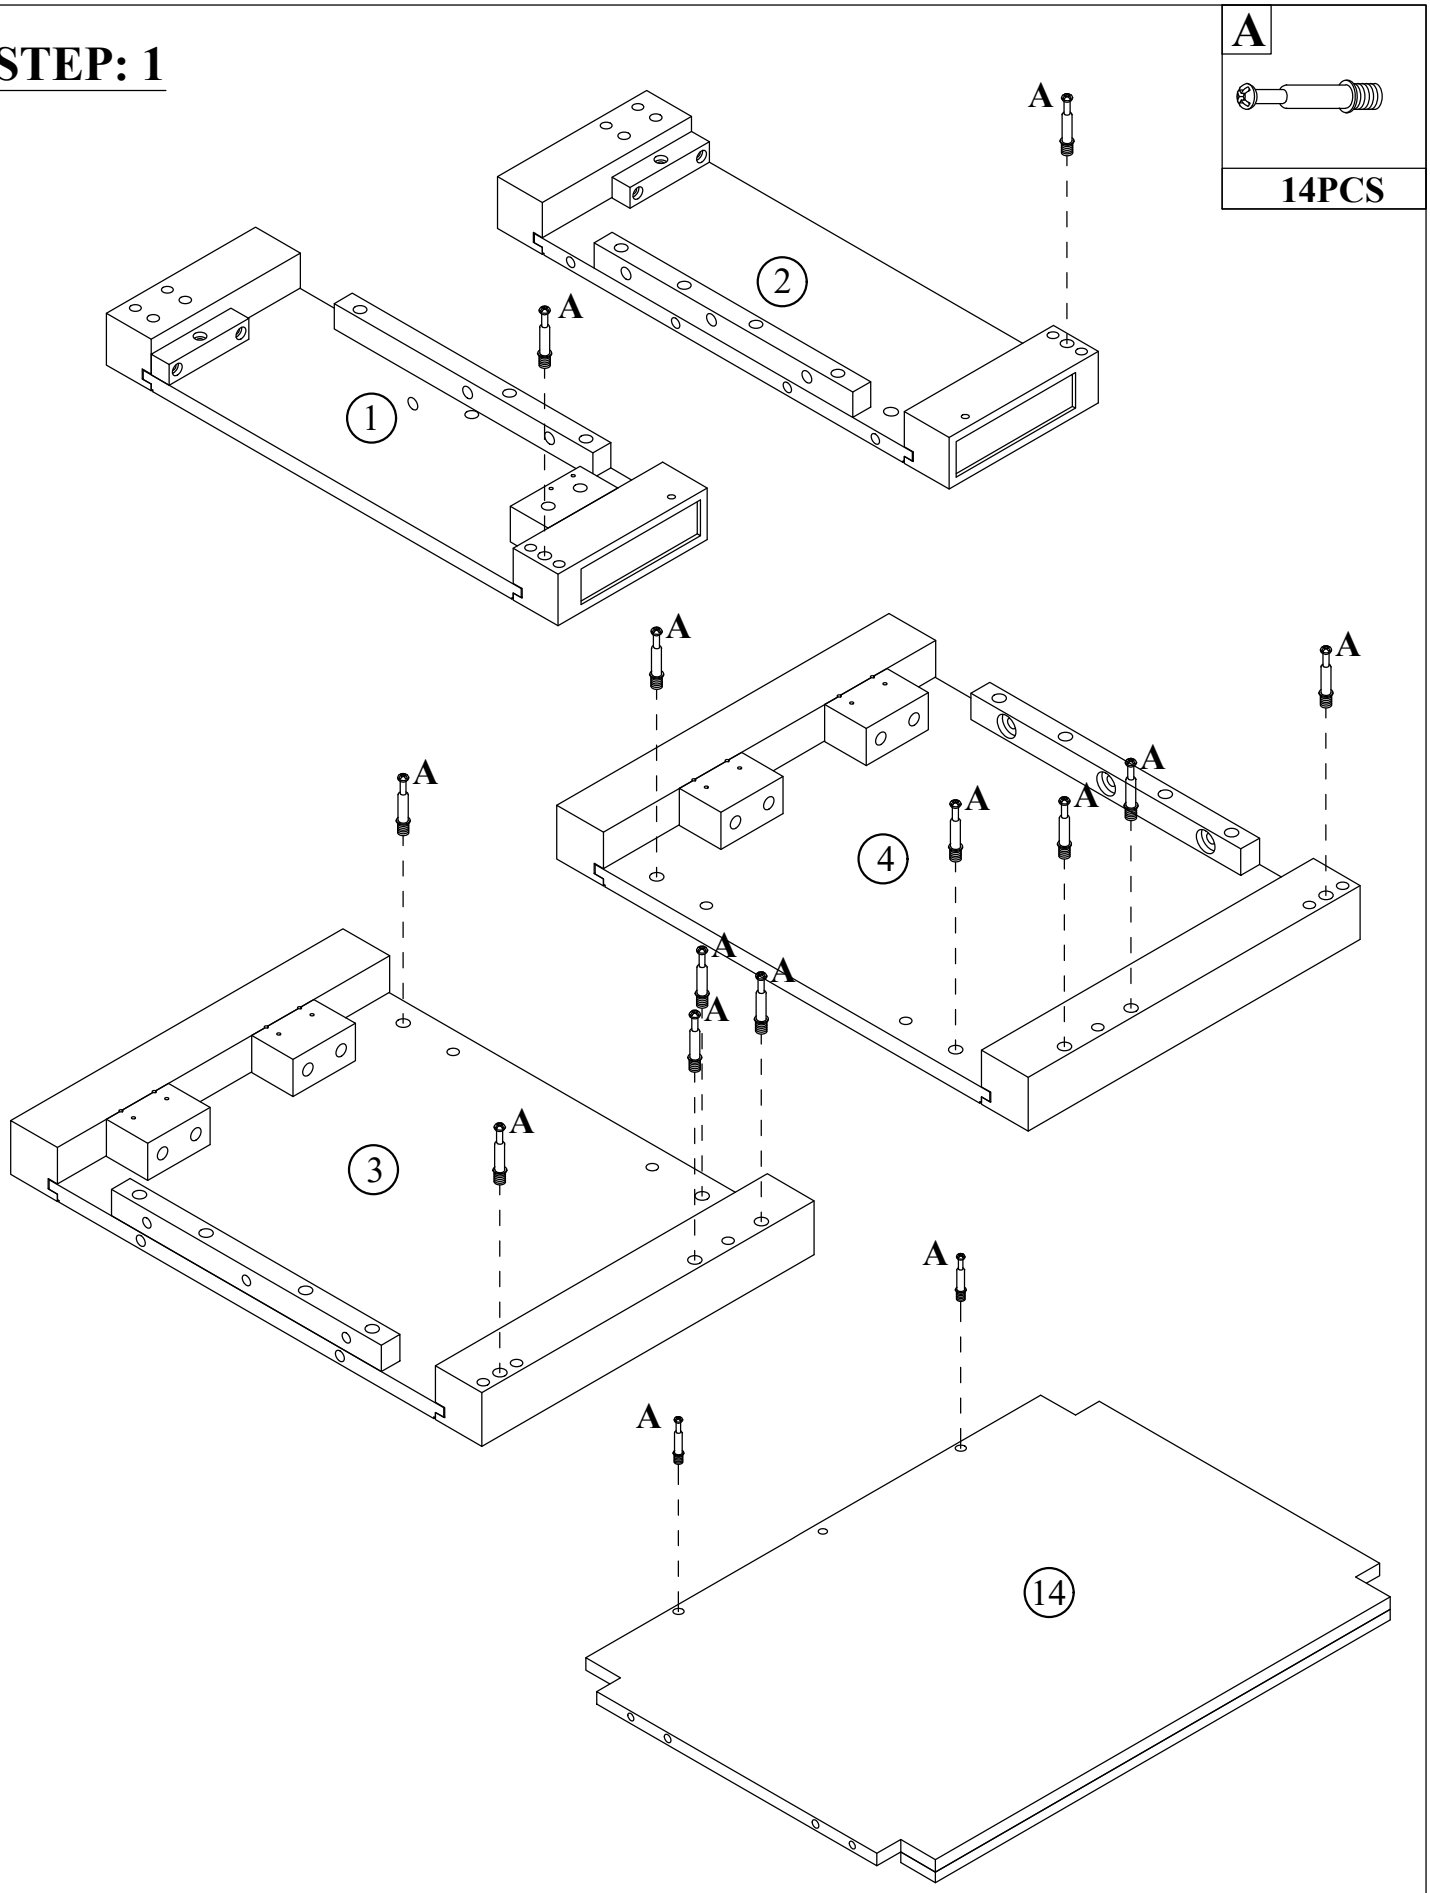

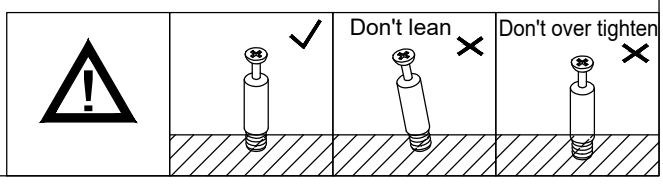


STEP: 2


D	E	G
2PCS	4PCS	3PCS

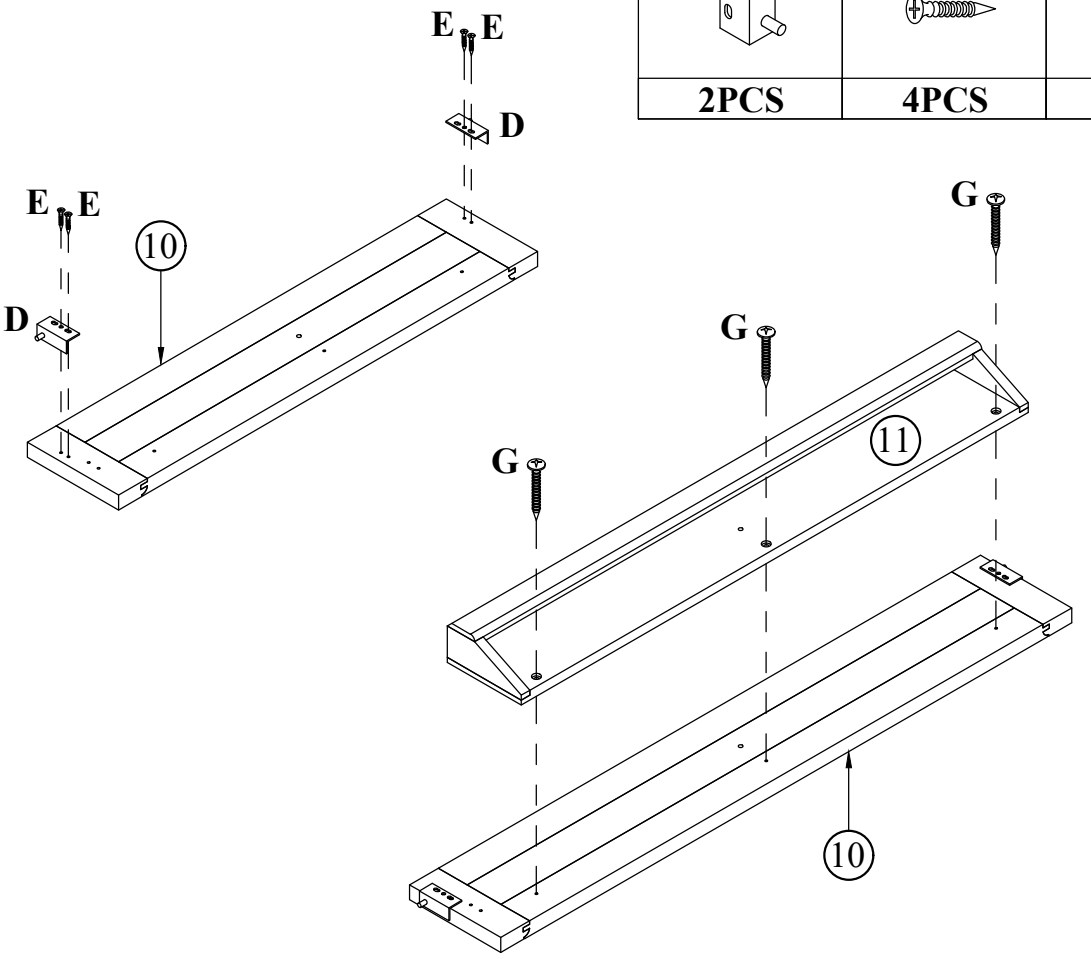

STEP: 3

B	C	H	I	Q
1PC	3PCS	1PC	1PC	1PC

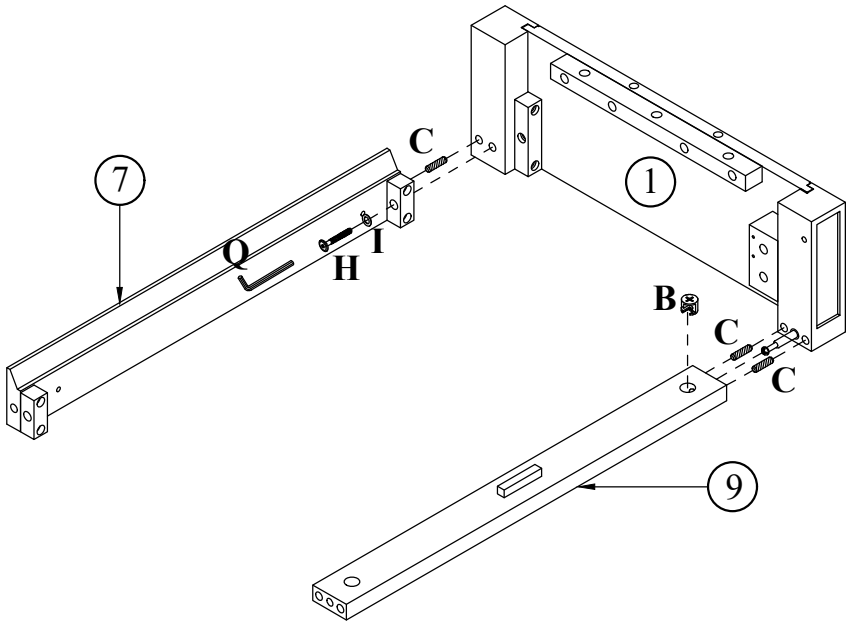


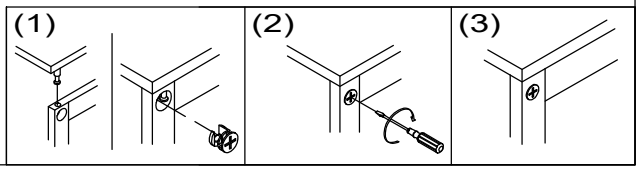

STEP: 4


B	C	H	I
1PC	3 PCS	1PC	1PC

Q
1PC

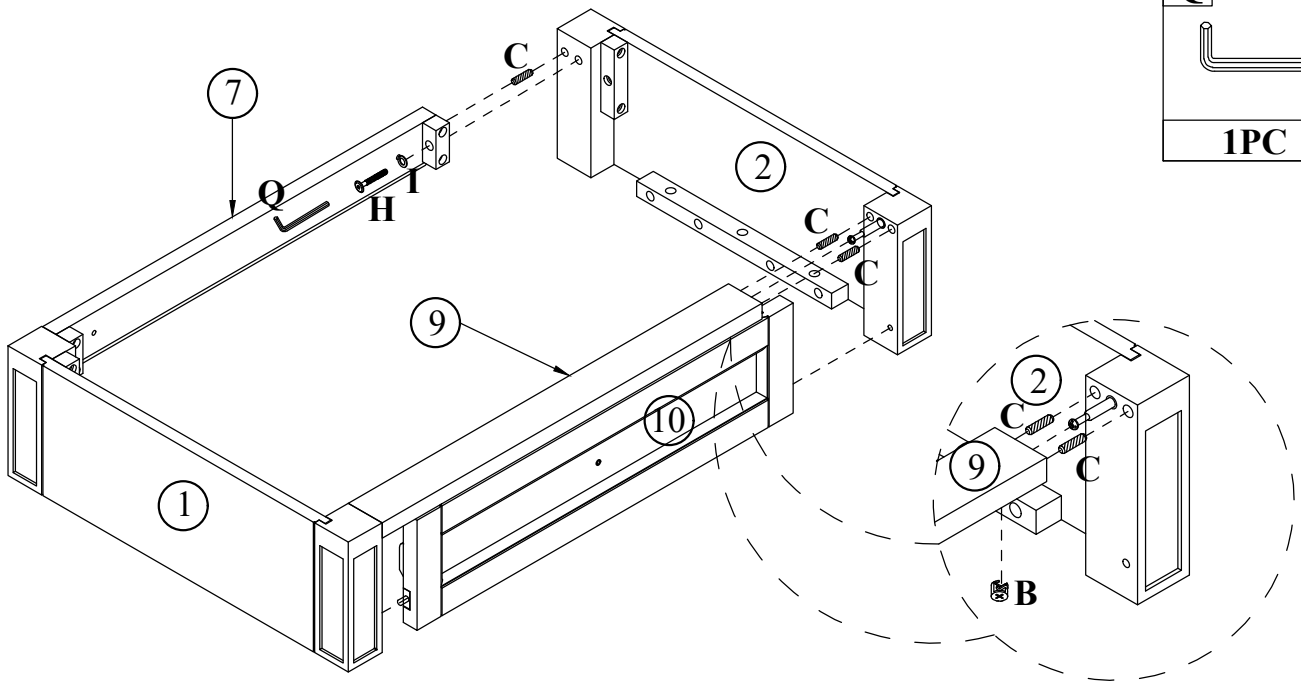


STEP: 5


E	J
4PCS	1PC

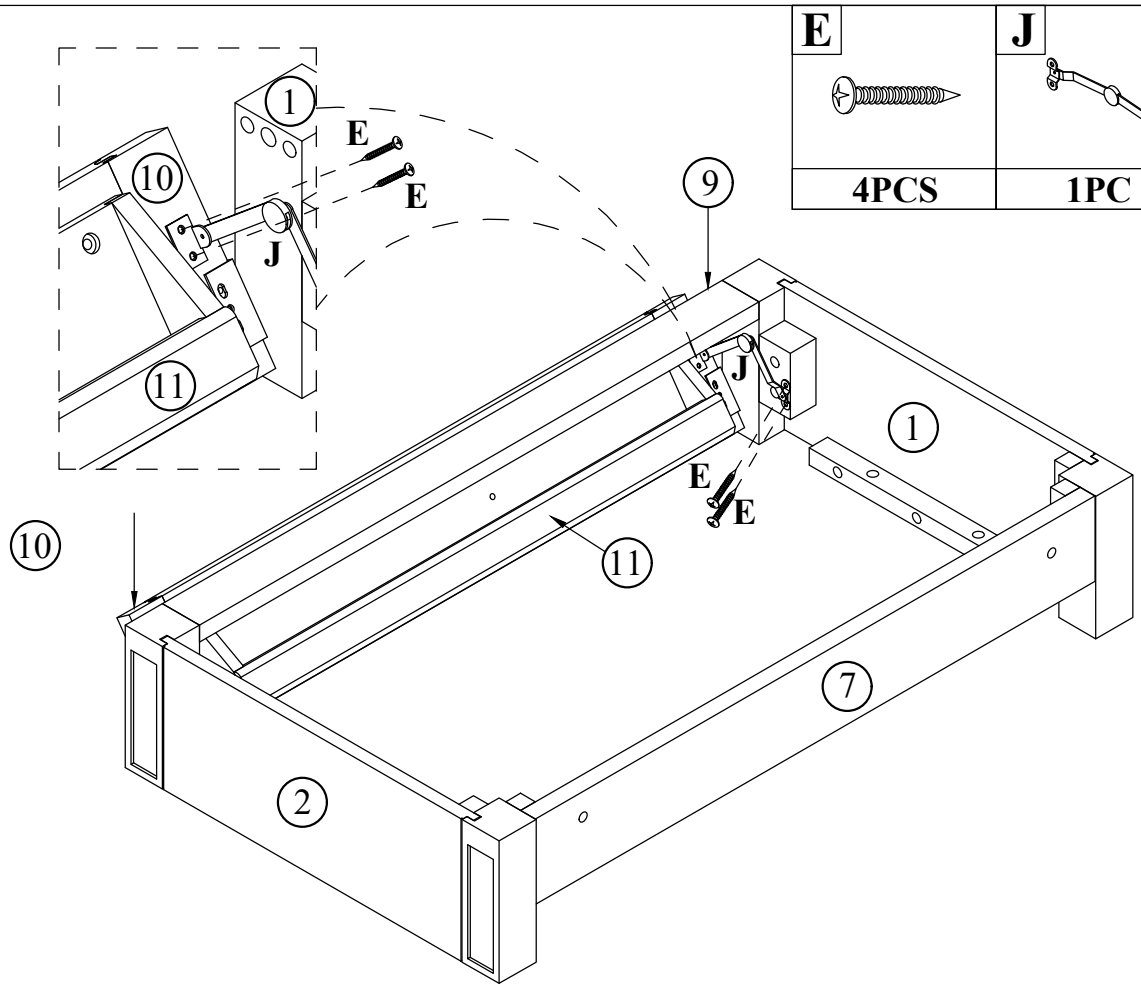


STEP: 6

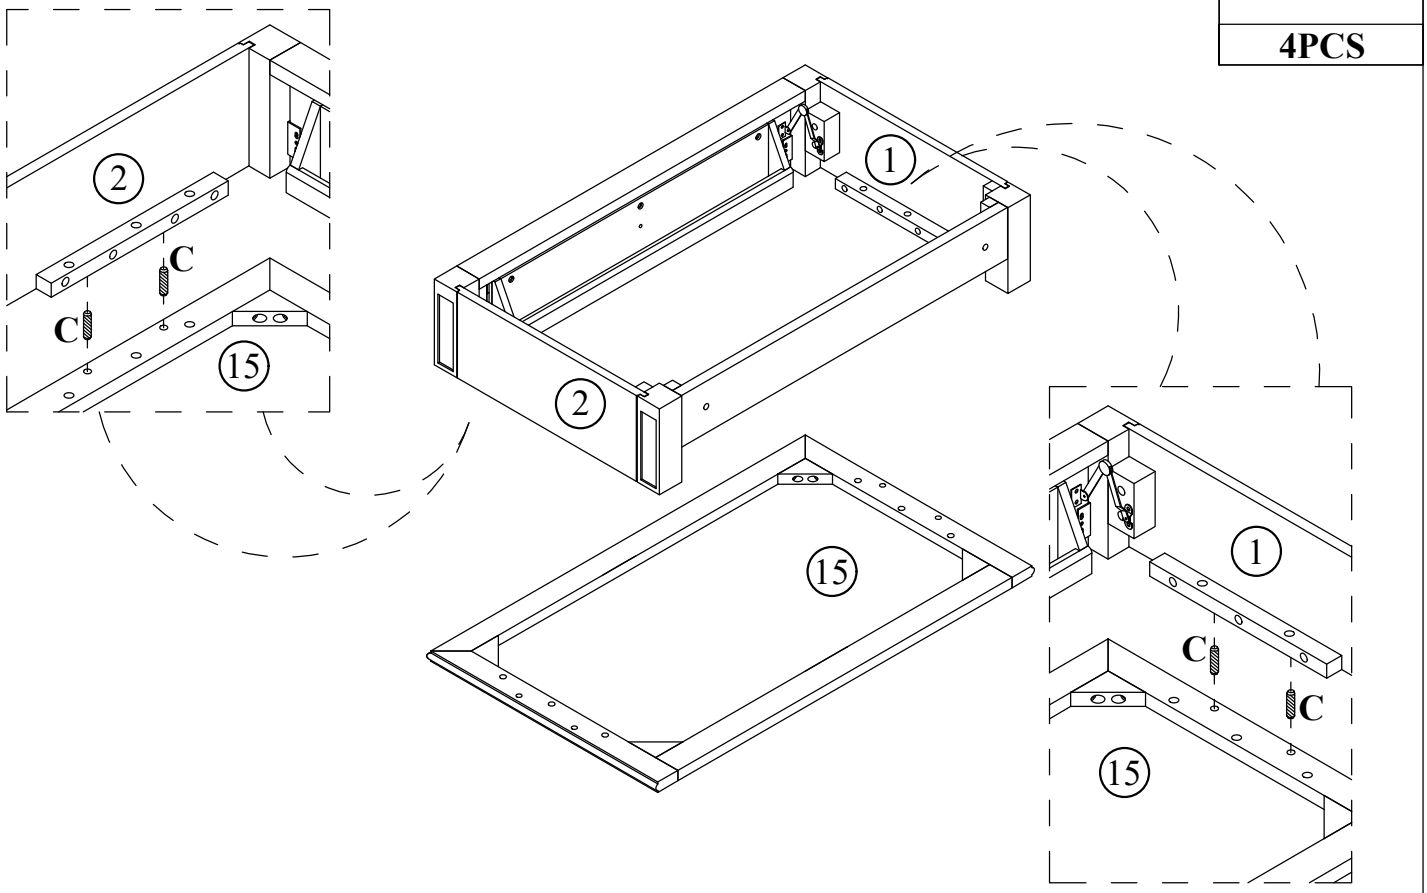


STEP: 7

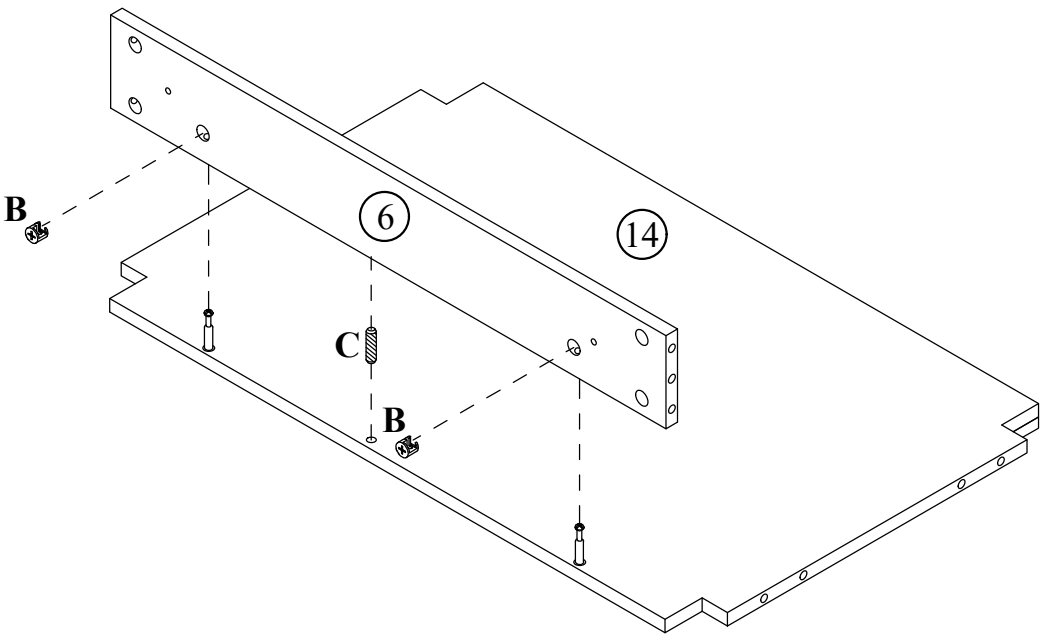


STEP: 8

B	C
	
5PCS	5PCS

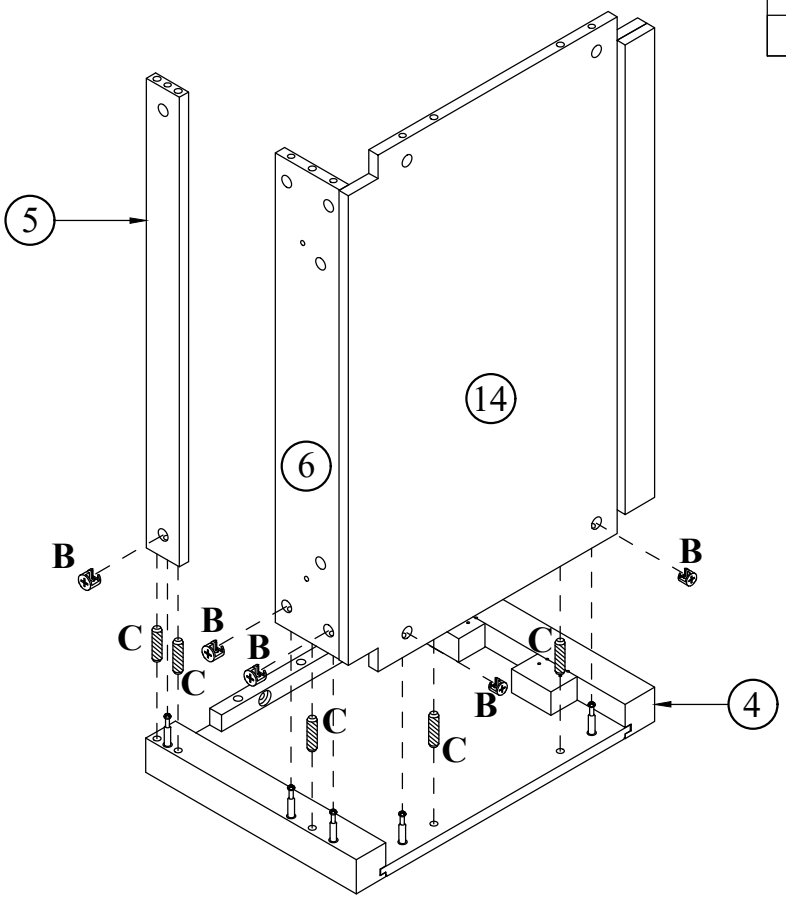



STEP: 9

B	C
	
5PCS	5PCS

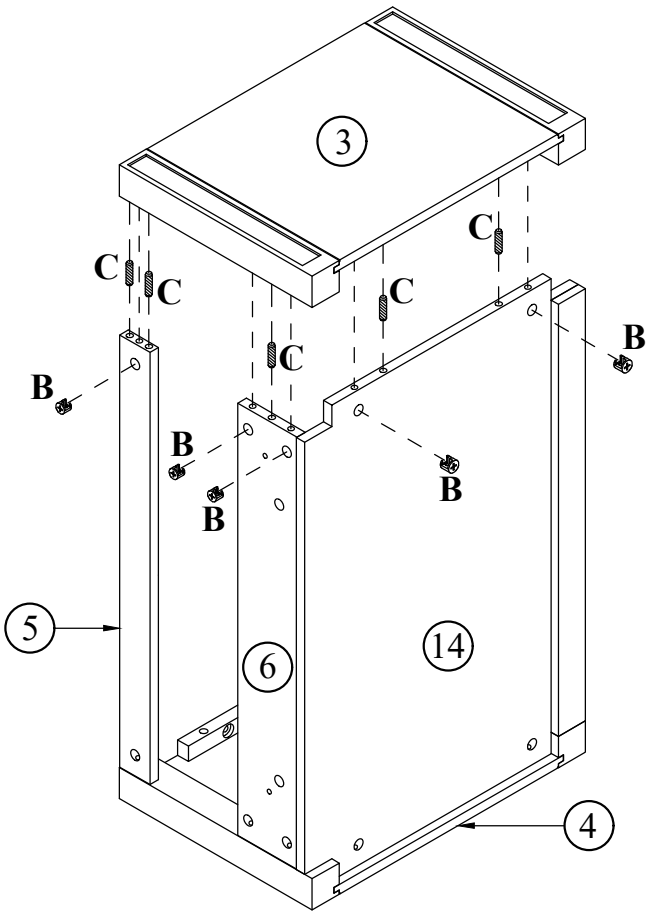




STEP: 10

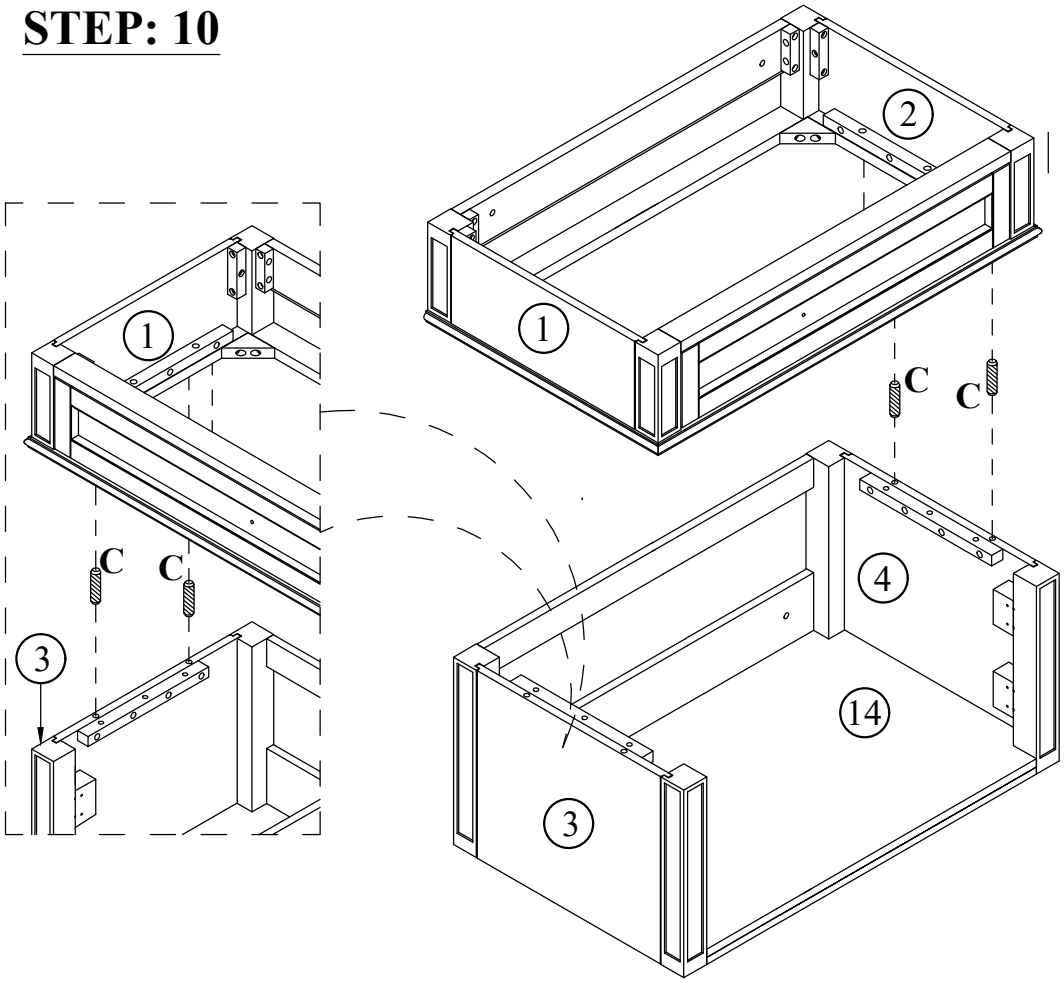

C

4PCS

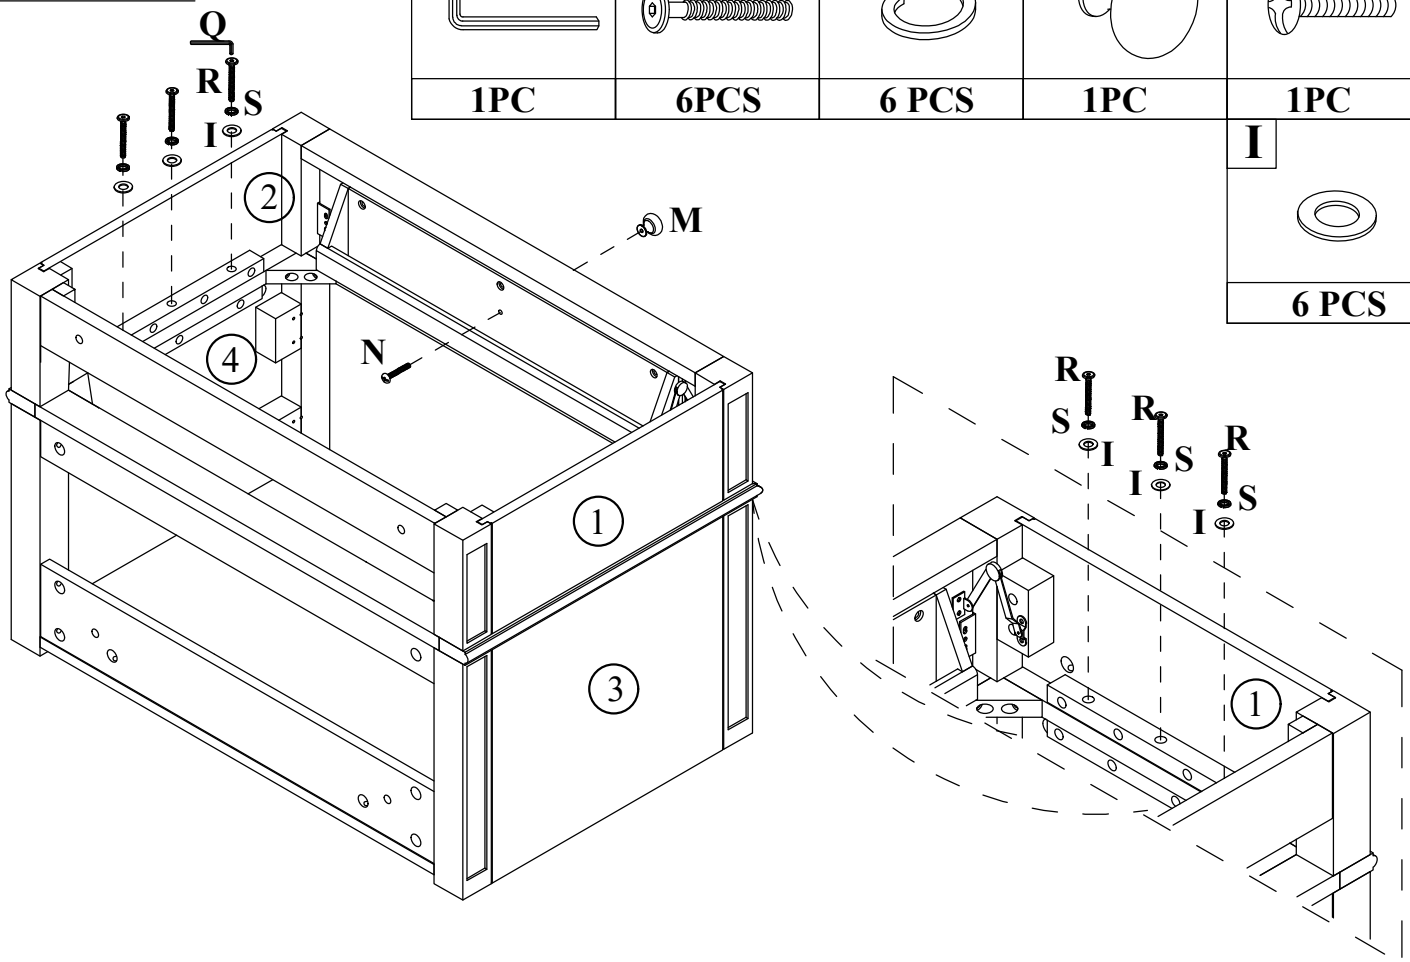STEP: 11





Q	R	S	M	N
				
1PC	6PCS	6 PCS	1PC	1PC

I
6 PCS

STEP: 12

Option: 1

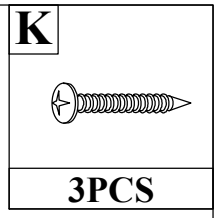

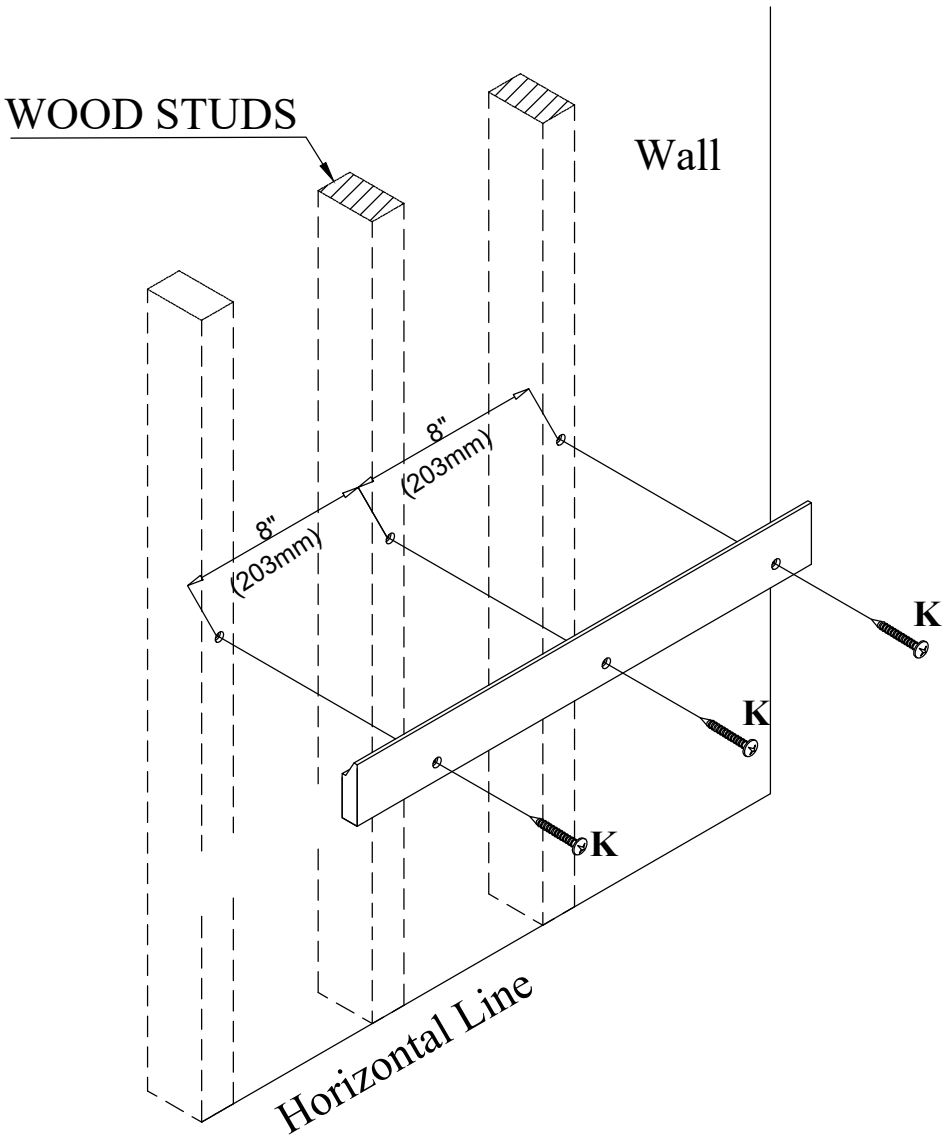

Use a wood stud finder to locate the wood studs behind the walls, and then mark by pencil.
Use a level to ensure the Cross Bar (8) will be level before installing to the wall.


The 8"/8"/8" value is for reference only,
please according to the Wood stud's location.


Make sure the screw holes must be on the wood studs otherwise
the vanity will fall out because the dry wall cannot hold the cabinet.


STEP: 12


Option: 2

K	L
	
3PCS	7PCS

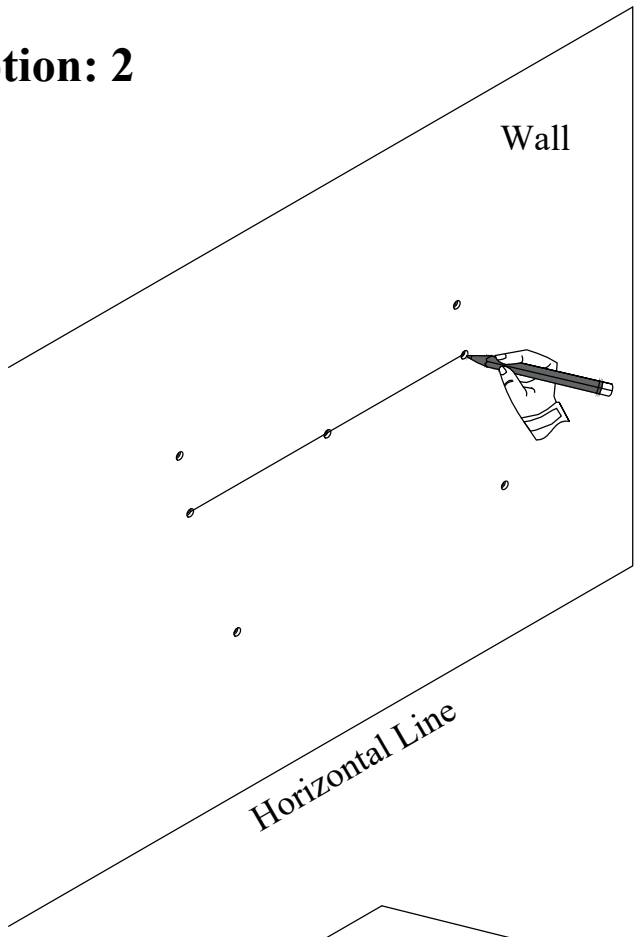

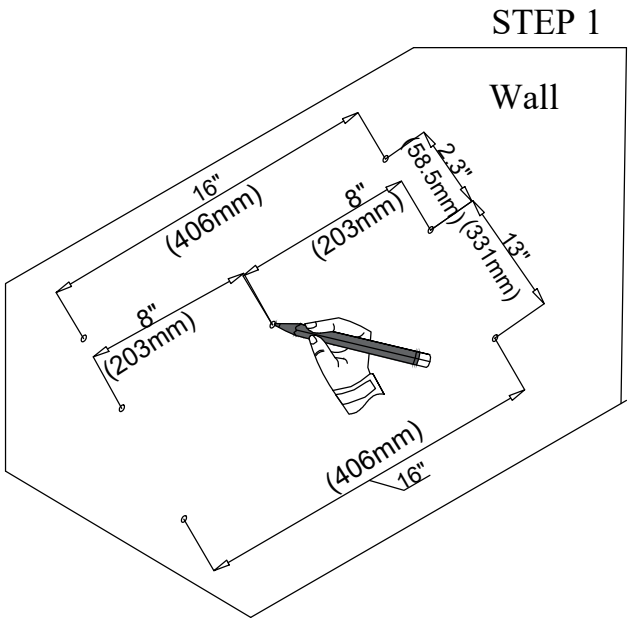

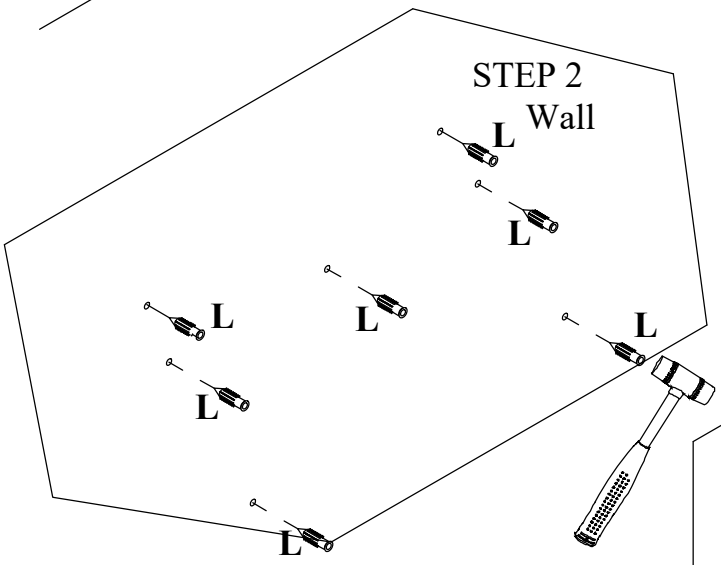

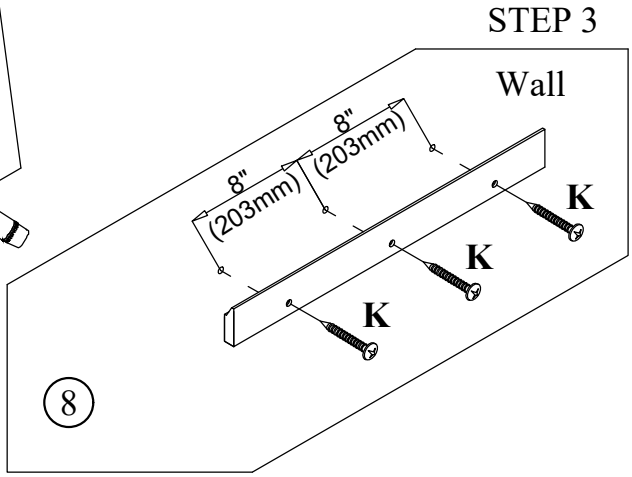


Use a wood stud finder to locate the wood studs behind the walls, and then mark by pencil.
Use a level to ensure the Cross Bar (8) will be level before installing to the wall.

The 8"/8"/8" value is for reference only,
please according to the Wood stud's location.

Make sure the screw holes must be on the wood studs otherwise
the vanity will fall out because the dry wall cannot hold the cabinet.


STEP: 13
Option: 1

K	I
4 PCS	4 PCS

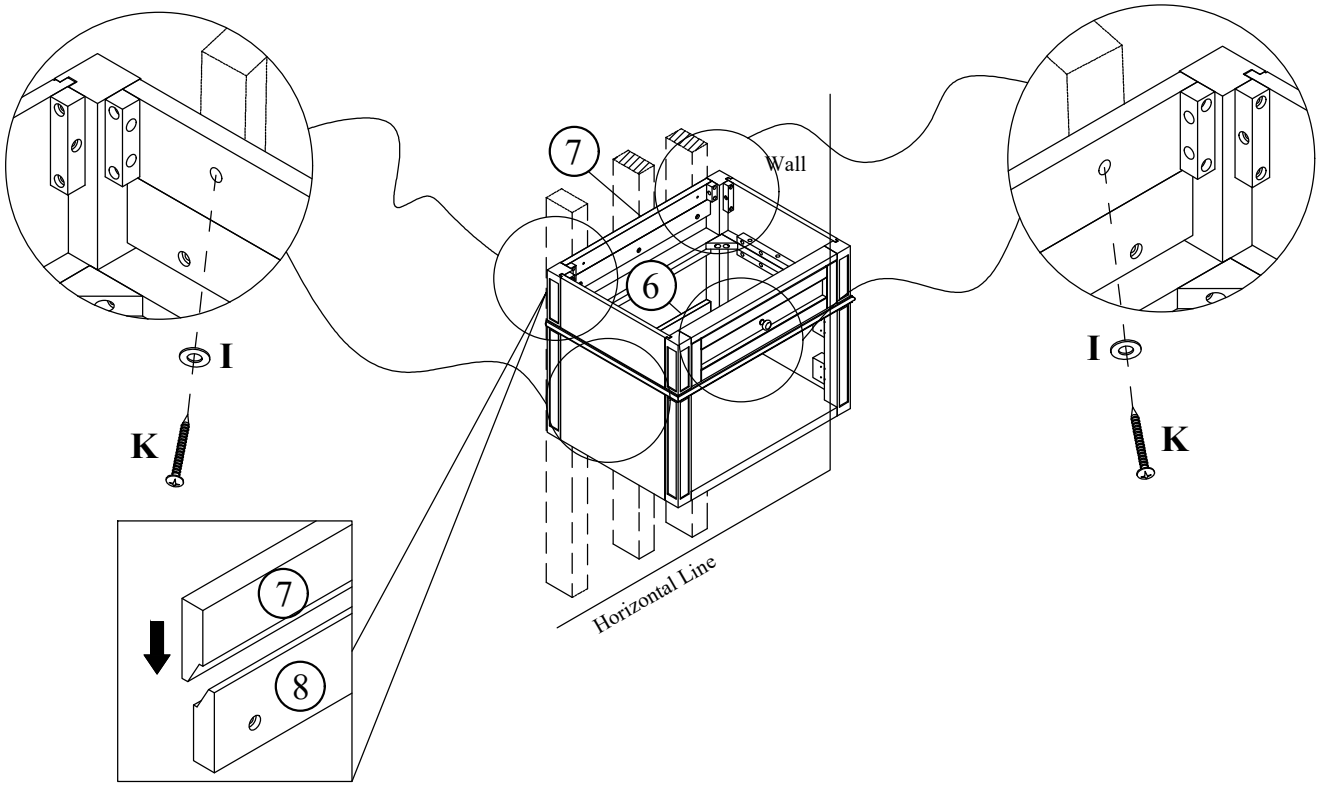


STEP: 13
Option: 2

K	I
4 PCS	4 PCS

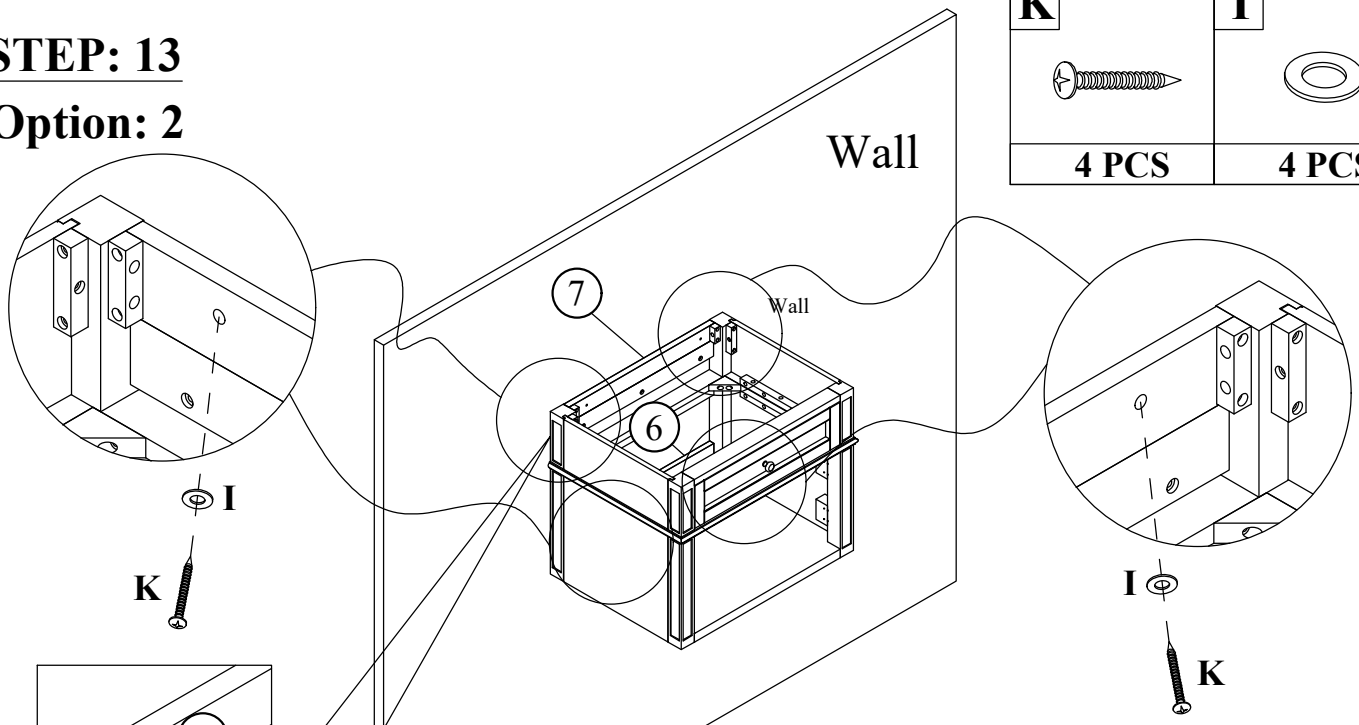


STEP: 14

O	F
4PCS	8PCS

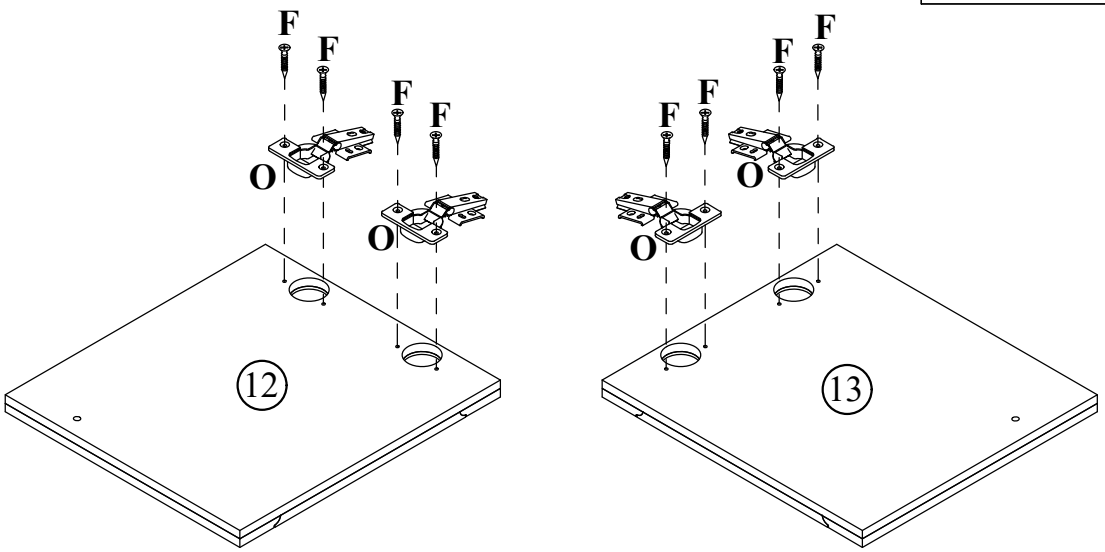


STEP: 15


M	P	F
2PCS	2PCS	16 PCS

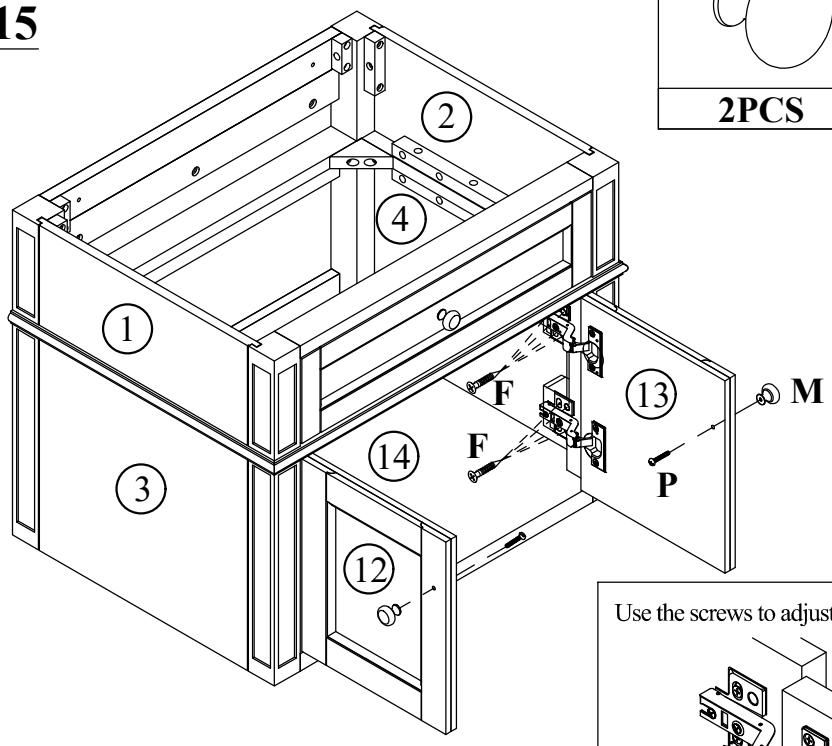


Use the screws to adjust up or down

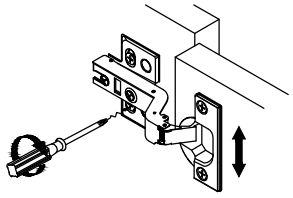


Use the screws to permanent

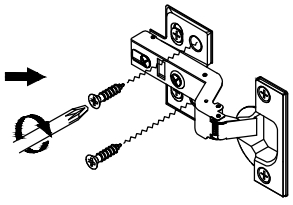

Use the screws to adjust left or right

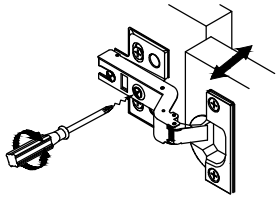


Use the screws to adjust in or out

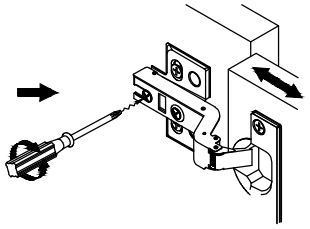


STEP: 16


Install the sink on the cabinet with glue.
Let stand for 24 hours

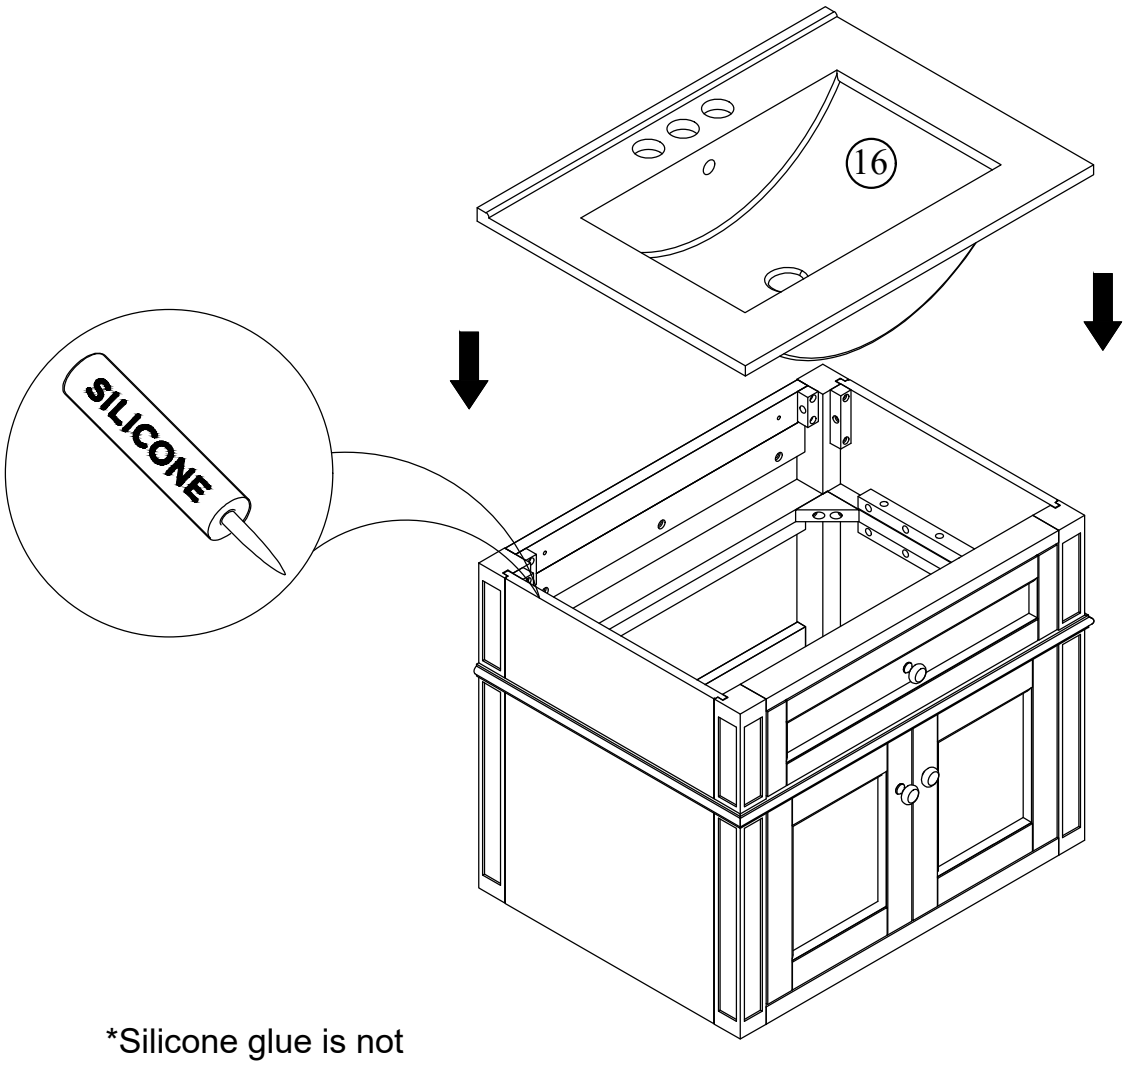


*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

STEP: 17

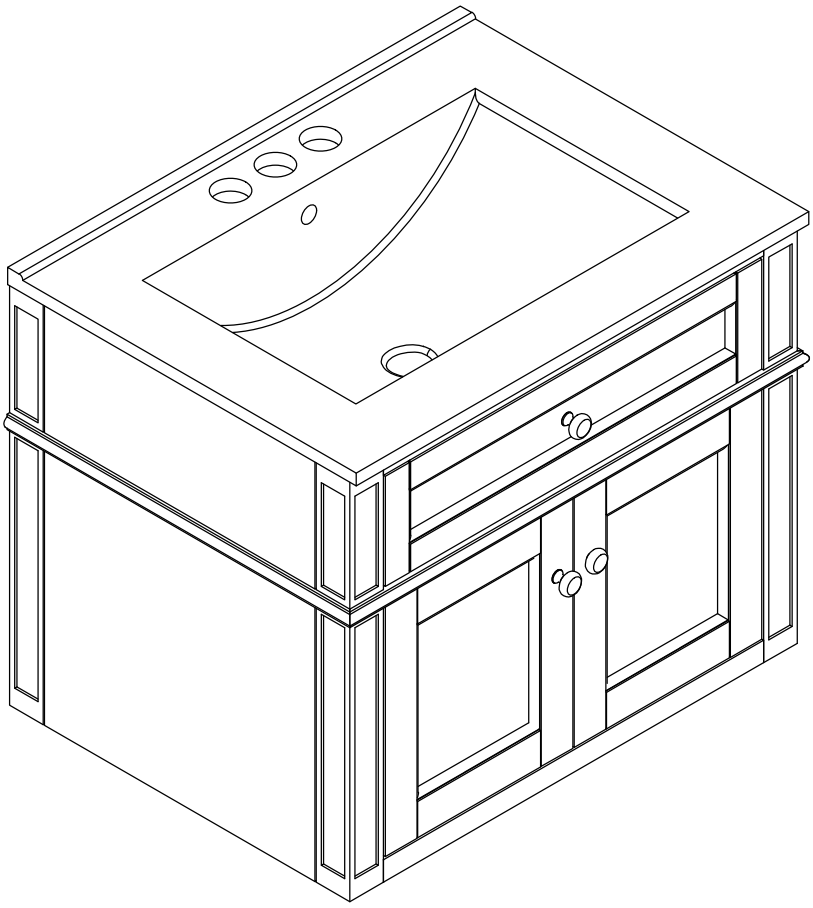


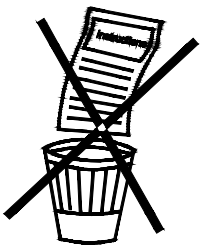

HINGE ADJUSTMENTS

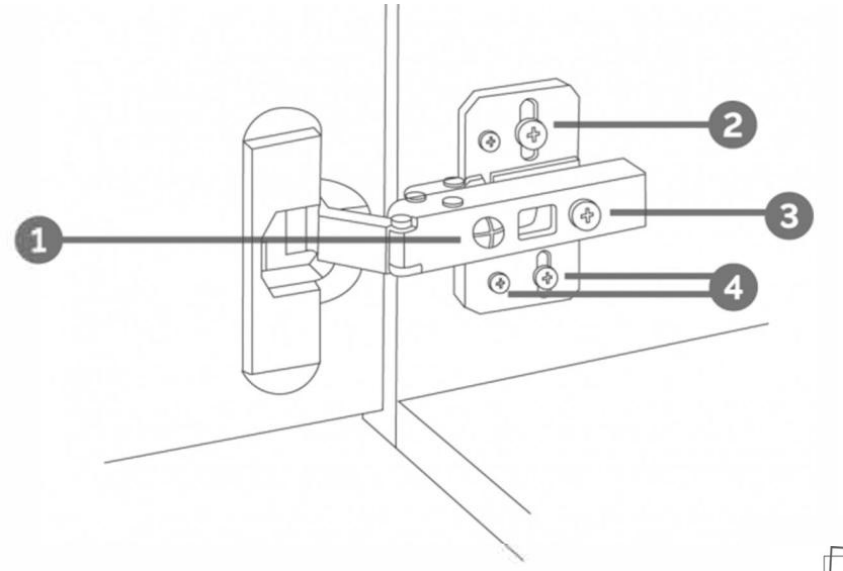


1 Sideways / Tilt adjustment

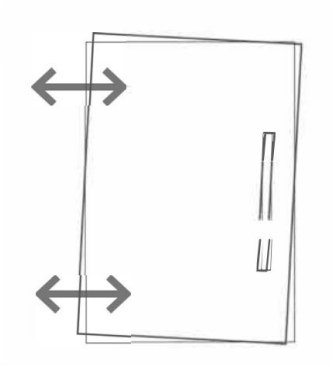


Turn the screw
clockwise to move the door further away from the side of the cabinet
anticlockwise to move the door closer to the side of the cabinet

2 4 Height adjustment

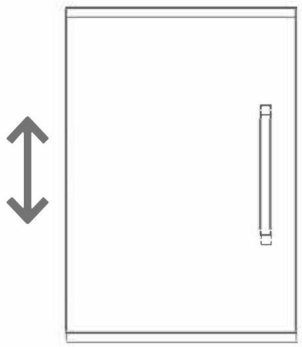

While supporting the weight of the door, turn the screws
clockwise to move the door up
anticlockwise to move the door down

3 Forward and back adjustment

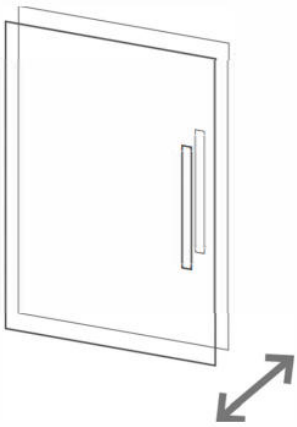

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw
clockwise to decrease the gap between the door and the cabinet
anticlockwise to increase the gap between the door and the cabinet