

Installation instructions for intake smoke pipe

- ✧ Only applicable for customers who need to install intake pipes.



Figure 1

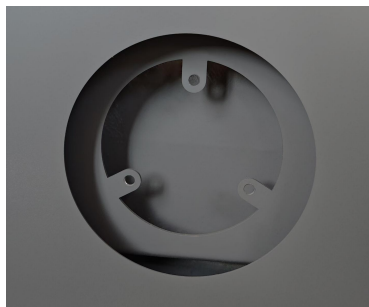


Figure 2

1. Knock off the cover plate on the fireplace backboard (as shown in Figure 1) and strike the three points circled in red.
2. The appearance after removing the cover plate (as shown in Figure 2).

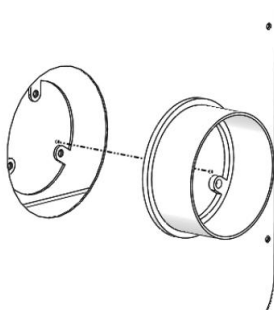


Figure 3

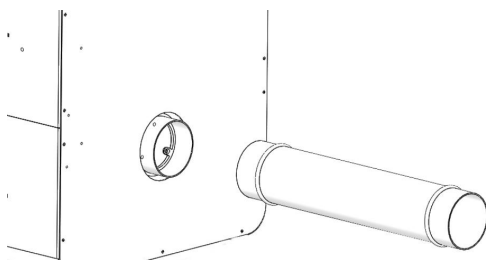


Figure 4

3. Install a chimney head with a diameter of 100 (as shown in Figure 3).
4. Install a smoke pipe with a diameter of 100 (as shown in Figure 4).