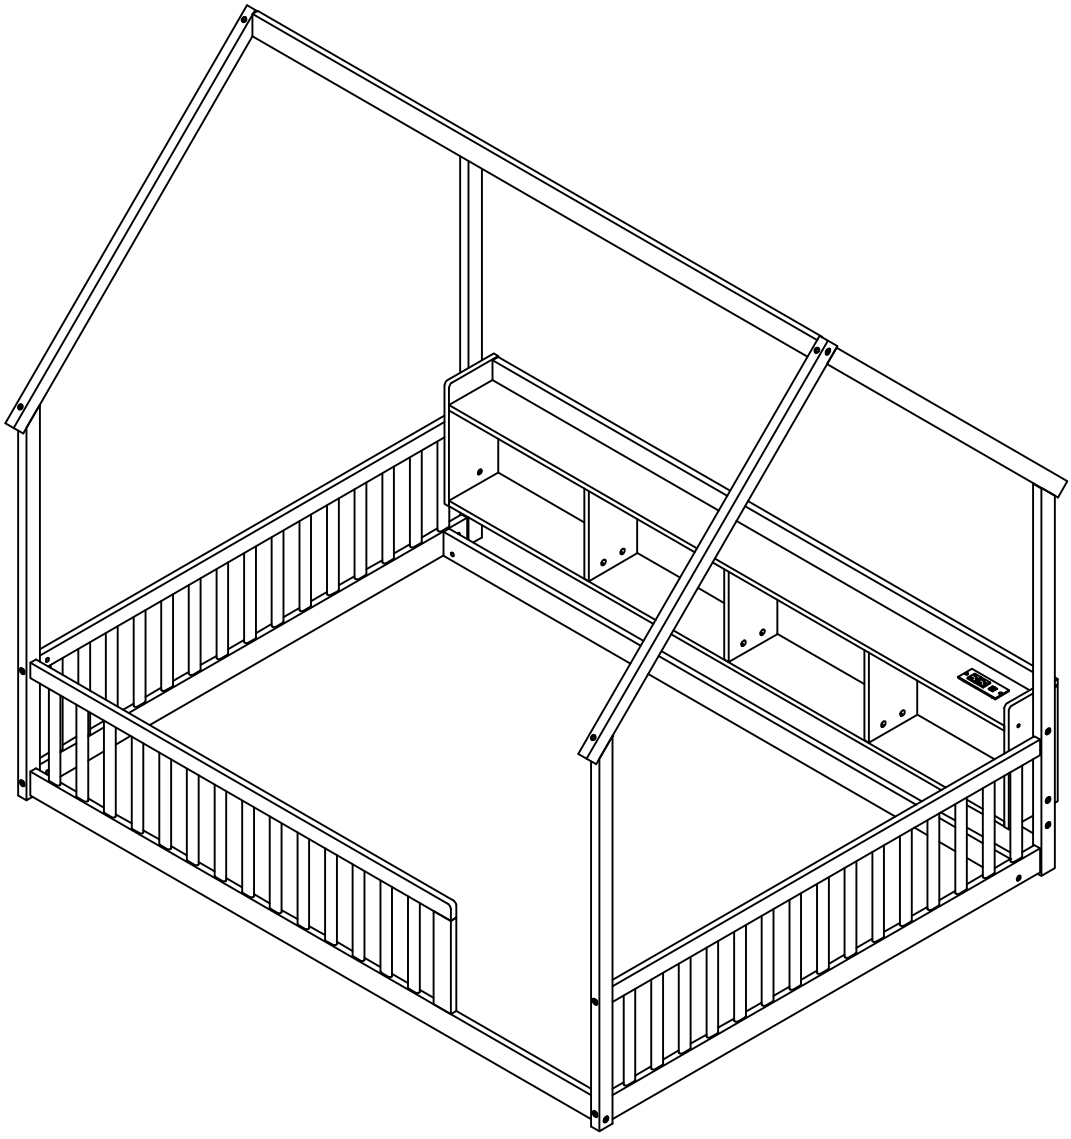
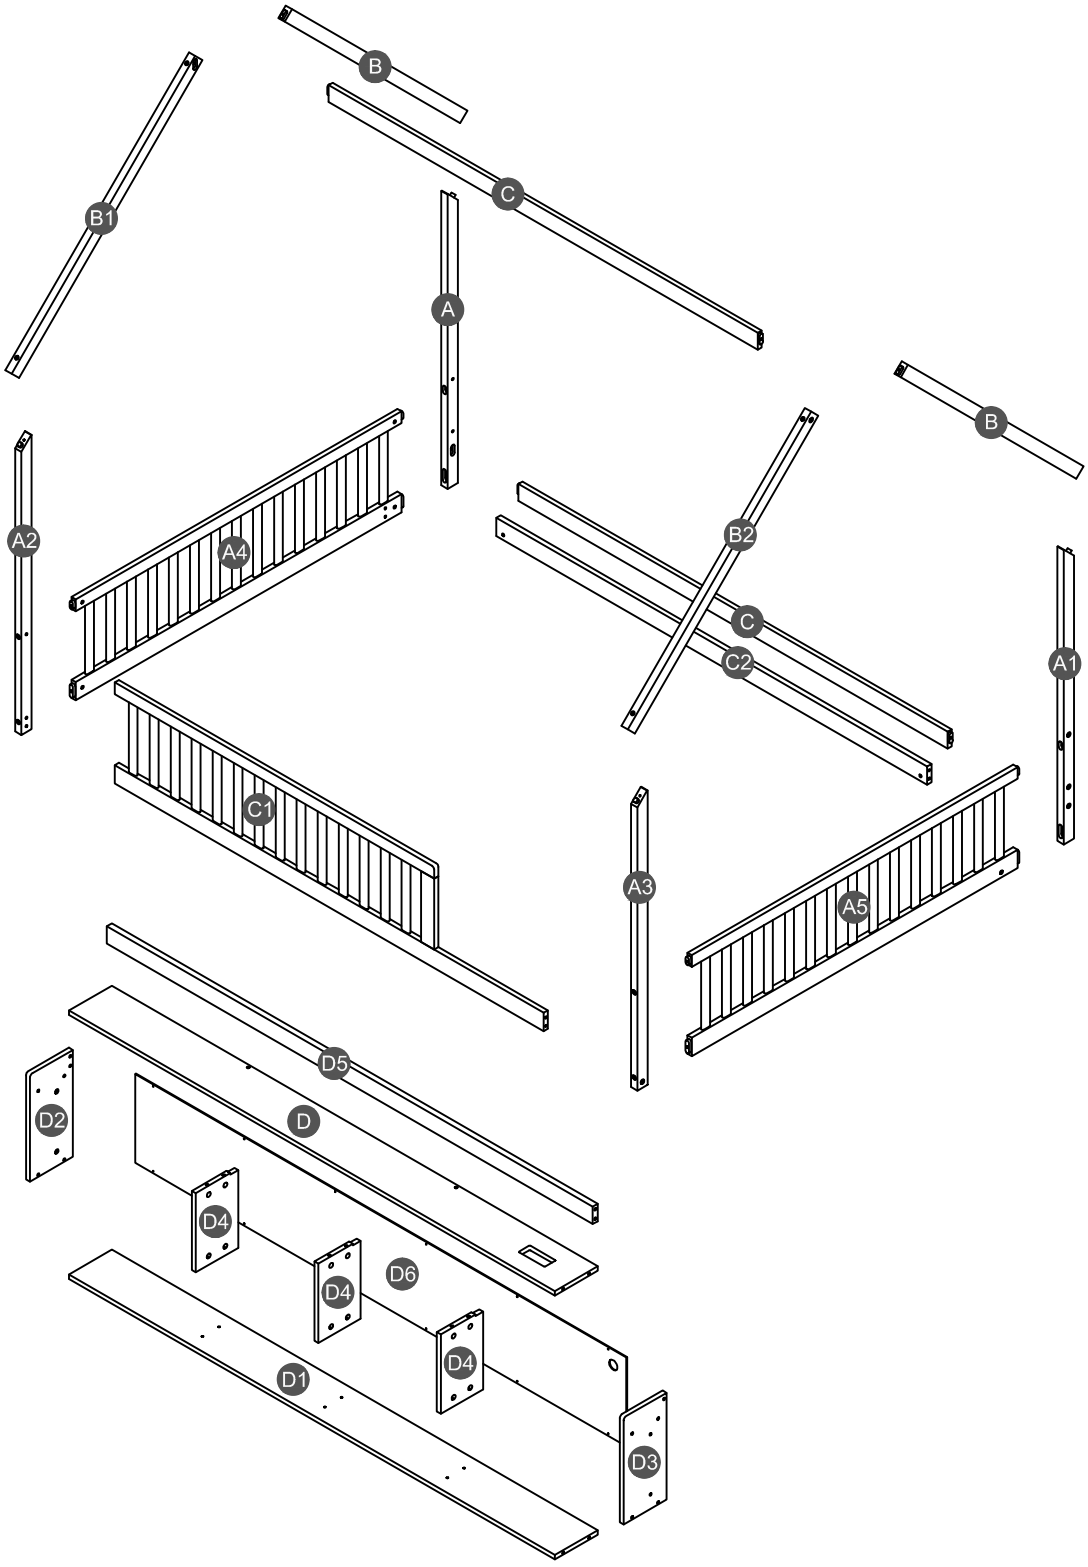
# ASSEMBLY INSTRUCTIONS


















# FULL FLOOR HOUSE BED WITH STORAGE SHELVES








# Detail View





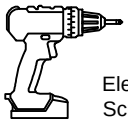
# Part List

| | | |
|---|---|---|
| **A**<br><br>Leg (Left back) - 1pc | **A1**<br><br>Leg (Right back) - 1pc | **A2**<br><br>Leg (Left front) - 1pc |
| **A3**<br><br>Leg (Right front) - 1pc | **A4**<br><br>Guard rail HB - 1pc | **A5**<br><br>Guard rail FB - 1pc |
| **B**<br><br>Upper bar (back) - 2pcs | **B1**<br><br>Upper bar (left front) - 1pc | **B2**<br><br>Upper bar (right front) - 1pc |
| **C**<br><br>Upper horizontal bar - 2pcs | **C1**<br><br>Guard rail (front) - 1pc | **C2**<br><br>Lower horizontal bar (back) - 1pc |
| **D**<br><br>Top panel - 1pc | **D1**<br><br>Bottom panel - 1pc | **D2**<br><br>Left side panel - 1pc |
| **D3**<br><br>Right side panel - 1pc | **D4**<br><br>Divider panel - 3pcs | **D5**<br><br>Upper horizontal bar - 1pc |
| **D6**<br><br>Back panel - 1pc | | |

# Hardware List

| | | |
|---|---|---|
| **1**  Ø8*30mm | **2**  (Ø15)1/4"*80mm | **3**  (Ø12)1/4"*60mm |
| Wood dowel (6pcs) | Hex-Head bolts (17pcs) | Hex-Head bolts (10pcs) |
| **4**  (Ø12)1/4"*40mm | **5**  1/4"*15 (9.5mm) | **6**  (Ø12)1/4"*65mm |
| Hex-Head bolts (4pcs) | Horizontal-Hole bolts(27pcs) | Hex-Head Screws (6pcs) |
| **7**  (Ø12)1/4"*40mm | **8**  21*21*17*1.7mm | **9**  Ø3.5*15mm |
| Hex-Head Screws (2pcs) | Metal bracket (1pc) | Wood screws (4pcs) |
| **10**  Ø3*12mm | **11**  Ø7"*35mm | **12**  Ø14*9mm |
| Wood screws (13pcs) | Cam lock (12pcs) | Cam lock (12pcs) |
| **13**  1500*125*47*43mm | **14**  L1900mm | **15**  L2000mm |
| Power outlet | Led light (1pc) | Adapter and wire strip (1pc) |
| **16**  22*10*6mm | **17**  (1/4")4.5*58mm | |
| Clamp plastic (1pc) | Allen key | |

## OPTIONAL TOOLS FOR ASSEMBLY (NOT INCLUDED)

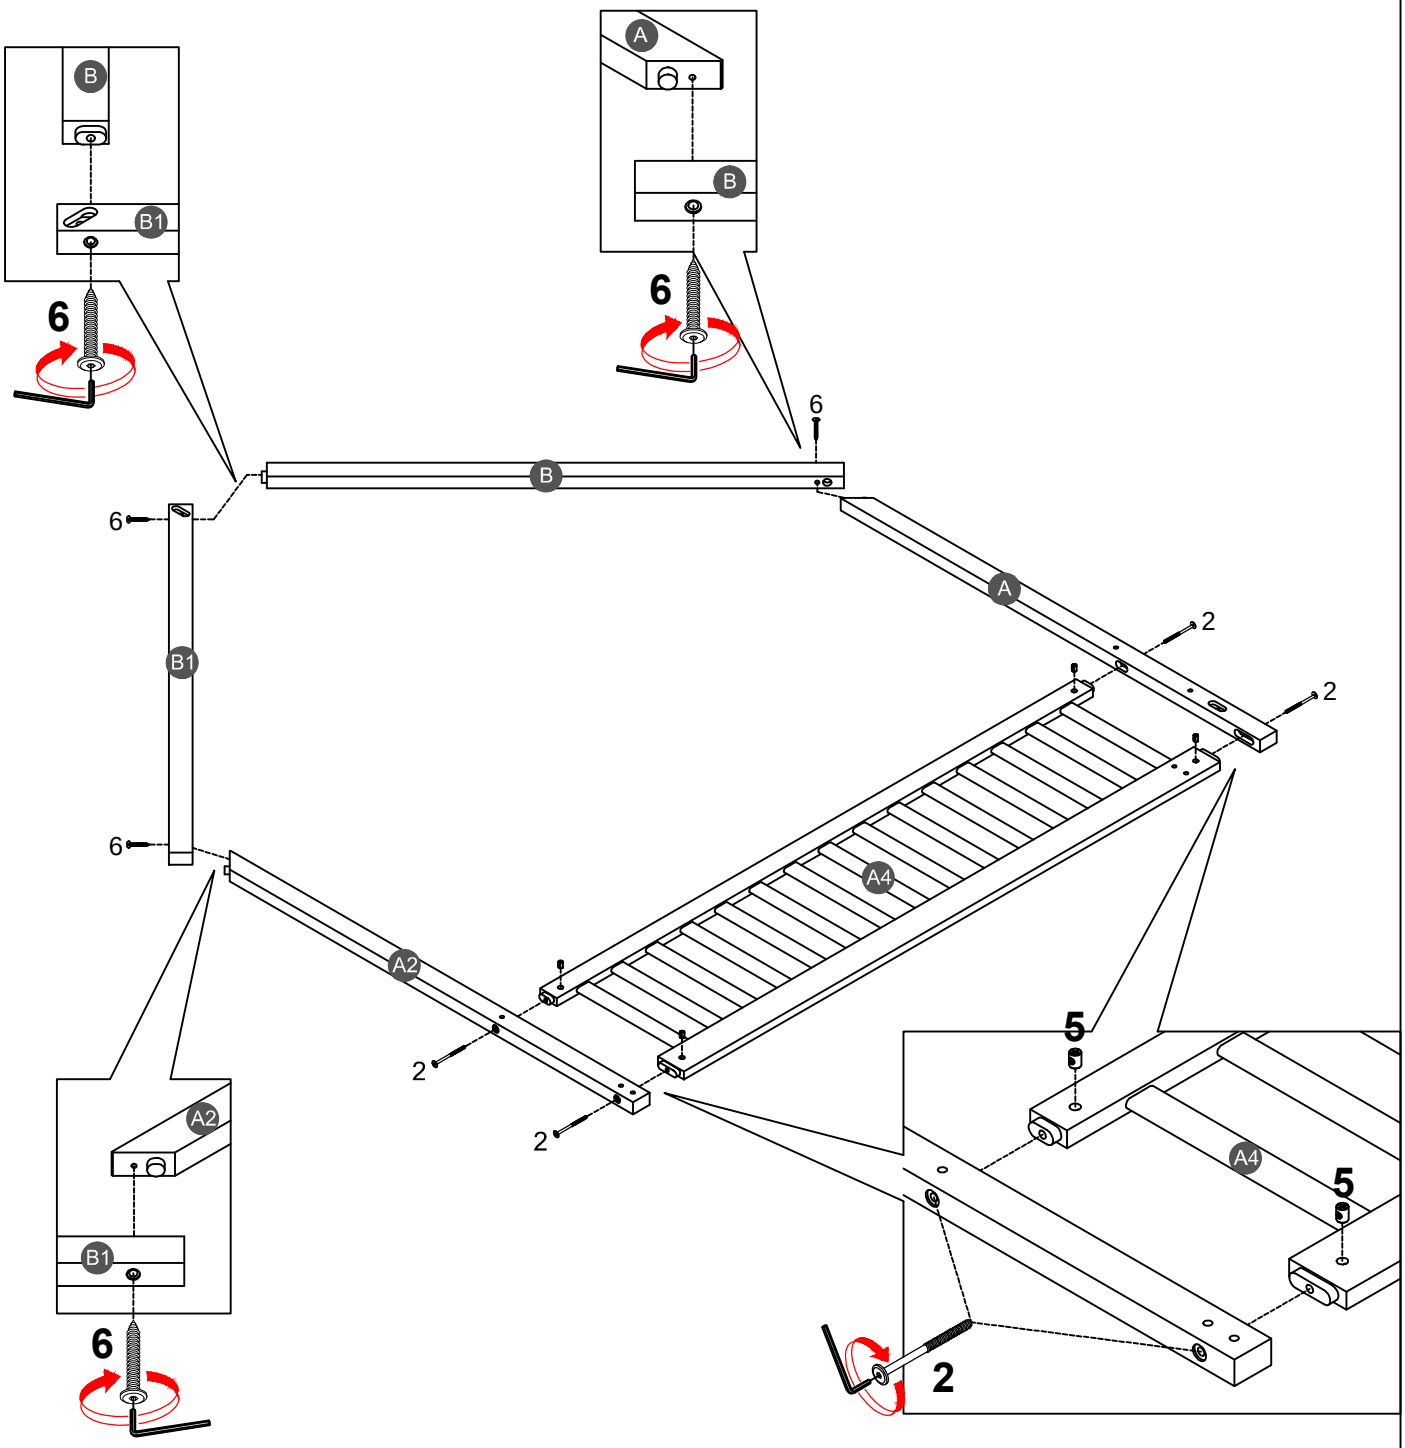




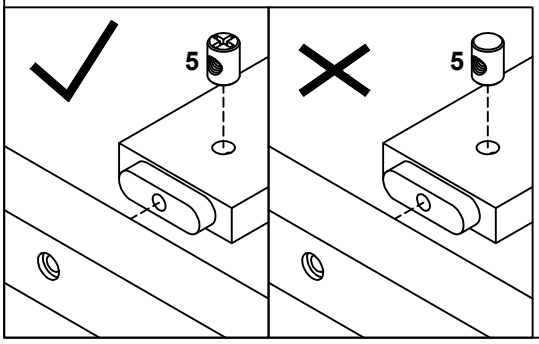
Electric Screwdriver

PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

# STEP 1:

| 2 | 5 | 6 |
|---|---|---|
| 4PCS | 4PCS | 3PCS |

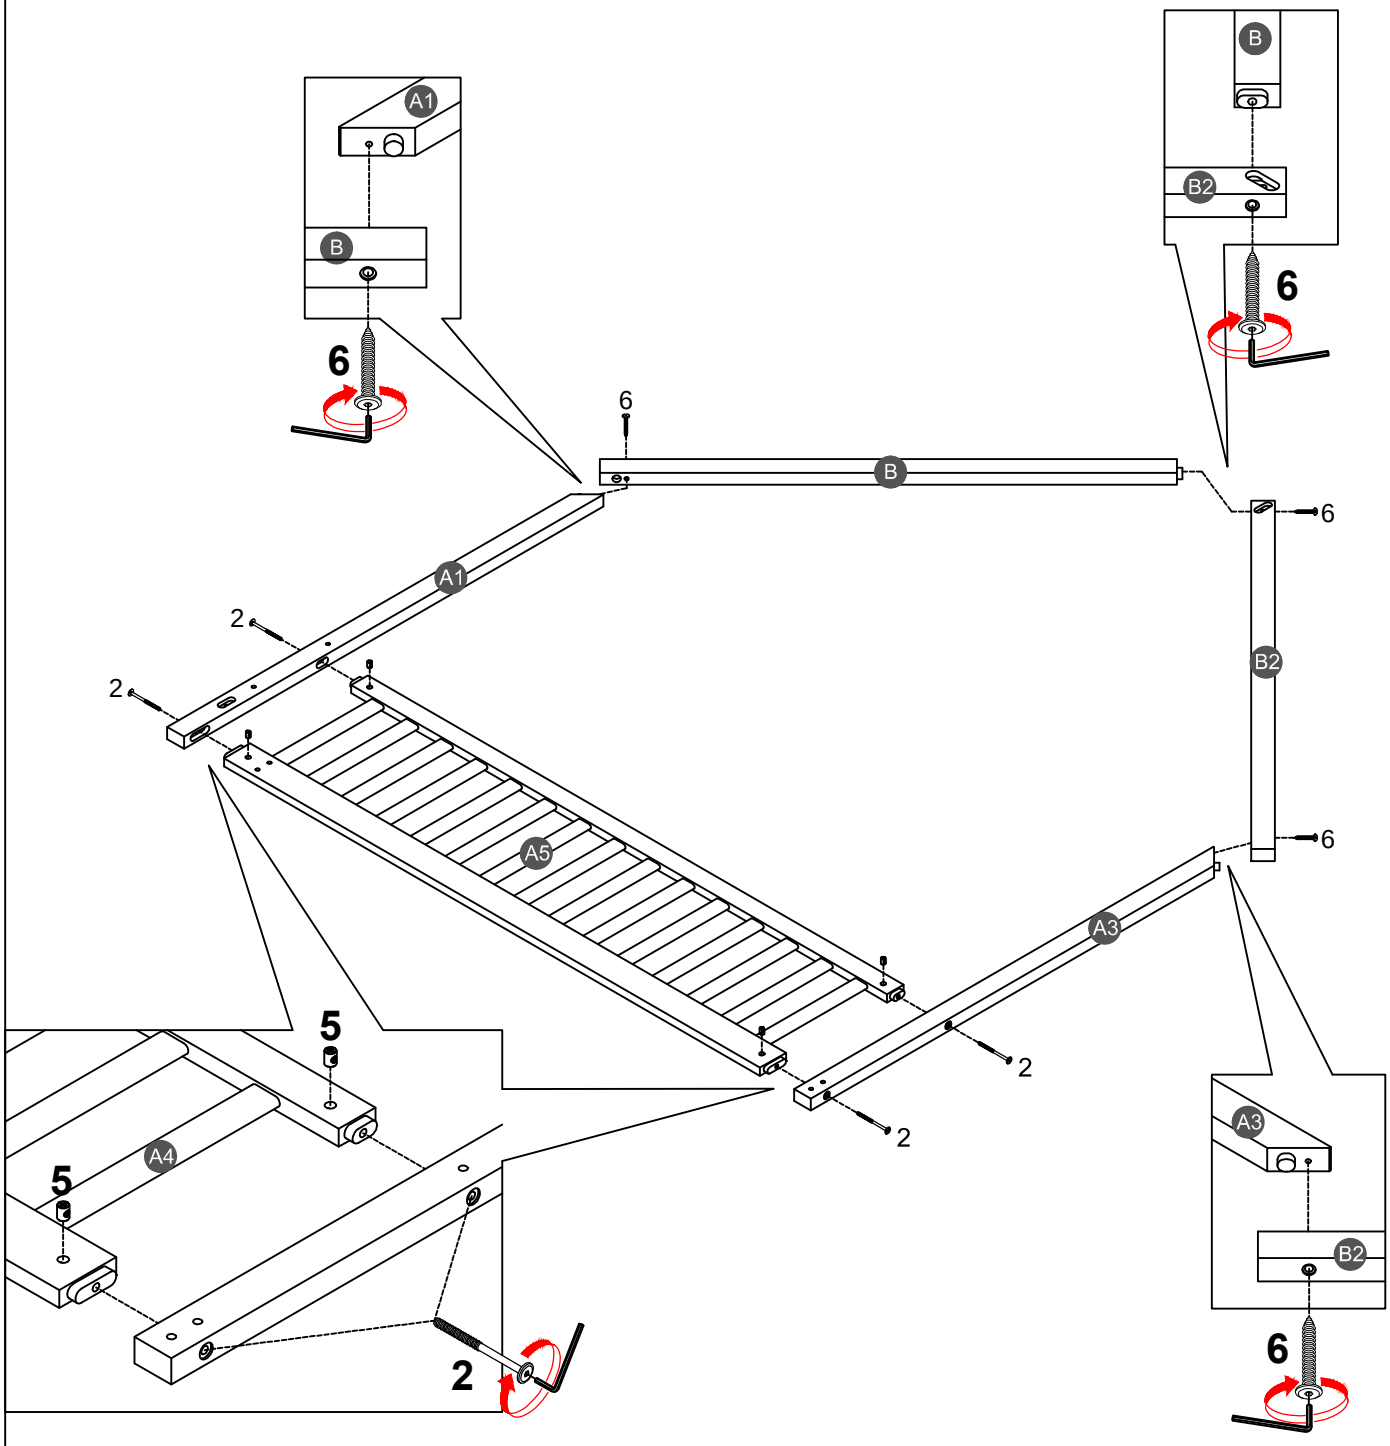



**EN: Note:** The side of part #5 with the "x" mark needs to be facing up, otherwise it cannot be tightened.

# STEP 2:

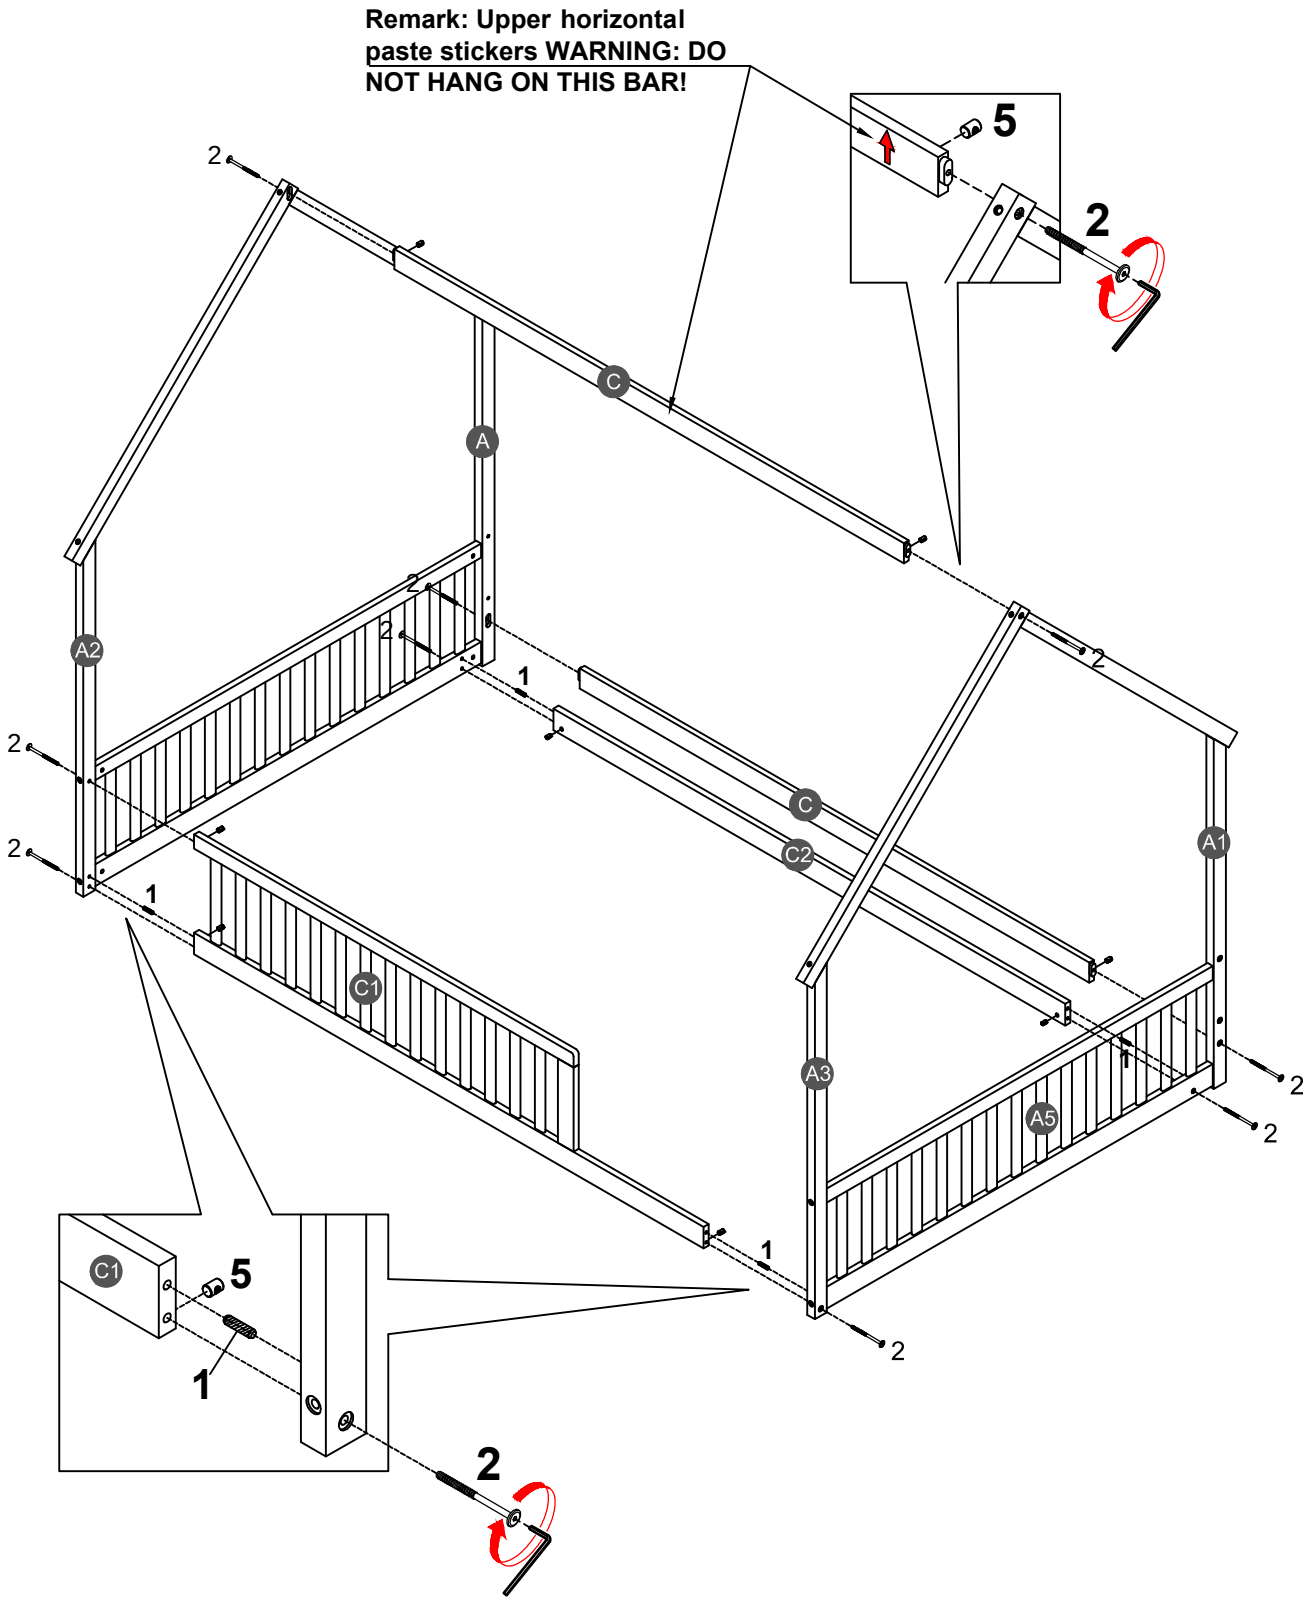
| 2 | 5 | 6 |
|---|---|---|
| 4PCS | 4PCS | 3PCS |



# STEP 3:

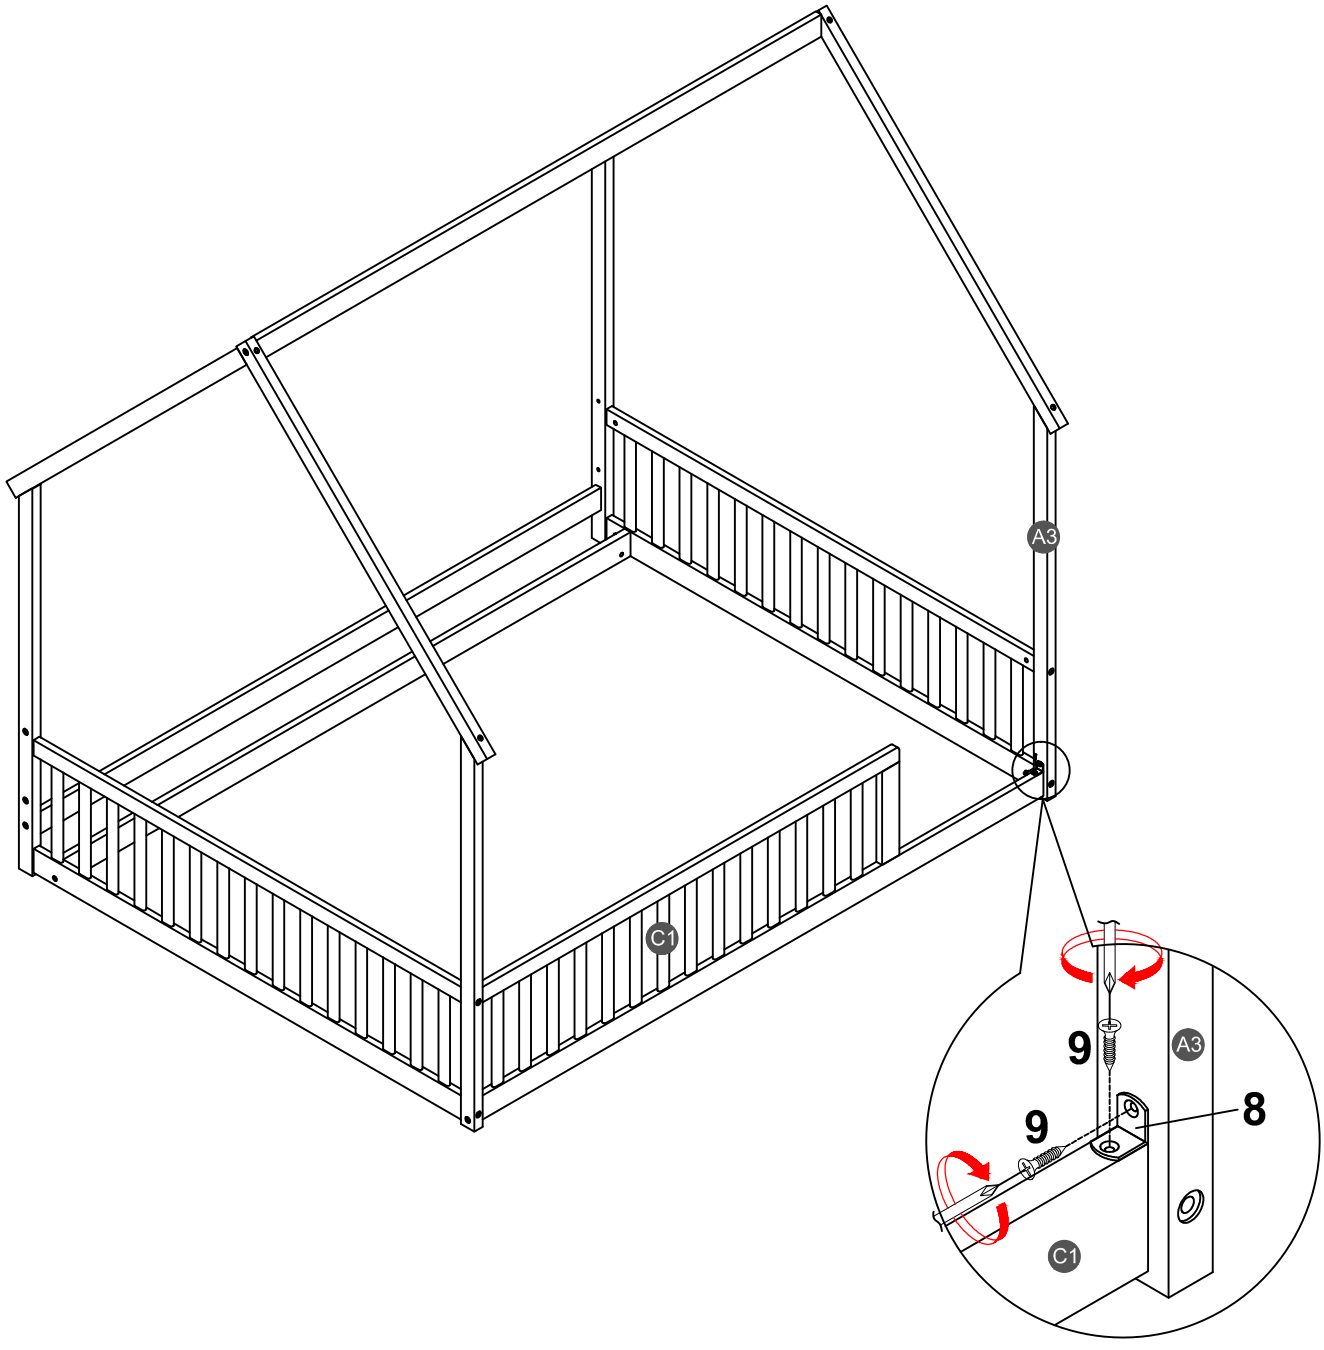
| 1 | 2 | 5 |
|---|---|---|
| 4PCS | 9PCS | 9PCS |

Note: Not fully tighten until all bolts are started.

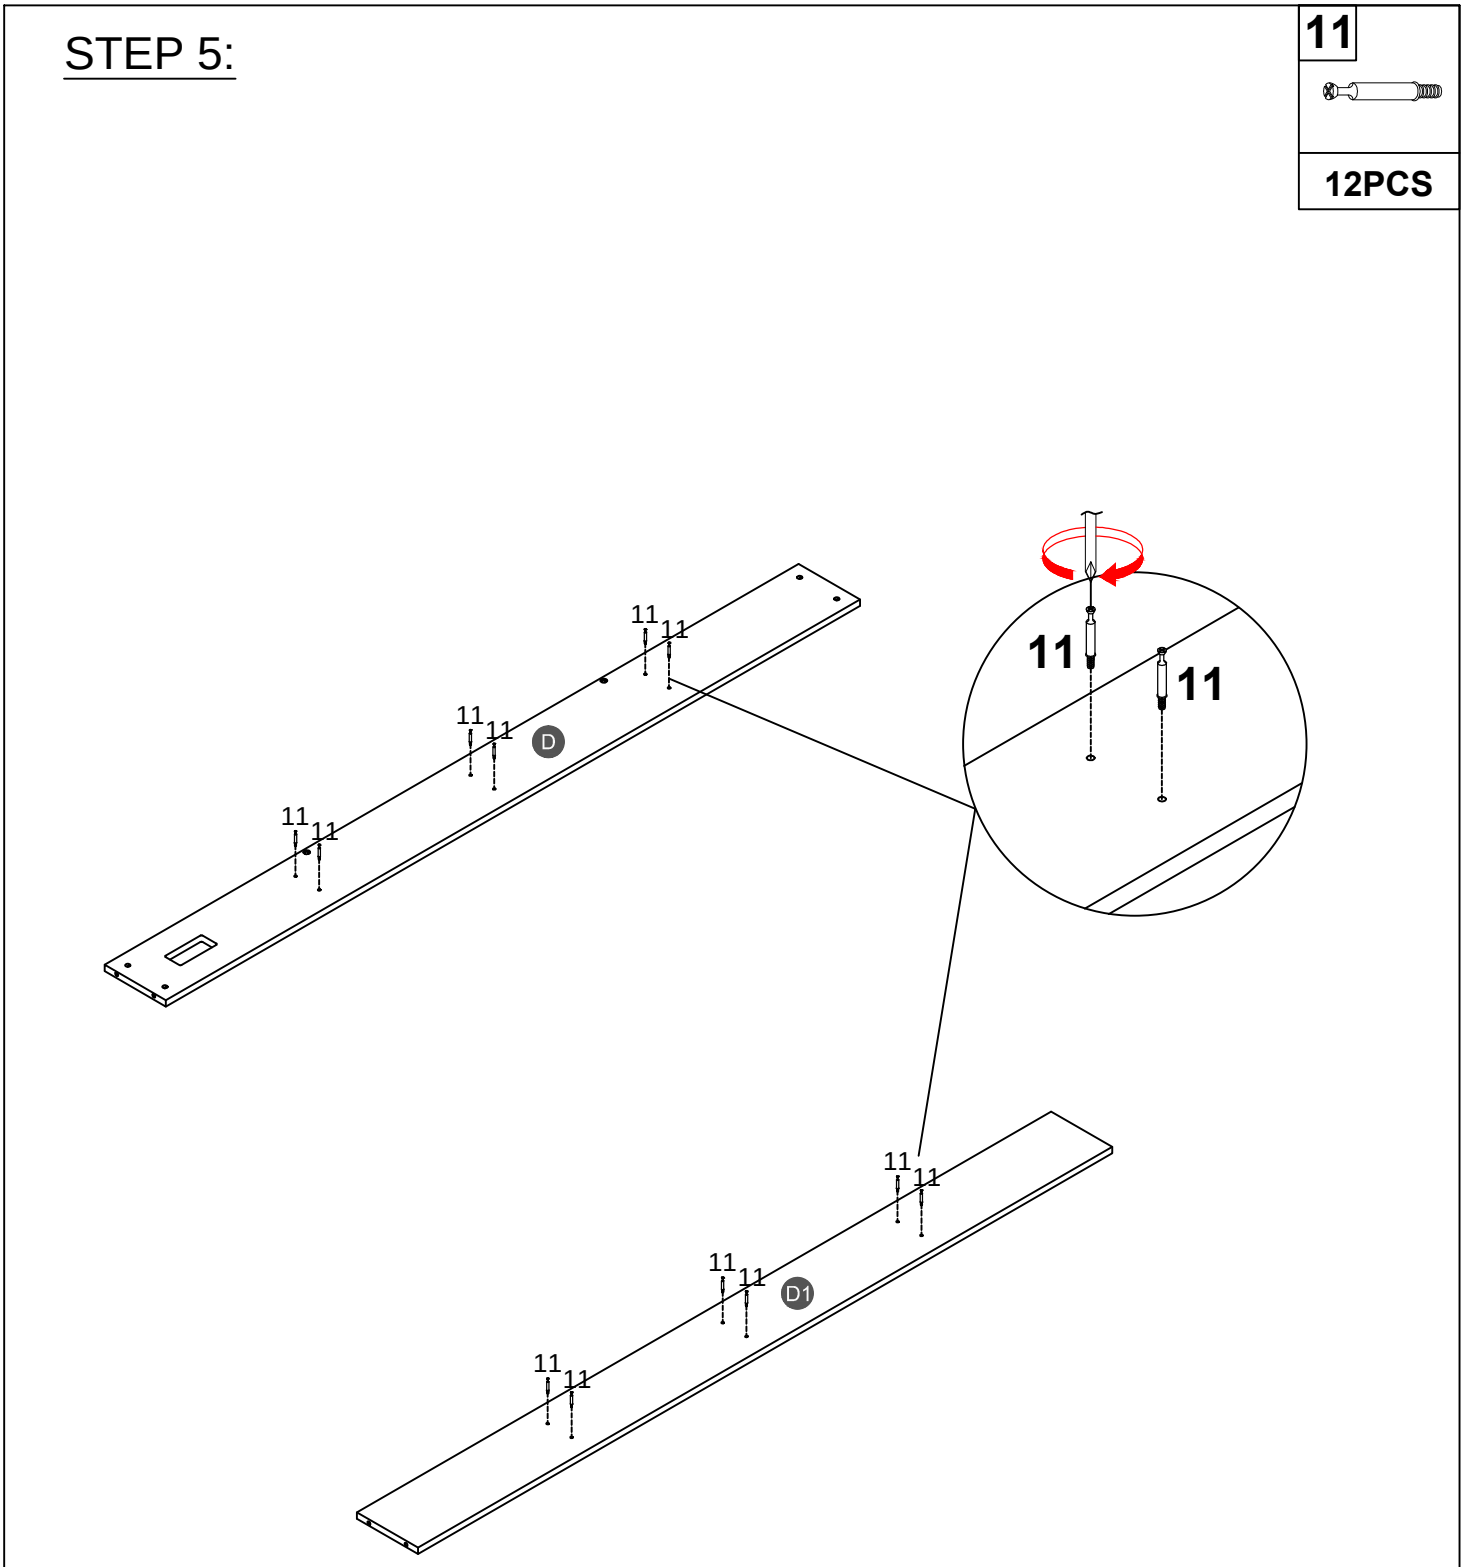


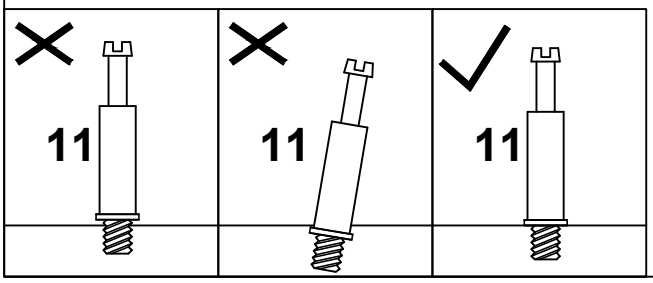
# STEP 4:

| 8 | 9 |
| --- | --- |
| 1PC | 2PCS |



# STEP 5:

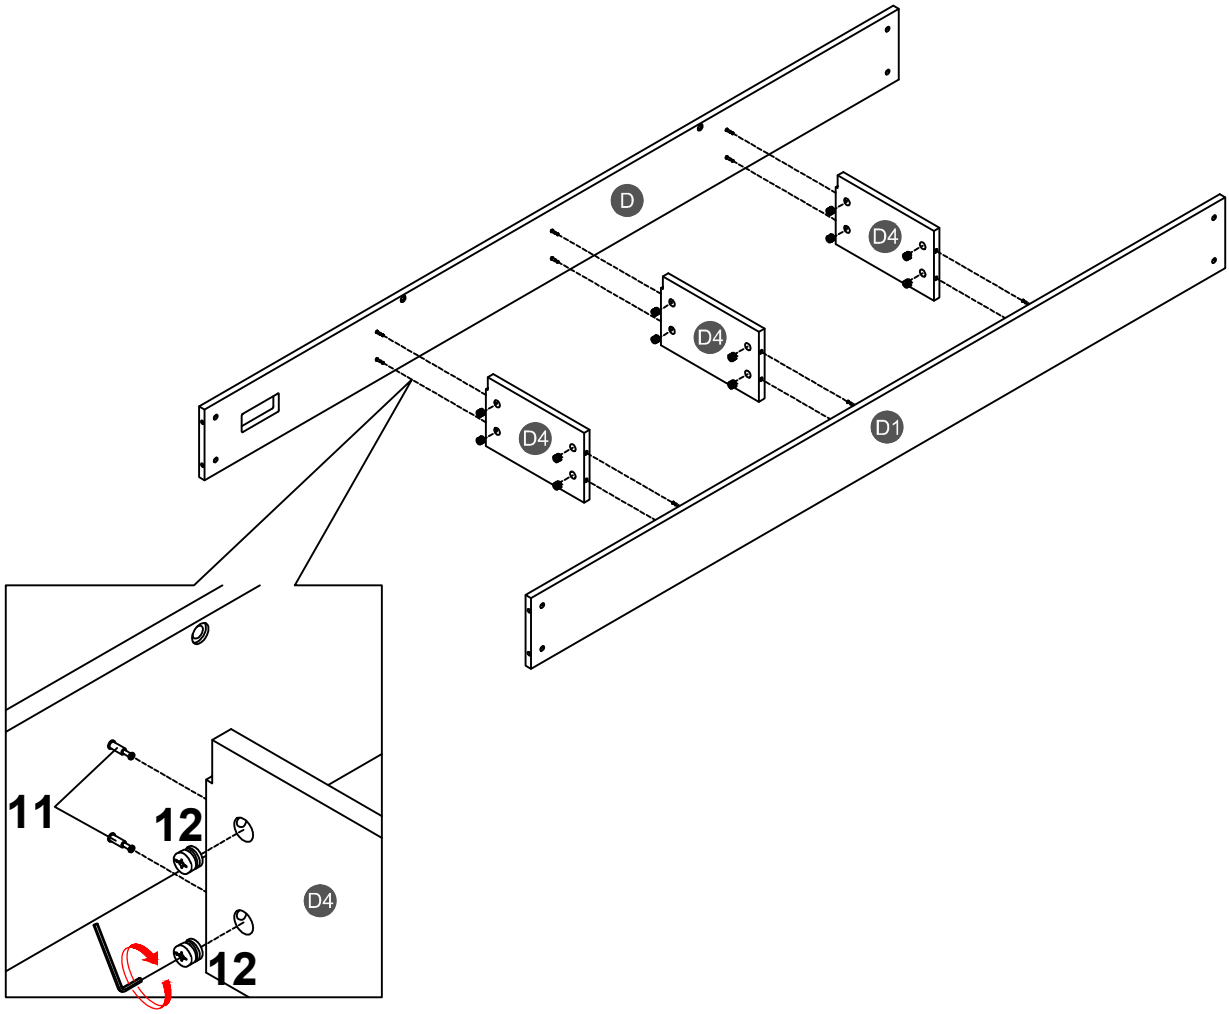


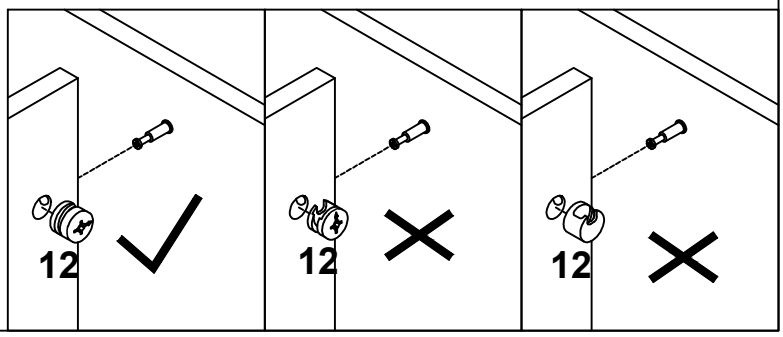
# STEP 6:



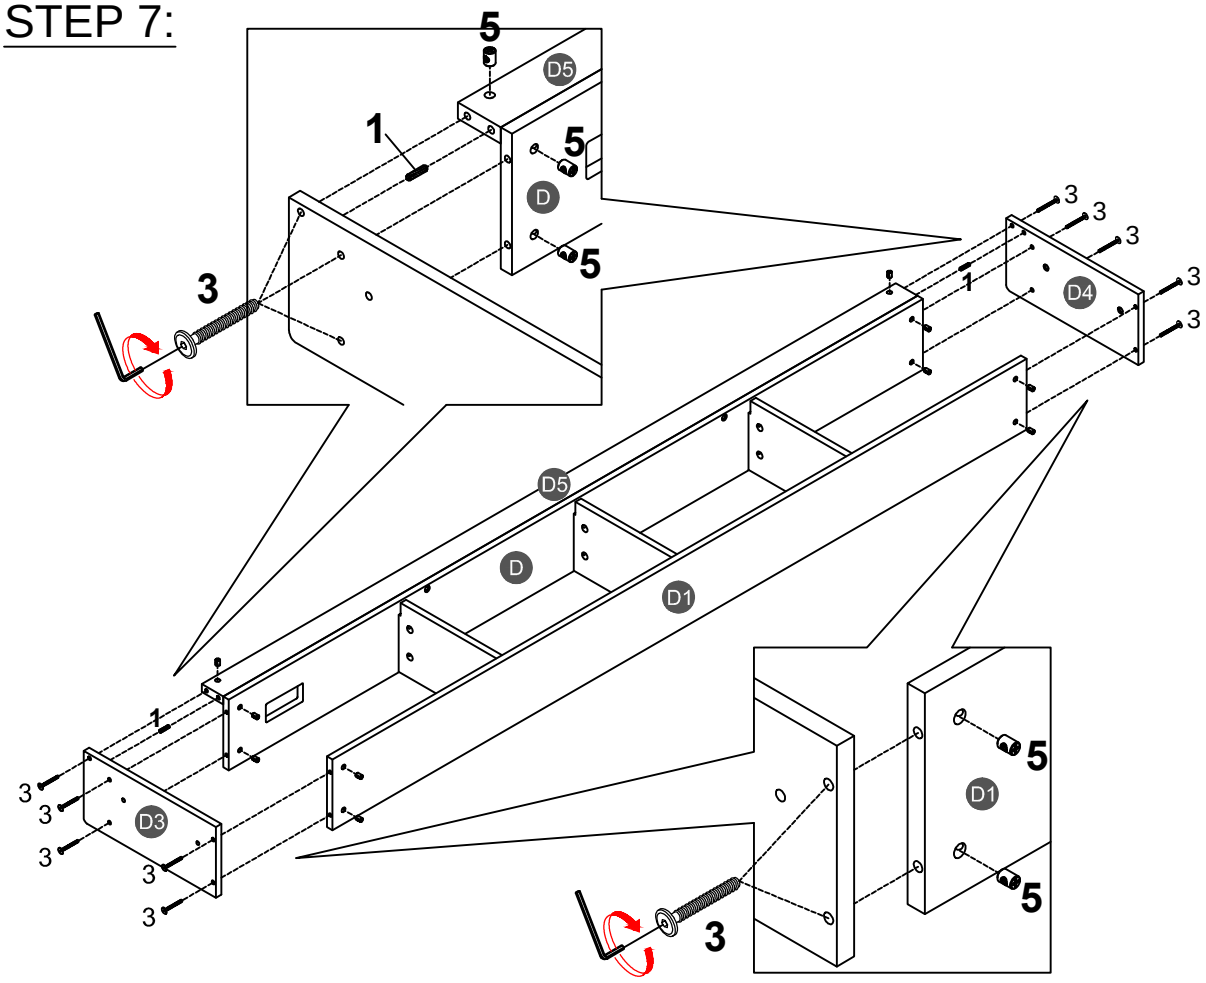

12PCS




Note: Place hardware #12 with the "X" face outward,
and make sure that the arrowhead is upward. Then, place hardware #12 into the hole of hardware #11 and tighten it clockwise with a hand screwdriver.
(Please do NOT use an electric screwdriver.)



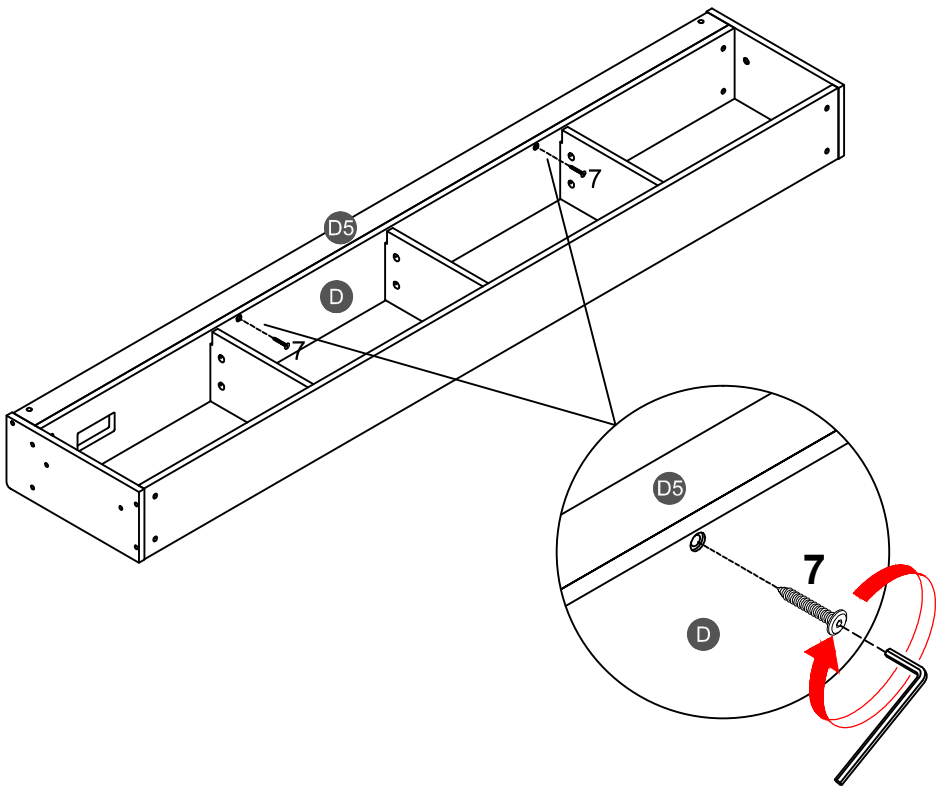
## STEP 7:




| | |
|---|---|
| 1 | 2PCS |
| 3 | 10PCS |
| 5 | 10PCS |

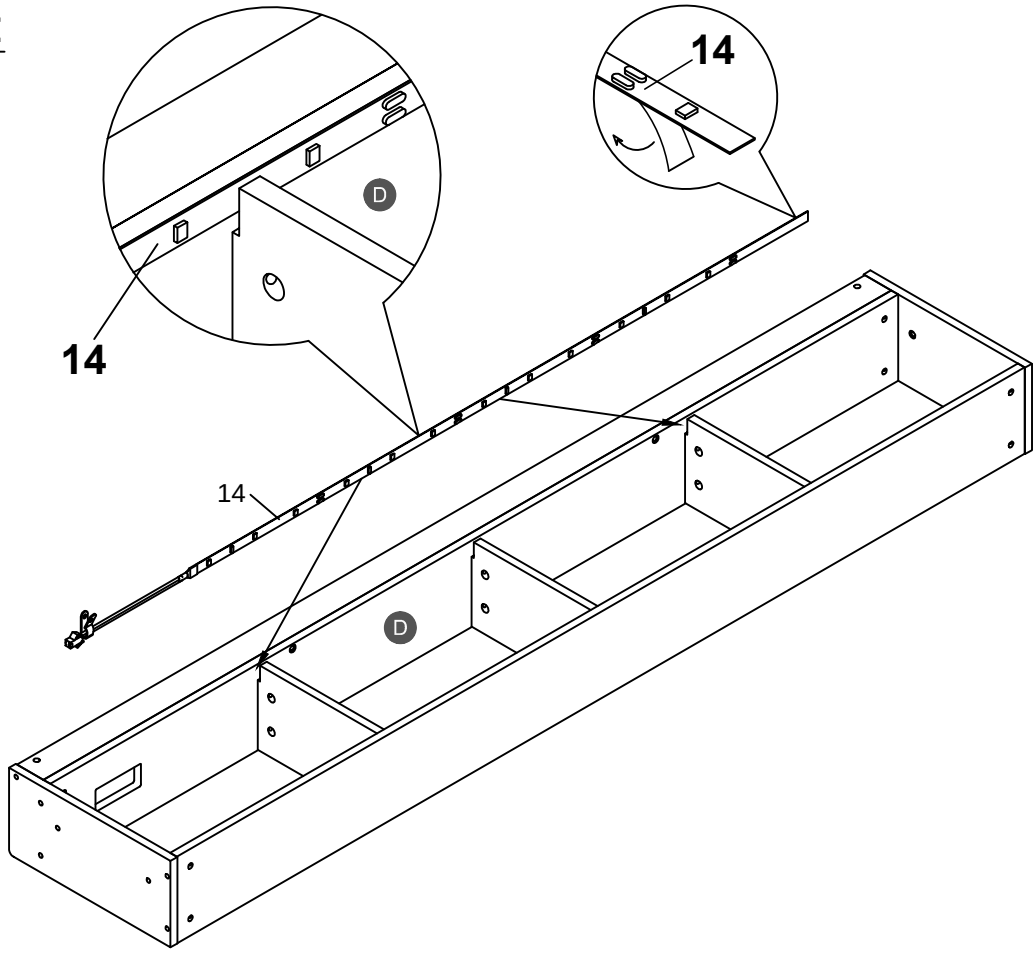
## STEP 8:

ÉTAPE




| | |
|---|---|
| 7 | 2PCS |

## STEP 9:

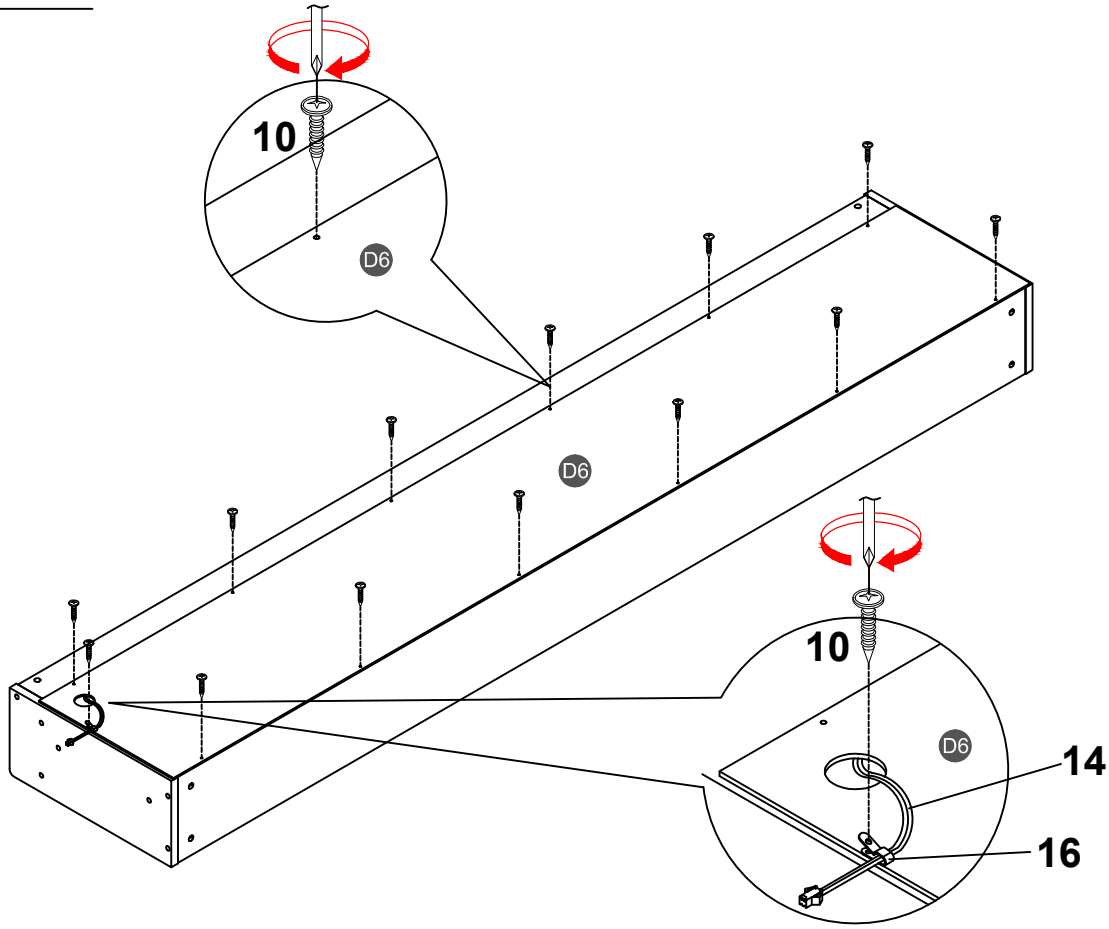



14

1PC

## STEP 10:

ÉTAPE



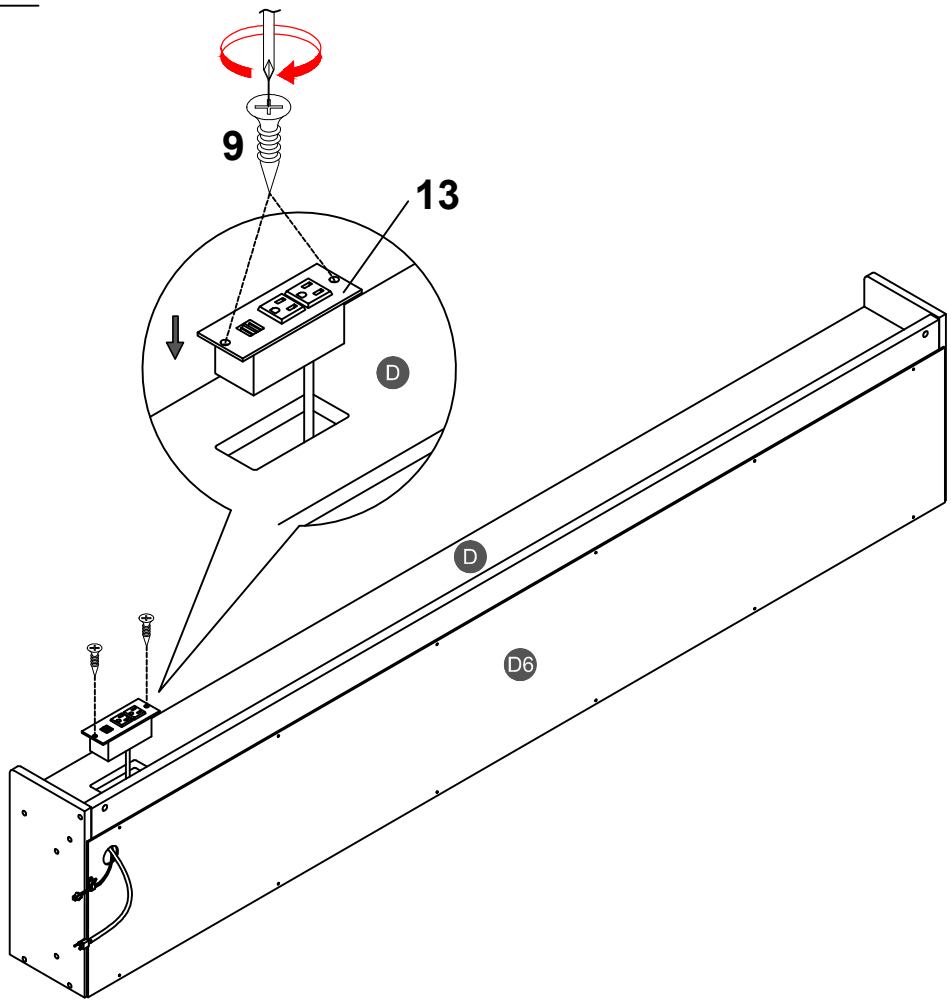

10

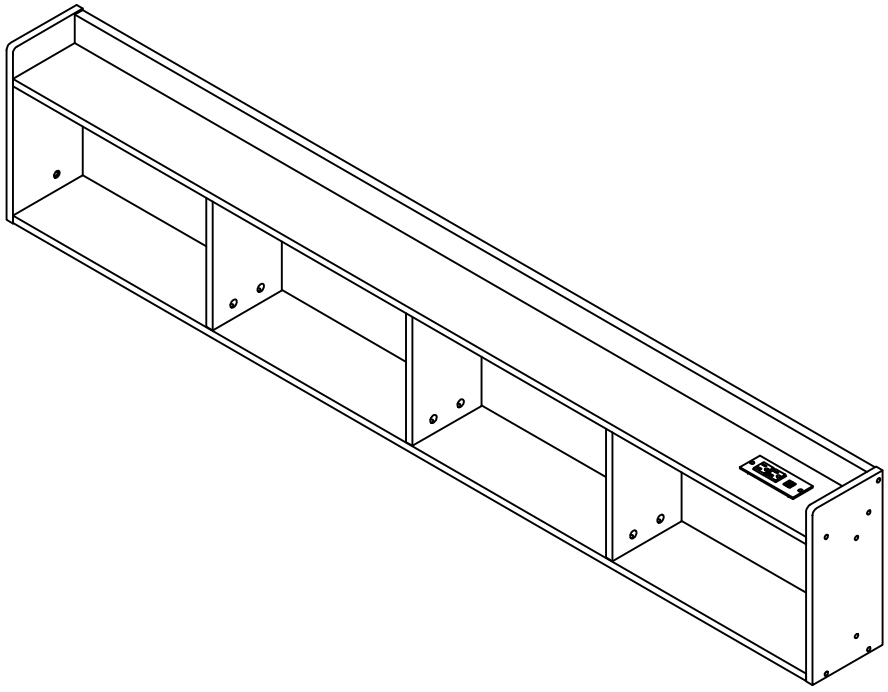
13PCS

16

1PC

# STEP 11:



| 9 | |
|---|---|
| | 2PCS |
| 13 | |
| | 1PC |

# STEP 12:

| 4 | 15 |
|---|---|
| 4PCS | 1PC |

