

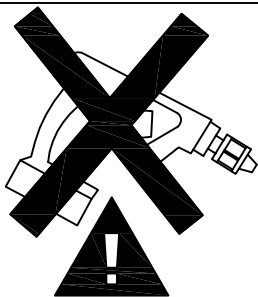
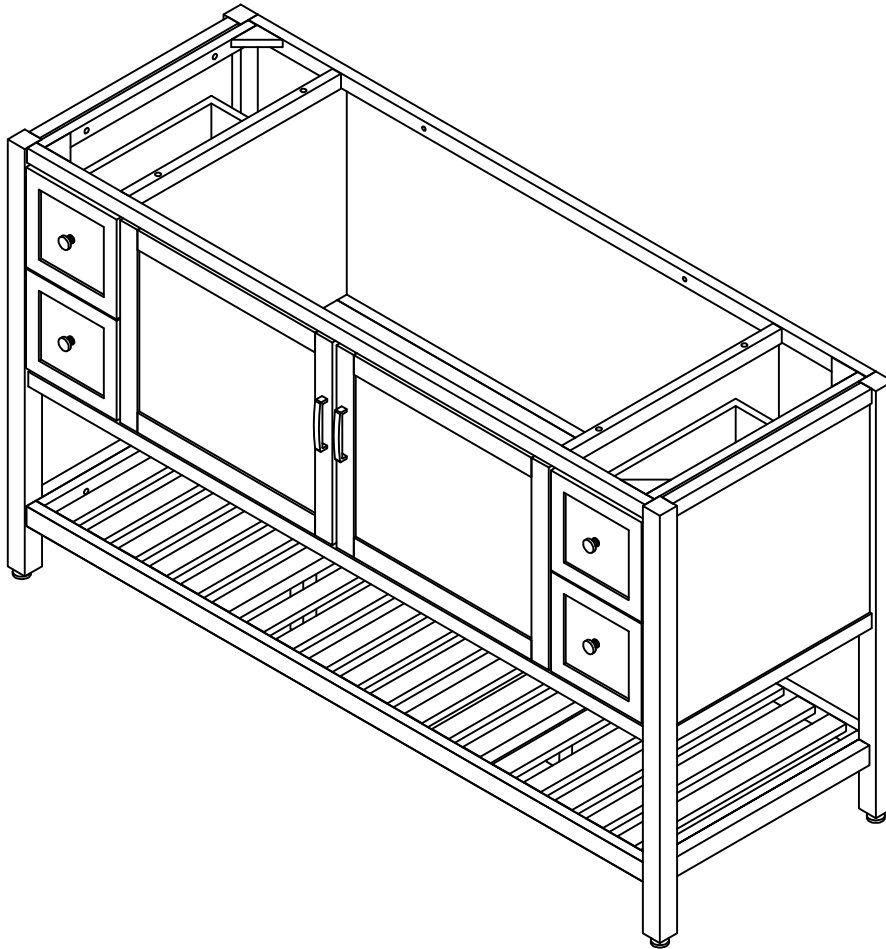


ASSEMBLY INSTRUCTION


60" Vanity




. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe !!!
. Please assemble on a clean soft surface to avoid damage.

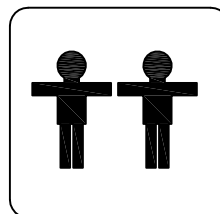


Tools Required

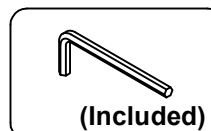

(Included)

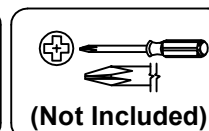


(Not Included)

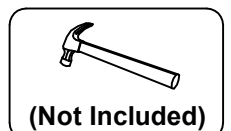


(Not Included)

Part list - 60" Vanity

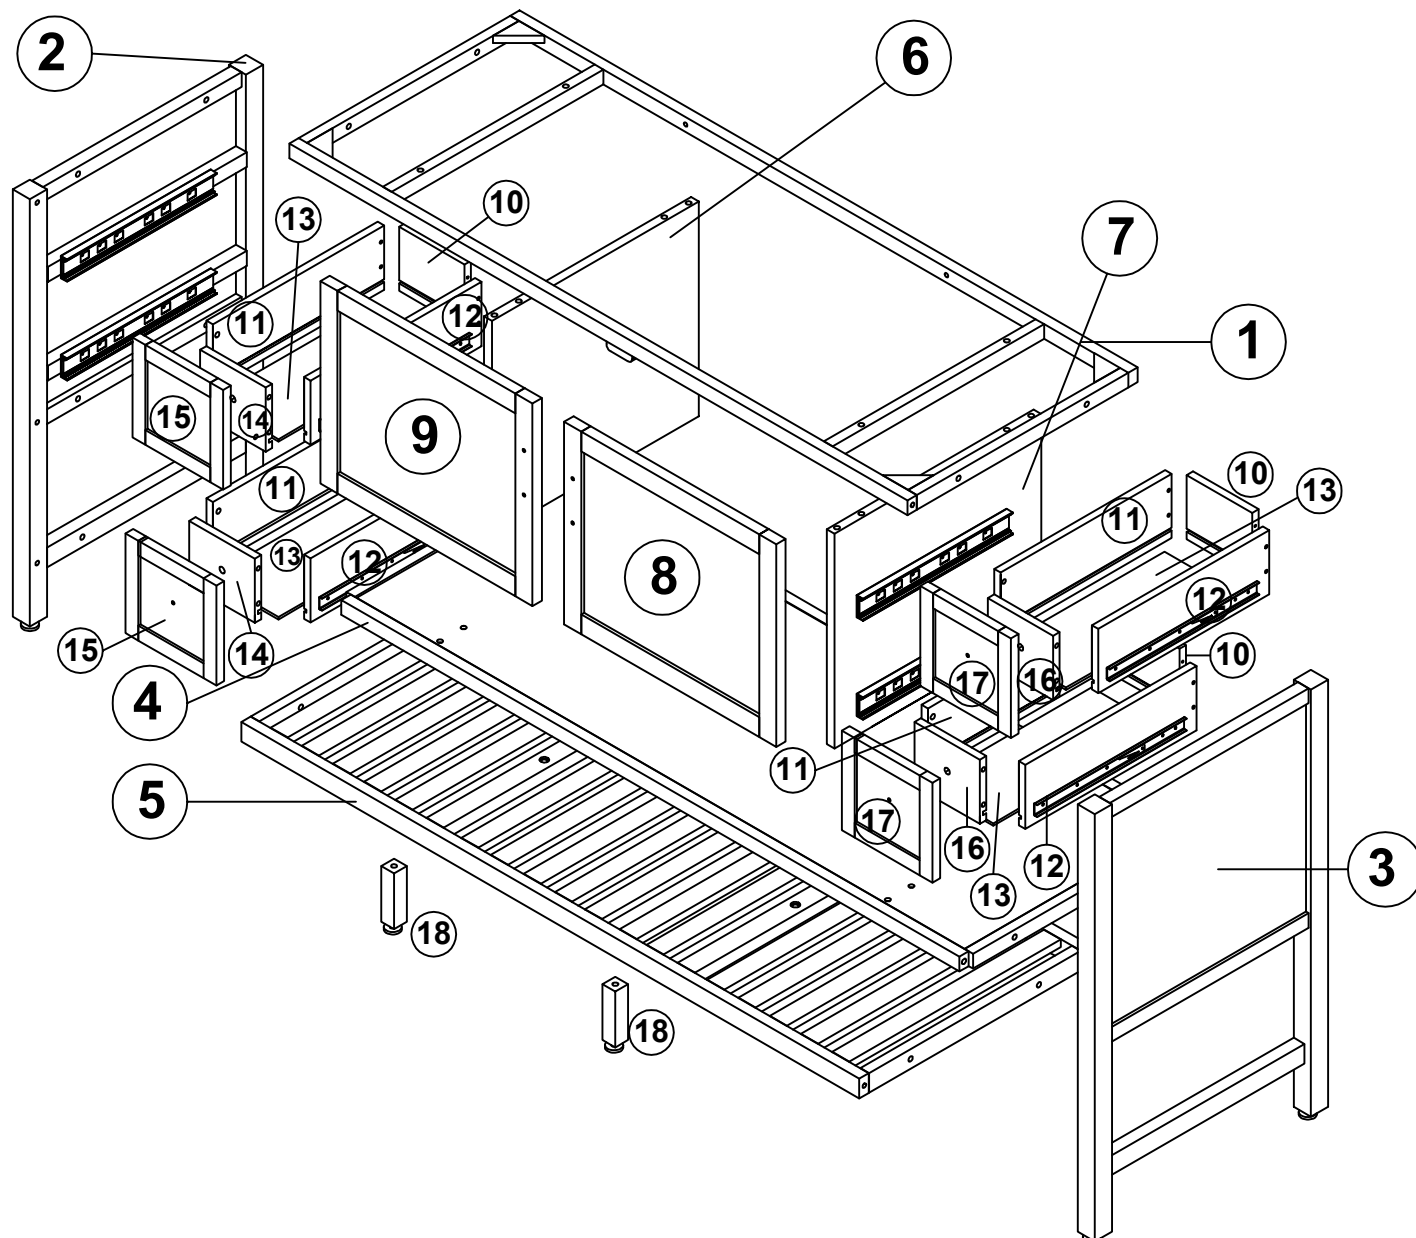


Identifying the hardware-Identify the hardware using the illustrations below

A  14 Ø8*30mm Wood Dowel	B  22 M6*45mm Bolt	C  22 Ø6*16mm Washer
D  04	E  24 3.5*15mm Screw	F  02
G  04 4*25mm Screw	H  04	I  04 4*20mm Screw
J  08	K  64 3.5*12mm Screw	L  06
M  32 4*25mm Screw	N  02 4*50mm Screw	O  01
P  32 Ø6*20mm Wood Dowel	Q  16 4*20mm Screw	

Step 01

J  08

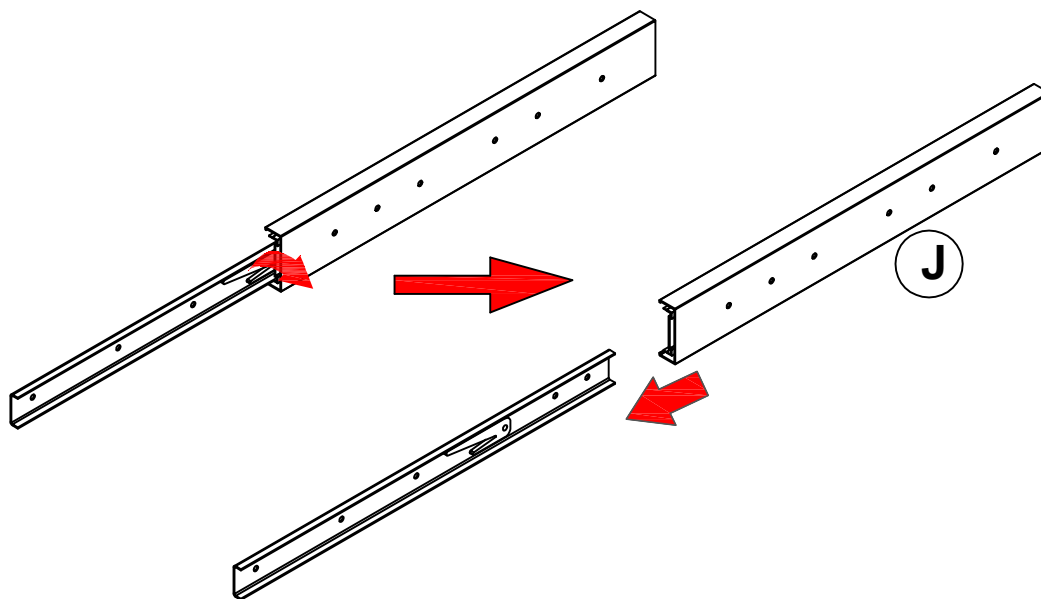


X8

Step 02

K  32
3.5*12mm Screw

 01

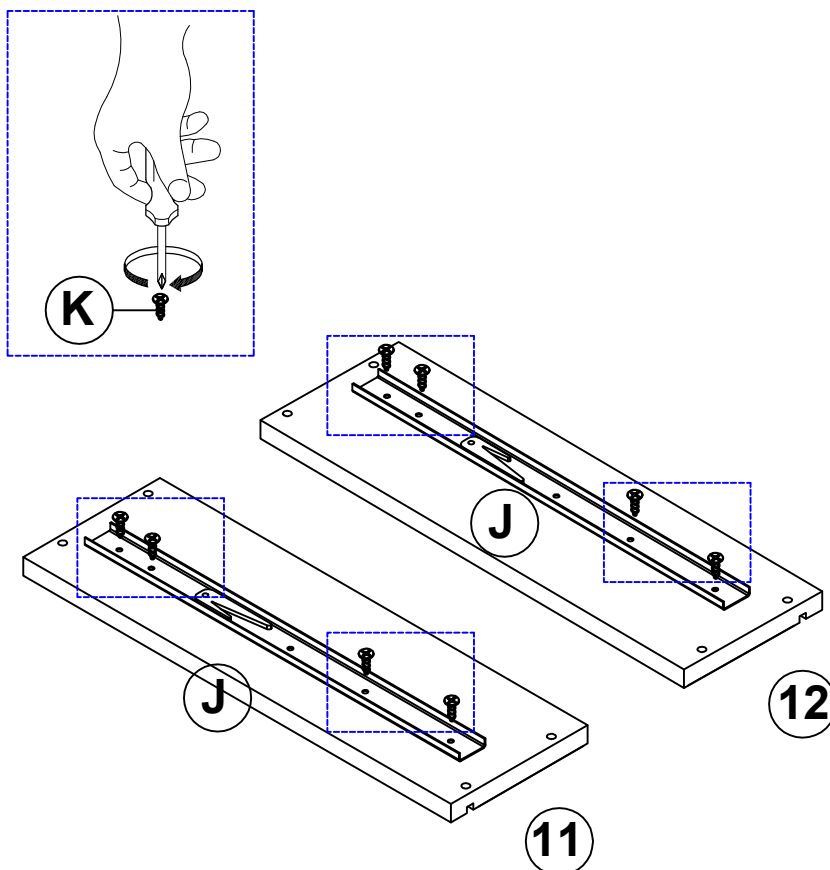


X4

Step 03

K  **16**
3.5*12mm Screw


 **01**

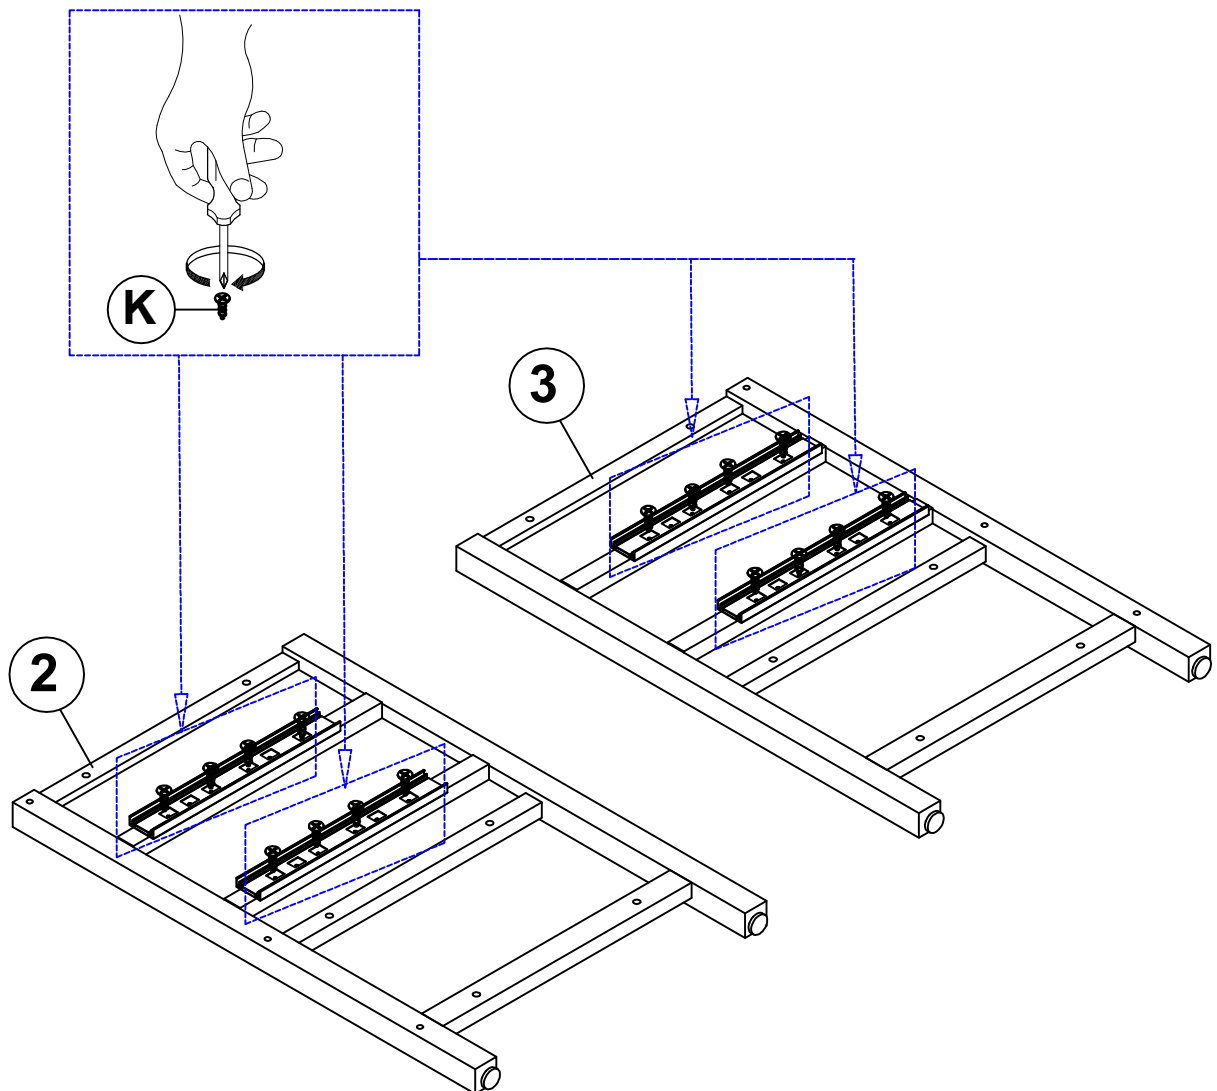

Step 04

K  **16**
3.5*12mm Screw


 **01**

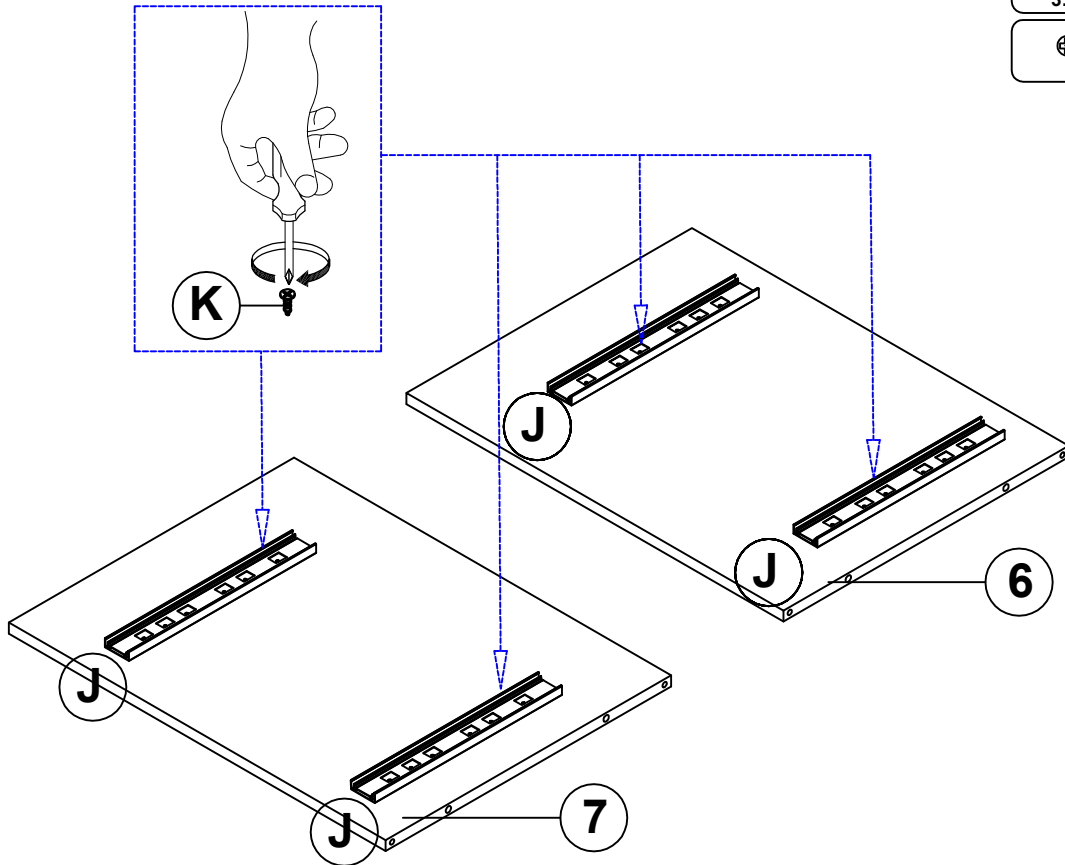


Step 05

A  **06**
Ø8*30mm Wood Dowel

 **01**
(Not Included)

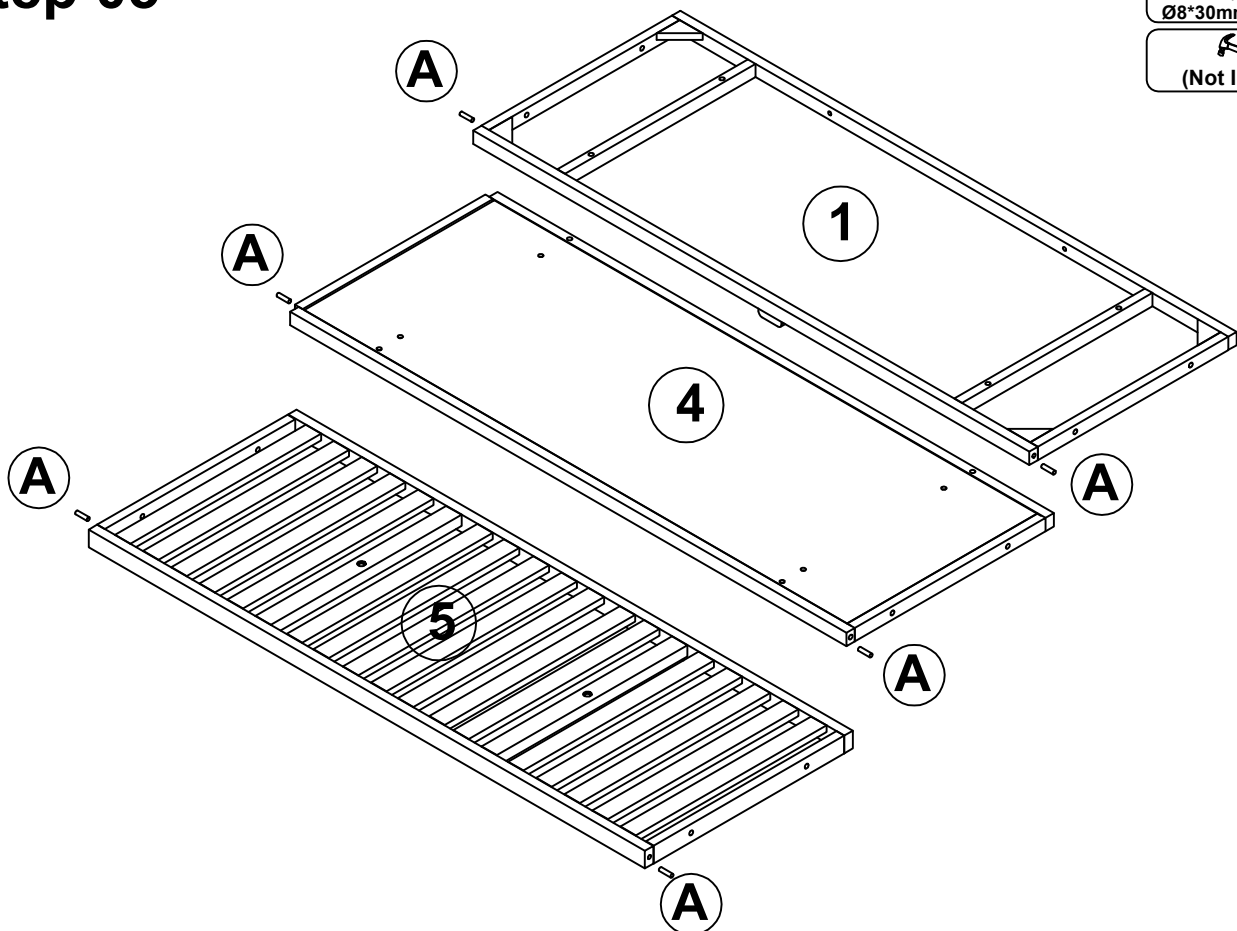


Step 06

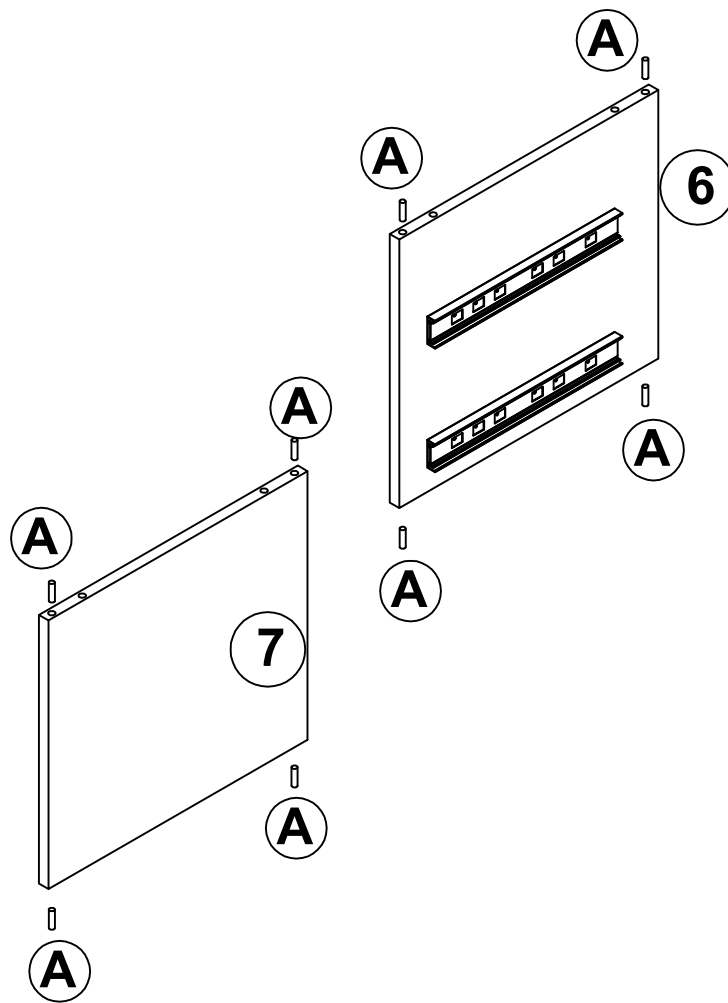

A  **08**
Ø8*30mm Wood Dowel

 **01**
(Not Included)

Step 07

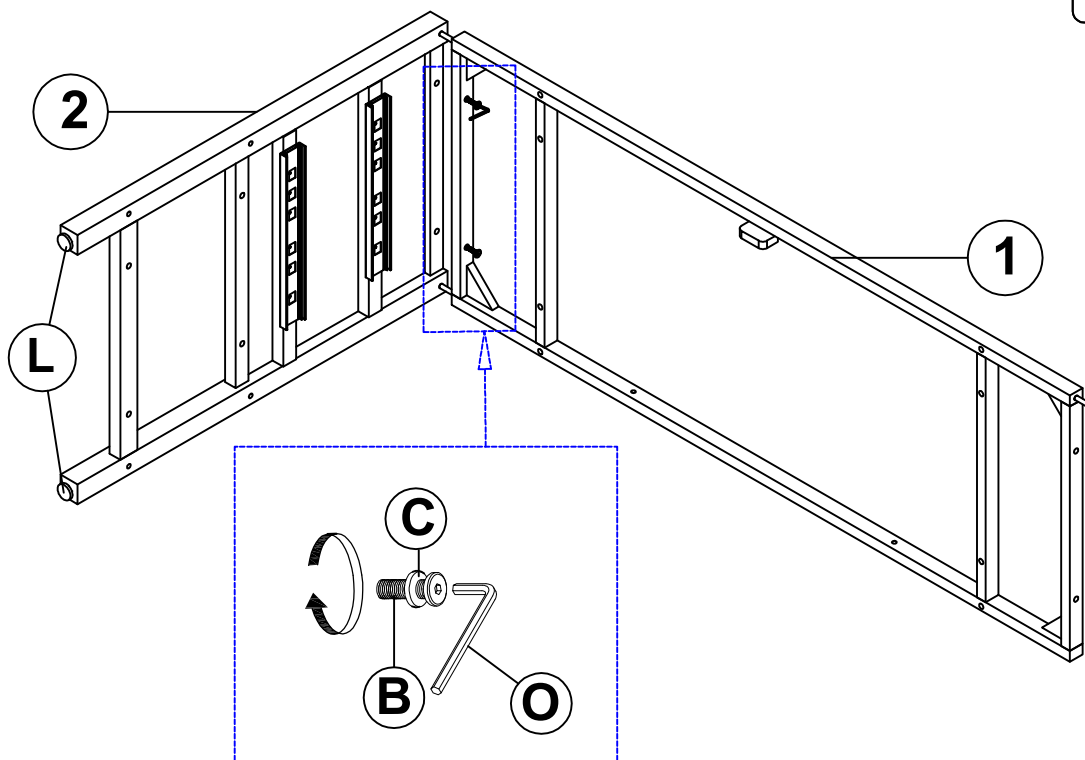

B  **02**
M6*45mm Bolt

C  **02**
Ø6*16mm Washer

O  **01**

Note: Do not tighten bolts firmly at this time

Step 08

- B



04

M6*45mm Bolt
- C




04

Ø6*16mm Washer
- O



01

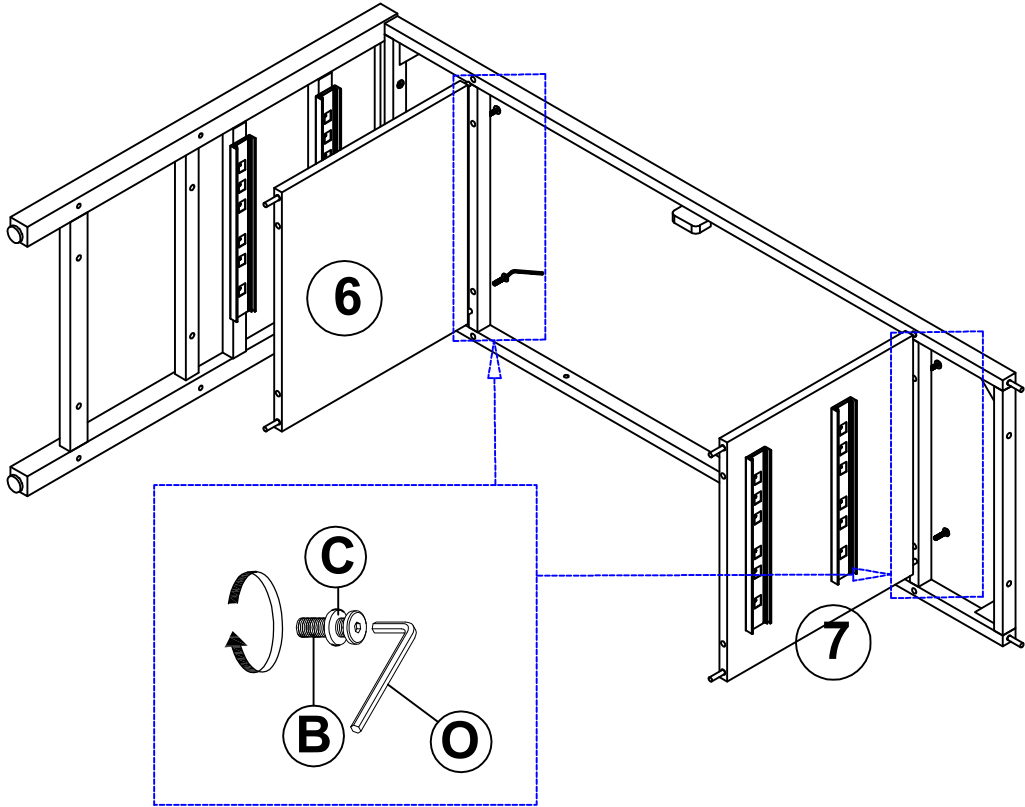

Step 09

- B



06

M6*45mm Bolt
- C




06

Ø6*16mm Washer
- O




01

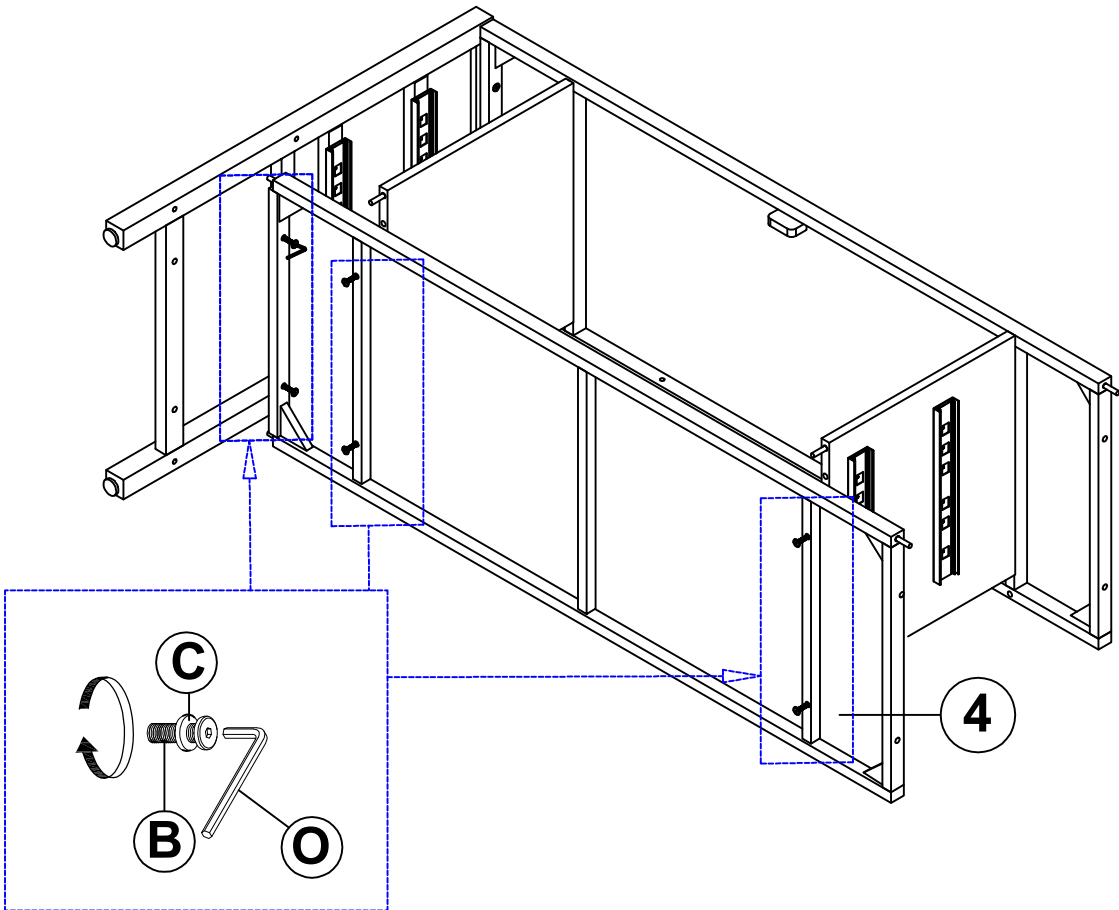


Step 10

B		04
M6*45mm Bolt		
C		04
Ø6*16mm Washer		
O		01

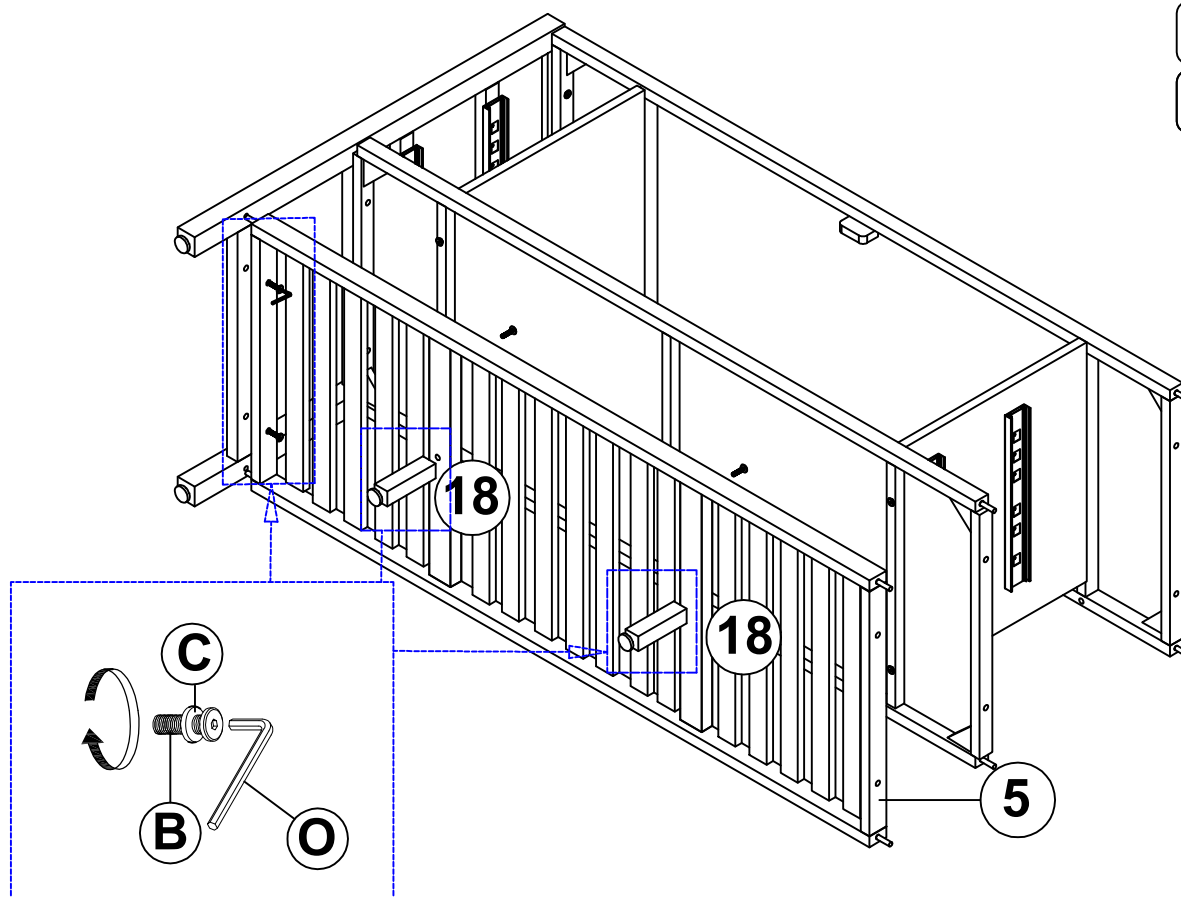


Step 11

B		06
M6*45mm Bolt		
C		06
Ø6*16mm Washer		
O		01

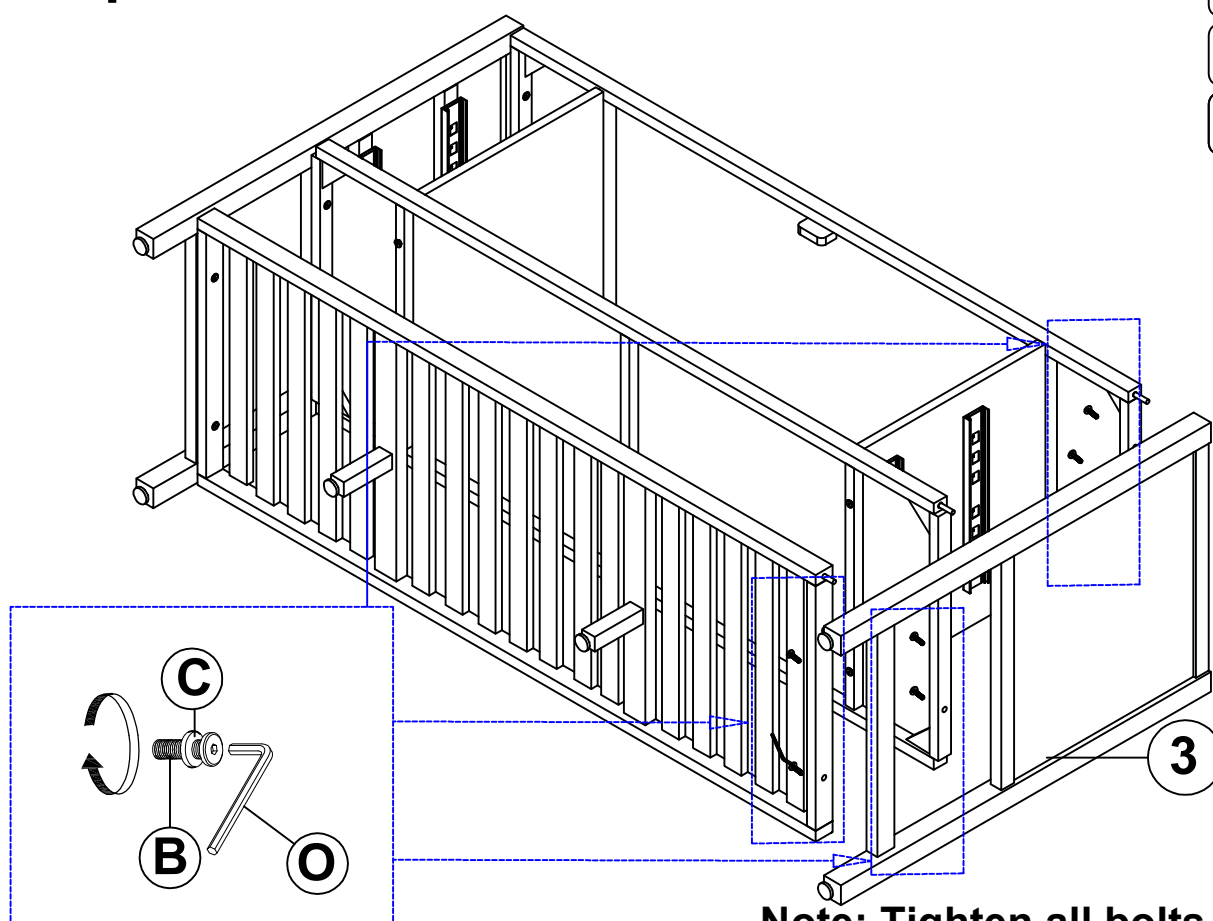


Note: Tighten all bolts at this time

Step 12

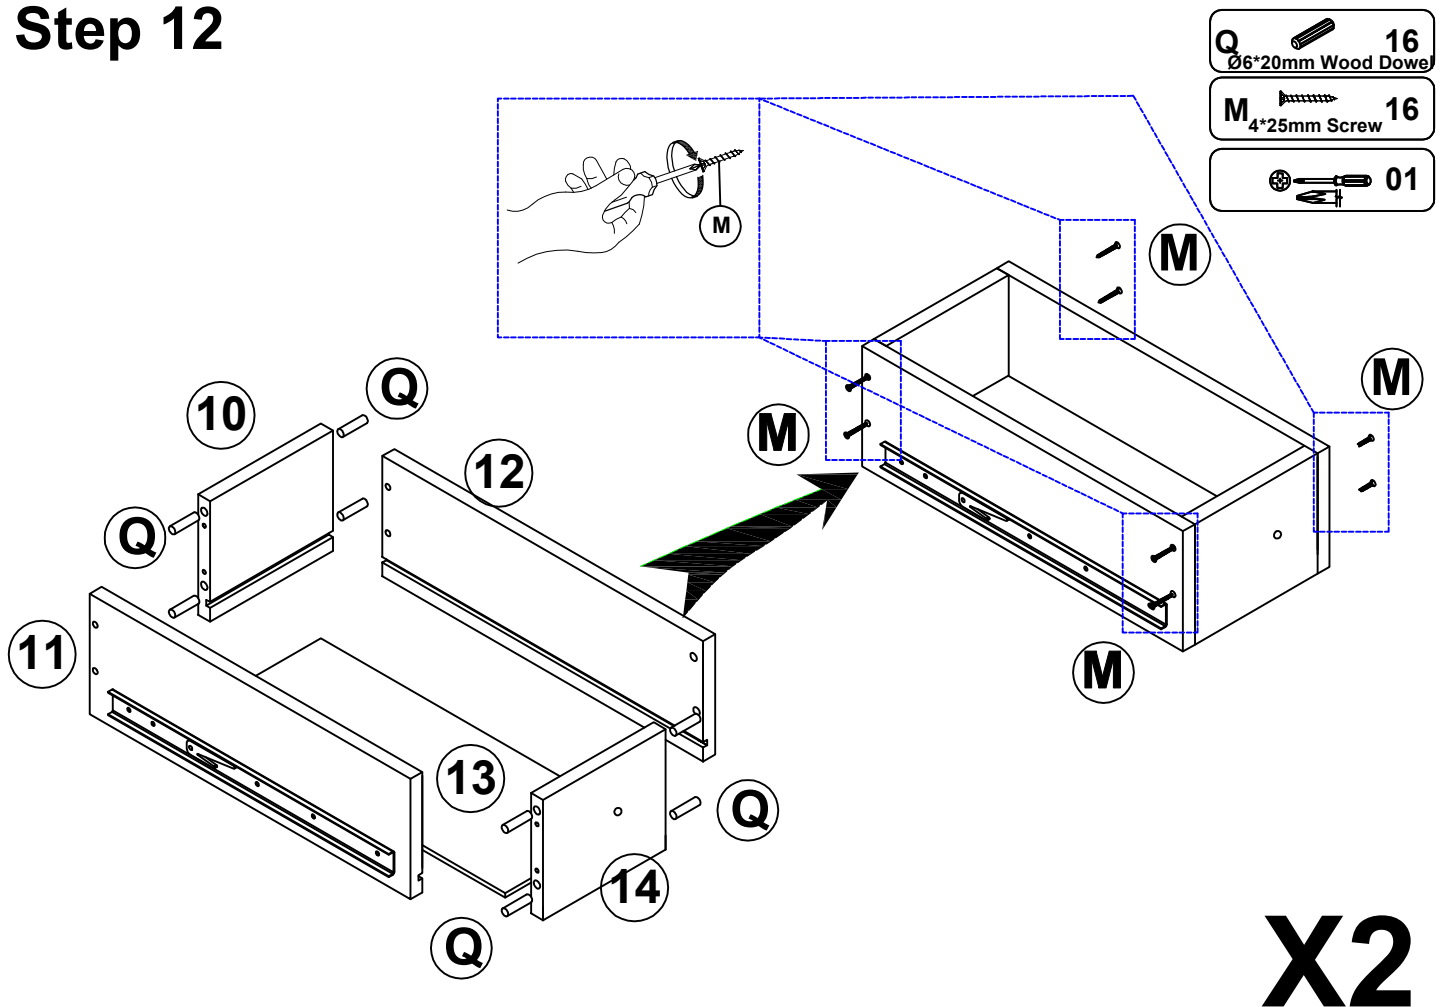


Step 13

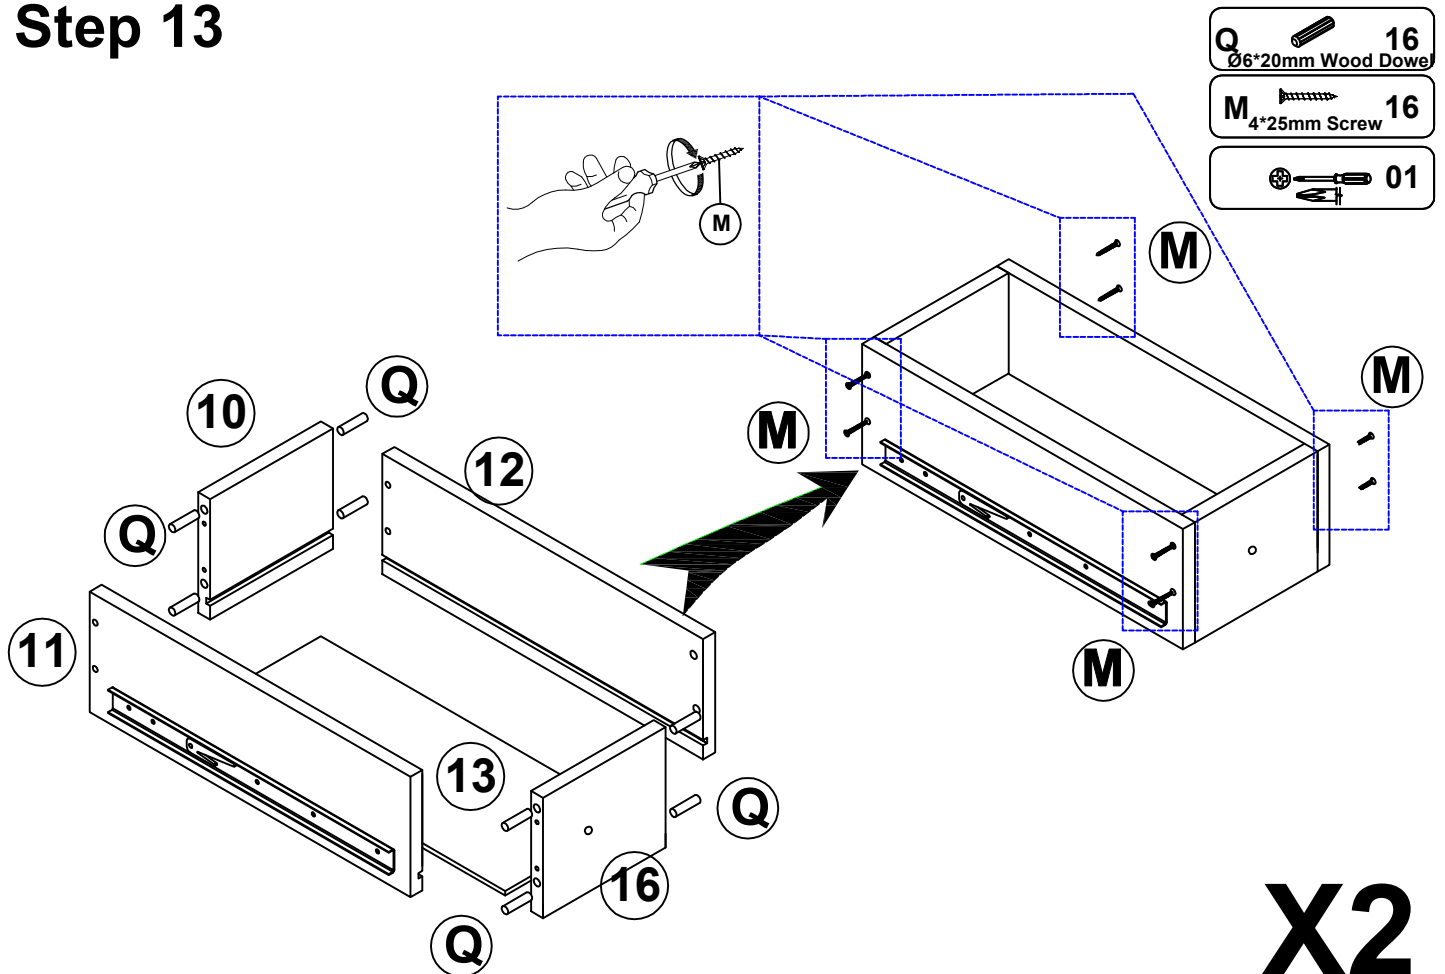


Step 14

- D  02
- E  04
3.5*15mm Screw
-  01

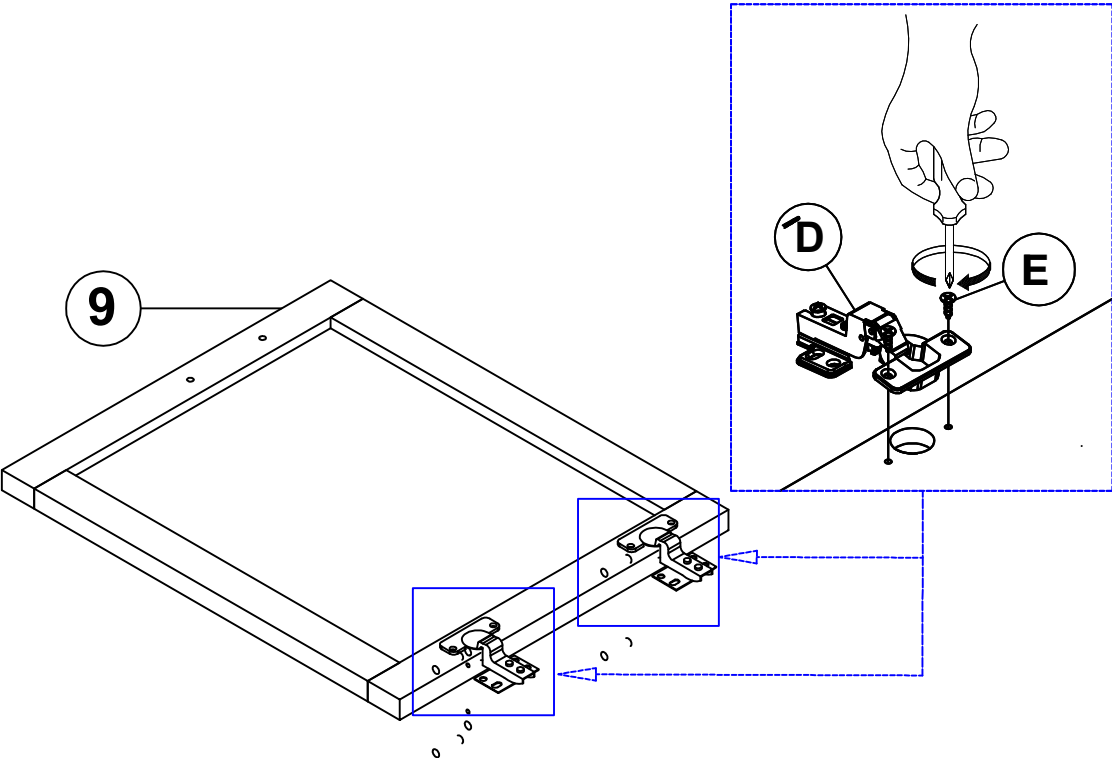

Step 15


- D  02
- E  04
3.5*15mm Screw
-  01

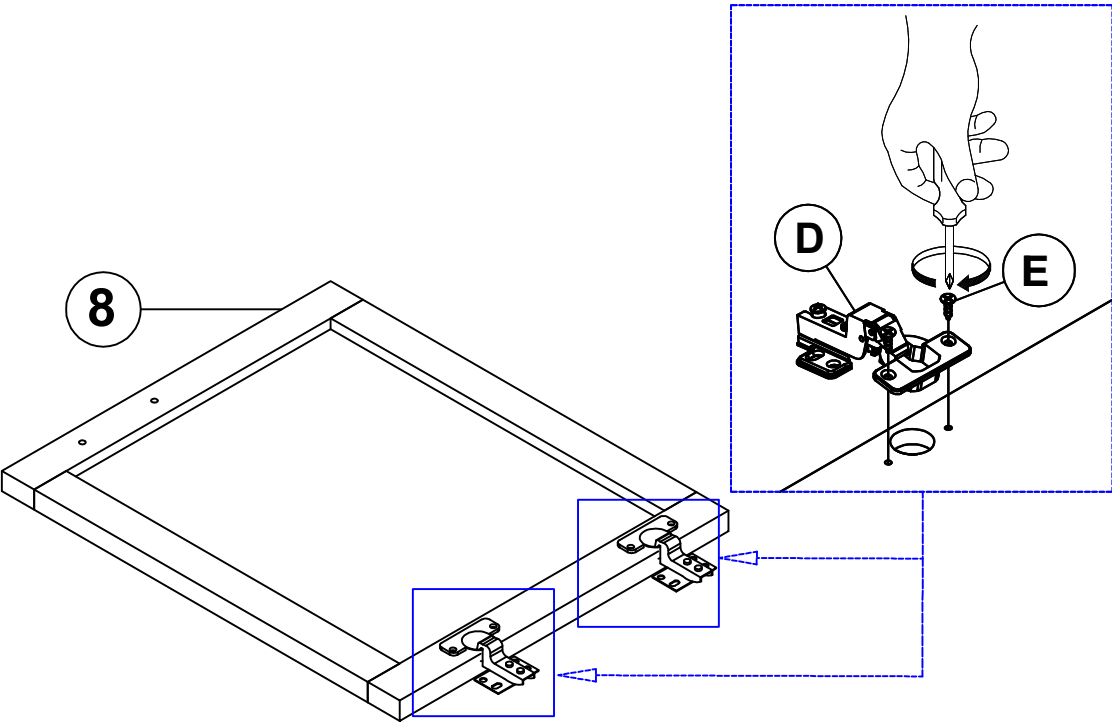

Step 16

E 3.5*15mm Screw 16

01

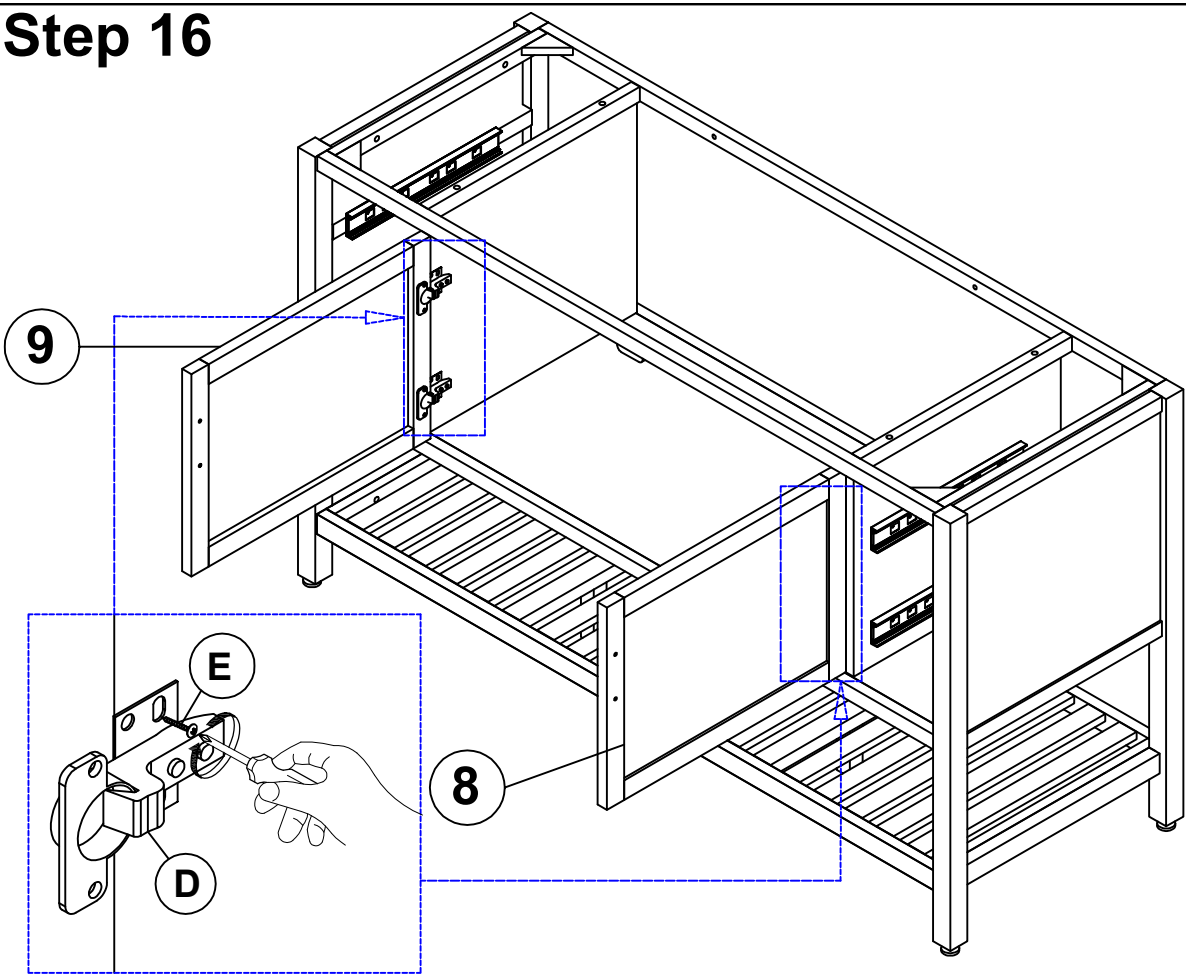


Step 17


F 02

G 4*25mm Screw 04

01

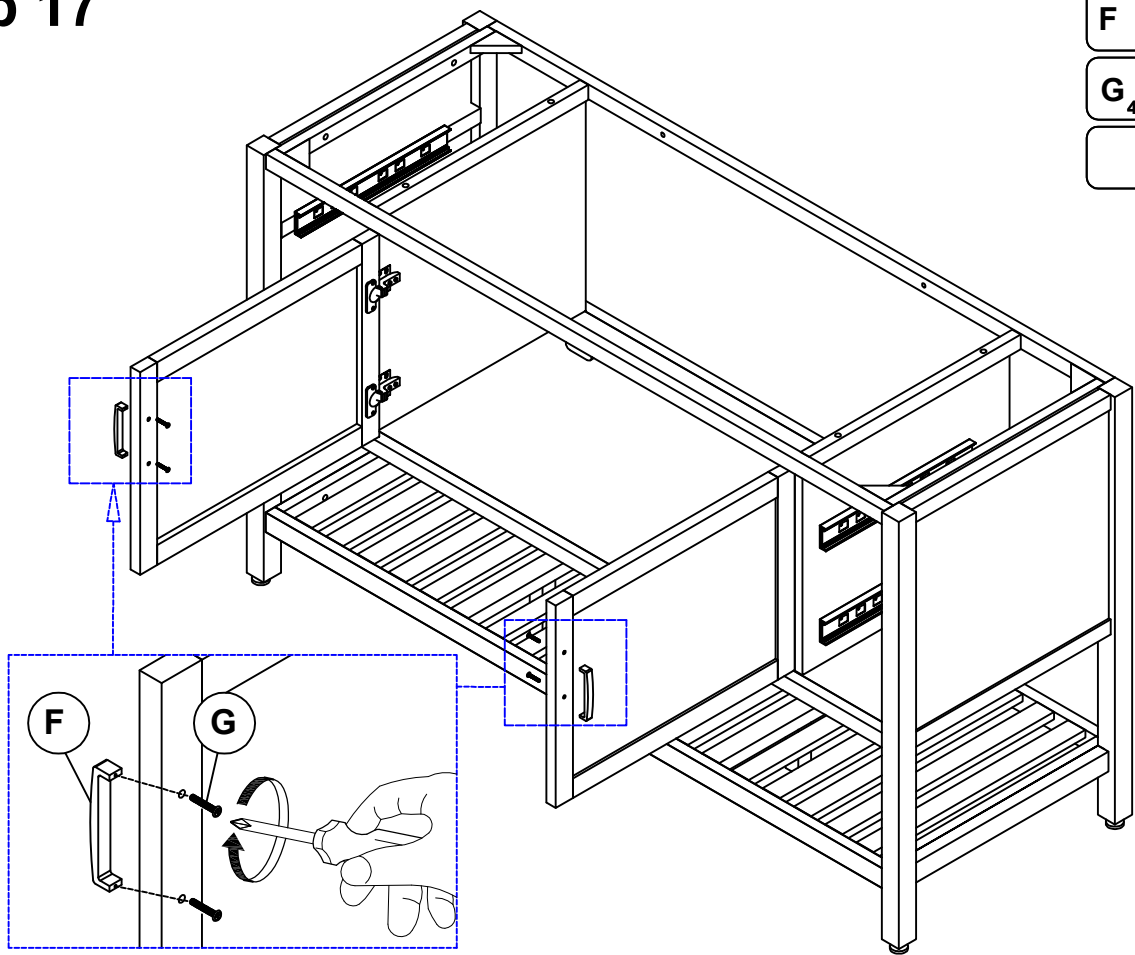


Step 18

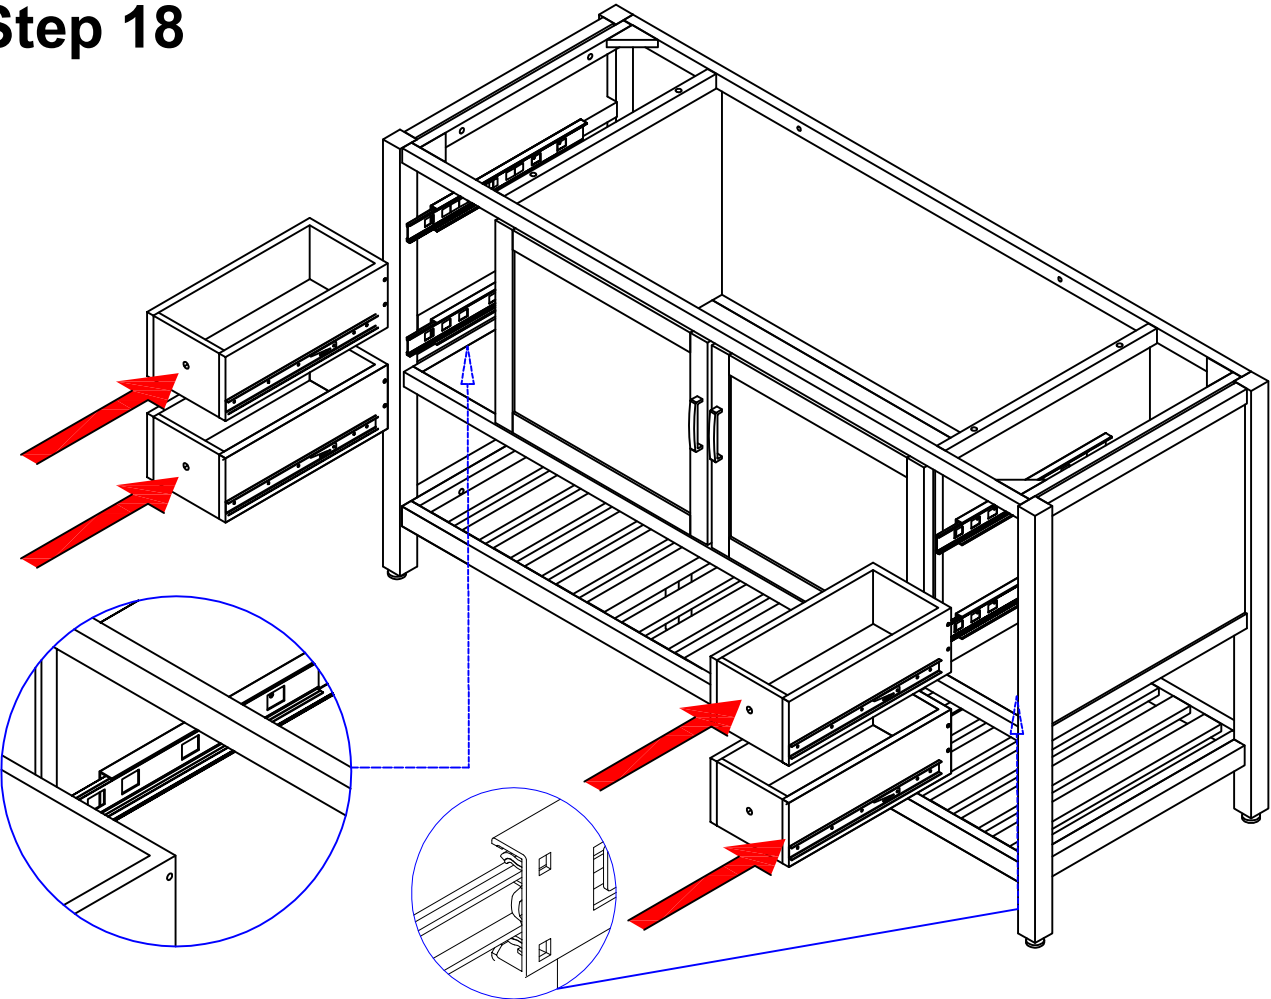

Step 19

- Q  16

4*20mm Screw
-  01

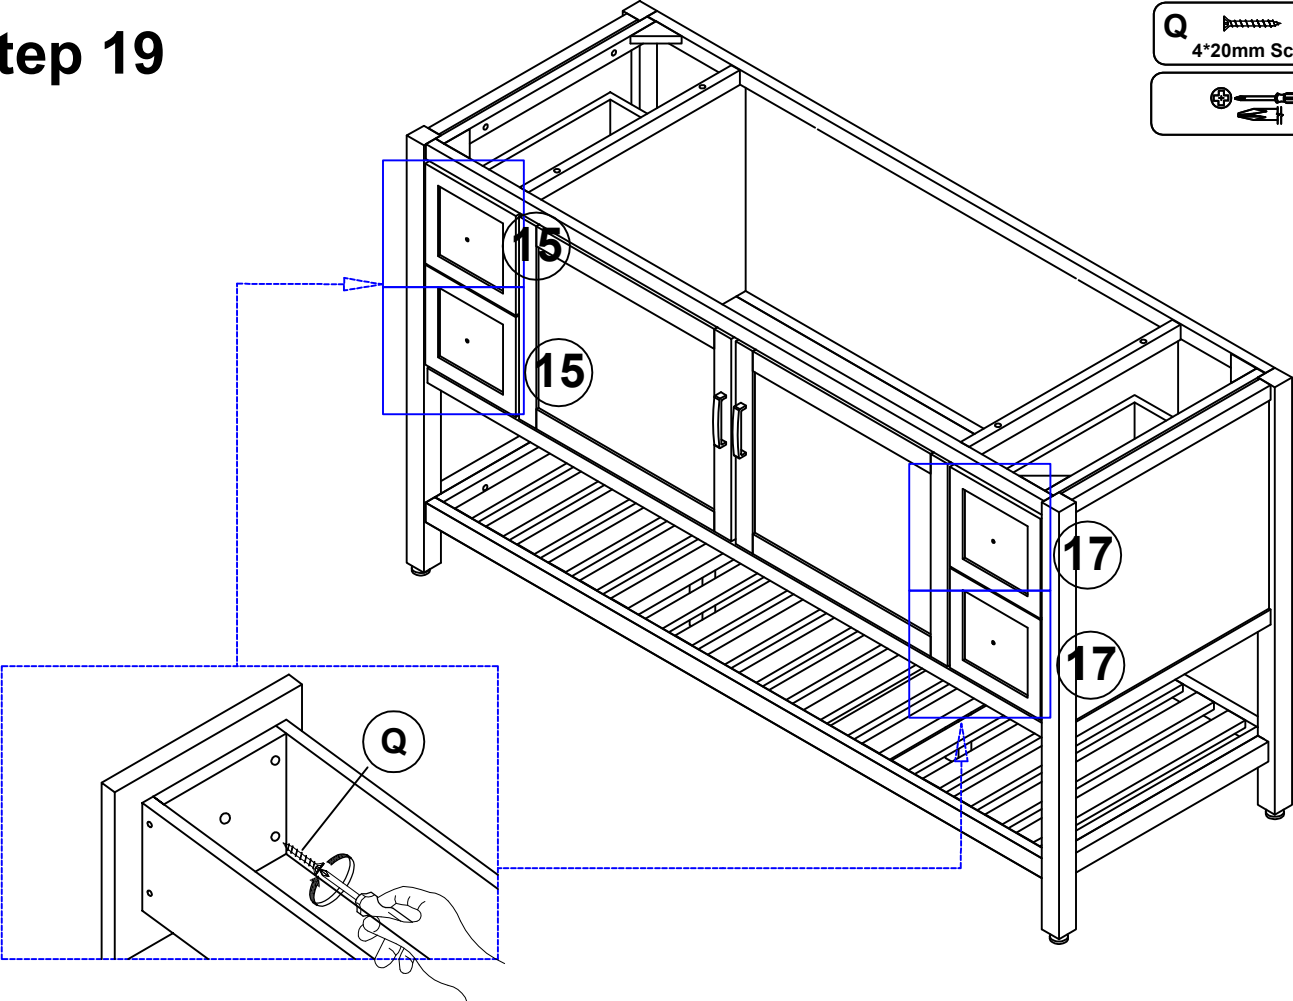

Step 20

- . Mark the location of the Studs in the wall on the stretcher rail.
- . Drill a 1/16" thru hole in the center of the Stretcher Rail at the location of the studs in the wall.
- . Secure the Vanity to the wall using screws (N)
Make sure the screws align with the Studs in the wall.

N 4*50mm Screw 02

01

H 04

I 4*20mm Screw 04

