


87028 Product Installation Instructions

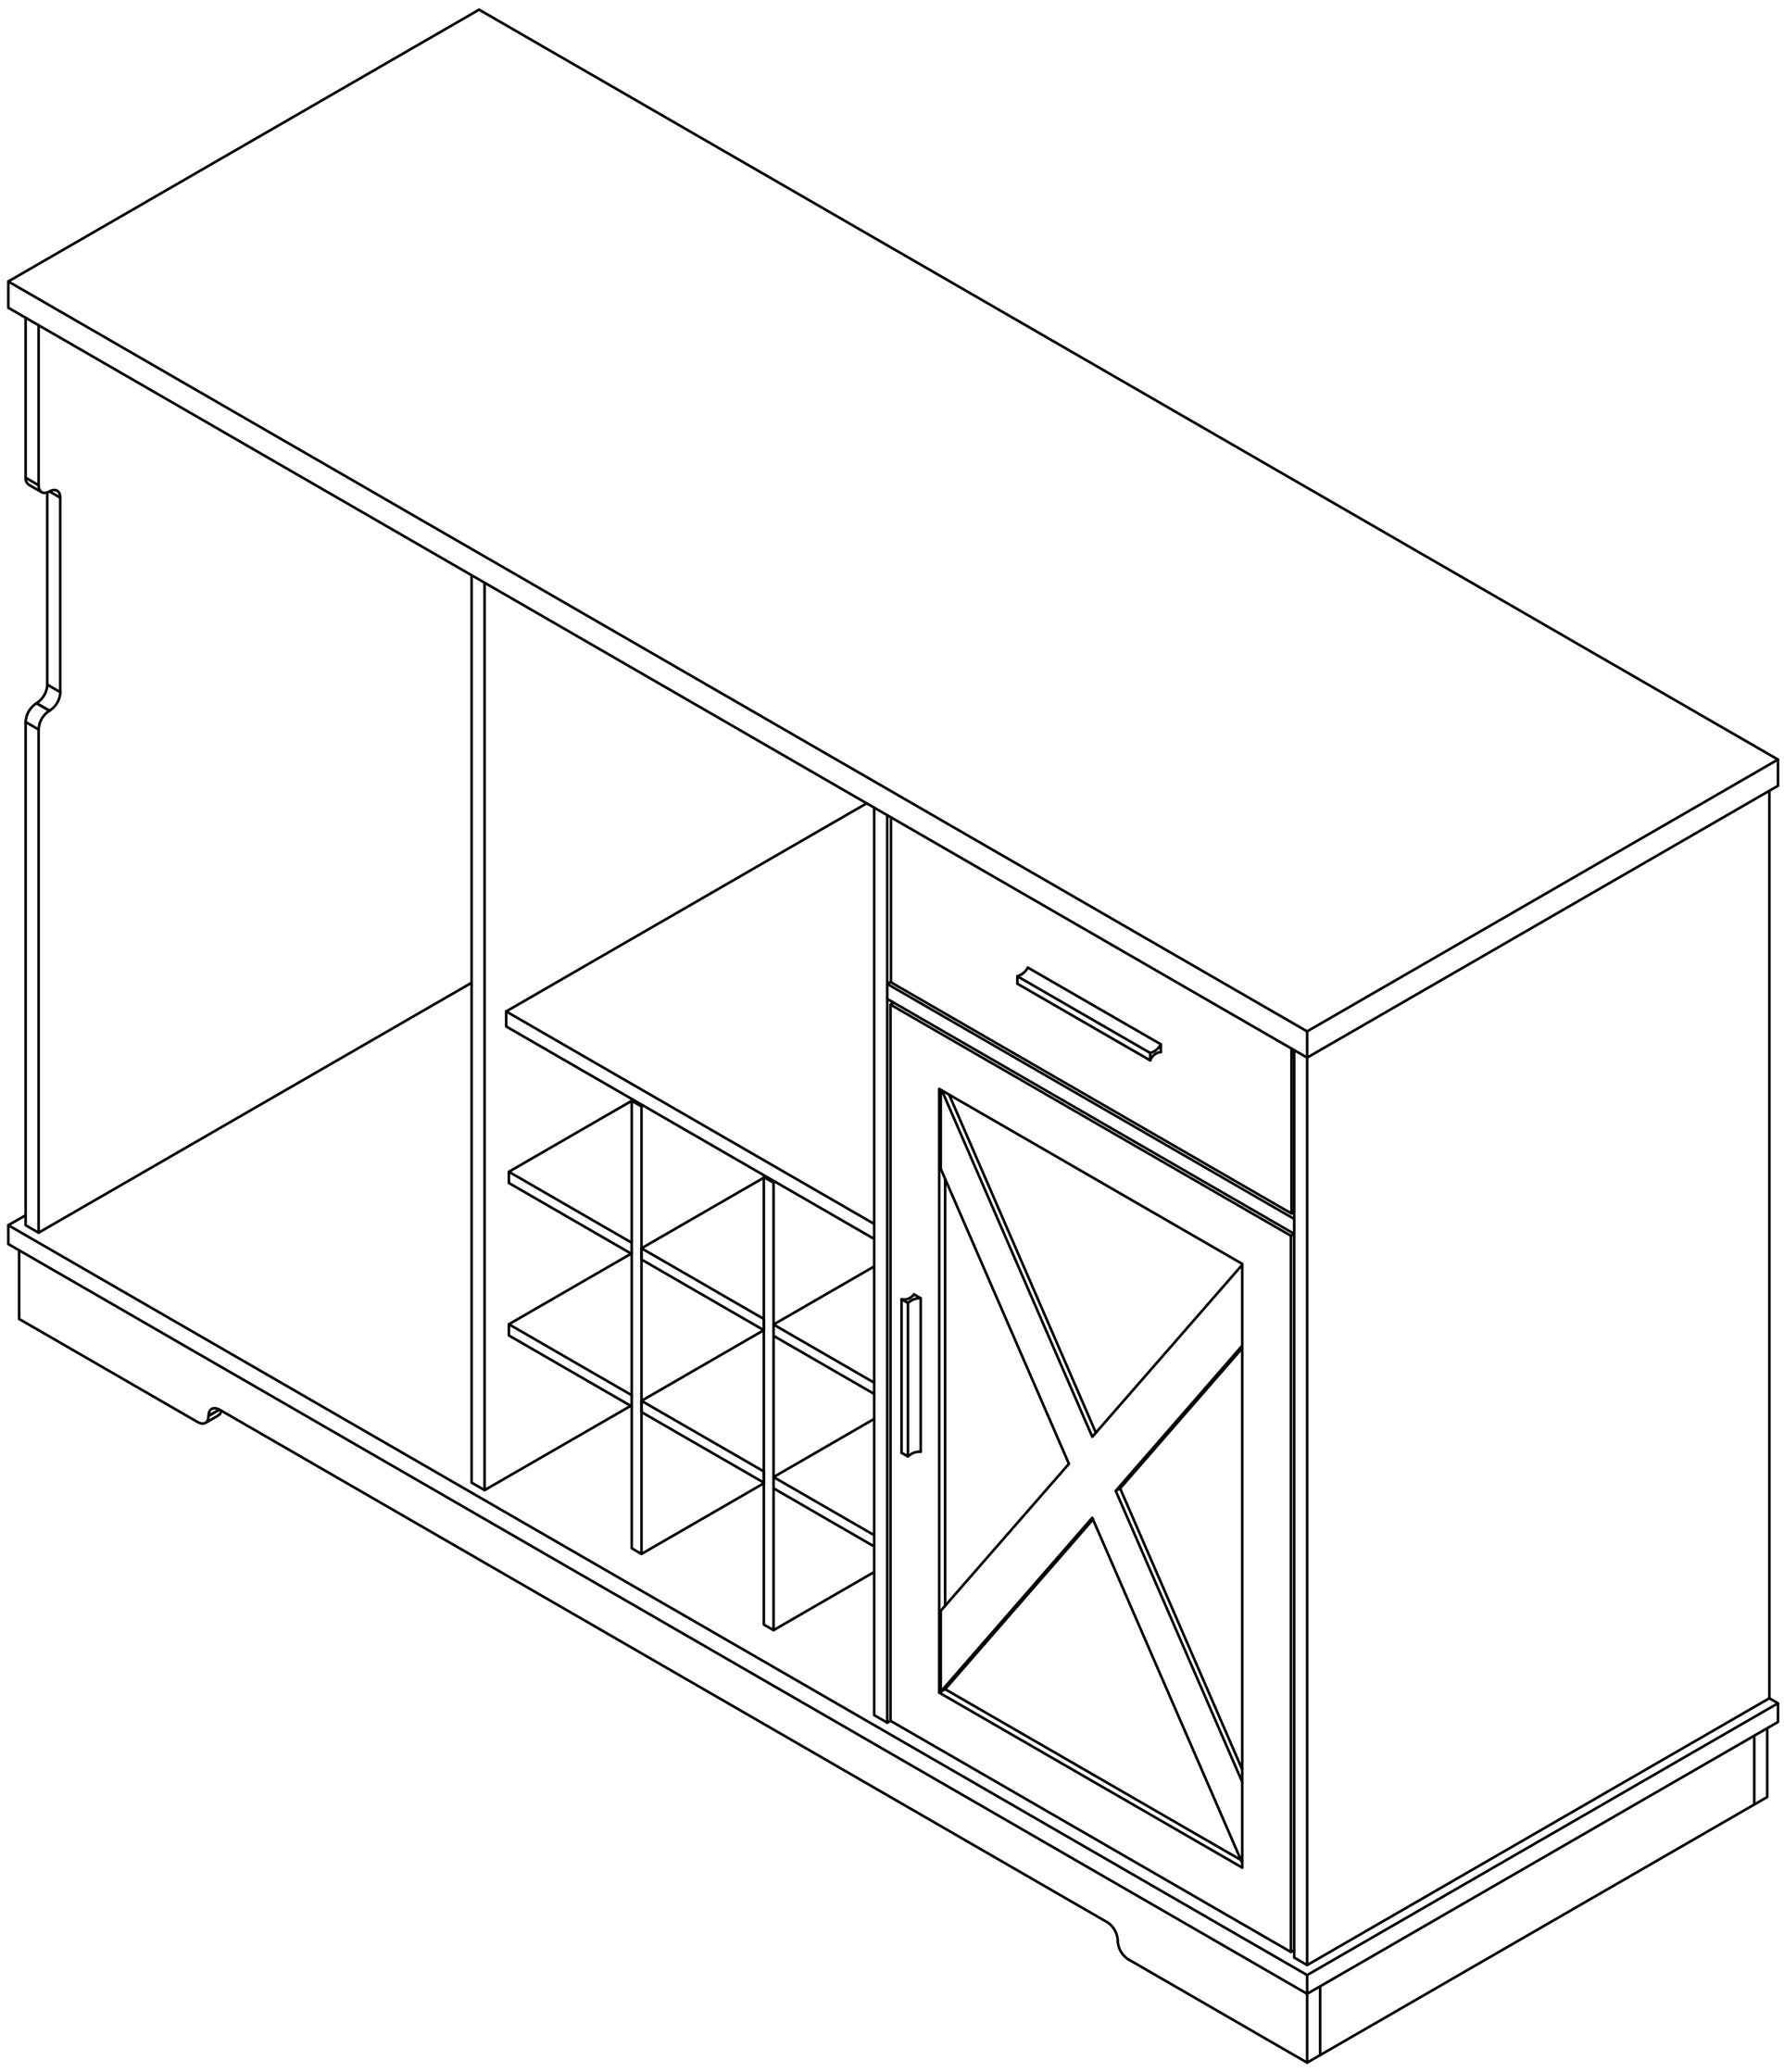


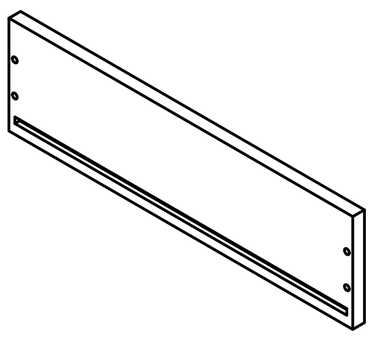


Ax1

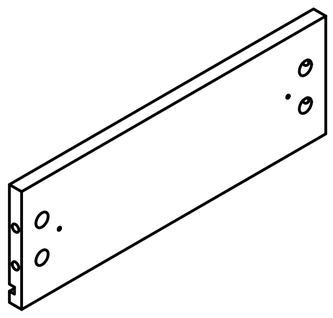


Bx2

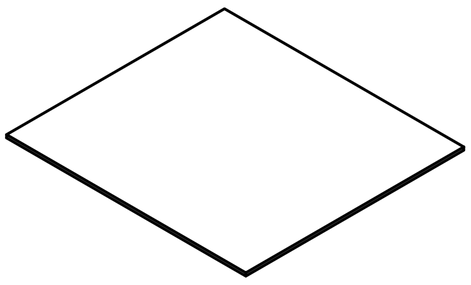


Cx1

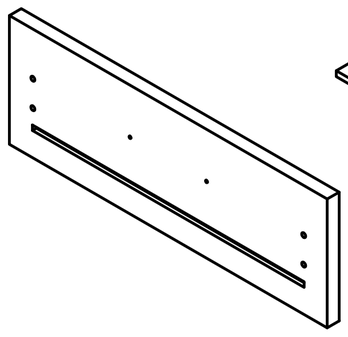


Dx1

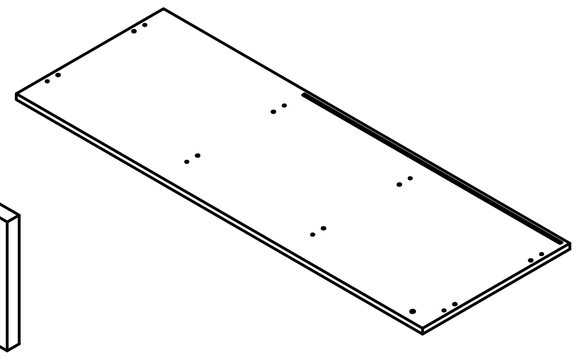


Ex1

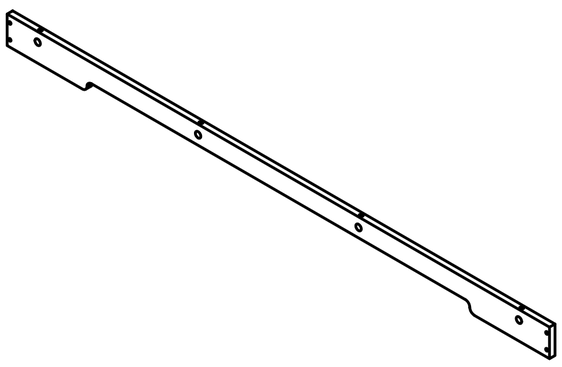


Fx1

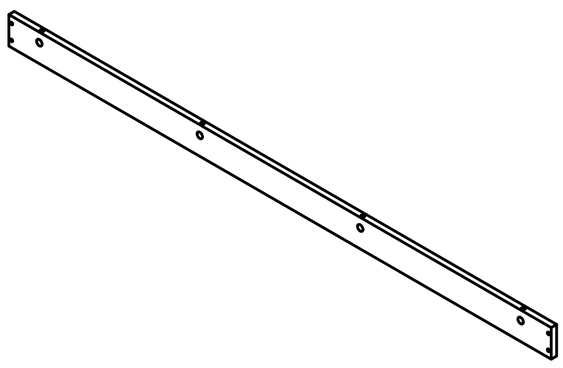


Gx1

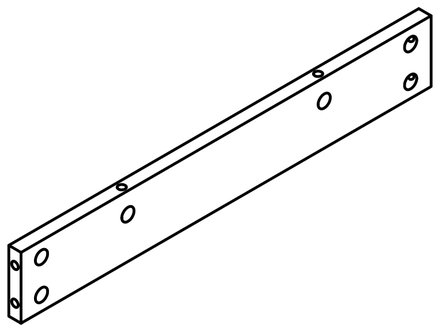


Hx2

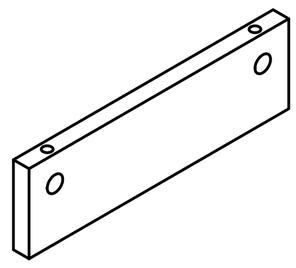


Ix2

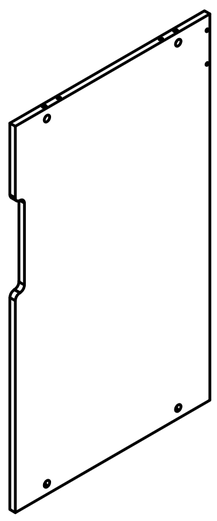


Jx1

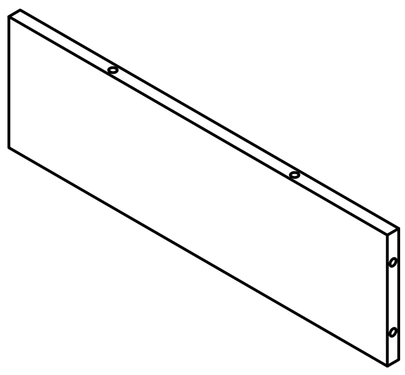


Kx1

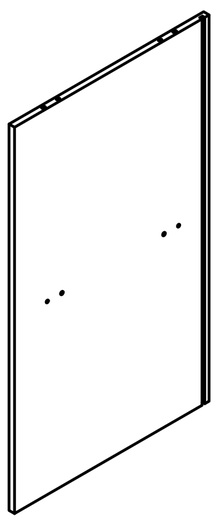


Lx1

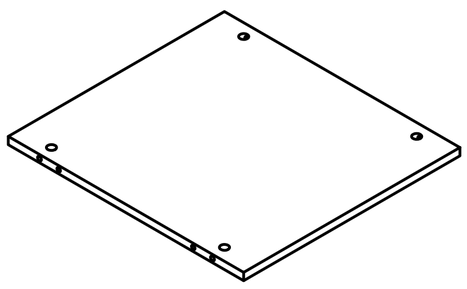


Mx1

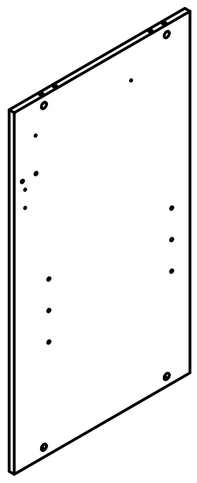


Nx1

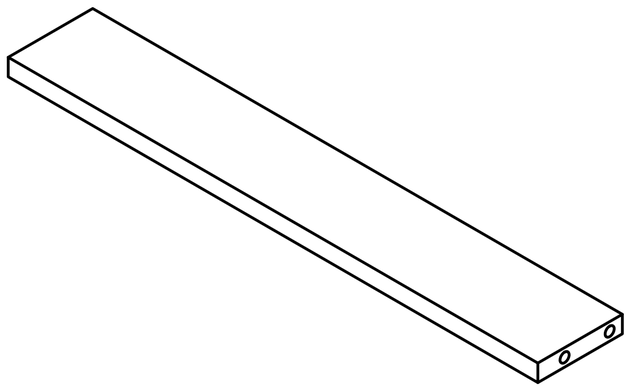


Ox1

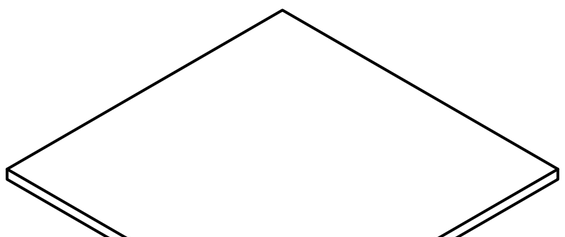


Px1

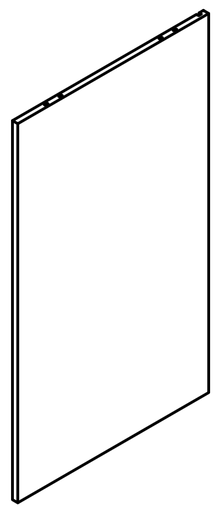


Qx1

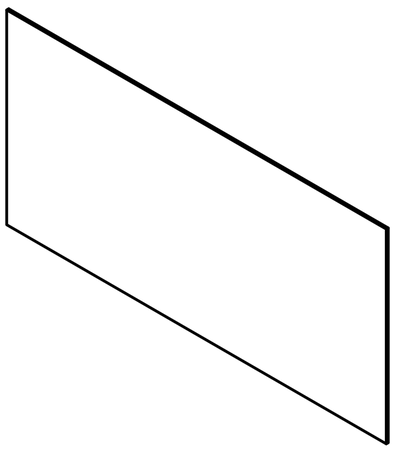


Rx2

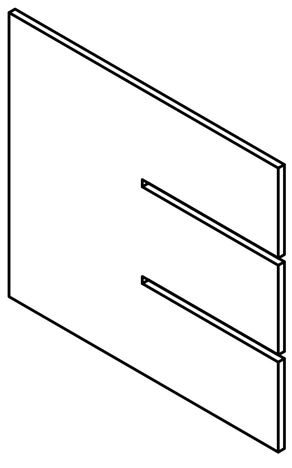

Sx4

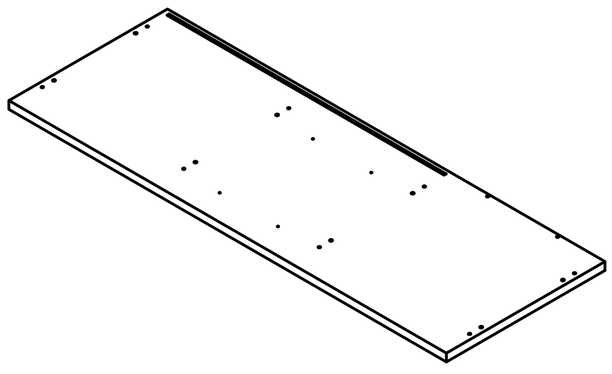












Tx1

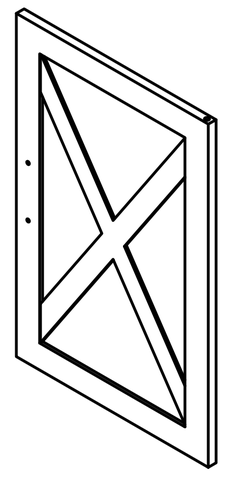


Ux1

1


Accessories list

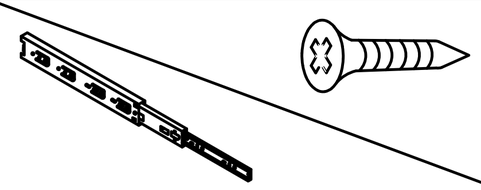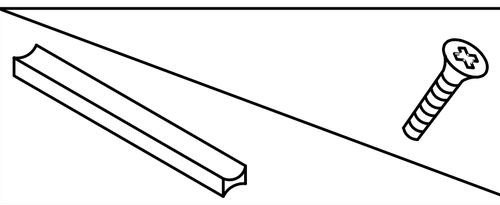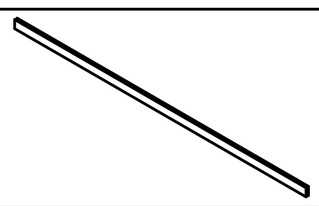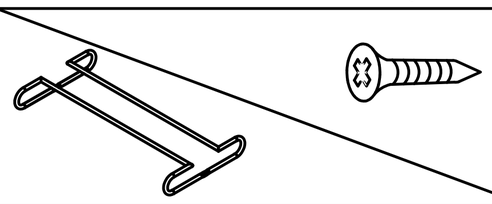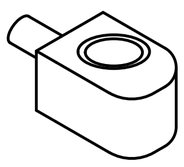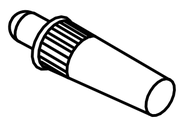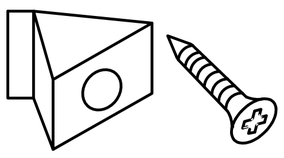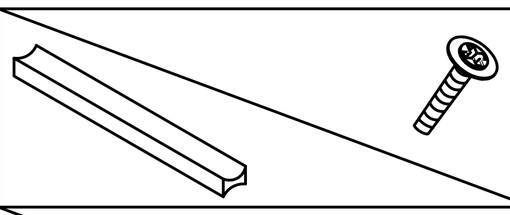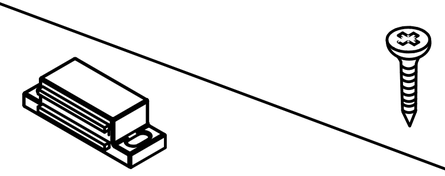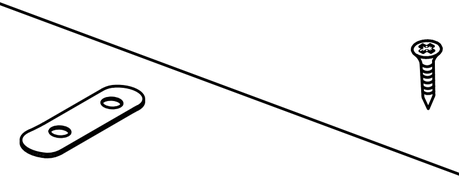1		Two in one screw (6x28mm)	62pcs +4pcs
2		Two in one nut (10x12mm)	62pcs +4pcs
3		Wood chipping (6x30mm)	20pcs +2pcs
4		Guide & Screw(29cm) (3x12mm)	10pcs +2pcs 2pcs
5		Handle & Screw (4x16mm)	2pcs +1pcs 1pcs
6		Non-slip pads	10pcs +2pcs
7		Backboard card strip (746mm)	1pcs
8		Wine glass rack & Screw (4x16mm)	4pcs +1pcs 2pcs
9		Laminate Support Nail	4pcs +1pcs
10		（7mm）Door shaft	2pcs
11		Fixing clip & screw (3x16mm)	12pcs +1pcs
12		Handle & Screw (4x18mm)	2pcs +1pcs 1pcs
13		Magnetic Attraction & Screw (B:3x14mm)	2pcs +1pcs 1pcs
		Iron sheet & screw (3x10mm)	2pcs +1pcs 1pcs

Double-head screwdriver, use as required

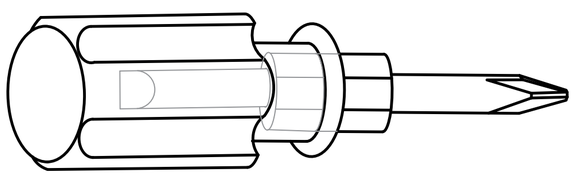






1pcs

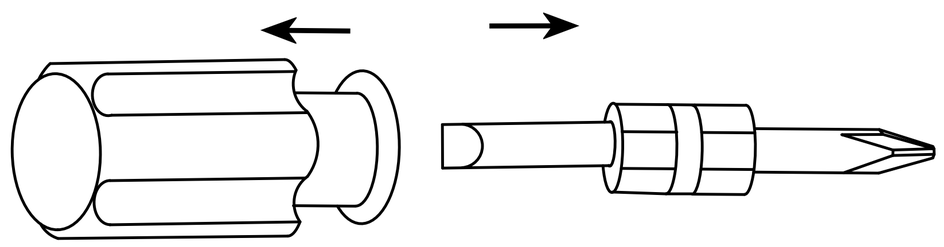



2

Product structure decomposition

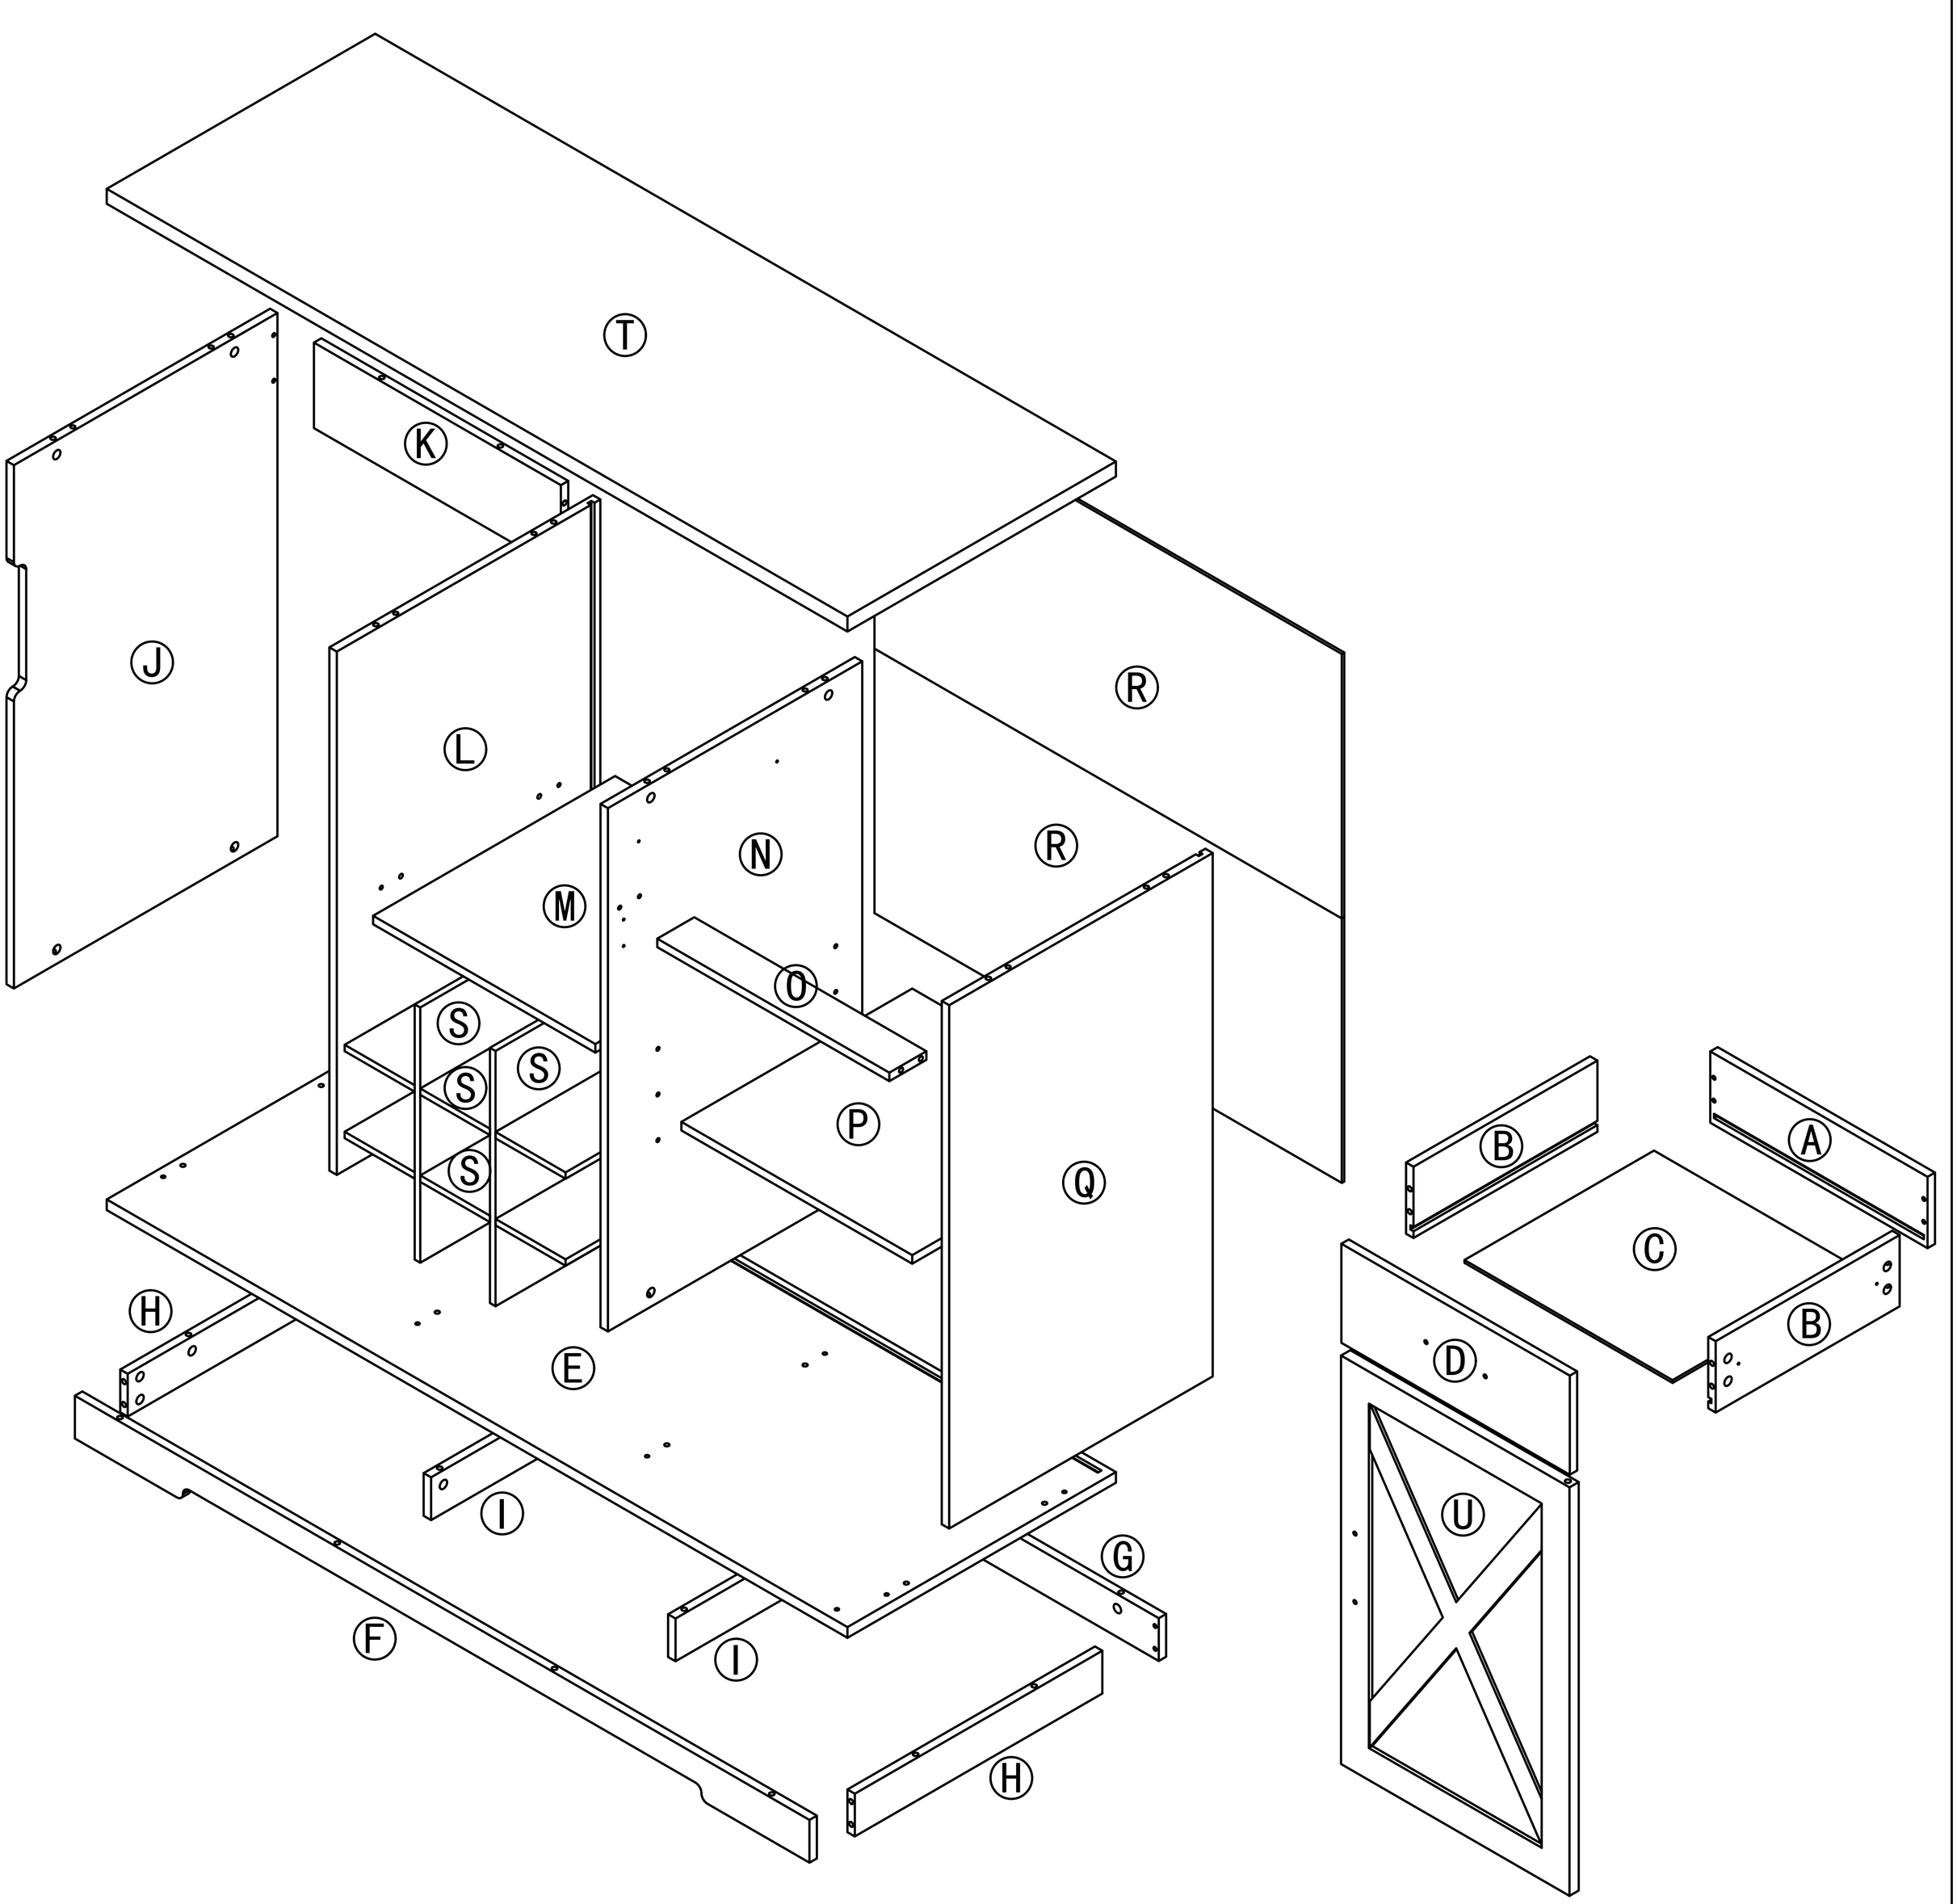

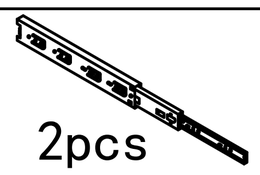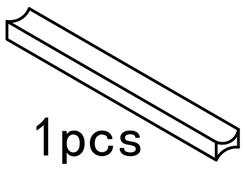
1		8pcs	2		8pcs	4	 2pcs  4pcs	
5	 1pcs  2pcs							

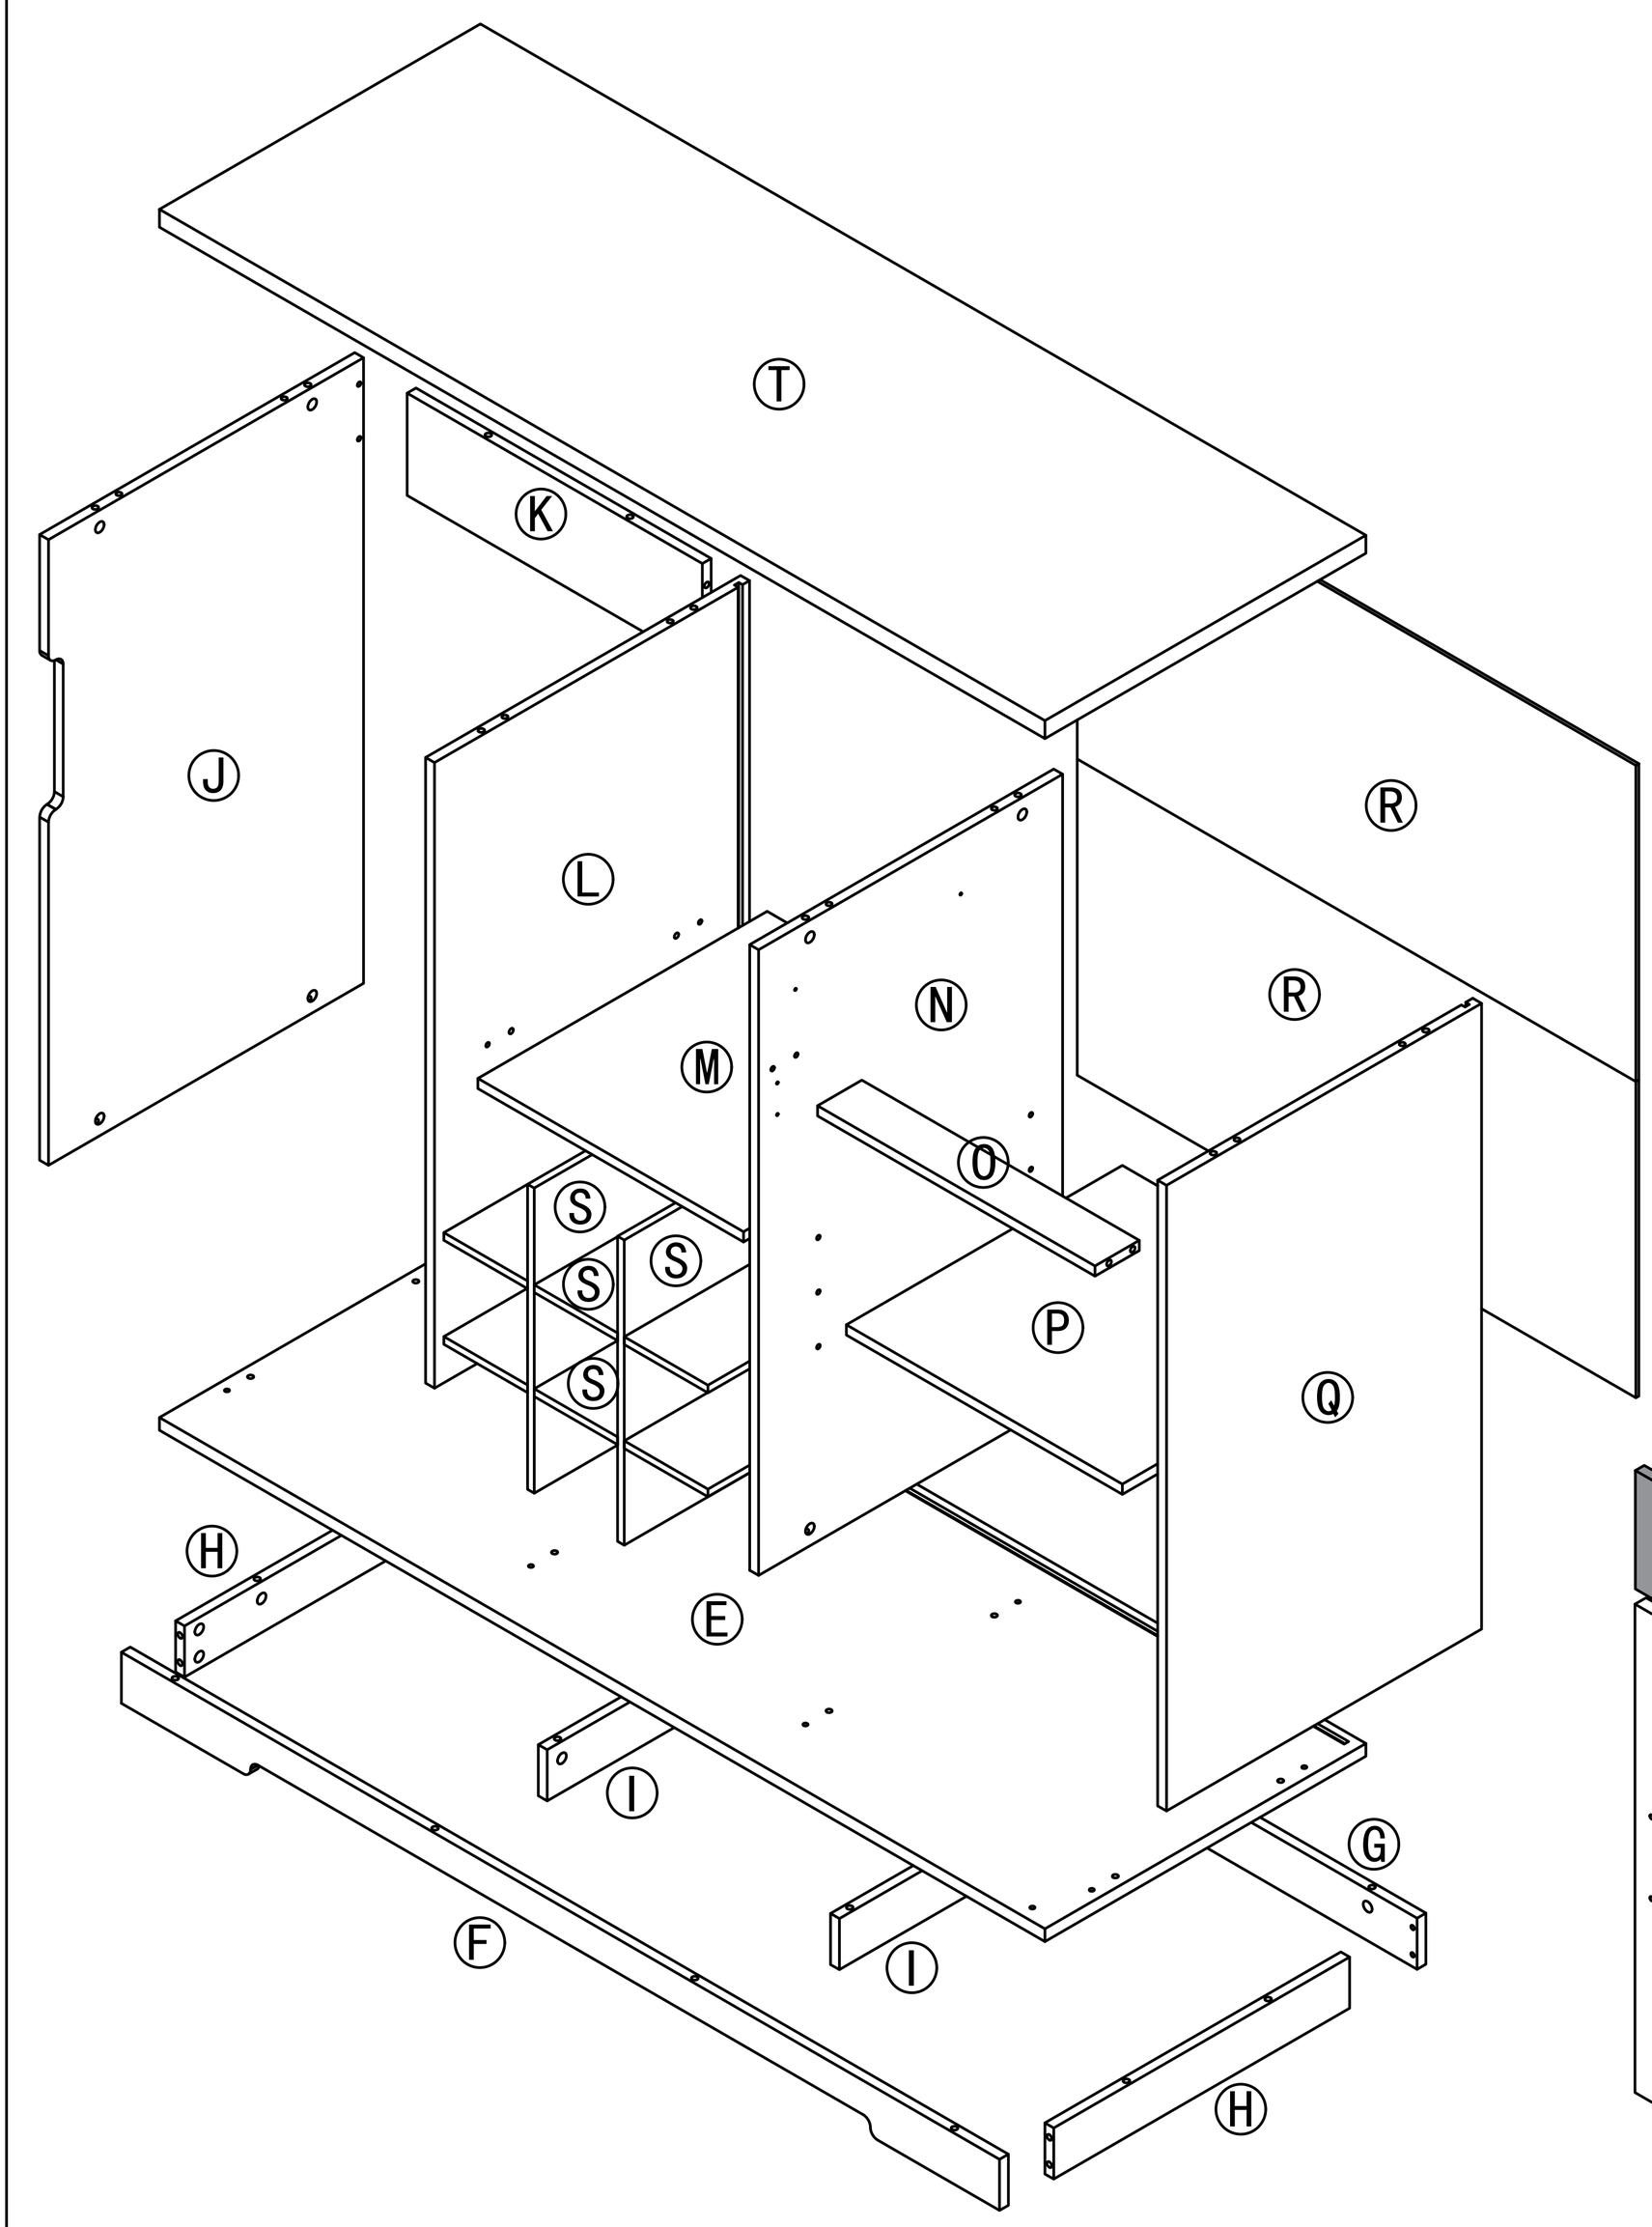

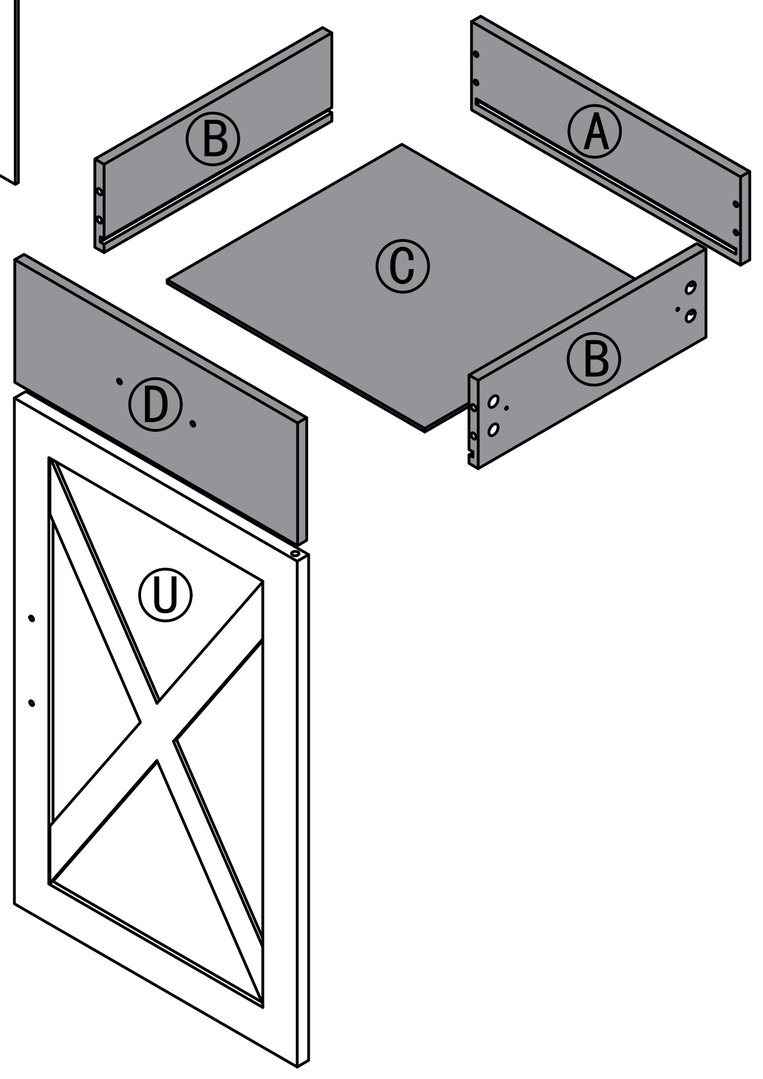


Use parts ① and ②


Step1

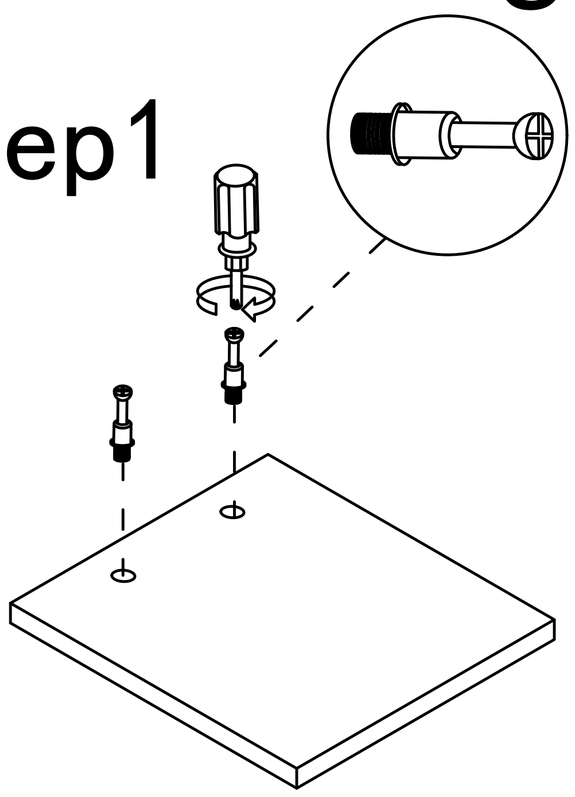


Step2

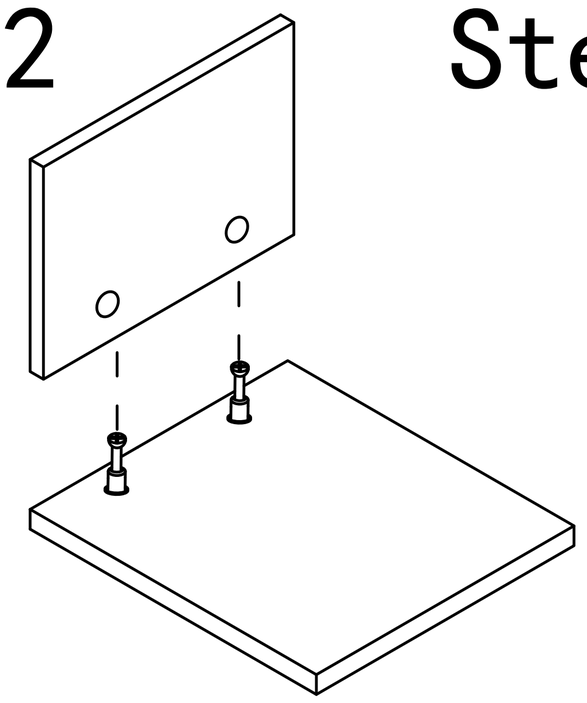


Step3

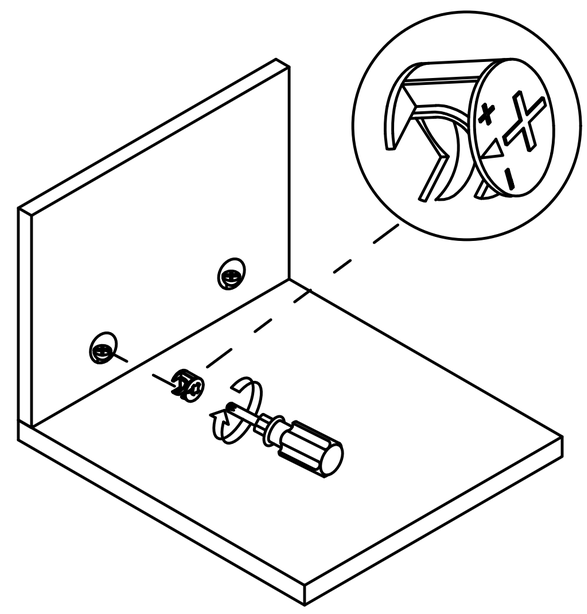

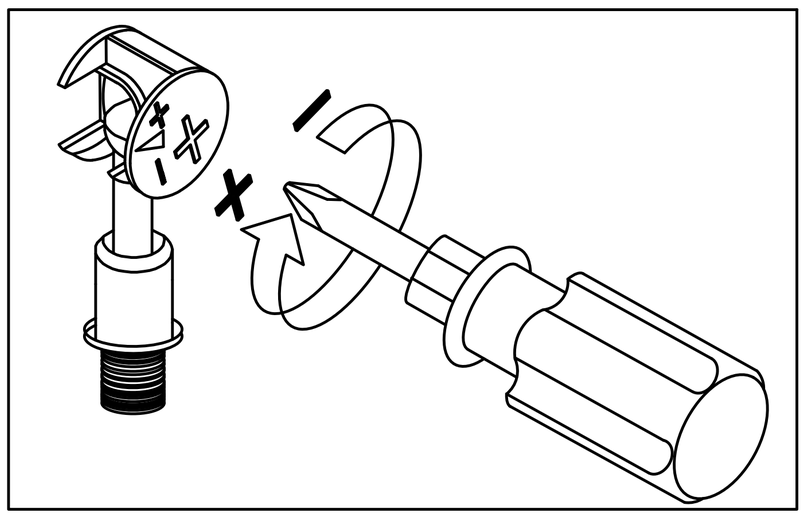



Use a screwdriver to lock in the direction of the "+" sign

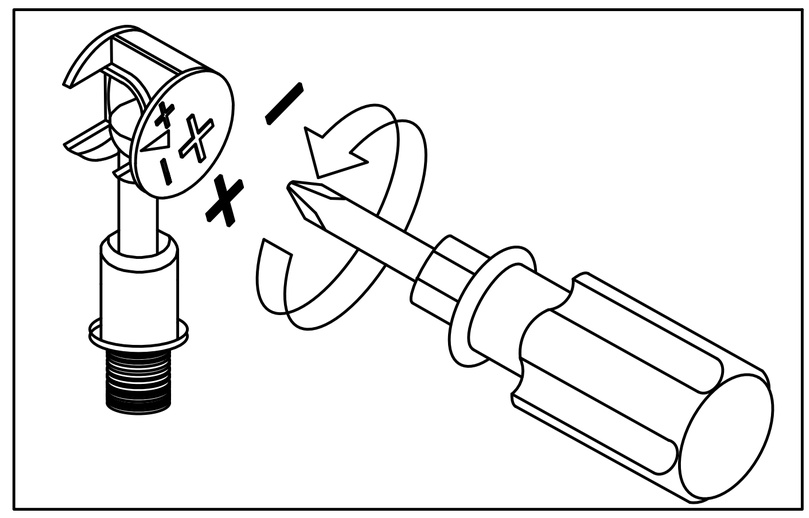


Disassemble along the direction of "-" sign

Step 1

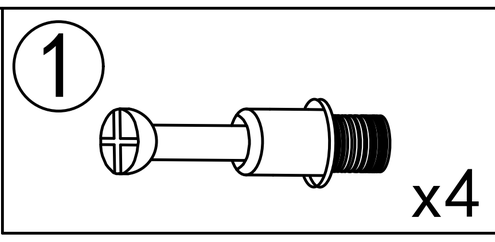


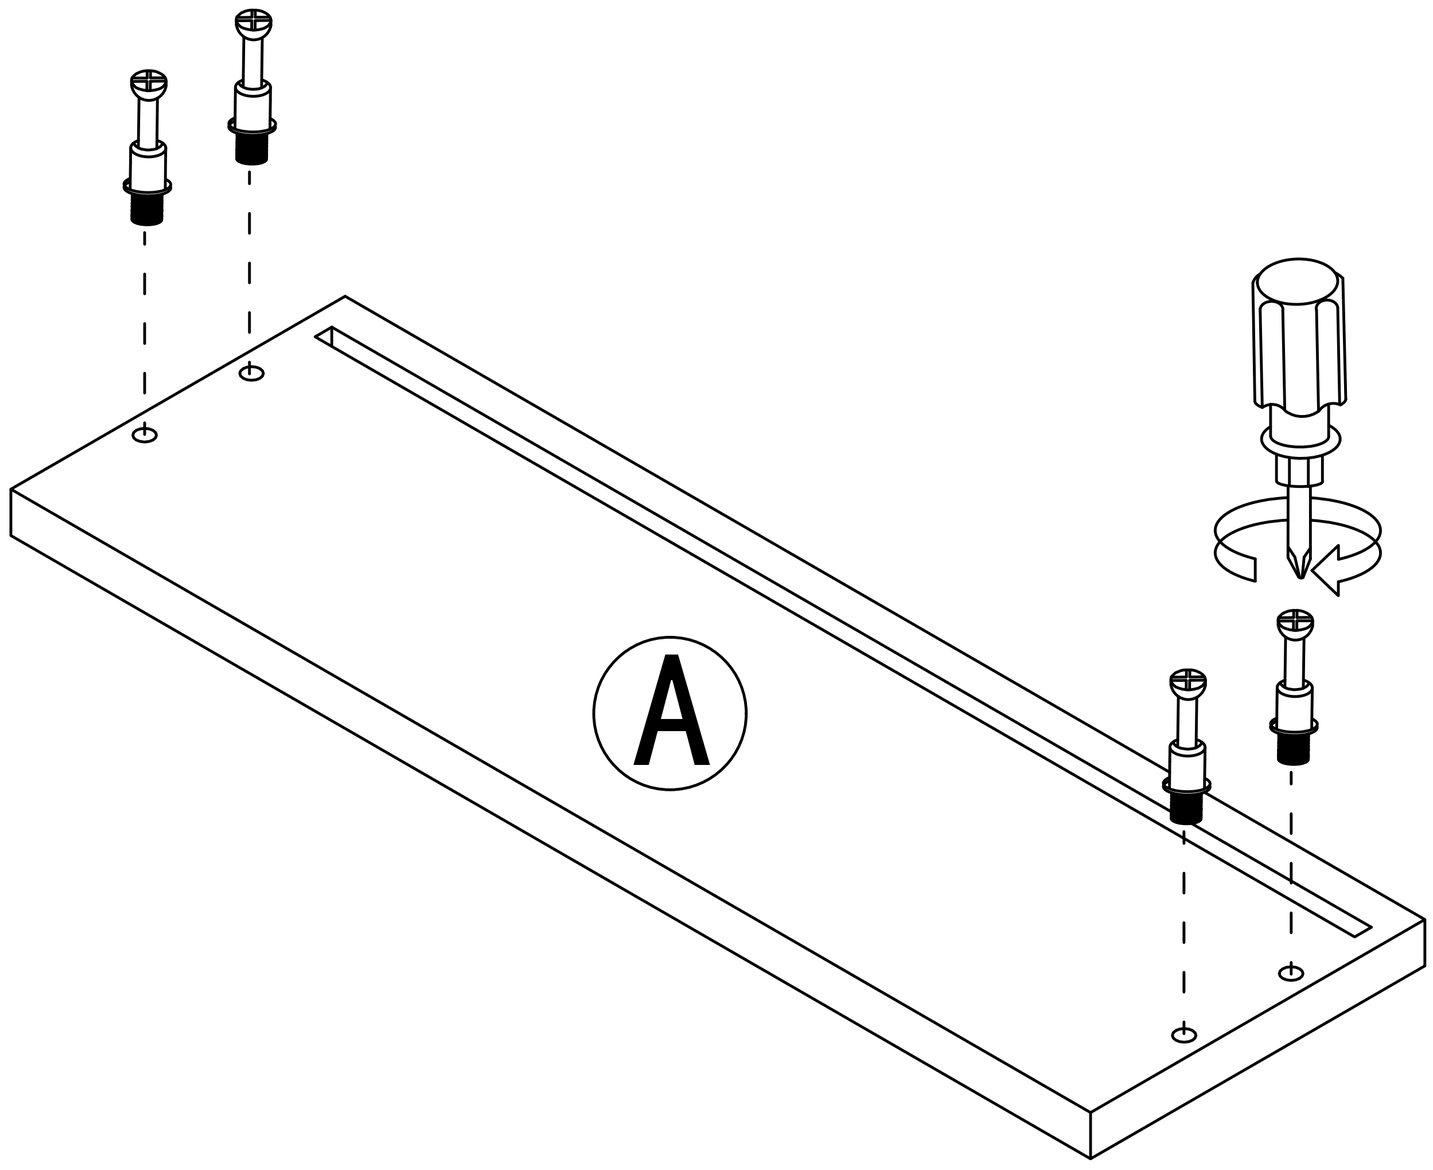


Step 2

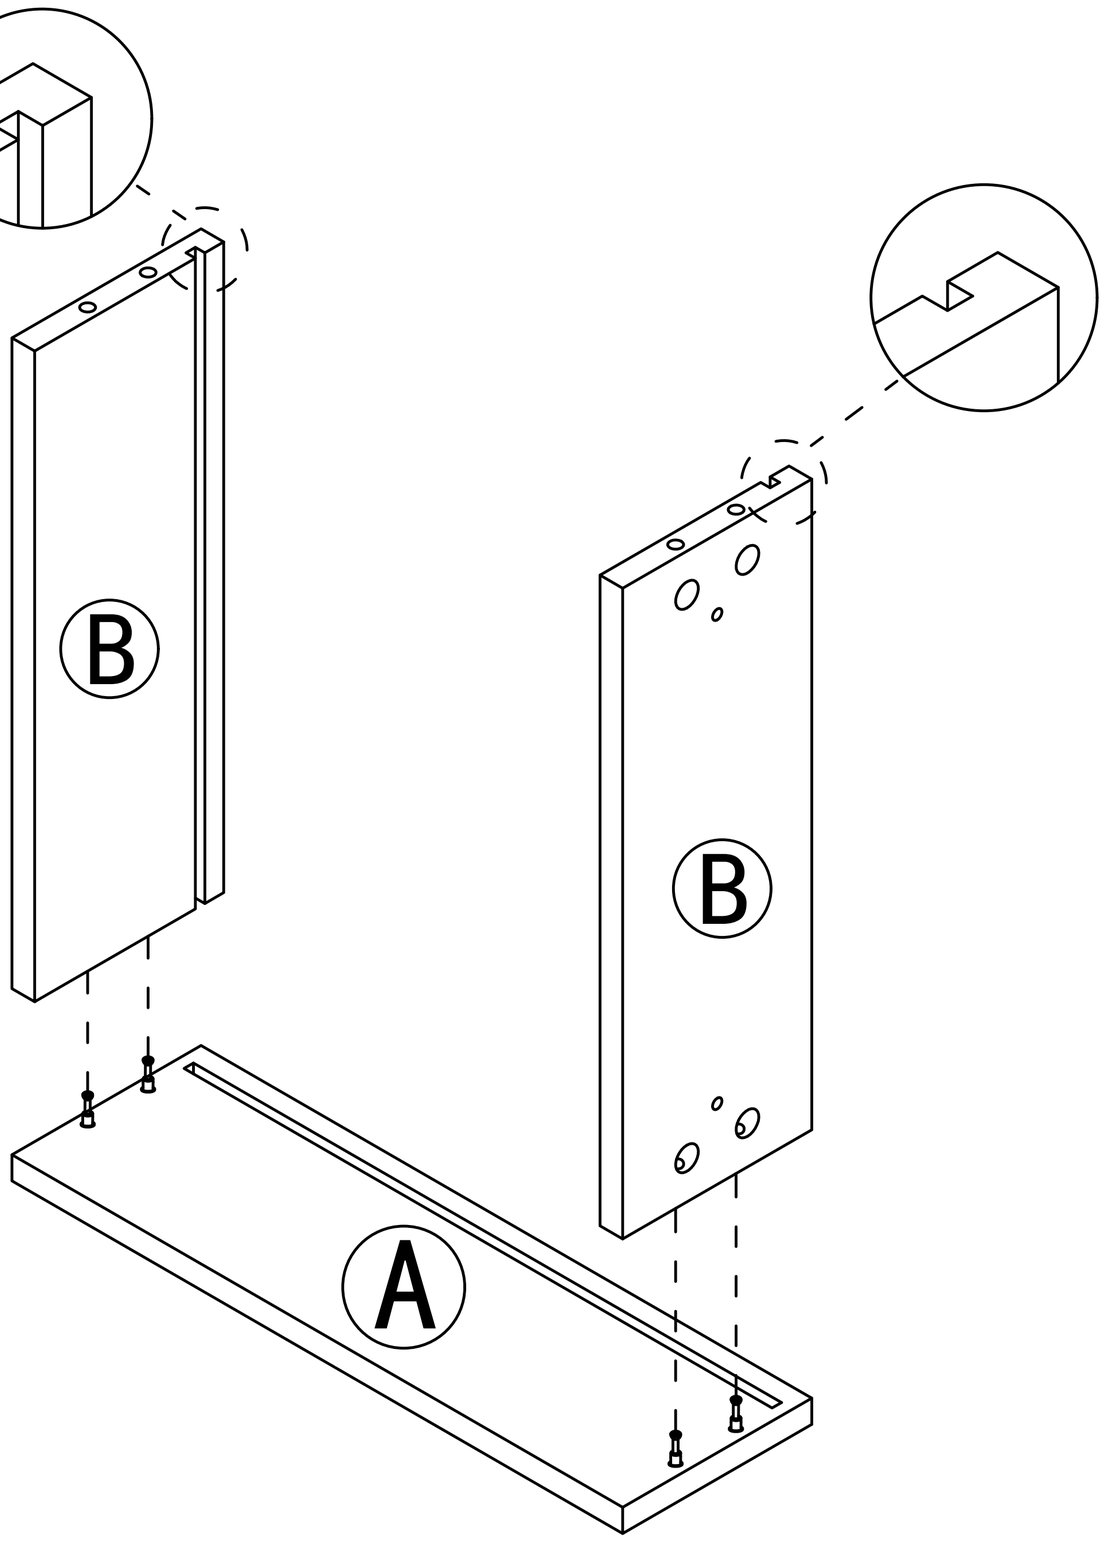

Step 3

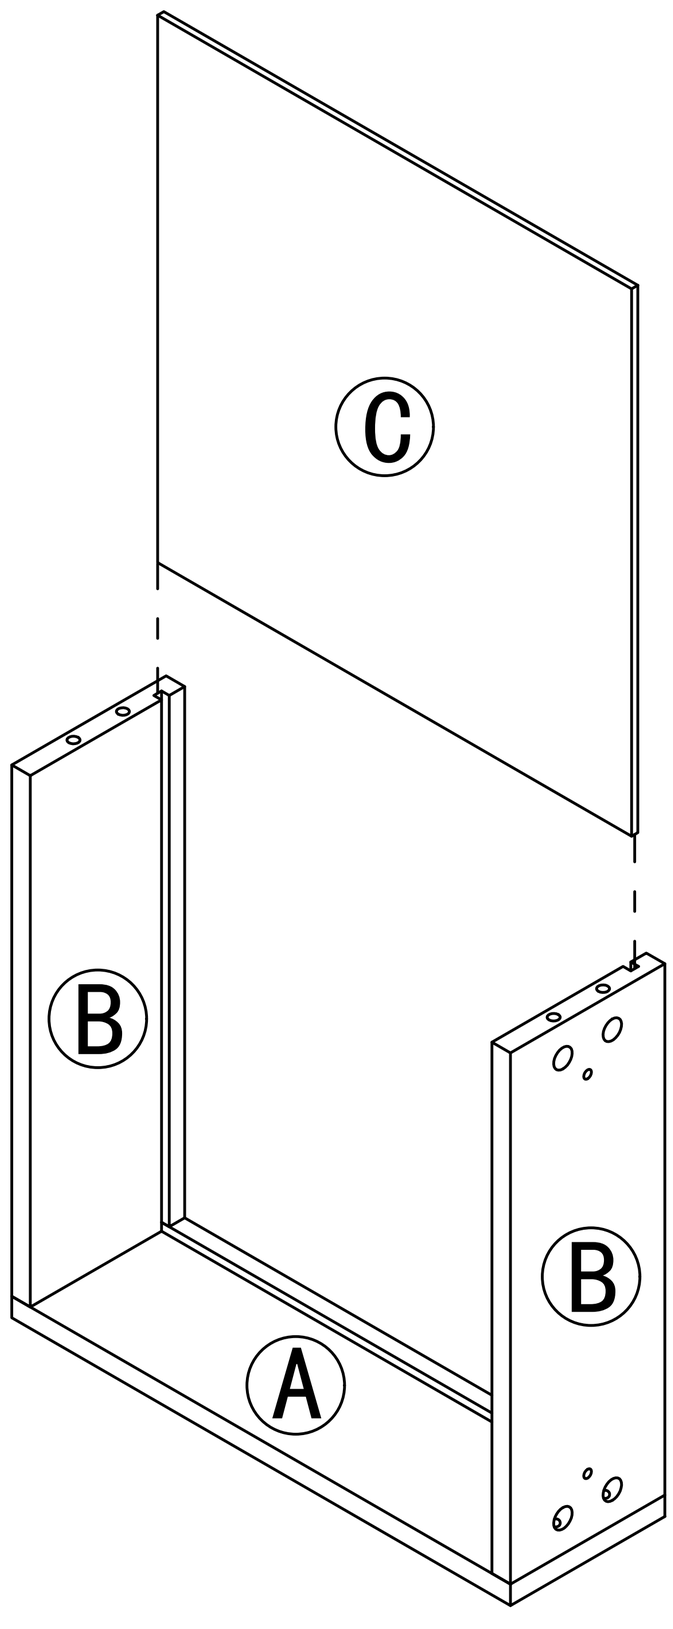


Step 4

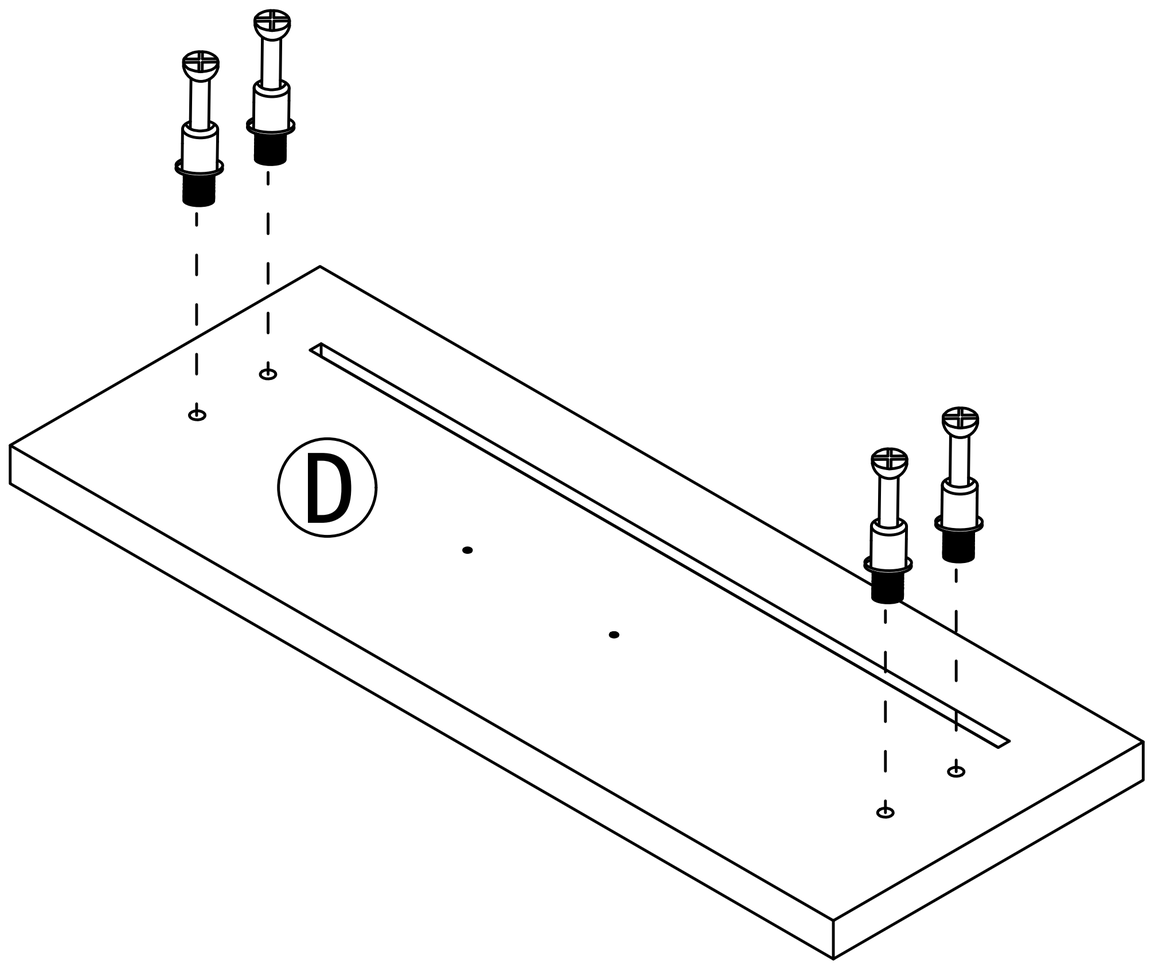

1 x4


Step 5

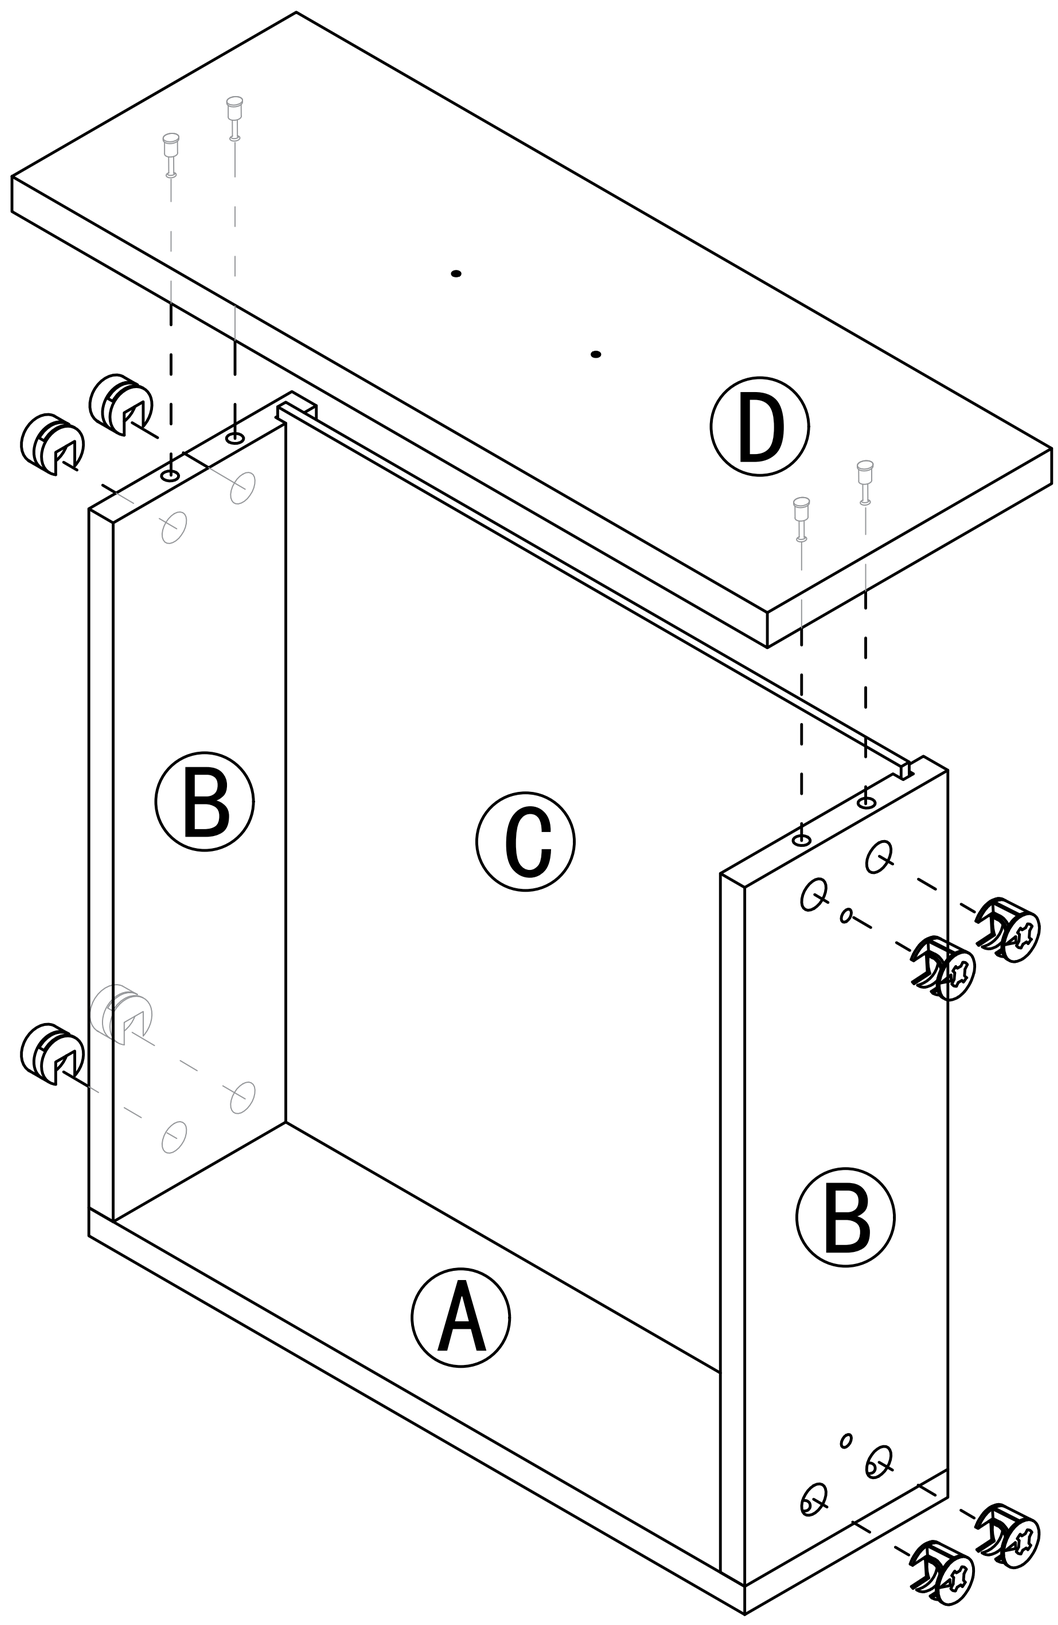

2 x8


Use parts ④

Drawer rail breakdown diagram

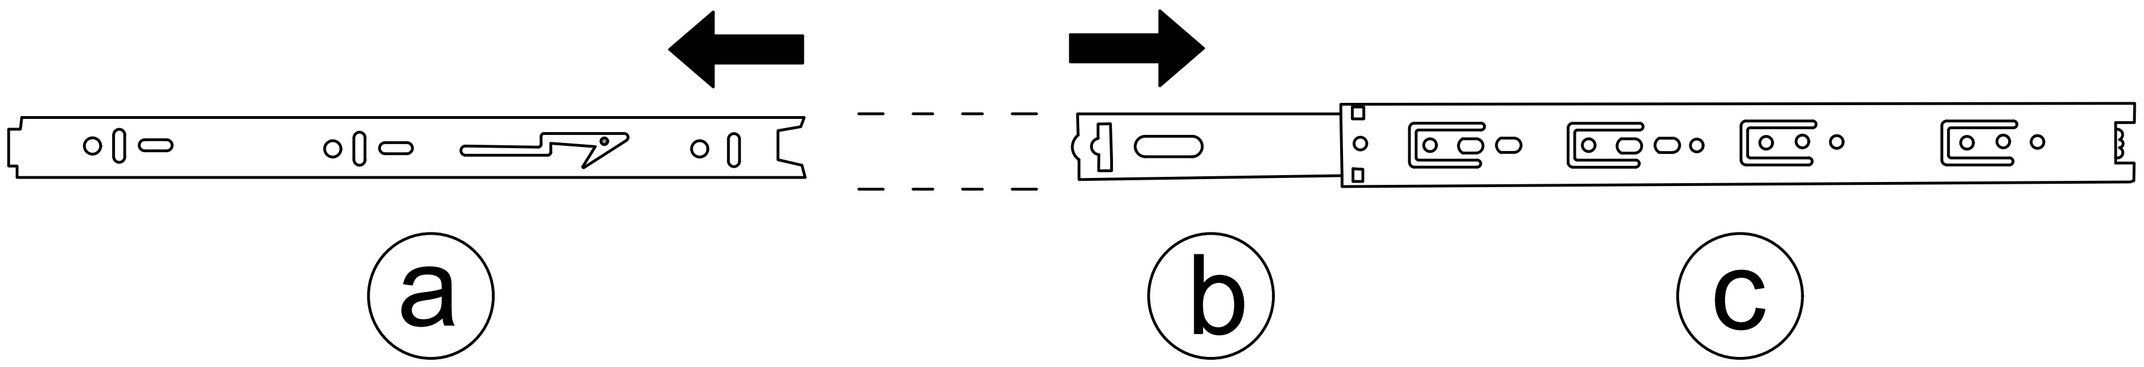


① Dismantle the schematic diagram


Step 1 : Pull the rails apart

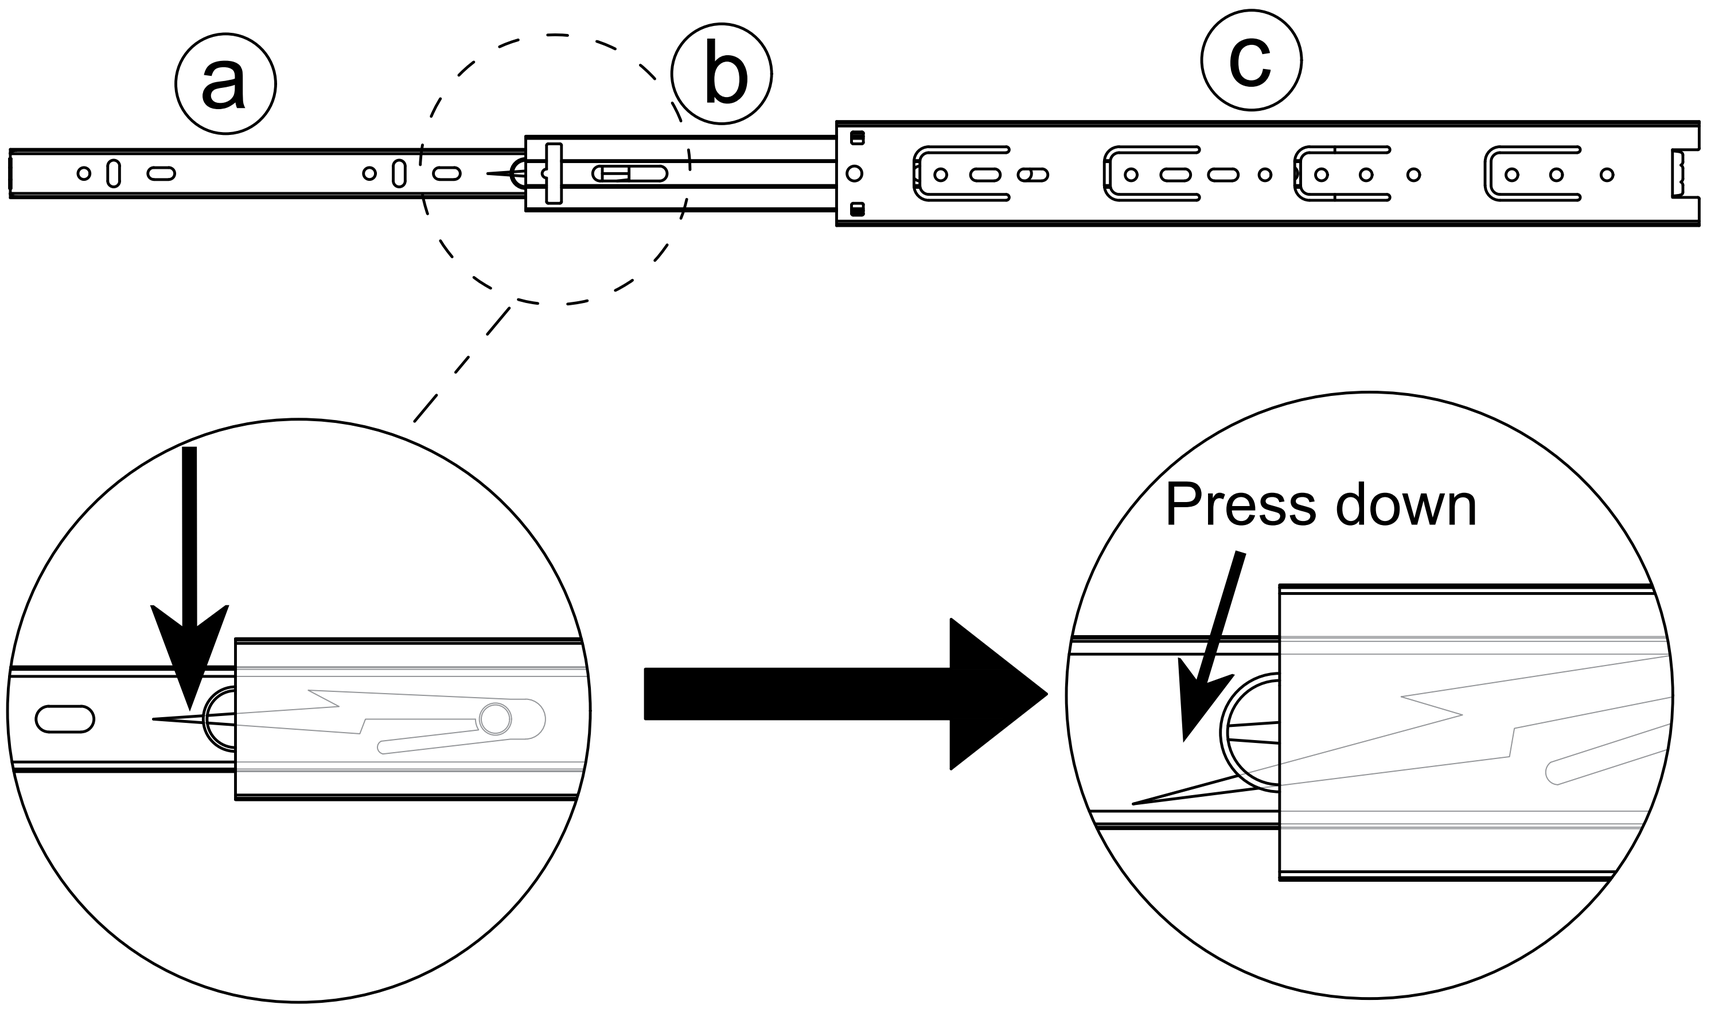


Step 2 : Press the nylon button and pull out ⓐ.


Drawer rail decomposition completed schematic diagram

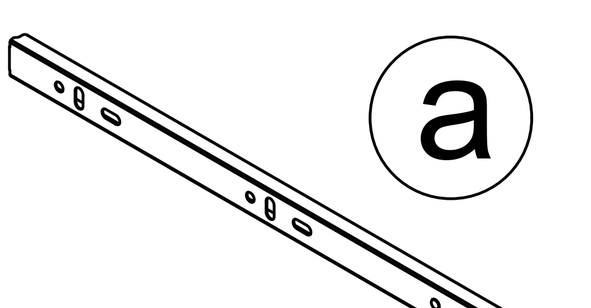


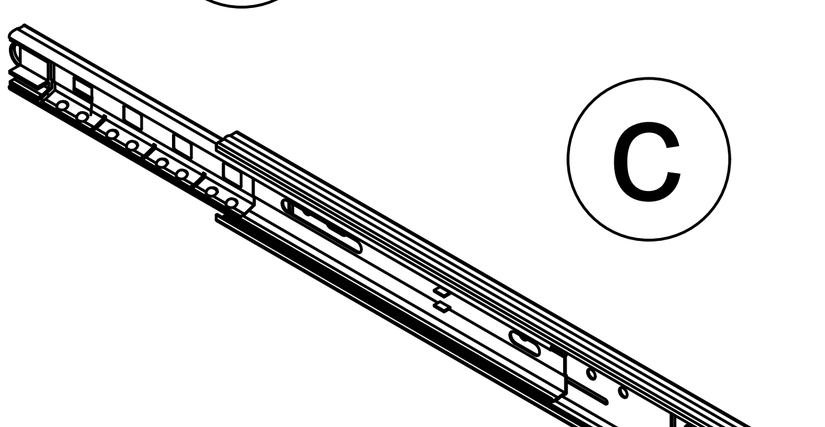


Step 6

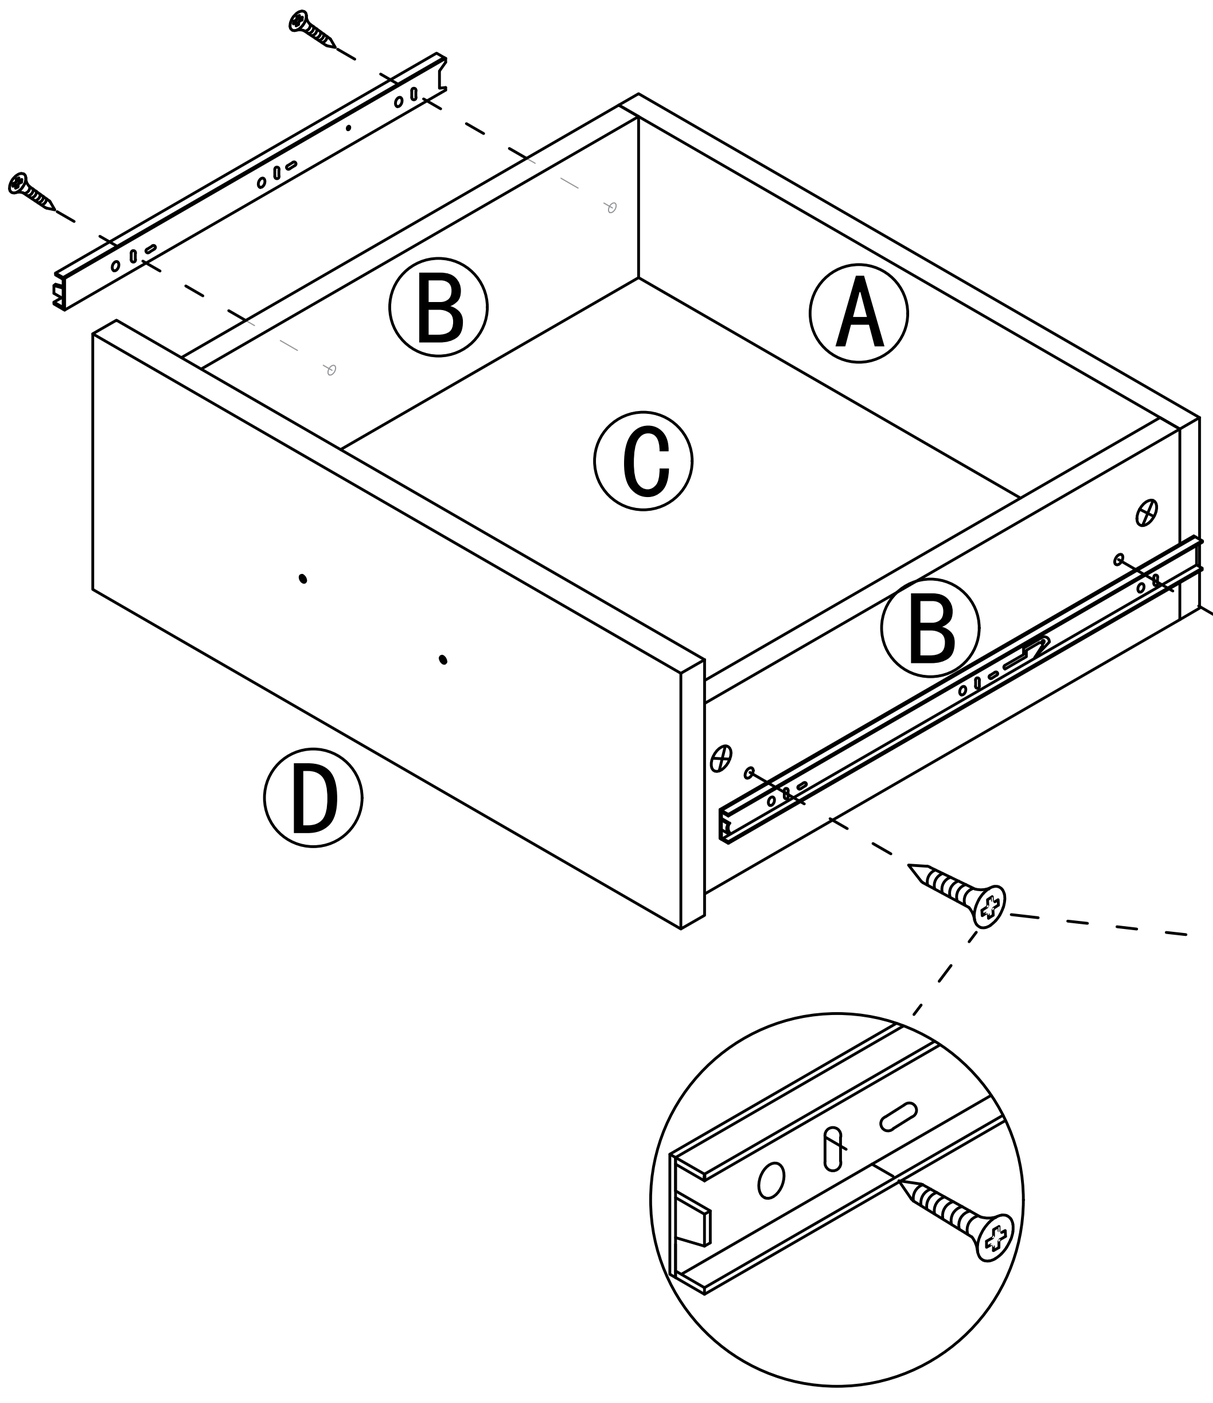


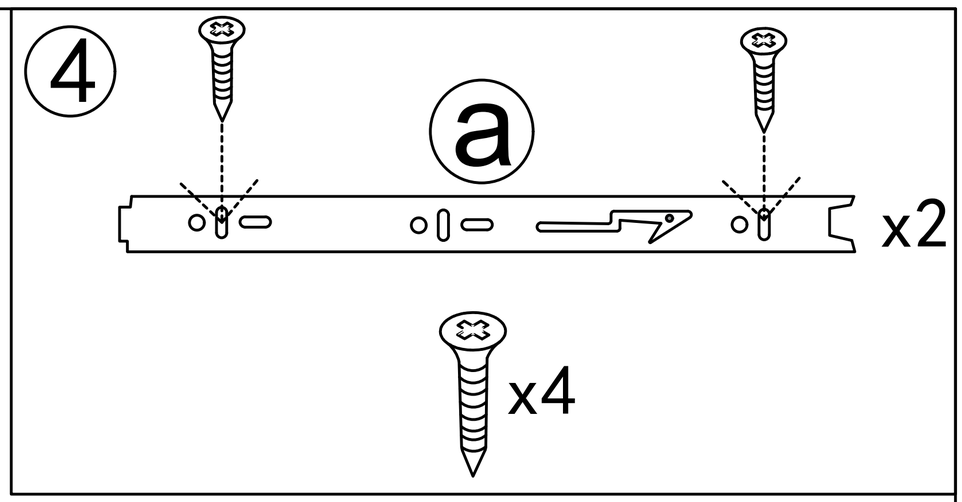


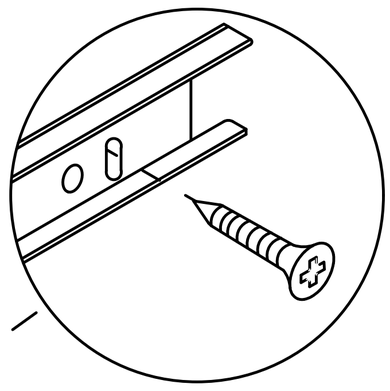













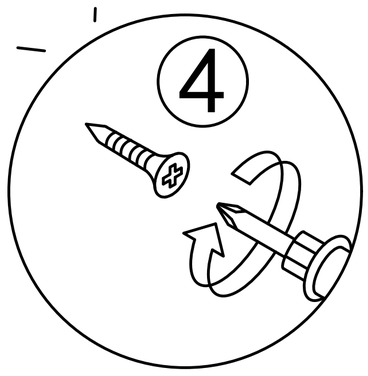



Step 7

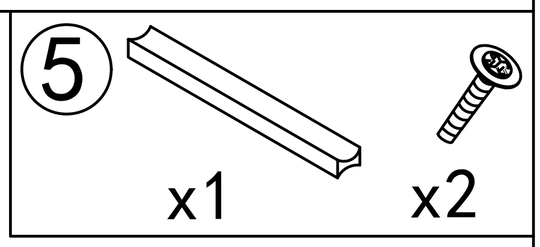

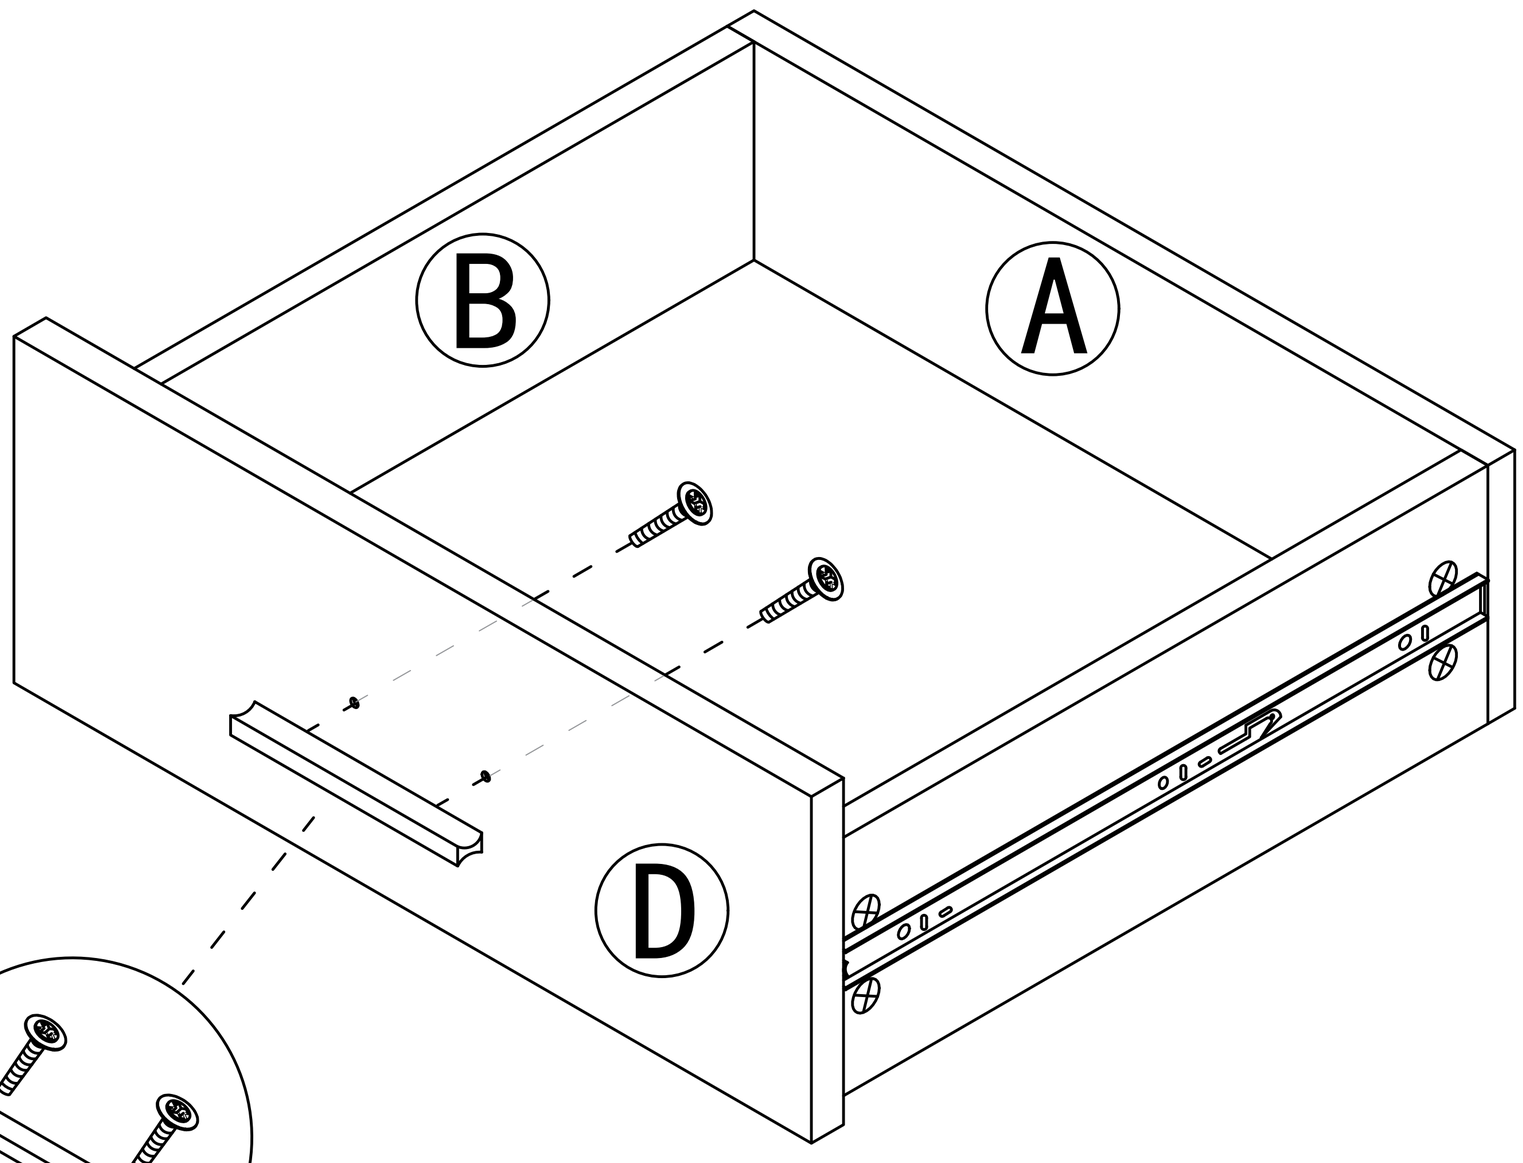


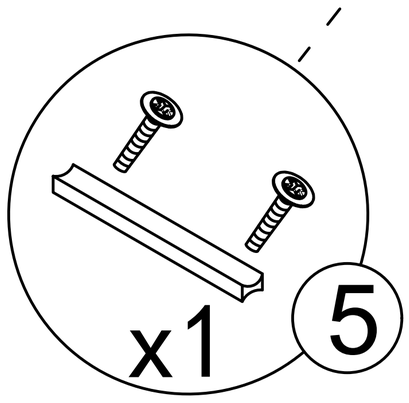

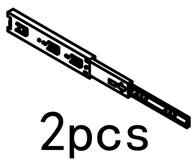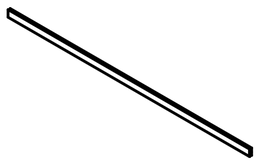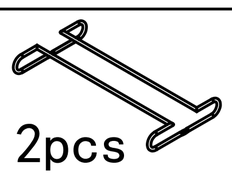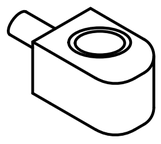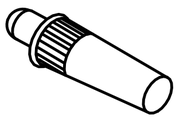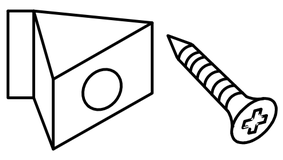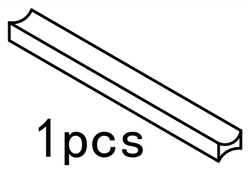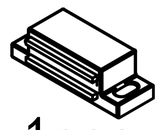①		54pcs	②		54pcs	③		20pcs
④	 2pcs  6pcs		⑥		10pcs	⑦		1pcs
⑧	 2pcs  4pcs		⑨		4pcs	⑩		2pcs
⑪		12pcs	⑫	 1pcs  2pcs		⑬	 1pcs  2pcs  1pcs  2pcs	

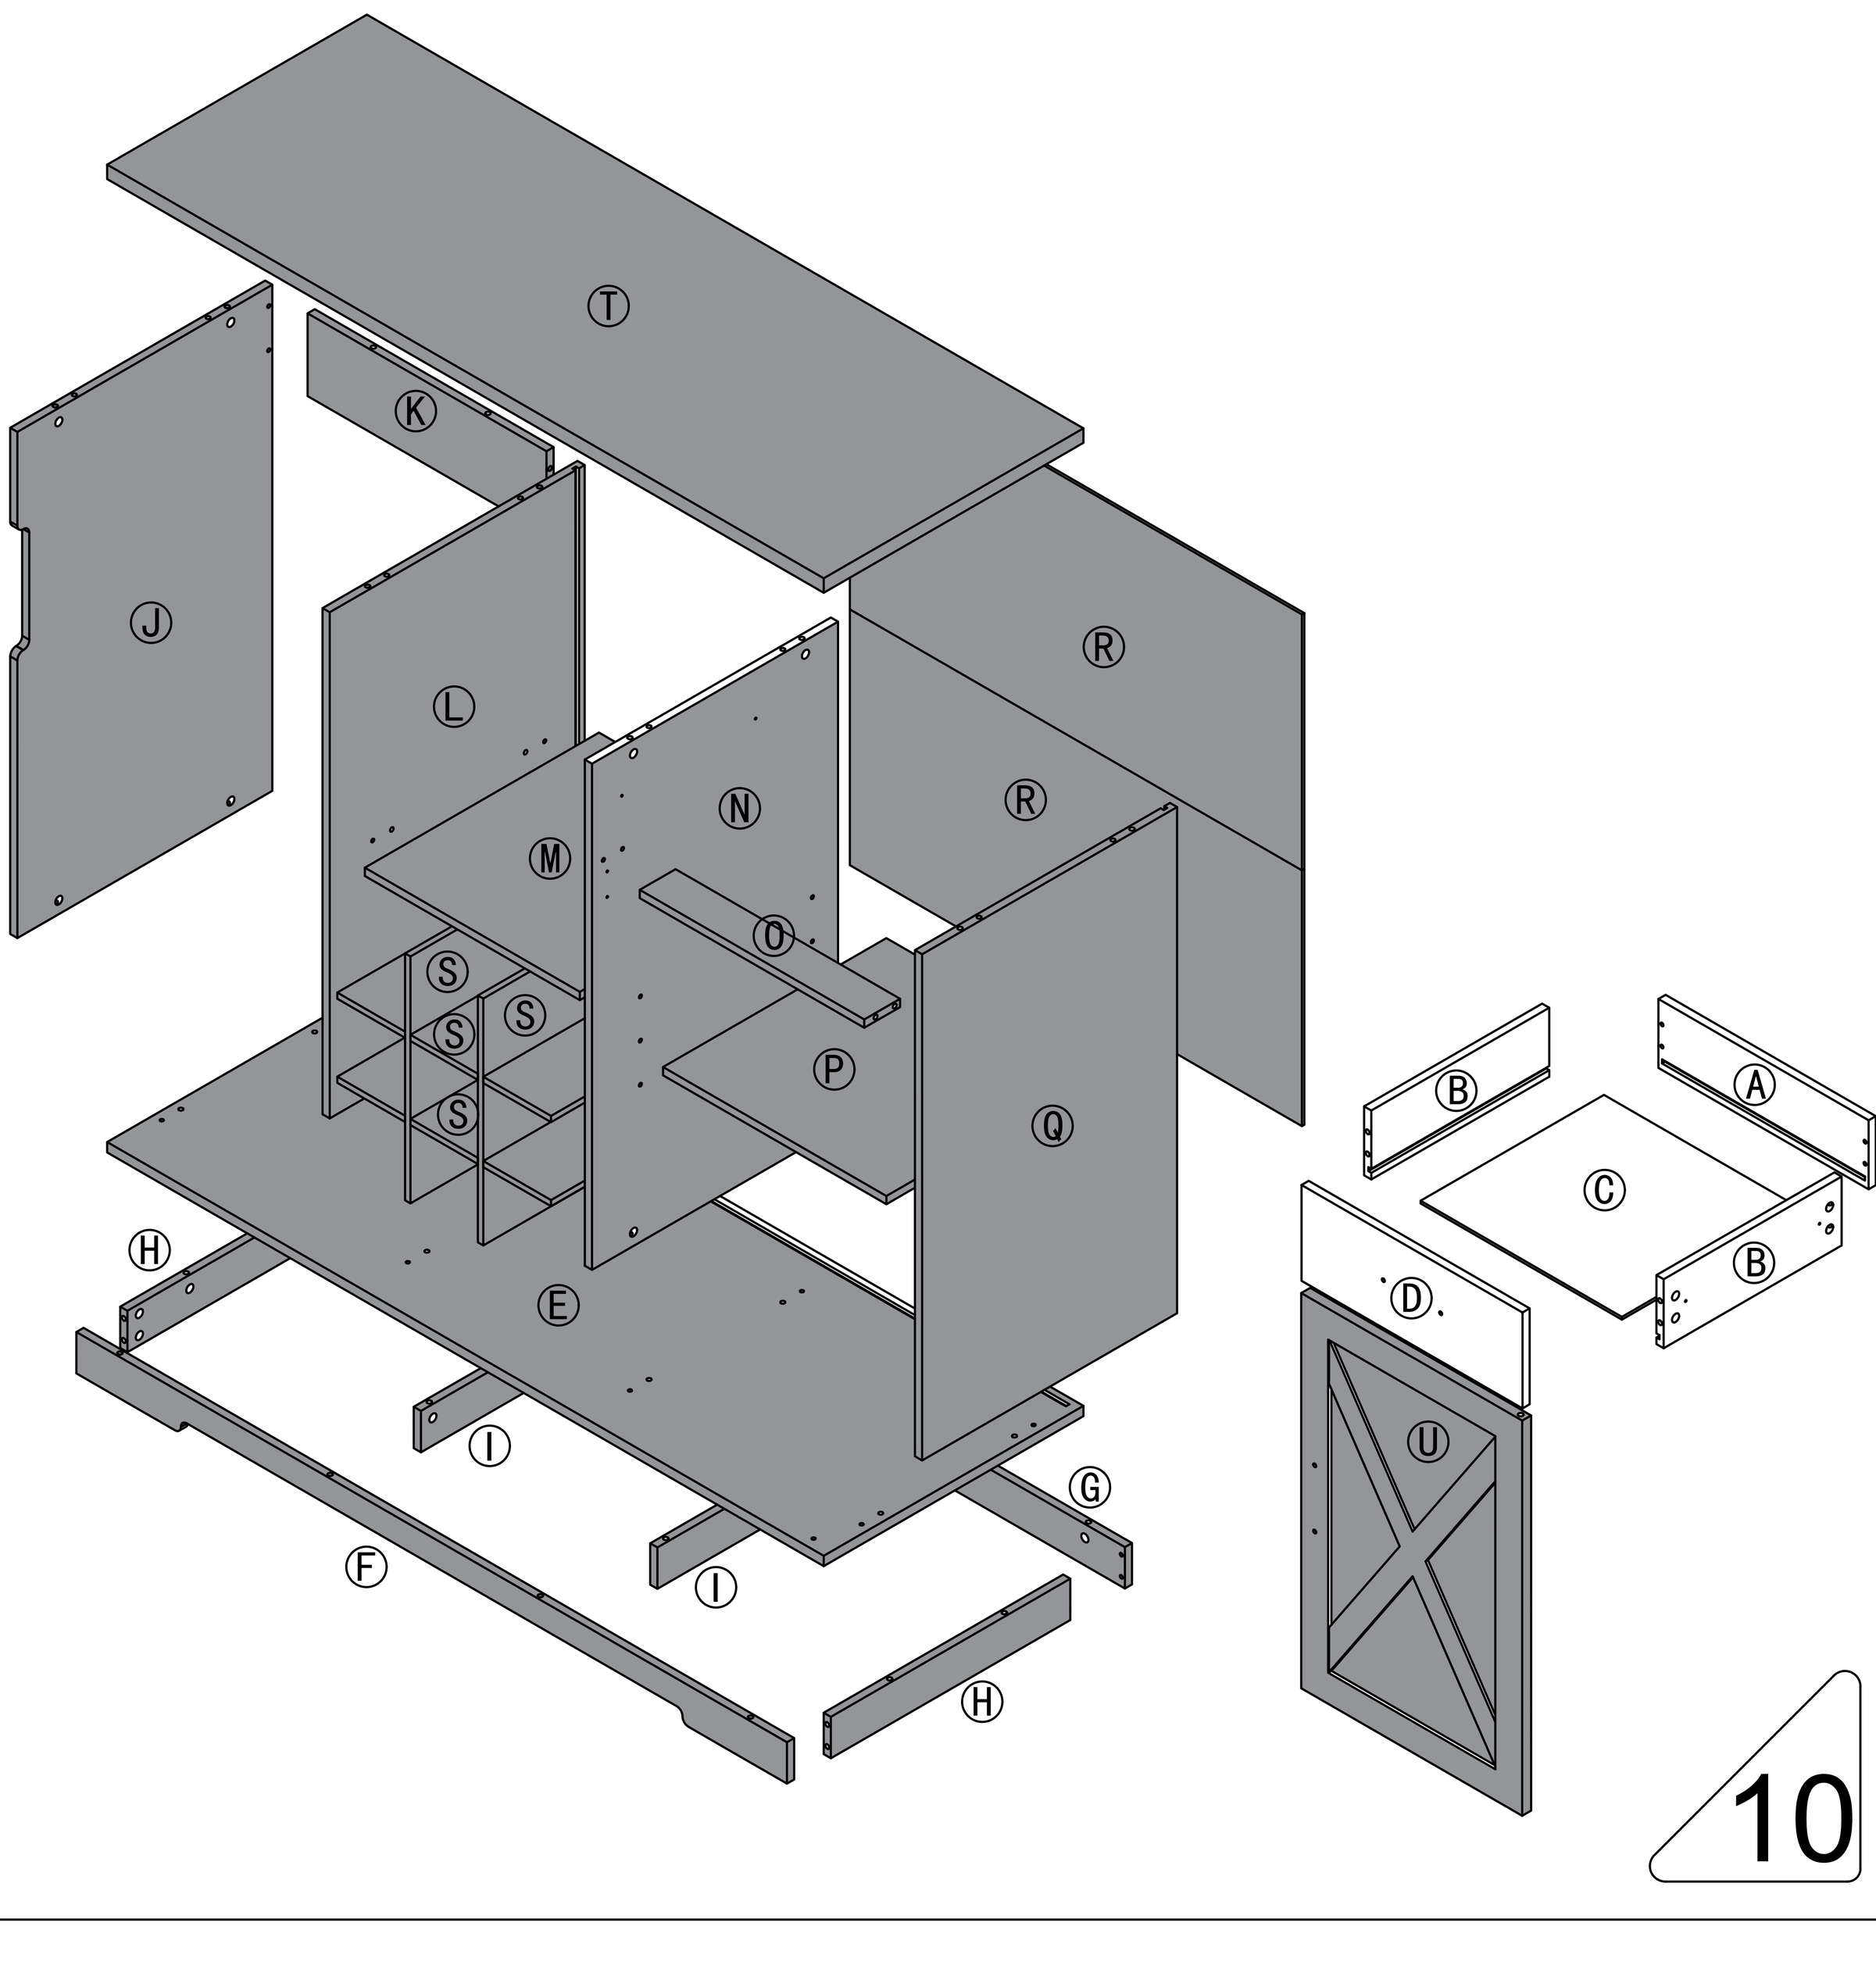


Step 8

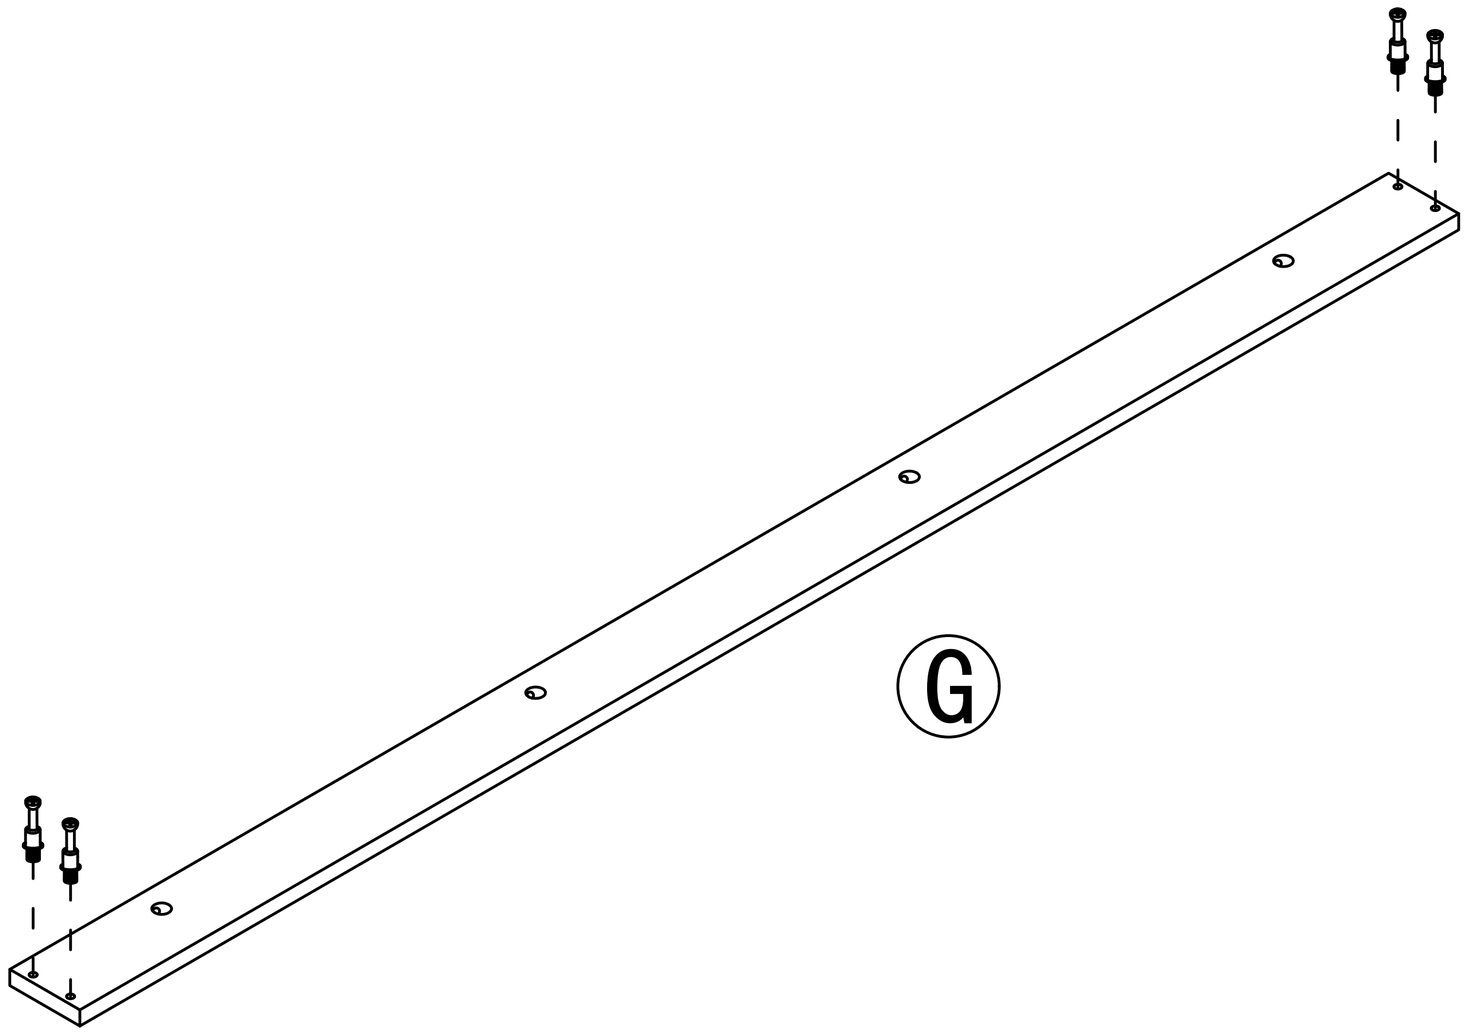

1 x4


Step 9

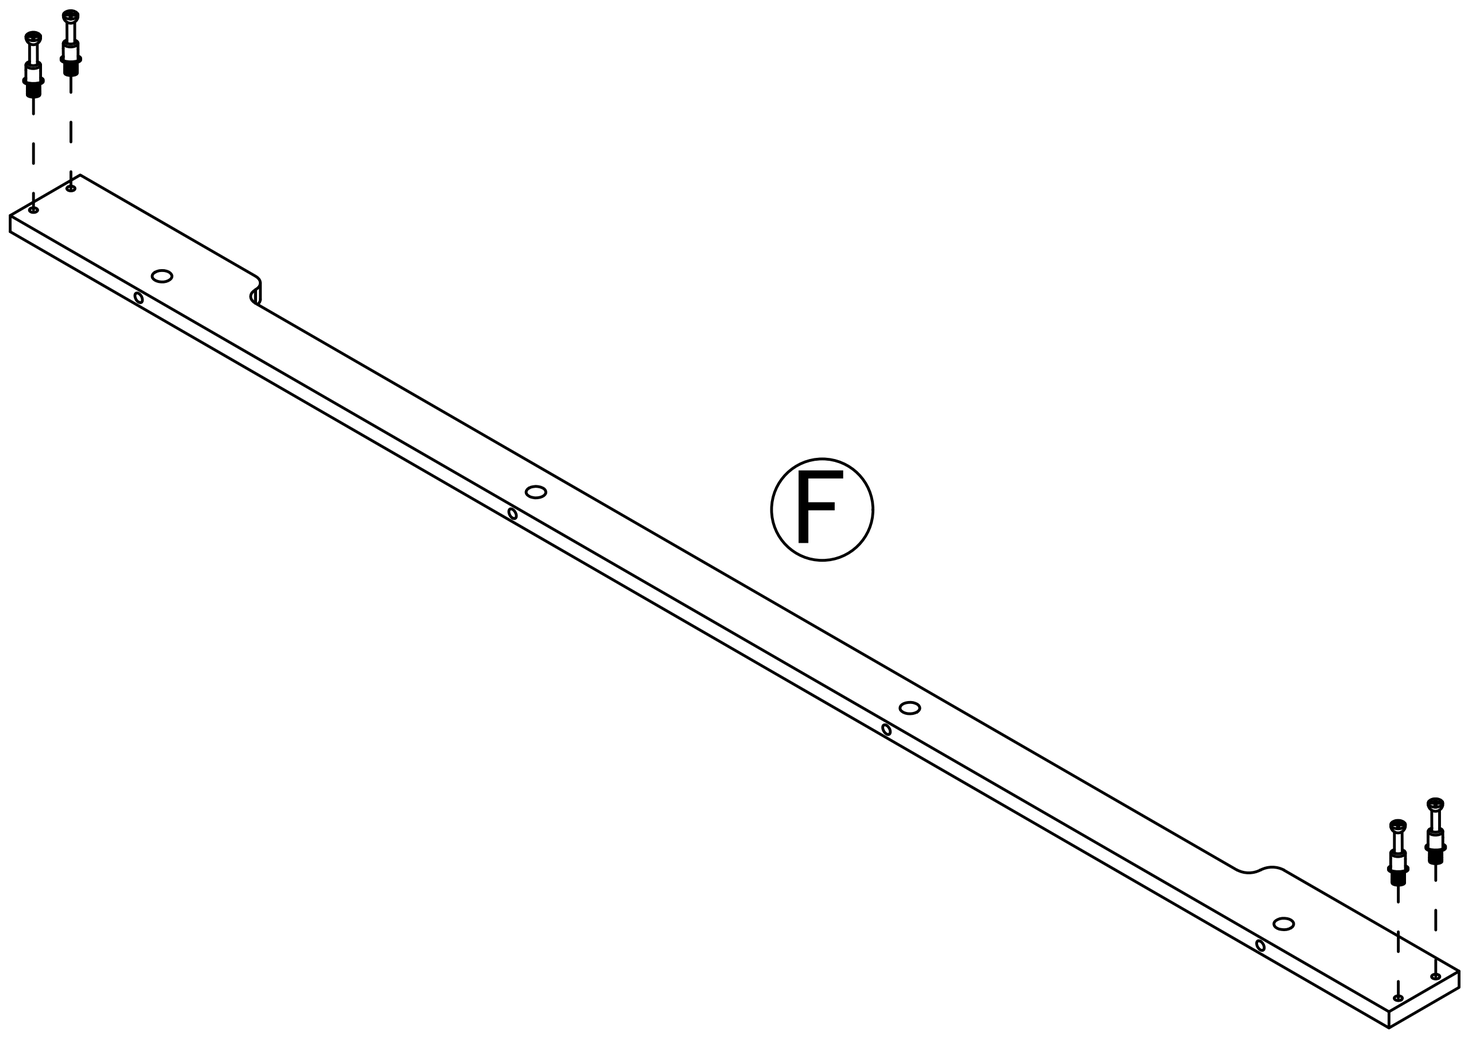

1 x4

Step 10


2 x4

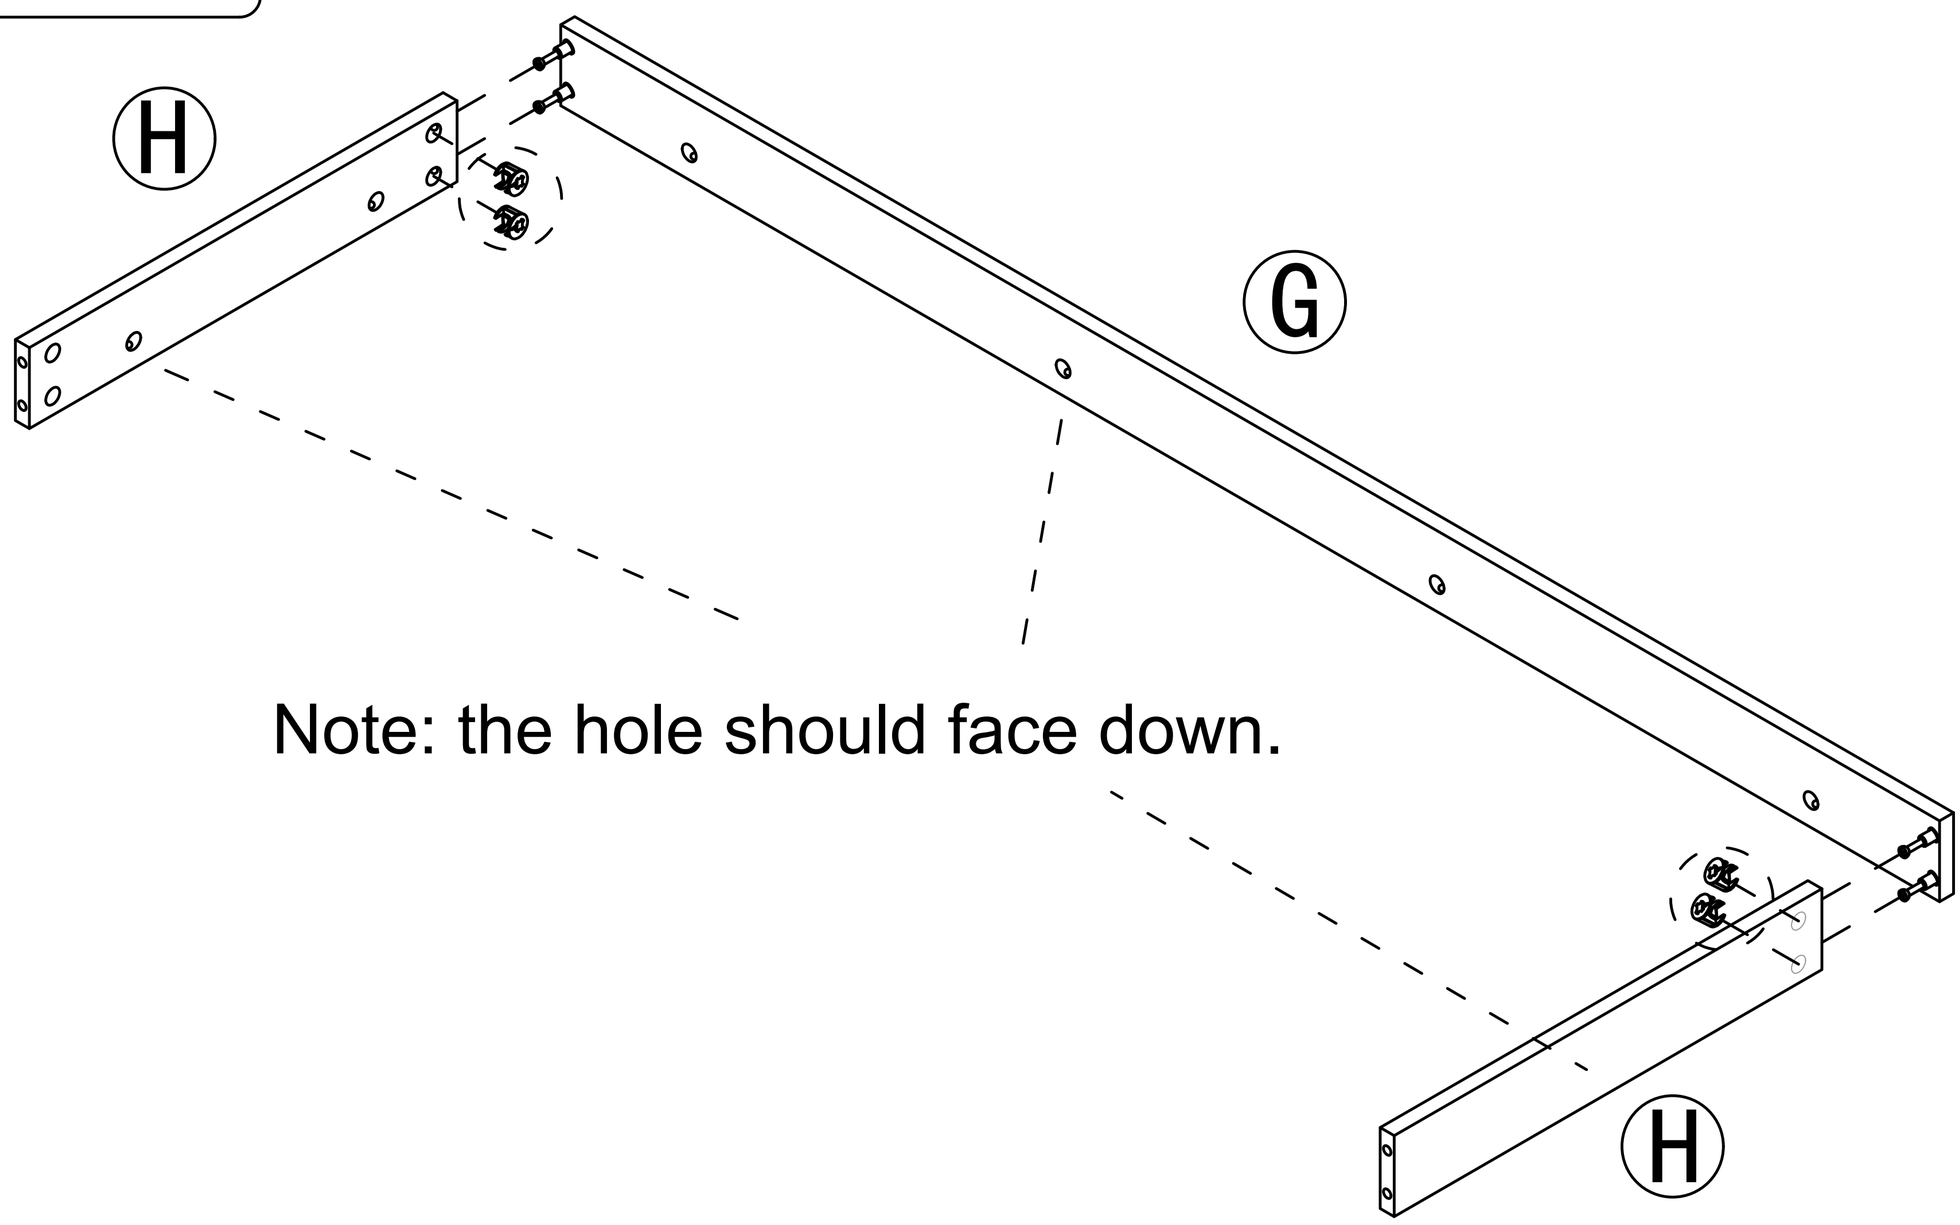


Note: the hole should face down.


Step 11

2 x4

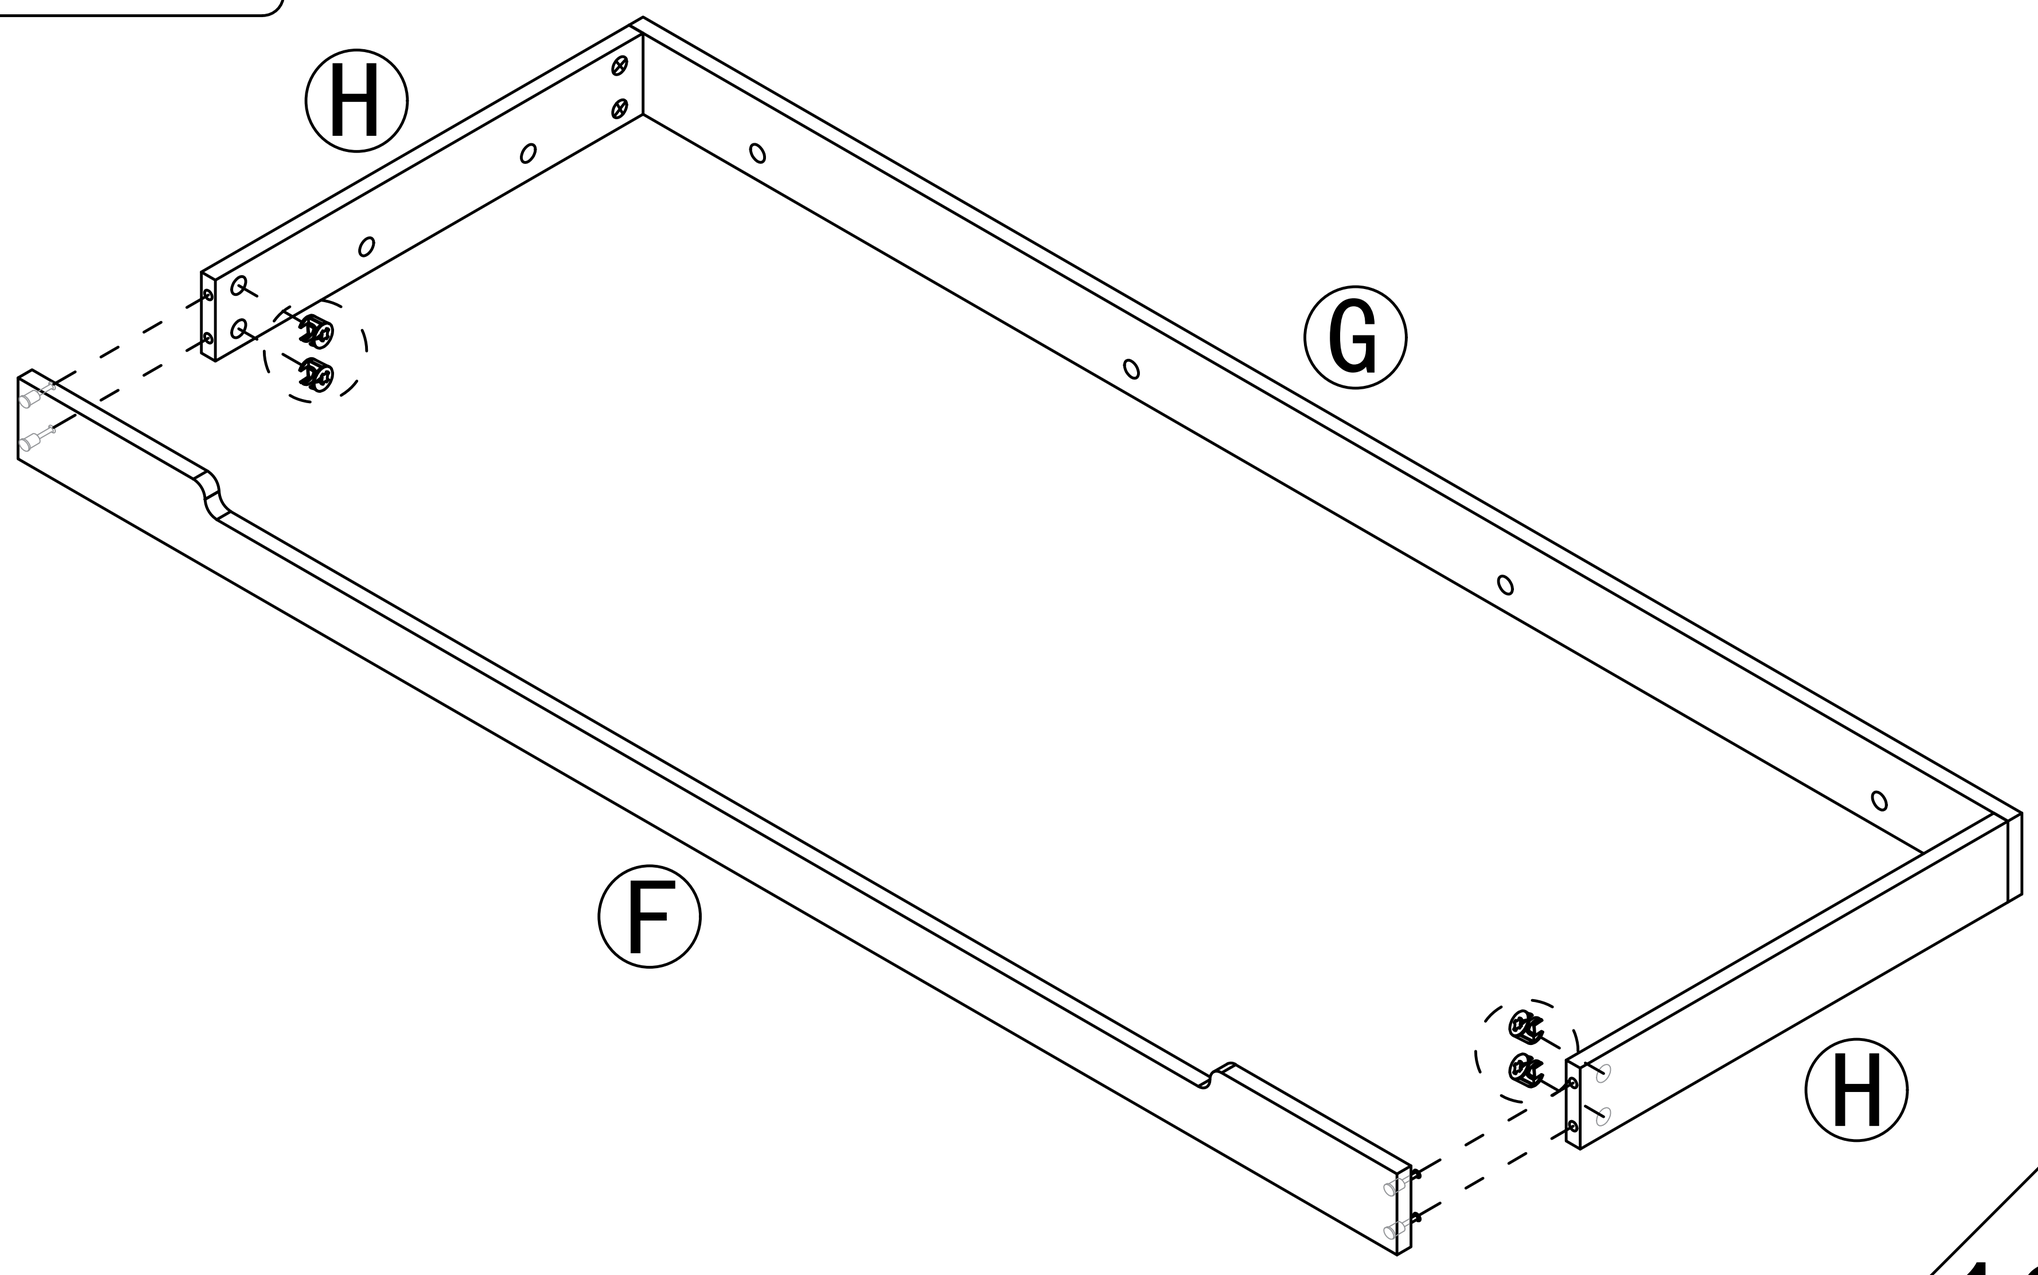


Step 12

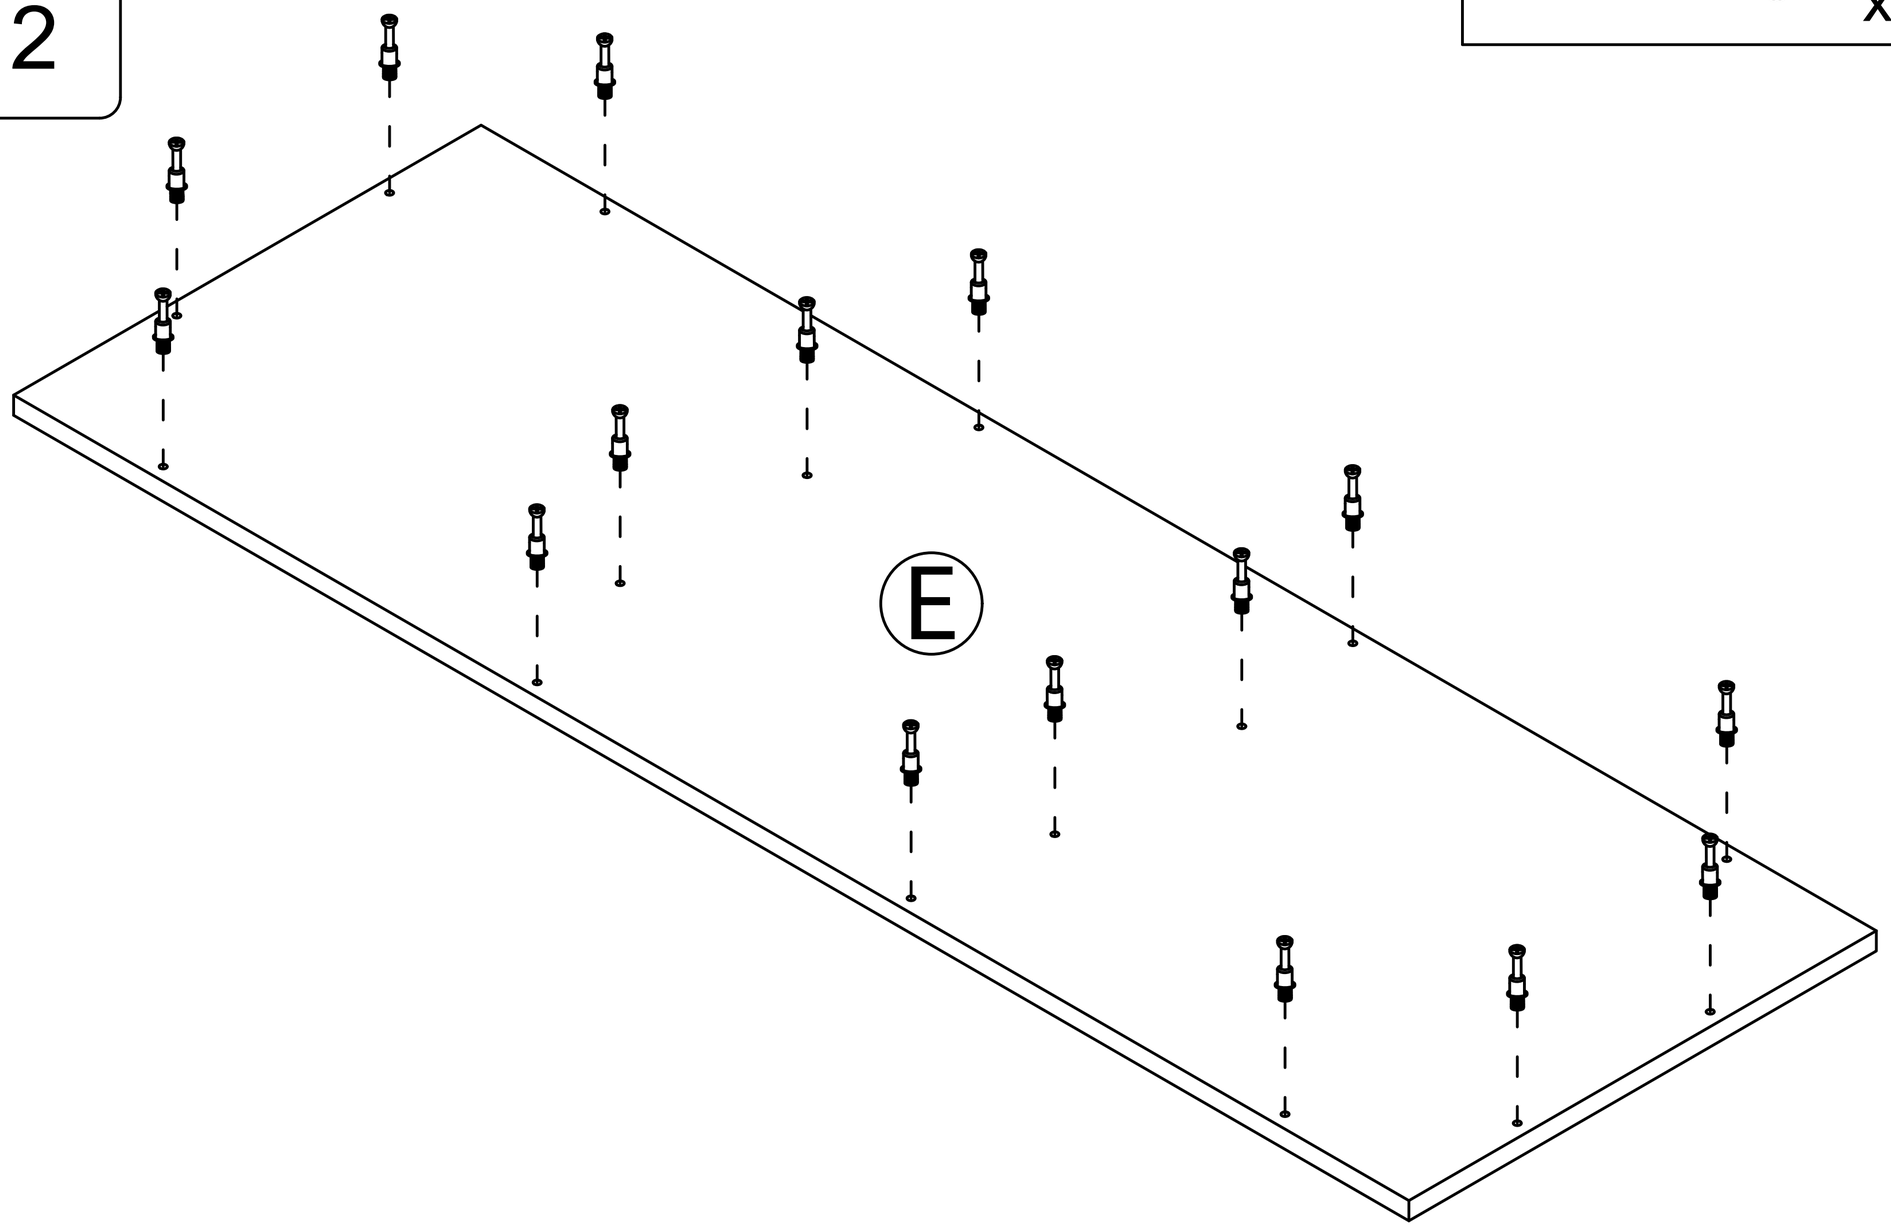

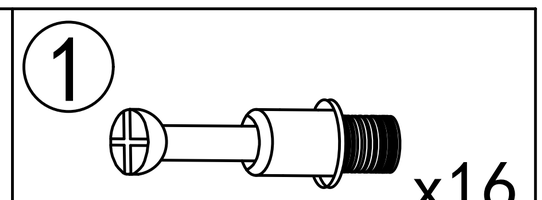

Step 13

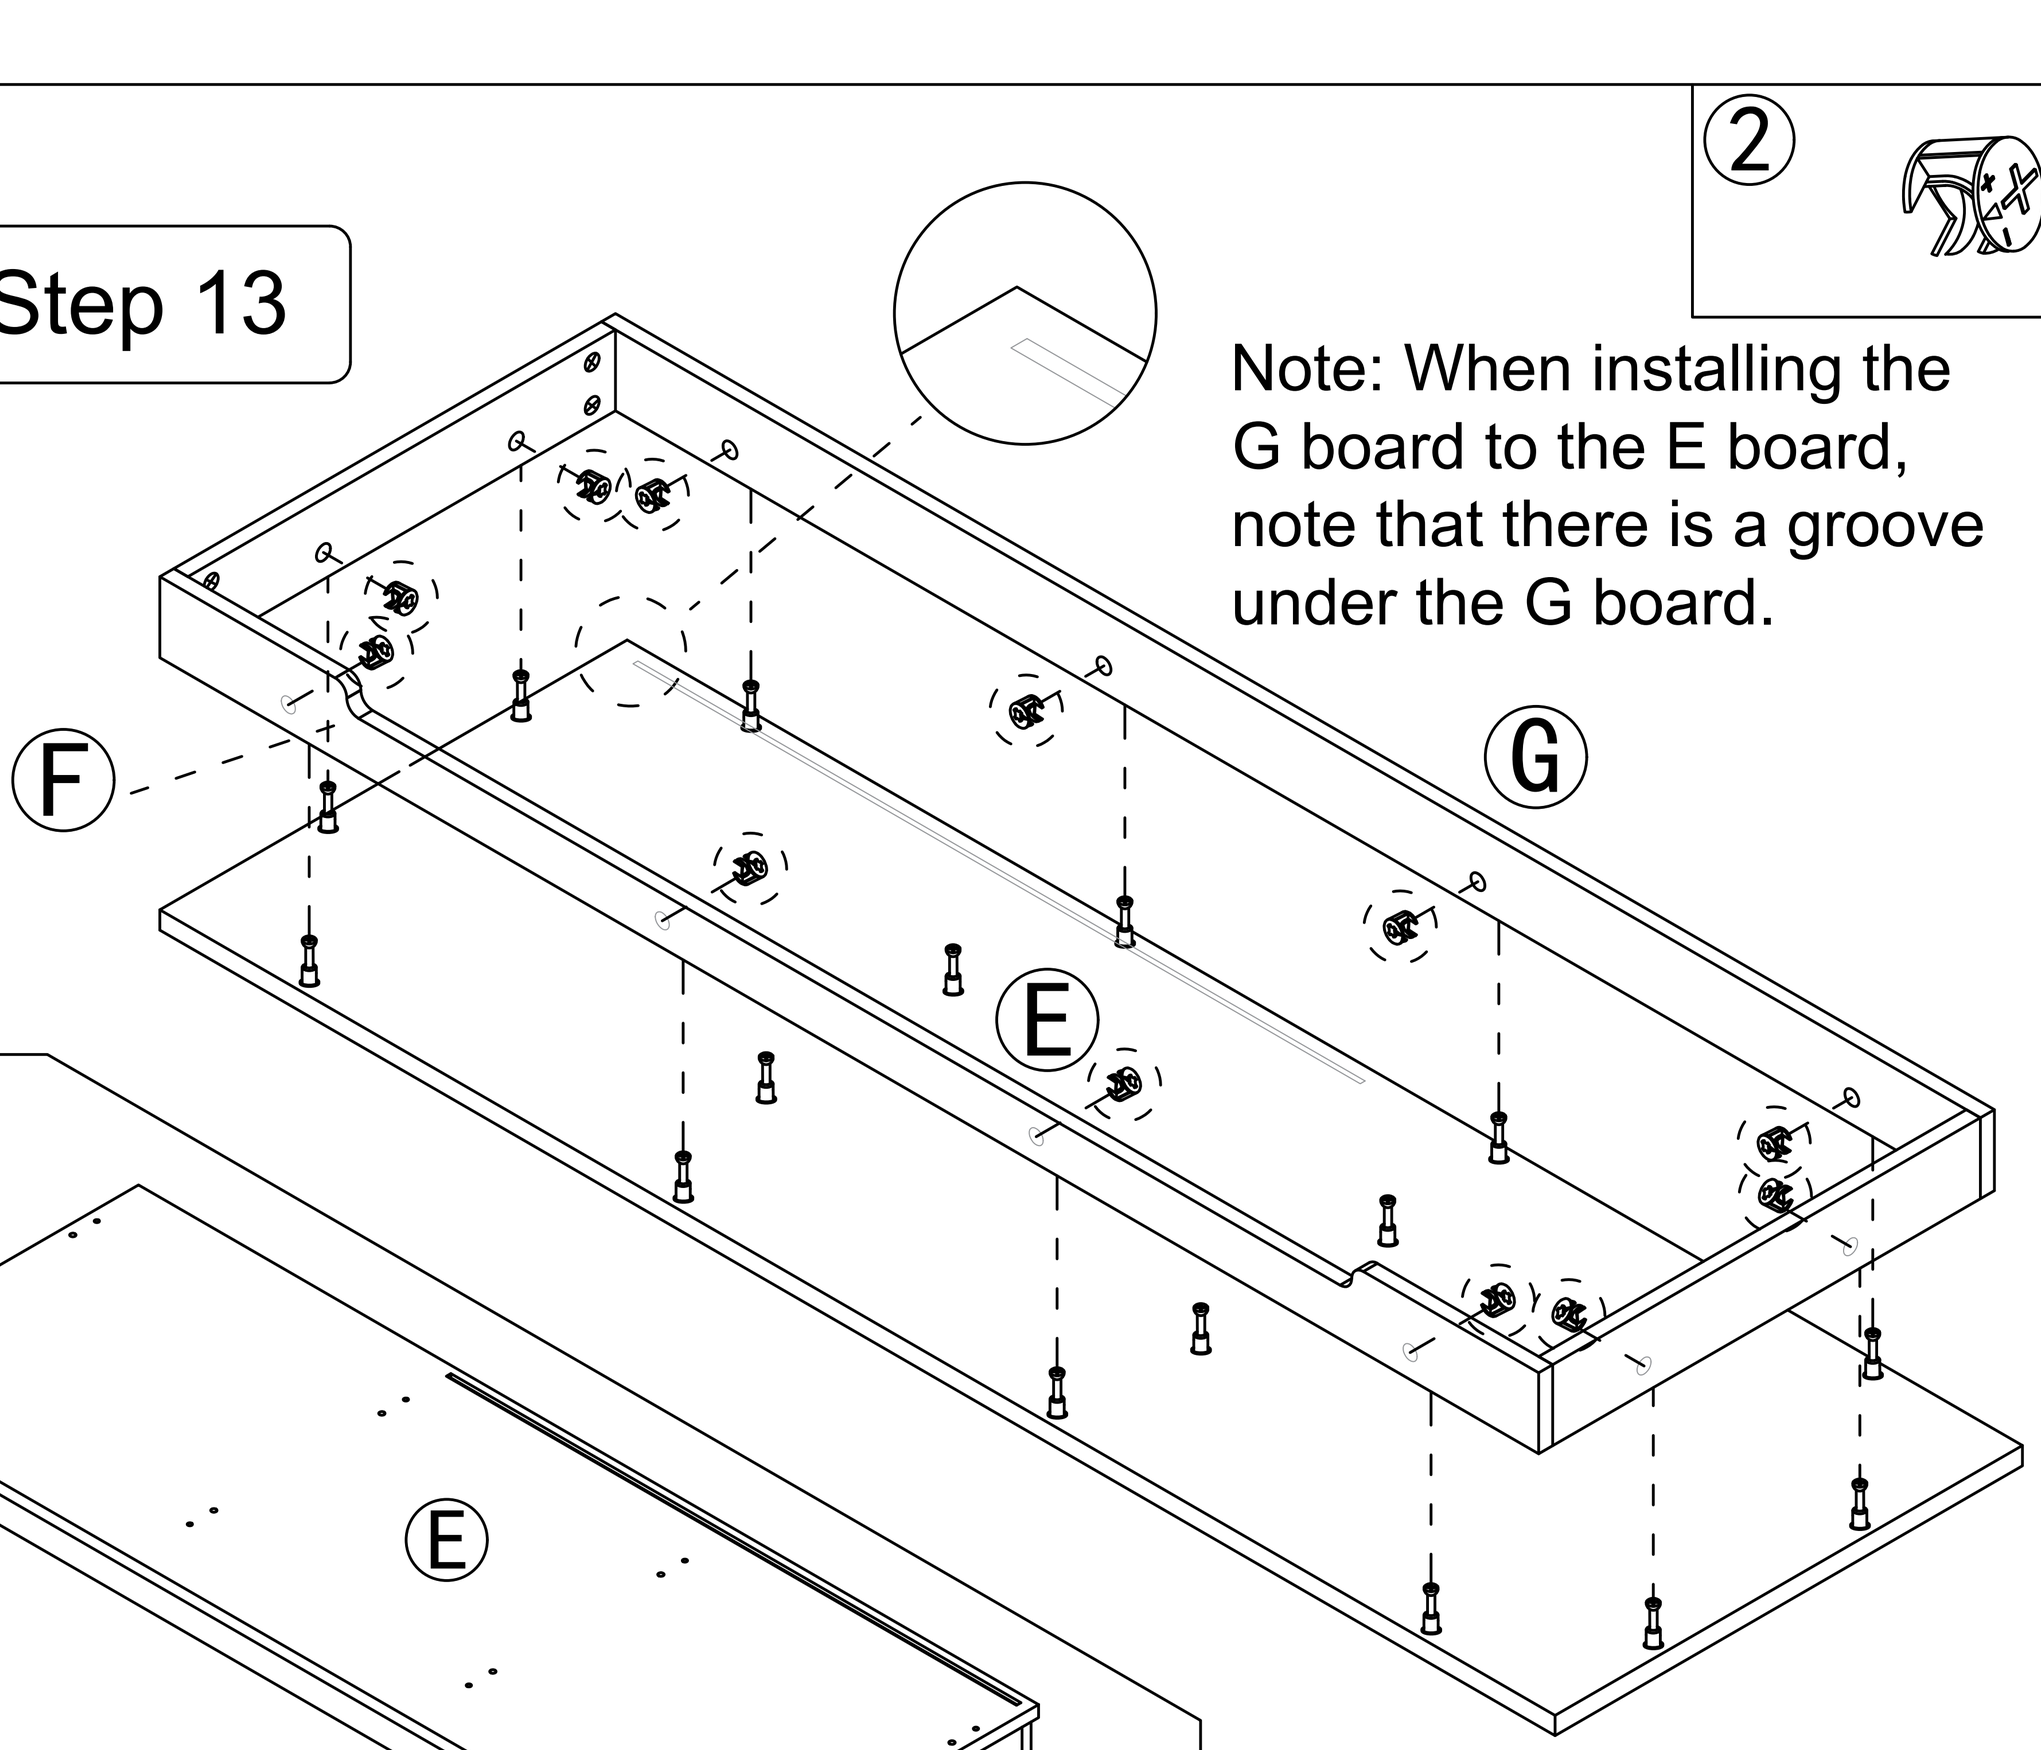


Note: When installing the G board to the E board, note that there is a groove under the G board.


Schematic diagram of installation completion

Step 14

2

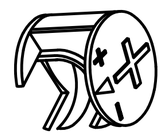


x4

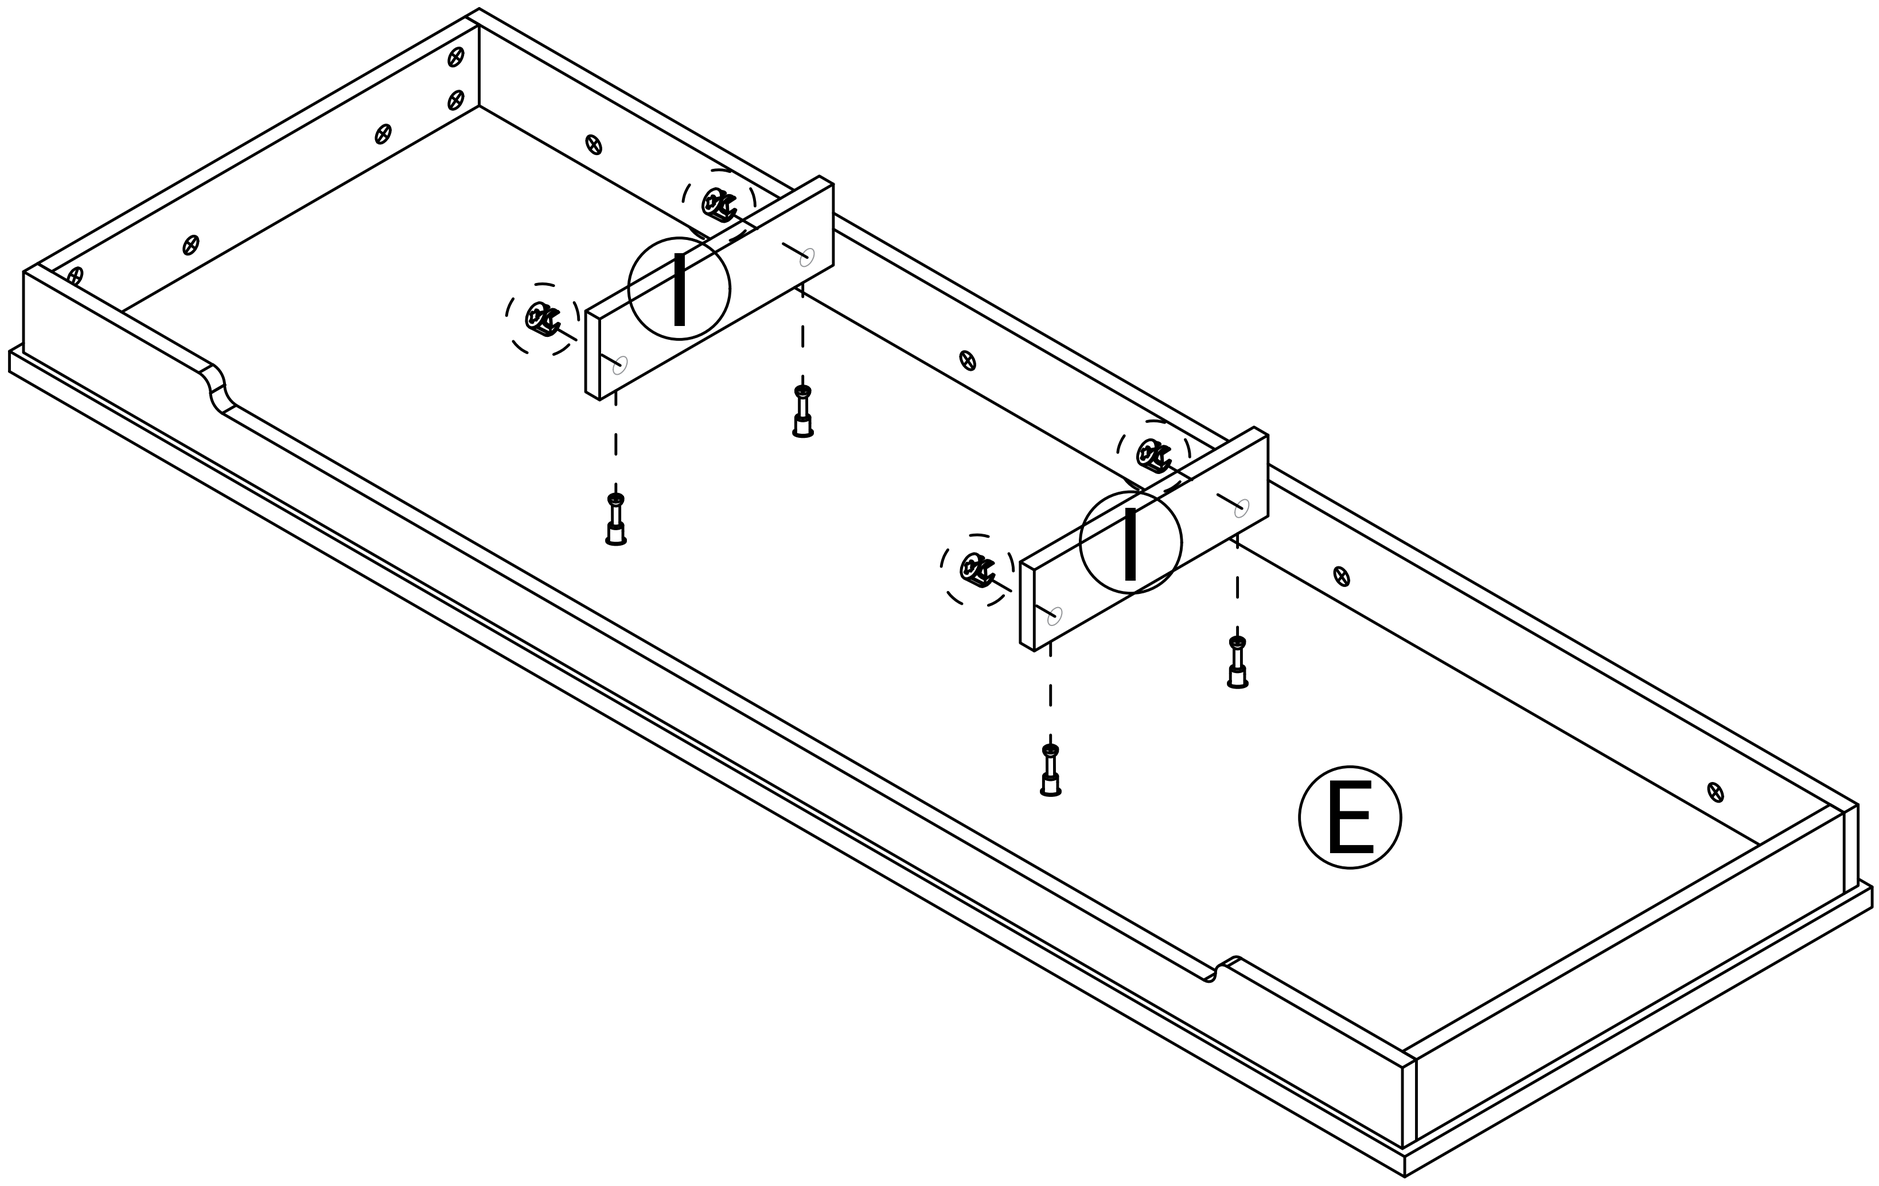


Step 15

6

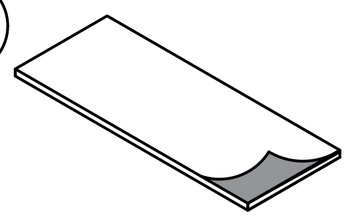



x10

Tear off release paper and stick the black foot pad on the board

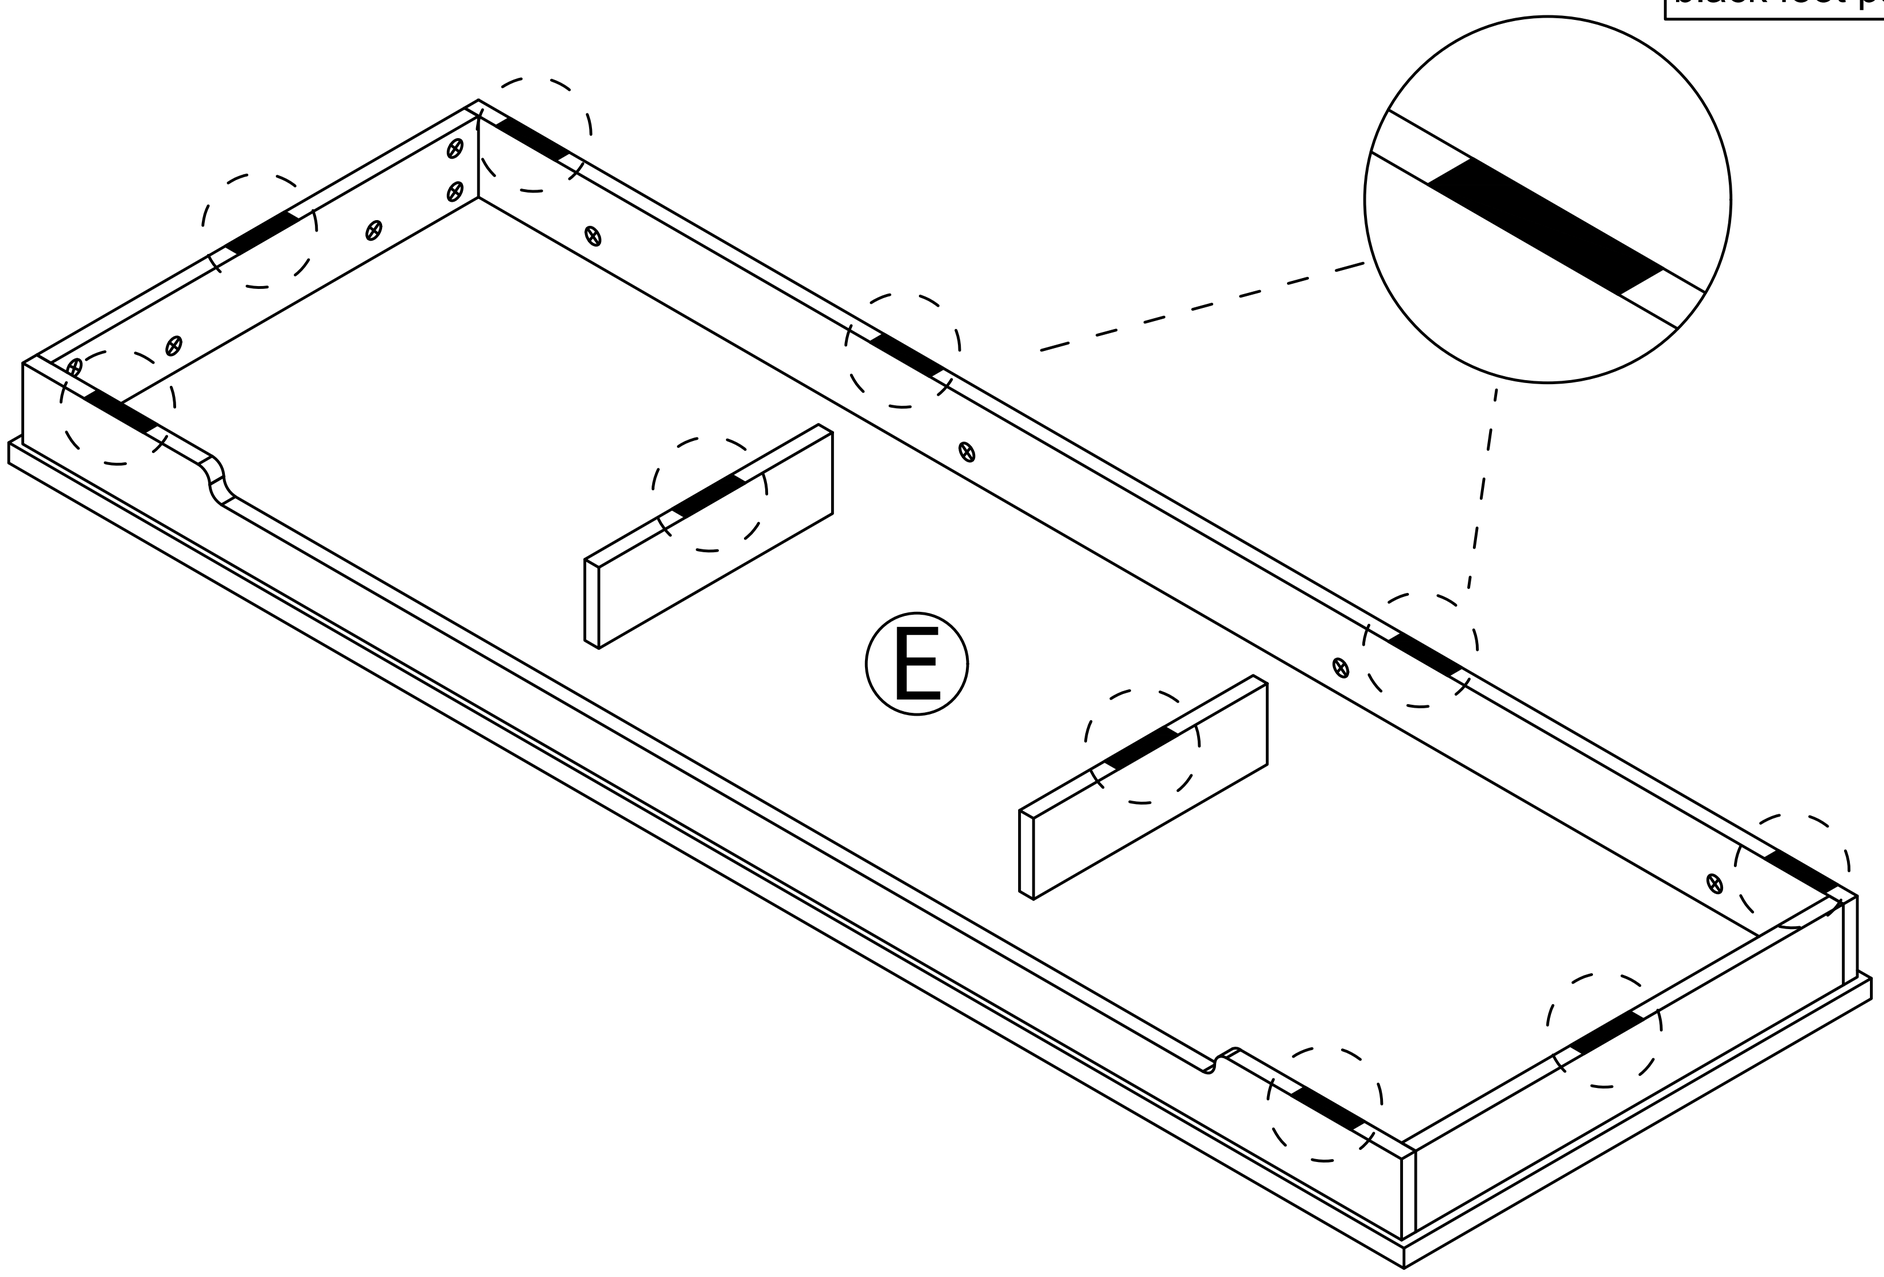



Step 16

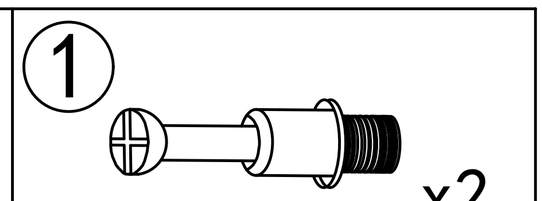

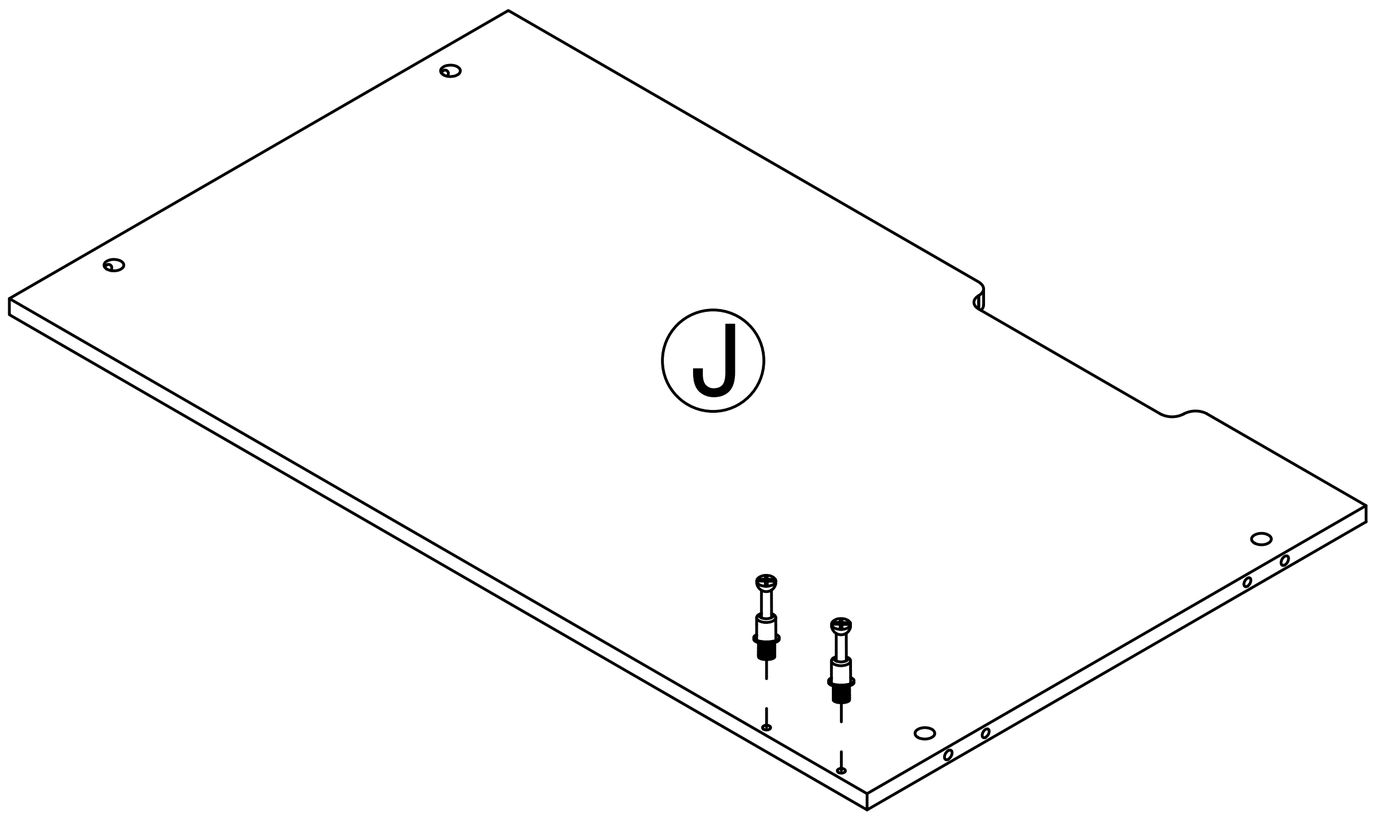



Step 17

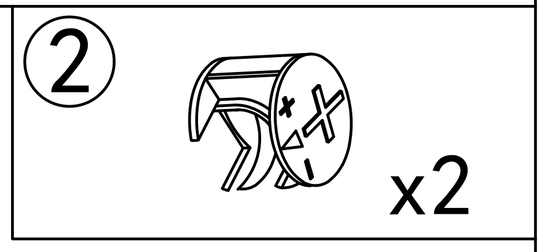


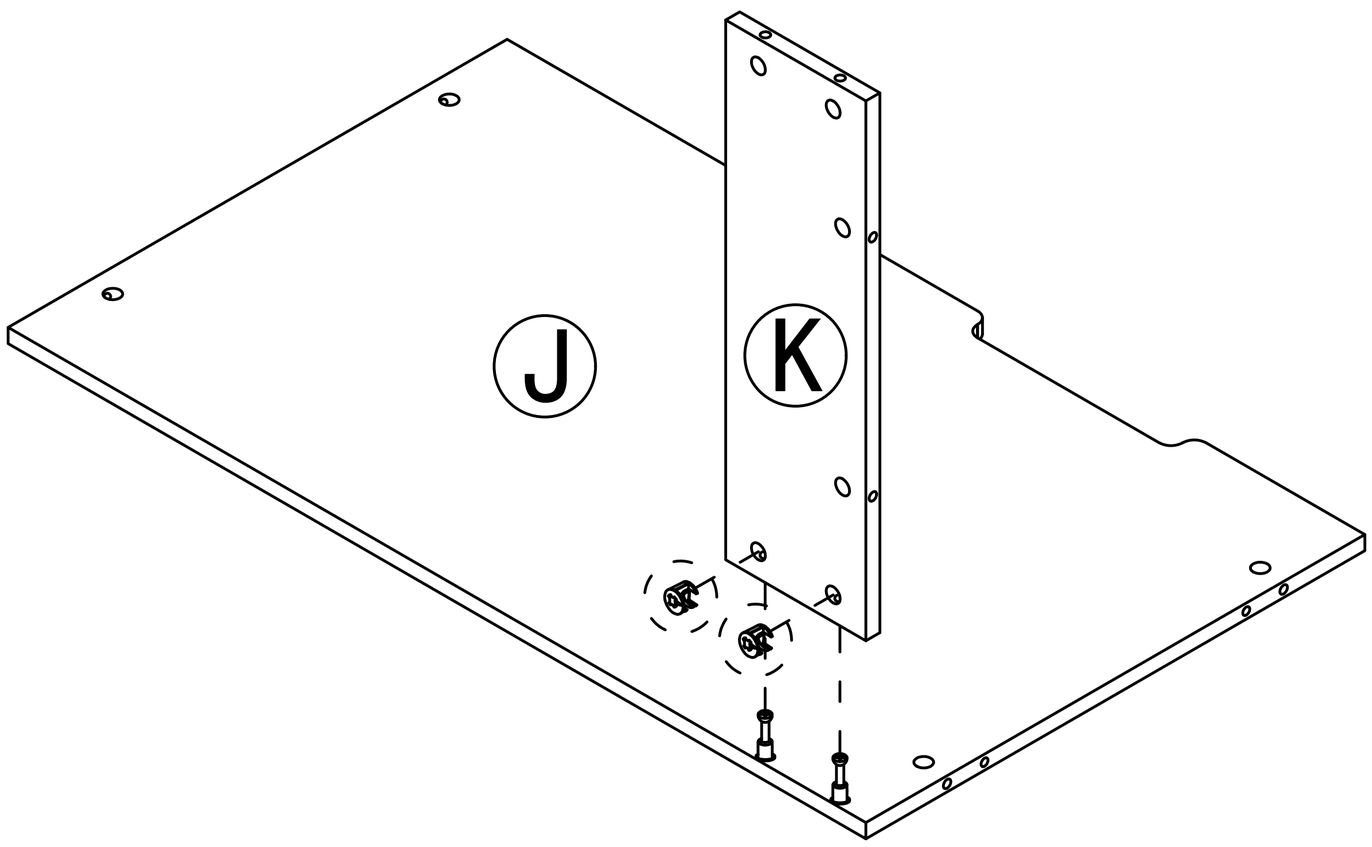


Step 18

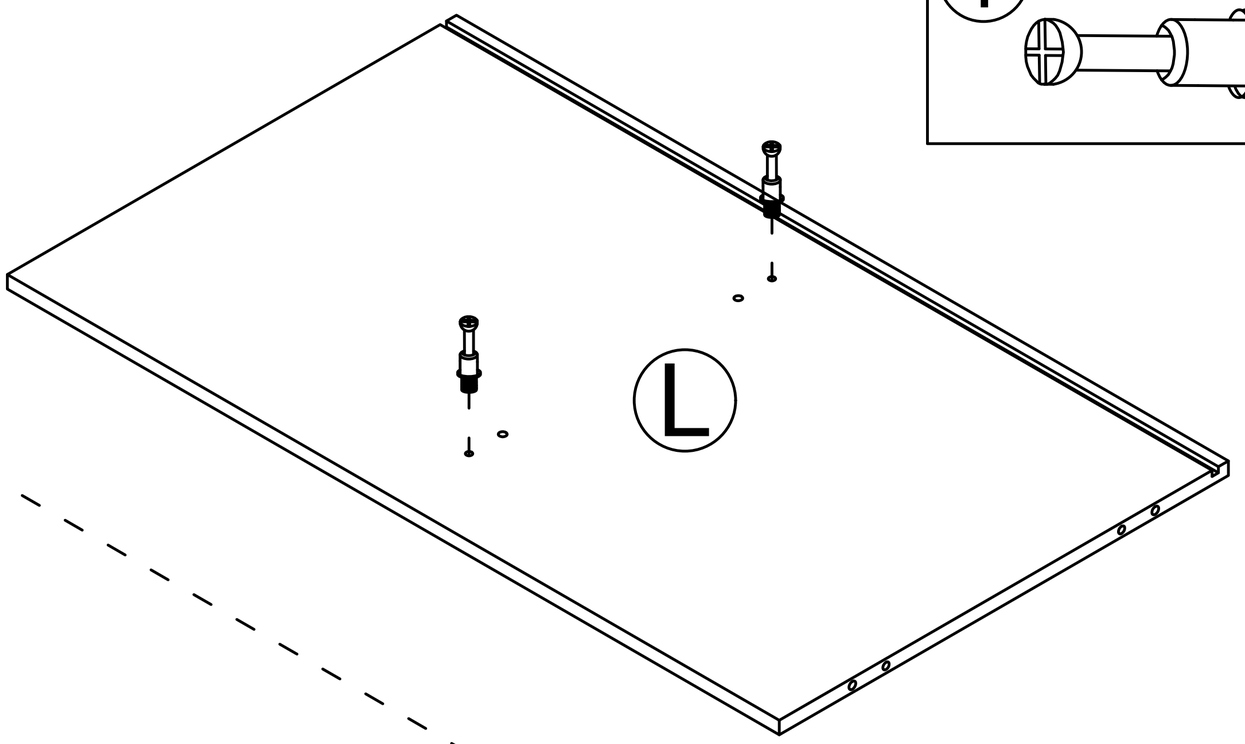

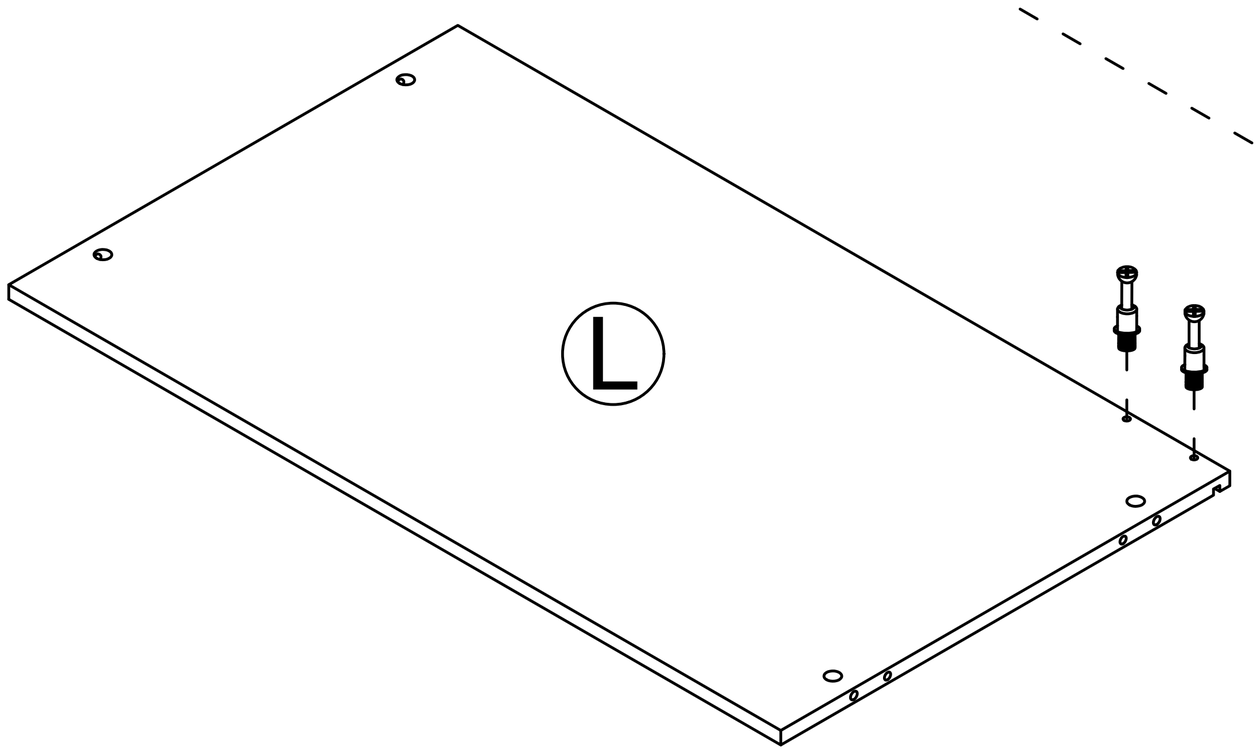

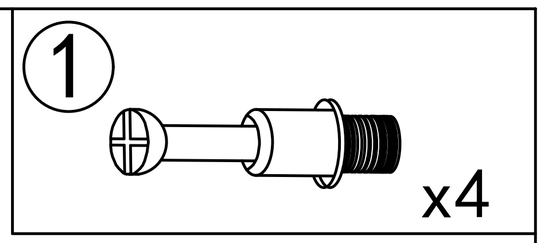


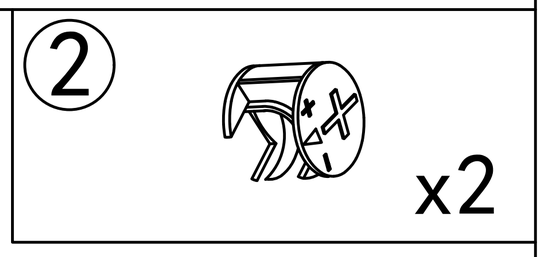


Step 19

first


second

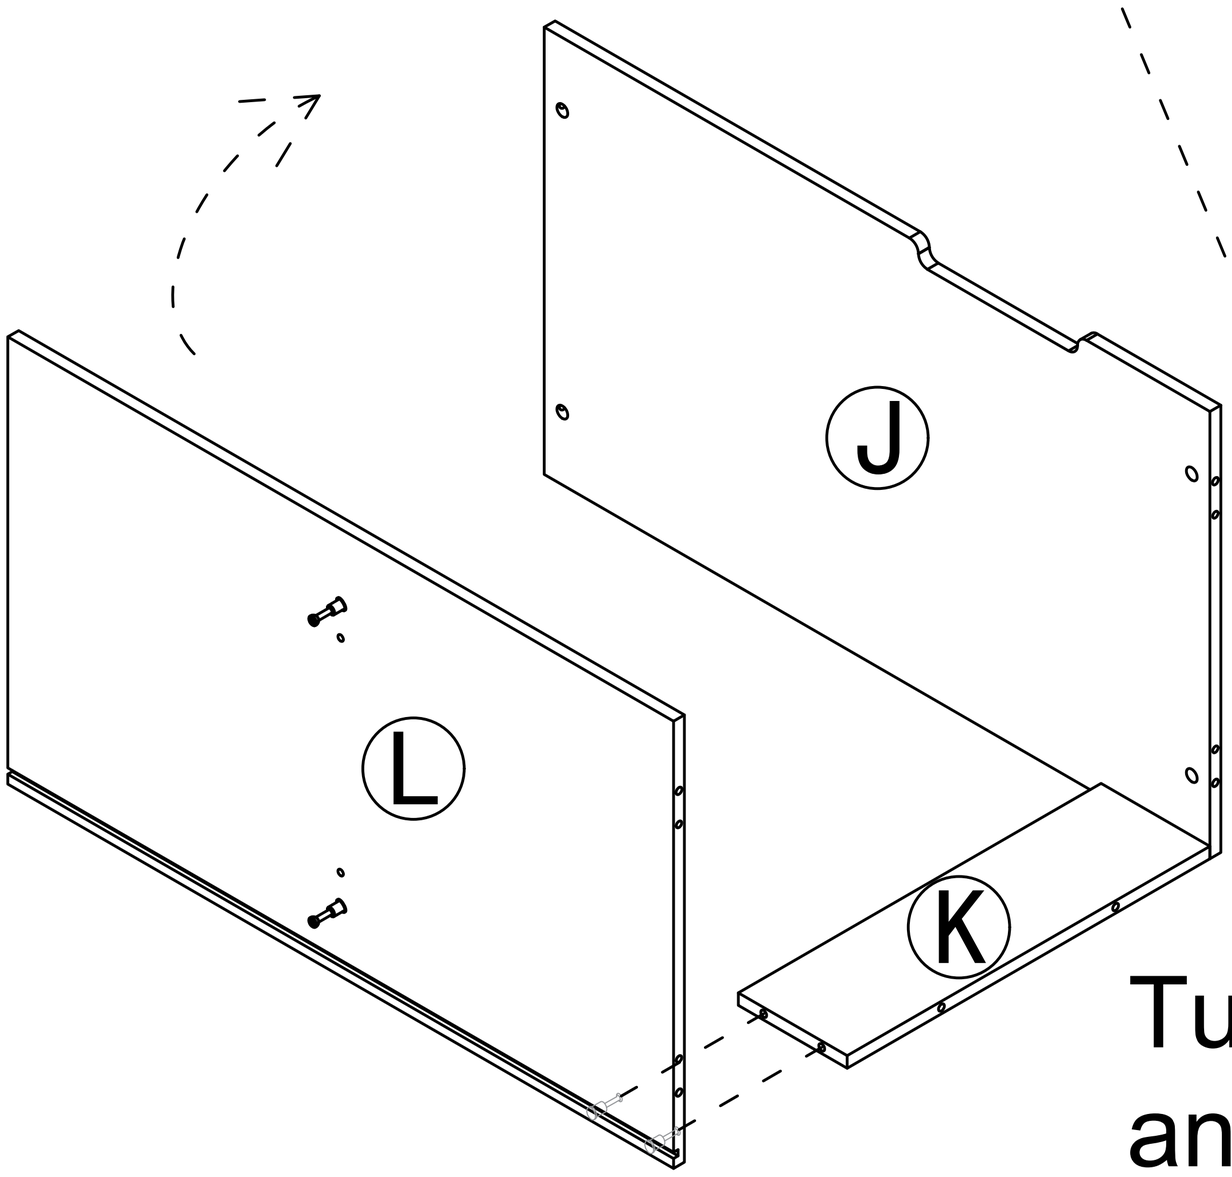


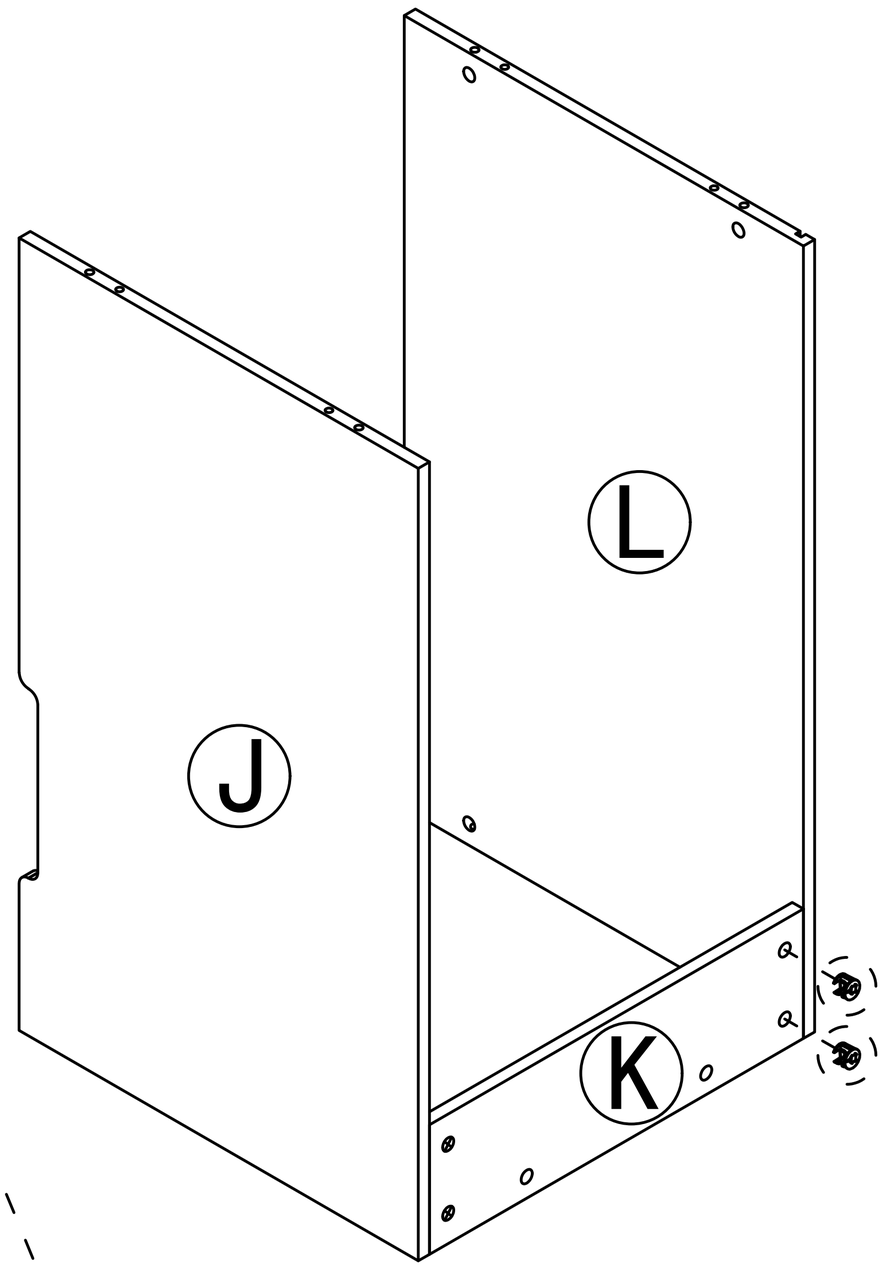

Turn the cabinet over
and screw on the nut.


Step 20

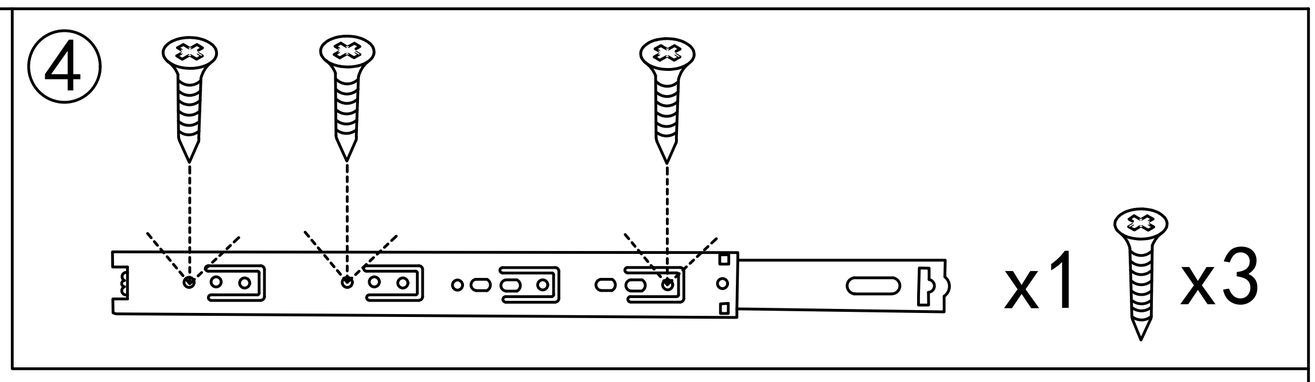


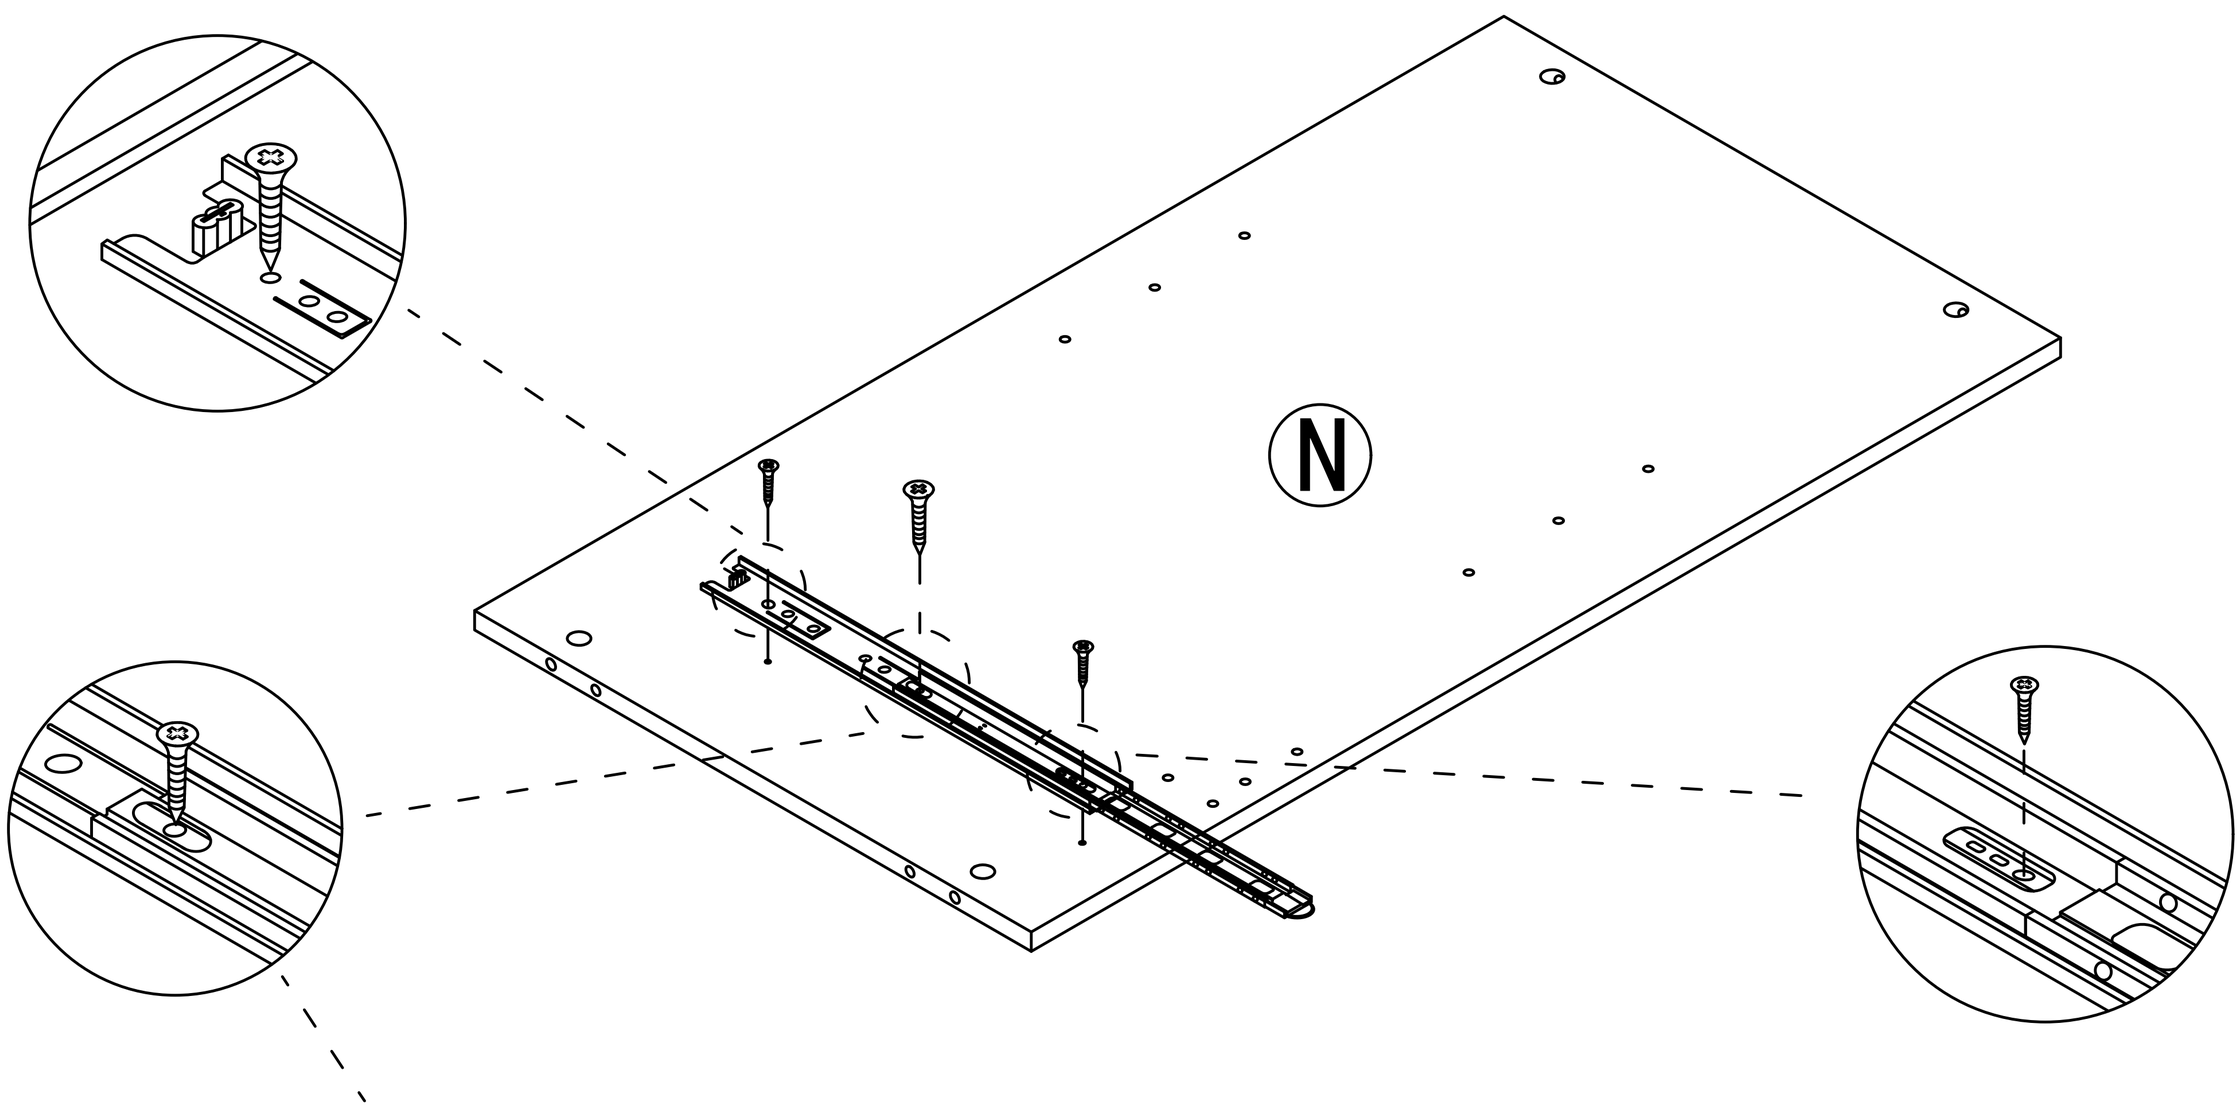


This hole is for strengthening fixed hole customers can choose to install according to their needs.


Step 21

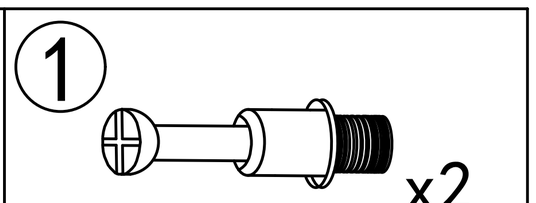

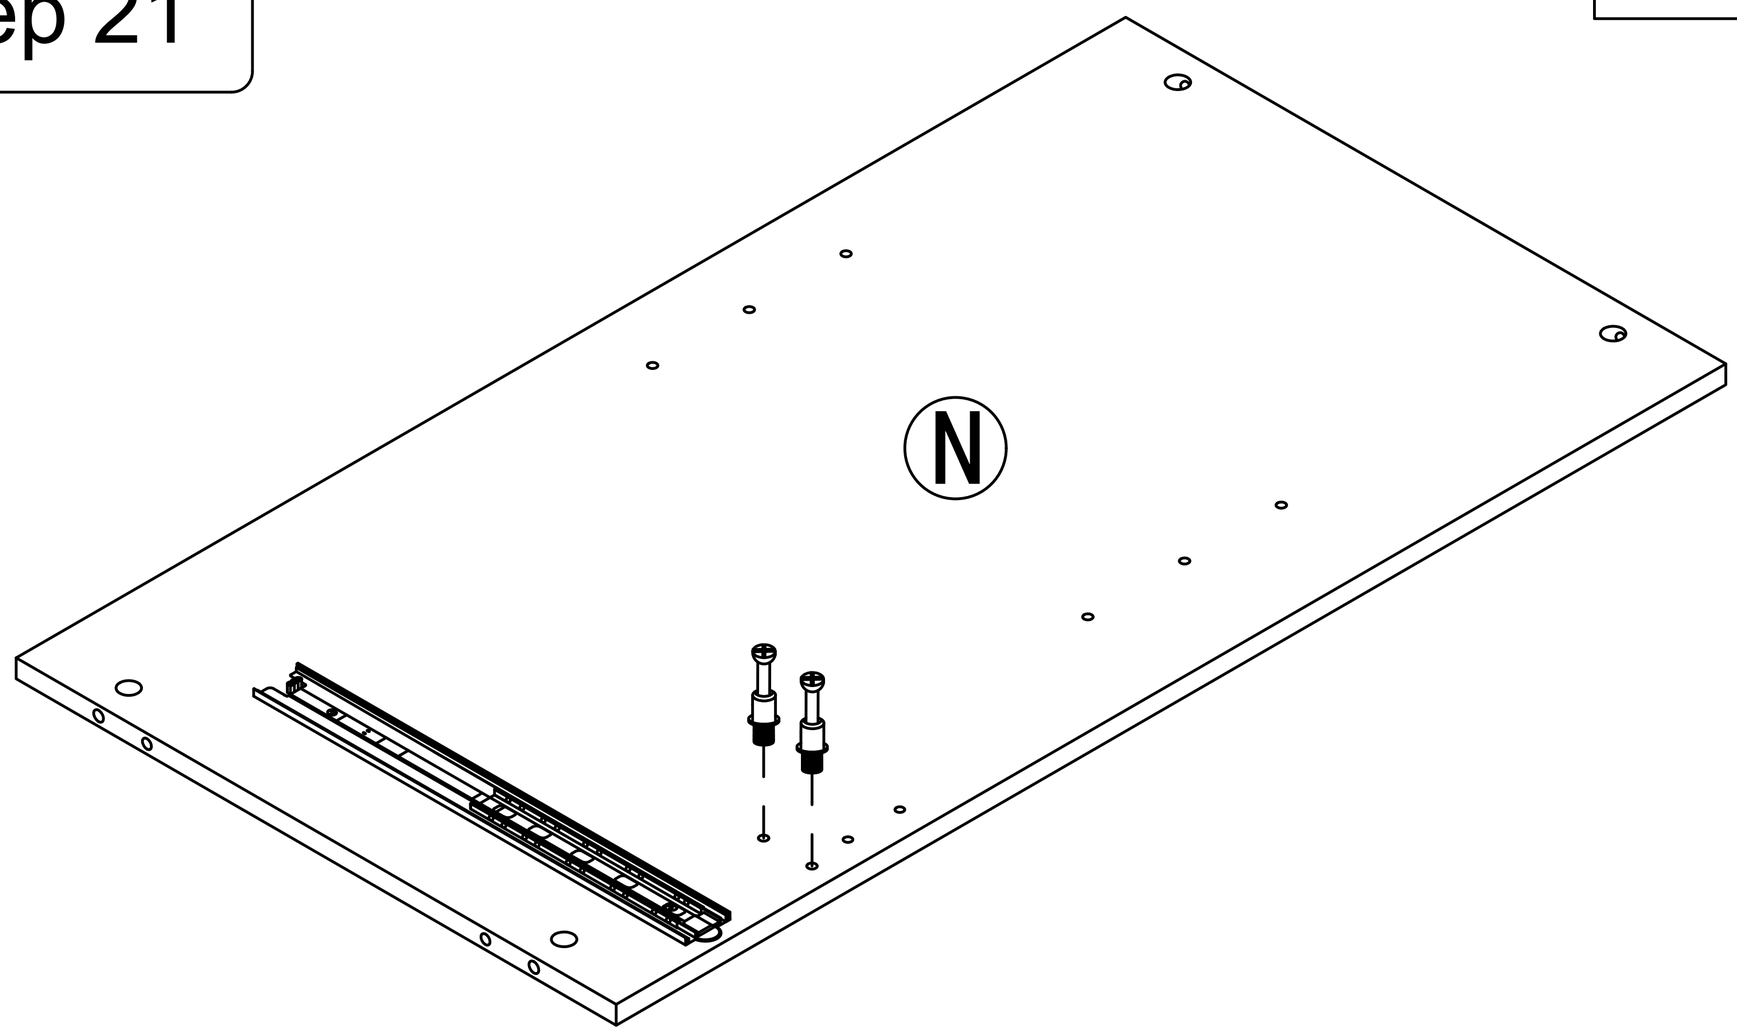



Step 22

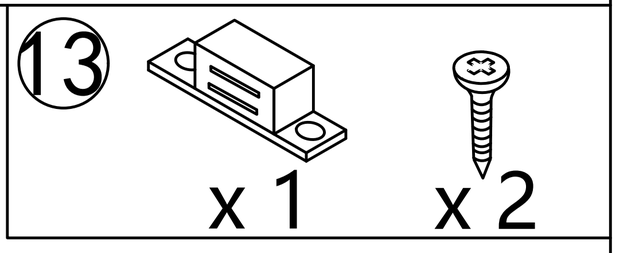

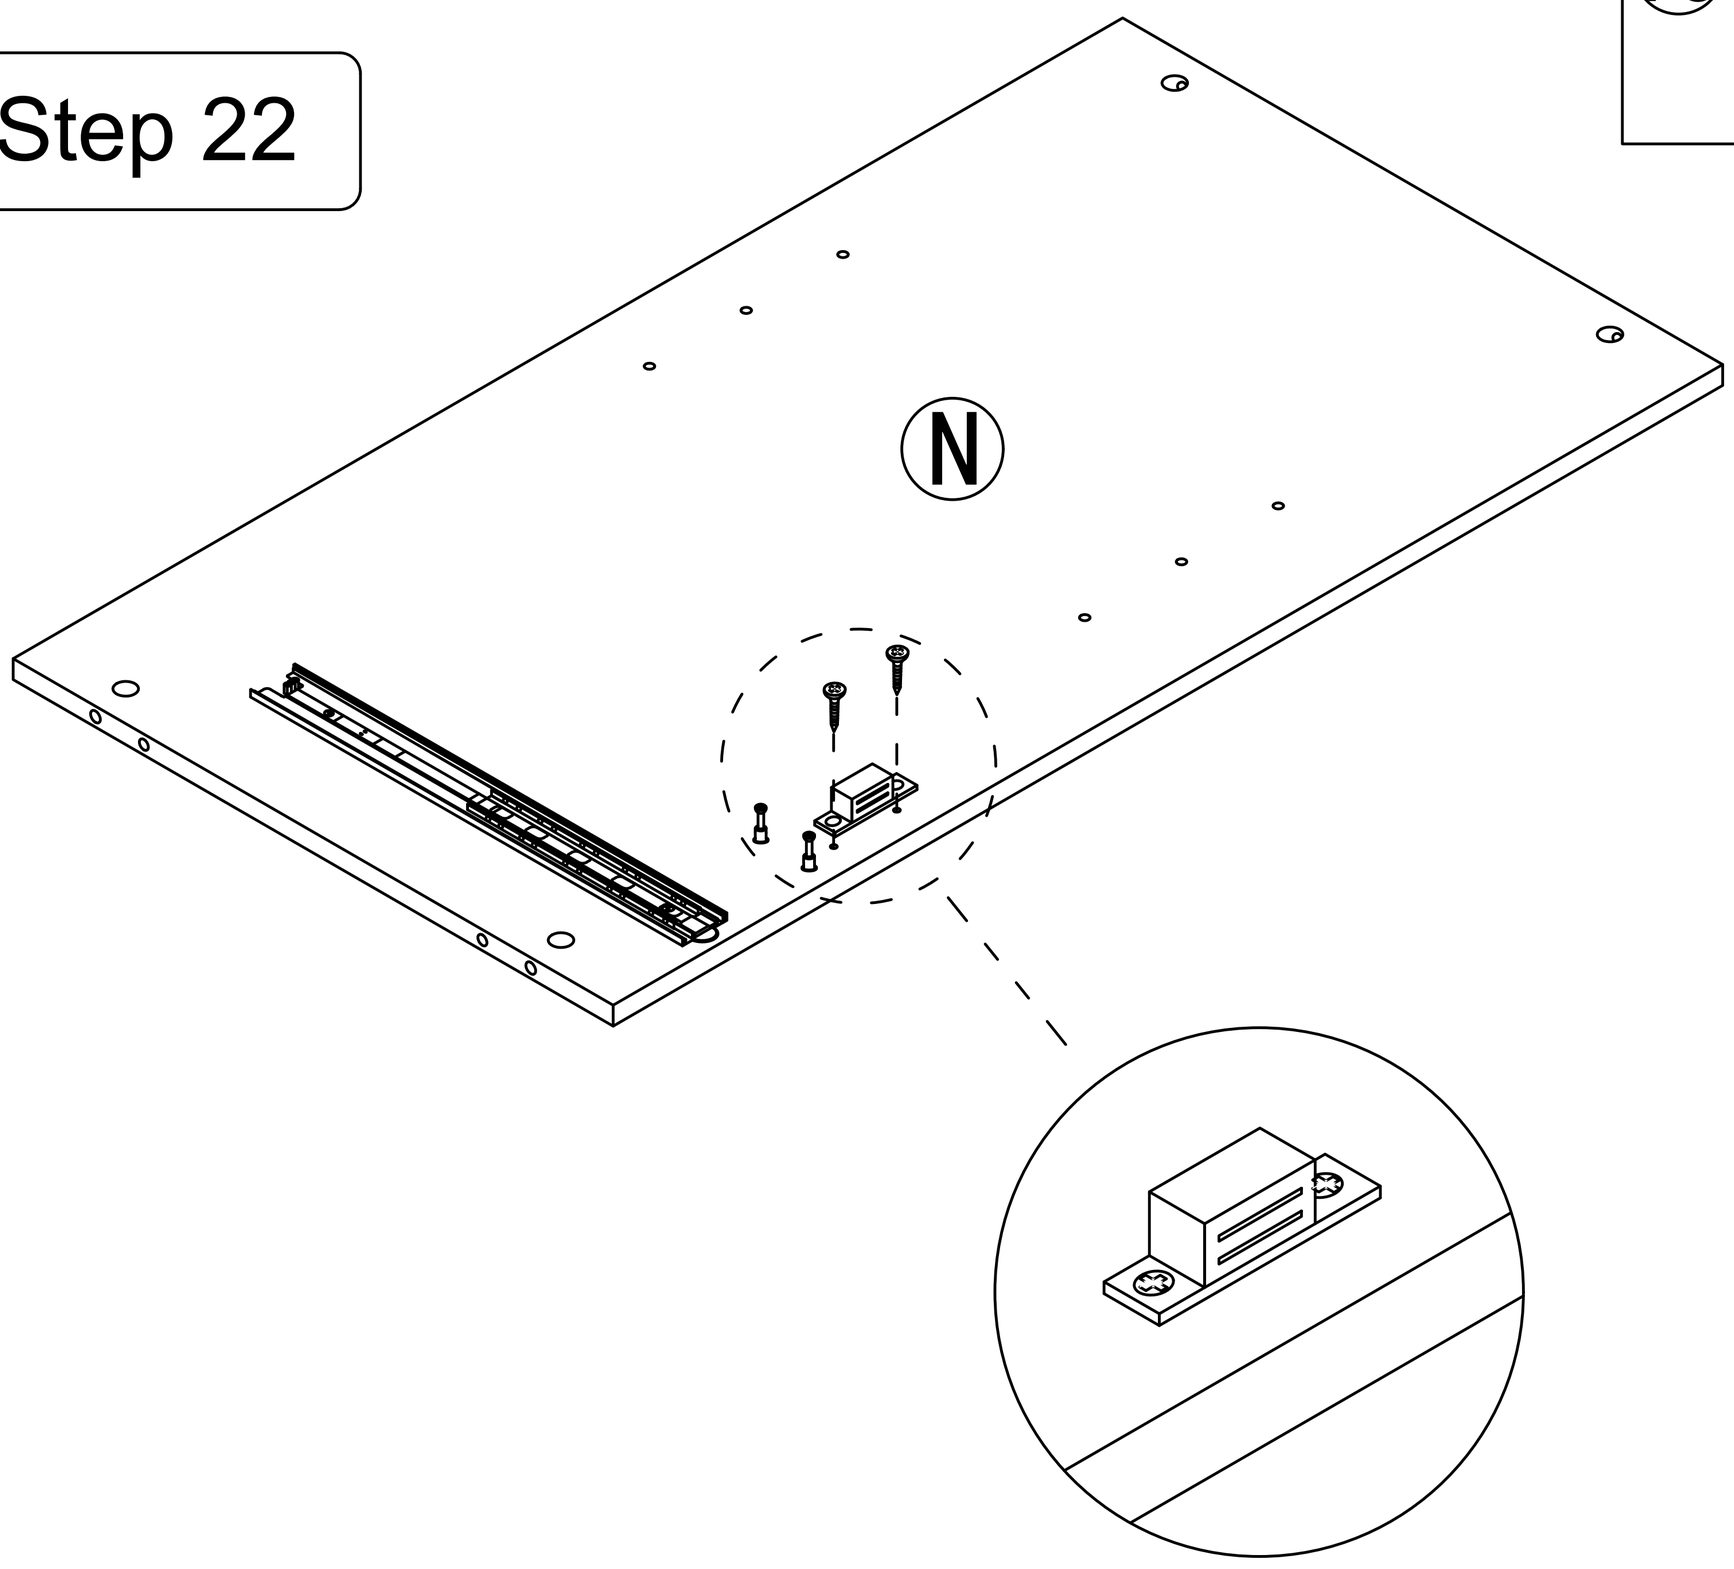



Step 23

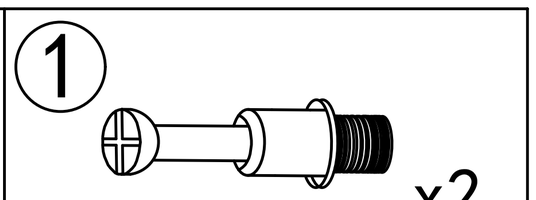

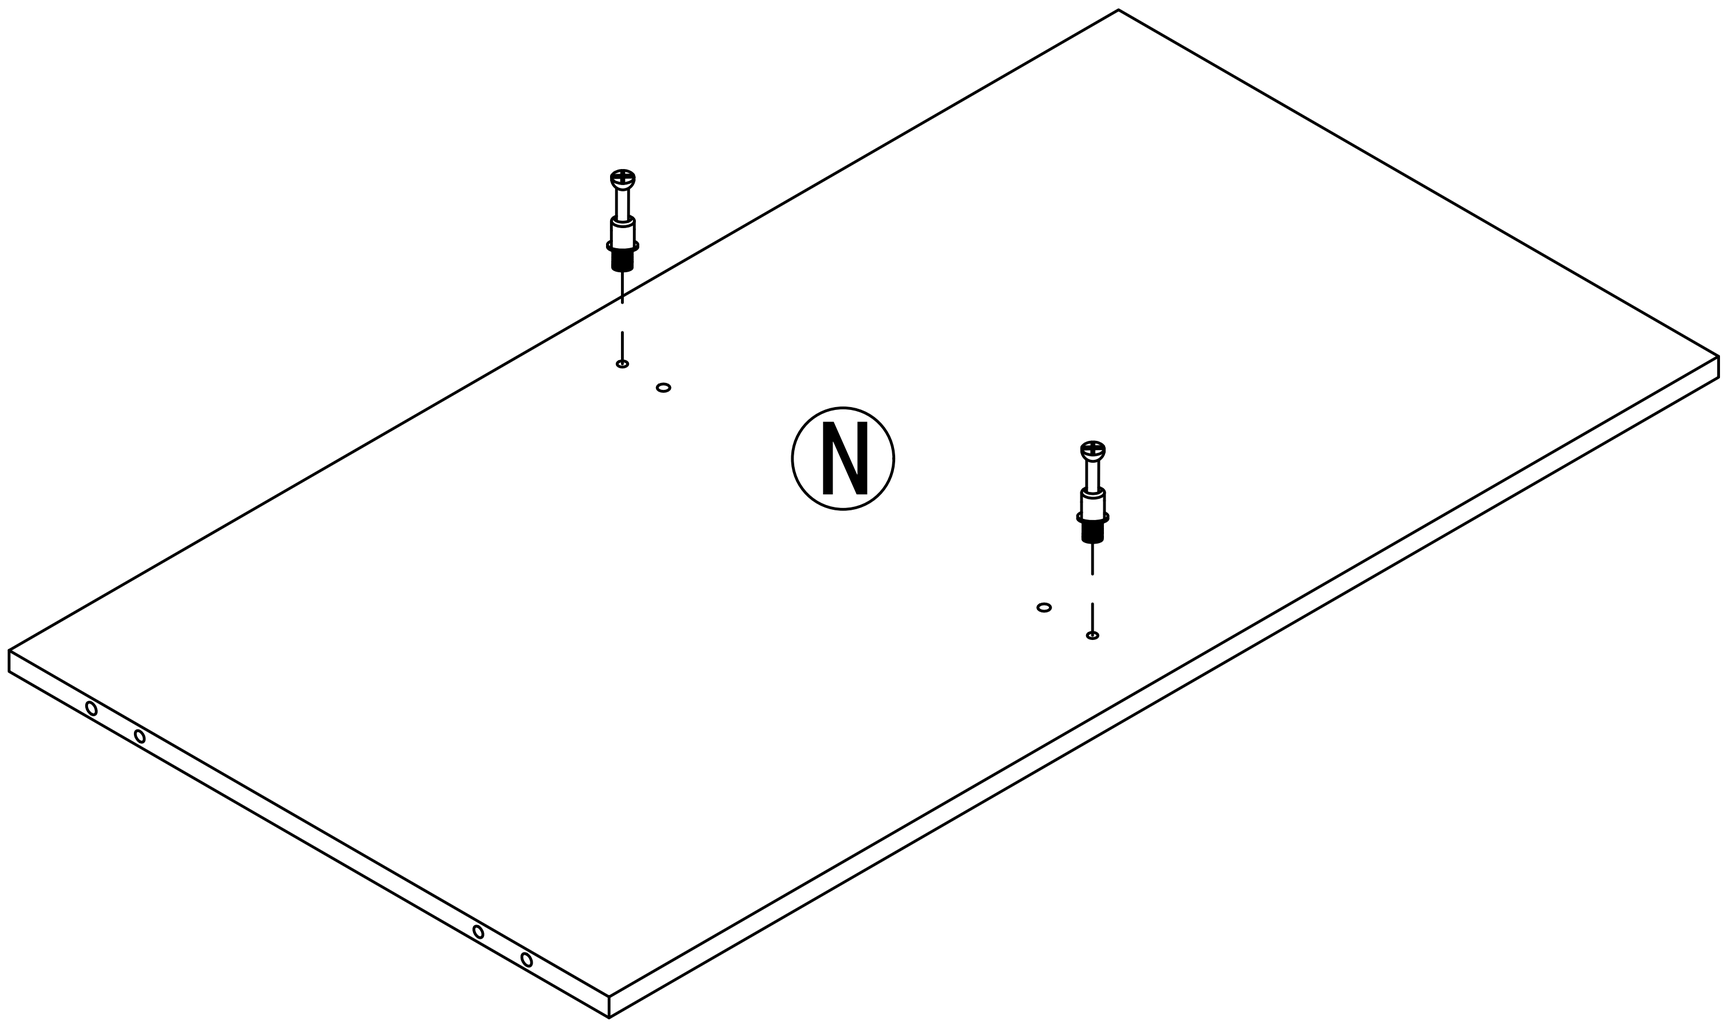



Step 24

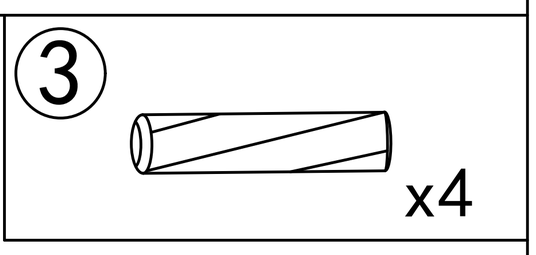

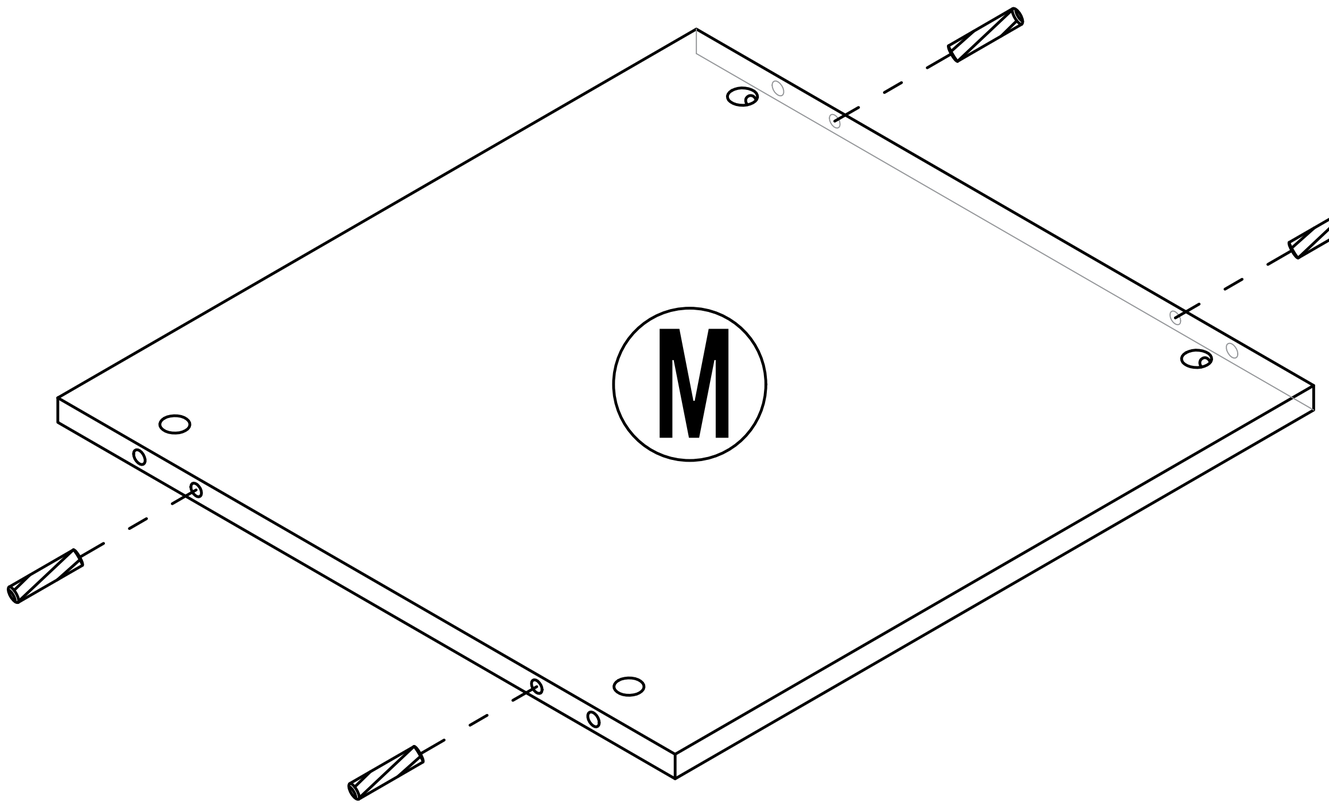


Step 25

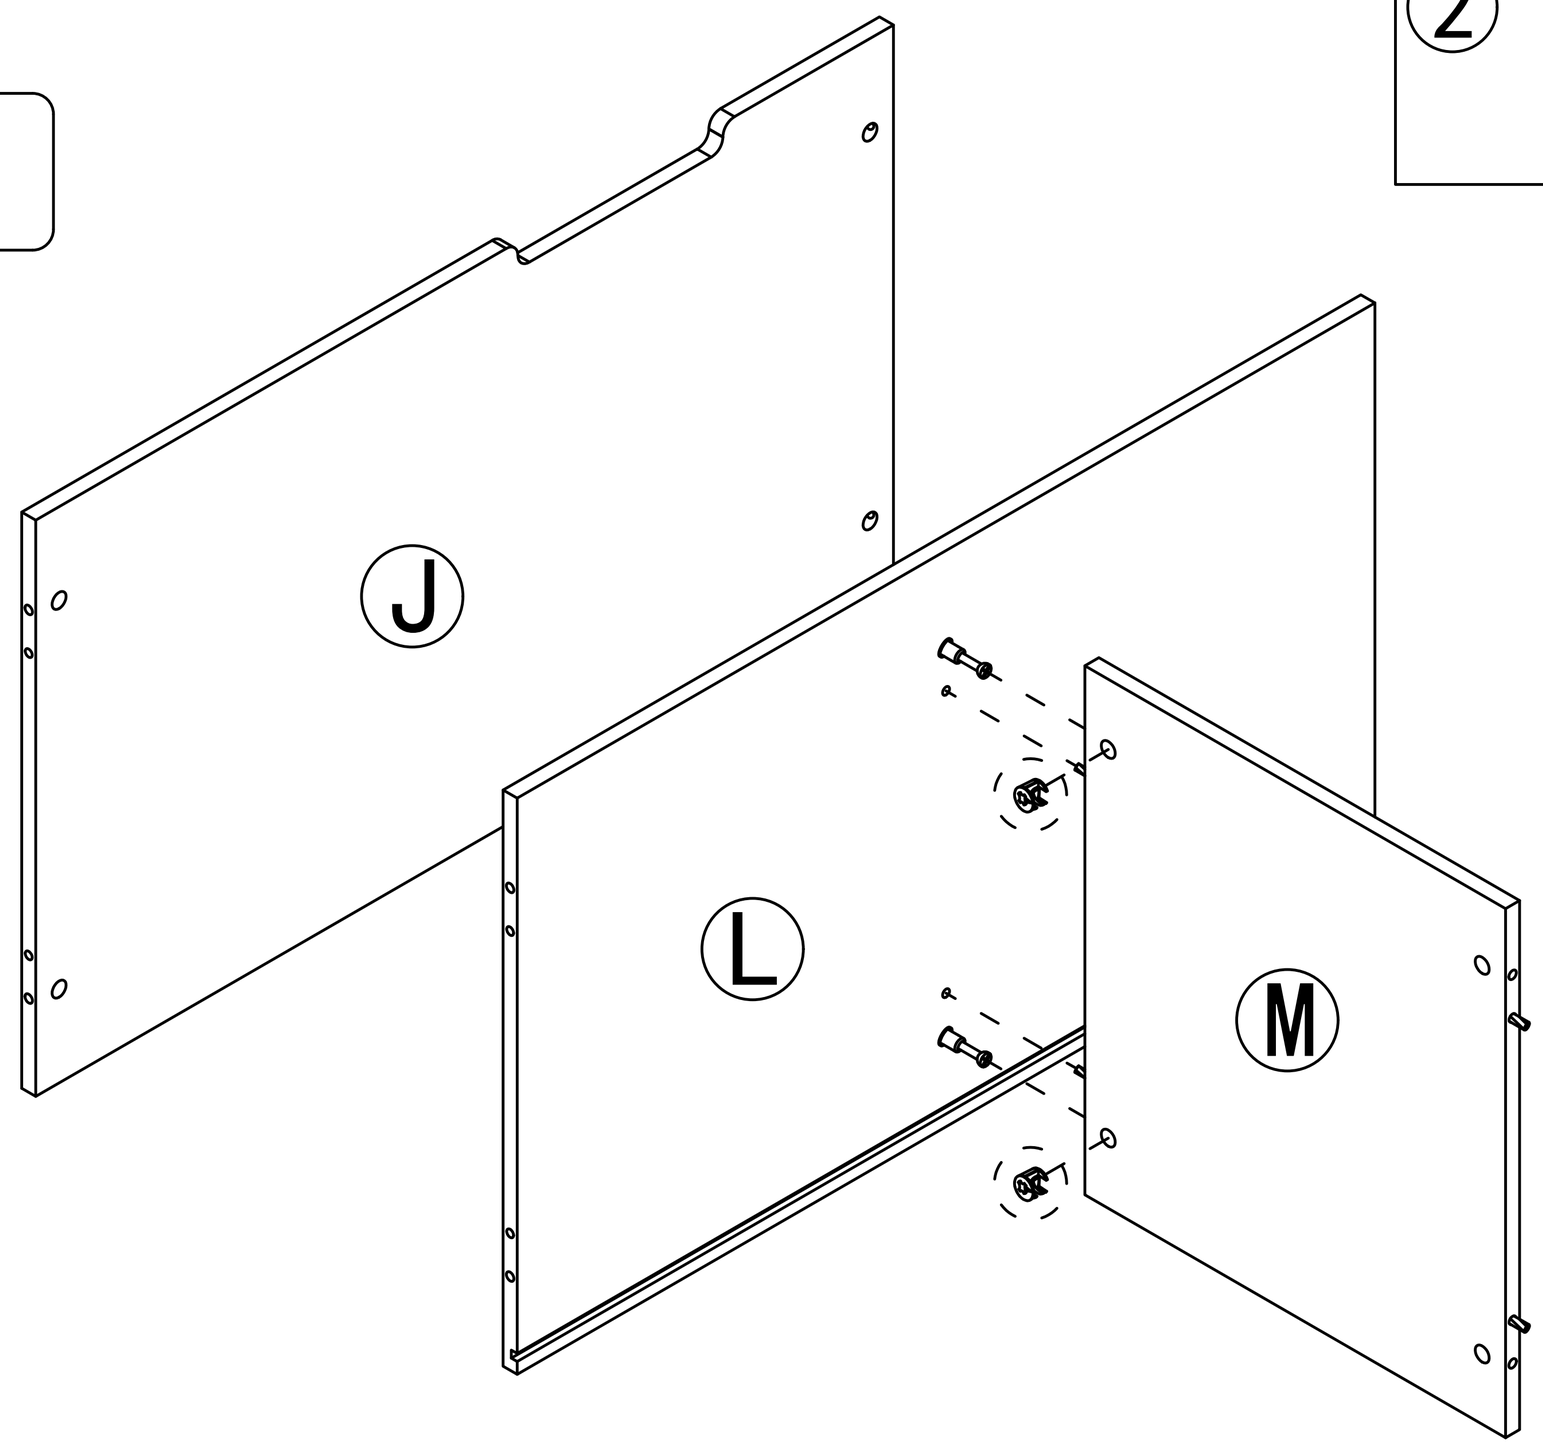

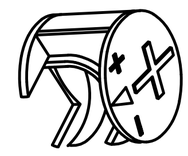
2  x2

Step 26

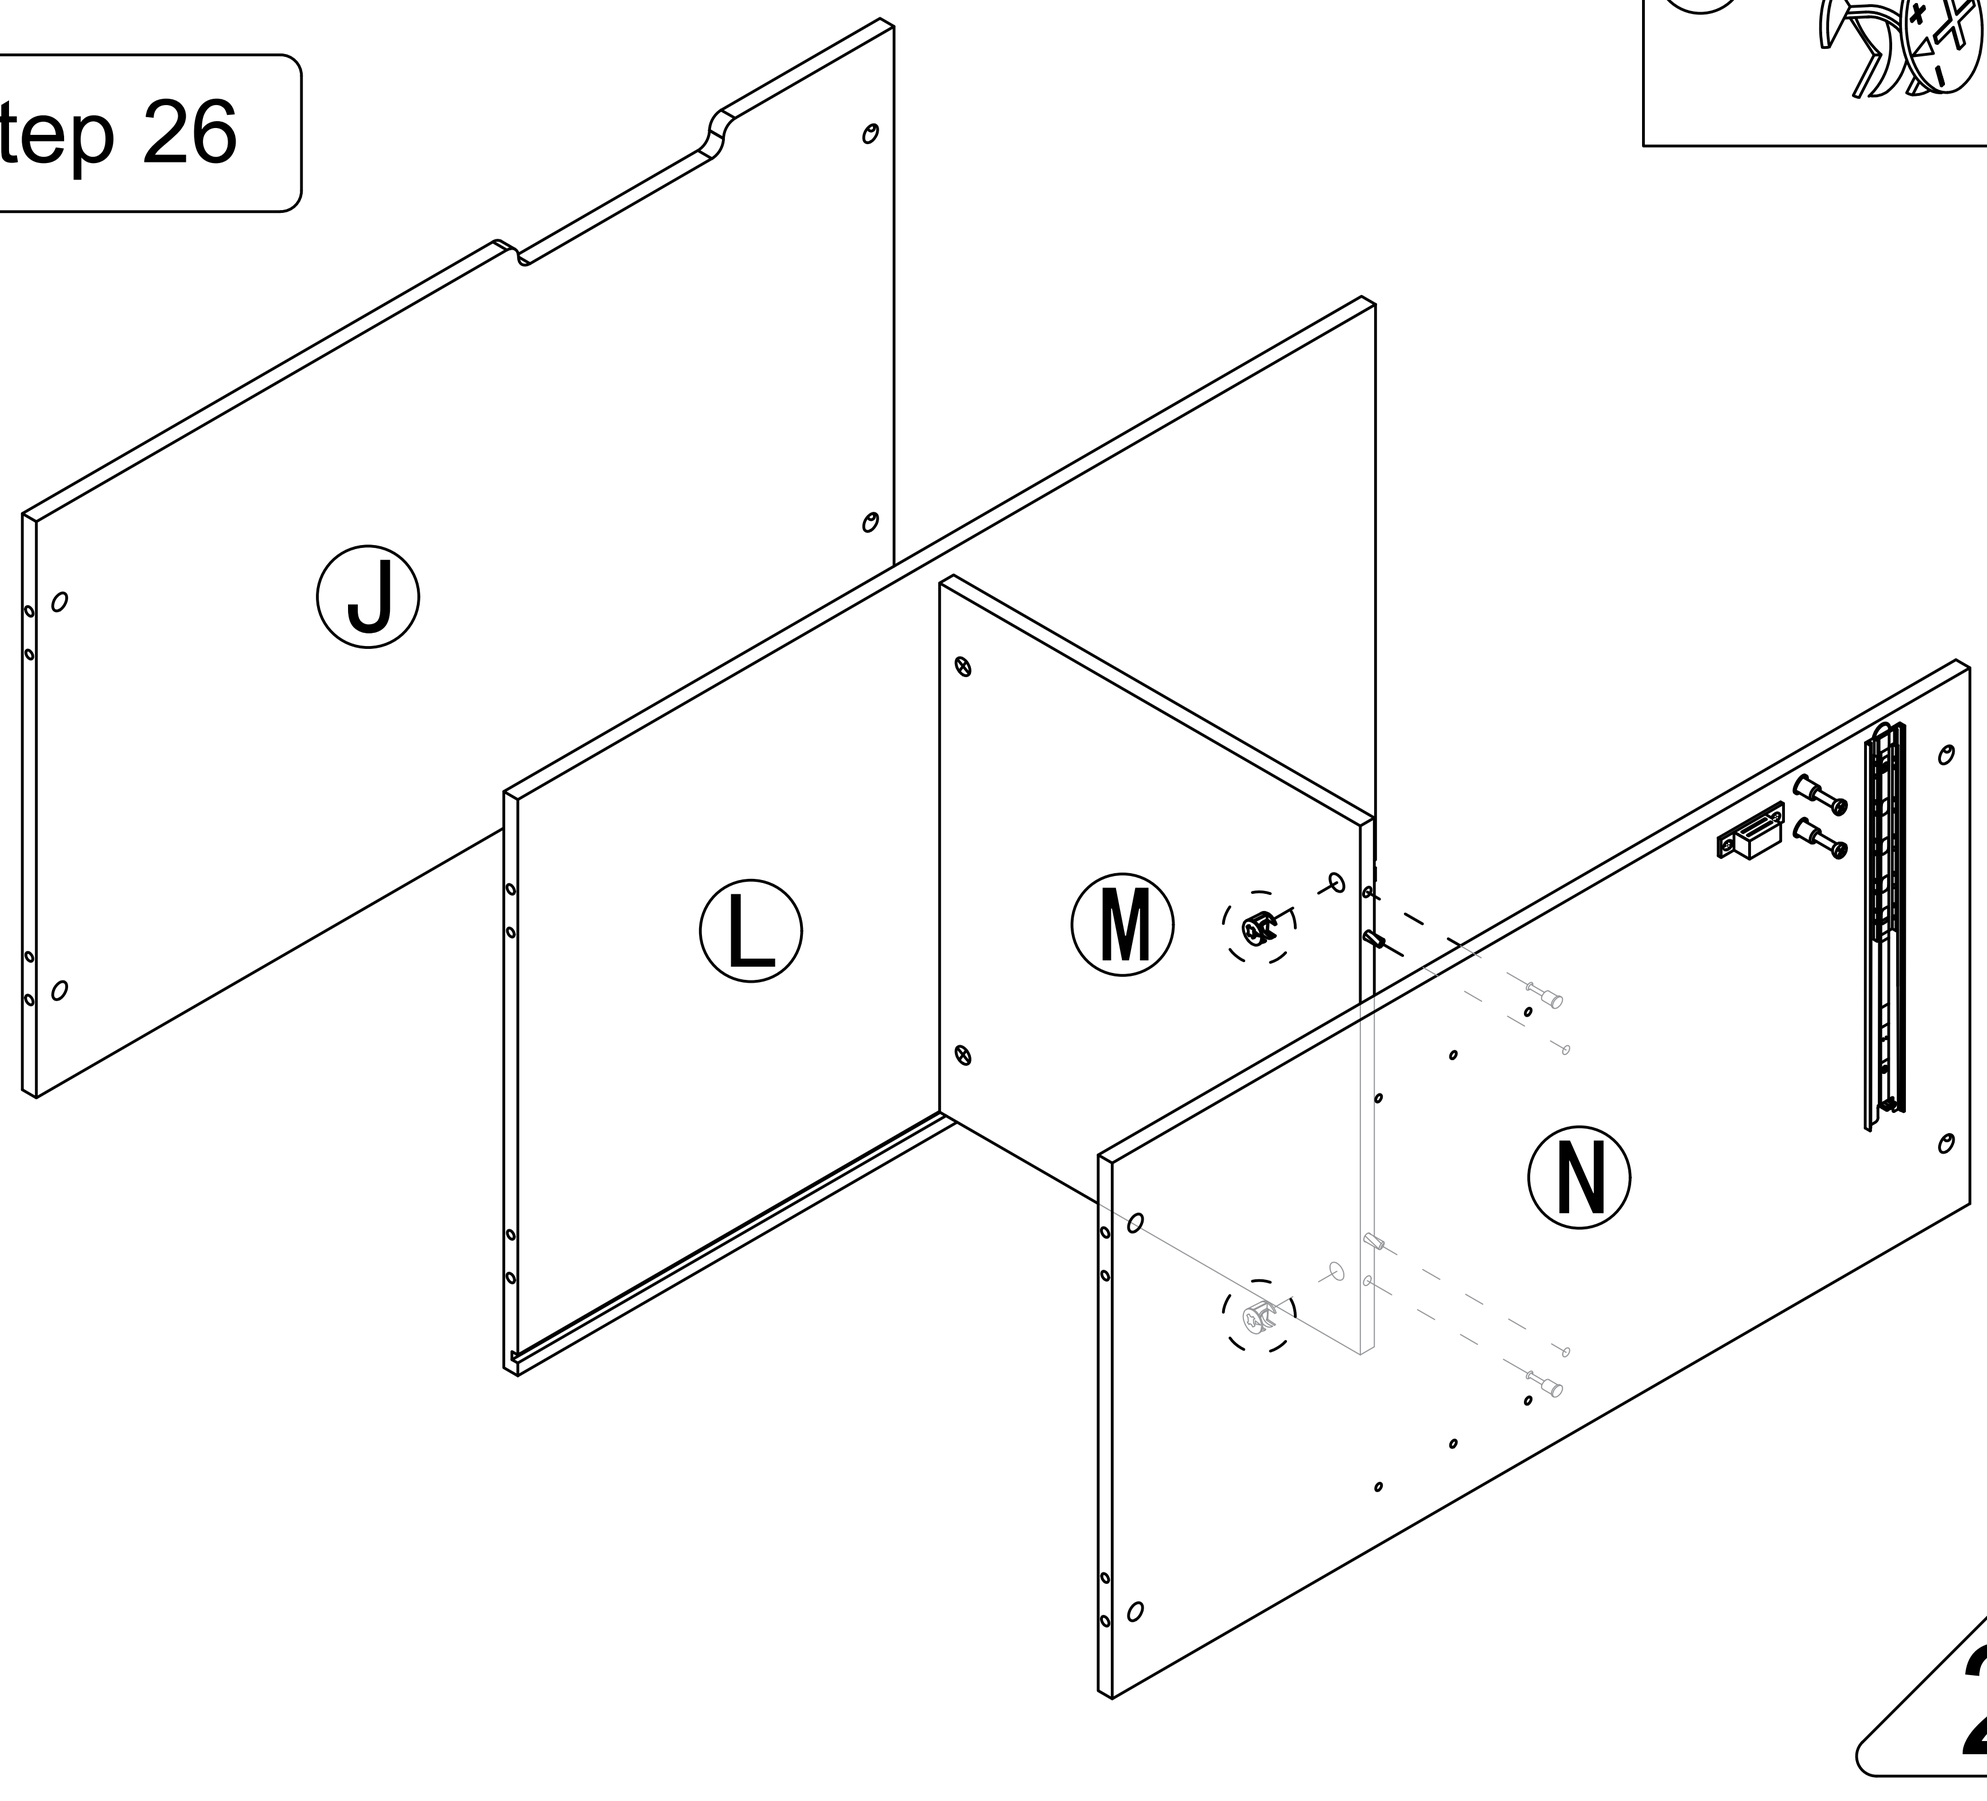


2 x2


Step 27

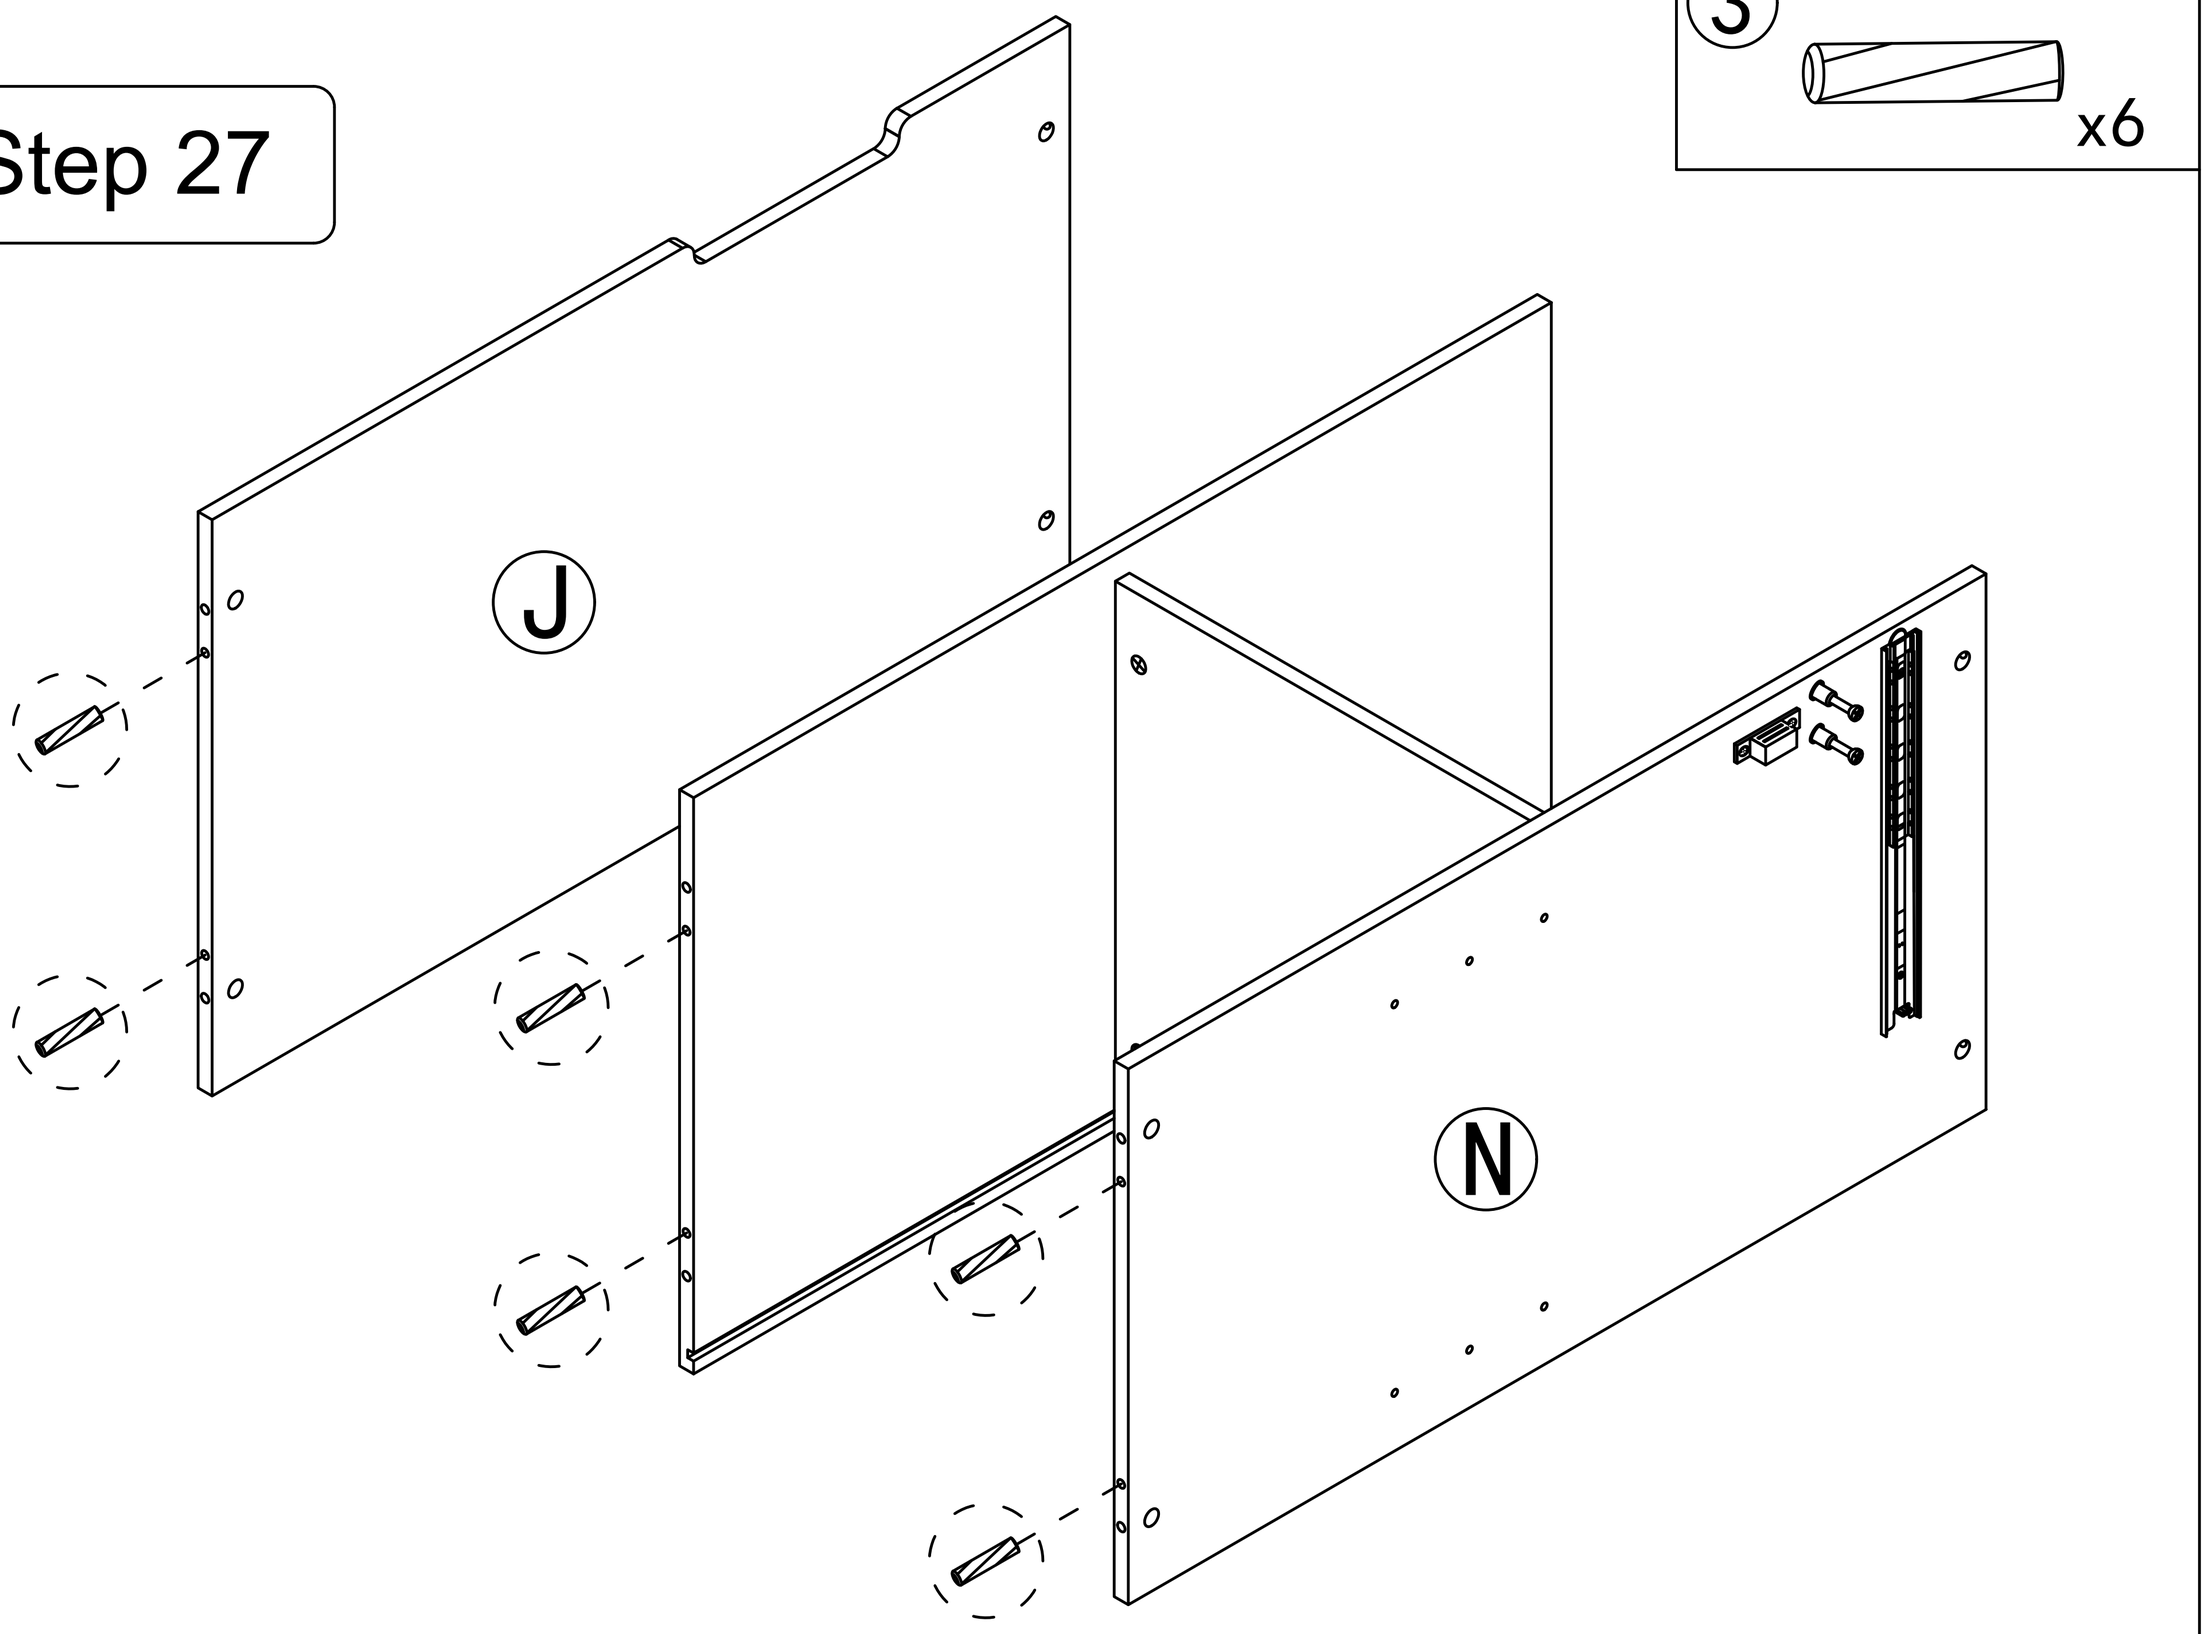

Step 28

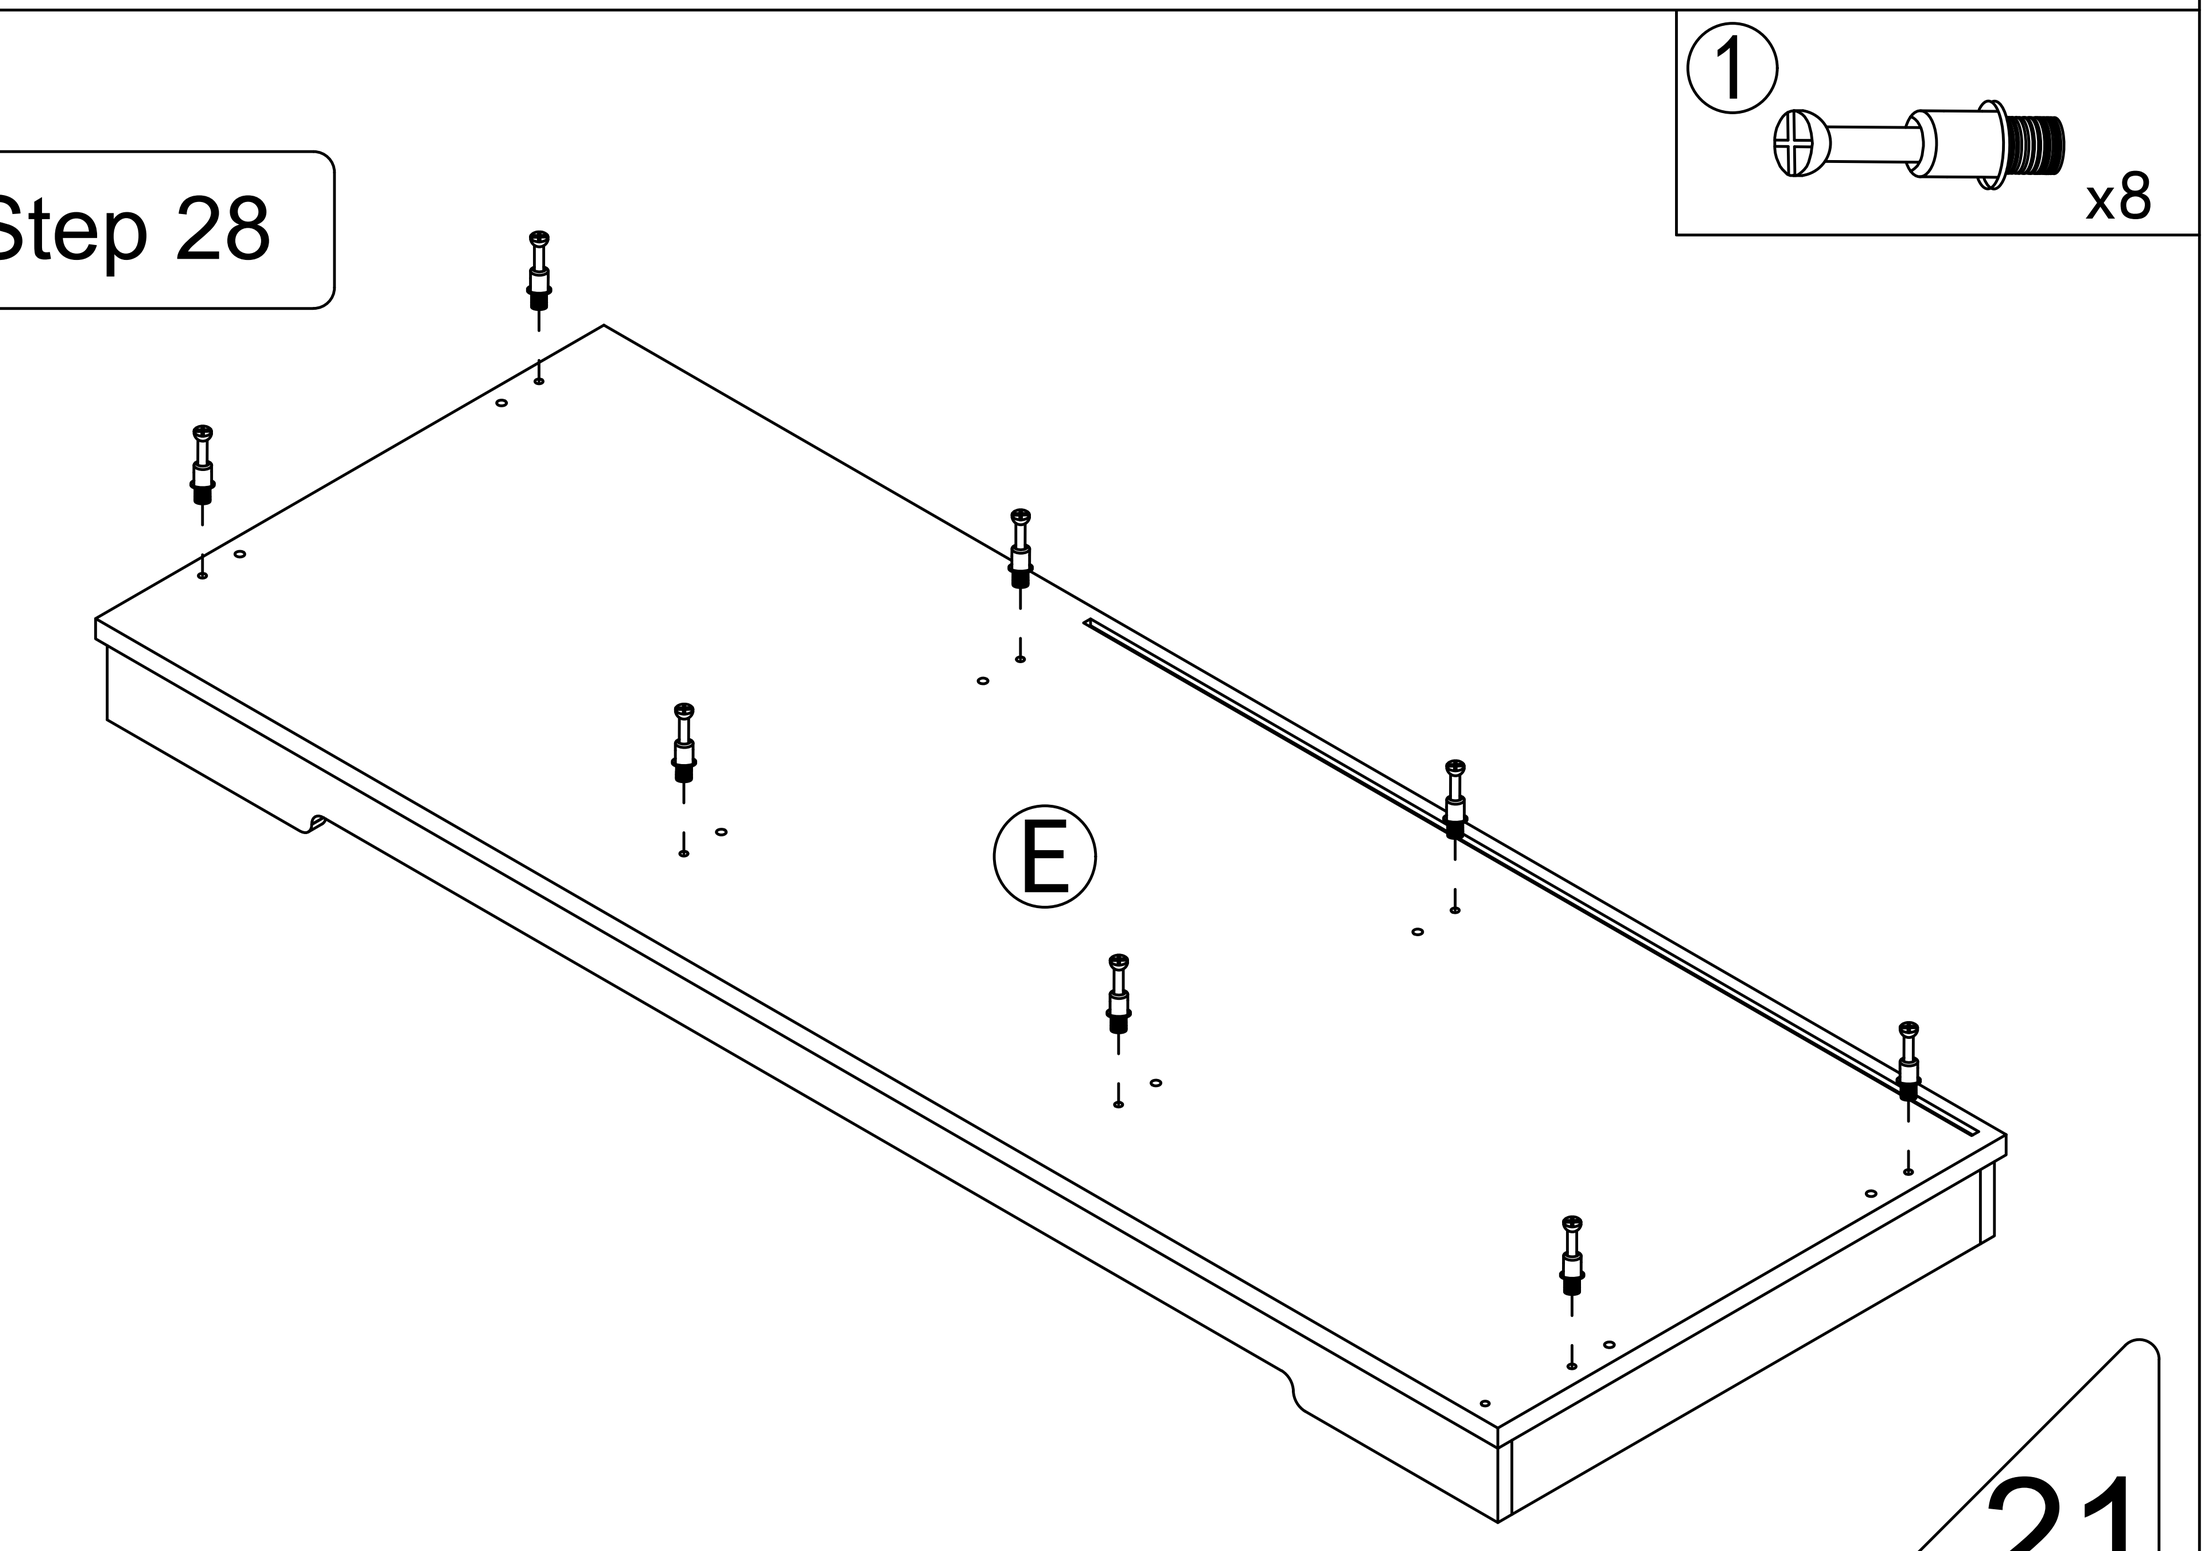


Step 29

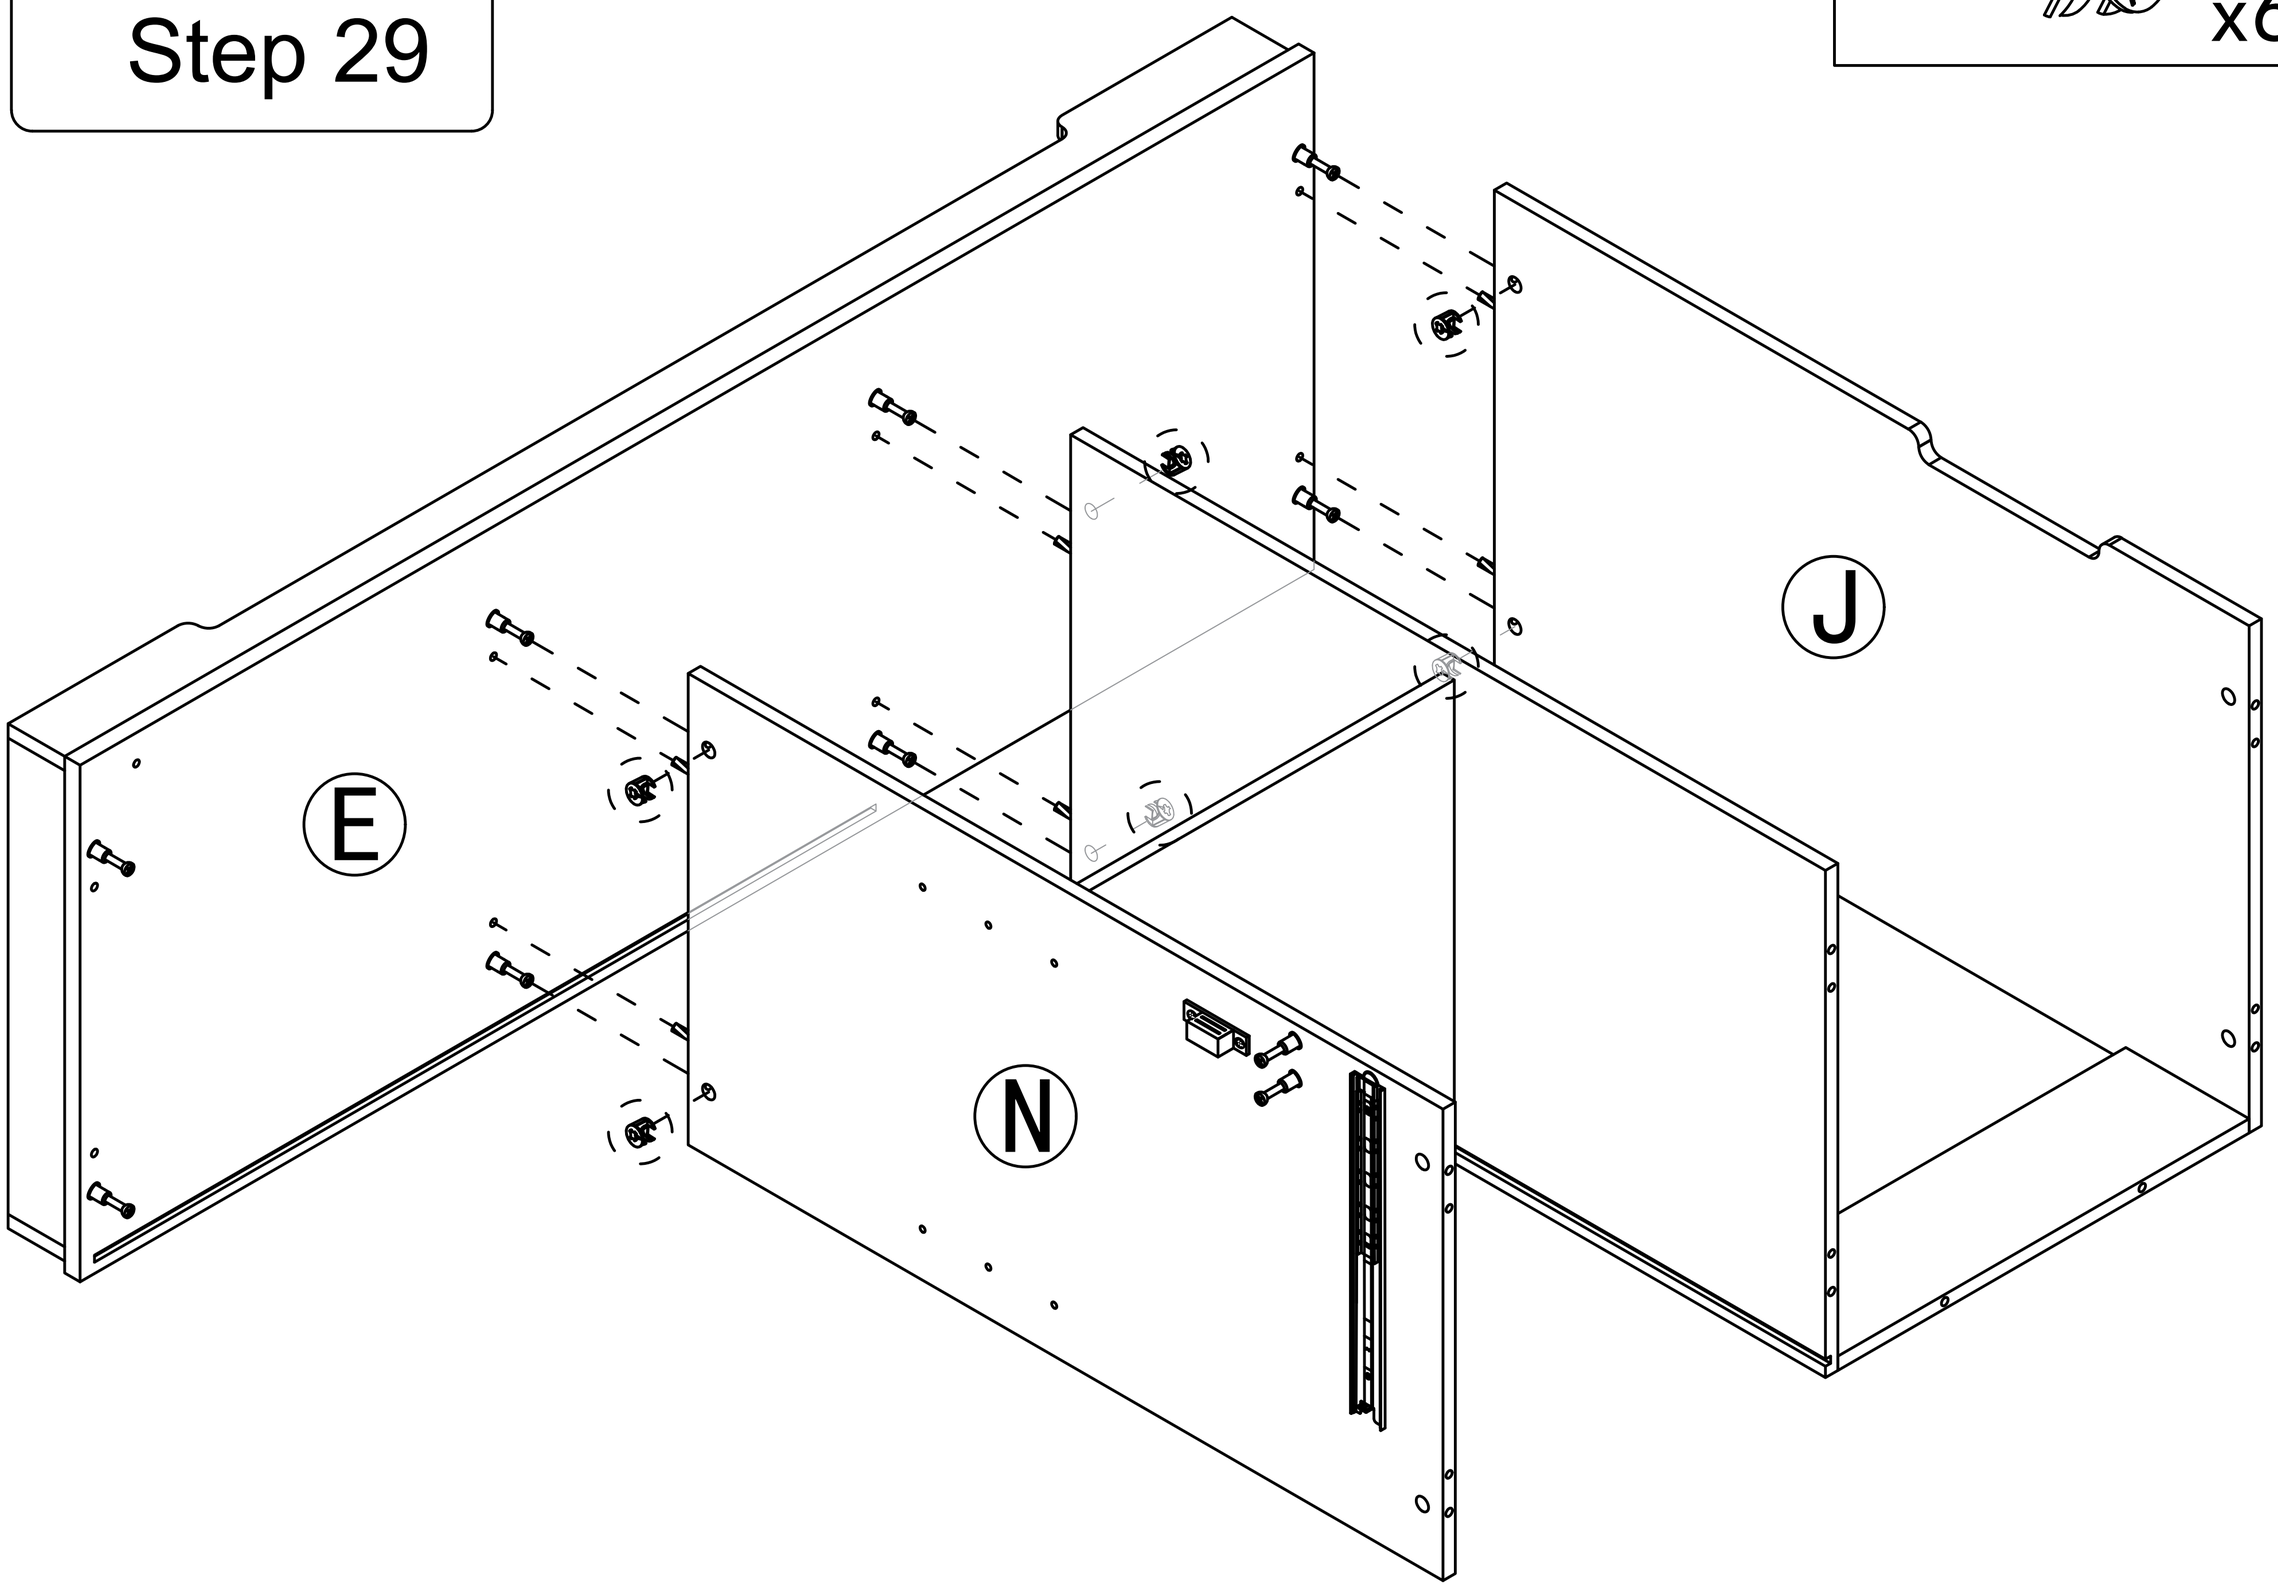


Note: After installing the bottom plate, two people will help the cabinet up together.


turn

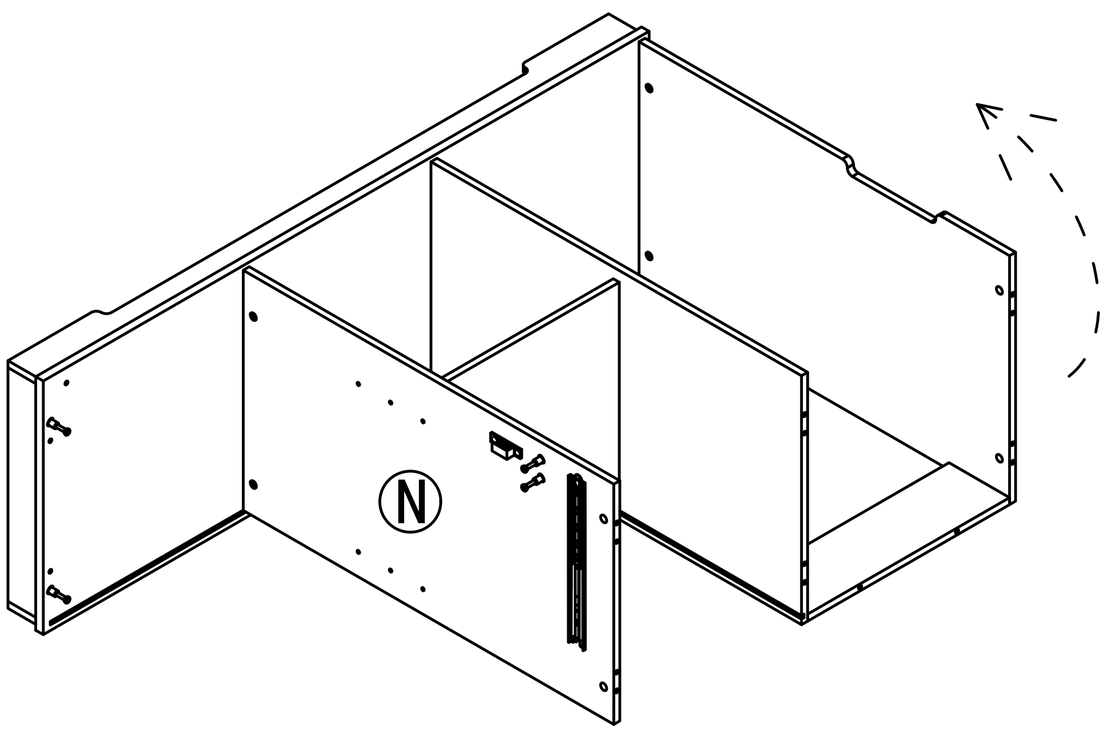


After turning over

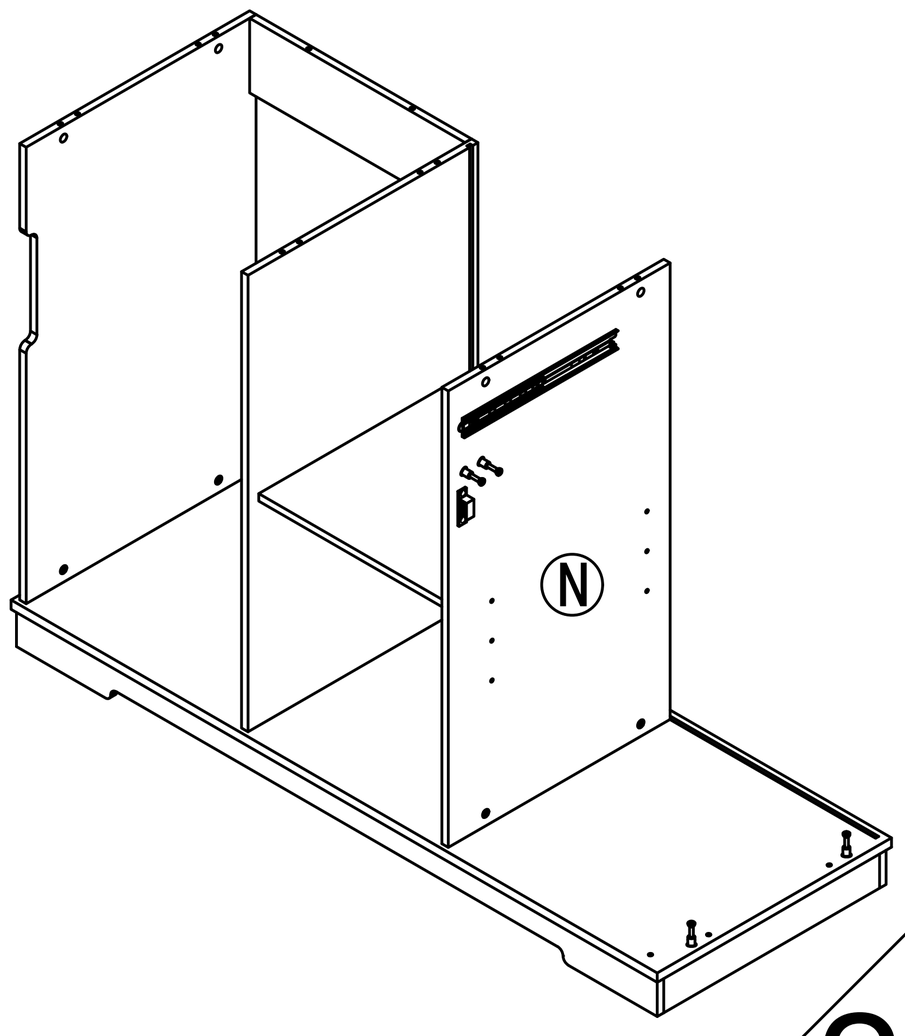


Step 30

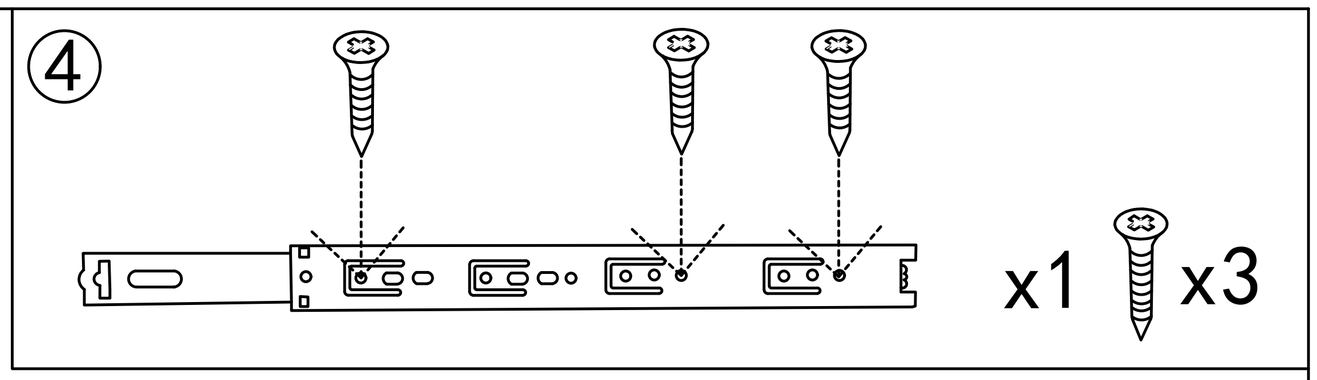


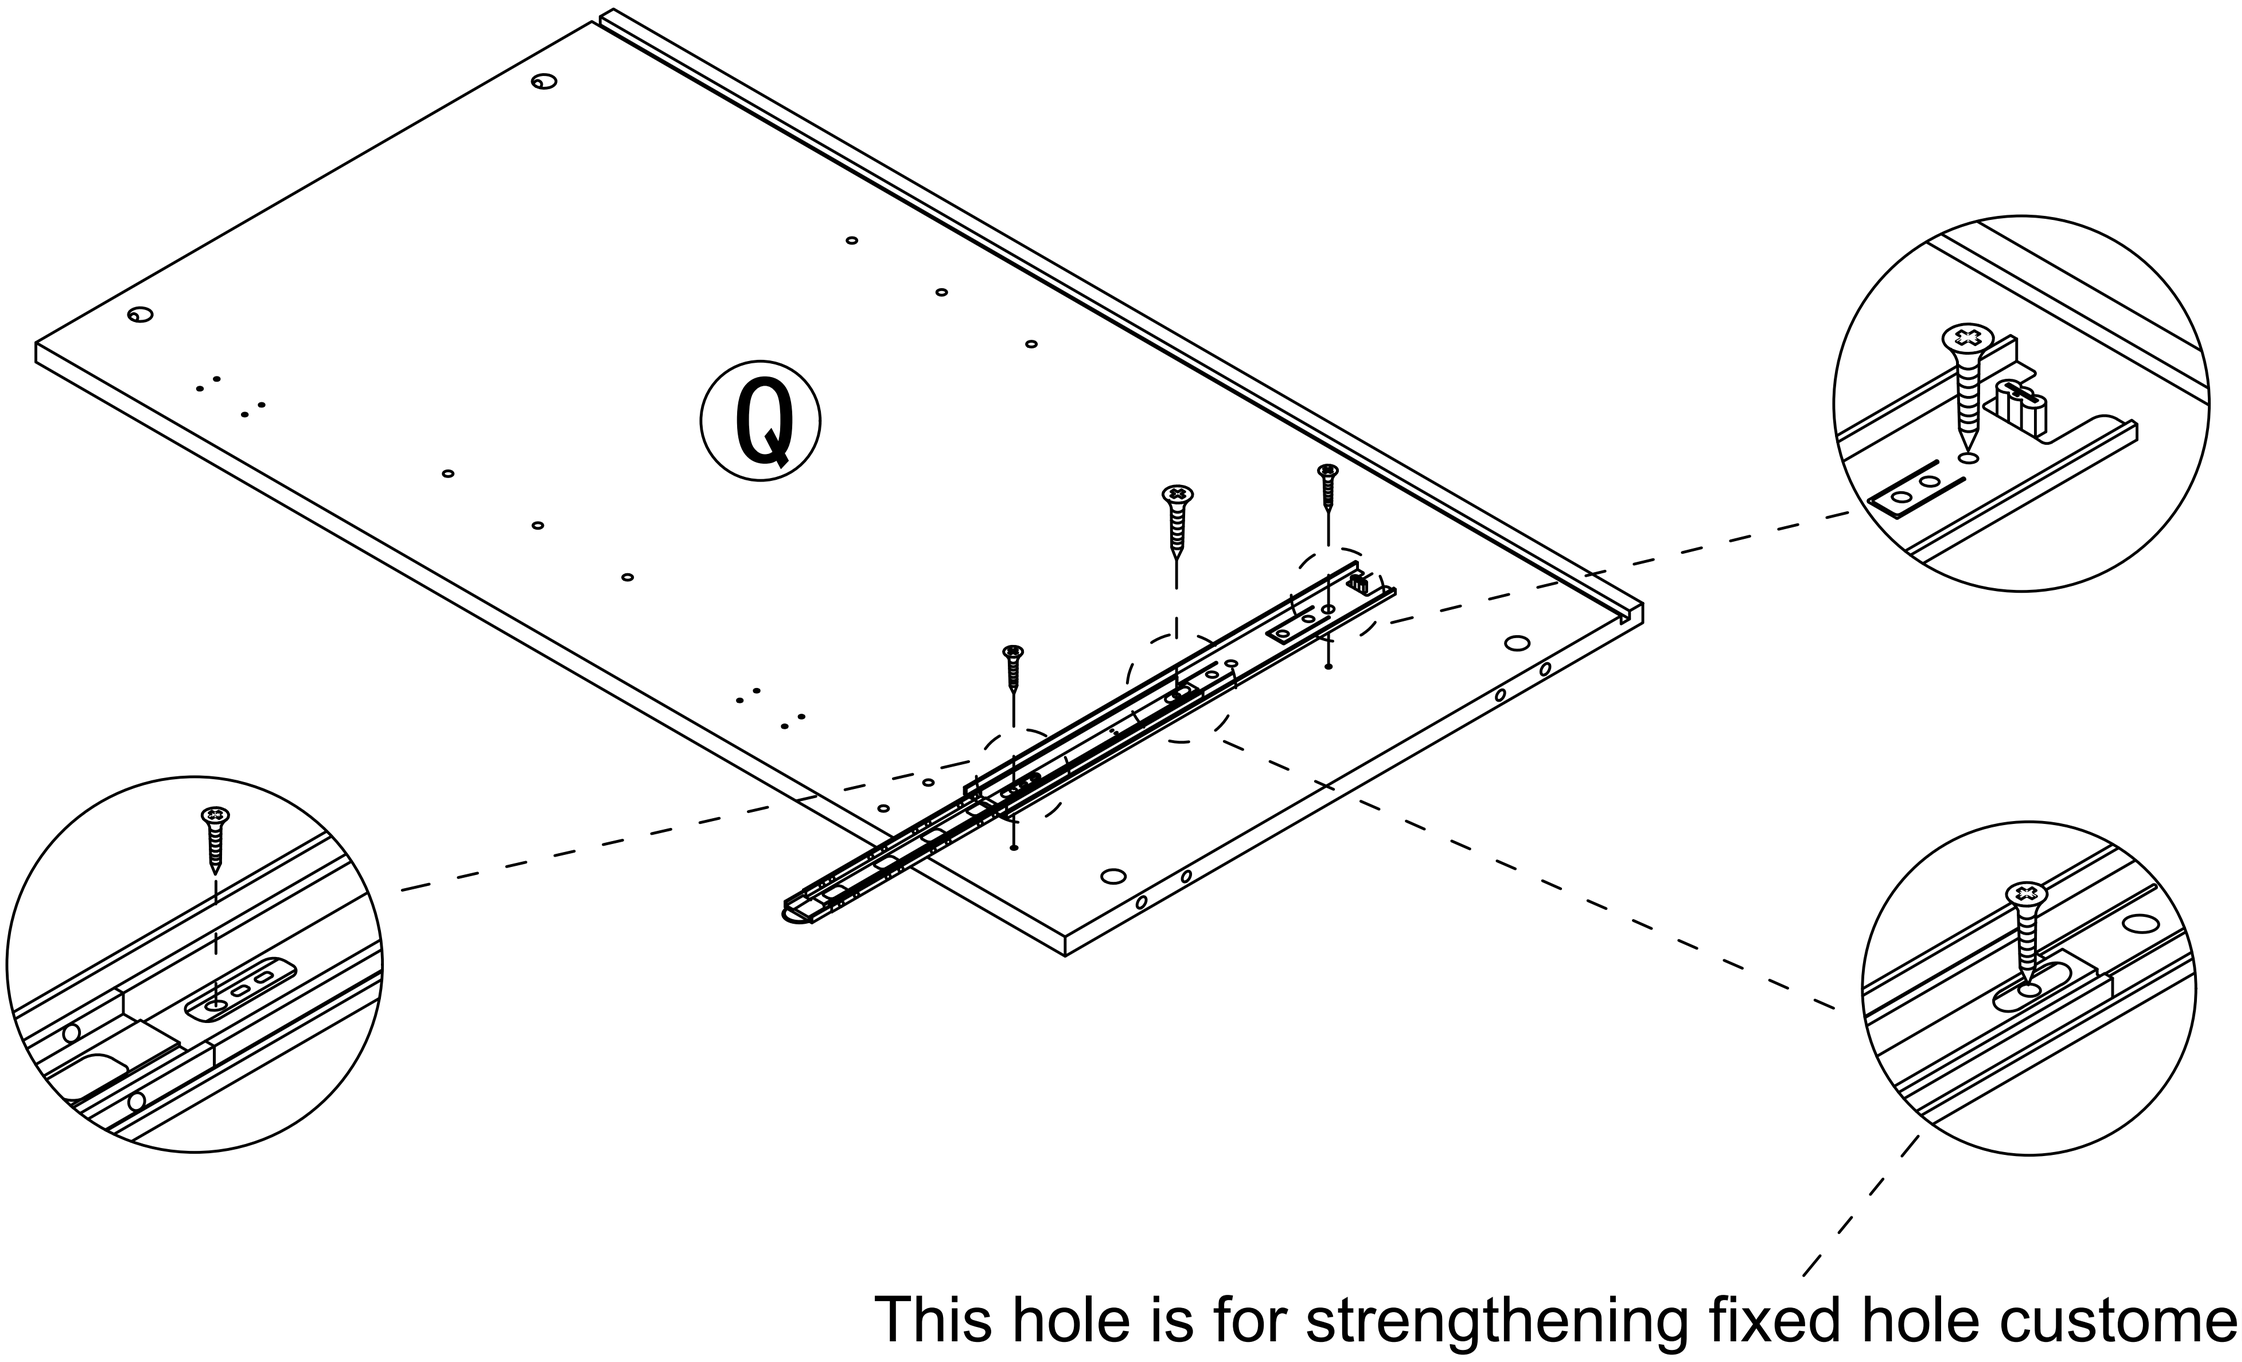


This hole is for strengthening fixed hole customers can choose to install according to their needs.


Step 31

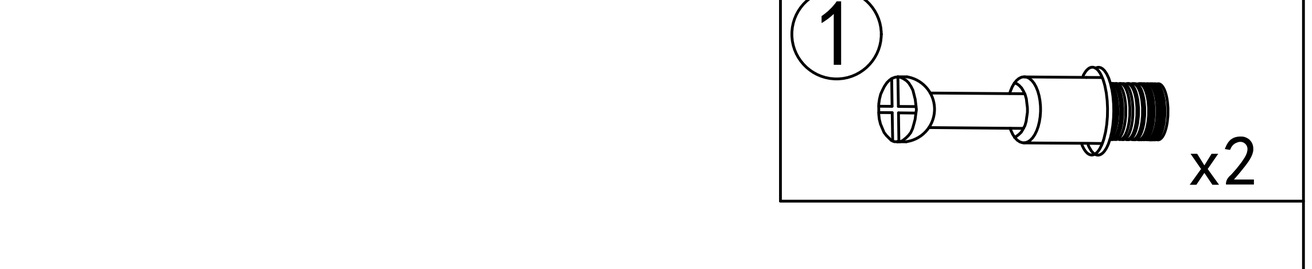

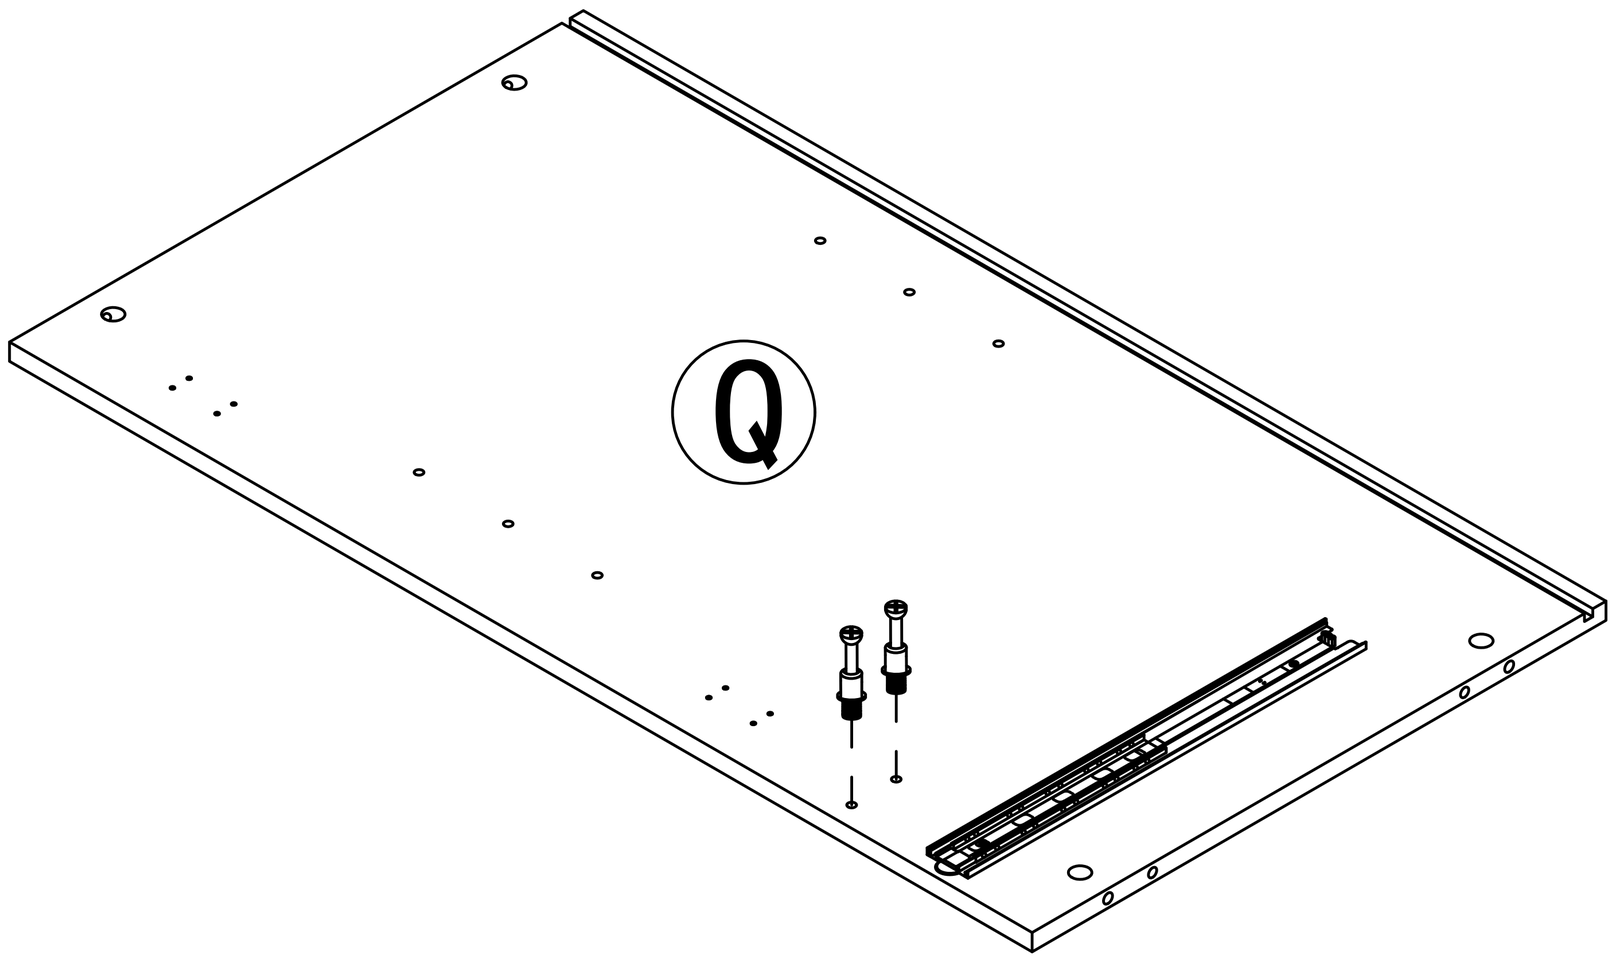


Step 32

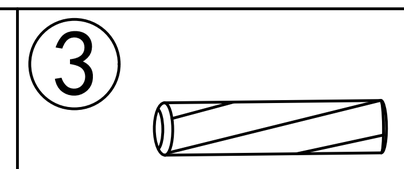

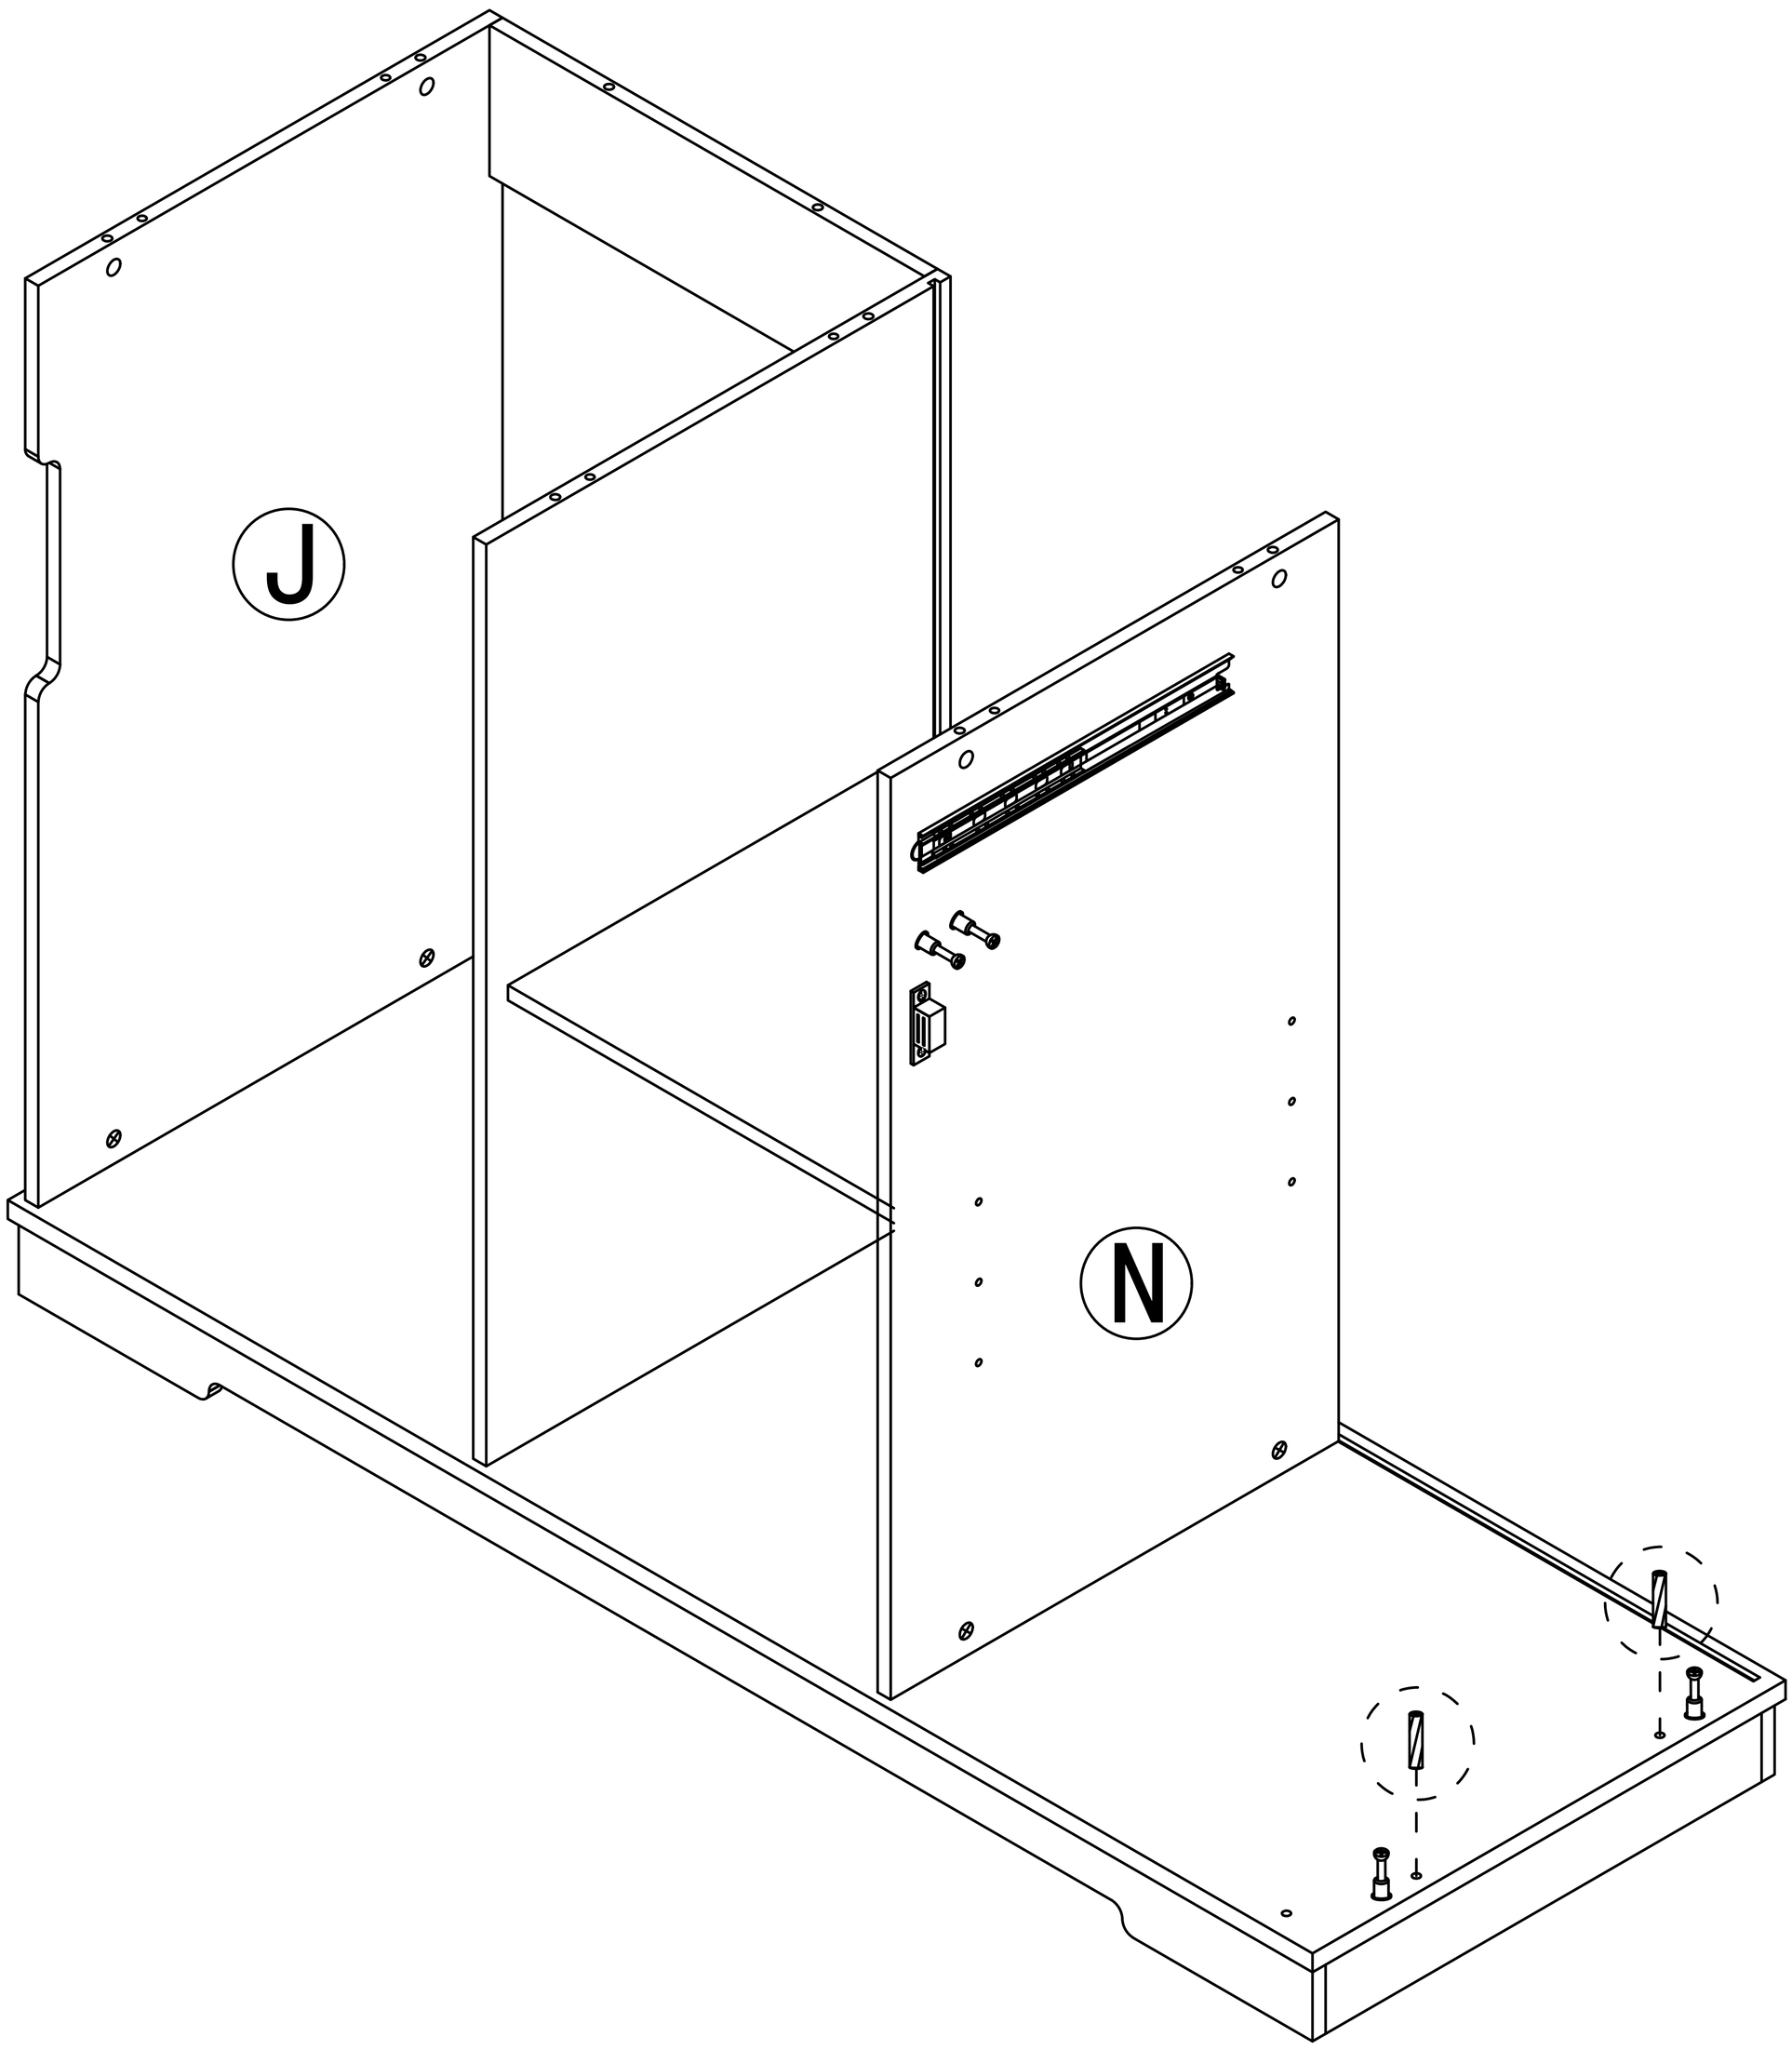

Step 33

2  x2

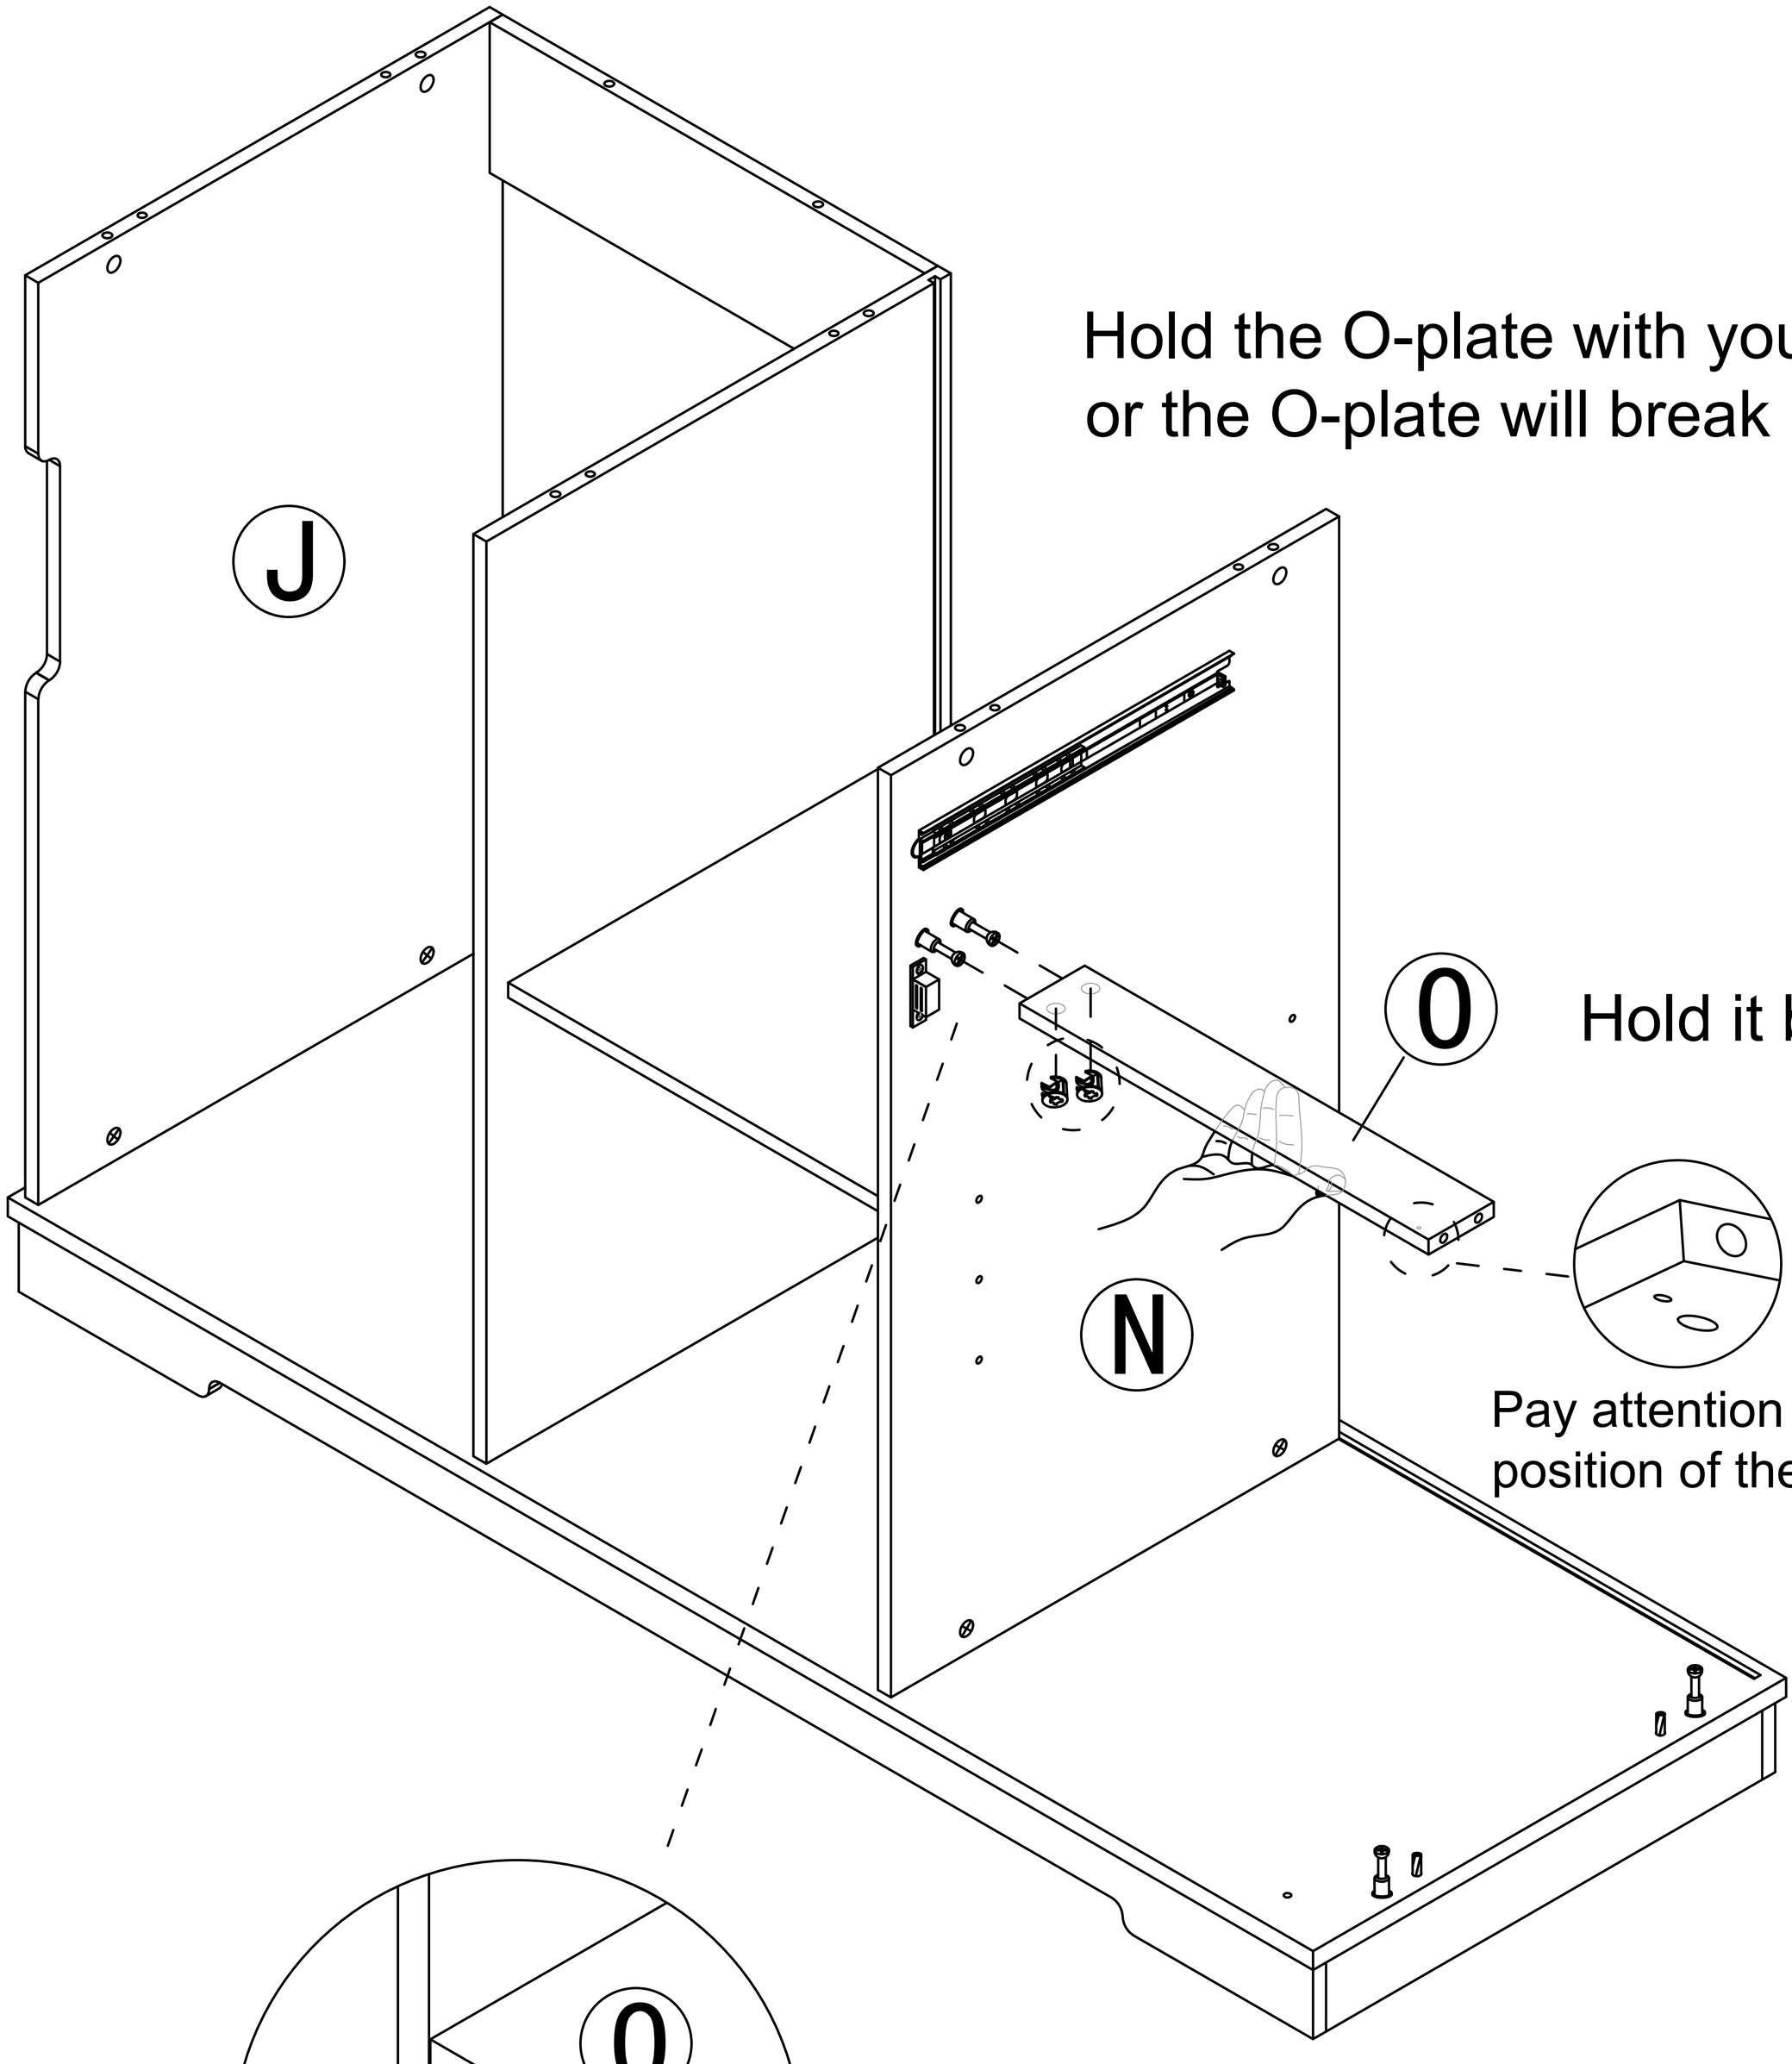


Hold the O-plate with your hands,
or the O-plate will break if it falls.

Hold it by hand


Pay attention to the
position of the small hole.

Position flush after installation

Step 34

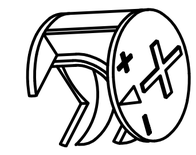

Hold the O-plate with your hands,
or the O-plate will break if it falls.

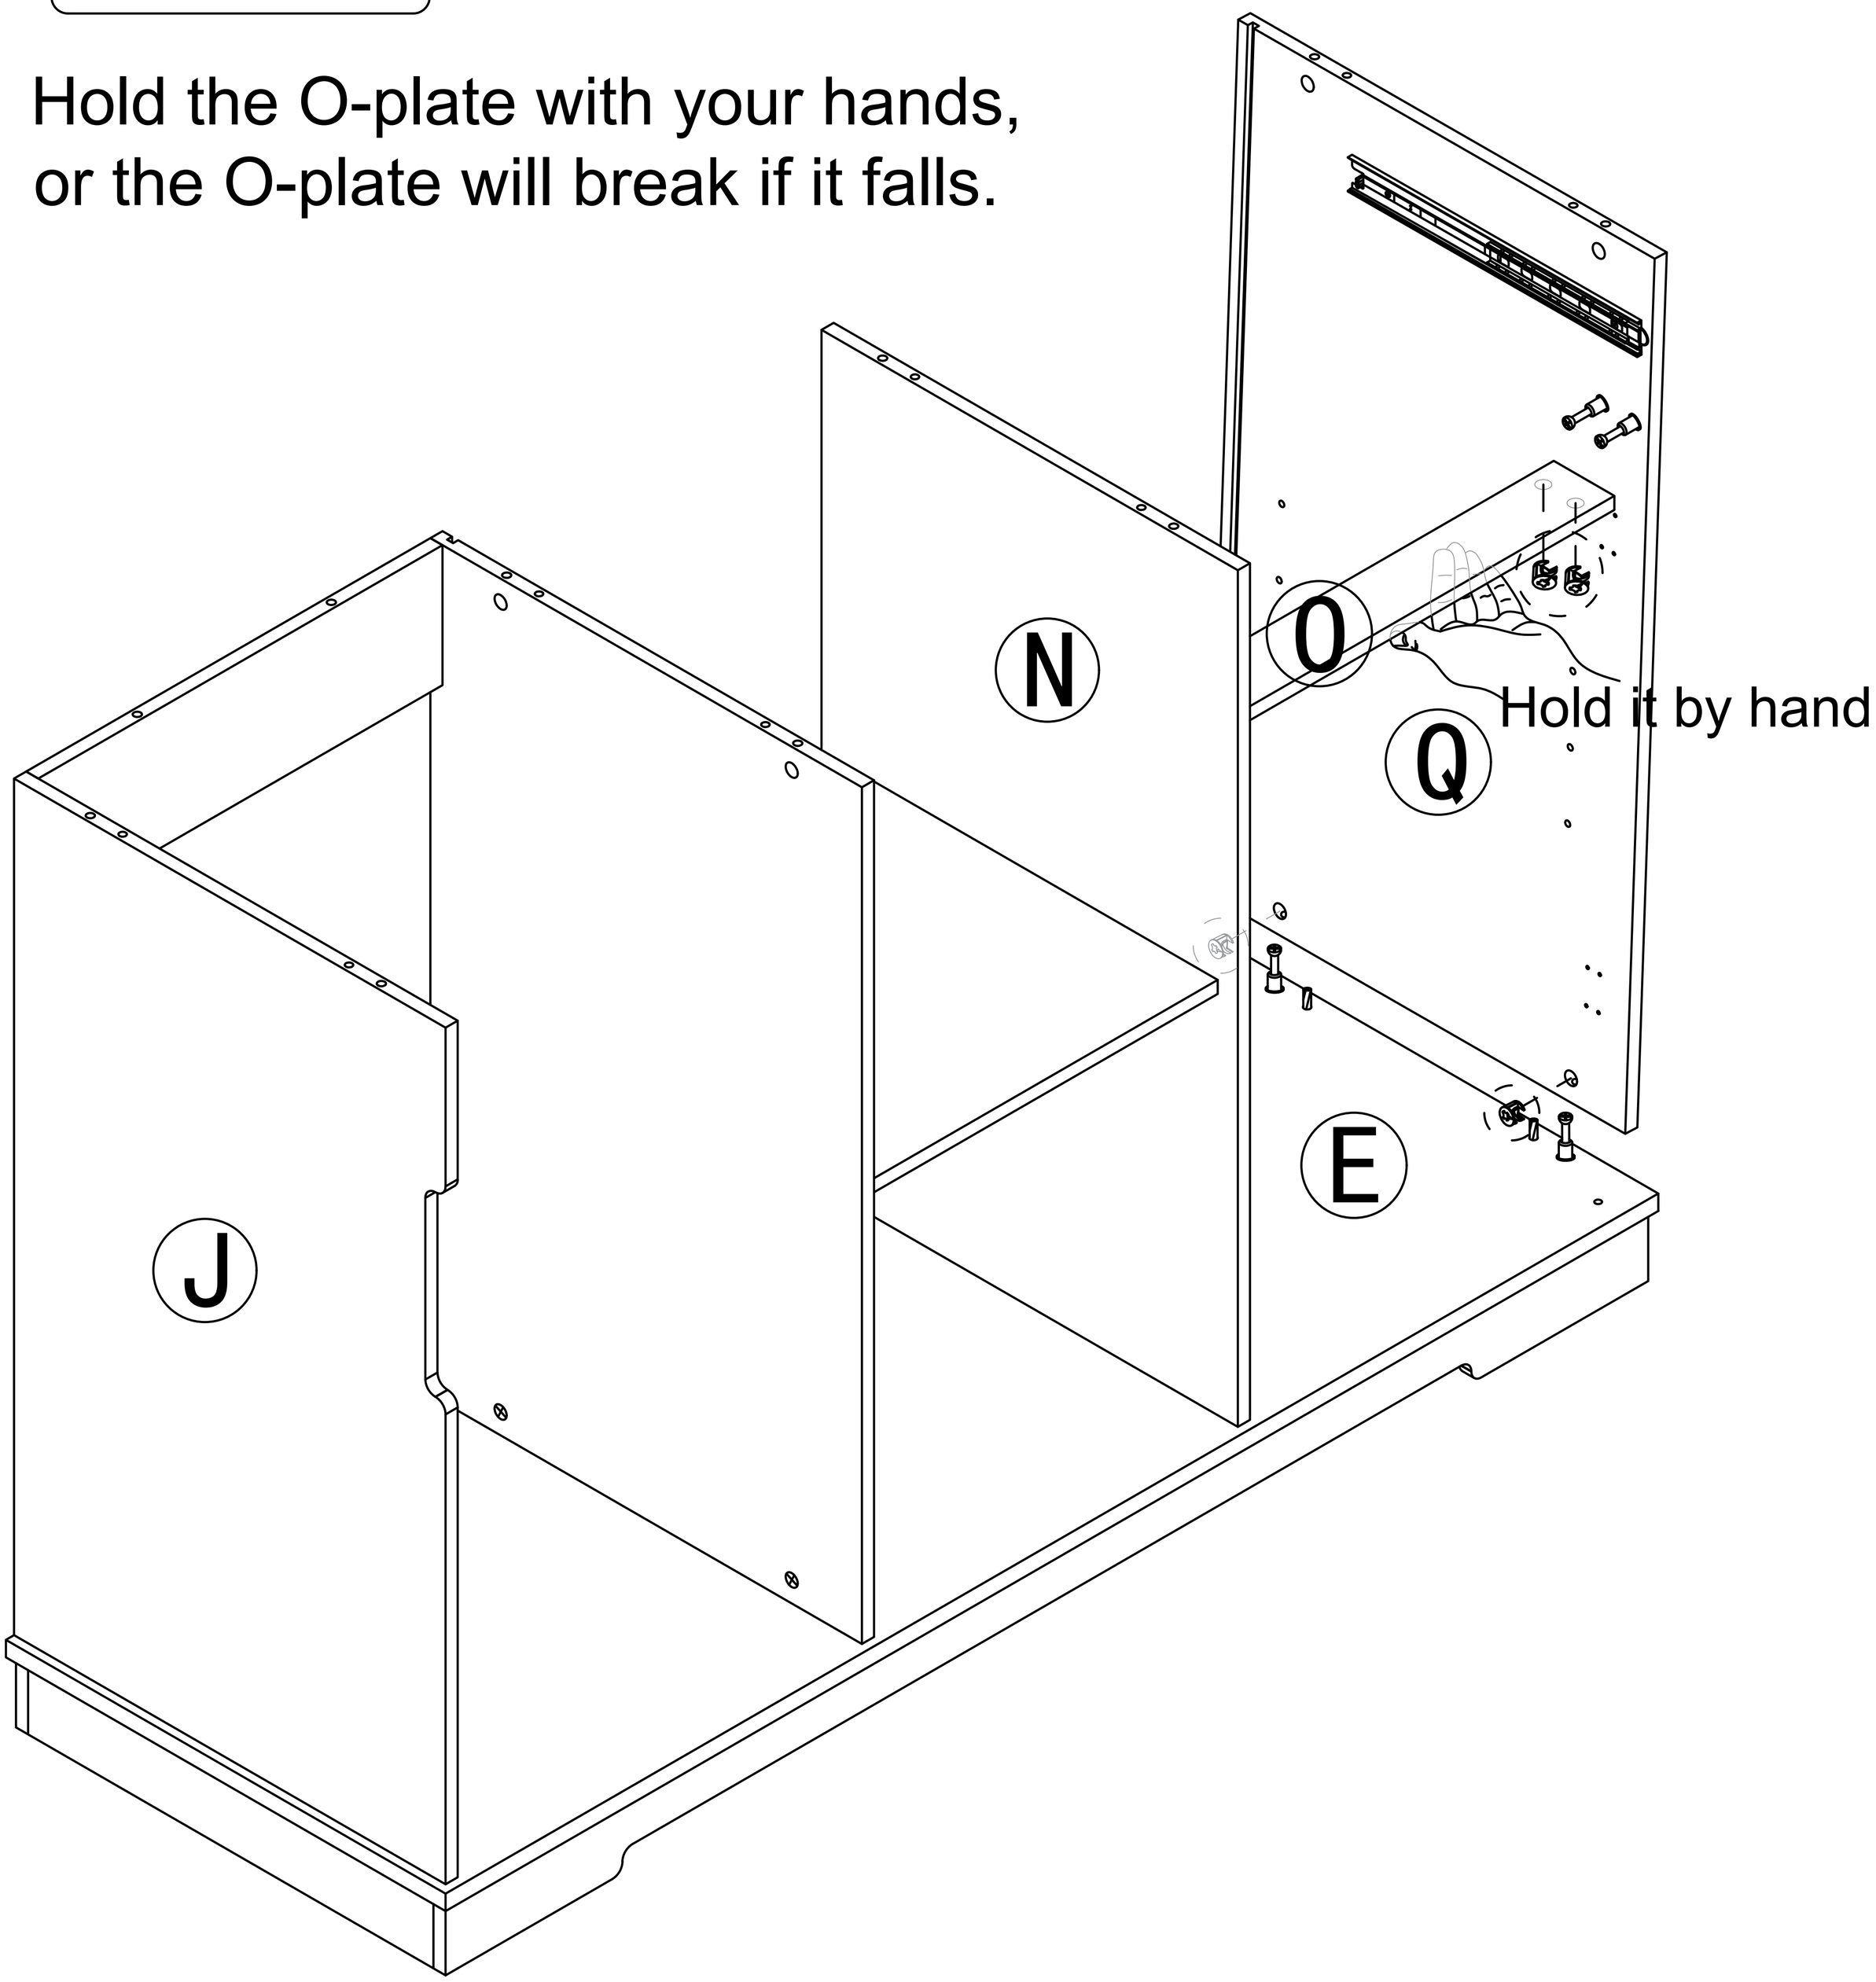



Insert at an angle, align with the
holes,and tighten the connector.

Note: Lock the nut only after the connection between
Q board and E board and O board is completed.


Step 35

Place the "R" board, Backboard card strip, and "R" board in order

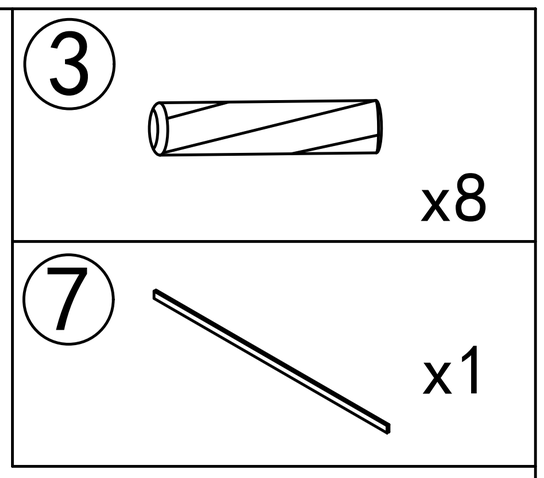


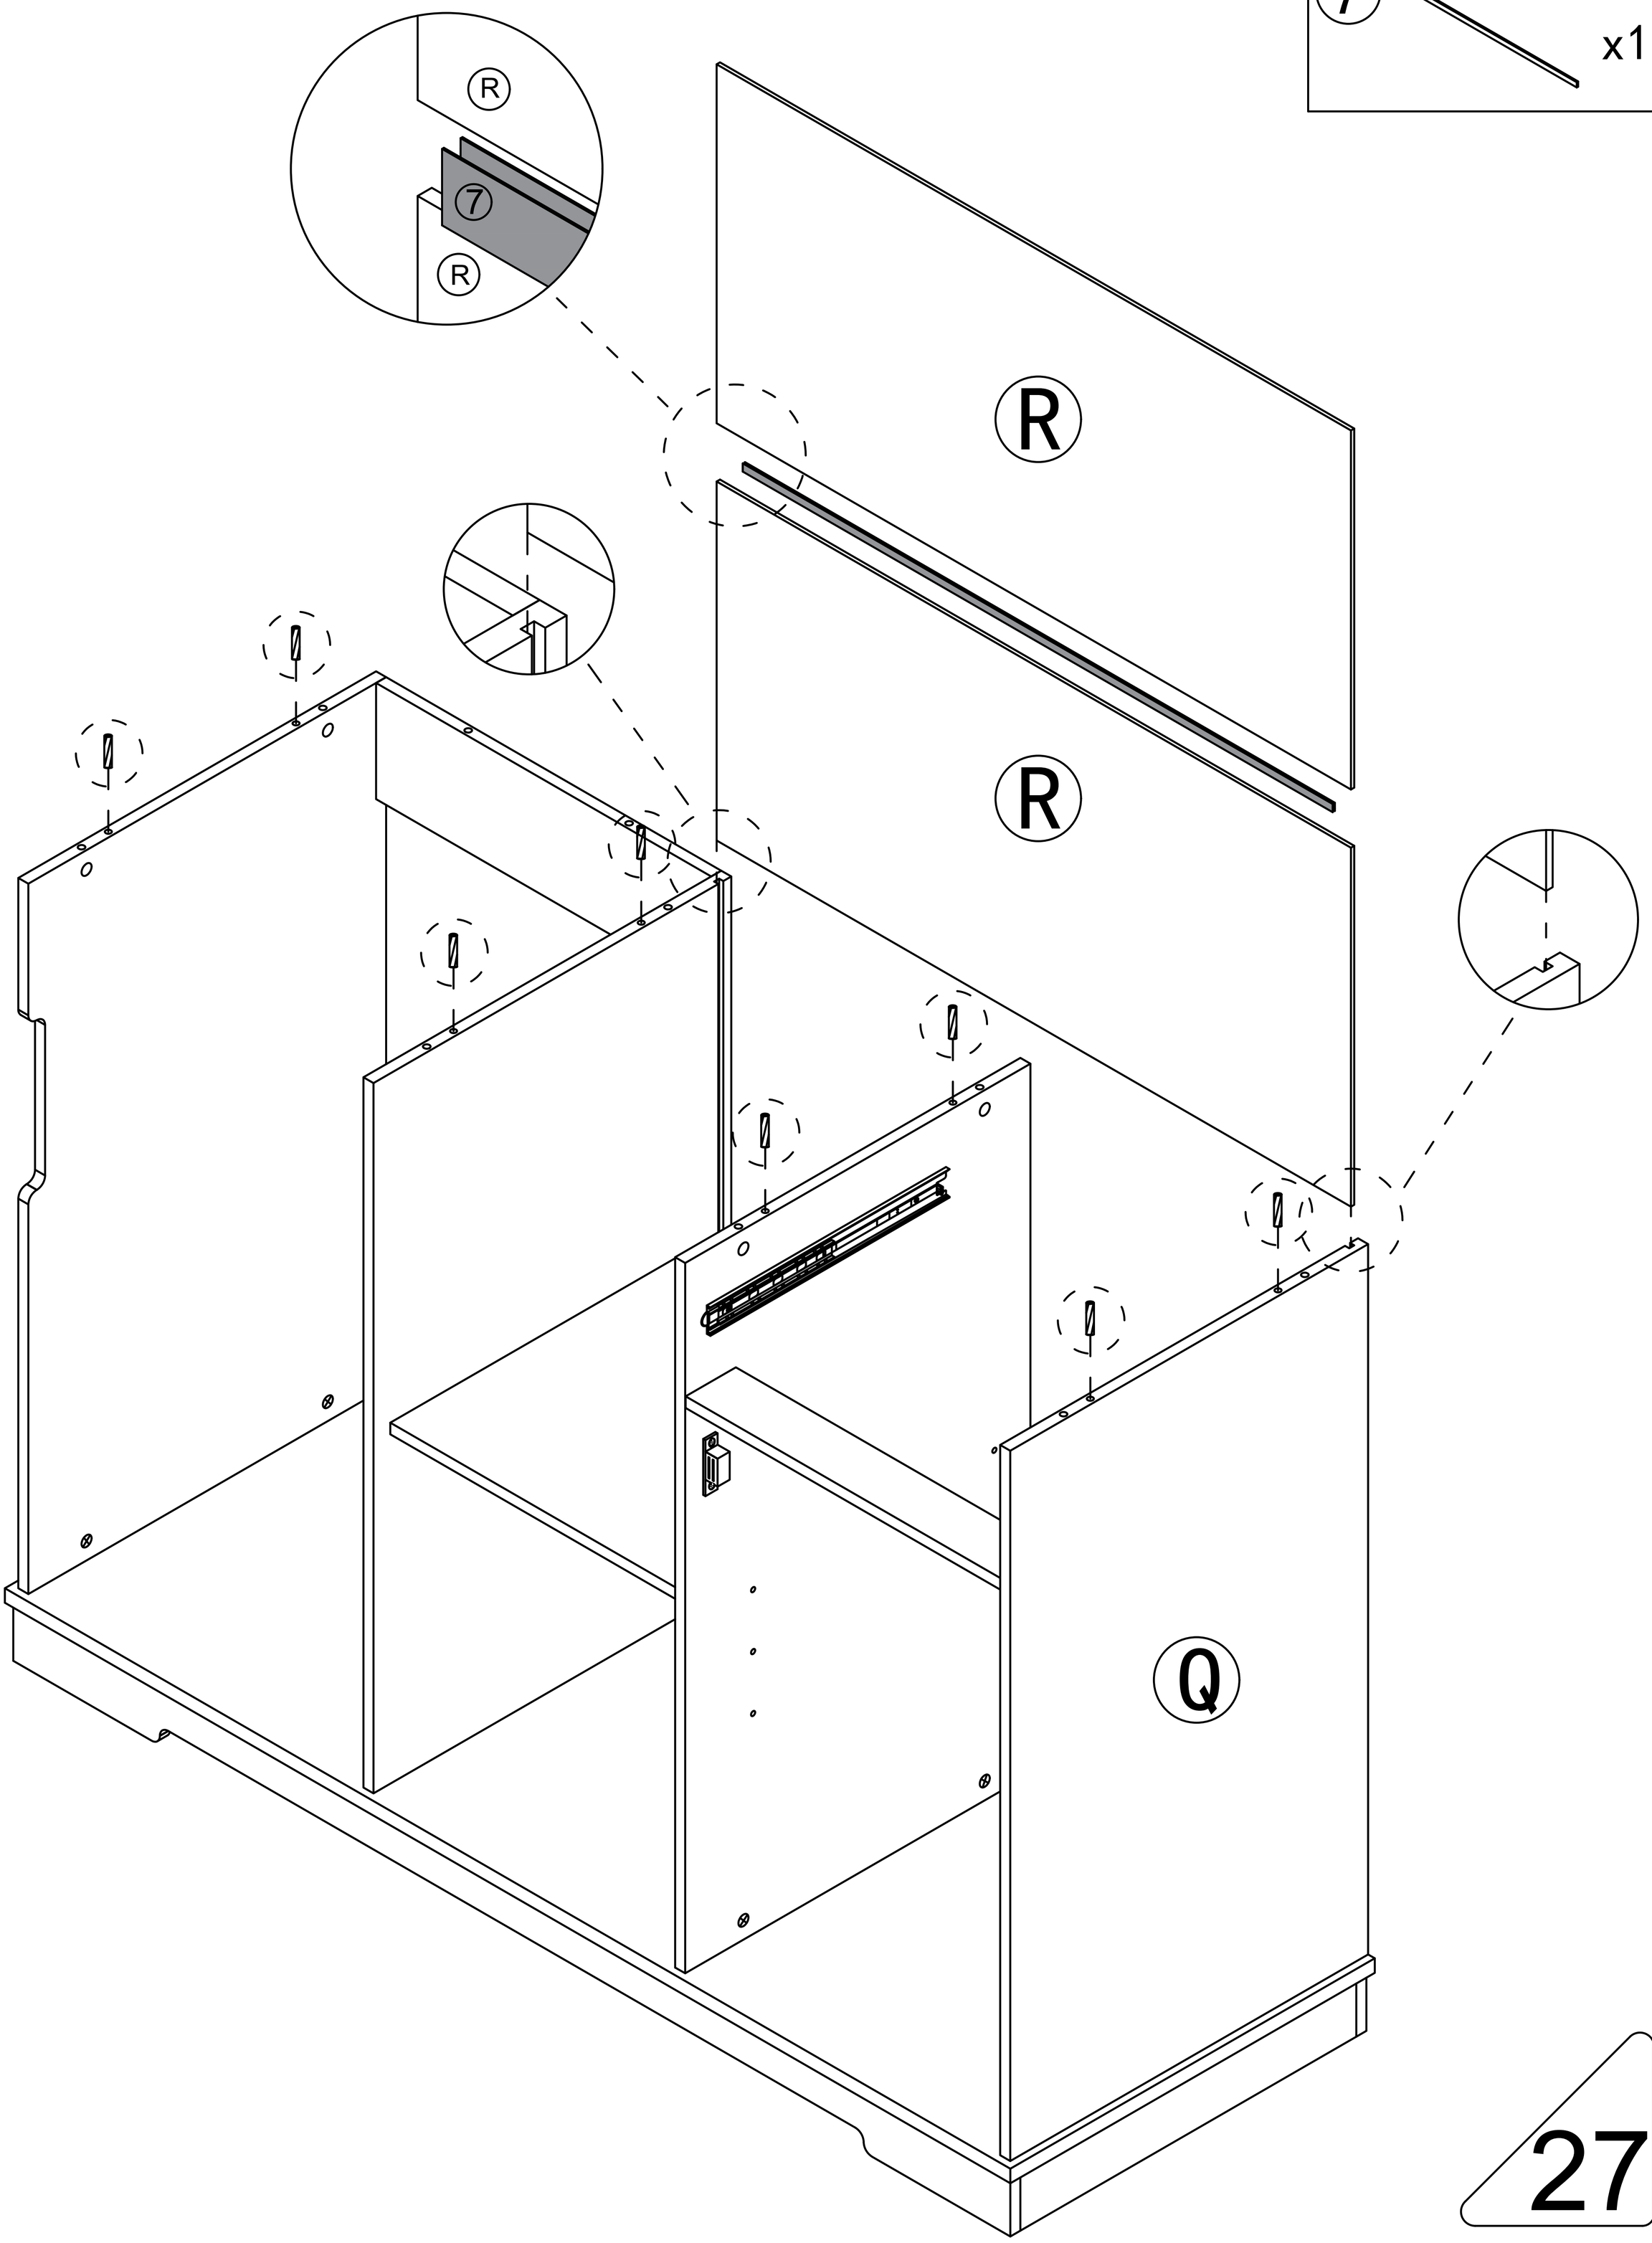

Step 36

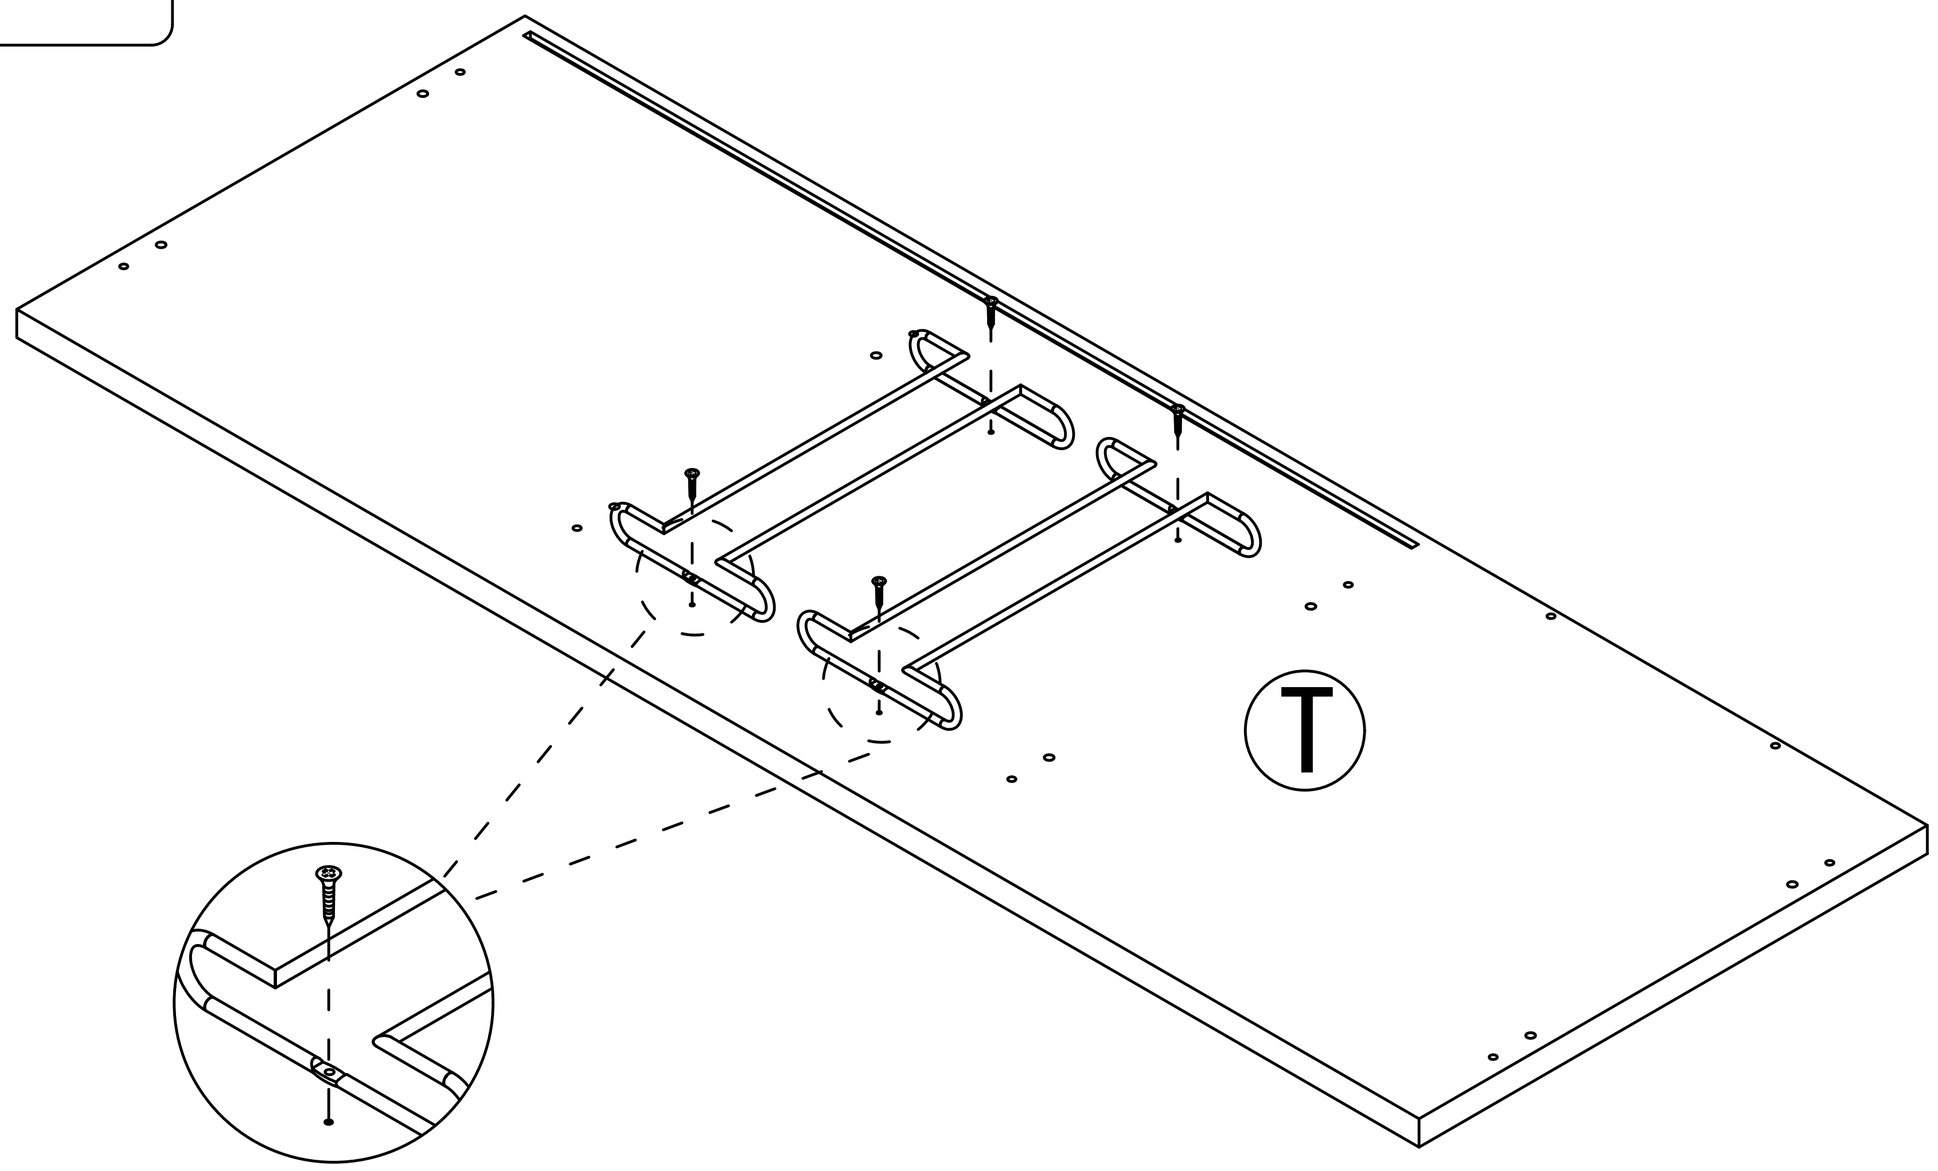


Step 37

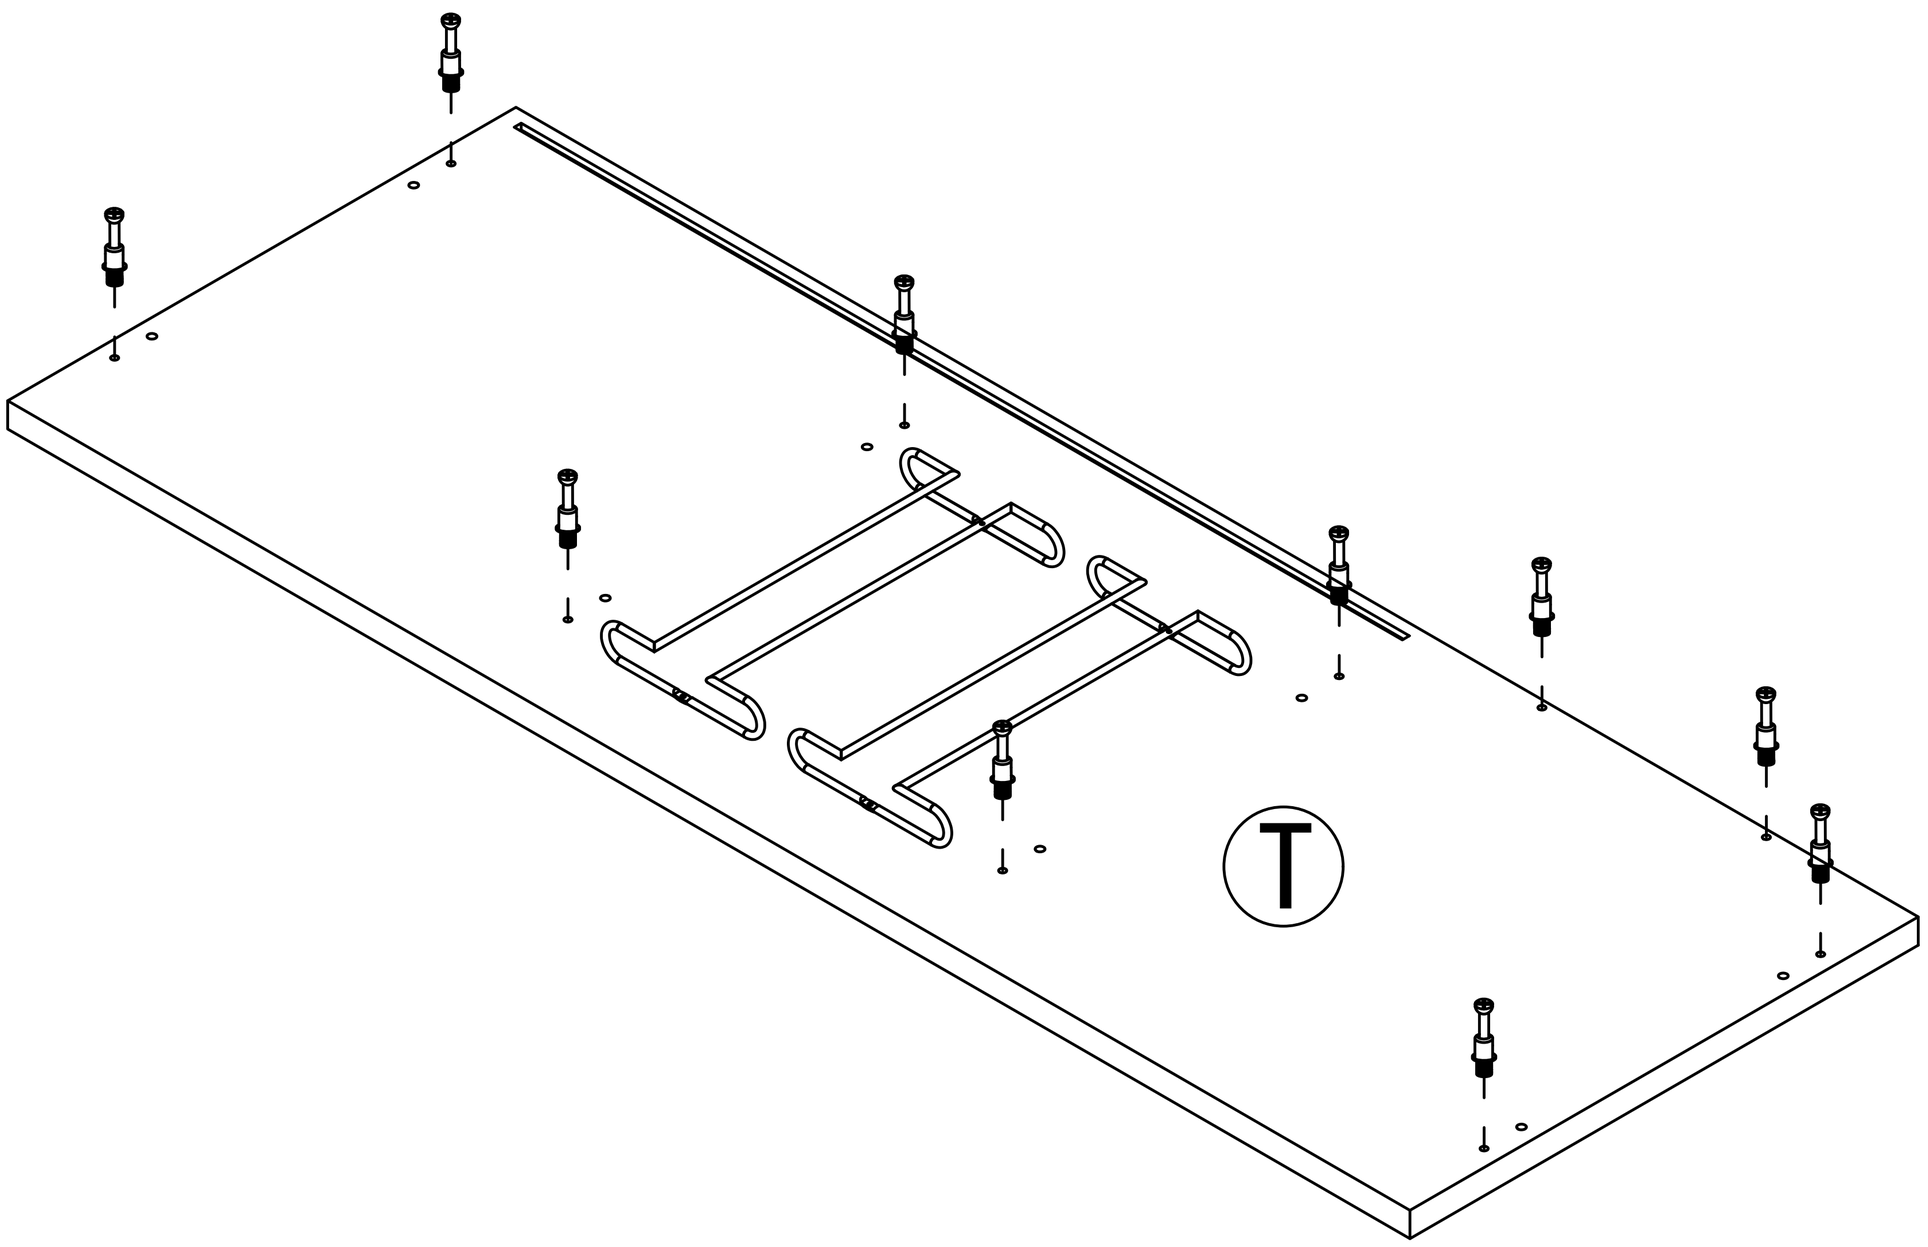


Step 38




x10

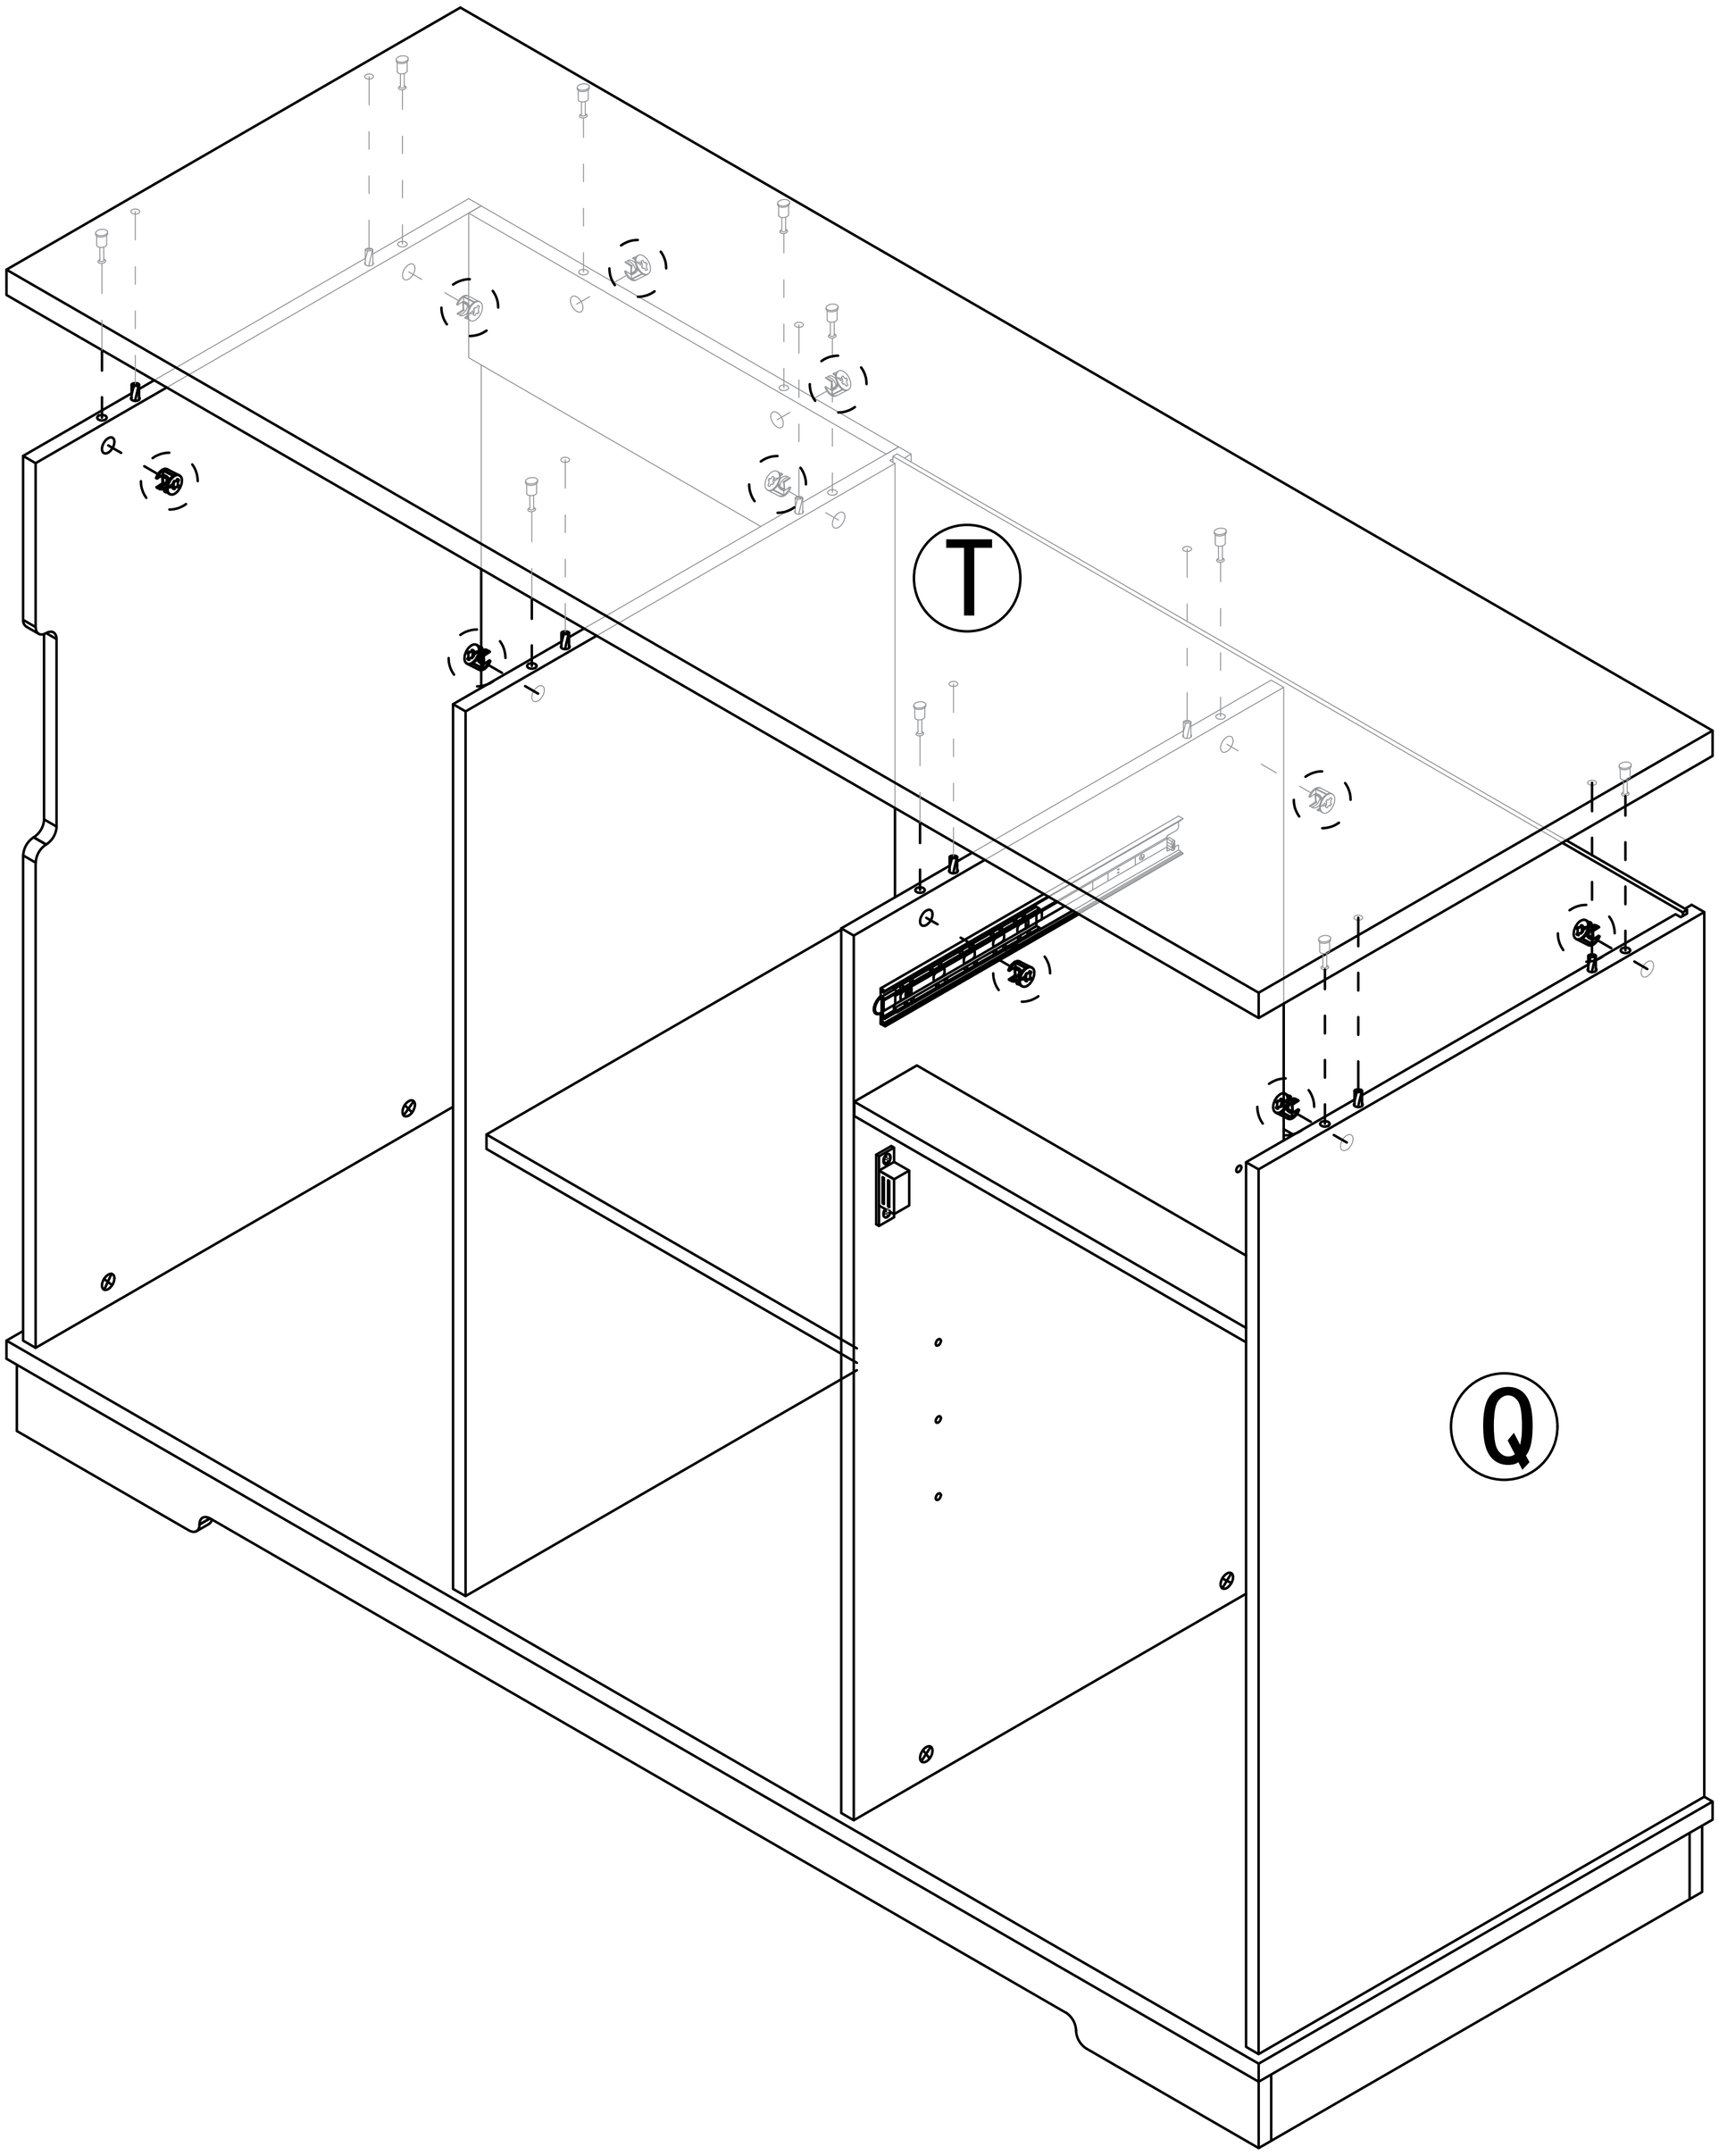


Step 39

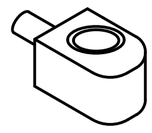

9 x4

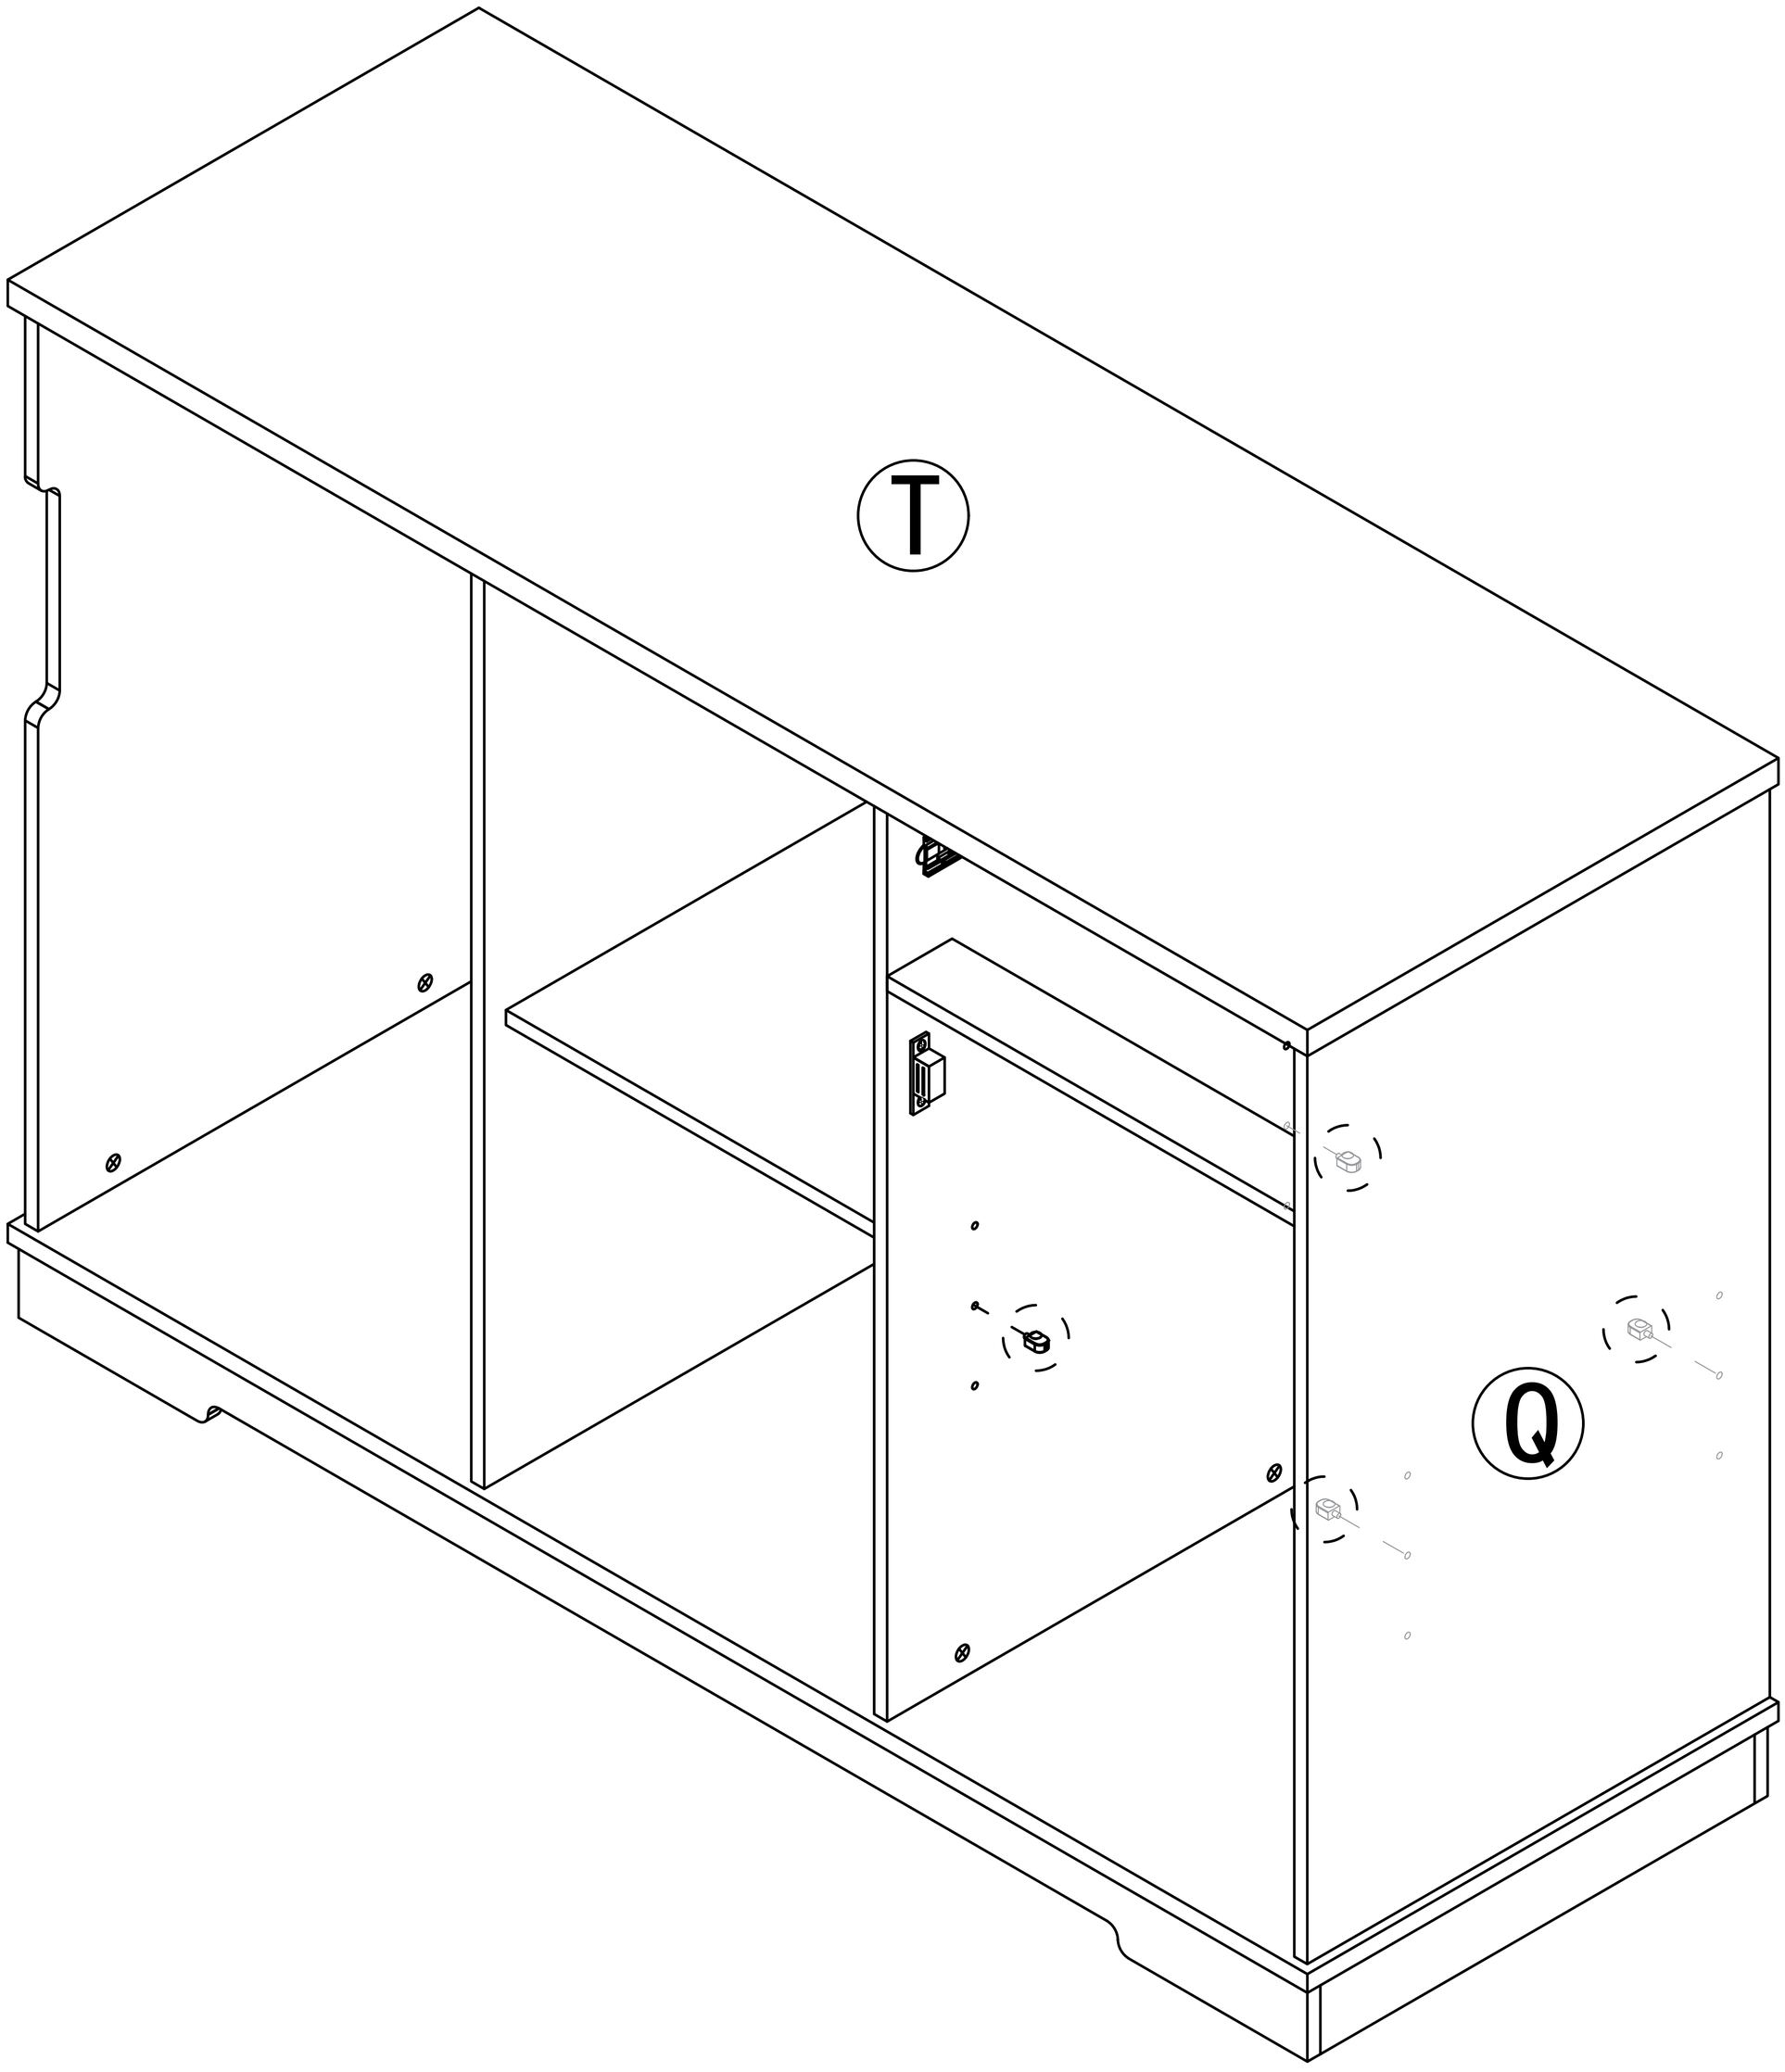


Step 40

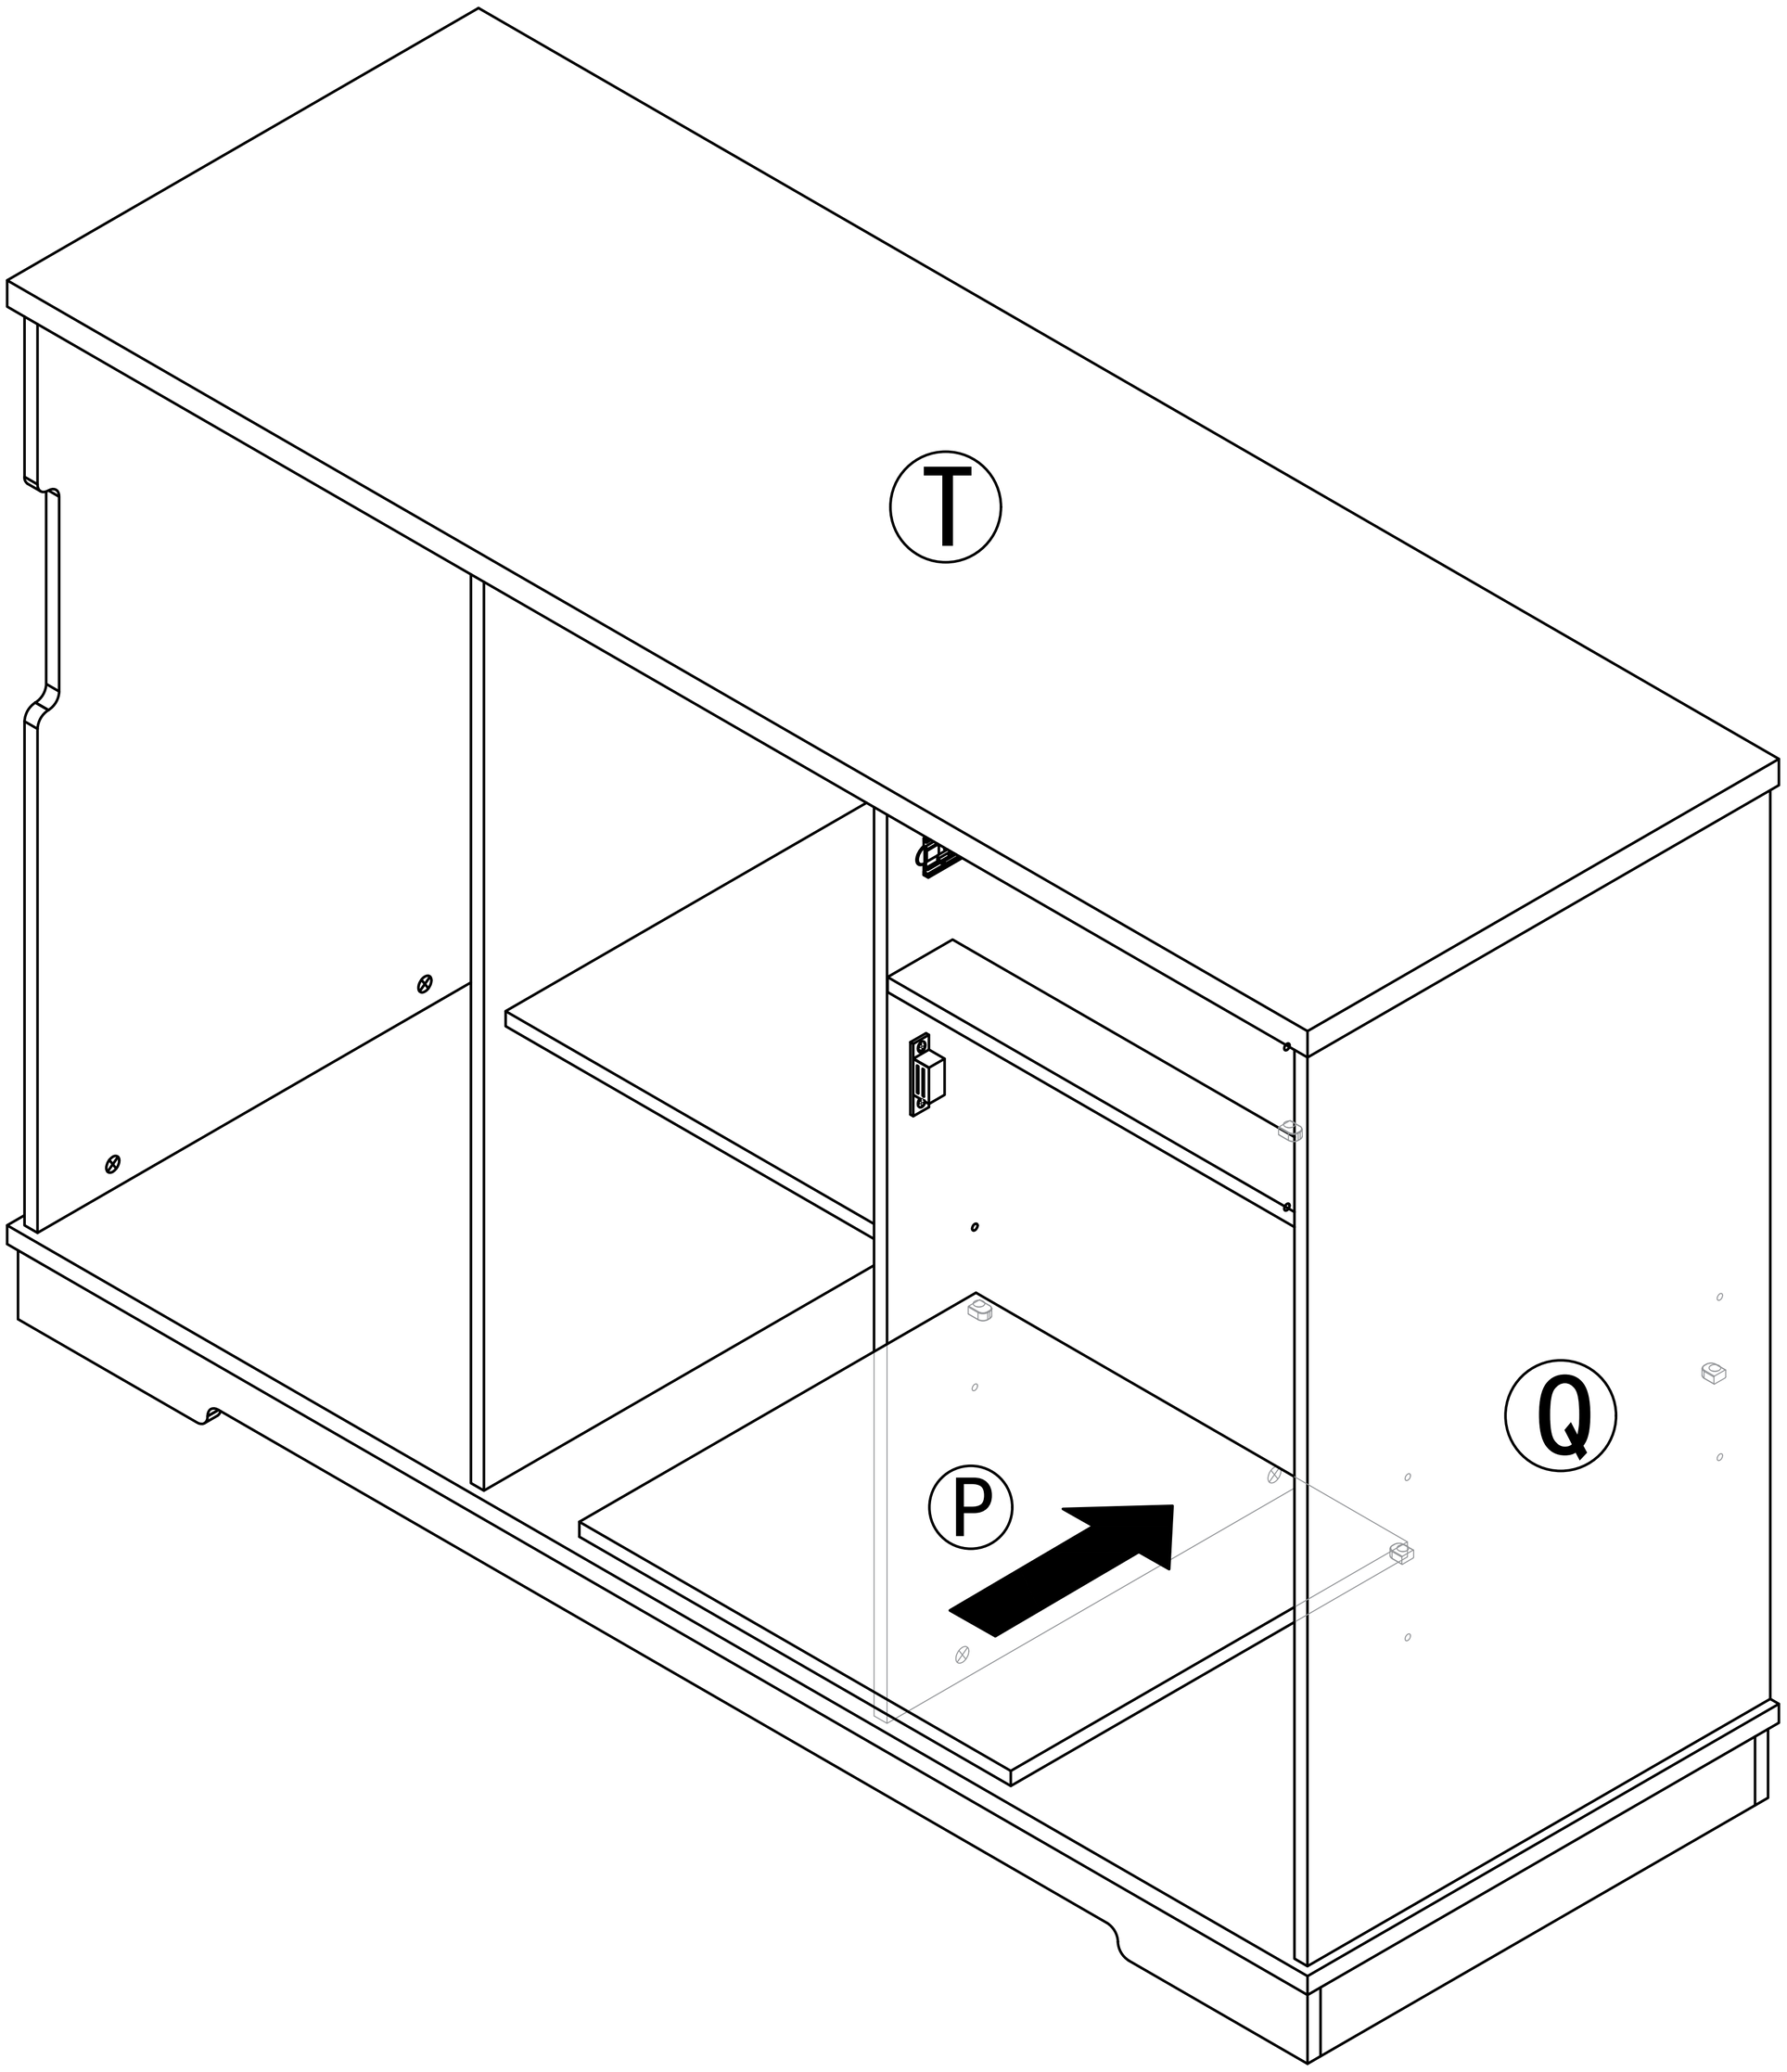


Step 41

13 x1 x2

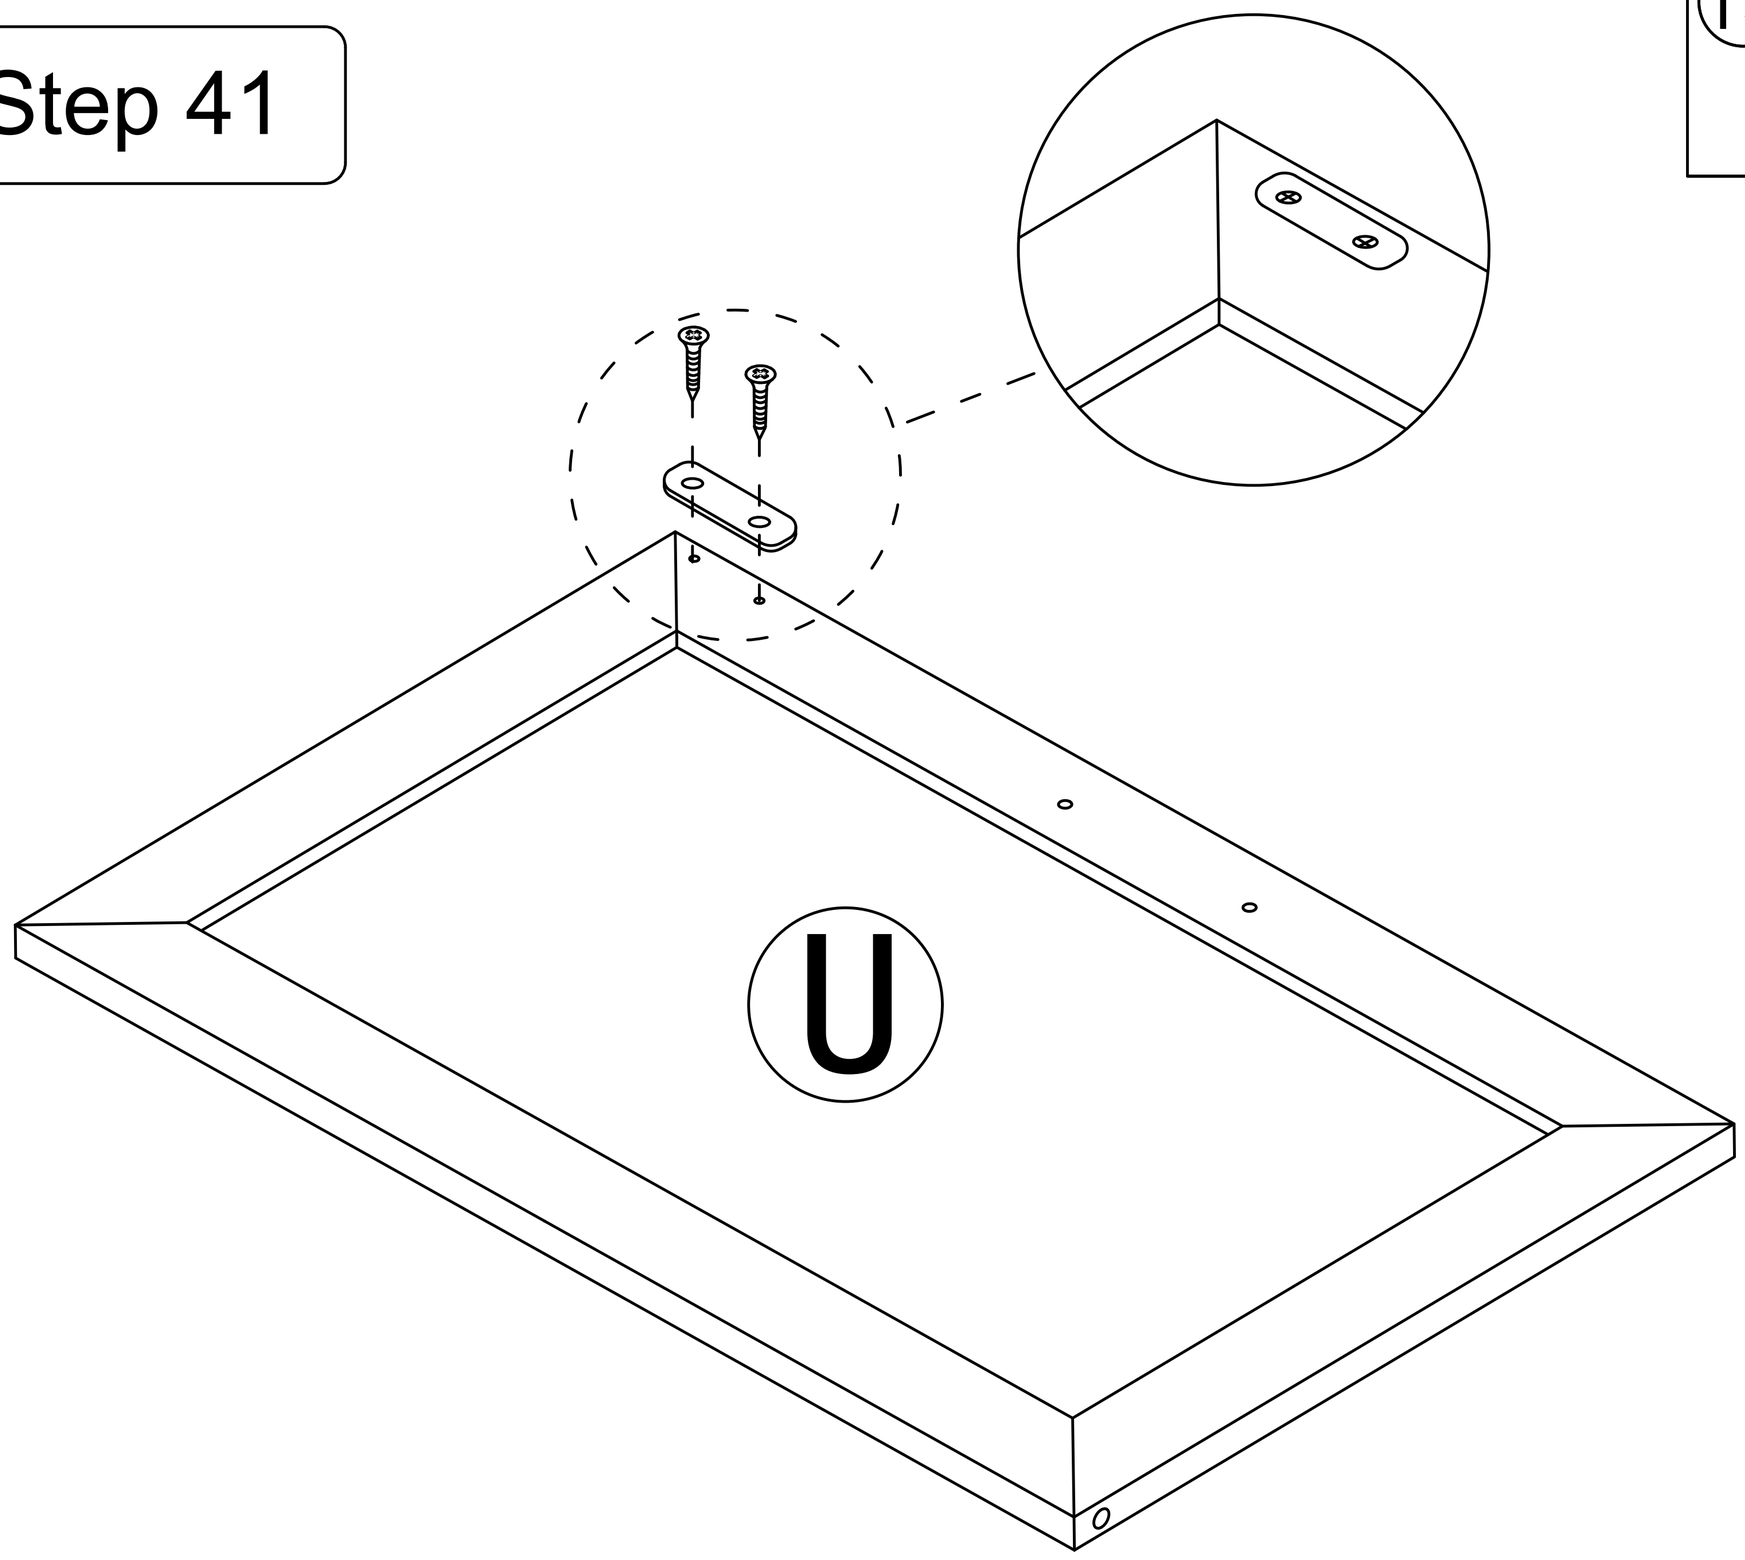



Step 42

10 x2

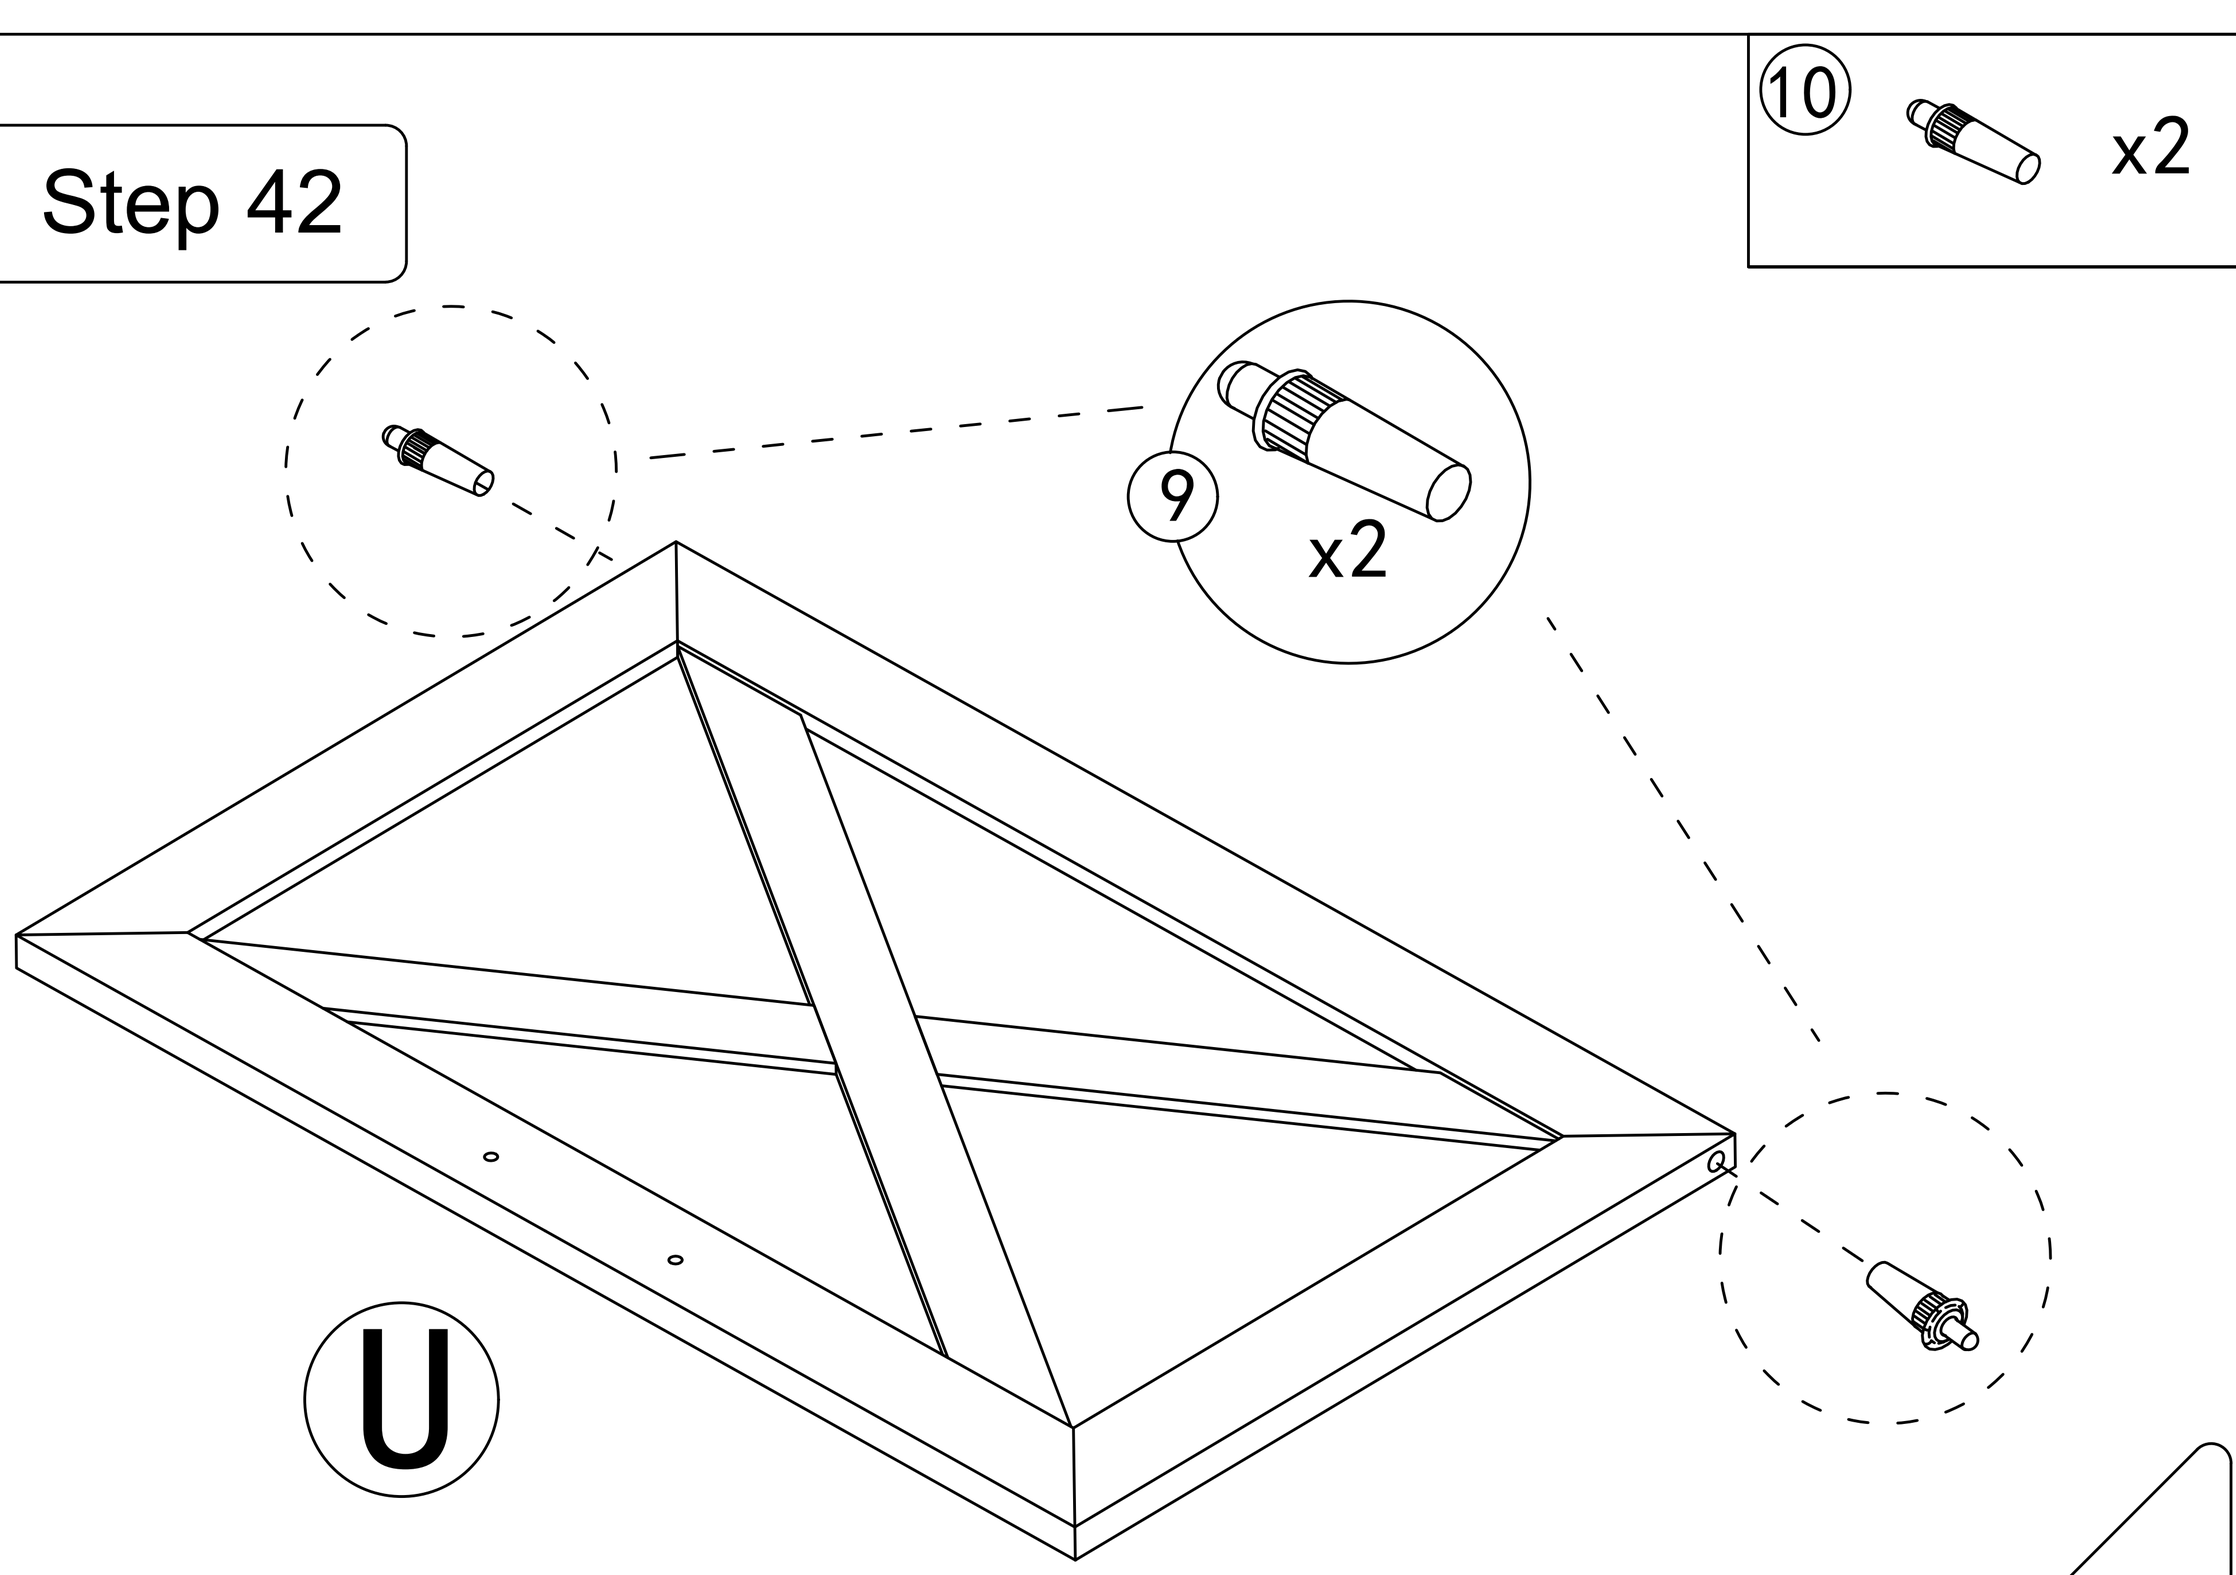


Step 43

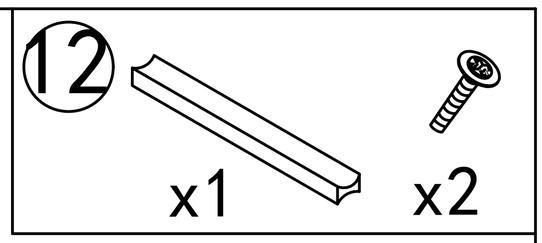

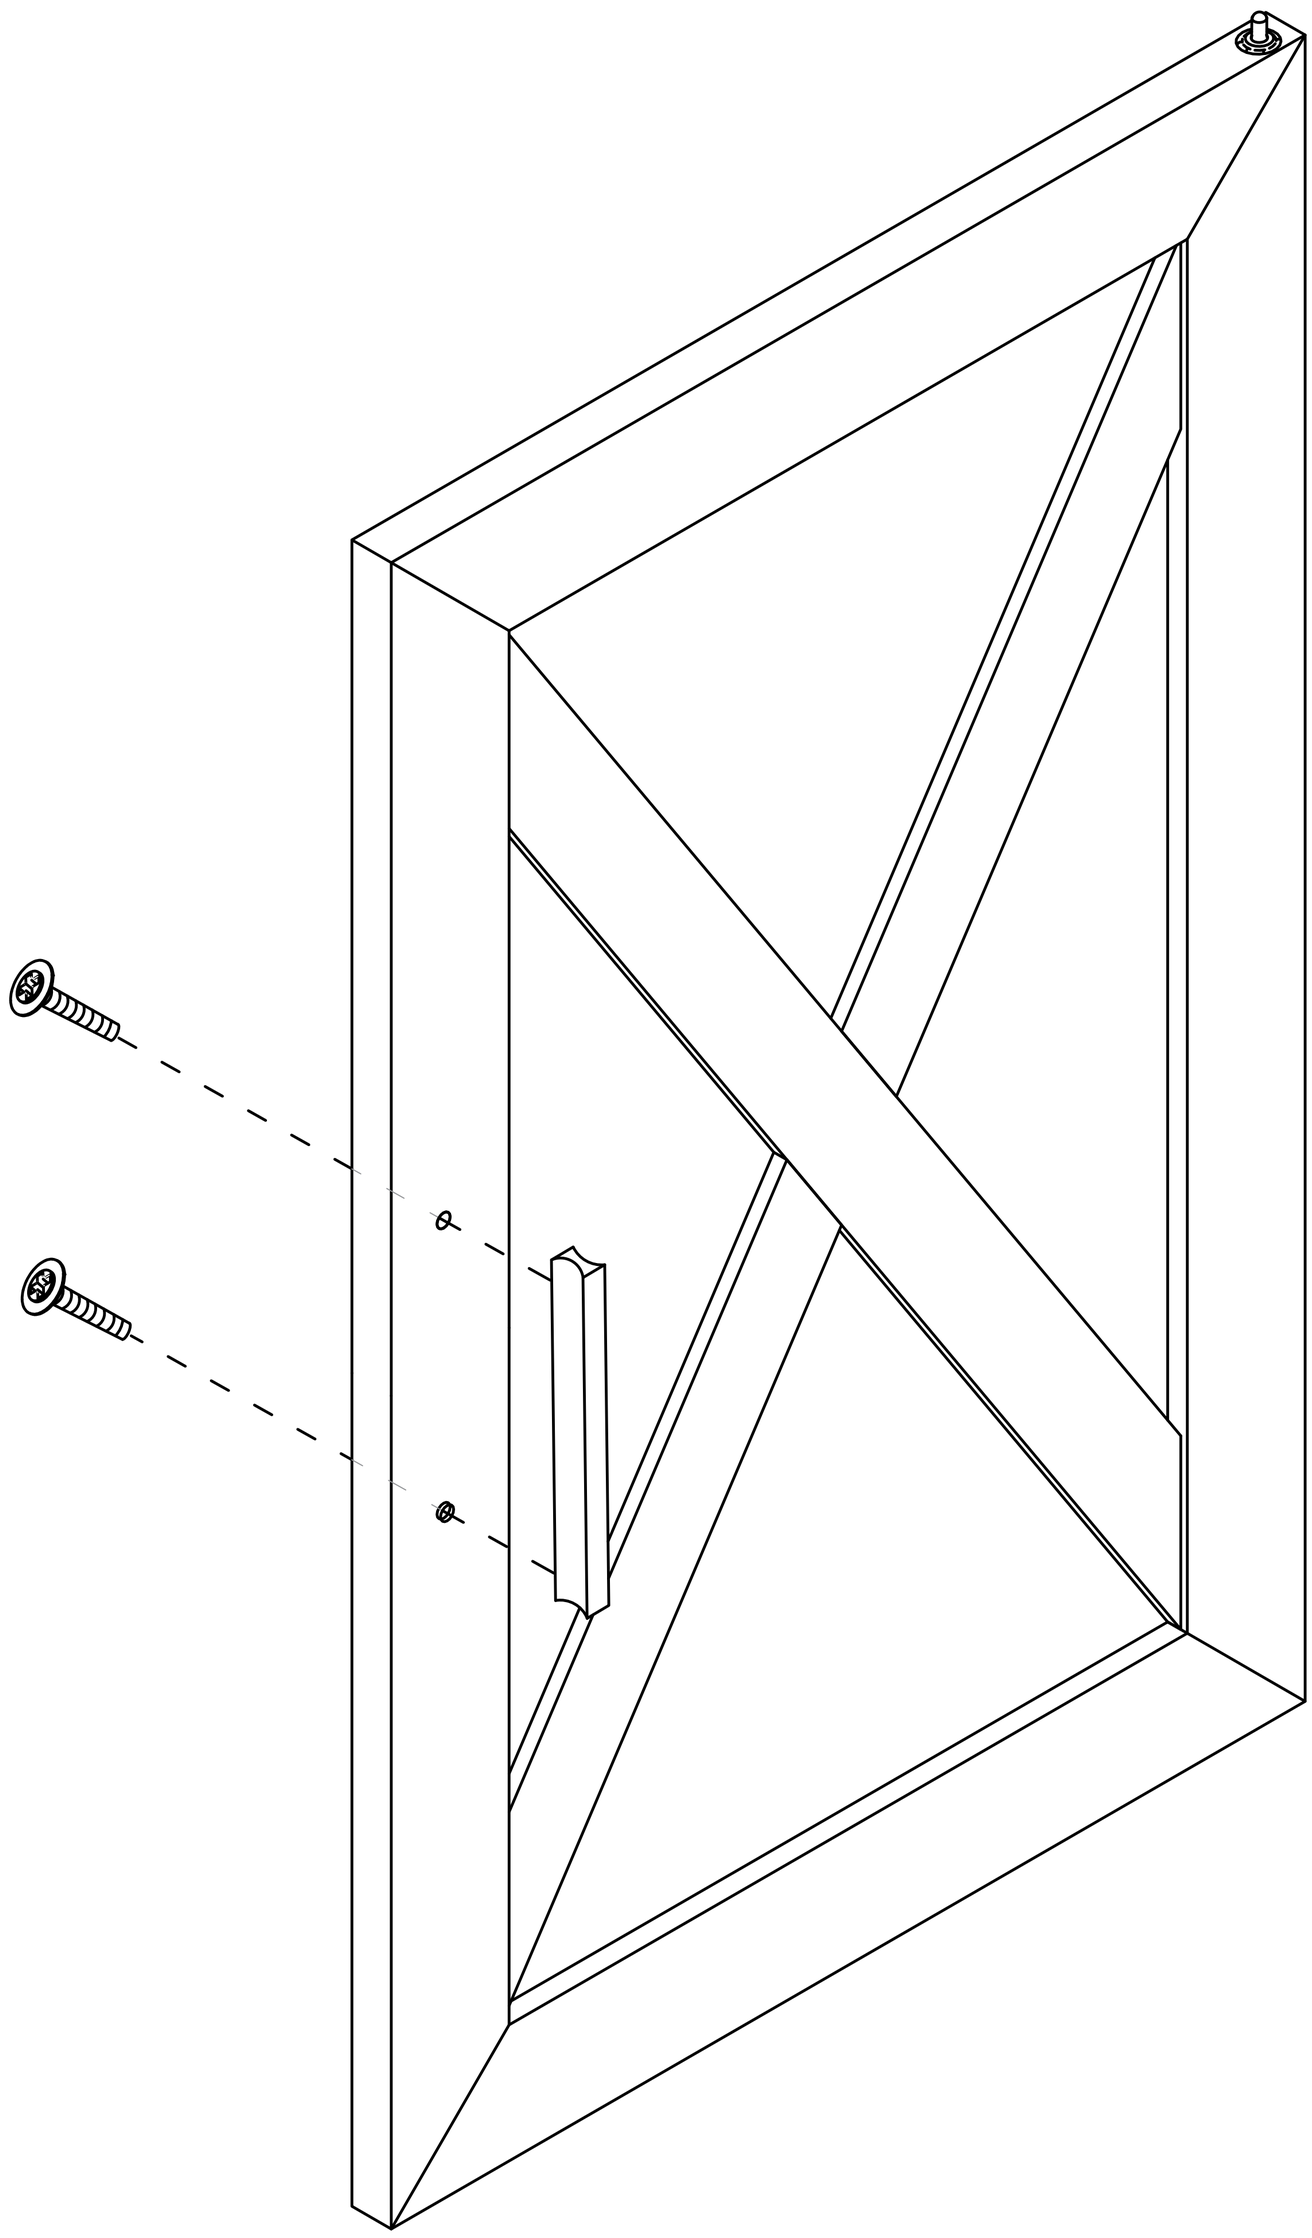


U

Step 44

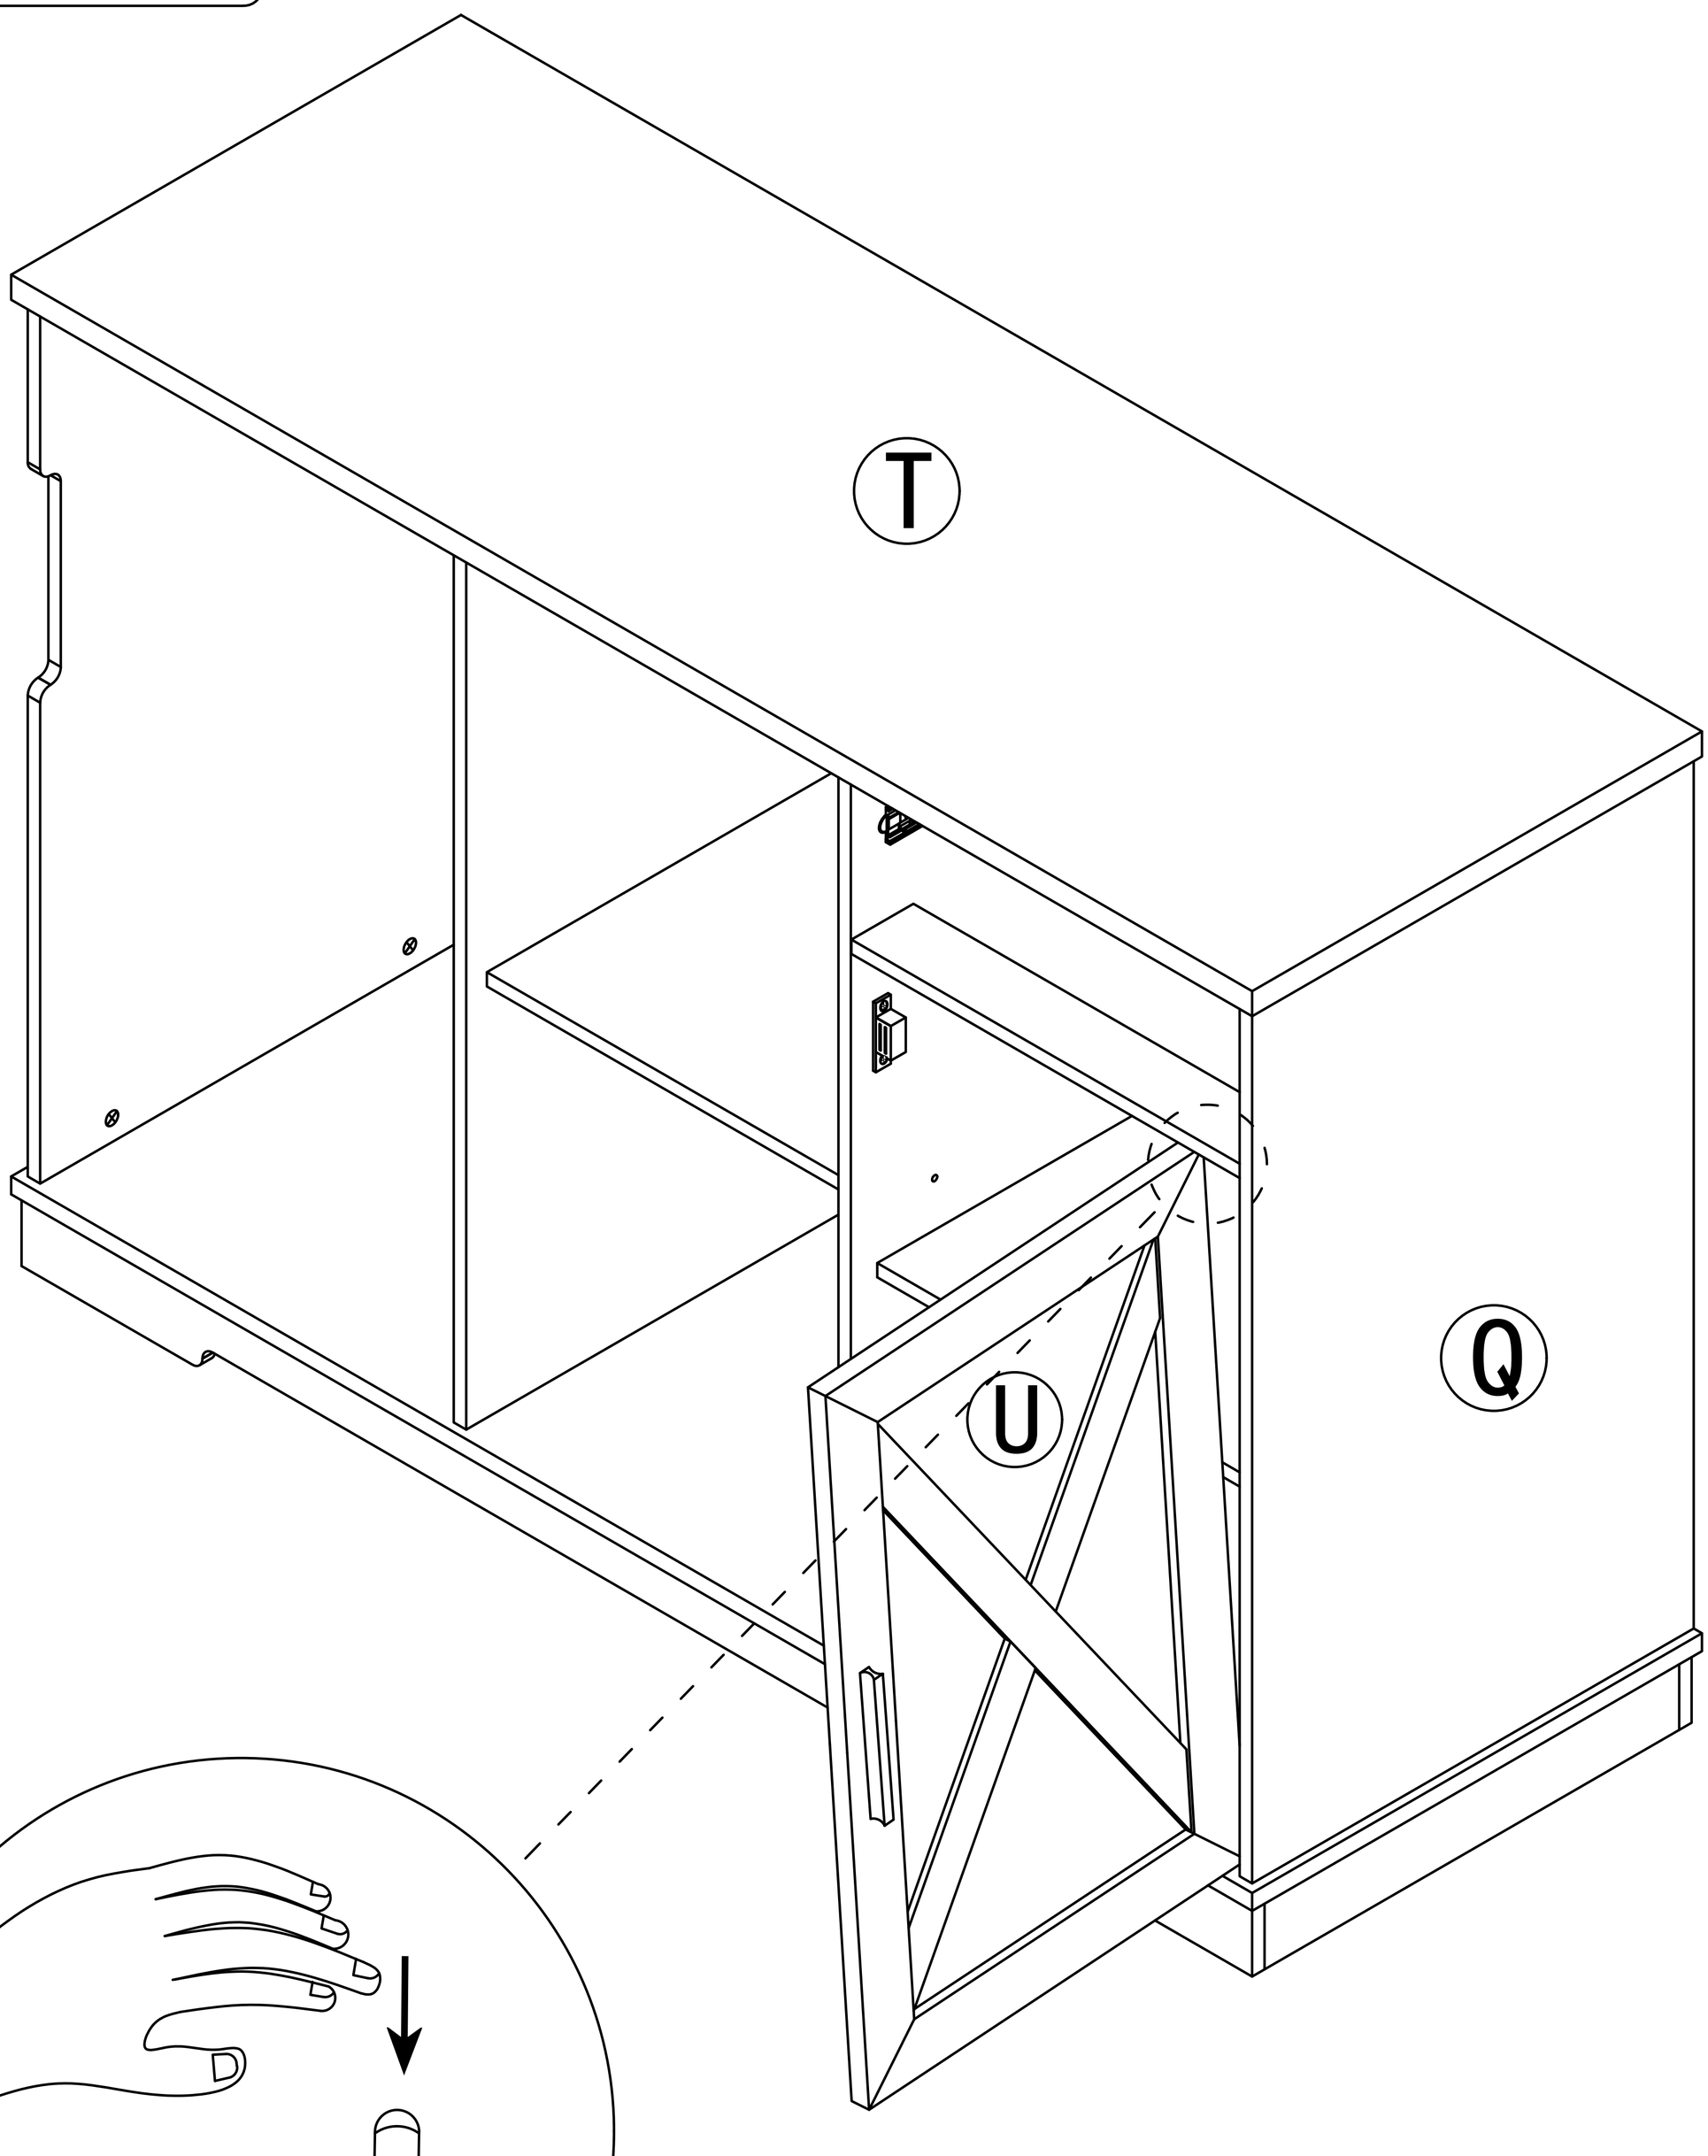



Step 45

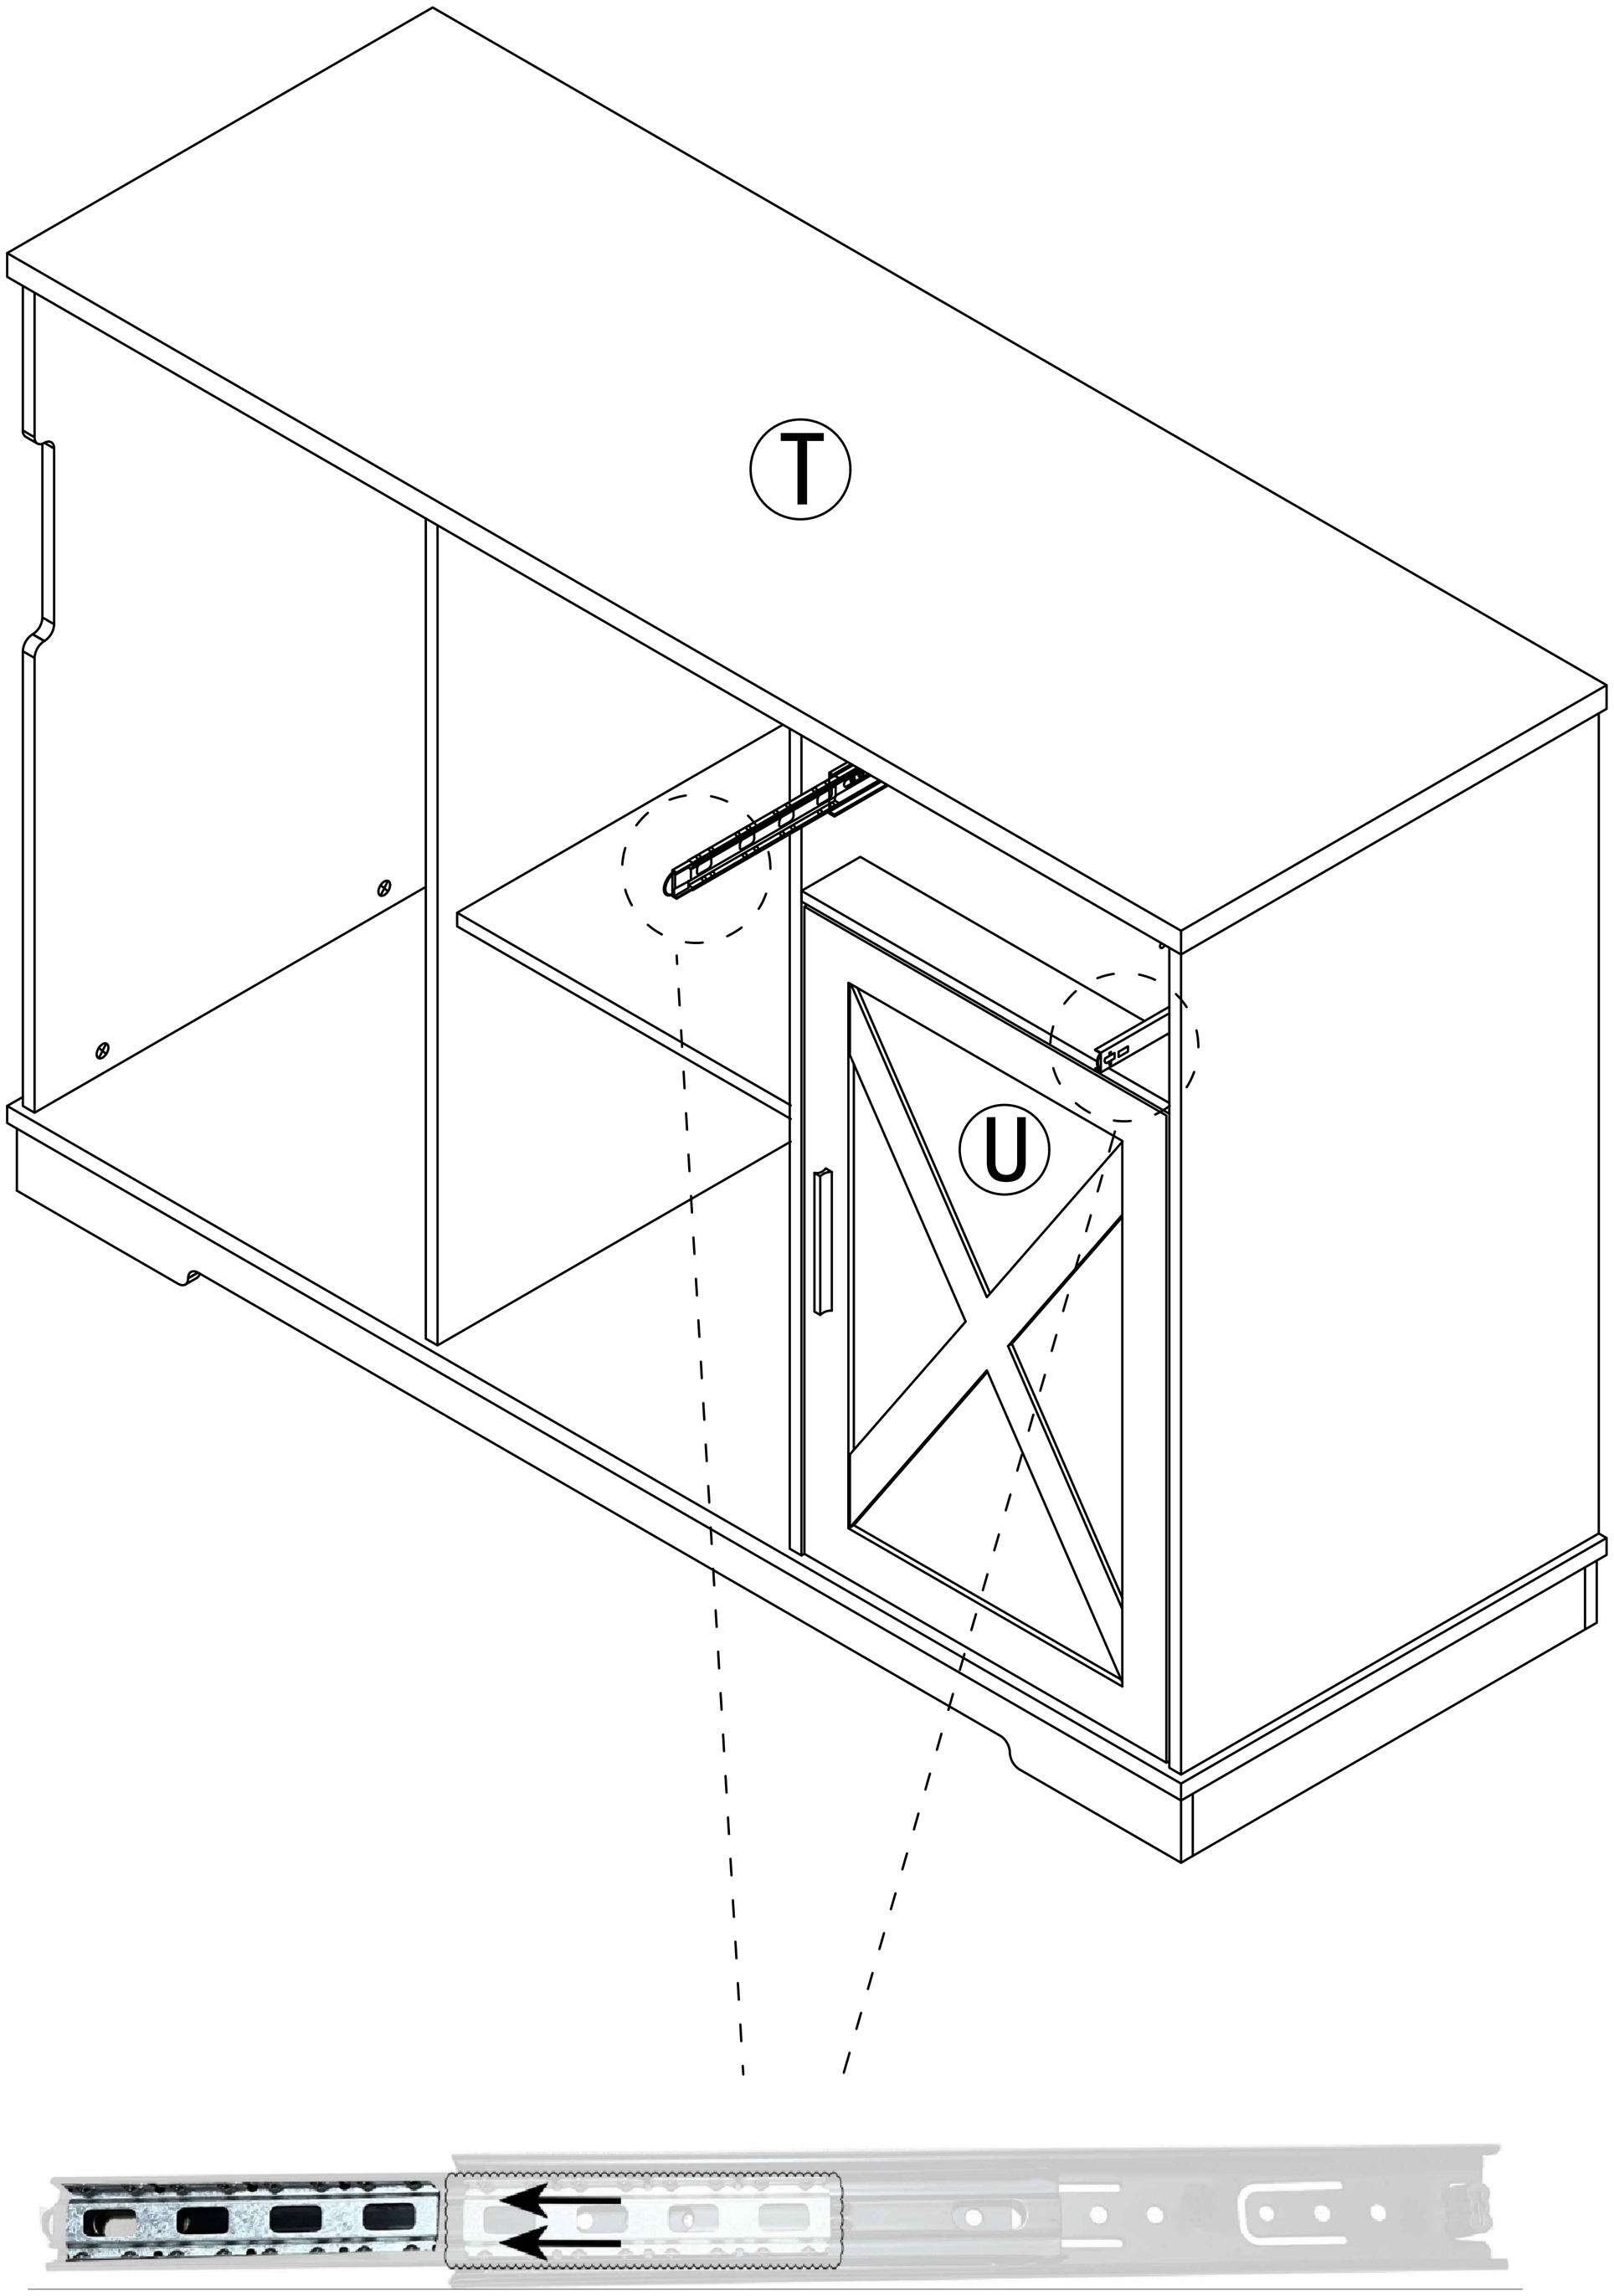

As shown，When installing the drawer,
pull the guide rail out first, Slide beads are also pulled out.


Step 46

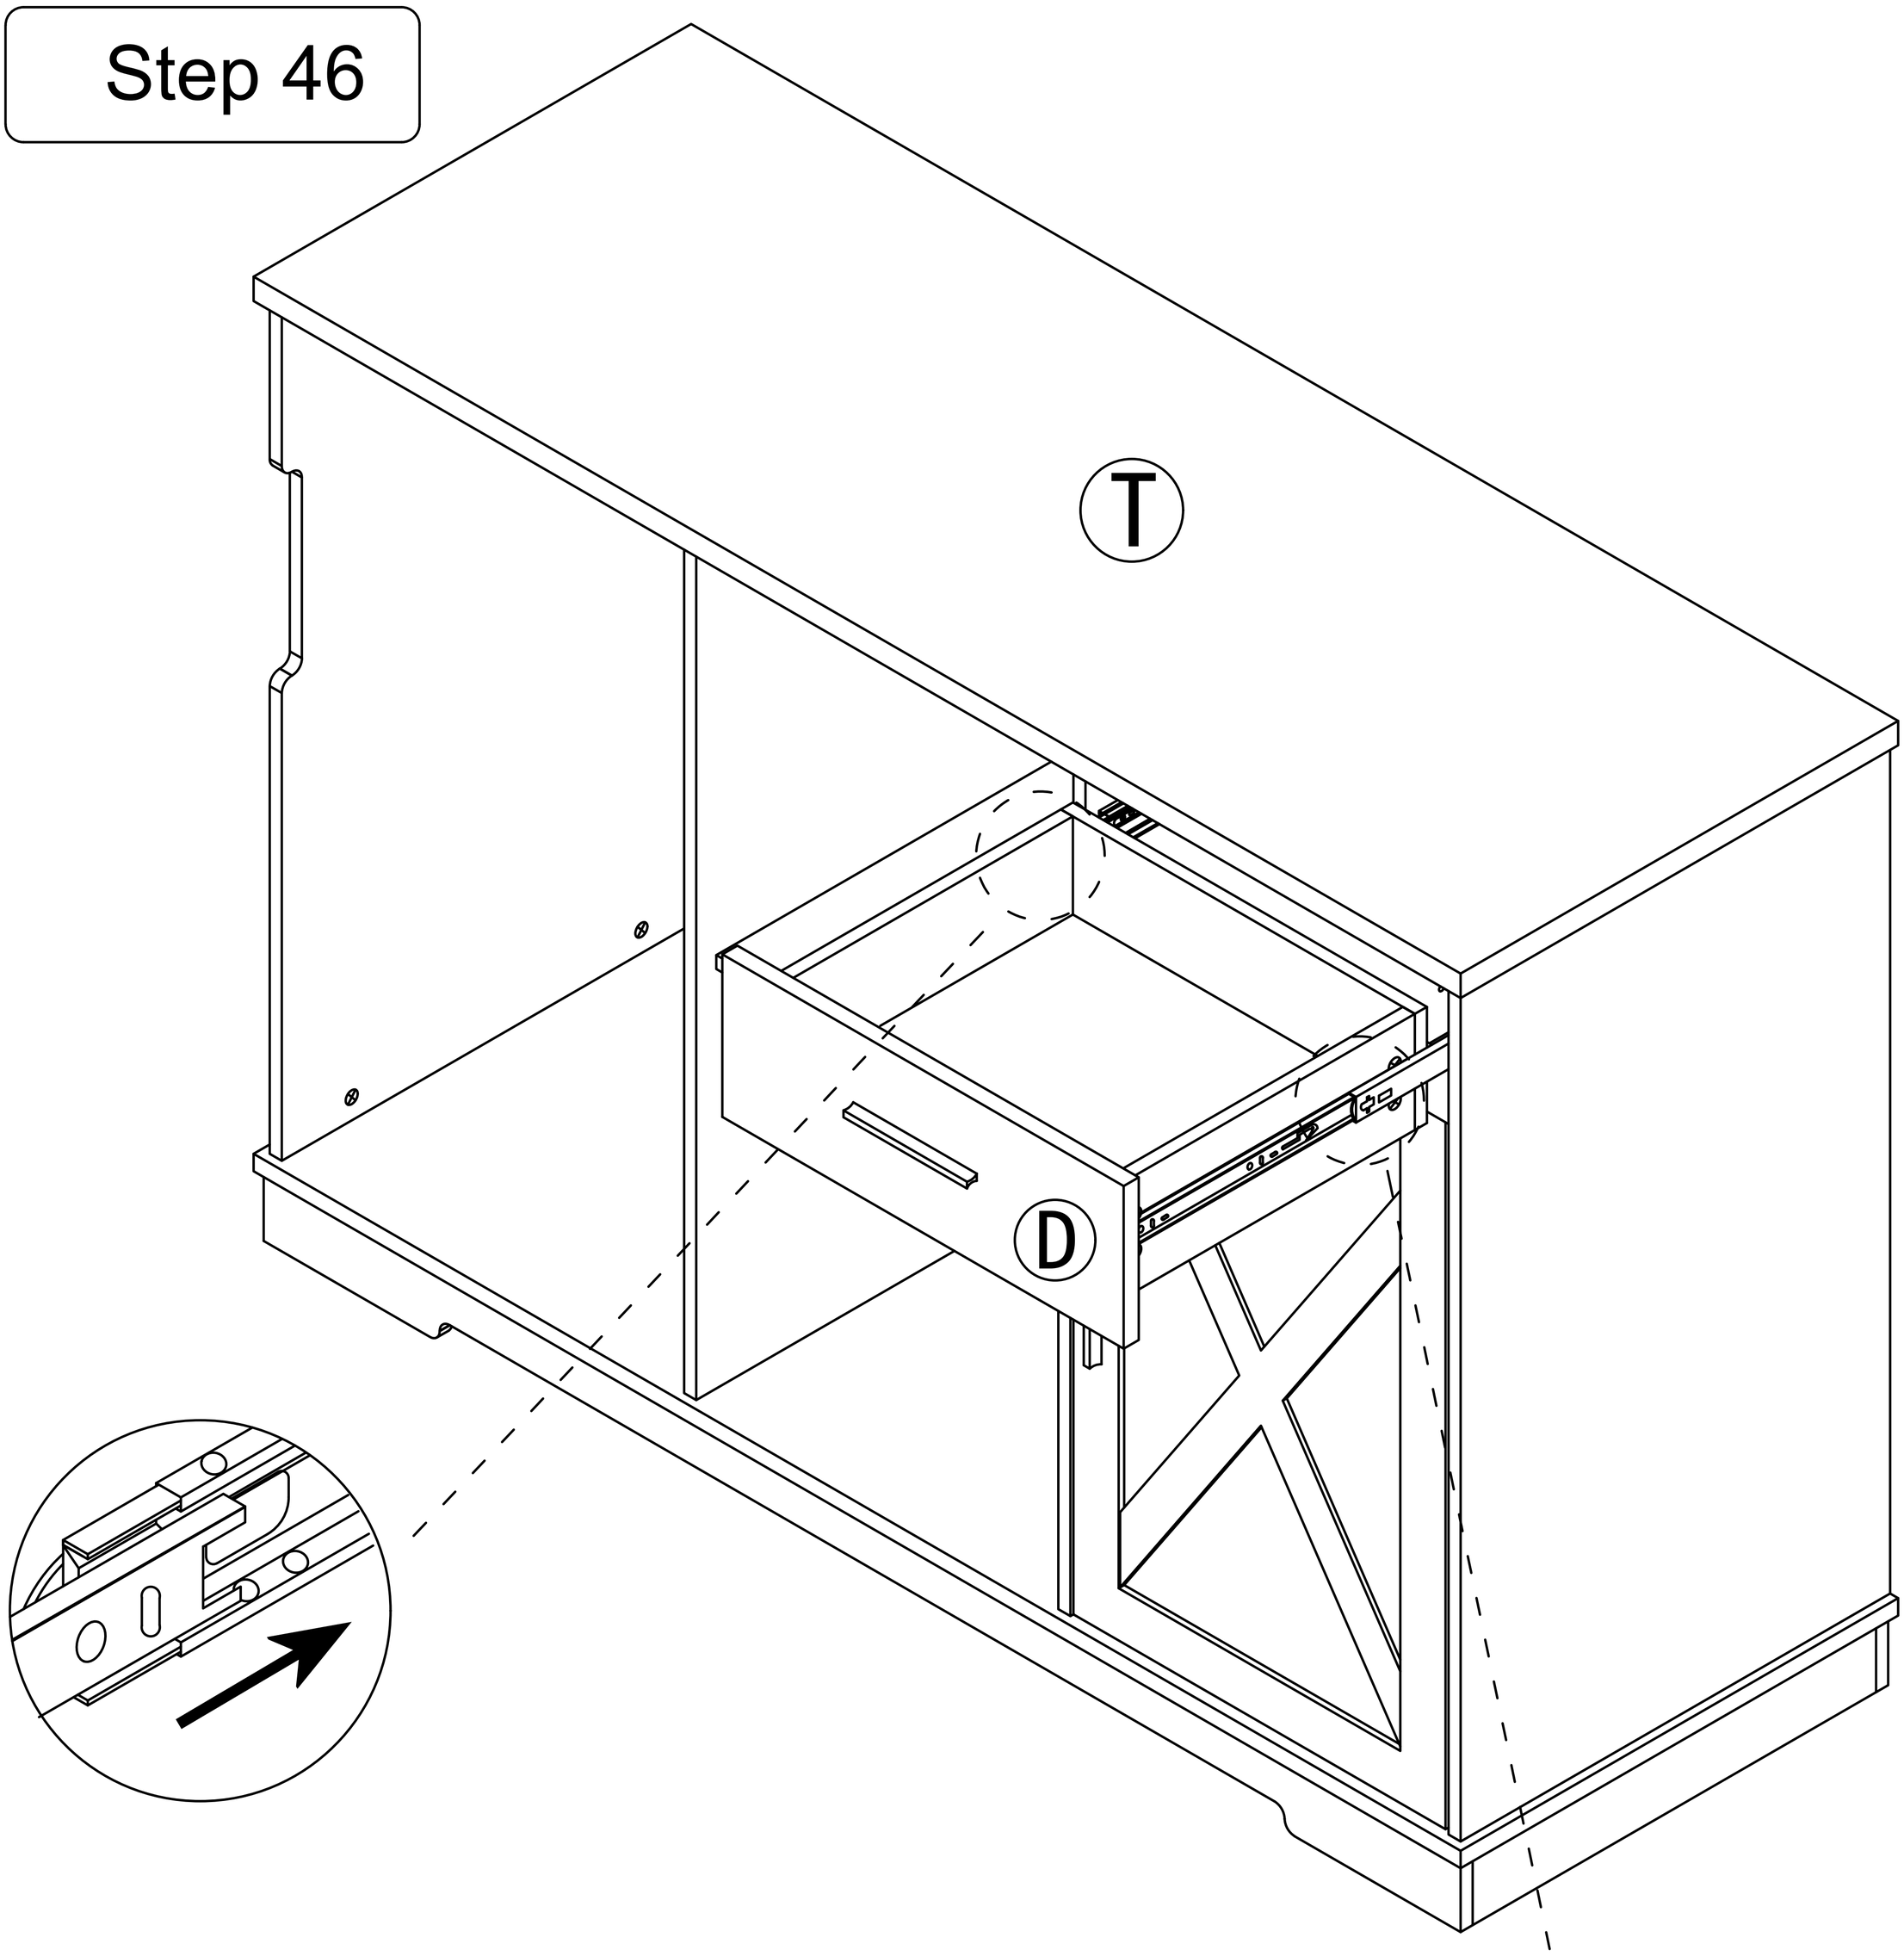

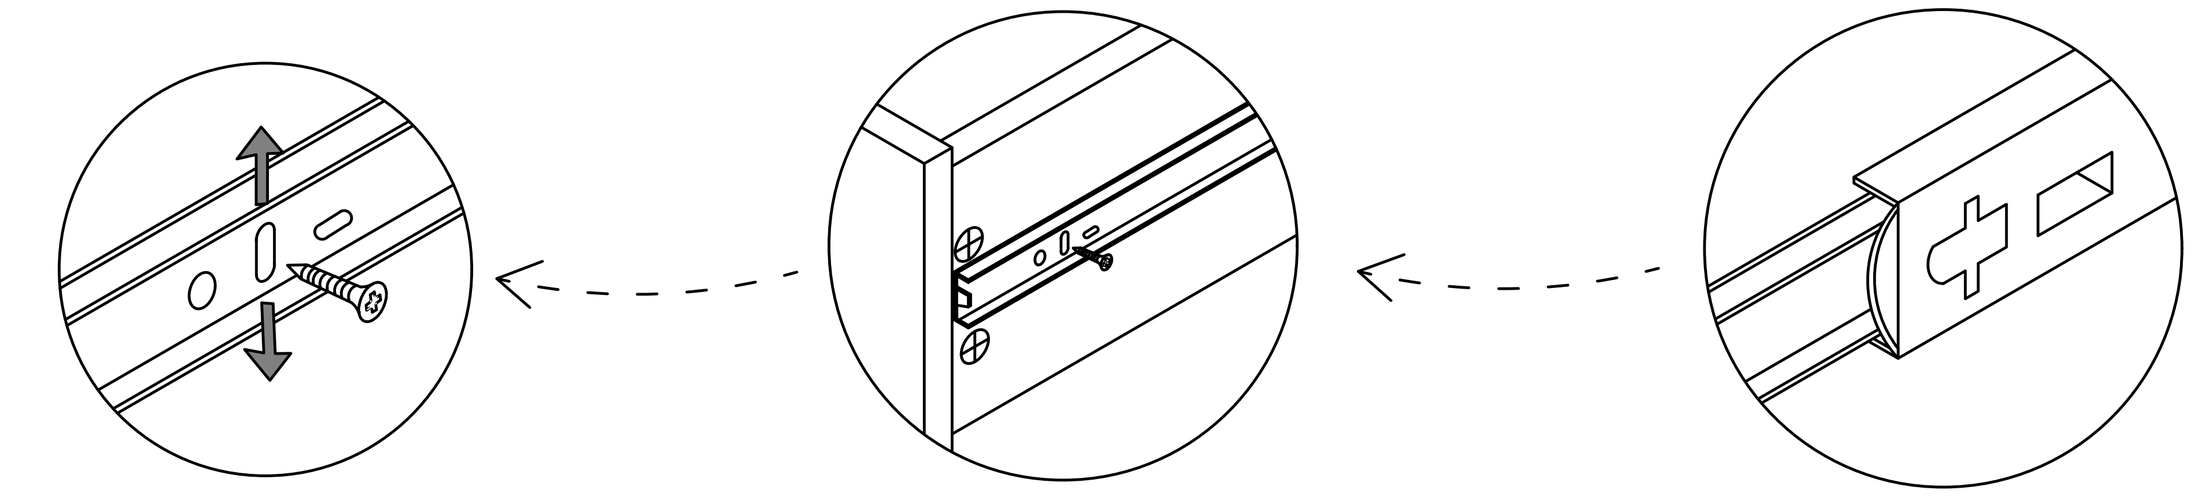


If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap


Step 47

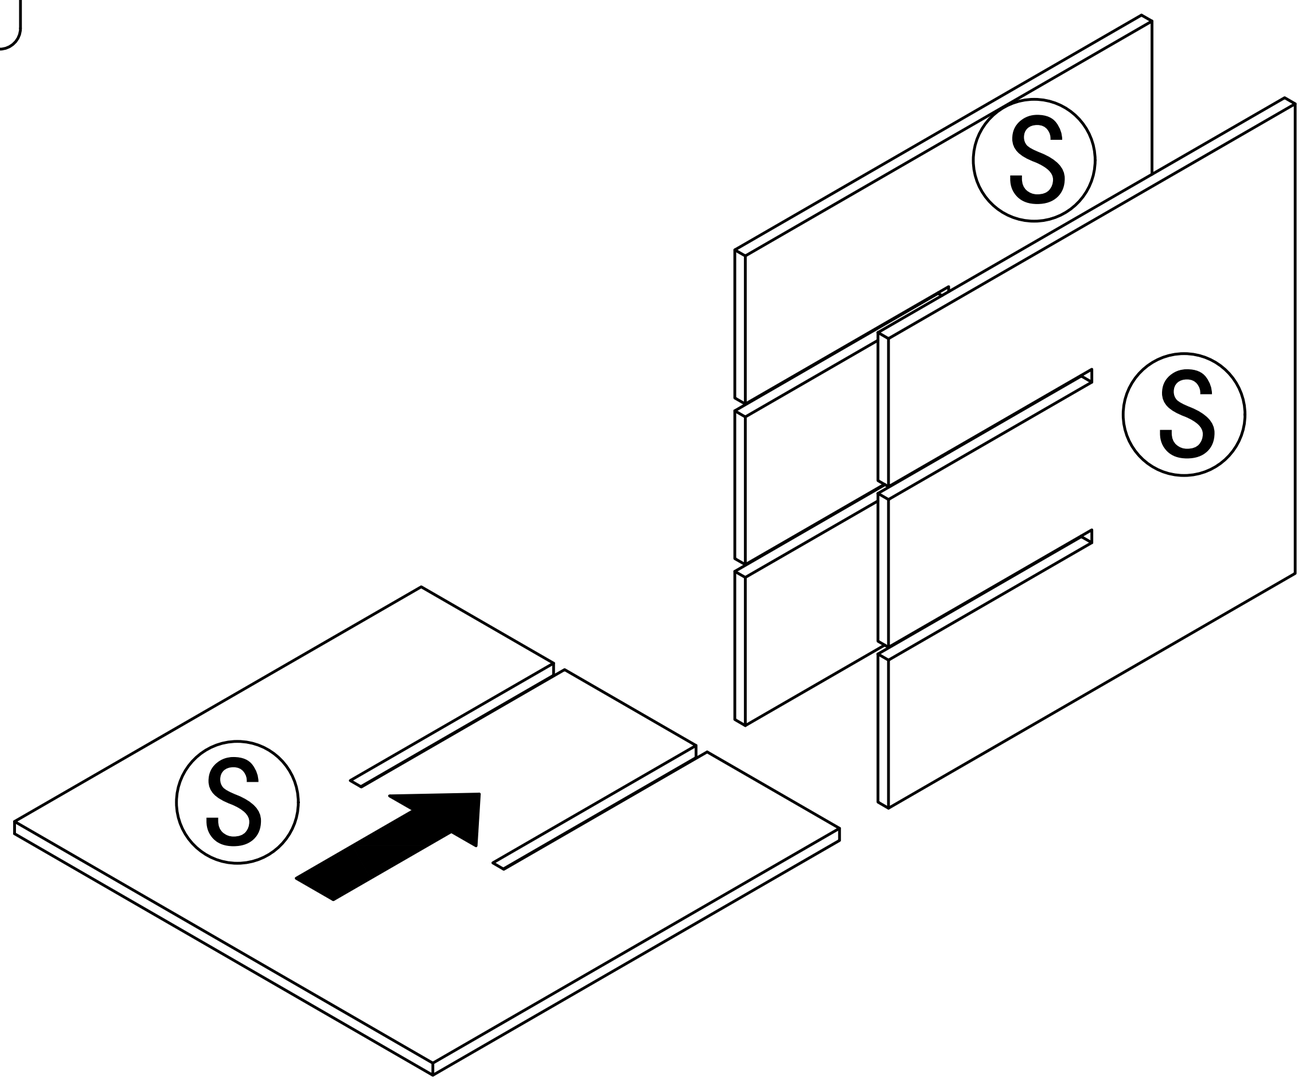

Step 48

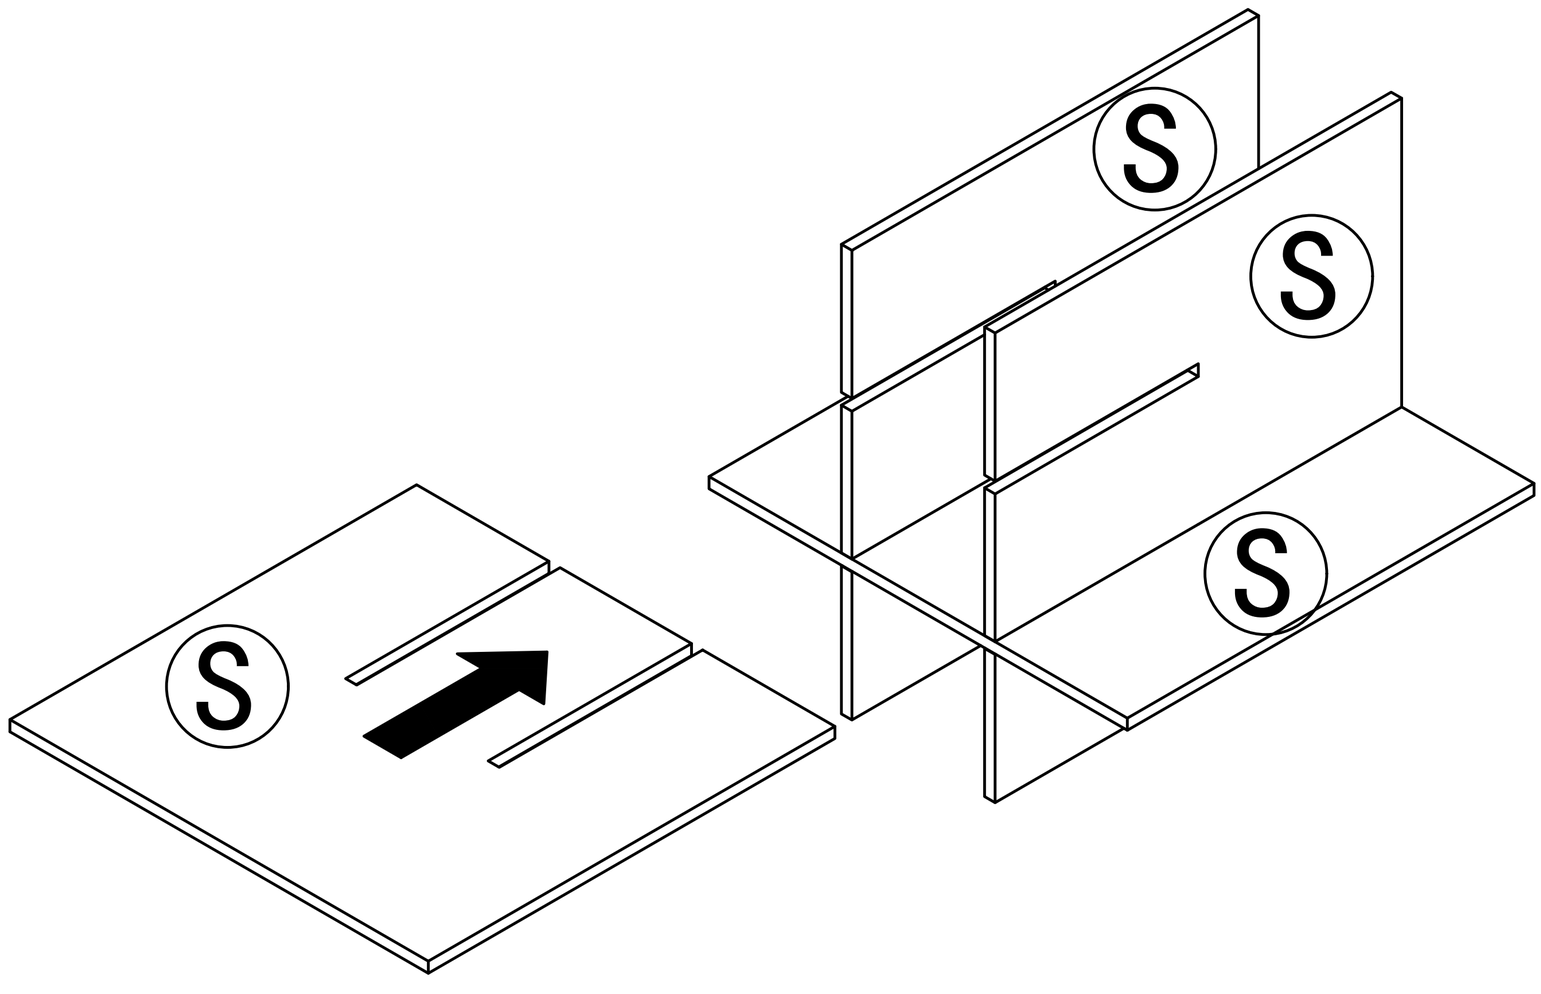

Step 49

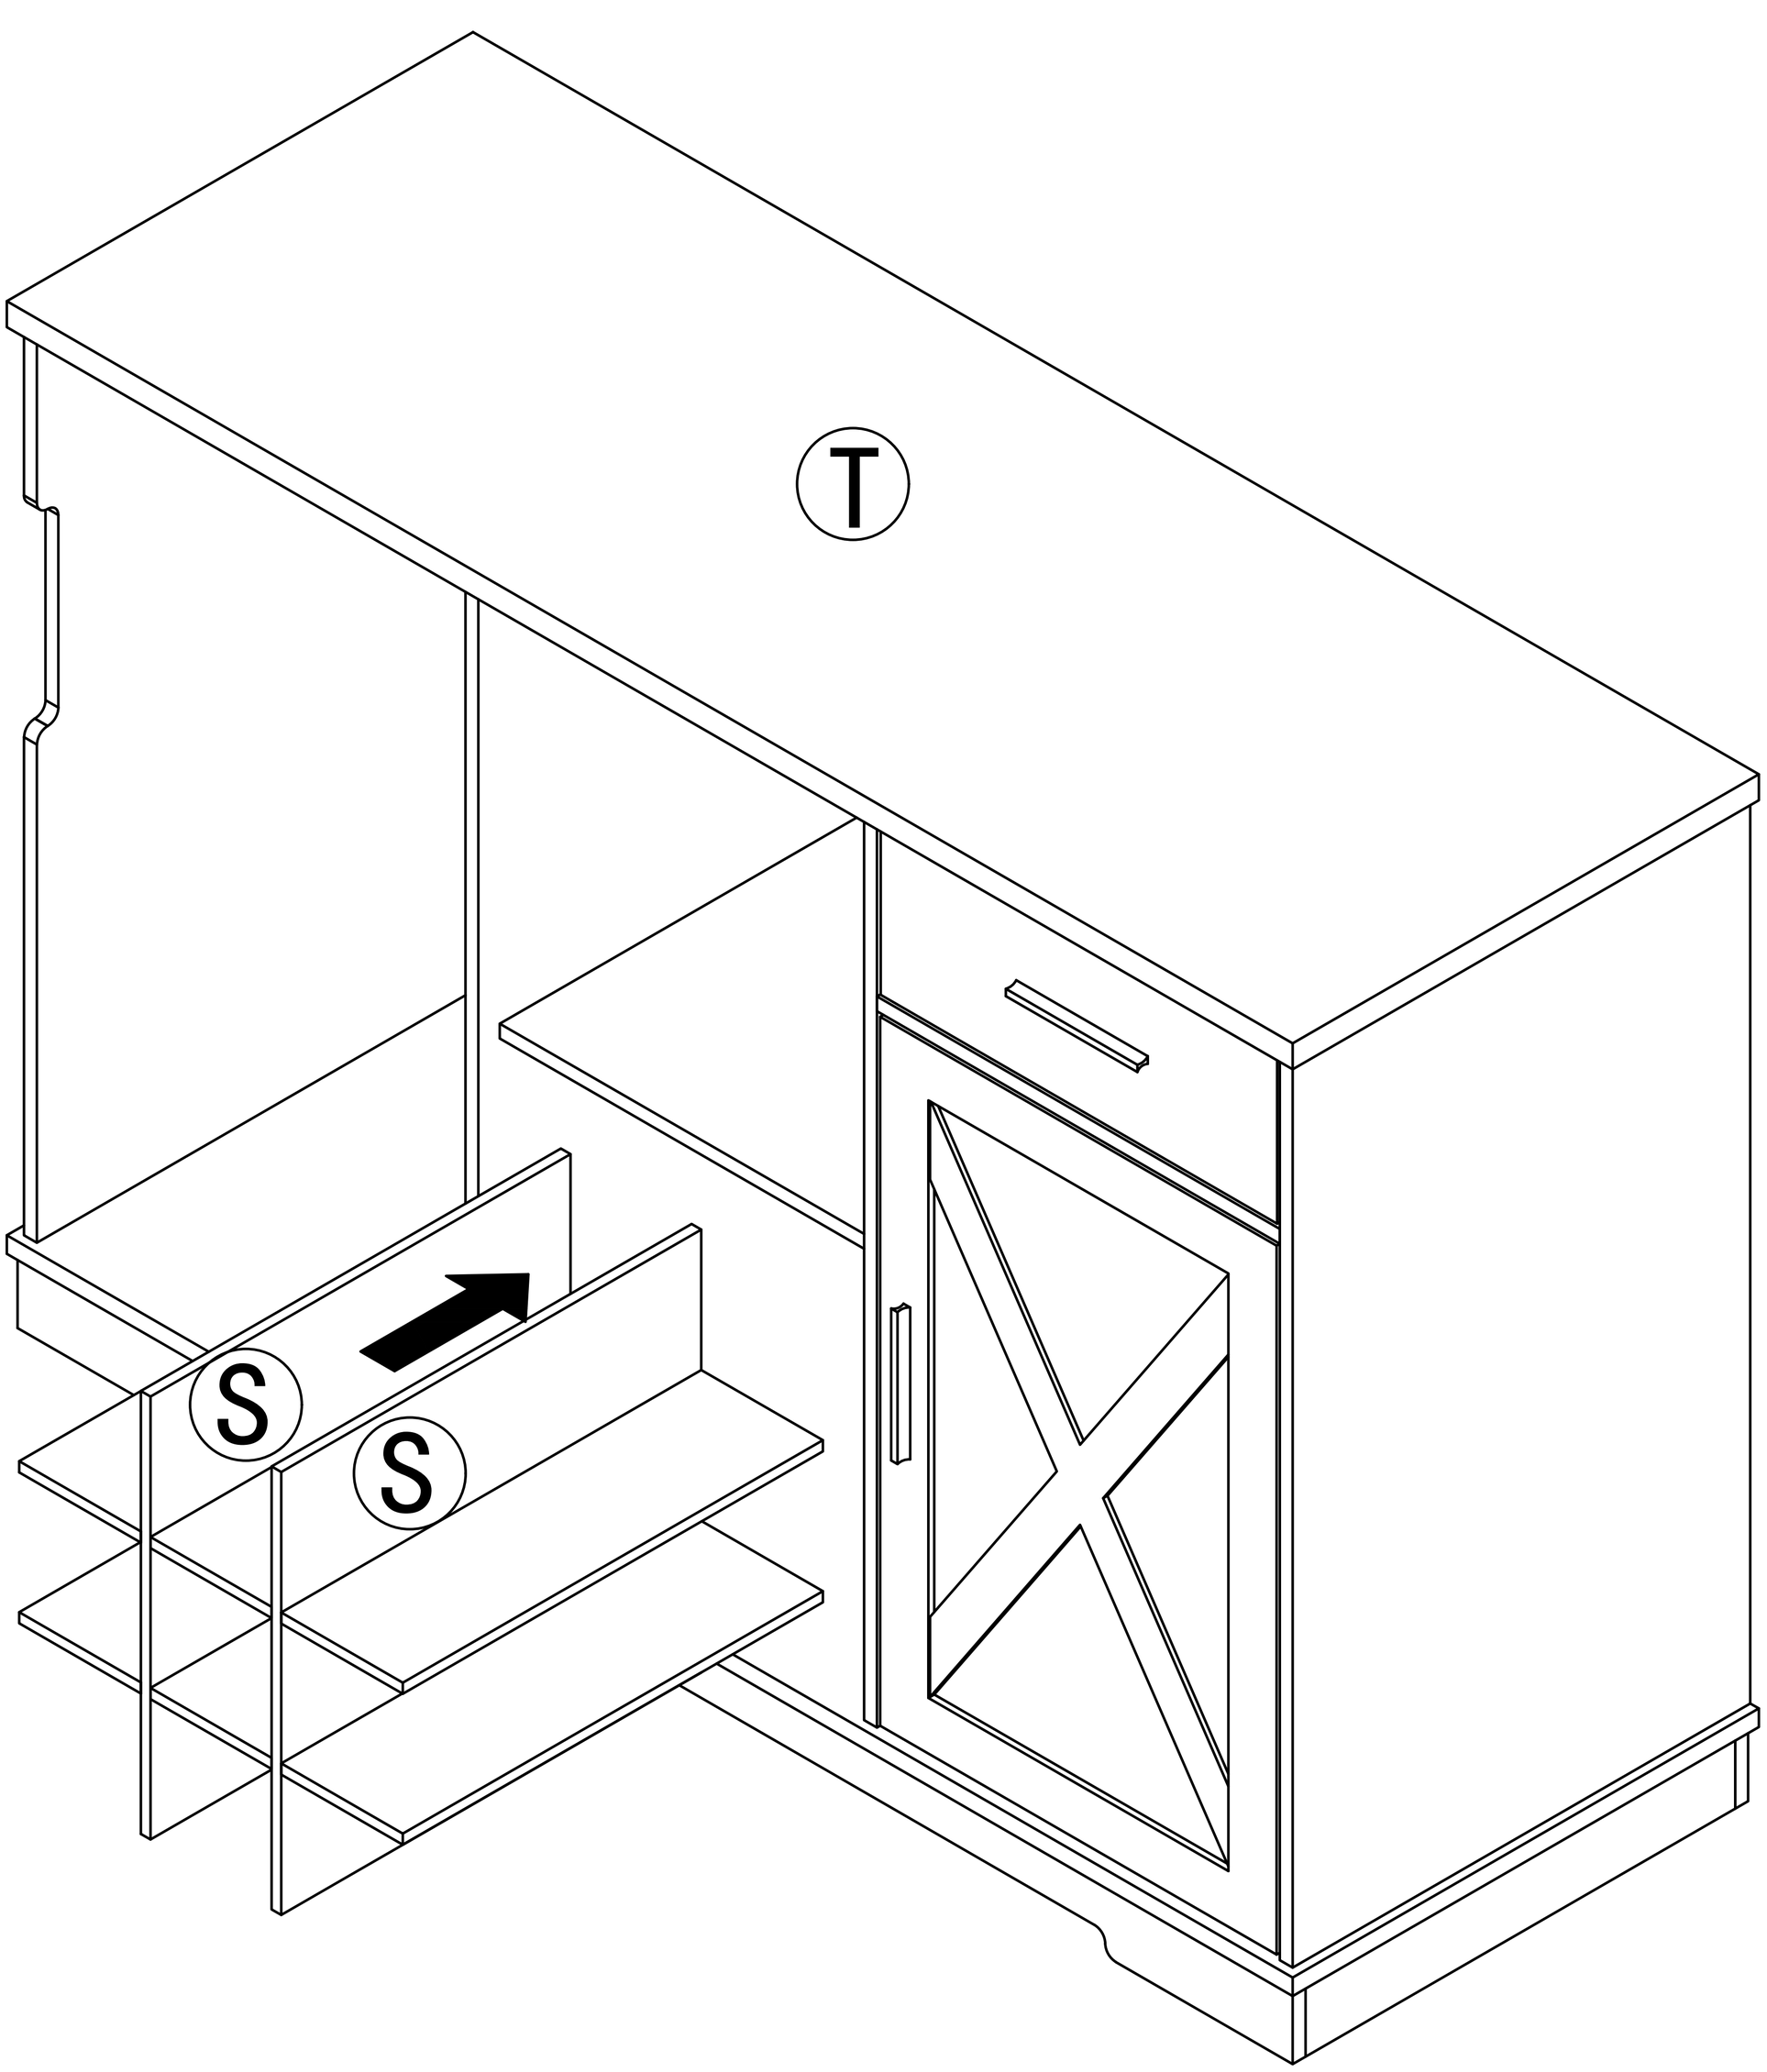

Step 50

11 x12

T

R

R

J