

HBEZON

MEDICINE CABINET

Instruction Manual

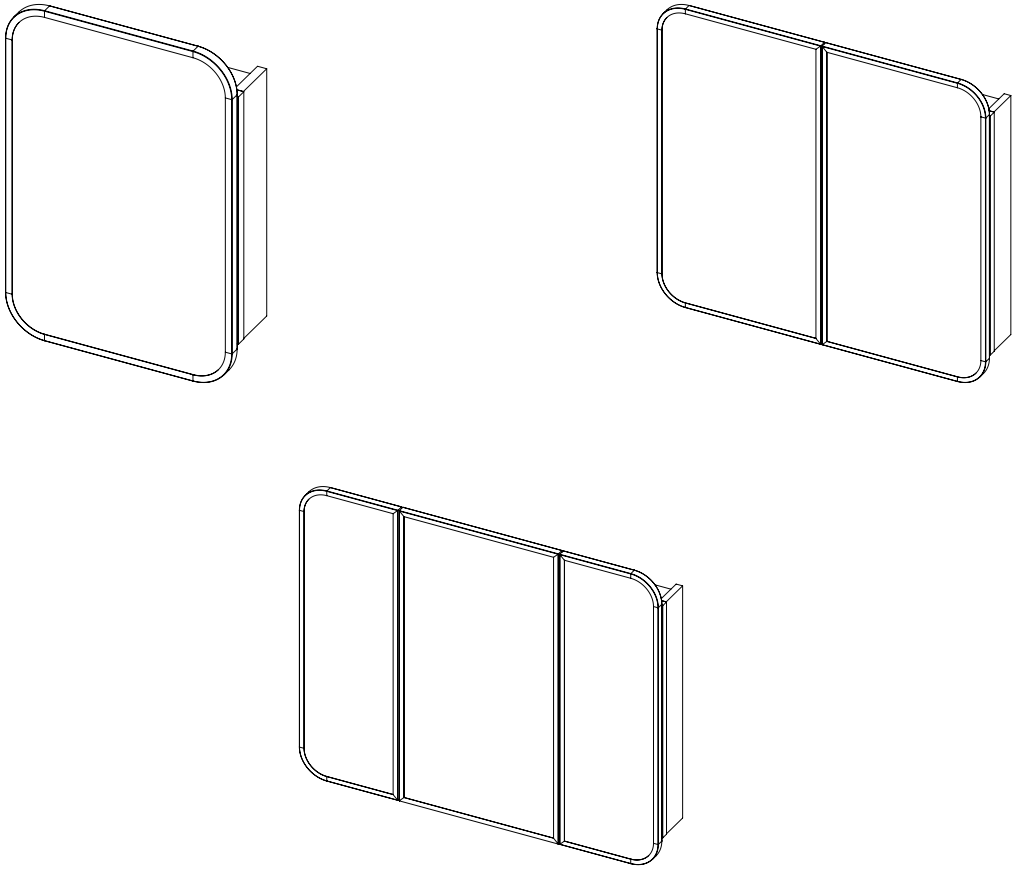

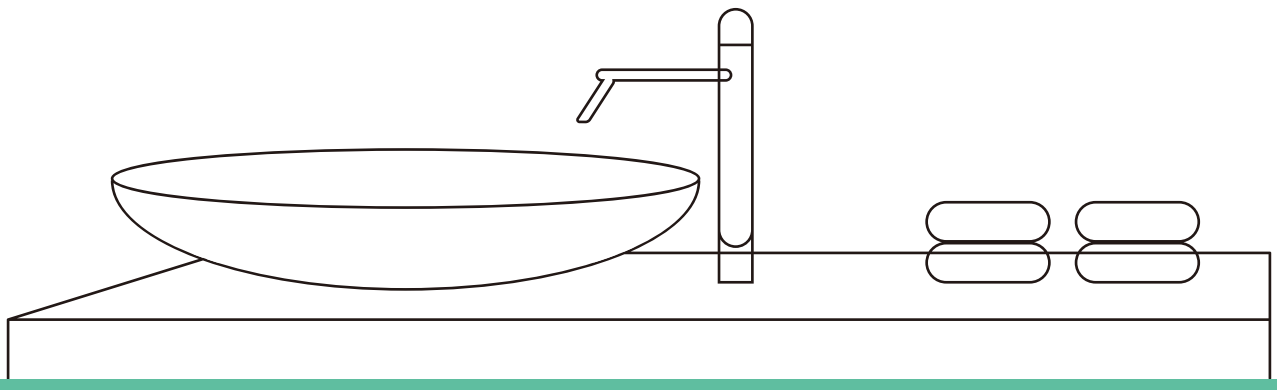

Leva

BEFORE YOU BEGIN

- Please read these instructions carefully before installation. Familiarize yourself with the necessary tools, materials, and procedures. Retain this manual for future reference.
- All information in these instructions is based upon latest product information available at the time of publication. HBEZON reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.

INSTALLATION INSTRUCTIONS

- Please read all instructions carefully and keep them for future reference.
- Do not discard any packaging materials or instructions until installation is complete and everything has been verified.

IMPORTANT

To prevent damage, do not place the cabinet directly on tile or concrete surfaces prior to installation. Use a protective layer to avoid chipping the corners.

Be sure to check for any hidden wiring or pipes before drilling guide holes to avoid potential damage.

MAINTENANCE




Wipe clean with a soft damp cloth. Apply glass cleaner to cloth and do not apply directly to mirror.

Please avoid harsh, corrosive and abrasive cleaners.

INSTALLATION

Please refer to below surface mount or recessed mount method.

PACKING LIST

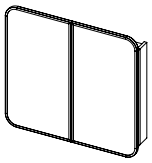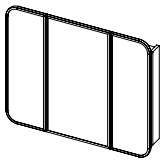No. \ Size				
		16" x 24" / 20" x 26" 24" x 30"	32" x 30"	36" x 30"
(1)	 Long Screw Ø4x45	5 Pcs	5 Pcs	5 Pcs
(2)	 Anchor Ø6x35	5 Pcs	5 Pcs	5 Pcs
(3)	 Door Bumper	3 Pcs	5 Pcs	7 Pcs
(4)	 Hinge Cover	2 Pcs	4 Pcs	6 Pcs


● Carefully review all parts and read the installation instructions before you start. If parts are missing, please contact us.


SPECIFICATIONS


Dimension (Inch)	Dimension (Millimeter)	Types of Medicine Cabinet
16 x 24 x 4 3/4	406 x 610 x 120	Single-door
20 x 26 x 4 3/4	508 x 660 x 120	Single-door
24 x 30 x 4 3/4	610 x 762 x 120	Single-door
32 x 30 x 4 3/4	813 x 762 x 120	Double-door
36 x 30 x 4 3/4	914 x 762 x 120	Triple-door


INSTALLATION

Installation Tools (Tools Not Included)

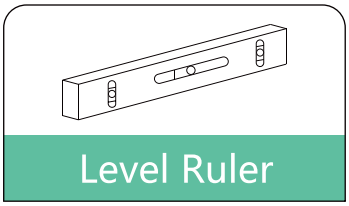

Level Ruler

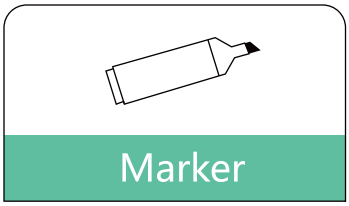
Marker

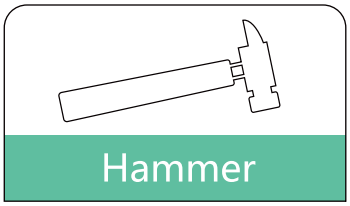

Hammer

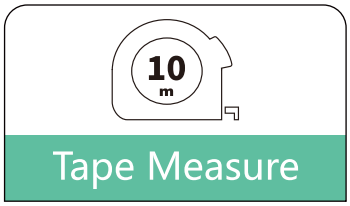

Tape Measure

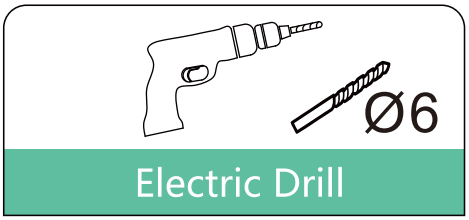

Electric Drill

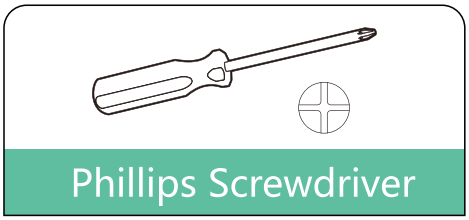

Phillips Screwdriver


Safety Goggles

SURFACE MOUNT

Step 1




Refer to the hole spacing diagram below or use the back mounting holes on the cabinet body as a guide. Mark the corresponding positions on the wall, then drill holes using an electric drill.

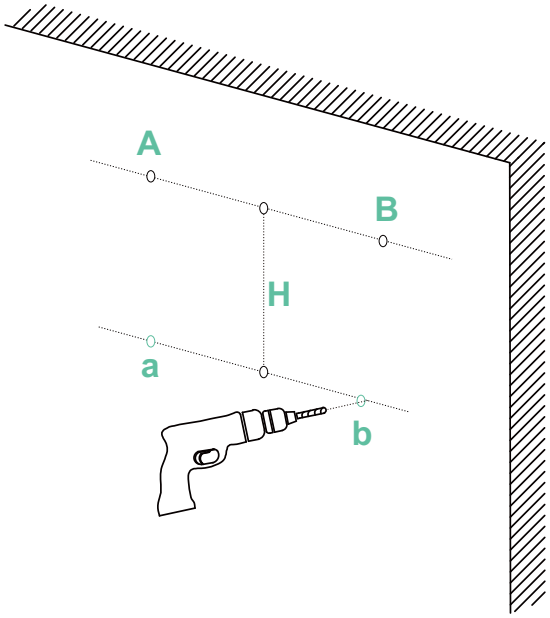

Required Tools



Electirc drill

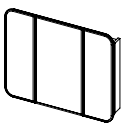Distance \ Product size					
	16" x 24"	20" x 26"	24" x 30"	32" x 30"	36" x 30"
A→B	10 1/2"	14 1/2"	18 1/2"	26 1/2"	30 1/2"
Interval H	12 1/2"	14 1/2"	18 1/2"	18 1/2"	18 1/2"
a→b	10 1/2"	14 1/2"	18 1/2"	26 1/2"	30 1/2"


SURFACE MOUNT

Step 2

Place anchor(2) into the drilled holes and fix the cabinet to the wall with long screw (1).

The cabinet is now ready for regular use.


(1)		Long Screw Ø4x45
(2)		Anchor Ø6x35

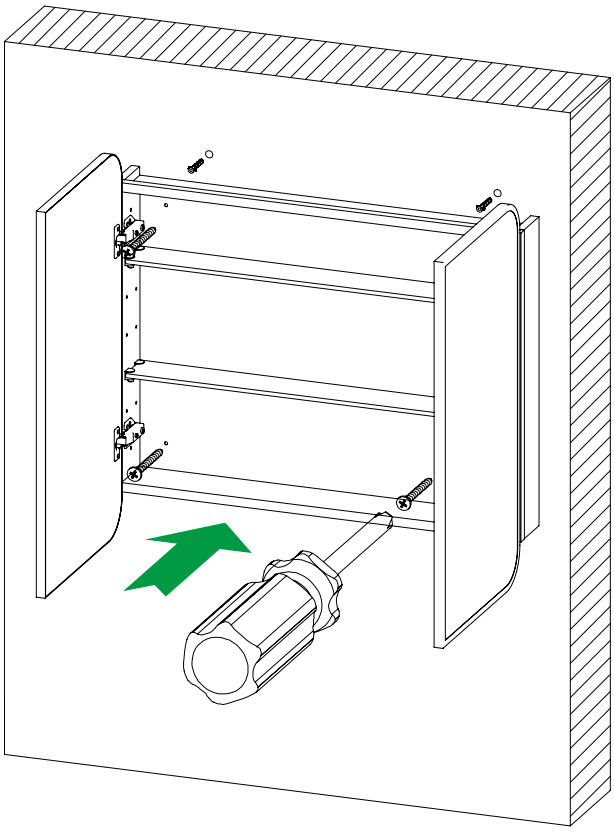



Step 3

Snap hinge cover(4) onto each hinge, ensuring they are fully secured.

Stick the door bumper(3) onto the inside of the cabinet door(s).

(4)		Hinge Cover
(3)		Door Bumper

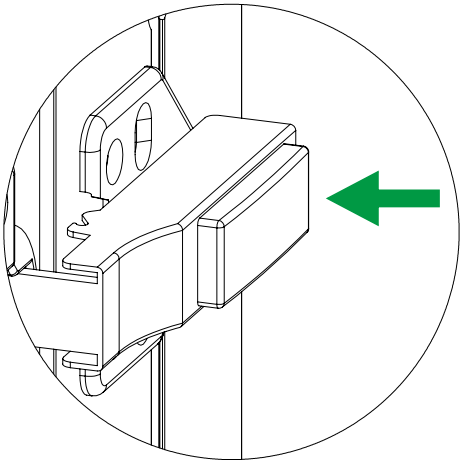

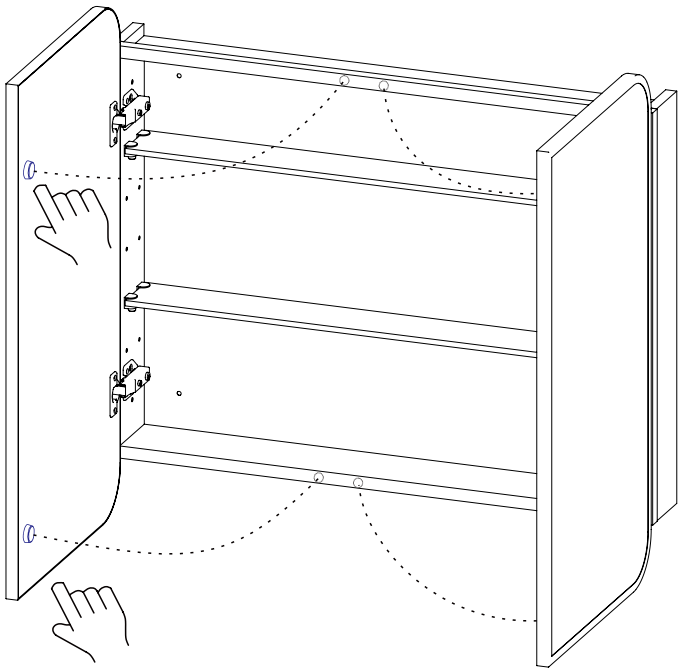


RECESSED MOUNT

Step 1


For recessed installation, cut an opening according to the dimensions shown in the diagram below.

Dimension / Size	W	H	D
16" x 24"	15 1/8"	16 11/16"	3 3/8"
20" x 26"	19 1/8"	18 11/16"	3 3/8"
24" x 30"	23 1/8"	22 11/16"	3 3/8"
32" x 30"	31 1/8"	22 11/16"	3 3/8"
36" x 30"	35 1/8"	22 11/16"	3 3/8"

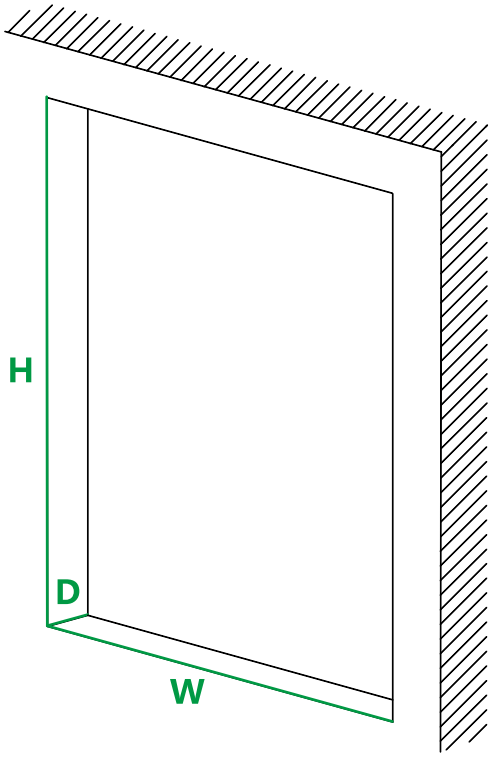

Step 2

Loosen screws on both sides and remove the side panel.

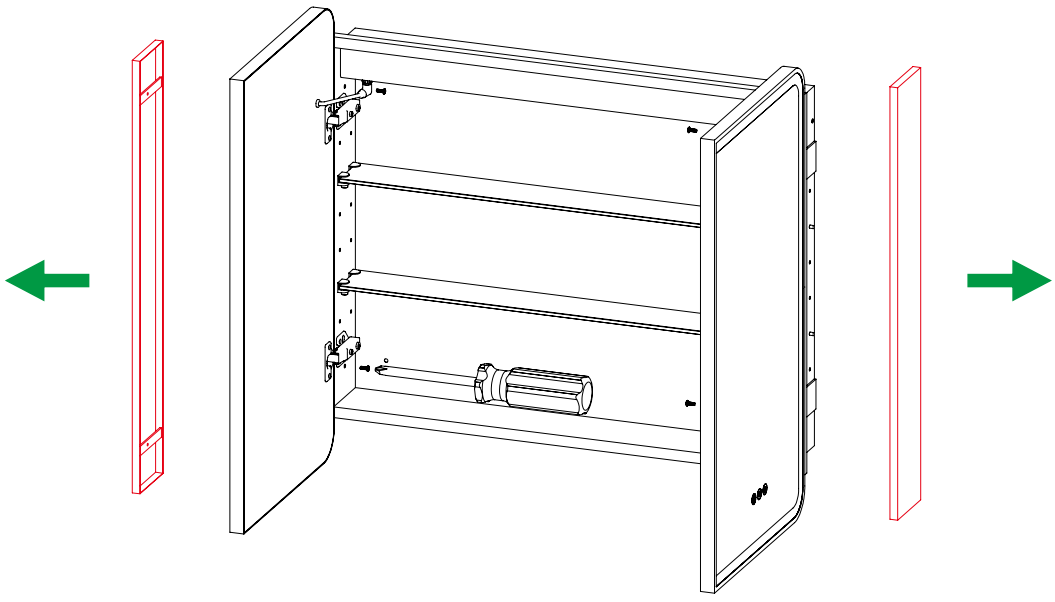



RECESSED MOUNT

Step 3

Carefully place the cabinet into the prepared wall opening. Secure it using the long screws(1) through the side brackets.


The cabinet is now ready for regular use.


(1)		Long Screw Ø4x45

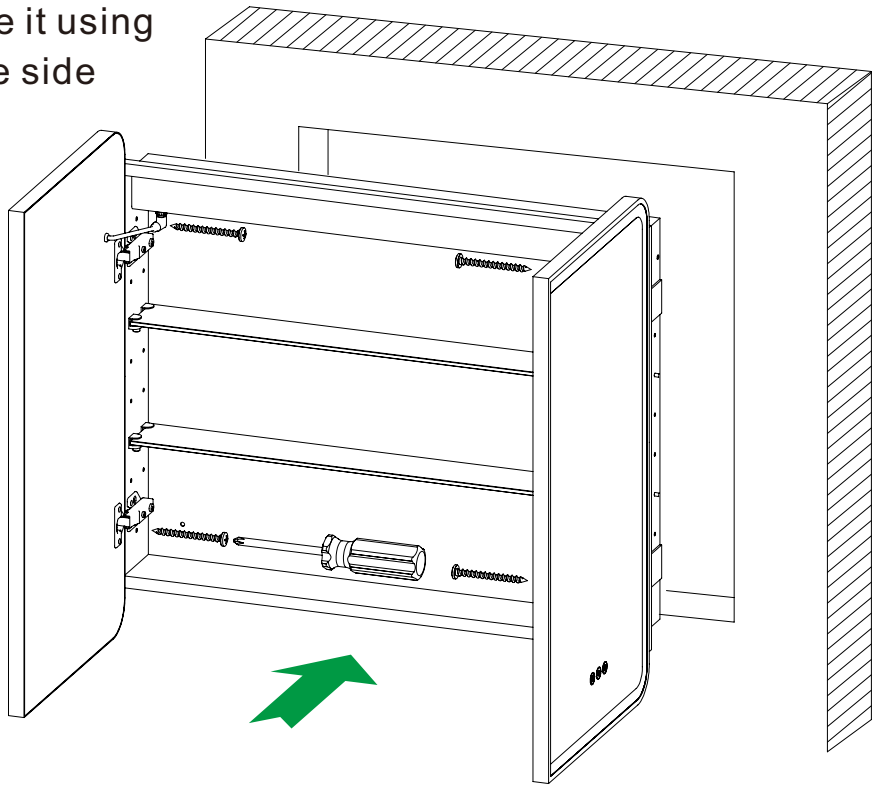


Step 4


Snap hinge cover(4) onto each hinge, ensuring they are fully secured.
Stick the door bumper(3) onto the inside of the cabinet door(s).

(4)		Hinge Cover
(3)		Door Bumper

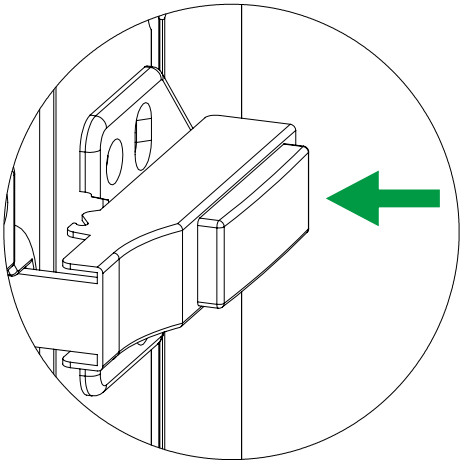

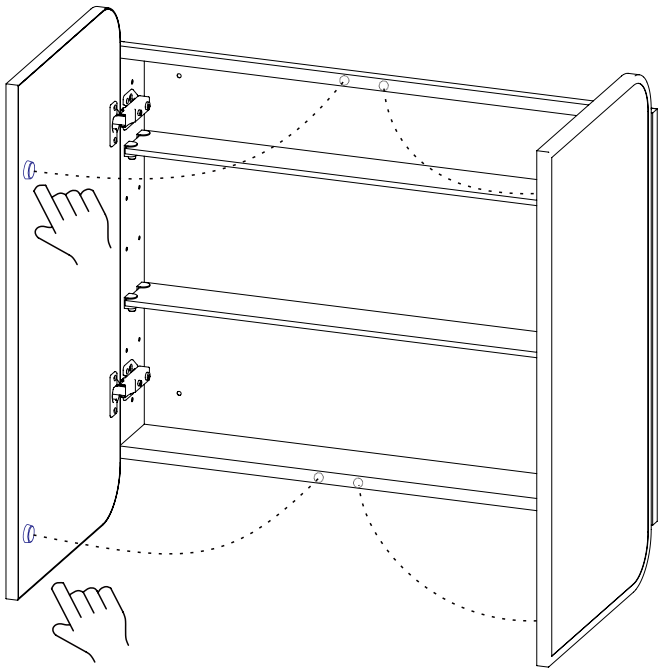


HOW TO ADJUST HYDRAULIC HINGES

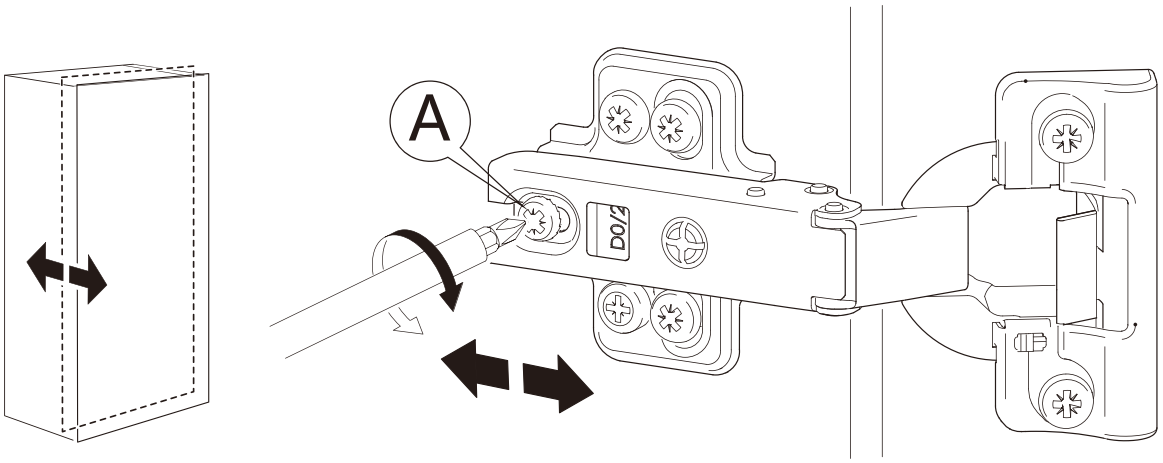


A:Adjusts the door depth

Rotate screw A clockwise or counterclockwise to adjust the door depth and modify the gap between the door and the cabinet frame.

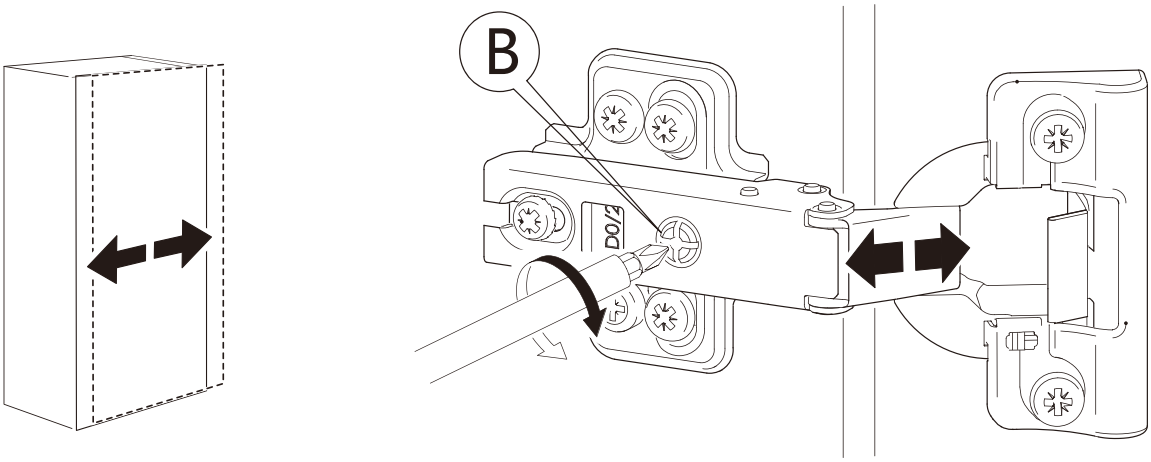

B:Adjusts the door side-to-side alignment

Rotate screw B clockwise or counterclockwise to move the door left or right for proper side-to-side alignment.

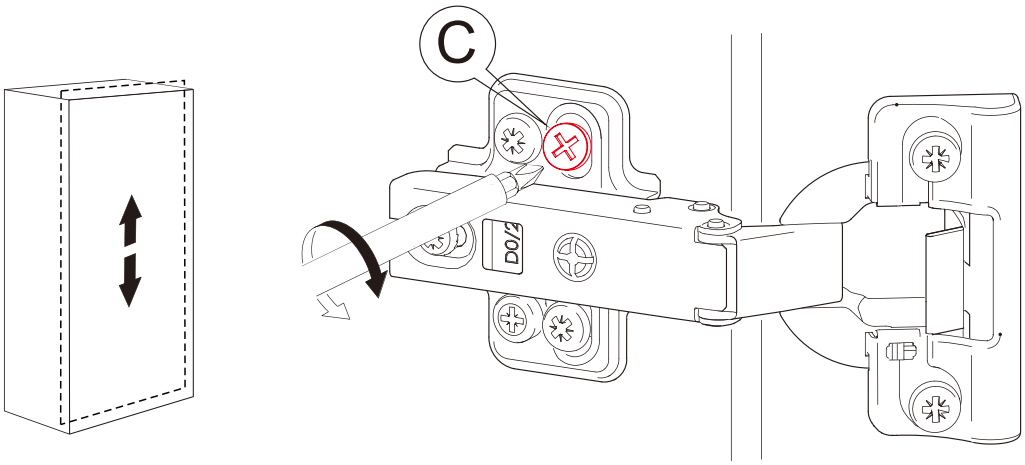


C:Adjusts the door height


Adjusting screw C, turning clockwise will lower the cabinet door, while turning anticlockwise will raise the cabinet door.

HOW TO ADJUST THE HEIGHT OF TEMPERED GLASS SHELF

Step 1


Loosen the screws on the four shelf brackets and carefully remove the tempered glass shelf.

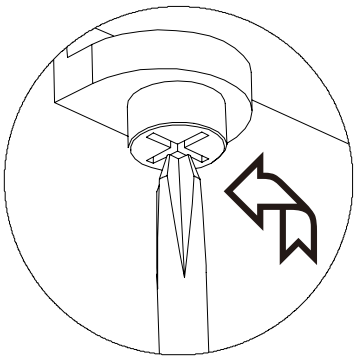


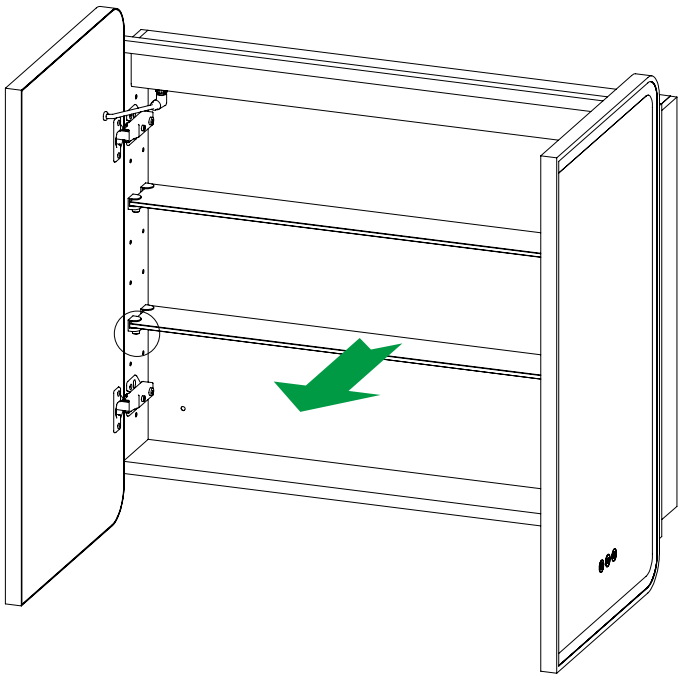

Step 2

Adjust the shelf brackets to the desired position. Carefully slide the tempered glass shelf into the bracket slots, then tighten the nuts securely.

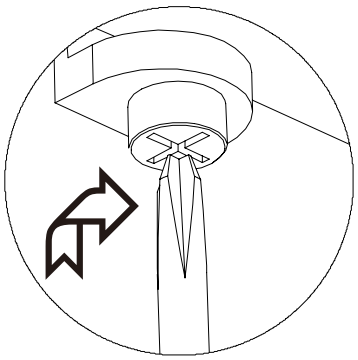

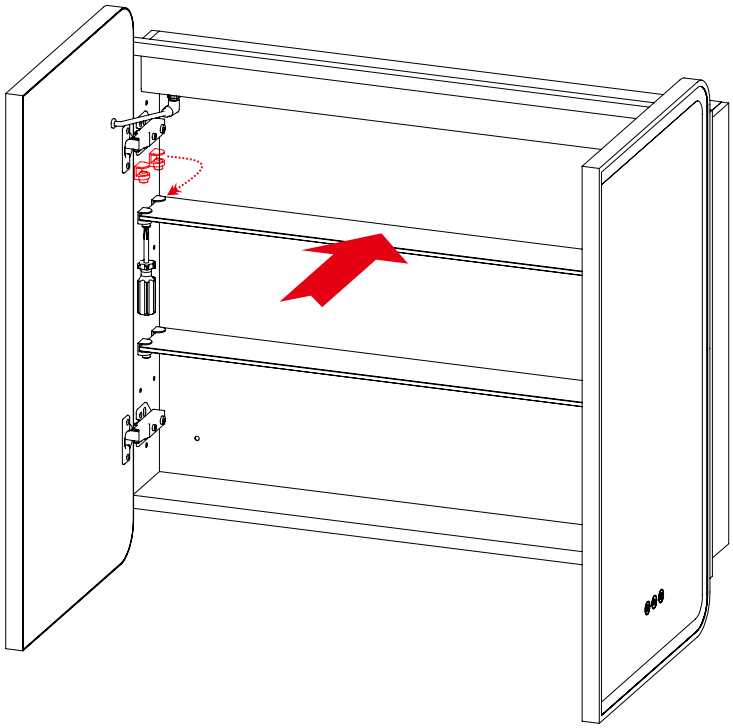

AFTER-SALES SERVICE CARD

Thank you sincerely for choosing our product — we truly appreciate your trust. We hope it brings both beauty and functionality to your home. Each item is carefully inspected and thoughtfully packaged to ensure the highest quality. If you experience any issues with shipping or the product itself, please don't hesitate to reach out. We're always here and happy to assist you in any way we can.

Warranty Information

The HBEZON medicine cabinet is covered by a 1-year limited warranty from the date of purchase,protecting against manufacturing defects and hardware malfunctions under normal residential use.

For assistance or service, please contact us at:

cs@hbezon.com

We are here to assist and typically respond within 24 hours.