
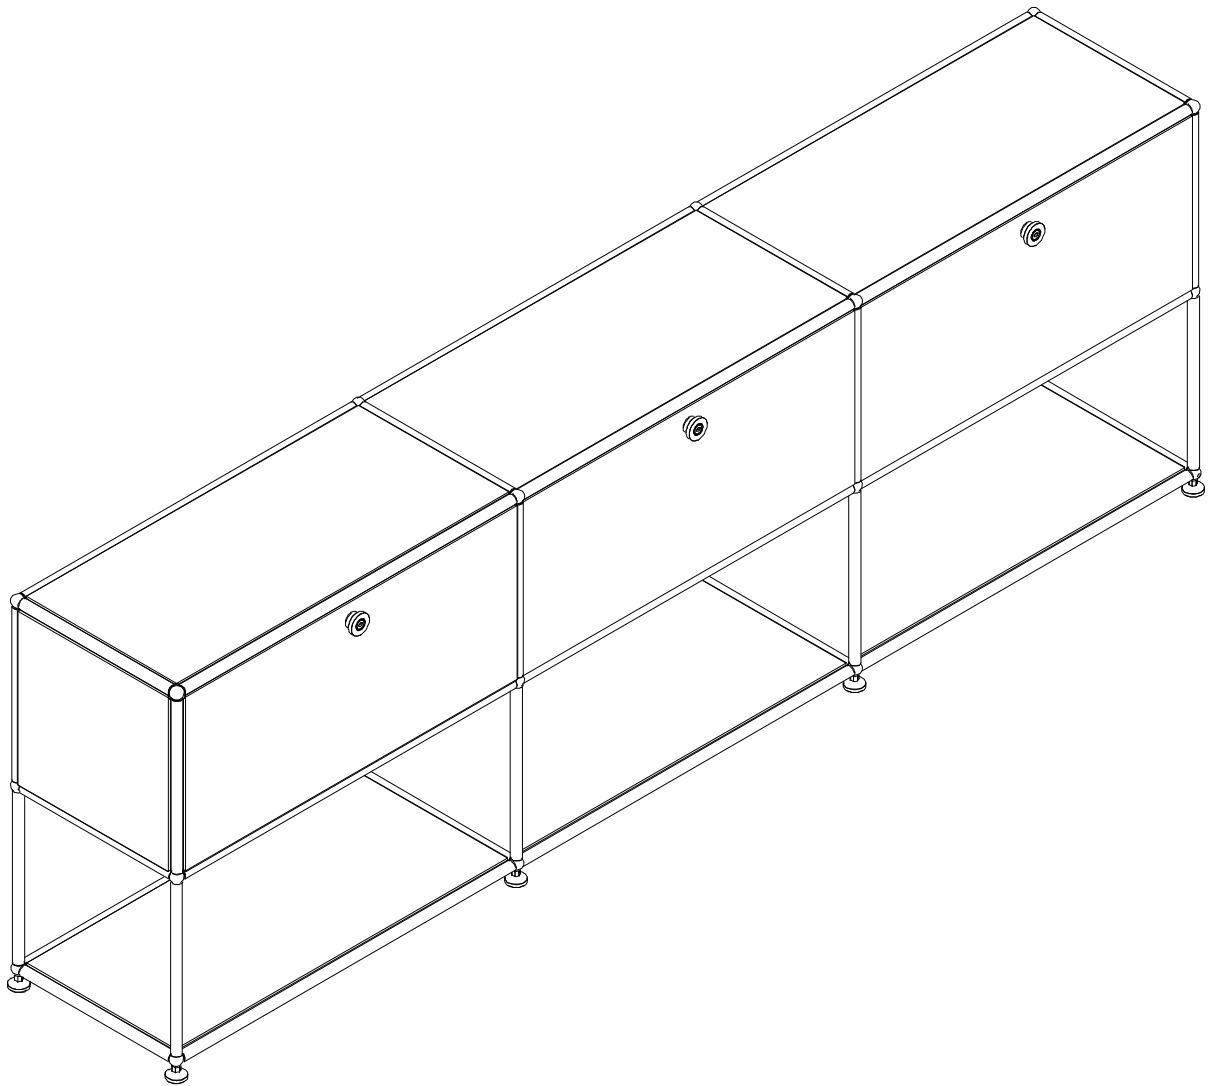











ASSEMBLY INSTRUCTIONS








Storage Cabinets Type G




Part List


①	②	③	④	⑤	⑥	⑦	⑧
							
x1	x3	x3	x2	x2	M3x28 x6	M4x25 x6	M4x14 x6

A	B	C	D	E1	E2	F	G
							
x12	x3	x2	x2	Long x18	Short x28	x3	x8

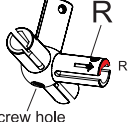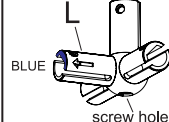

H1	H2	J1	J2	K1	K2	L1	L2
							
x4	x4	x4	x4	x2	x2	x2	x2

M	N	II	W
			
x92	x1	x1	x2

Step1

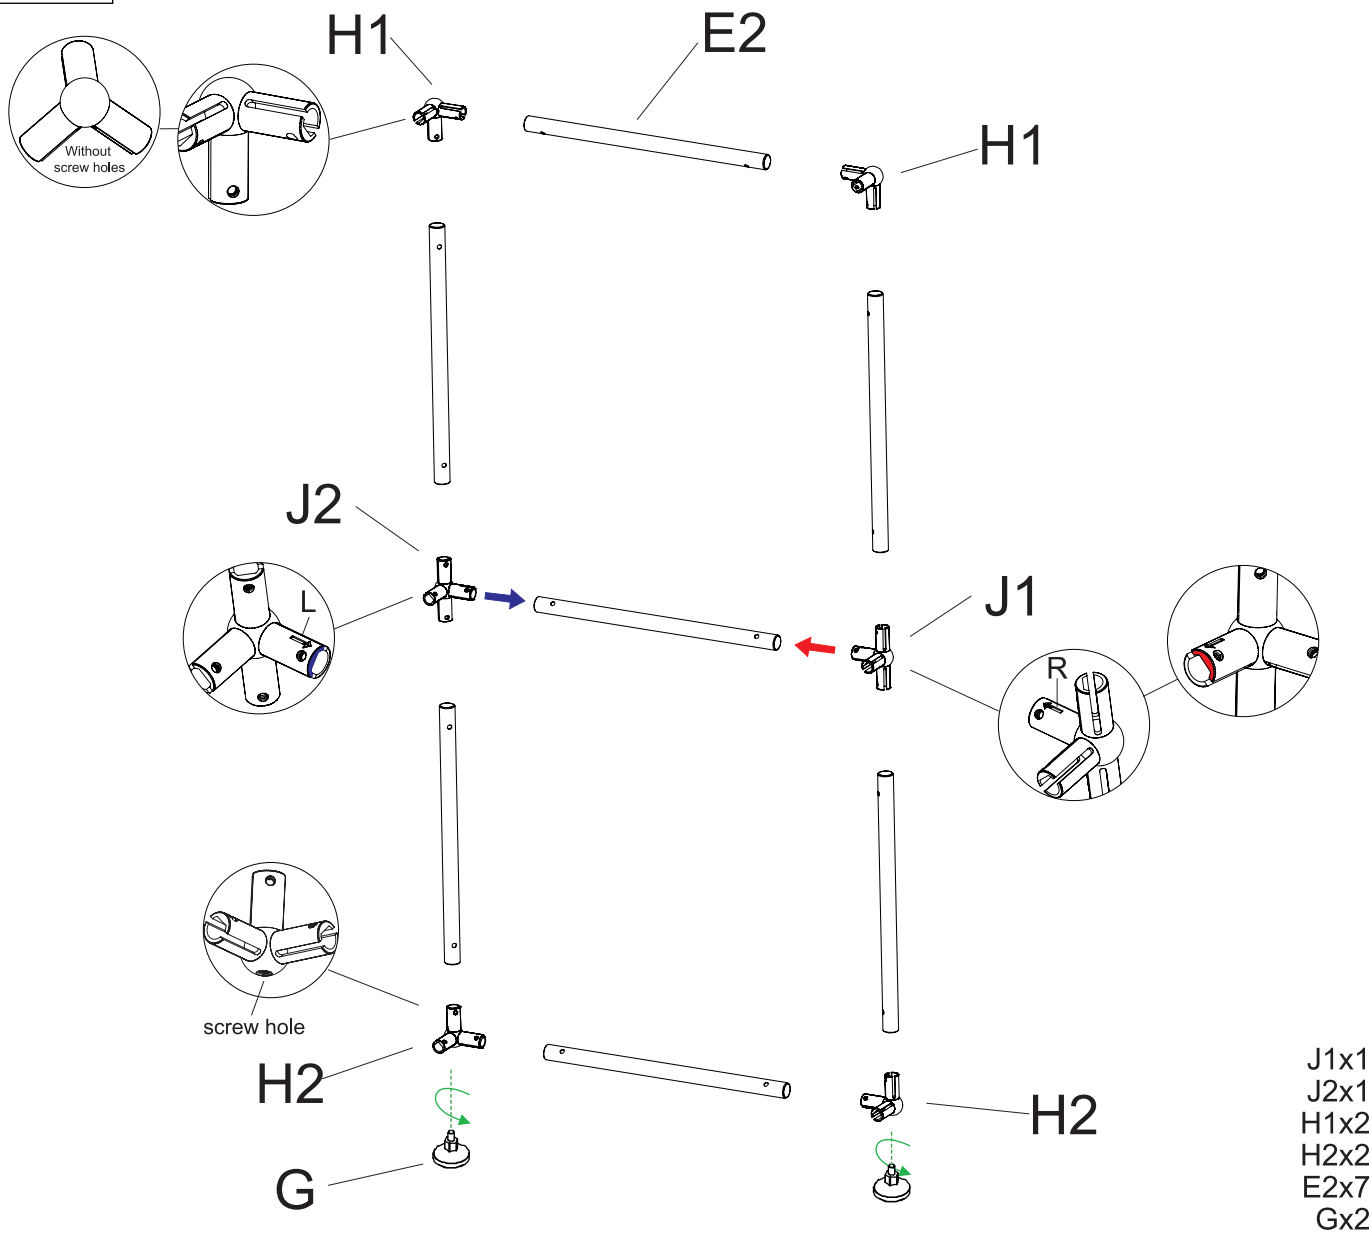


Step2

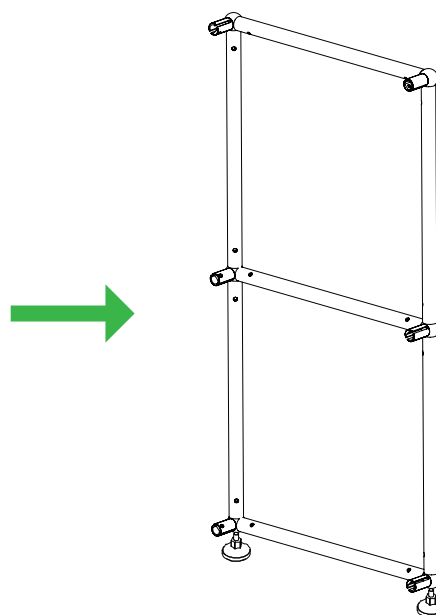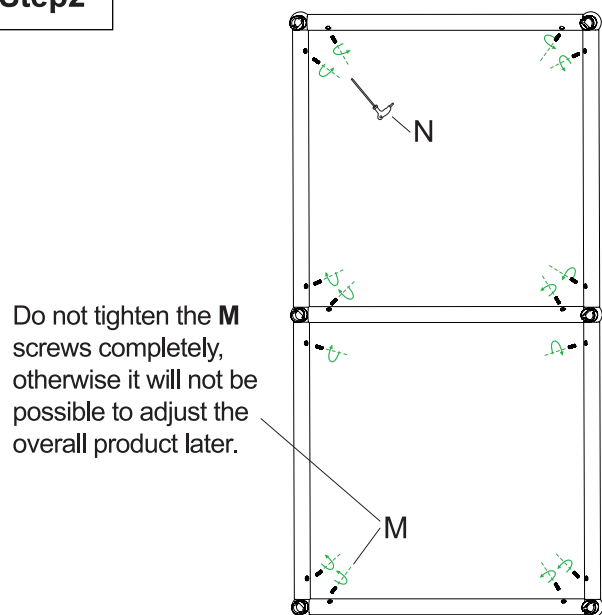



Mx14
Step2x2

Step3

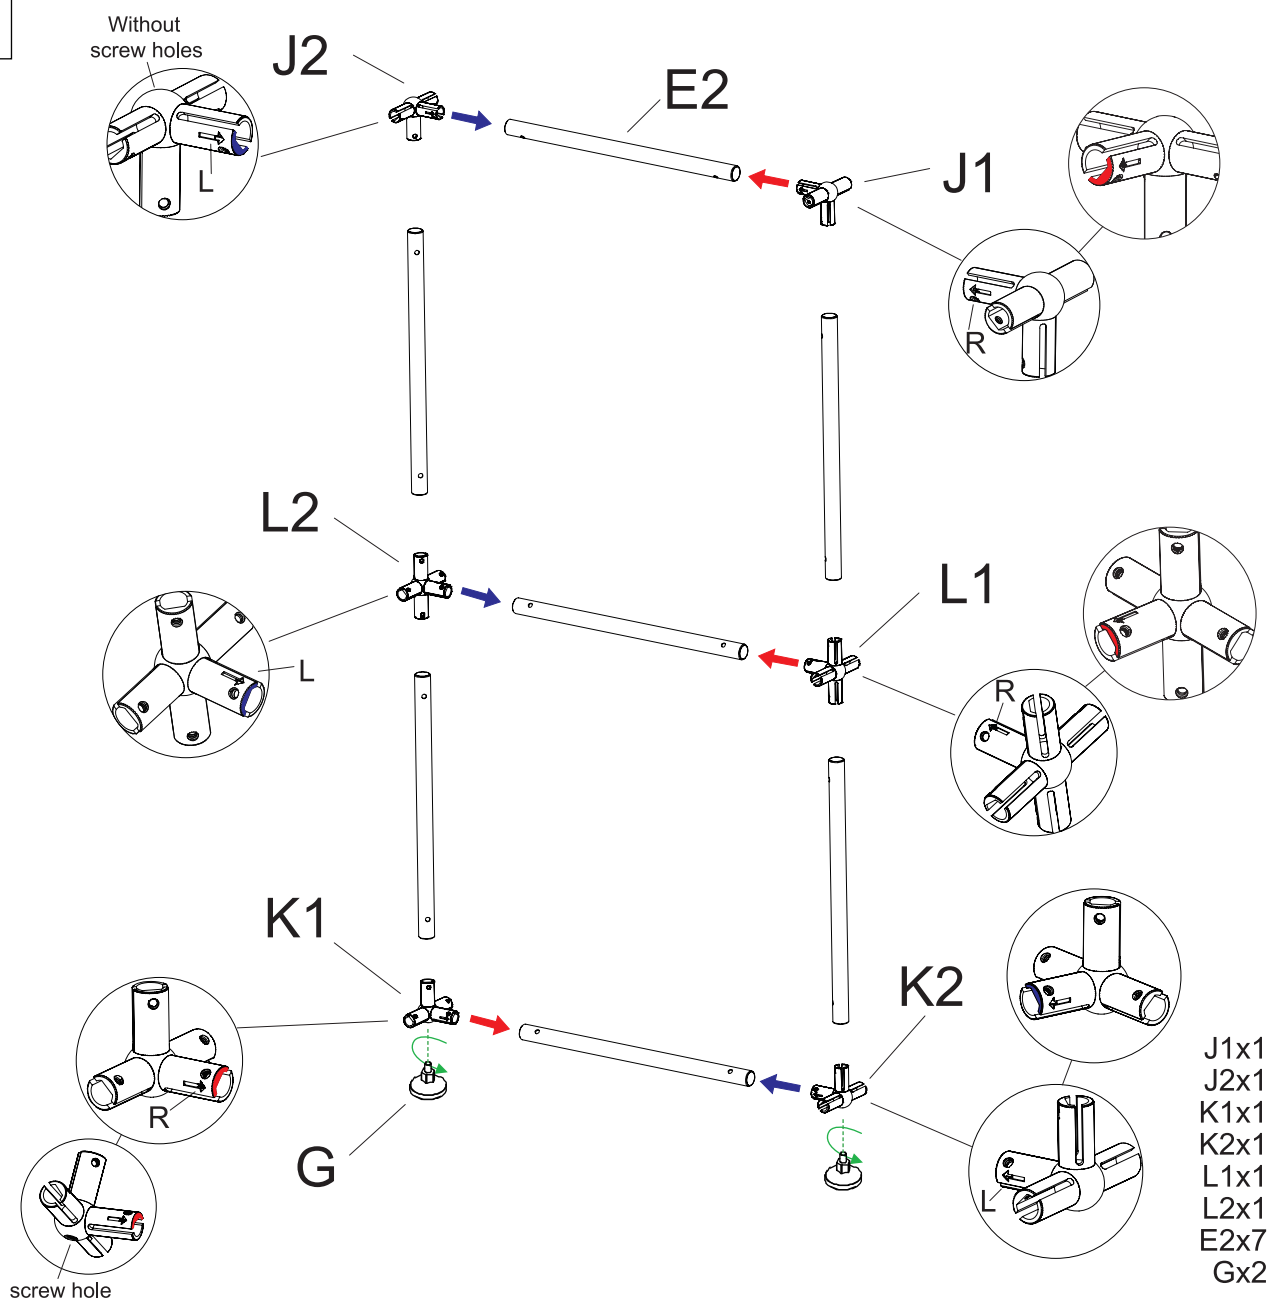


Step4

Do not tighten the **M** screws completely, otherwise it will not be possible to adjust the overall product later.

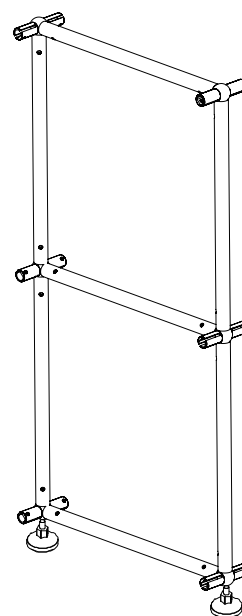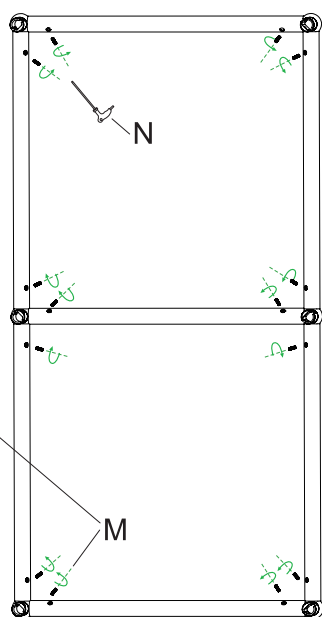


Mx14
Step4x2

Step5

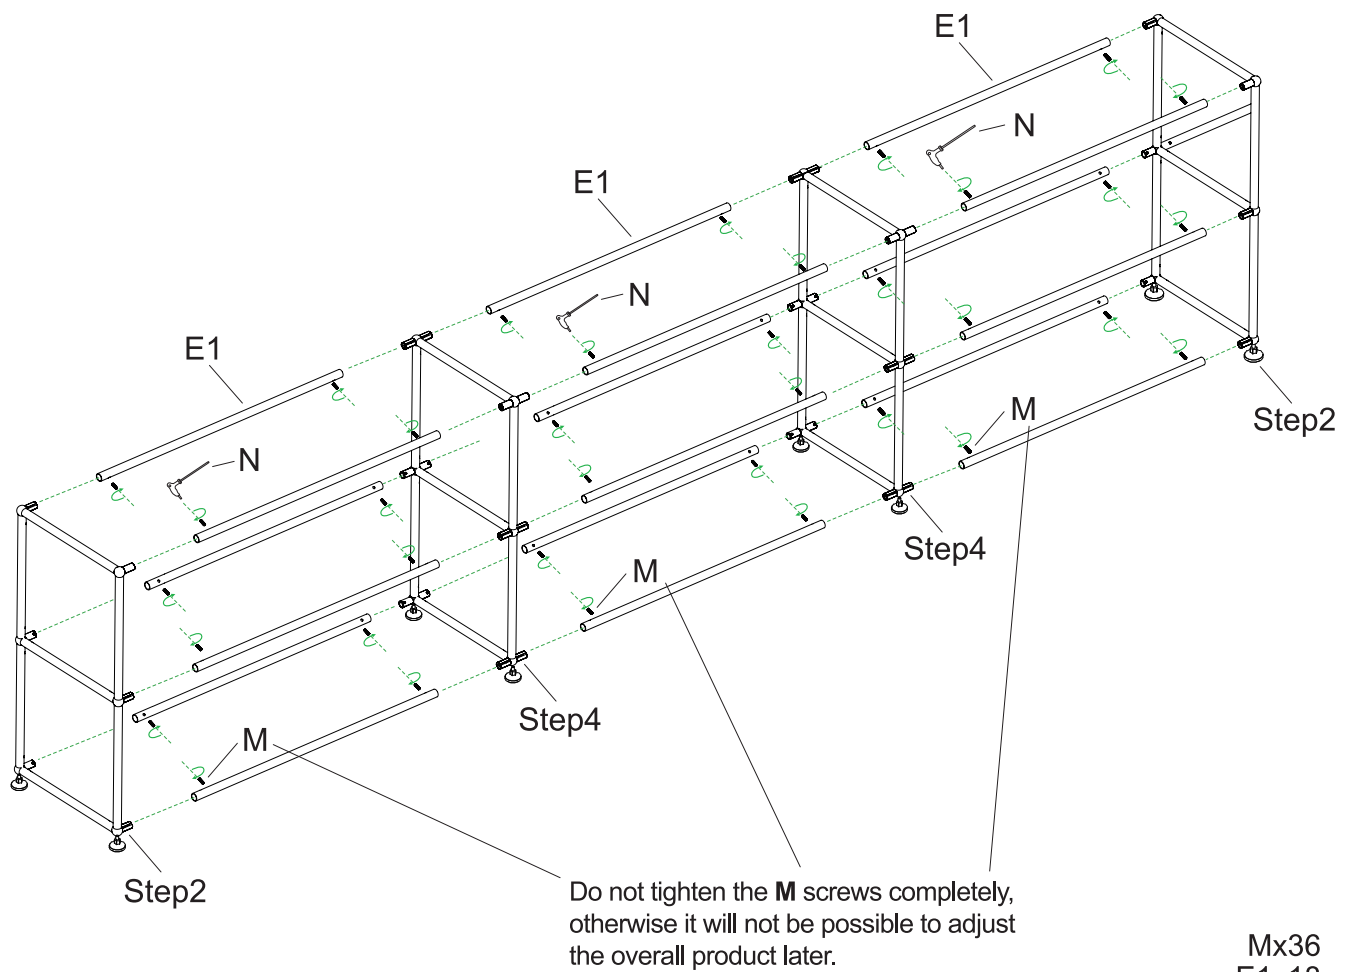


Mx36
E1x18
Step2x2
Step4x2

Step6

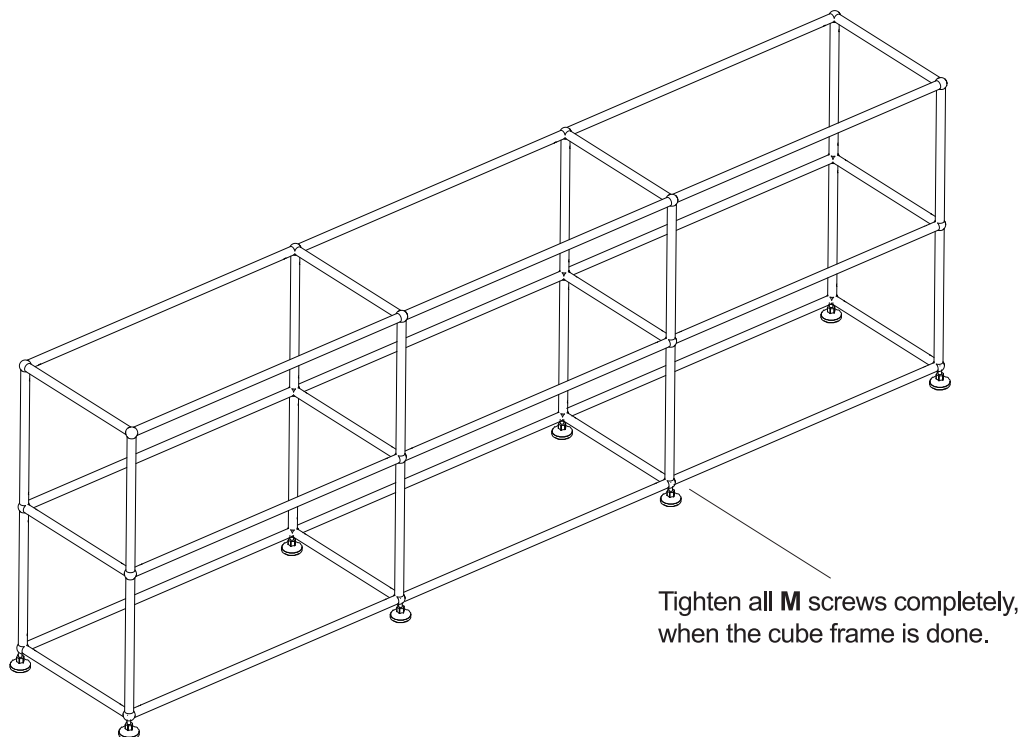


Step7

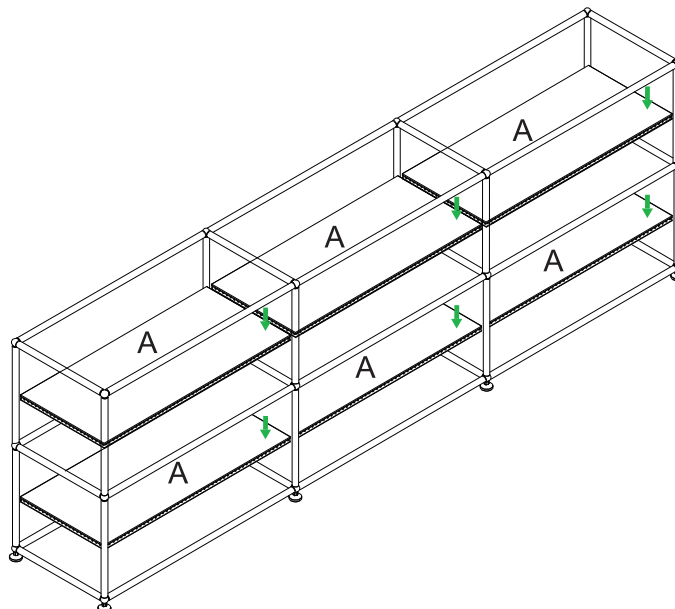

Ax6


Step8

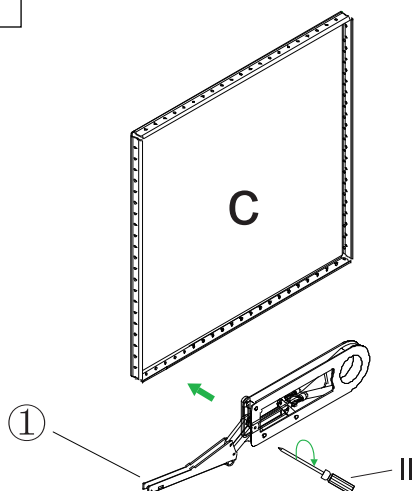

Partially unscrew the three screws in ① before installing it on the metal panel.

Cx1
①x1
Step8x1


Step9

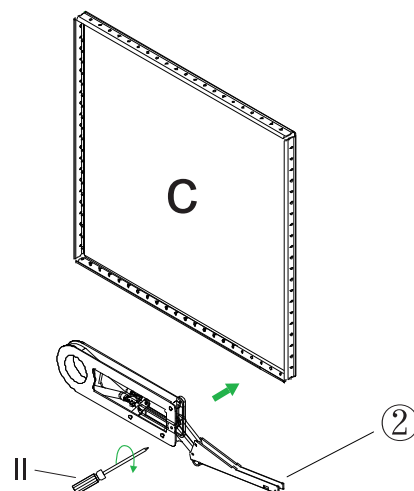

Partially unscrew the three screws in ② before installing it on the metal panel.

Cx1
②x1
Step9x1


Step10

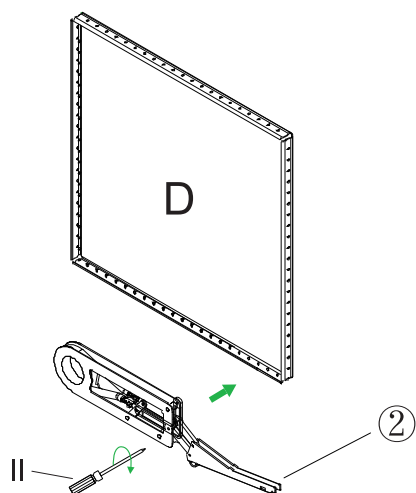

Partially unscrew the three screws in ② before installing it on the metal panel.


Dx1
②x1
Step10x2

Step11

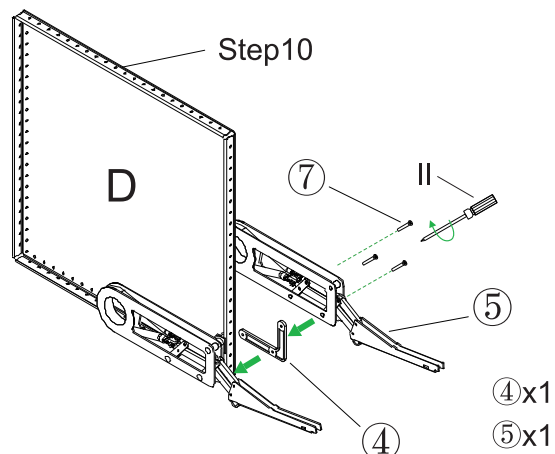


④x1
⑤x1
⑦x3
Step10x1
Step11x2

Step12

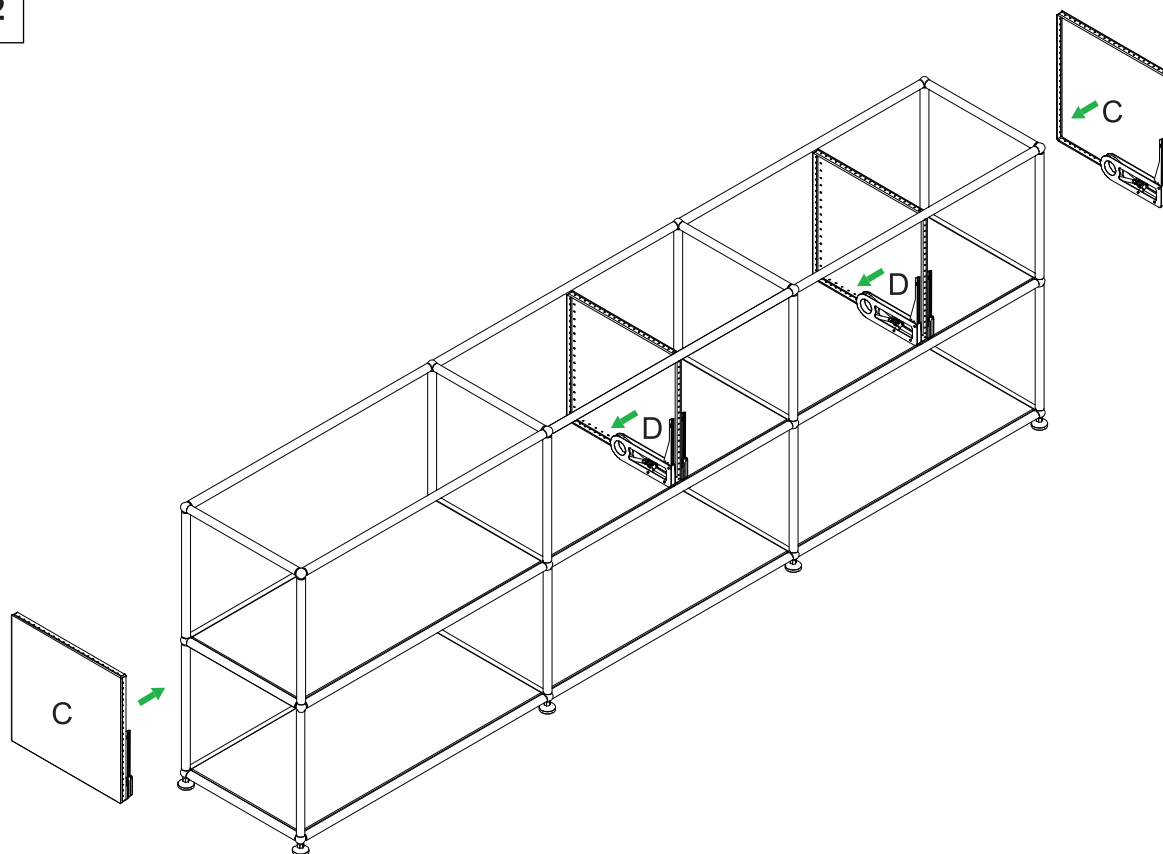


Step8x1
Step9x1
Step11x2

Step13

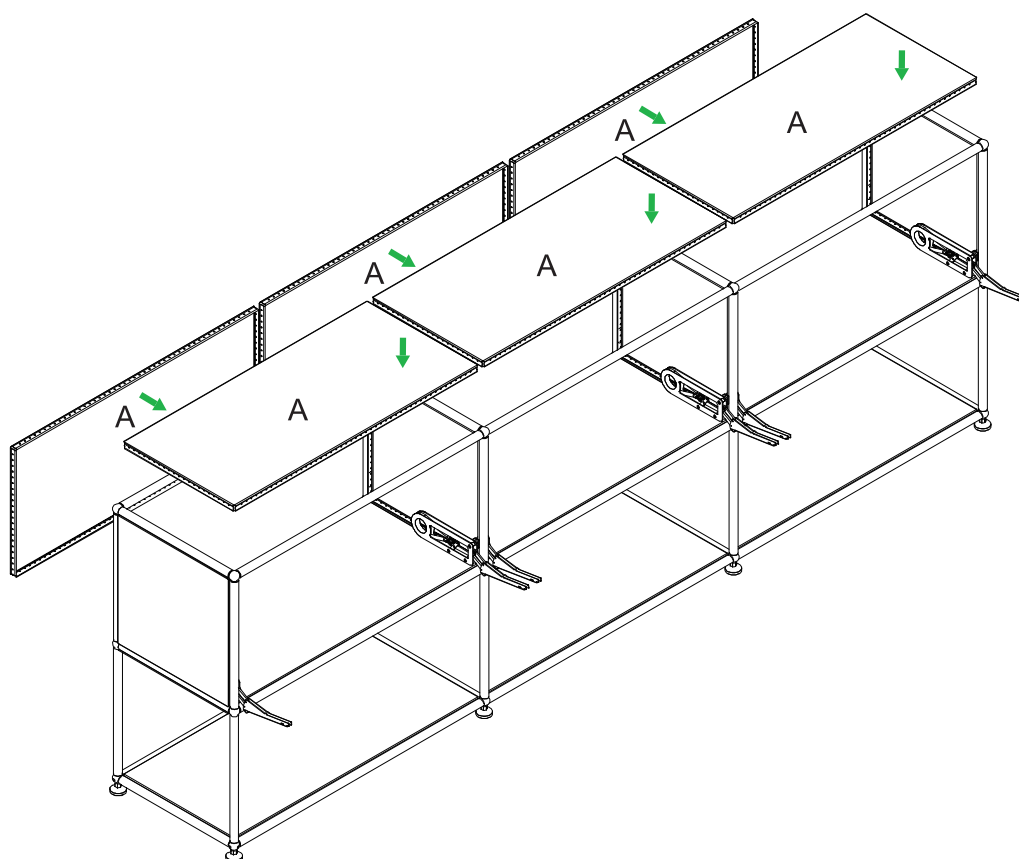


Ax6


Step14

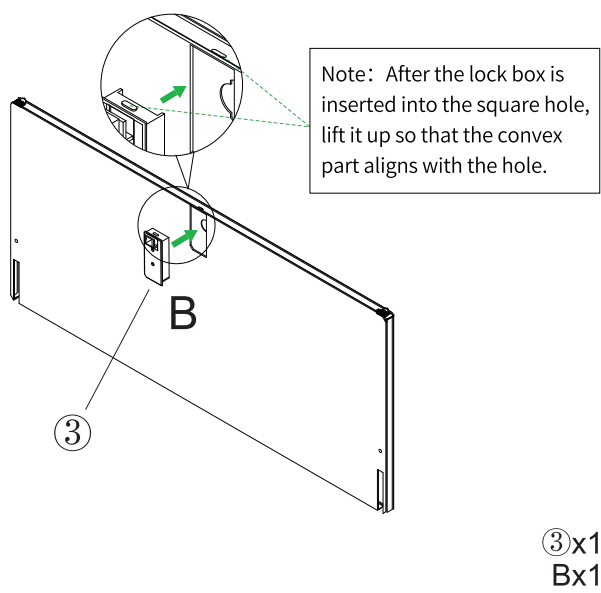


Step15

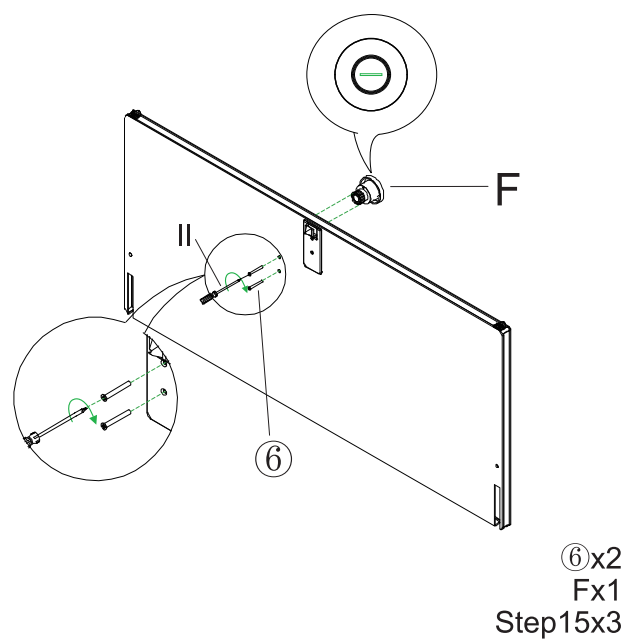


Step16

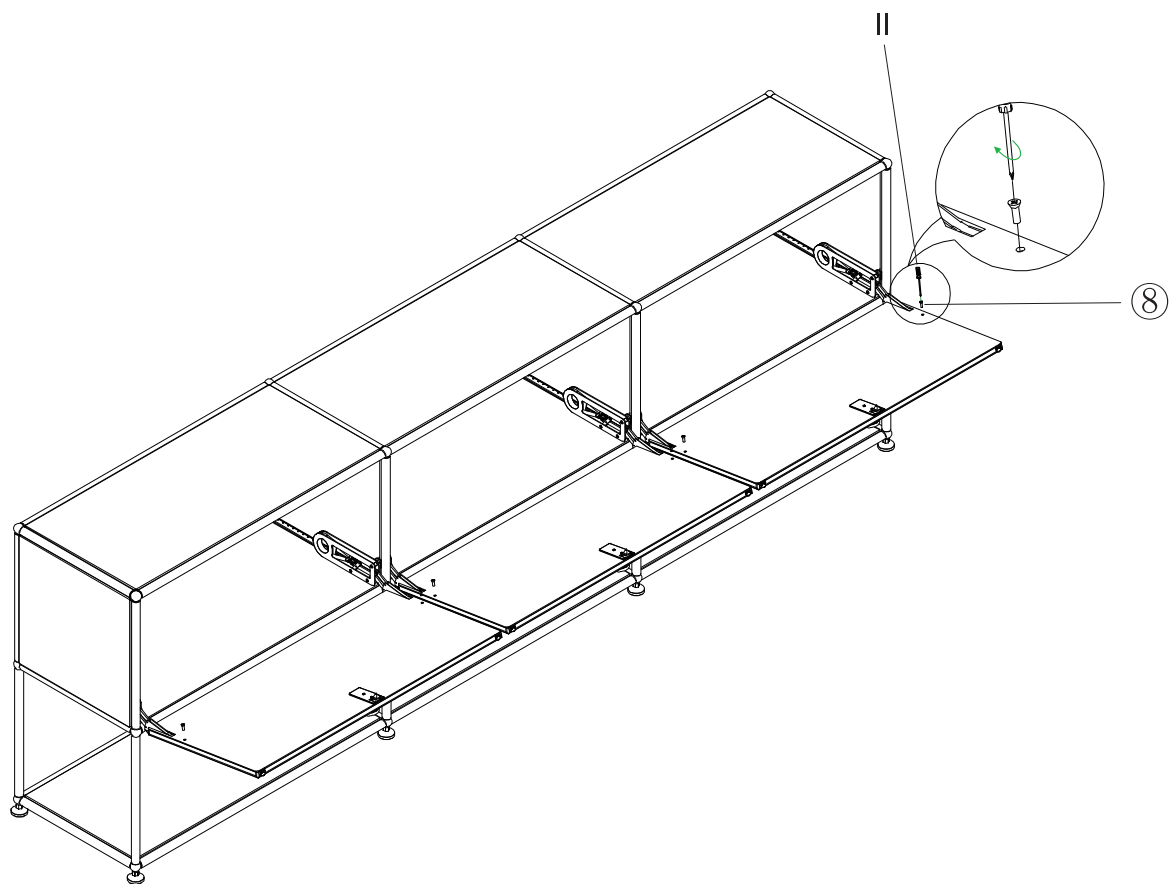


How to use the lock

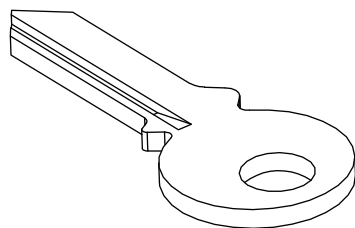

Including 2 keys

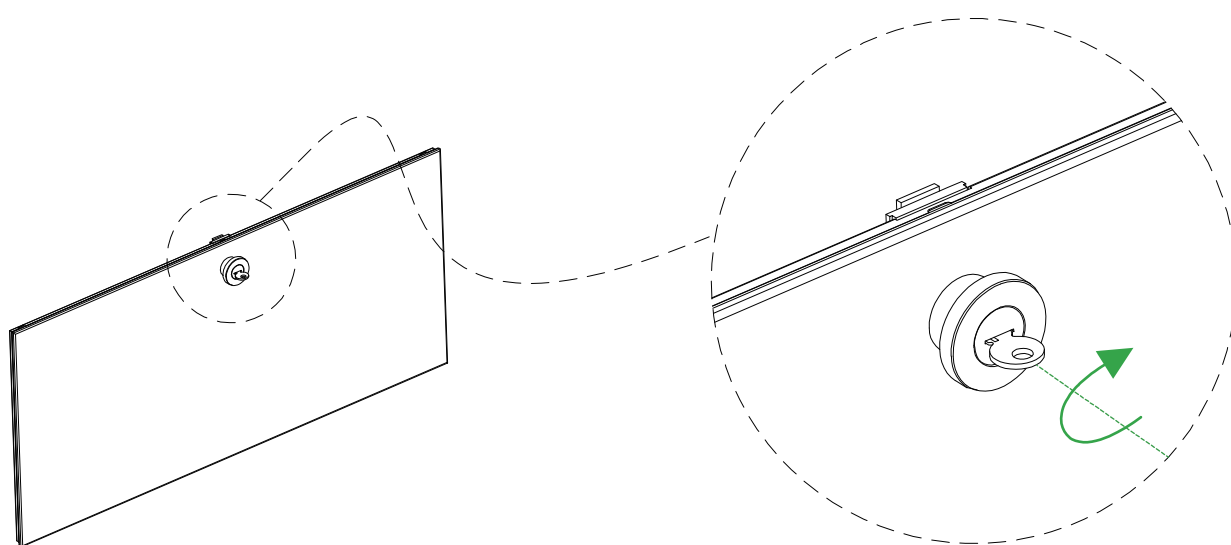

Turn clockwise to unlock

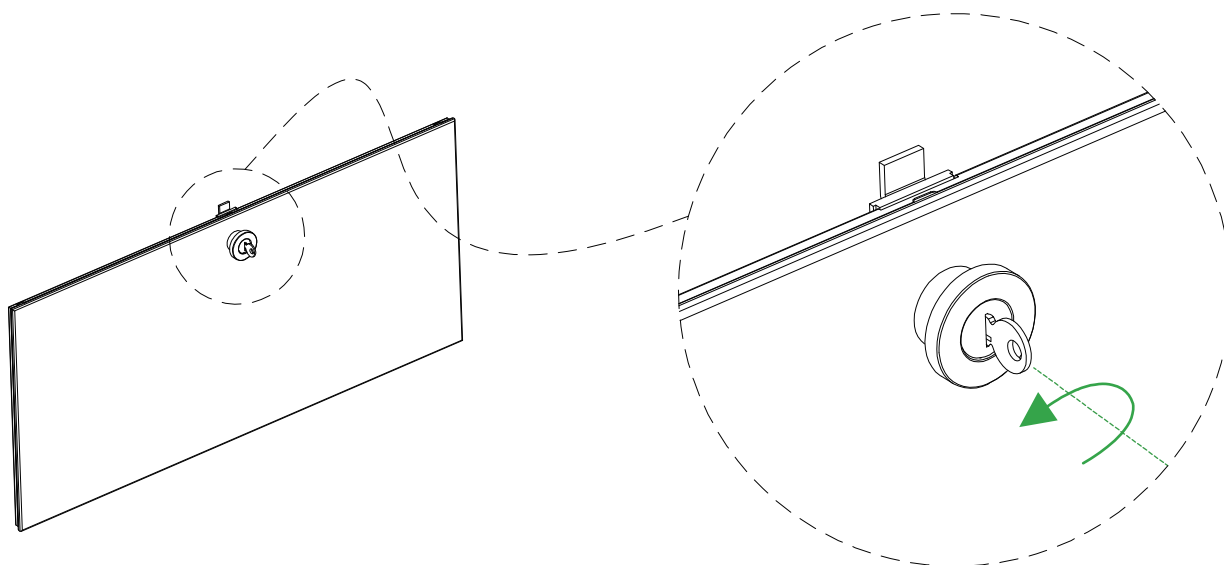

Turn counterclockwise to lock