



## **INSTALLATION INSTRUCTIONS**

### **DIMENSIONS**

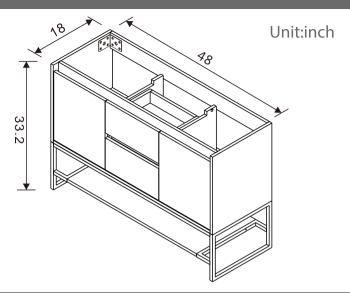

## ASSEMBLY DIAGRAM

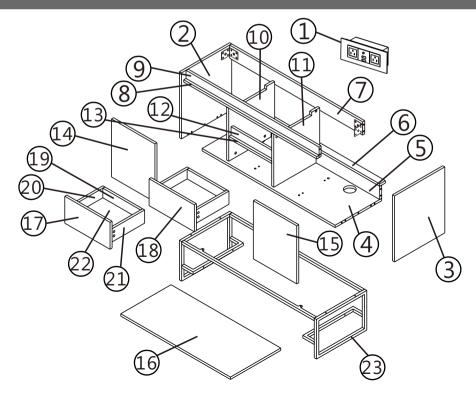

# PARTS LIST

No.	Description	QTY
1		1
2		1
3		1
4		1
5		1
6		1
7		1
8		1
9		, I
10		1
11		1
12		1
13		ı

No.	Description	QTY
14		1
15		1
16		1
17		1
18		1
19		2
20		2
21		2
22		2

# PARTS LIST

Number		Picture	Qty
23	Α		2
	В		2
	С		1
	D		1
	Е	6×18mm	16
24			2
25		(5×60mm)	2
26			8
27			62
28		(4×14mm)	55
29		4×18mm	4
		4×35mm	8
30			2
31			4
32			2


**CAUTION:** Please confirm the parts list before installtion


## YOU MAY NEED (NOT SUPPLIED)




#### **INSTALLATIONS**

#### STEP 1



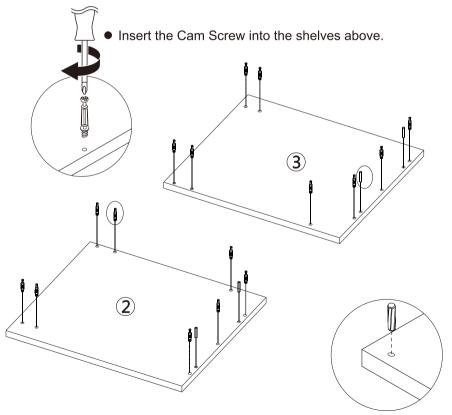


• Insert the wooden dowel pins into the shelves.

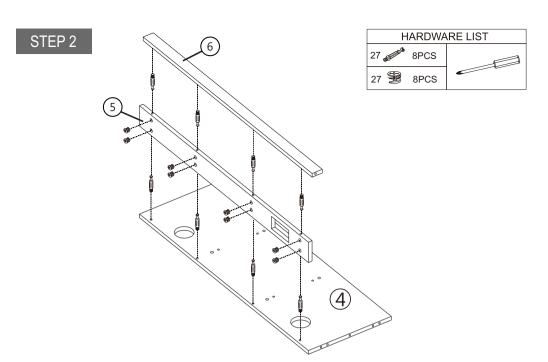


#### -----


#### STEP 3

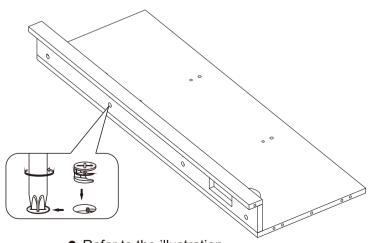


• Refer to the illustration,
Then tighten the cam lock with the cover.


STEP 4



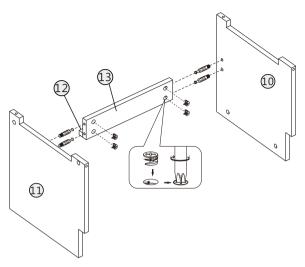



STEP 5

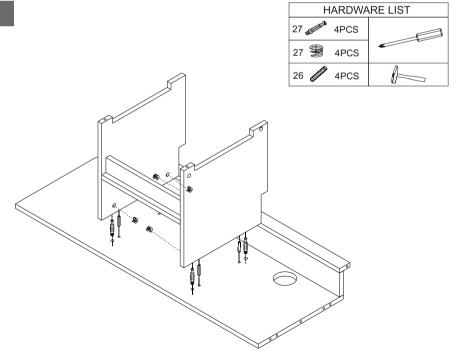


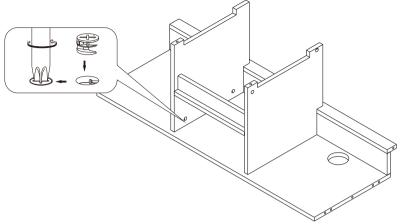


• Refer to the illustration,
Then tighten the cam lock with the cover.

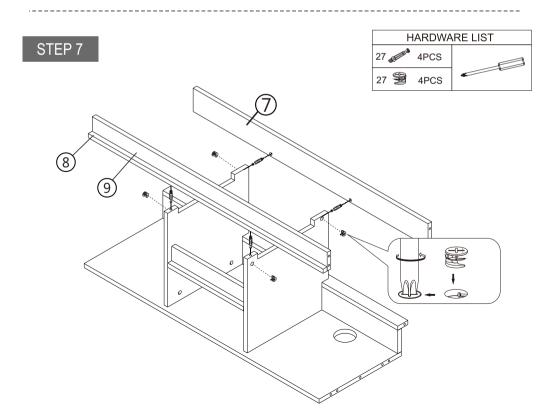


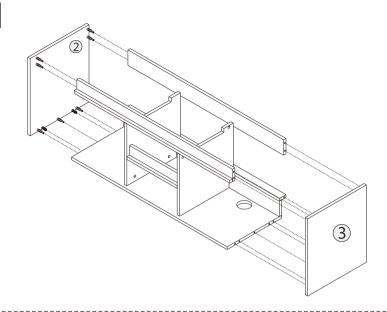

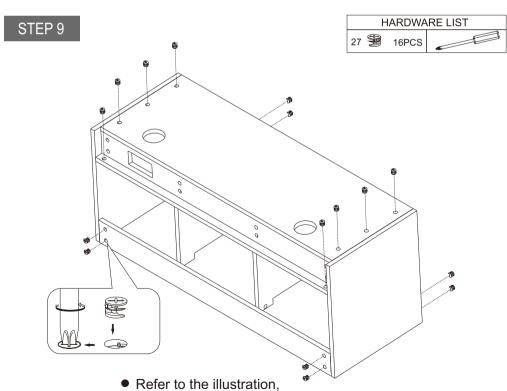


Then tighten the cam lock with the cover.

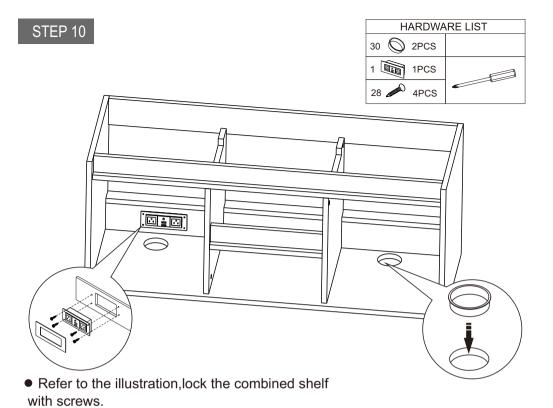


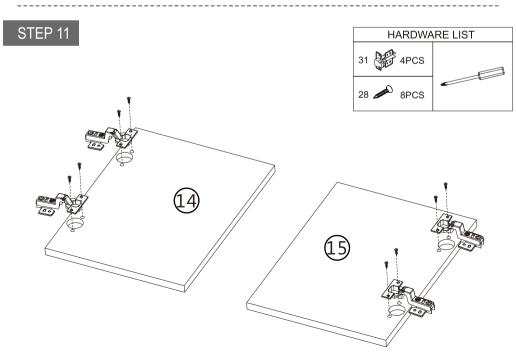




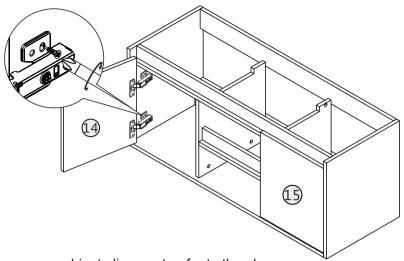

To ensure proper cabinet alignment, refer to the above illustrations for instructions about adjusting the cabinet height, depth and lateral movement.

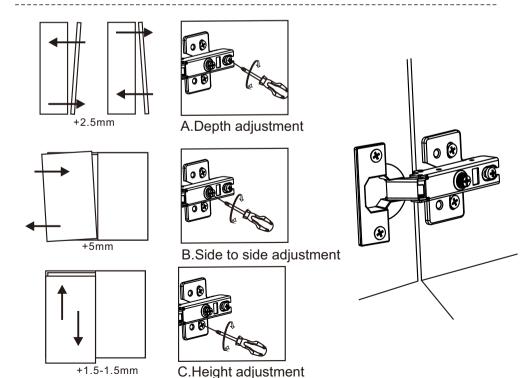




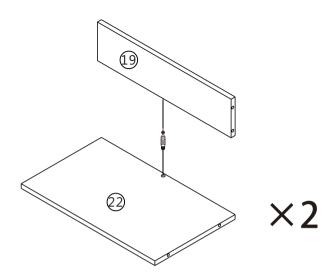


#### STEP 14



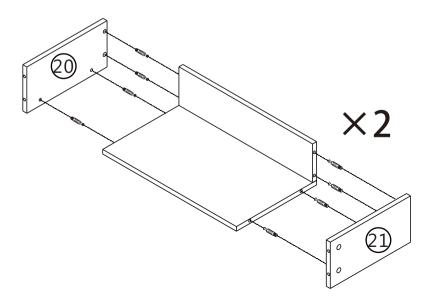



HARDWARE LIST


27 **9** 18PCS

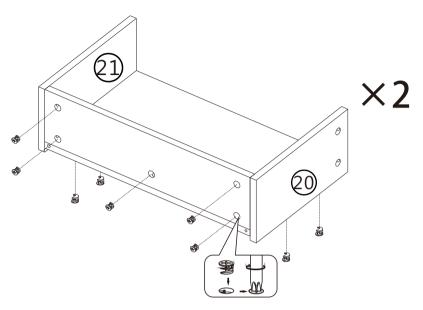


-----

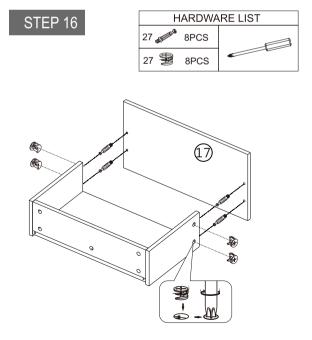


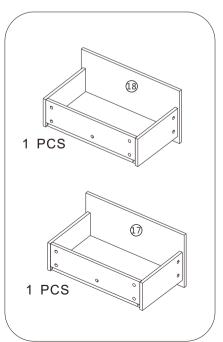

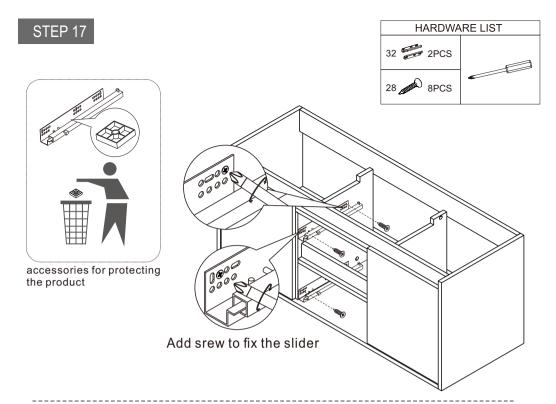

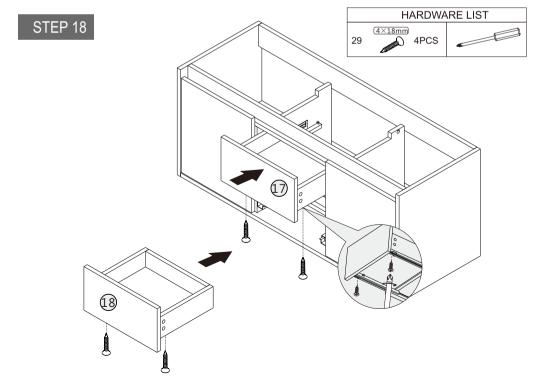




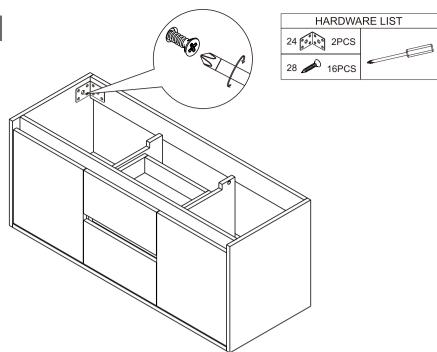



 Refer to the illustration, lock the combined shelf with screws.

\_\_\_\_\_\_

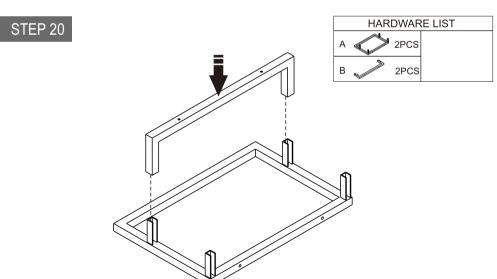


• Refer to the illustration, combine the iron frame and cabinet and lock it with screws.

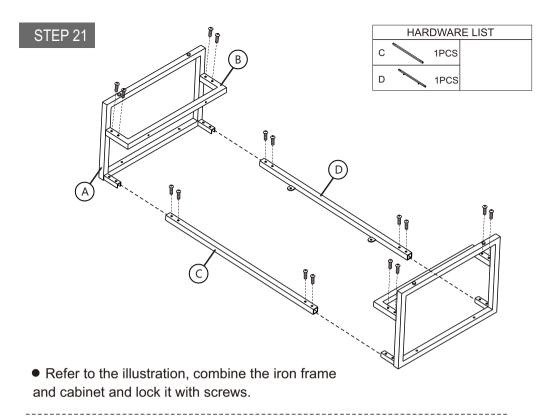


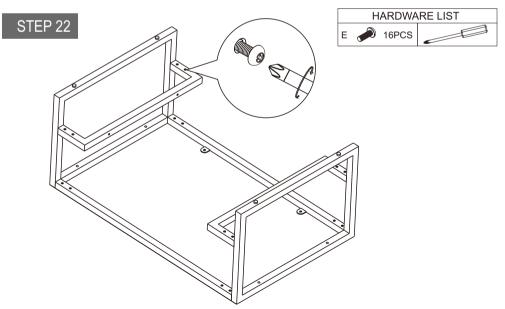

• Refer to the illustration, combine the iron frame and cabinet and lock it with screws.

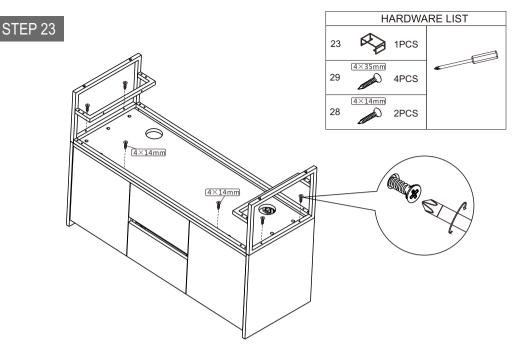


• Refer to the illustration, combine the iron frame and cabinet and lock it with screws.

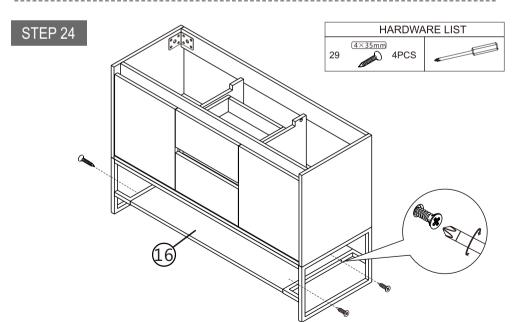


• Refer to the illustration, combine the iron frame and cabinet and lock it with screws.


STEP 25

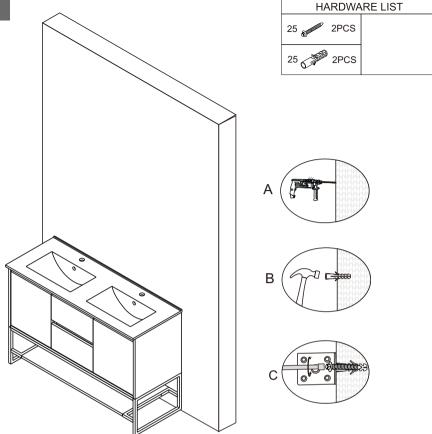


• Refer to the illustration, Draw the spacing between the walls on the cabinet, punch holes in the wall, and fix the cabinet to the wall with screws. Then tighten the nut cover.

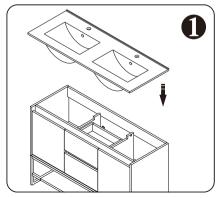

silicone transparent

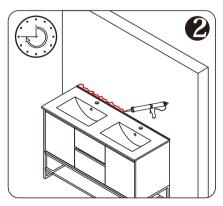

Install the basin on the cabinet with glue. Put into use after 24 hours.

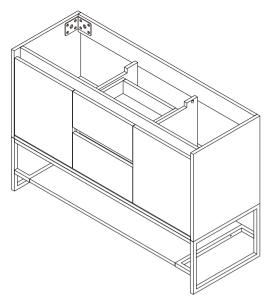

• To help prevent mildew, apply sealant to the space between the wall and the edge of the cabinet.

#### CARE AND CLEANING

- 1. Many cleansers contain abrasive and chemical substance which is not suitable for cleaning stainless steel, enamel, plating or plastic products. You may use mild cleansers or soaps to clean the surfaces. Wipe any splashes of cleaner solutions from the surface with a clean soft cloth.
- 2. Maintain ventilation in the bathroom and separate the dry area from the damp one if conditions permit. Try to open the door and windows of the bathroom to maintain adequate ventilation.
- 3. This cabinet is built to withstand normal bathroom humidity. For best results, keep this vanity dry and take necessary steps to minimize bathrom humidity by opening windows and doors and using the exhaust fan (if available).
- 4. To maintain the cabinet door, clean and wipe the door regularly with a soft cloth. Wipe condensation with a dry, soft cloth. Keeping away from res and high temperatures.
- 5. Please do not sit, lean or step on the basin cabinet.



Thank you very much for purchasing from us.

We have always been trying to provide the best service and reliable products for every customer.

We sincerely hope you will be satisfied with our products and leave us FIVE STARS and POSITIVE feedback/ review in our page.

However, accident may happen sometimes, please contact us to resolve any issue before leaving a negative feedback.

Many thanks and welcome to our shop again!