


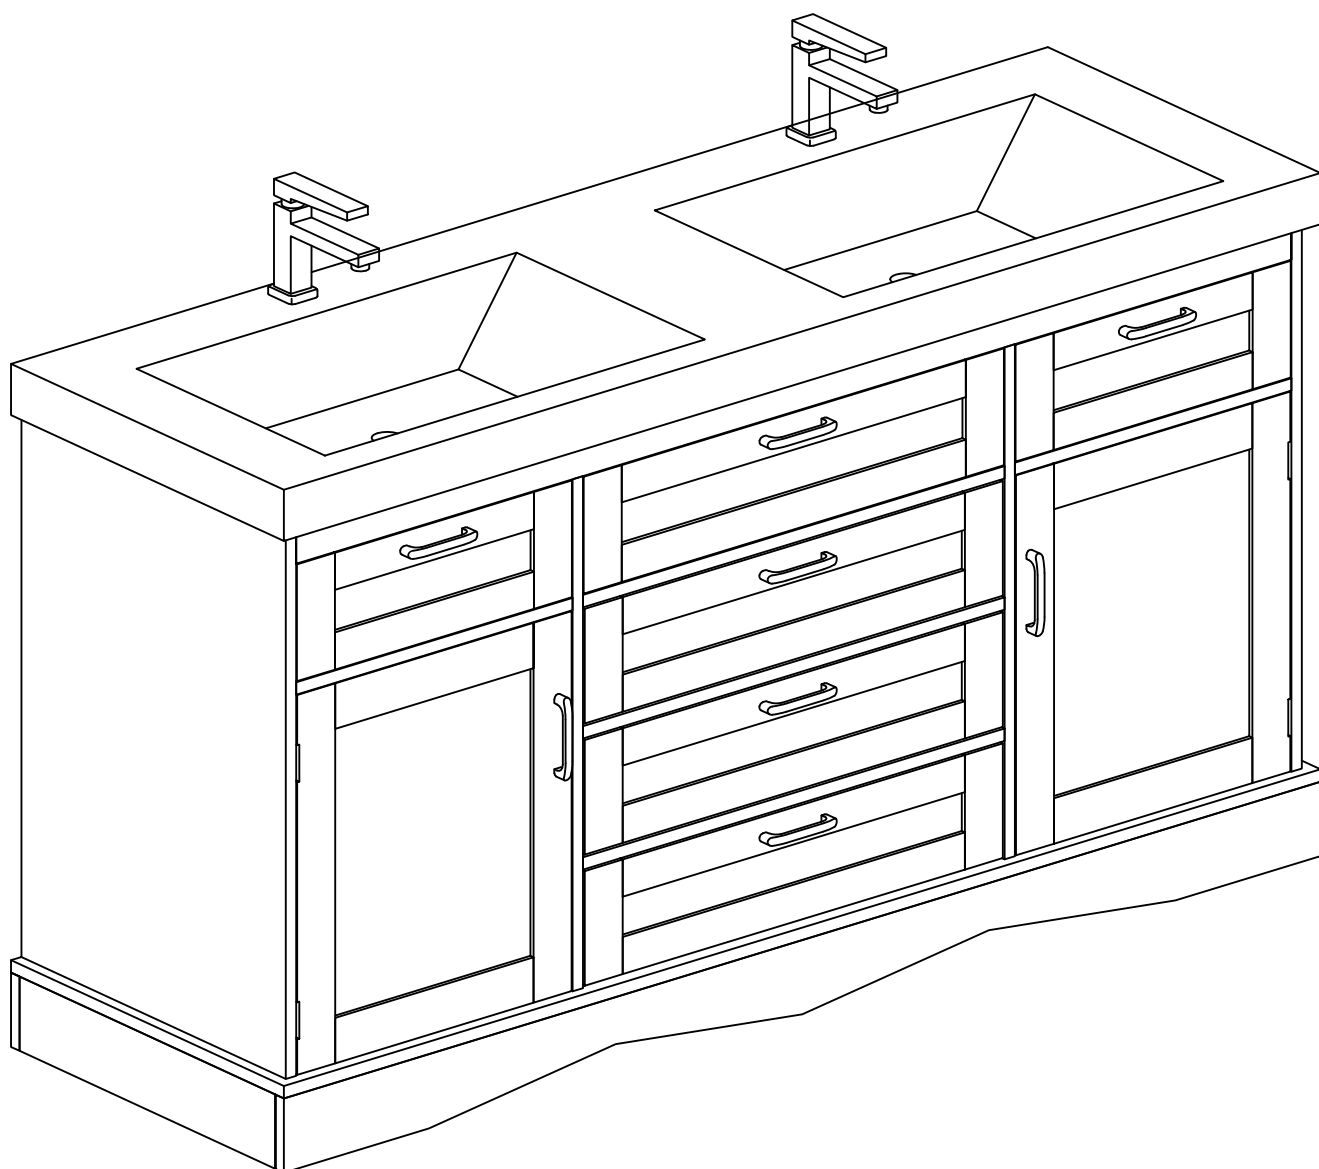


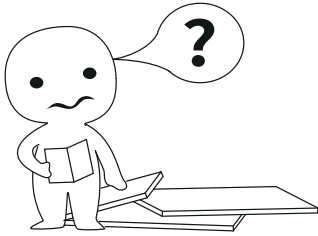

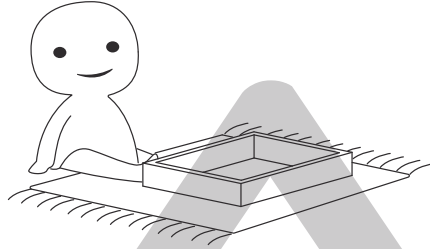



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

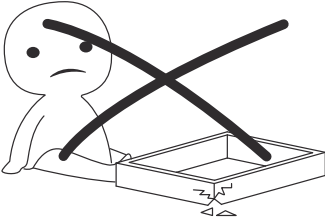





AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer- could be a rug.

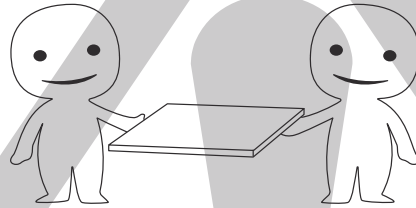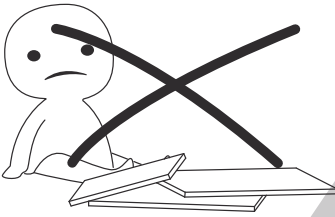

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

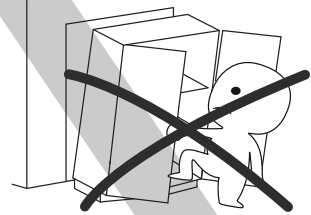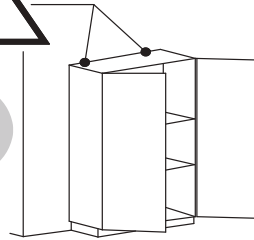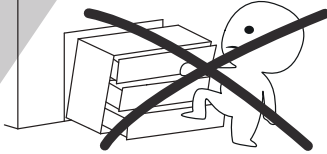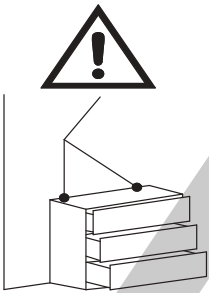

ANTI-TOPPLE WARNING !

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.


'SAFETY TIPS:

Static charge may cause dust on foam- clean with a dry or damp cloth.





















Styrofoam strands may be present - handle gently and dispose of properly.

Do not burn or incinerate.














Check local recycling guidelines.

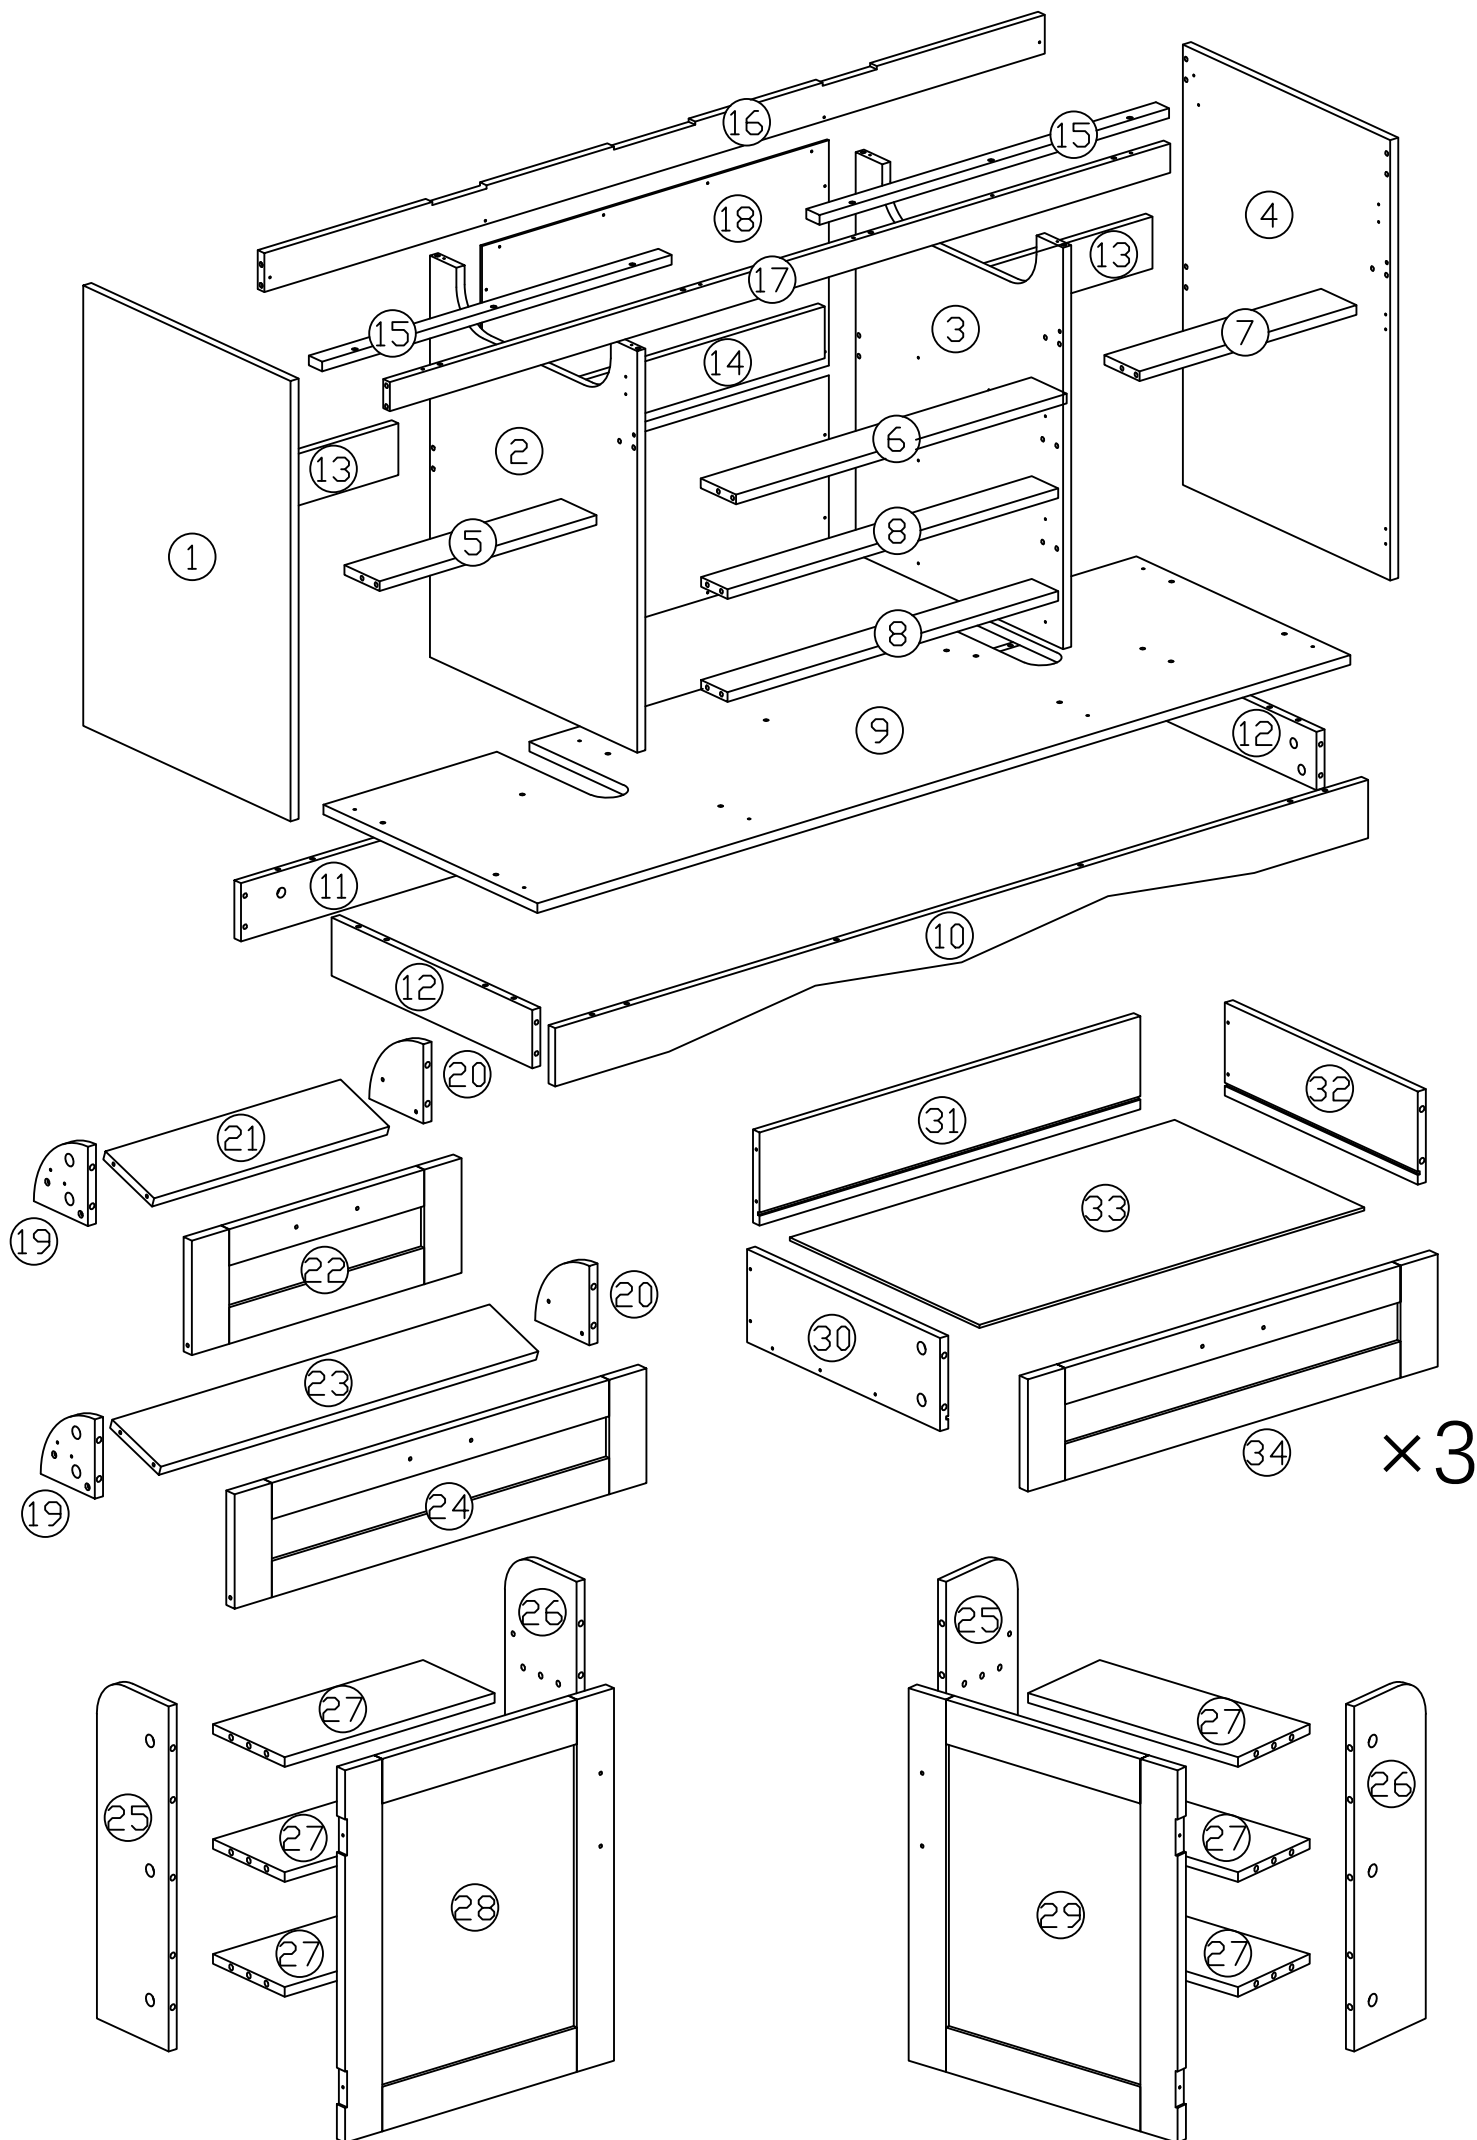

Parts and Operation Elements

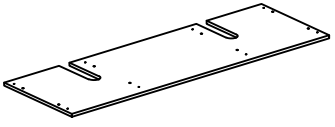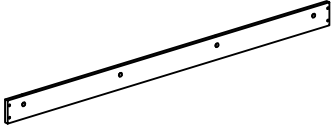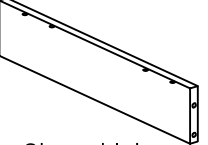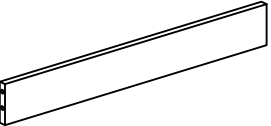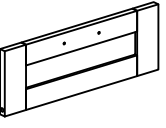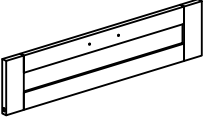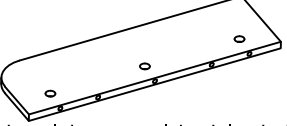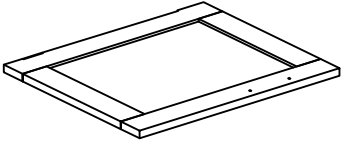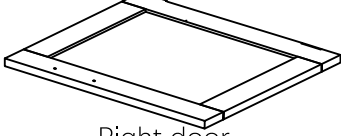			
① 1pc	② 1pc	③ 1pc	④ 1pc
			
⑤ 1pc	⑥ 1pc	⑦ 1pc	⑧ 2pcs
			
⑨ 1pc	⑩ 1pc	⑪ 1pc	⑫ 2pcs
			
⑬ 2pcs	⑭ 1pc	⑮ 2pcs	⑯ 1pc
			
⑰ 1pc	⑱ 1pc	⑲ 3pcs	⑳ 3pcs
			
㉑ 2pcs	㉒ 2pcs	㉓ 1pc	㉔ 1pc
			
㉕ 2pcs	㉖ 2pcs	㉗ 6pcs	㉘ 1pc
			
㉙ 1pc			





Hardware

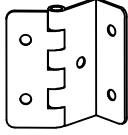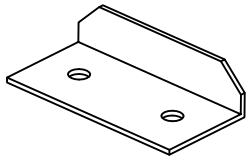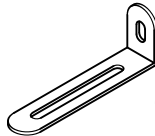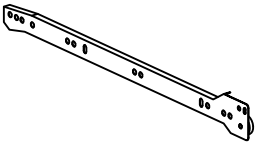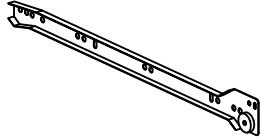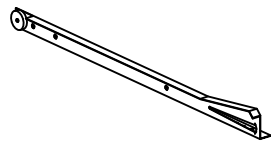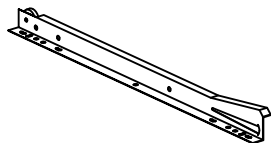 6x32mm Cam bolt		 15x9.5mm Cam lock		 7x30mm Wooden dowel		 Dual-purpose screwdriver	
A	96+2pcs	B	96+2pcs	C	64+2pcs	D	1pc
 Hinge		 3.5x14mm Screw		 3x14mm Screw		 Sticker	
E	4pcs	F	62+2pcs	G	18pcs	H	96pcs
 Shackles		 Magnetic collision		 Magnetic contact iron sheet		 Handle	
I	6pcs	J	2pcs	K	2pcs	L	8pcs
 M4x18mm Bolt		 L-shaped iron sheet		 Door stopper		 3.5x12mm Screw	
M	16pcs	O	6pcs	P	12pcs	Q	36+2pcs
 4x30mm Screw		    4x14mm screw 5x40mm screw Anti-dumping device				 D6x325mm Iron rod	
R	38+2pcs	S	2sets			T	6pcs
 350mm		 350mm		 350mm		 350mm	
CL	3pcs	CR	3pcs	DL	3pcs	DR	3pcs







SPARE BAG


THE SPARE BAG INCLUDED EXTRA HARDWARE FOR DAMAGED OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING.

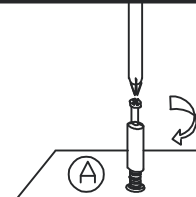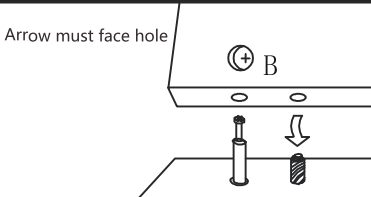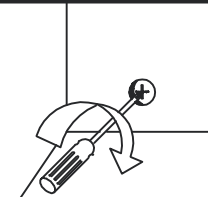			
Gently screw cam bolt into the threaded anchor.	Insert the wood dowel halfway into hole.		Screw the camlock firmly into locked position.


1



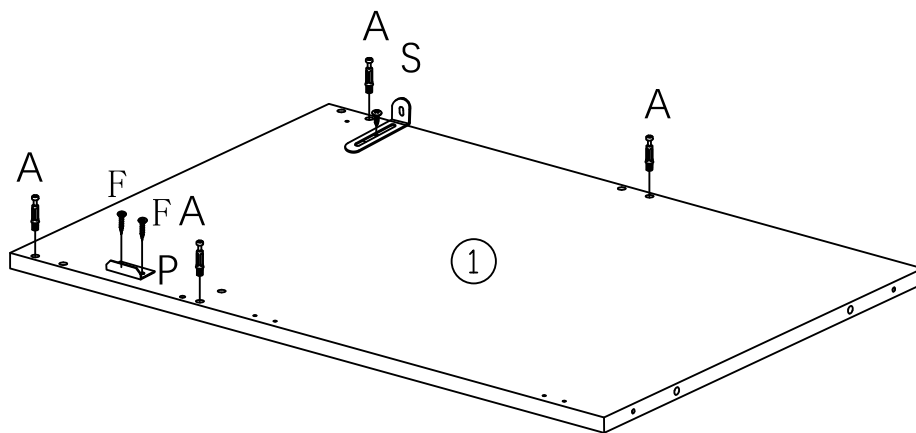



- A  x4
- D  x1
- F  x2
- P  x1
- 
- S  x1

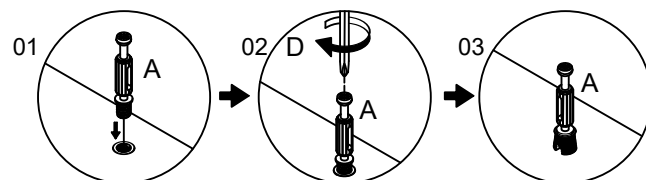



2

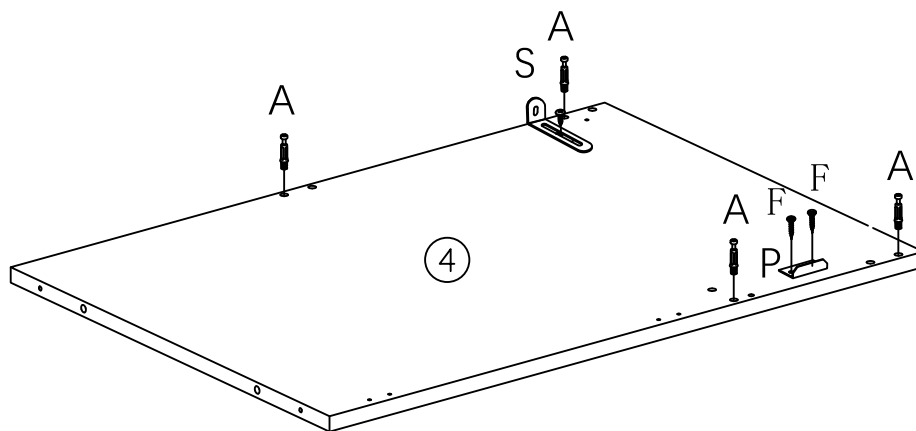


- A  x4
- D  x1
- F  x2
- P  x1
- 
- S  x1

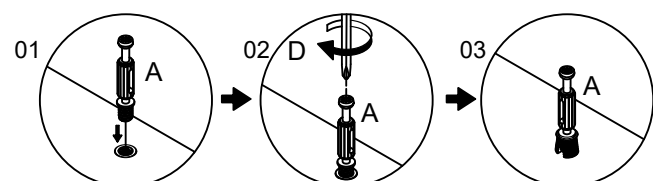


3

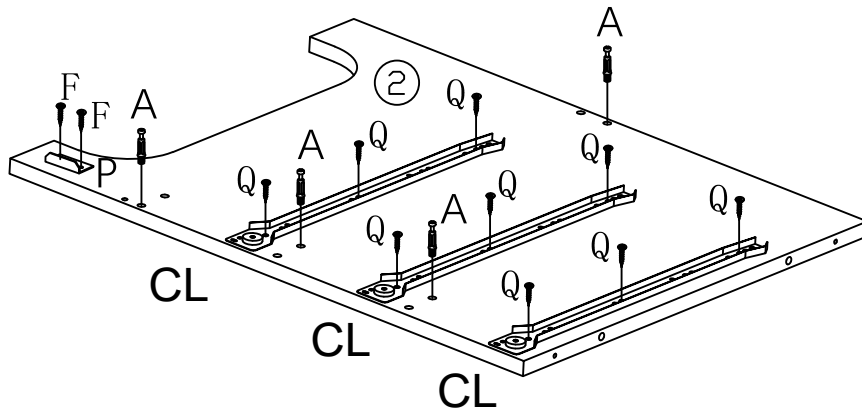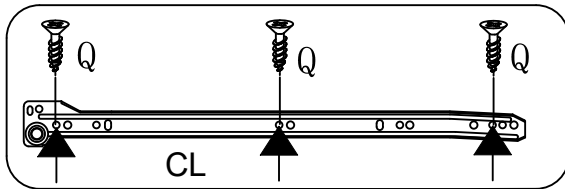


- A  x4
- D  x1
- F  x2
- P  x1
- Q  x9
- CL  x3

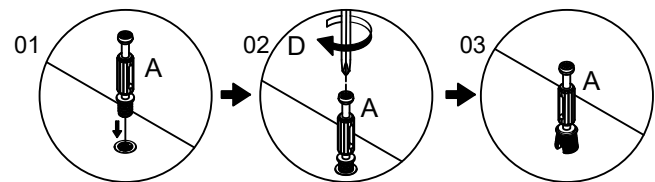


4

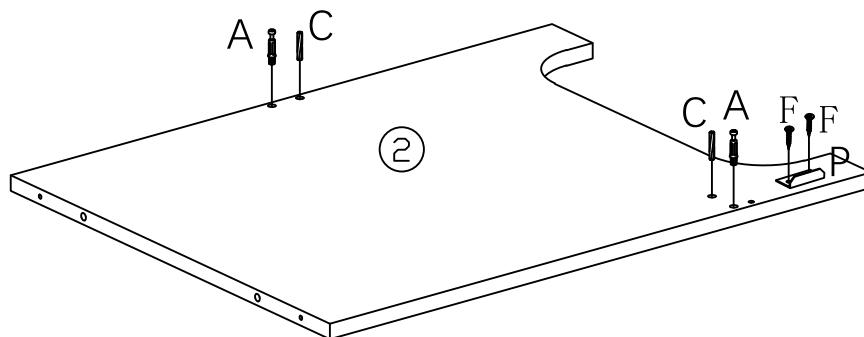



- A  x2
- D  x1
- F  x2
- P  x1

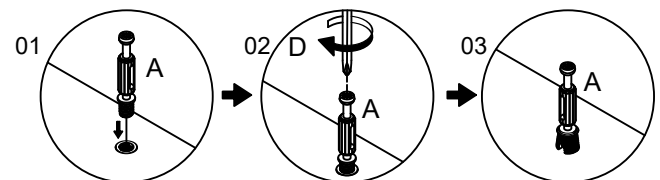

5


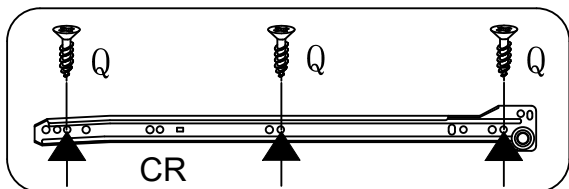


- A  x4
- D  x1
- F  x2
- P  x1
- Q  x9
- CR  x3

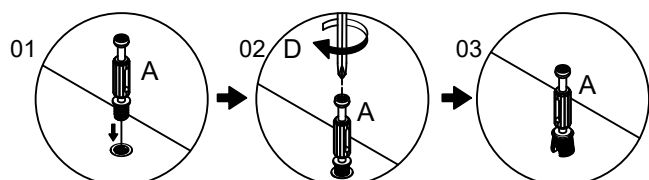
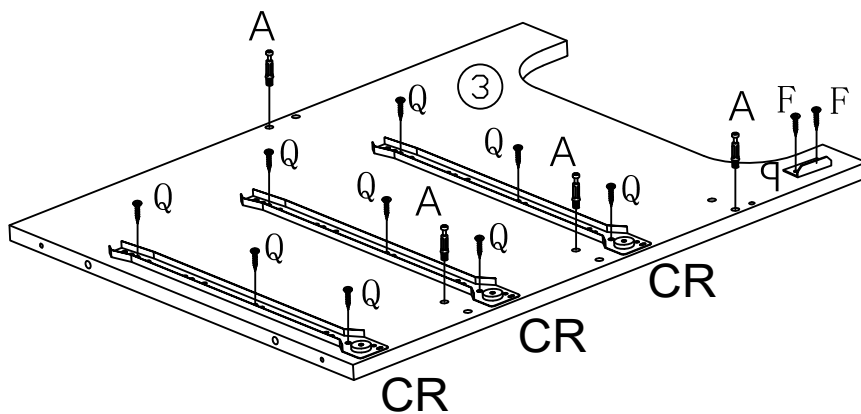



6

- A  x2
- D  x1
- F  x2
- P  x1

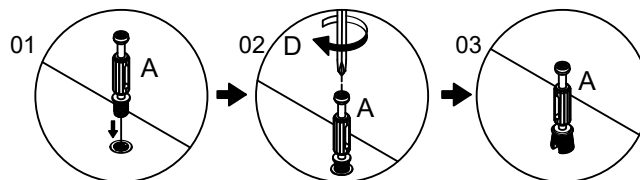
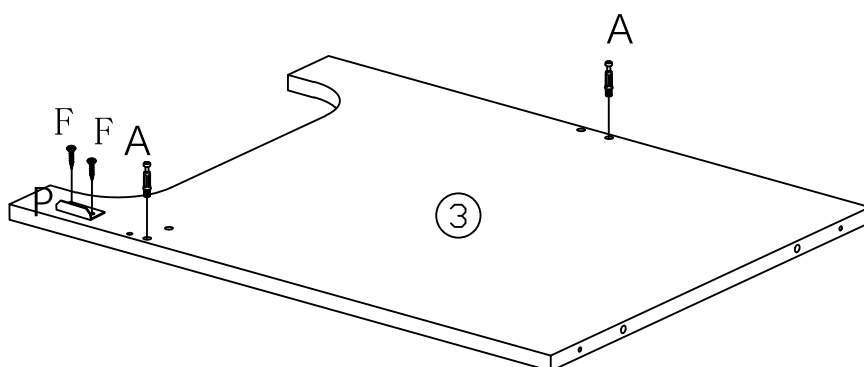



7

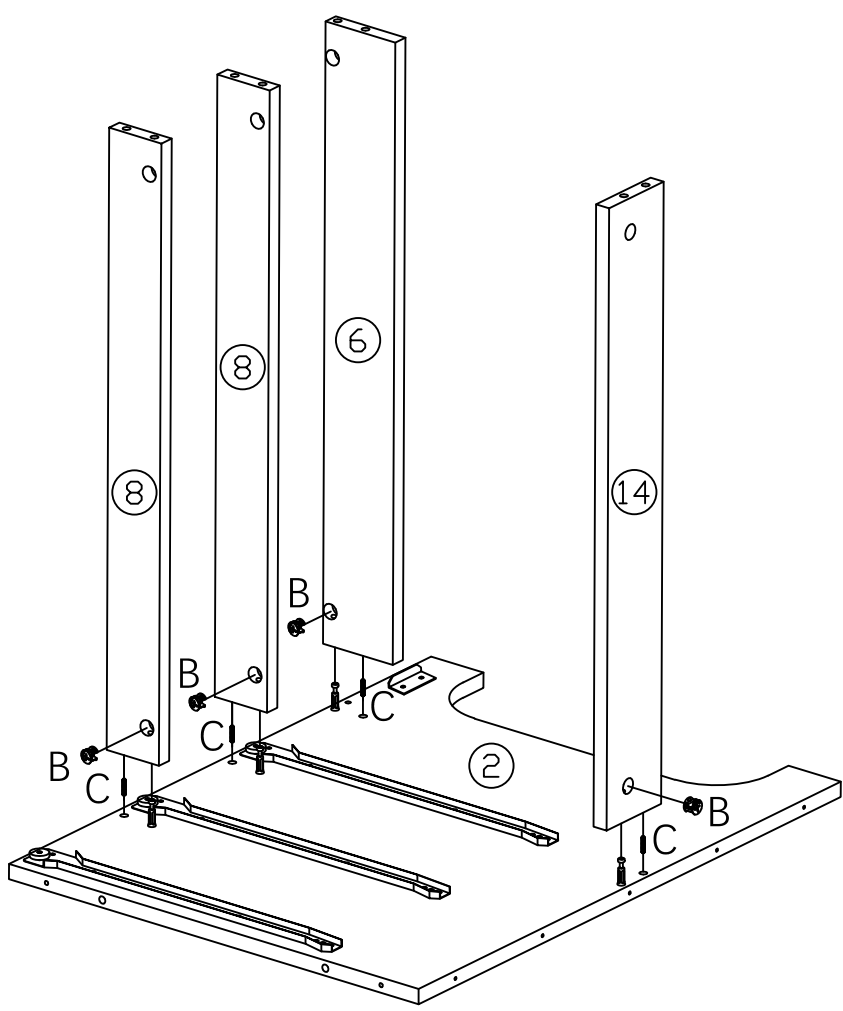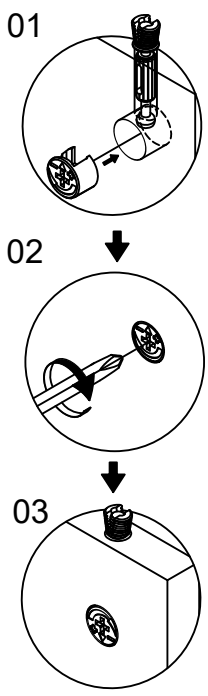


- B  x4
- C  x4
- D  x1

8

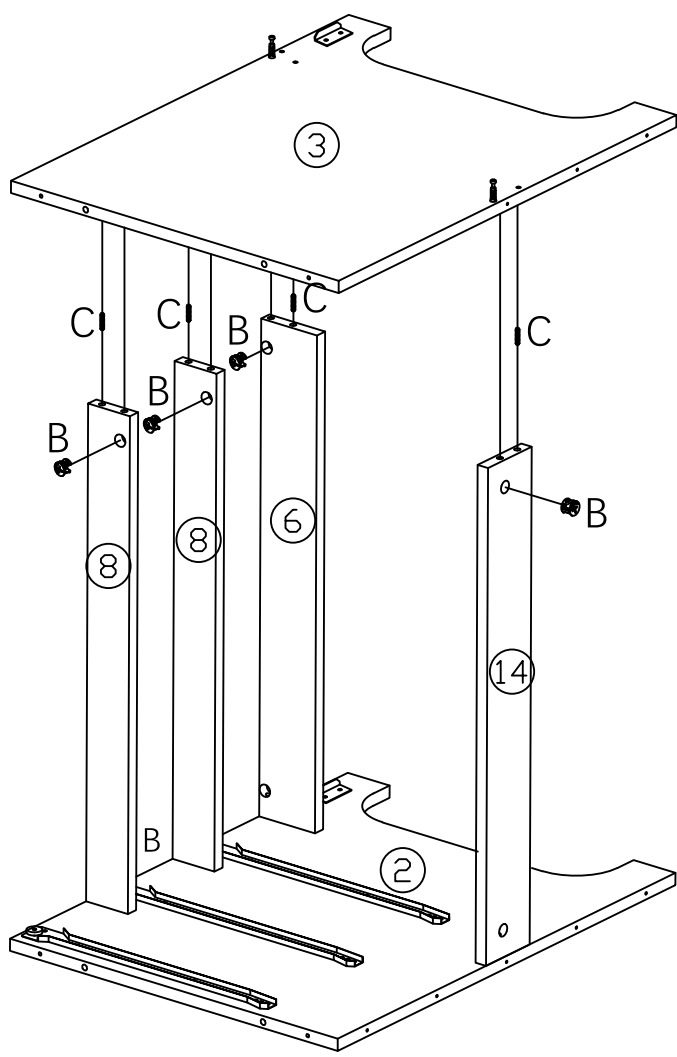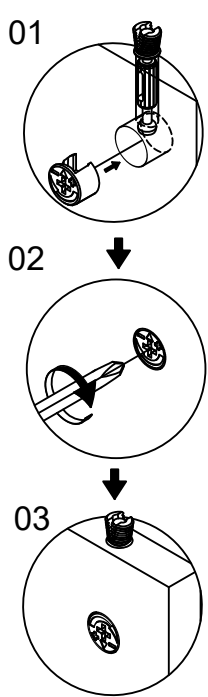


- B  x4
- C  x4
- D  x1

9

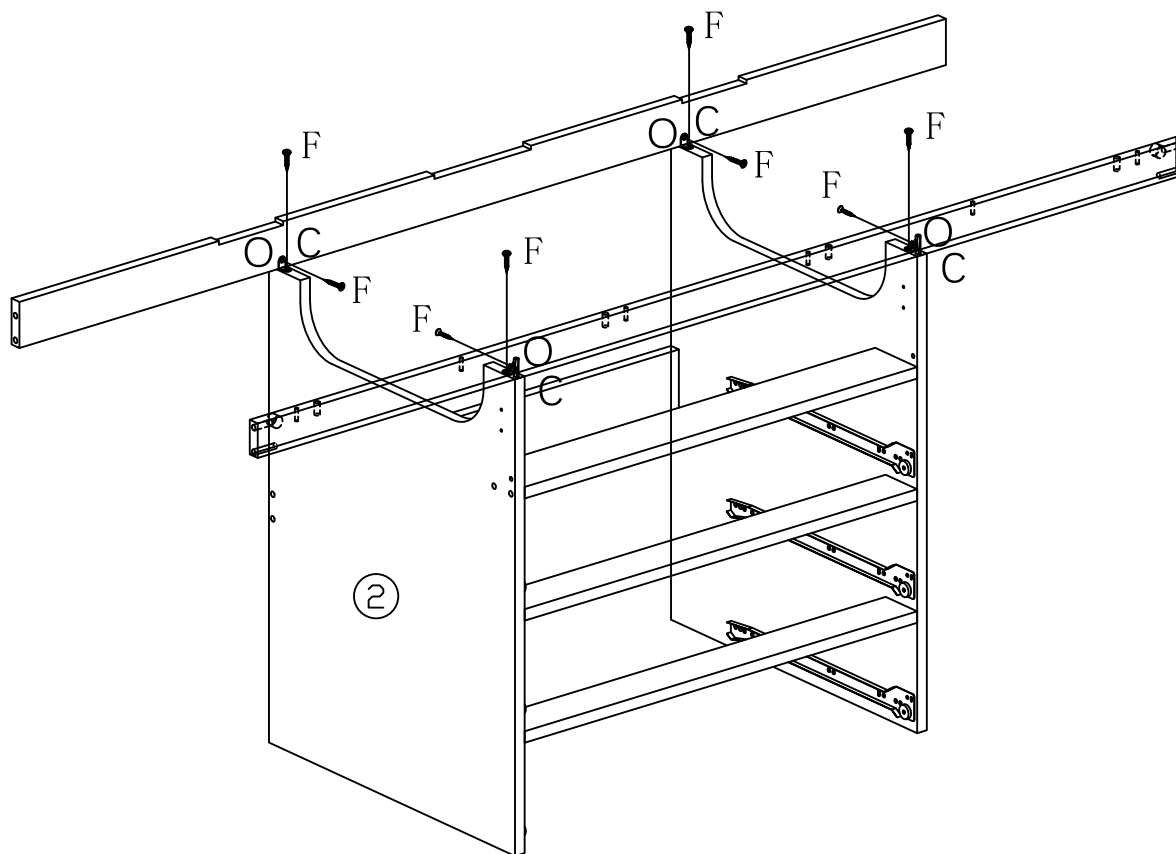


- C  x4
- D  x1
- F  x8
- O  x4



10

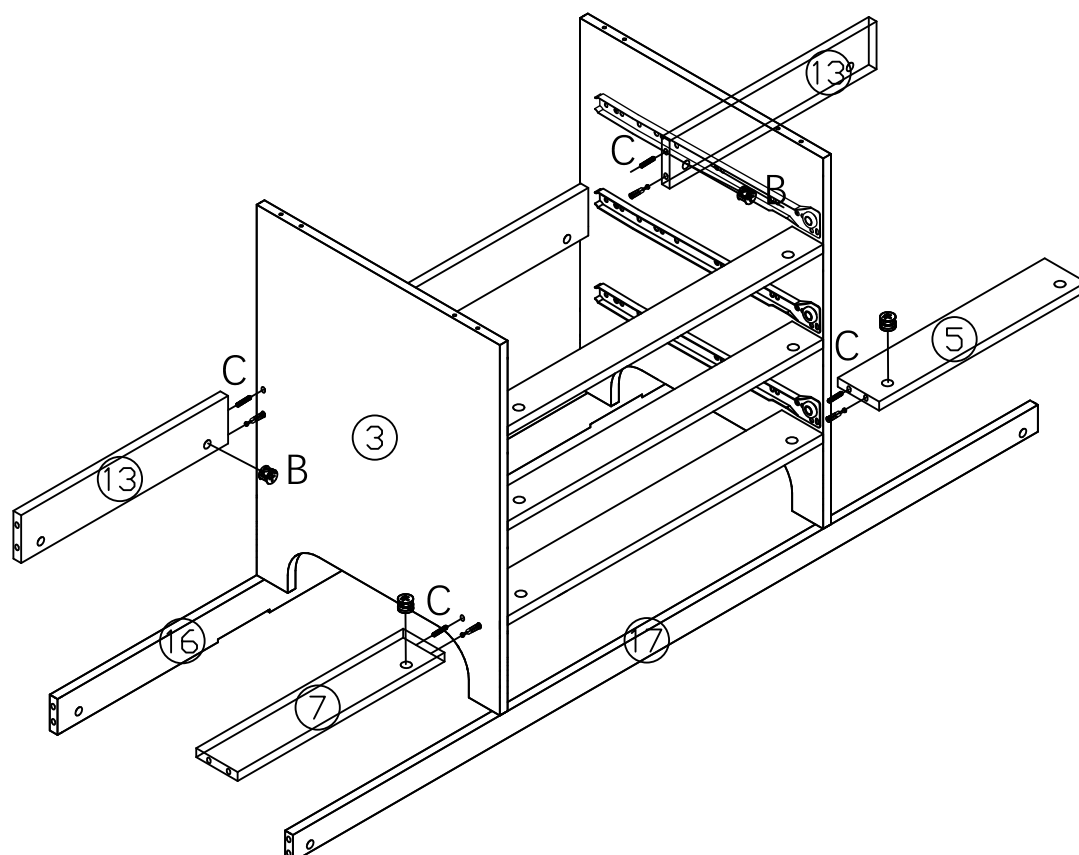

- B  x4
- C  x4
- D  x1


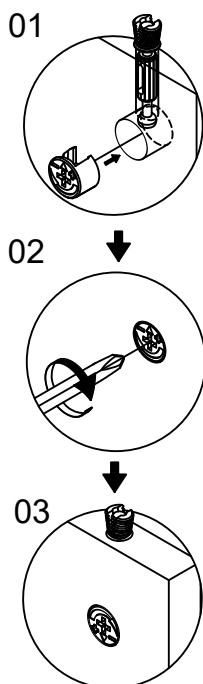


11

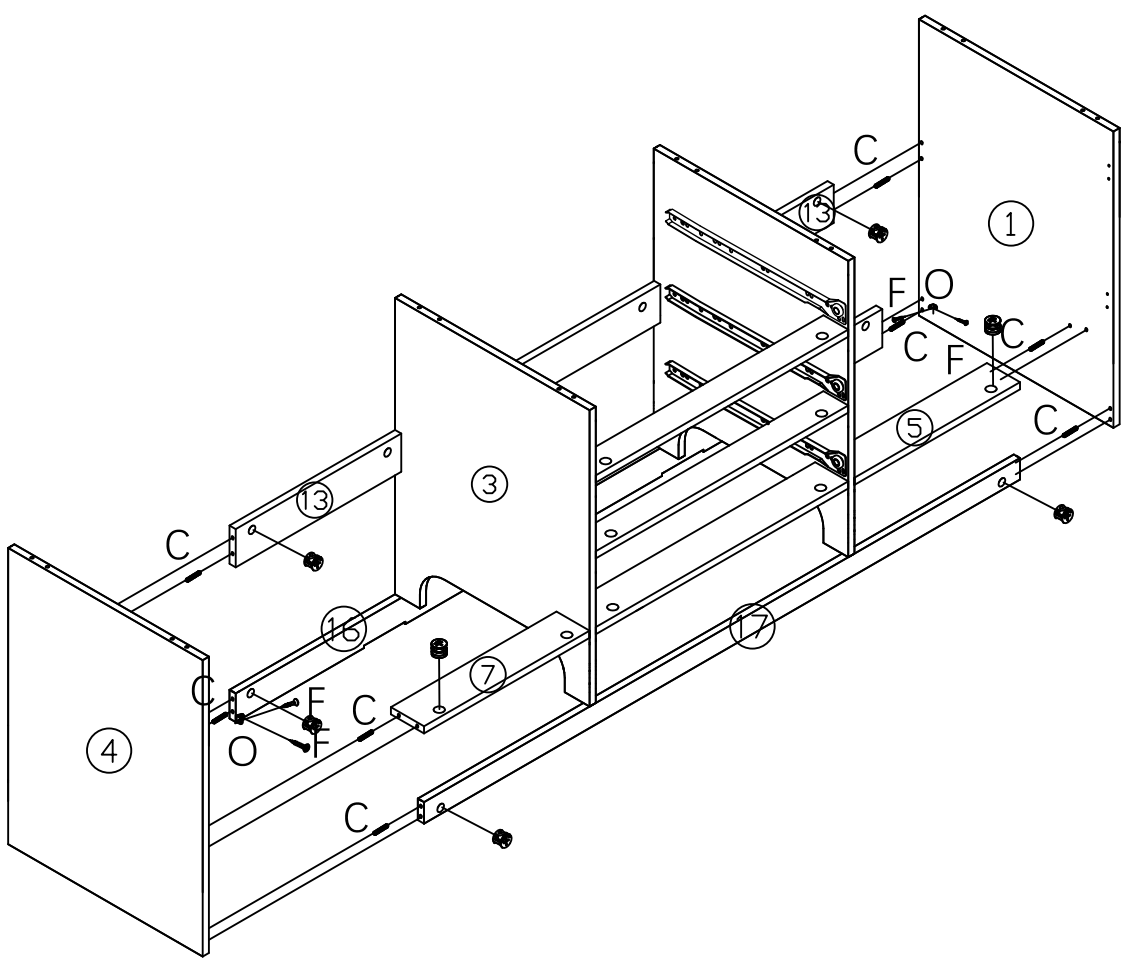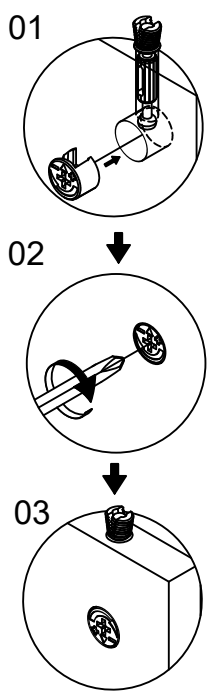

- B  x8
- C  x8
- D  x1



12

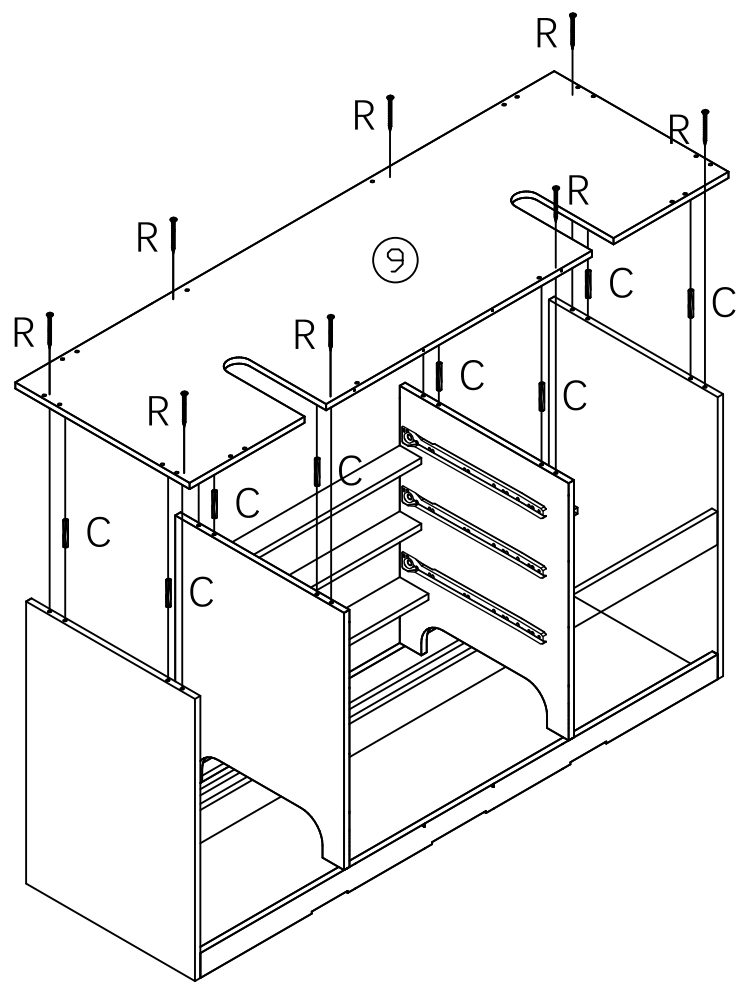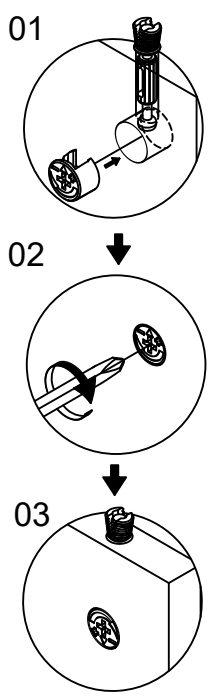

- R  x8
- C  x8
- D  x1



13

- A  x4
- C  x4
- D  x1

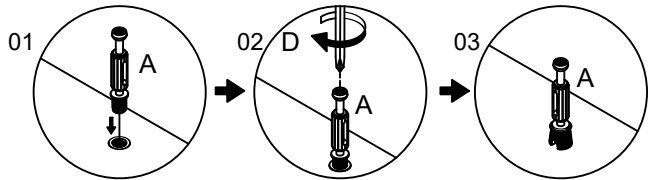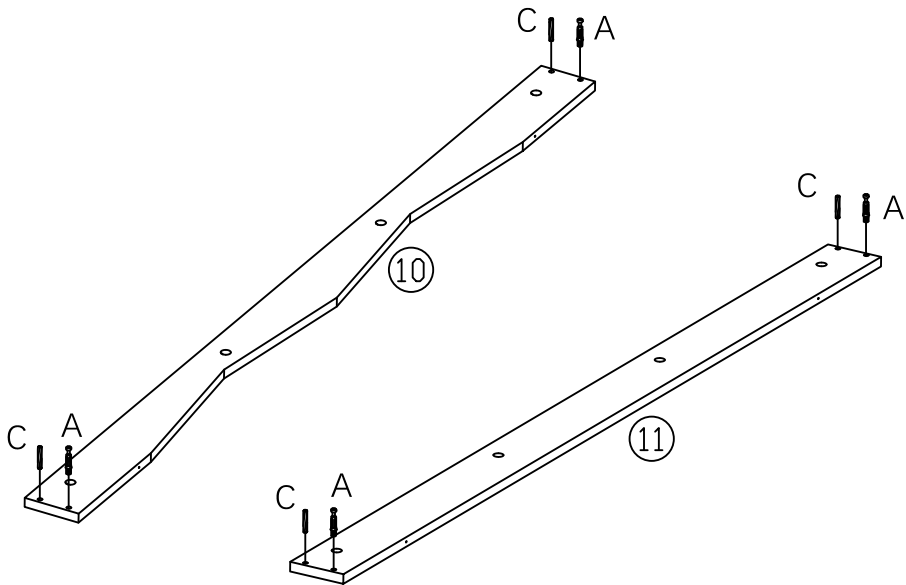


14


- B  x4
- D  x1

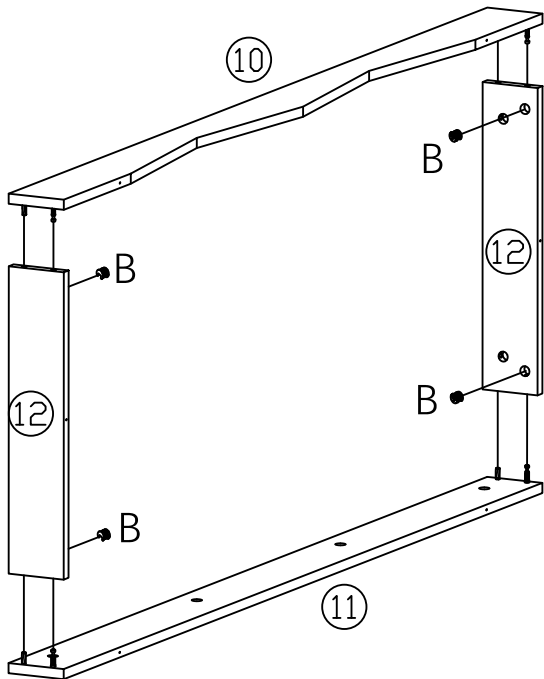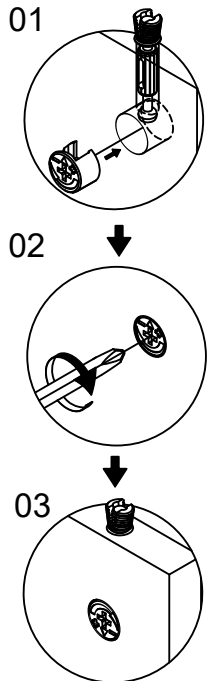

15

A  x12


D  x1


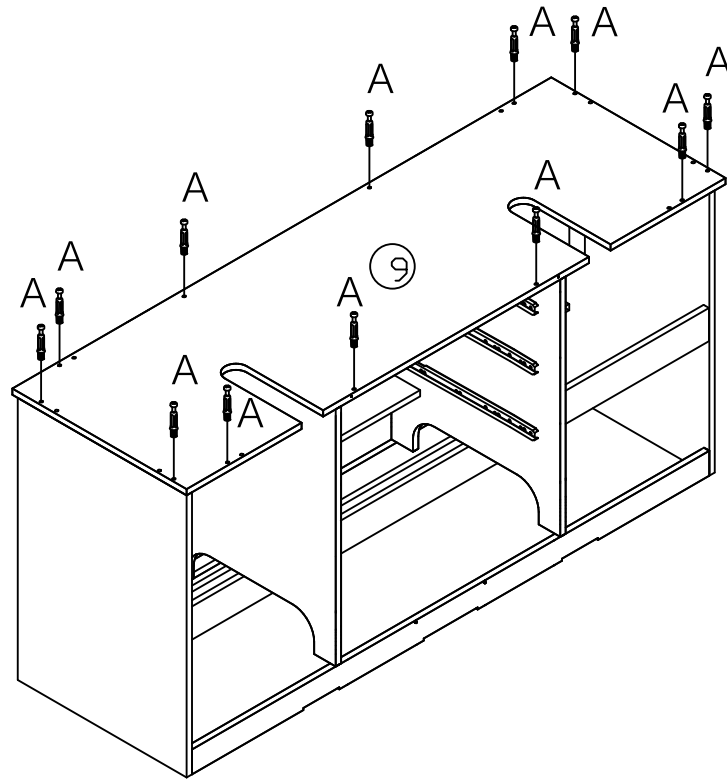


16




B  x12

C  x8



D  x1

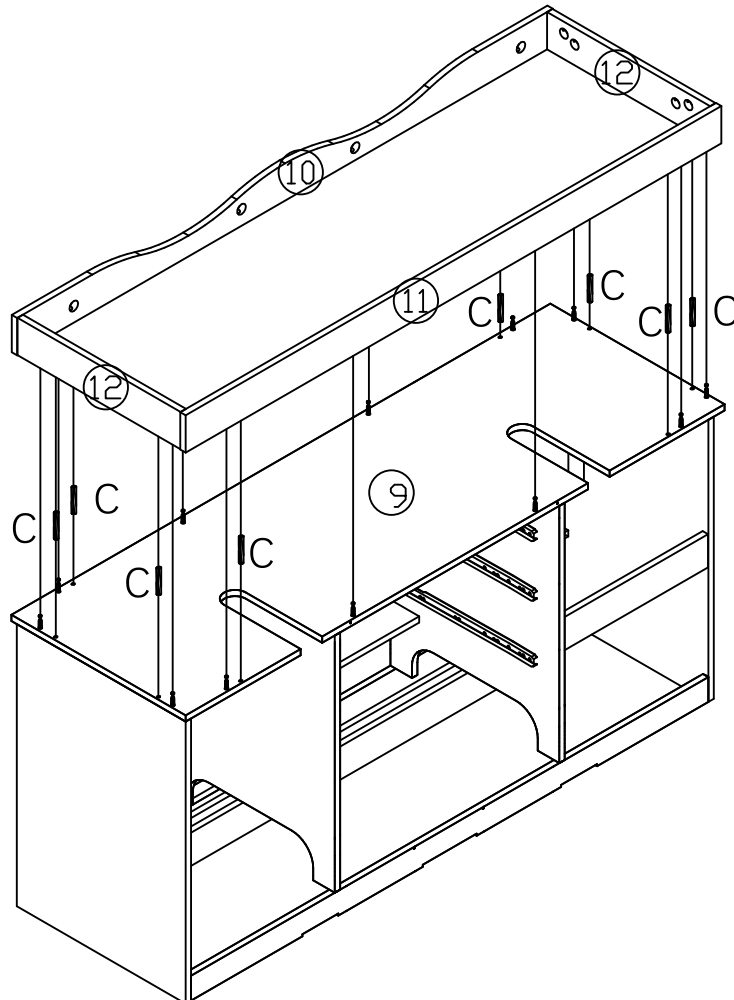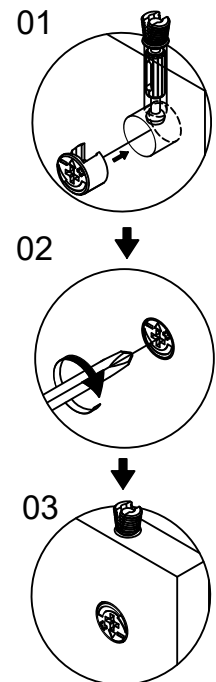


17

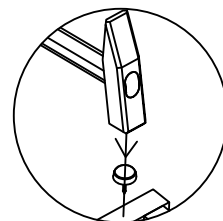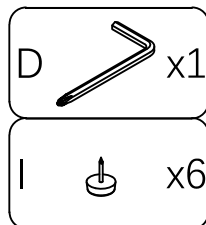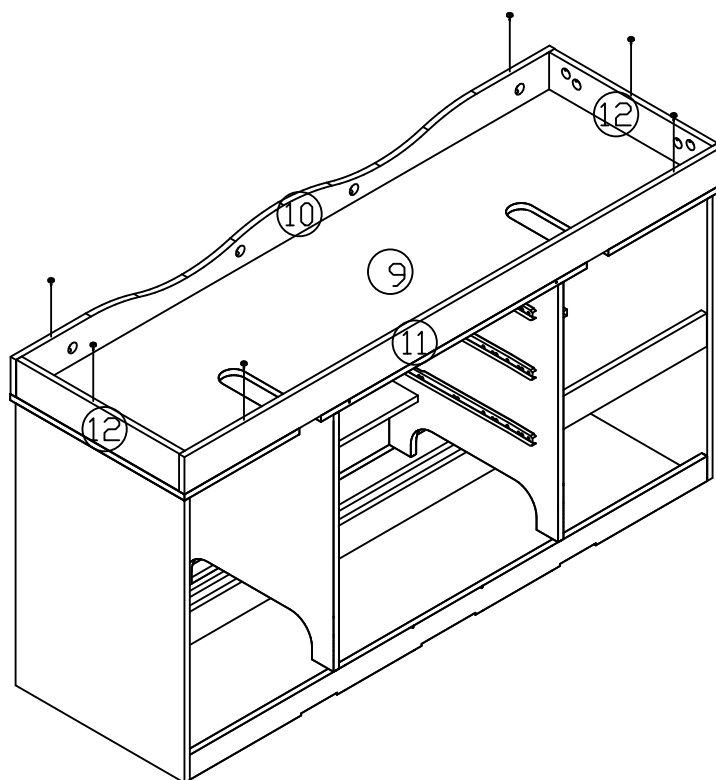


18

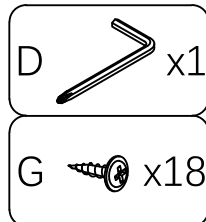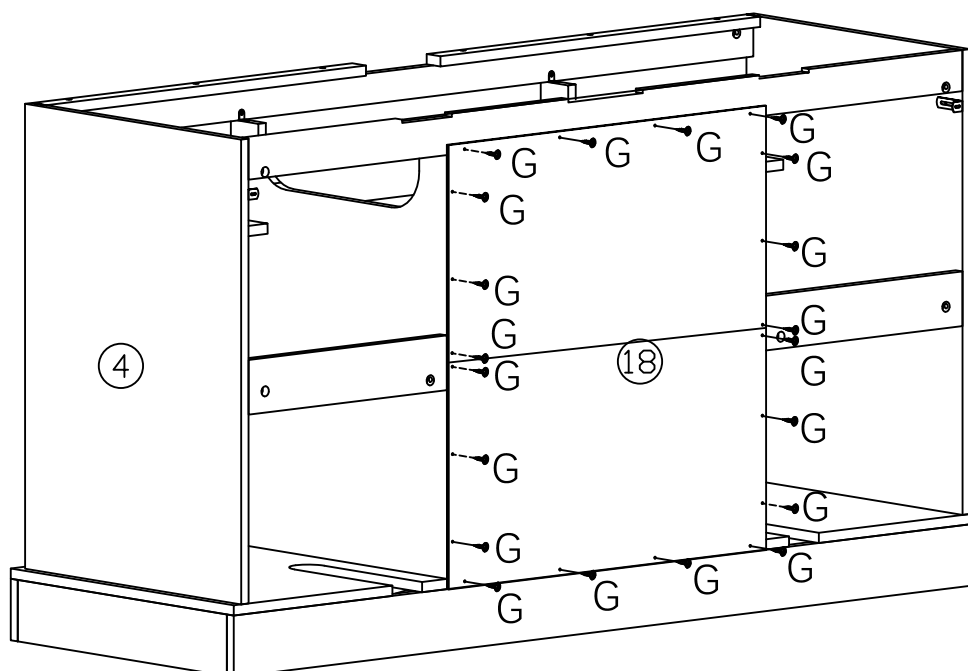


19

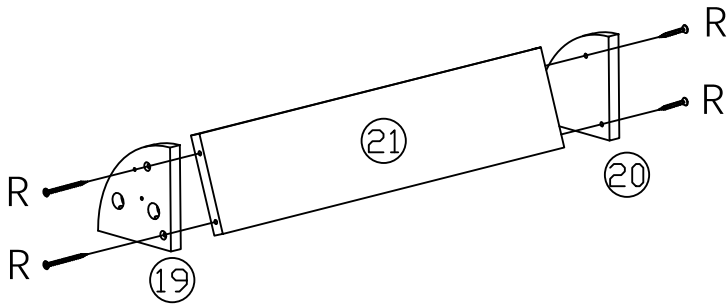


- A  x8
- D  x1
- N  x4
- R  x8

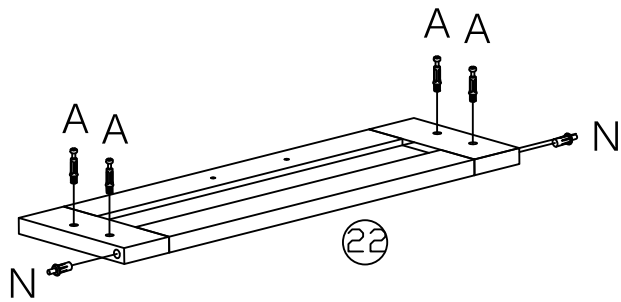



x2

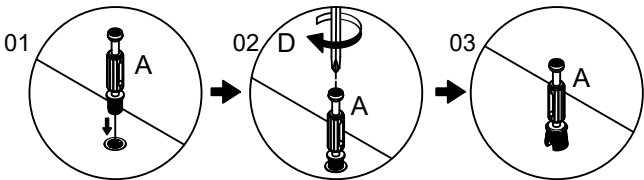

20

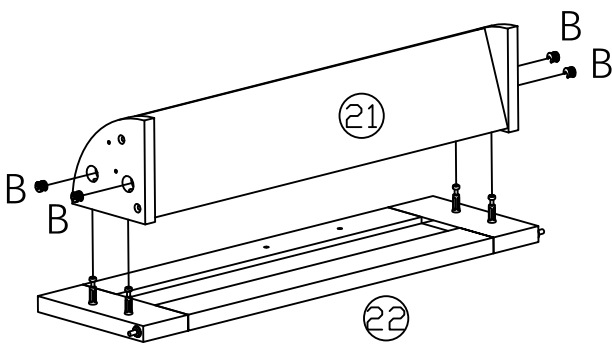


- B  x8
- D  x1
- F  x8
- L  x2
- M  x4
- P  x4

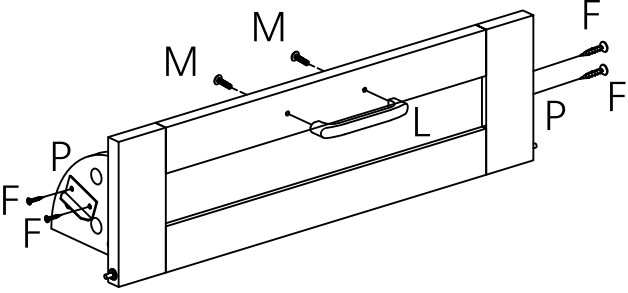
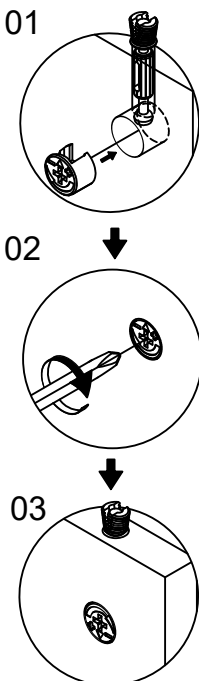


x2


21

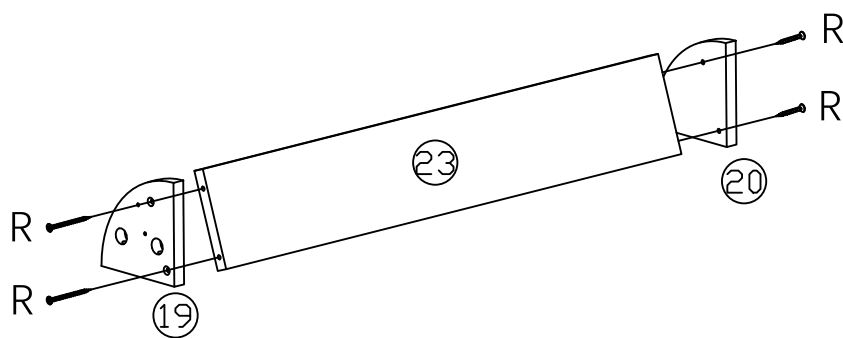





- A  x4
- D  x1
- N  x2
- R  x4

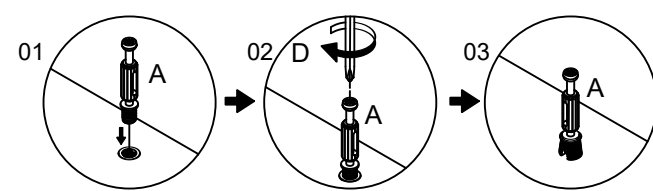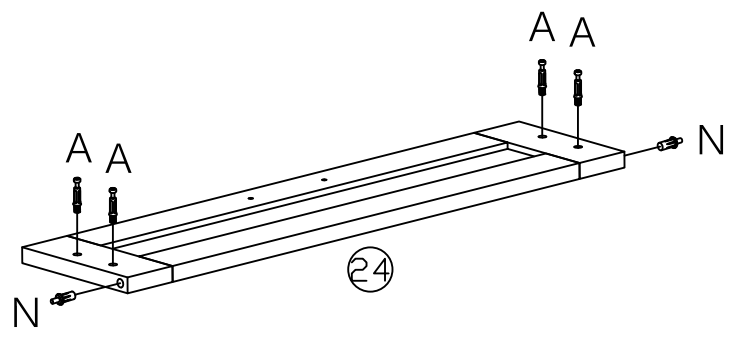

22

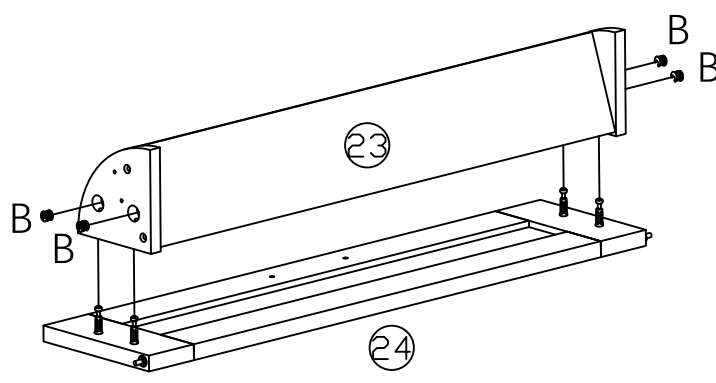

- B  x4
- D  x1
- F  x4
- L  x1
- M  x2
- P  x2

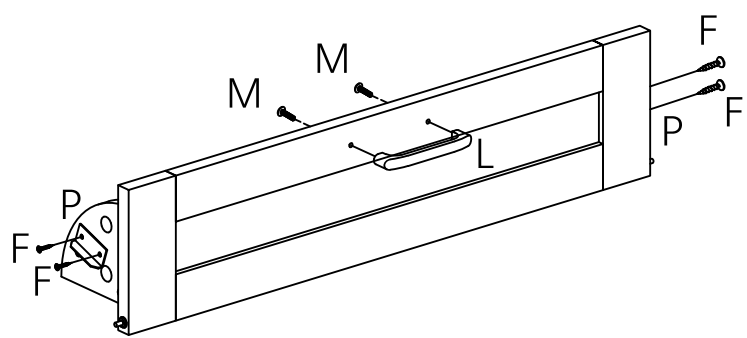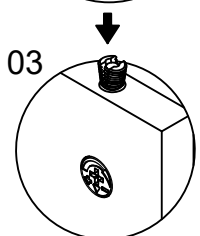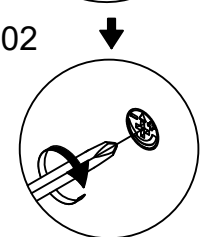
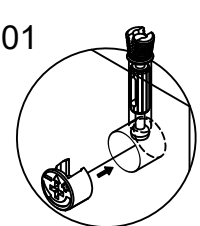


23


A  x24

C  x12

D  x1

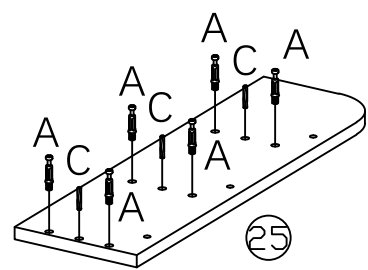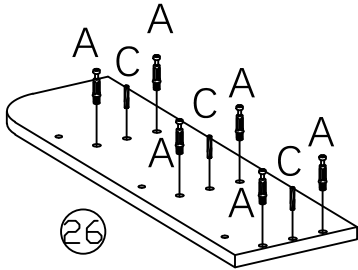

x2


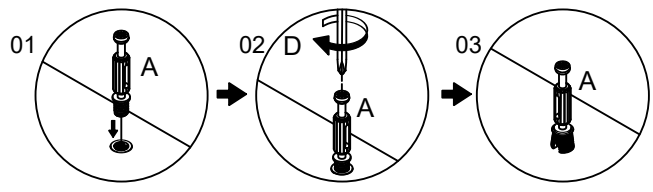


24

B  x24


D  x1

T  x6

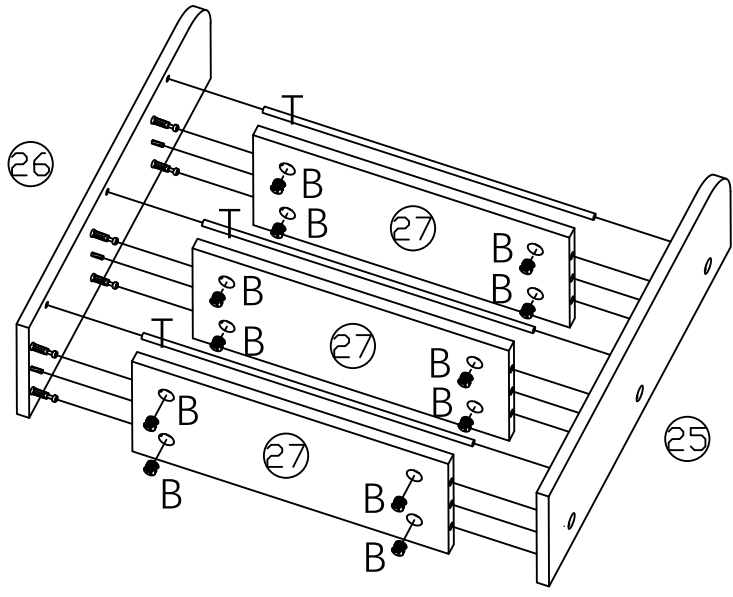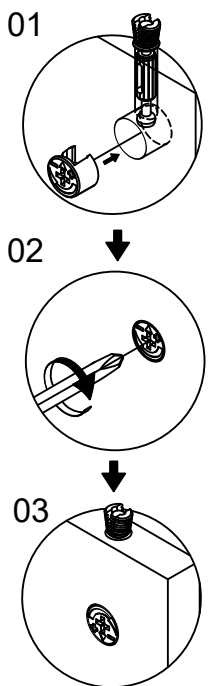


x2


25

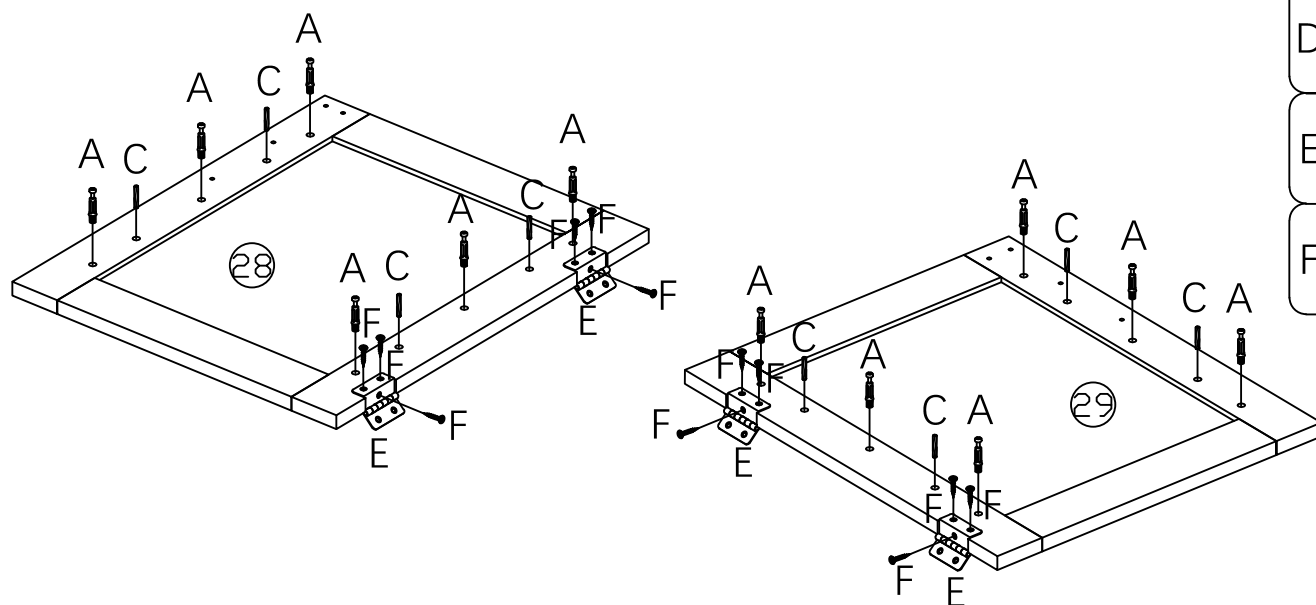



- A  x12
- C  x8
- D  x1
- E  x4
- F  x12

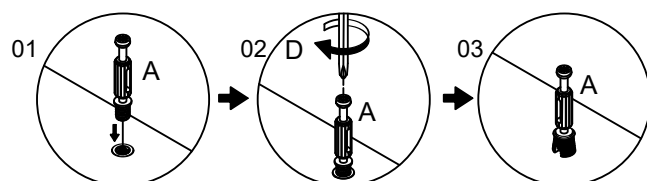



26

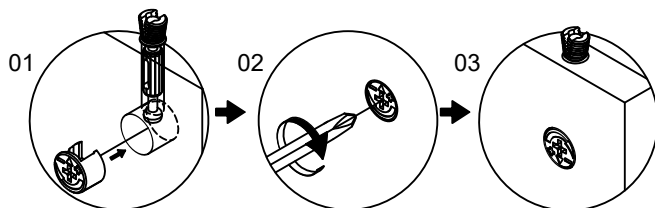


- B  x12
- K  x2
- D  x1
- L  x2
- F  x4
- M  x4

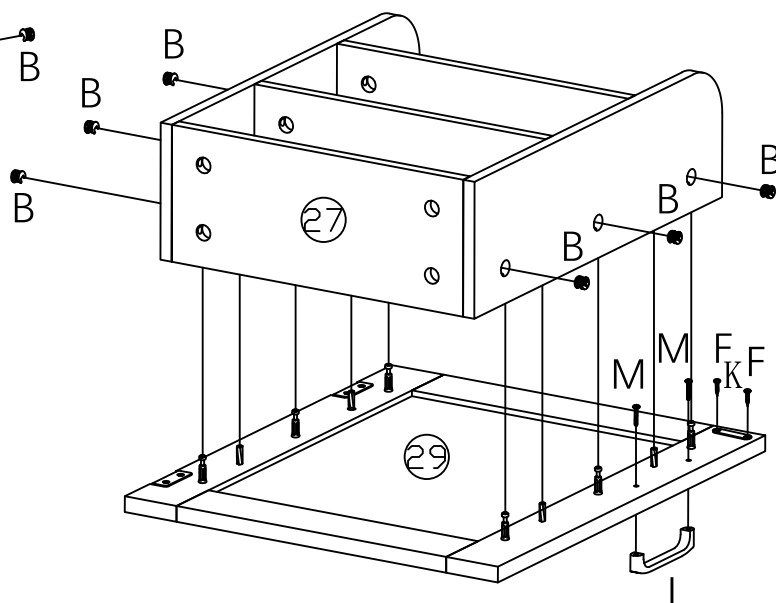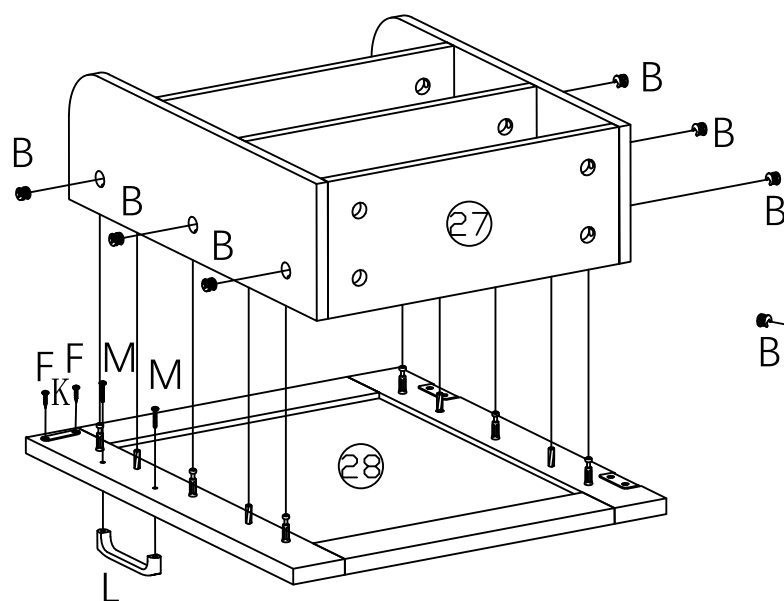



27

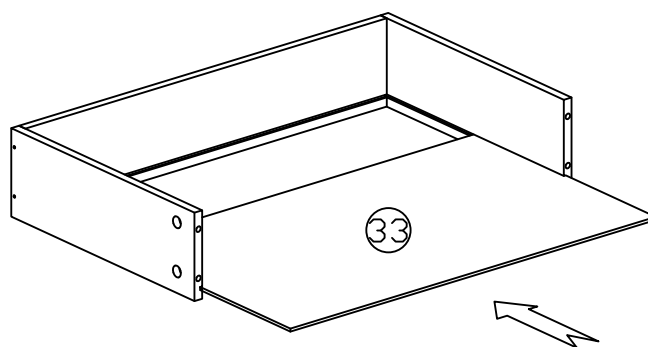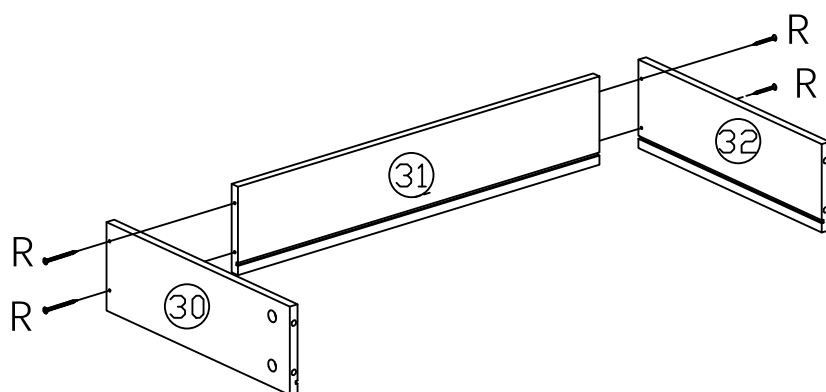




×3

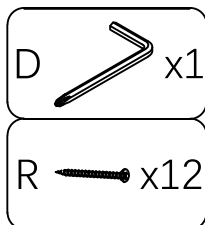


28

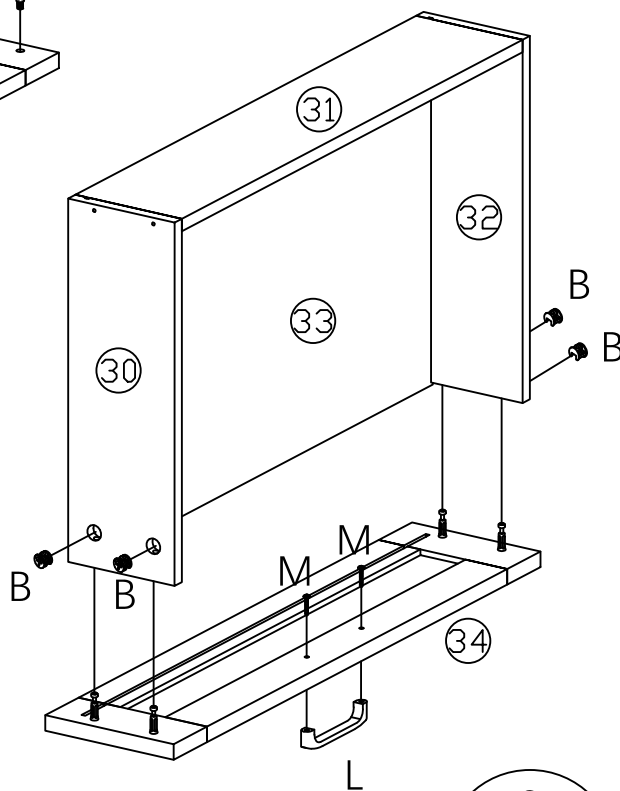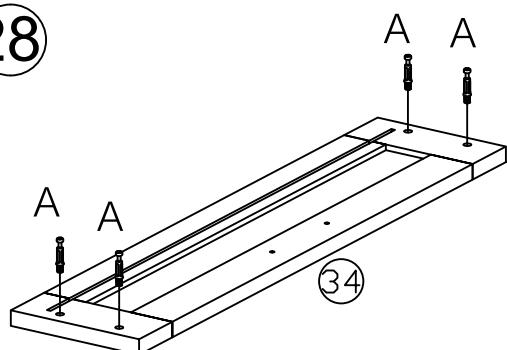

×3

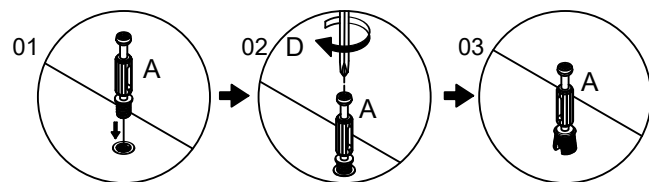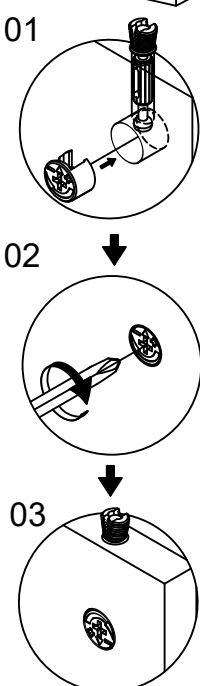
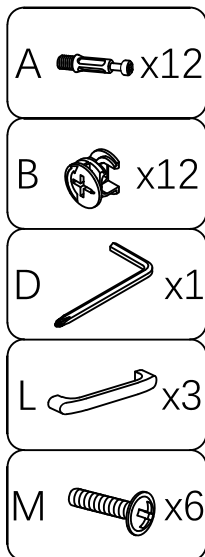


29

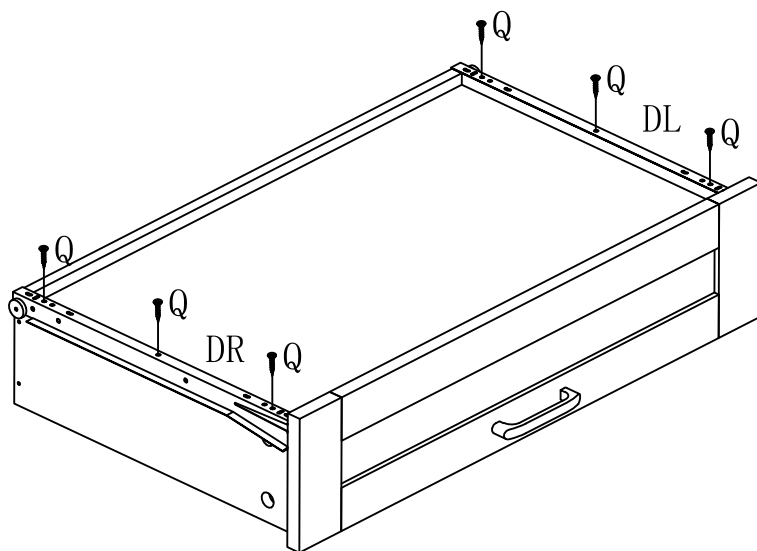


- D  x1
- Q  x18
- DL  x3
- DR  x3


×3

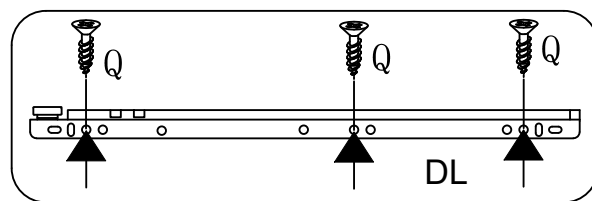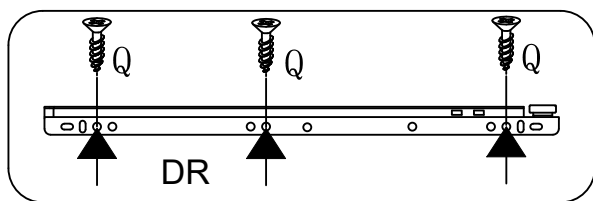





30

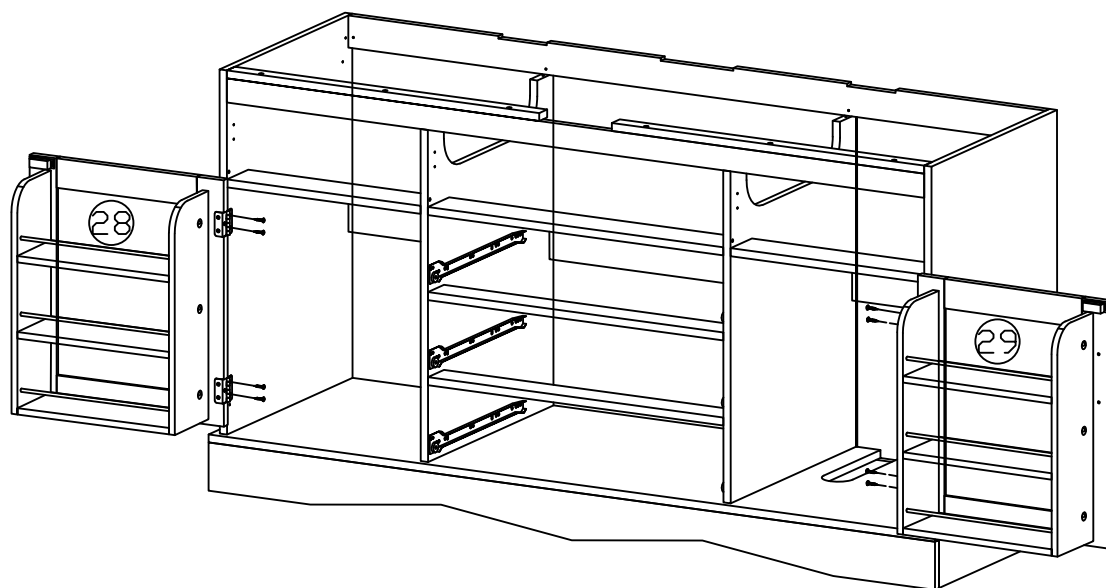

- D  x1
- F  x8

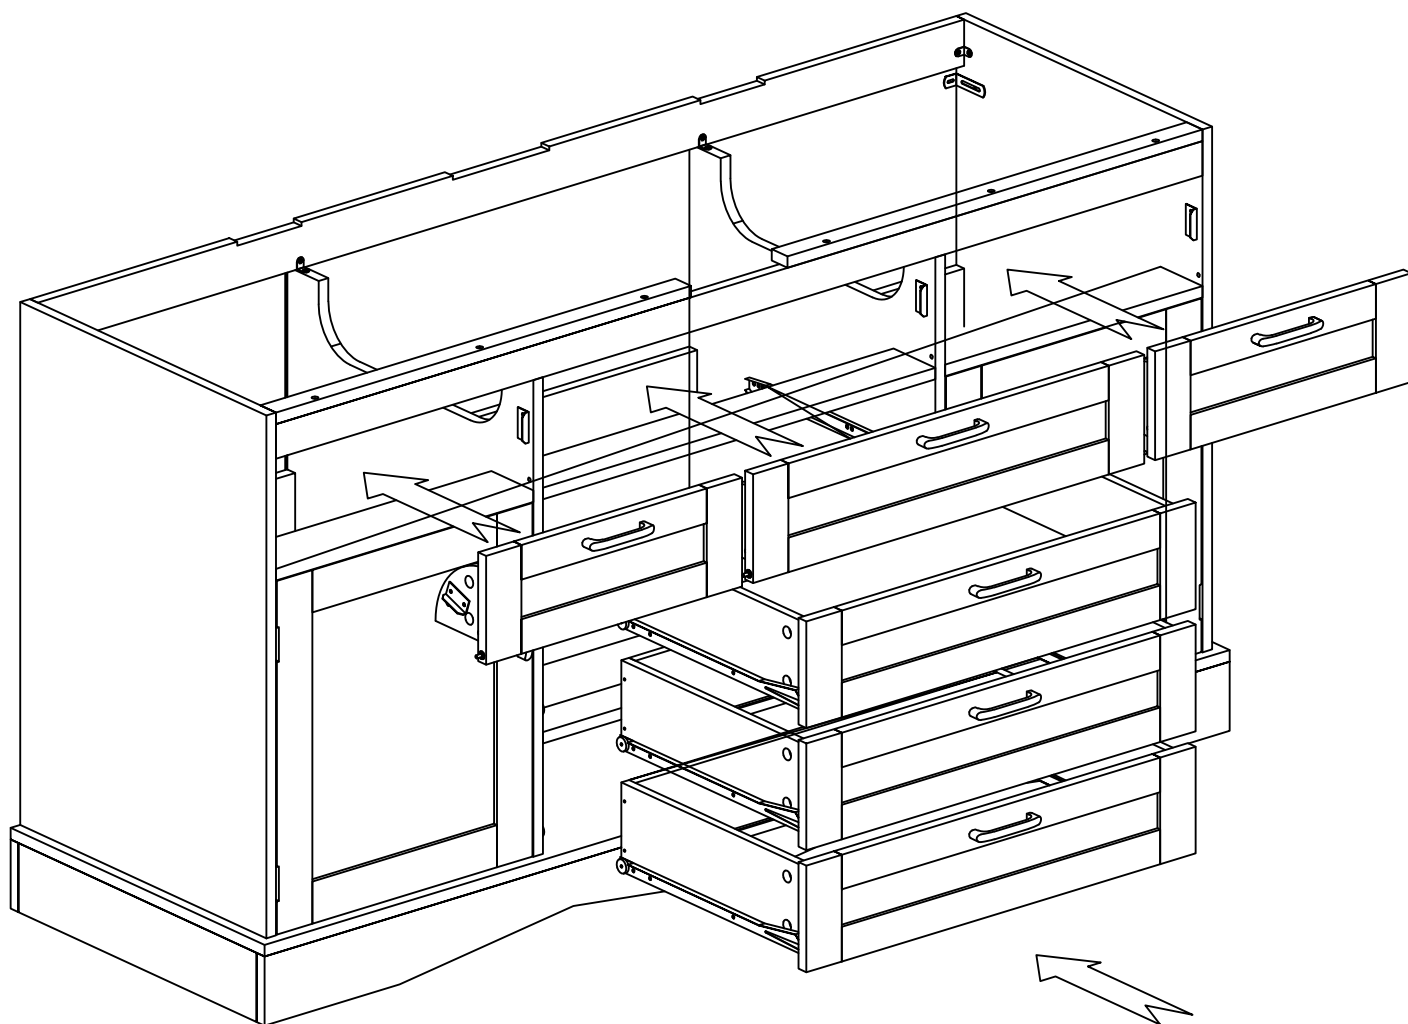


32

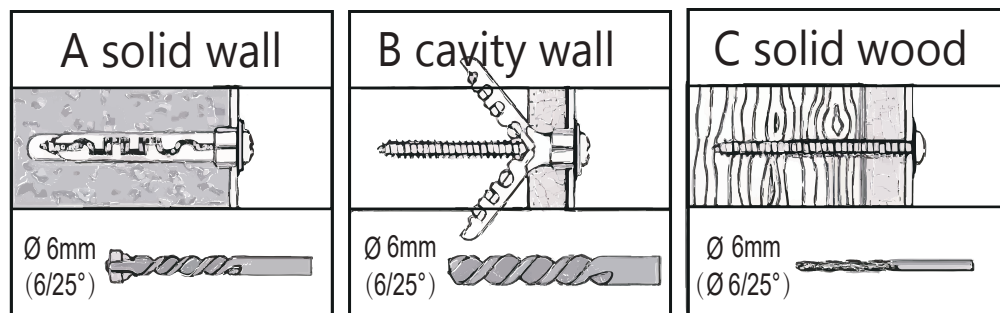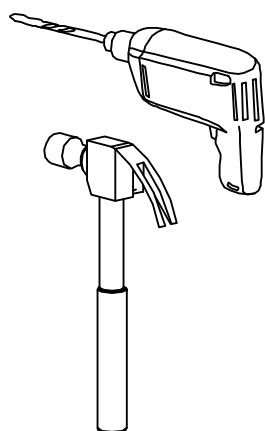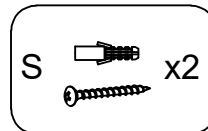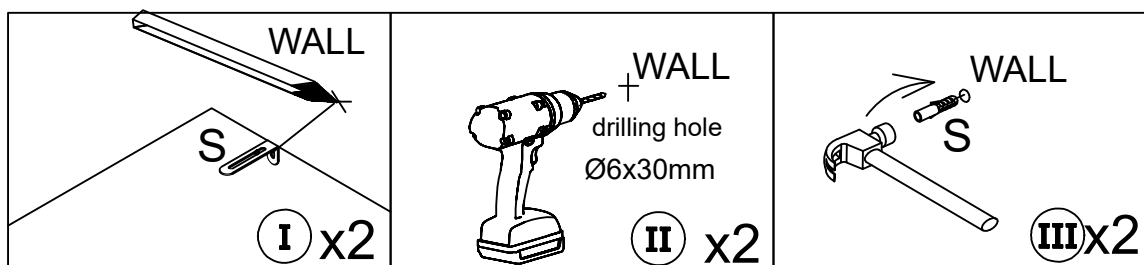

Warning: If you overturn the furniture, it may cause serio
We have a wall connection device attached, please use it to hold the furniture following these instructions.


1. Mark the corresponding hole positions where you want to place the furniture;
2. Use a impact drill to drill holes and pay attention to avoid wires and water pipes;
3. Knock the expansion pipes into the wall holes;
4. Place the furniture in the corresponding position and tighten the wall connection device with screws.

WALL

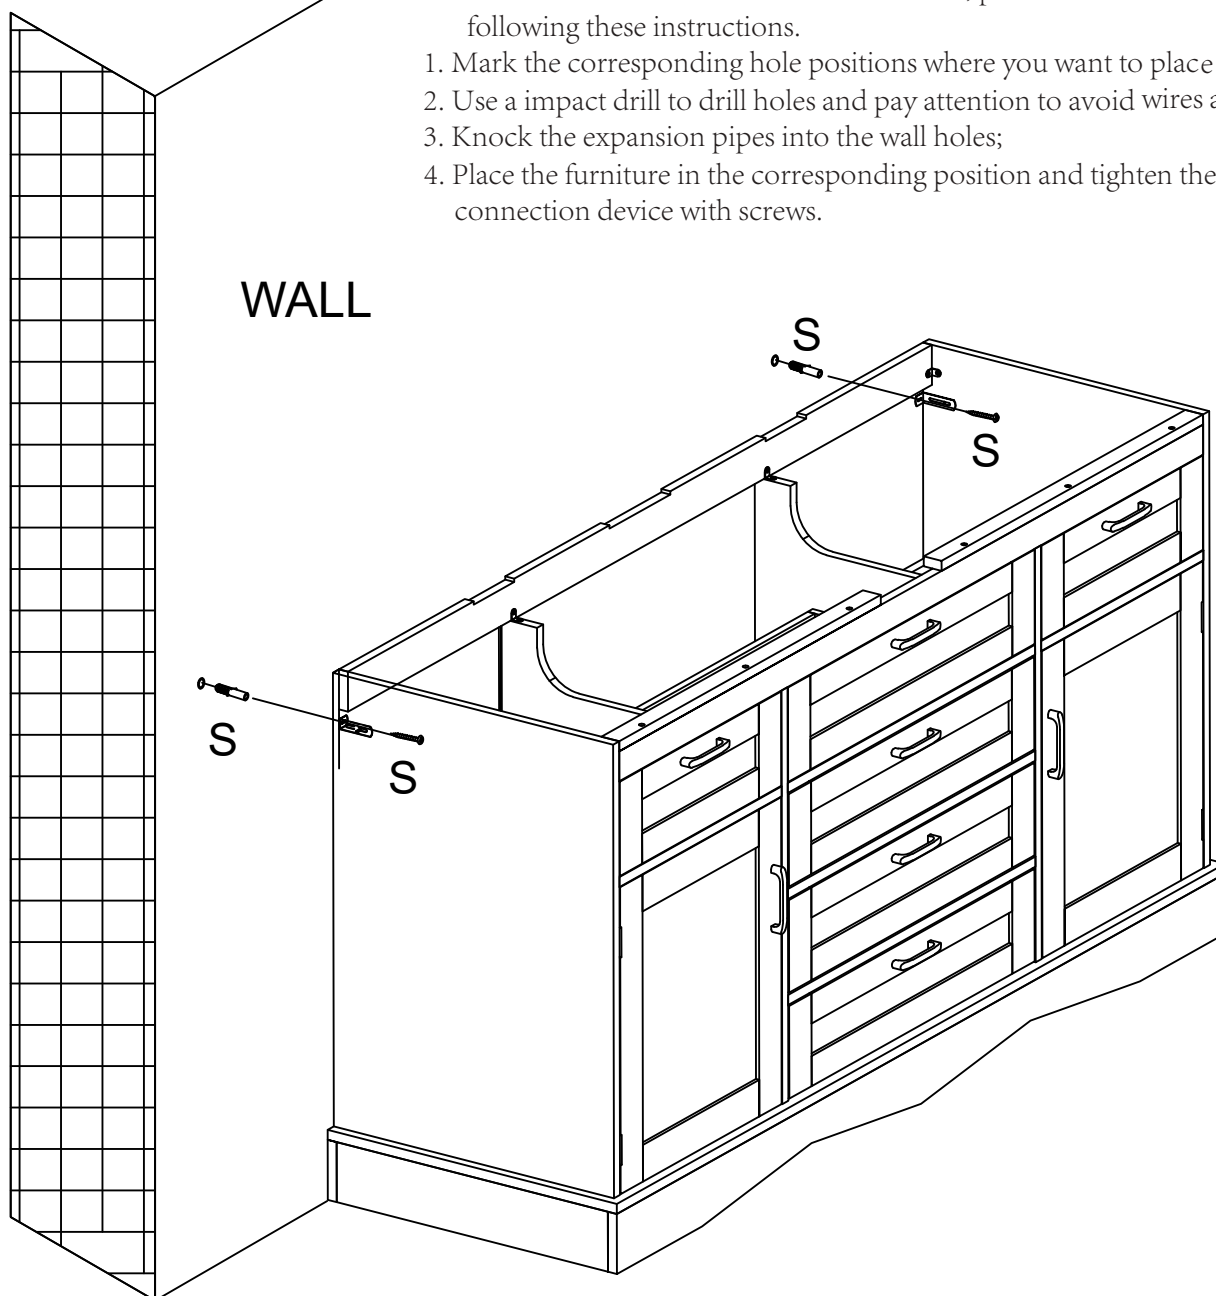

Please complete the installation of the faucet and basin first,
and then place the basin on the cabinet

Note: After installing the sink, you need to apply
Silicone to fix the circle, and you need to
wait patiently for 10 hours for the glue to dry.

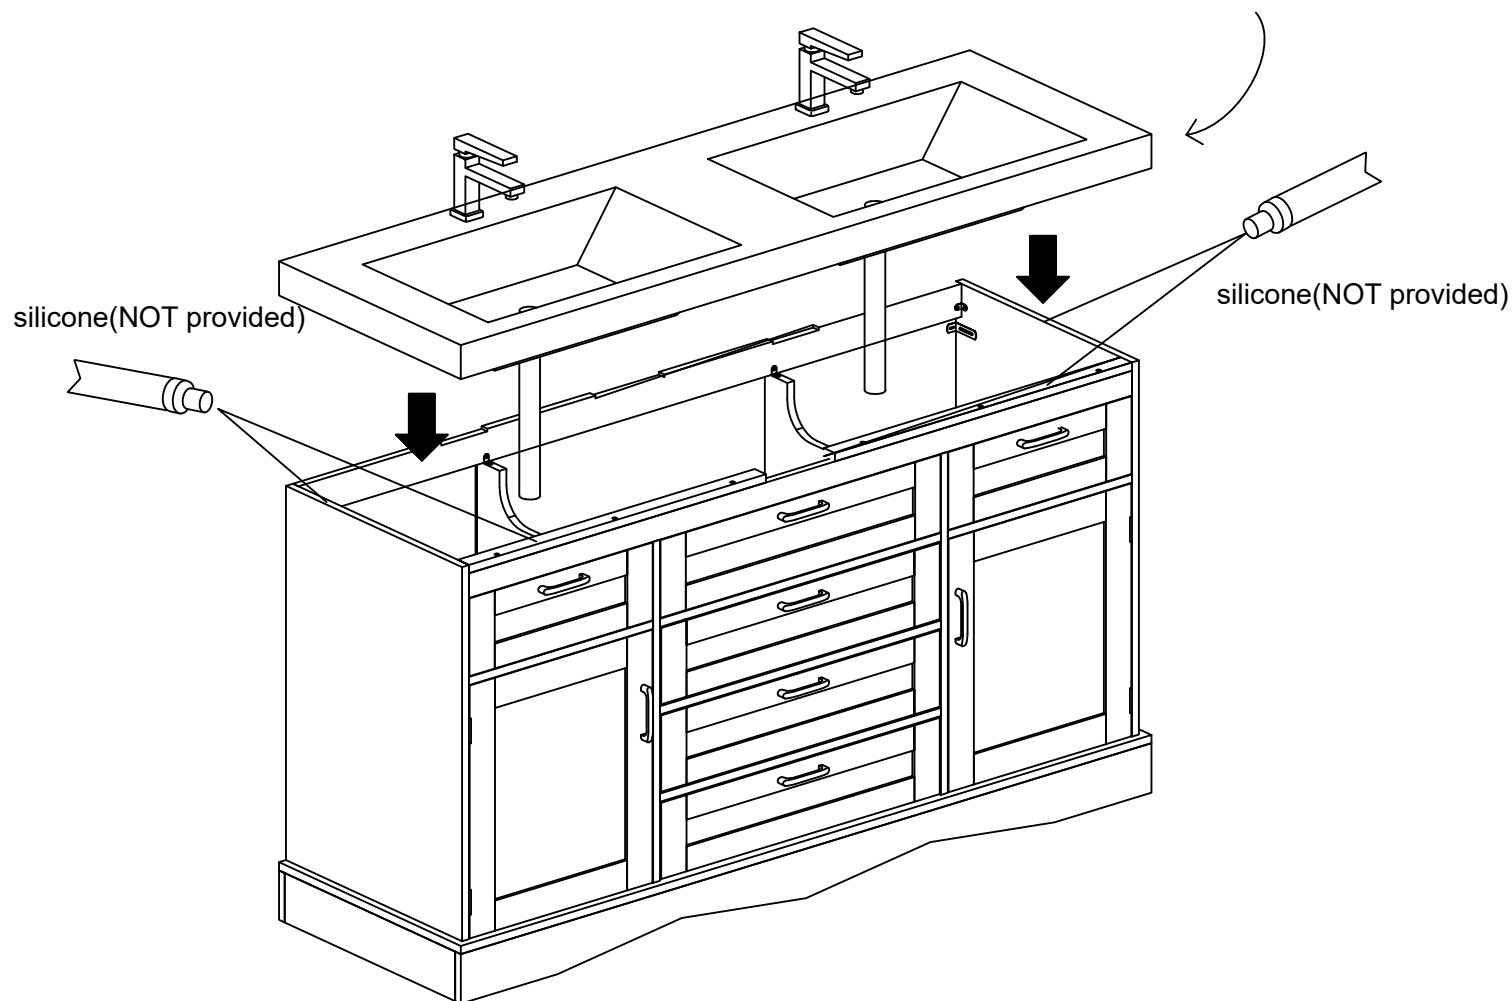

Use only through-wall plumbing attachments.

Follow the instructions included with your plumbing fixtures.

Install plumbing fixture and drain to basin before attaching basin to vanity using 100% silicone adhesive.

Allow adhesive 24 hours cure time to achieve full strength.

Consult a plumbing professional for specific installation questions and consult local codes as applicable.

Use only plumbing fixtures designed to fit either single hole or 3 hole, 4" centerline faucets.


Team Lift

Silicone

Faucet, drain, silicone and all other plumbing components, tools and hardware are not included.

Ensure the vanity is installed on a level floor.

Unevenness can cause the vanity to become misaligned, resulting in twisting of the cabinet.

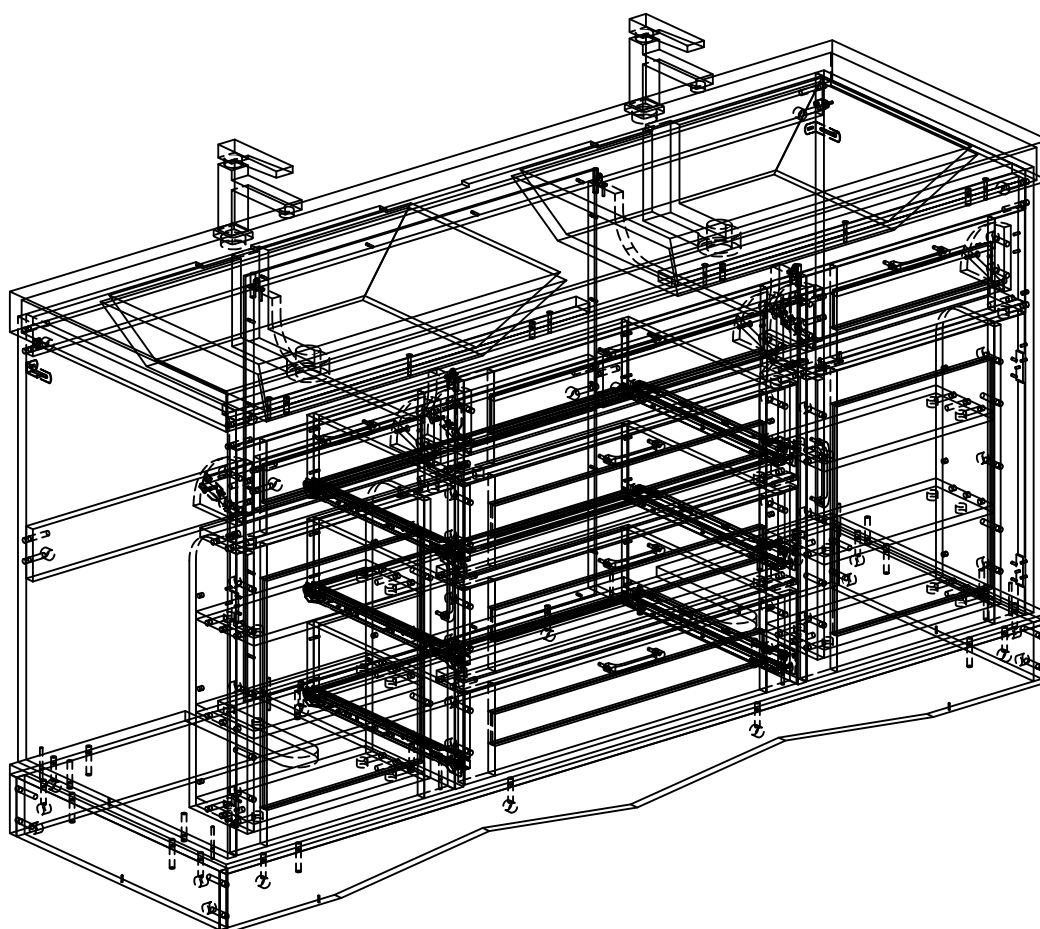

Hx96

Attach a hole sticker to the eccentric wheel

