

## ASSEMBLY INSTRUCTION N751P280593 N751P280595


#### PARTS LIST - N751P280593

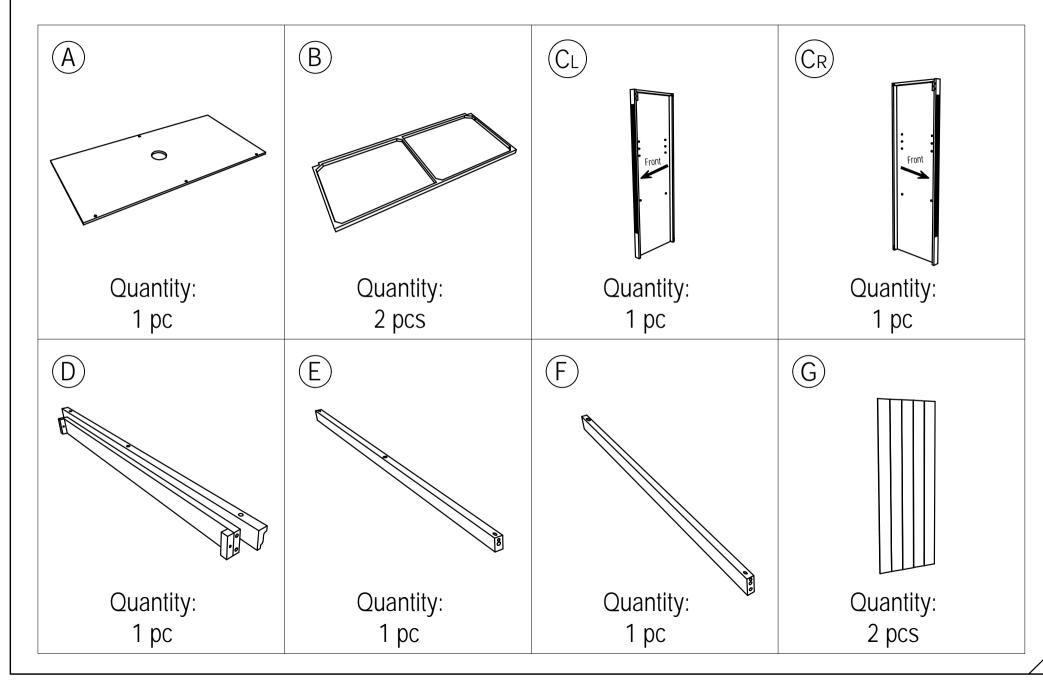


#### PARTS LIST - N751P280595

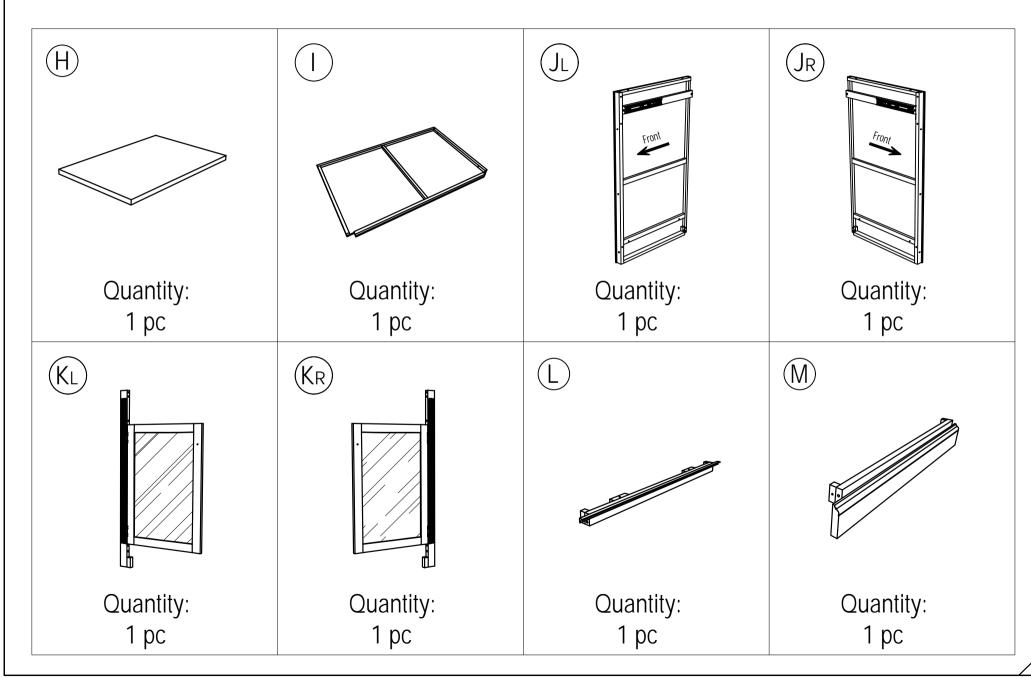


#### PARTS LIST - N751P280595

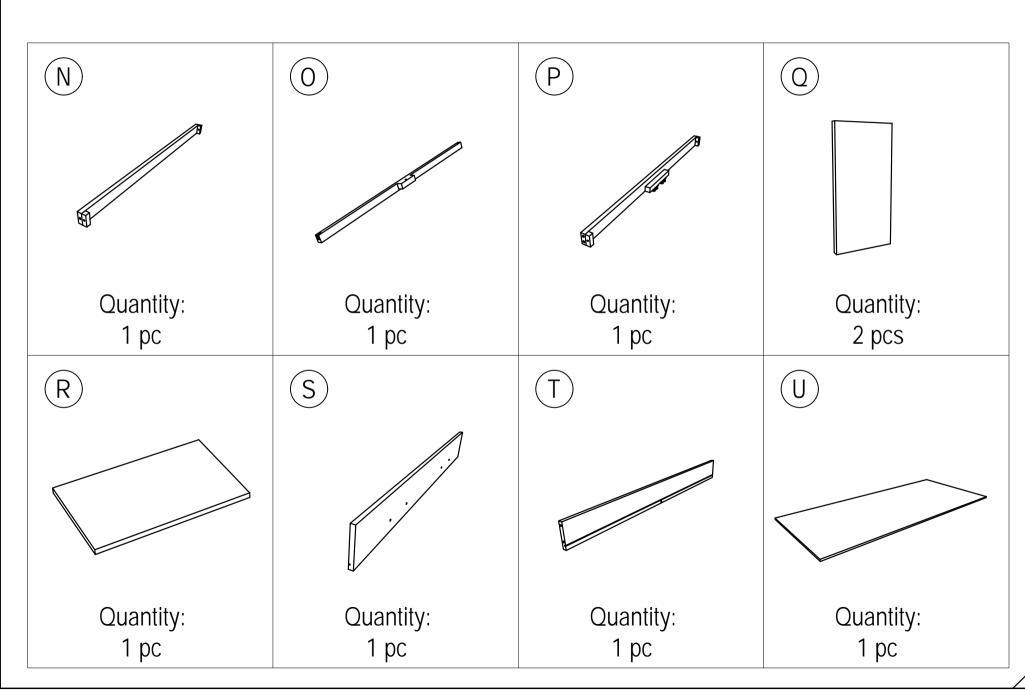

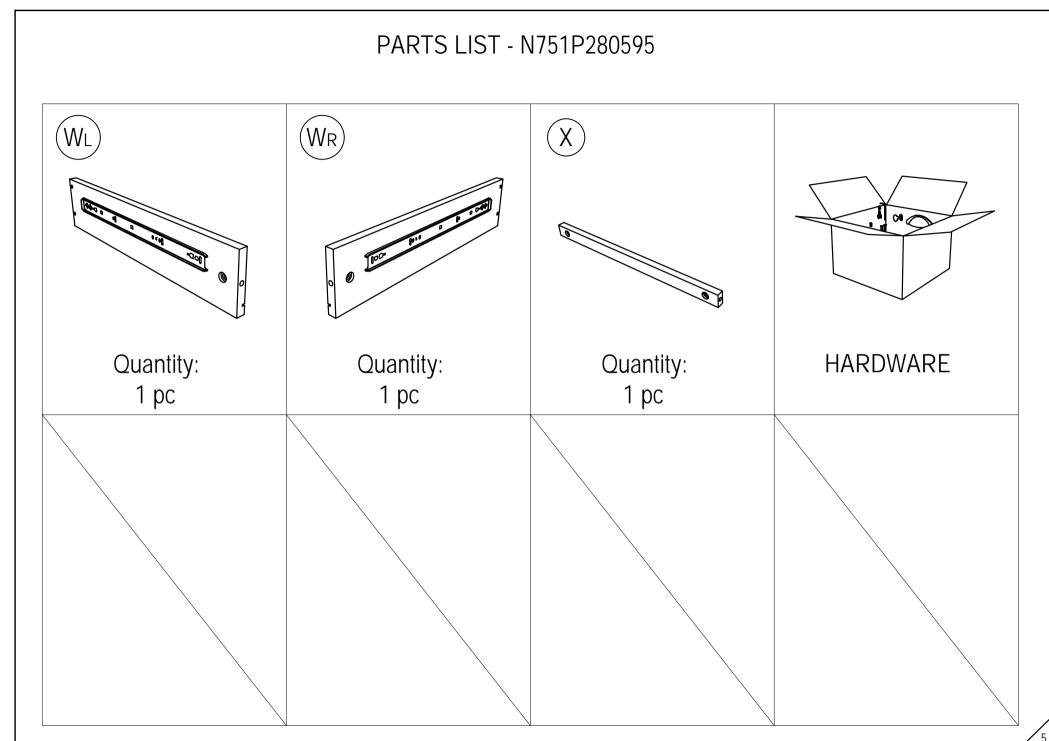



#### HARDWARE LIST


1	2	3	4	5	6	7	8	9
				1	7			
Allen key Quantity: 1 pc	Cam lock pin Cam lock Quantity: 4 pc	6x30mm Quantity: 47 pcs + extra 3pcs	6x16mm Quantity: 39 pcs + extra 3pcs	4x25mm Quantity: 2 pcs	4x15mm Quantity: 4 pcs	8x30mm Quantity: 20 pcs + extra 2pcs	5x30mm Quantity: 8 pcs	3x15mm Quantity: 46 pcs + extra 3pcs
10)	(11)	(12)	13)	14)	15)	16)	17)	18)
					0			
Quantity:	Quantity:	Led light Quantity:	Screwdrivers Quantity:	15x20mm Quantity:	20x80mm Quantity:	4x20mm Quantity:	Quantity: 2 pcs	4x25mm Quantity:
2 pcs	2 pcs	1 pc	1 pc	4 pcs	2 pcs	4 pcs		4 pcs

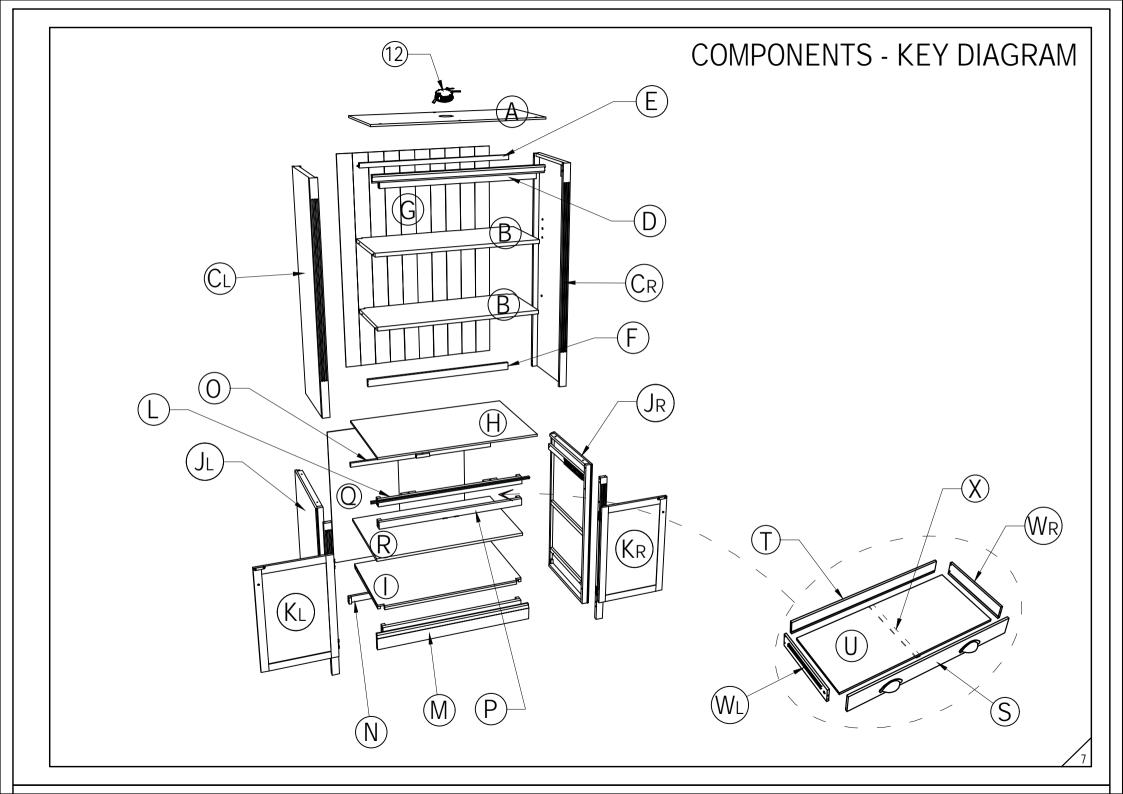



### COMPONENTS - KEY DIAGRAM N751P280593

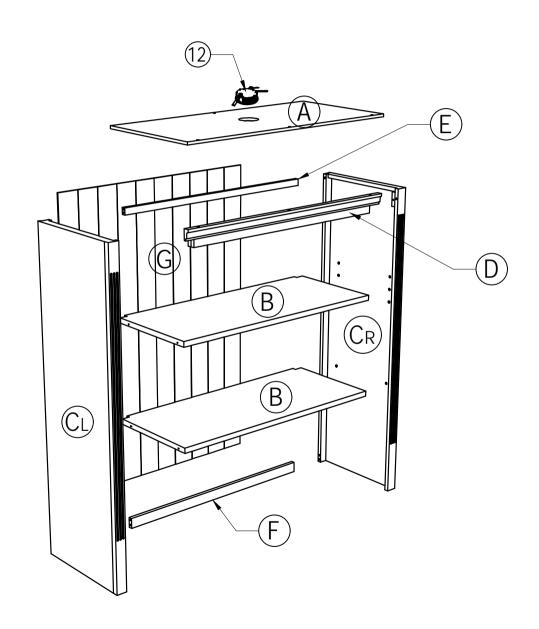


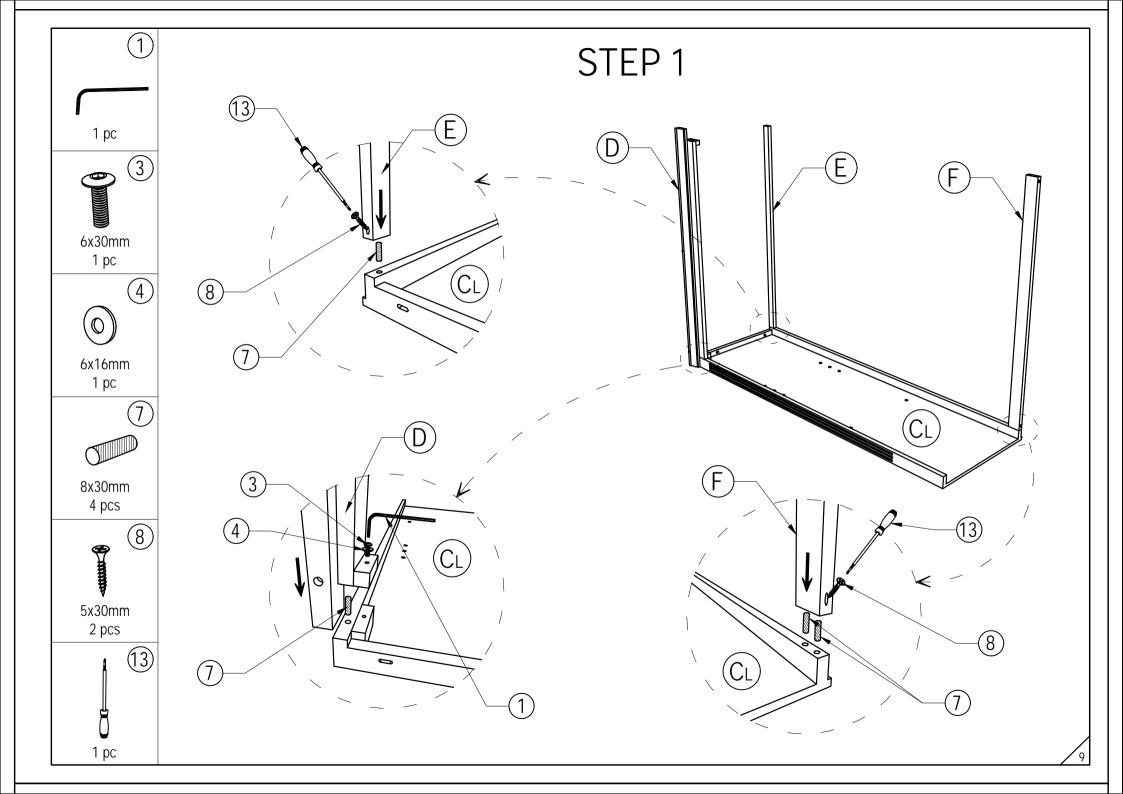


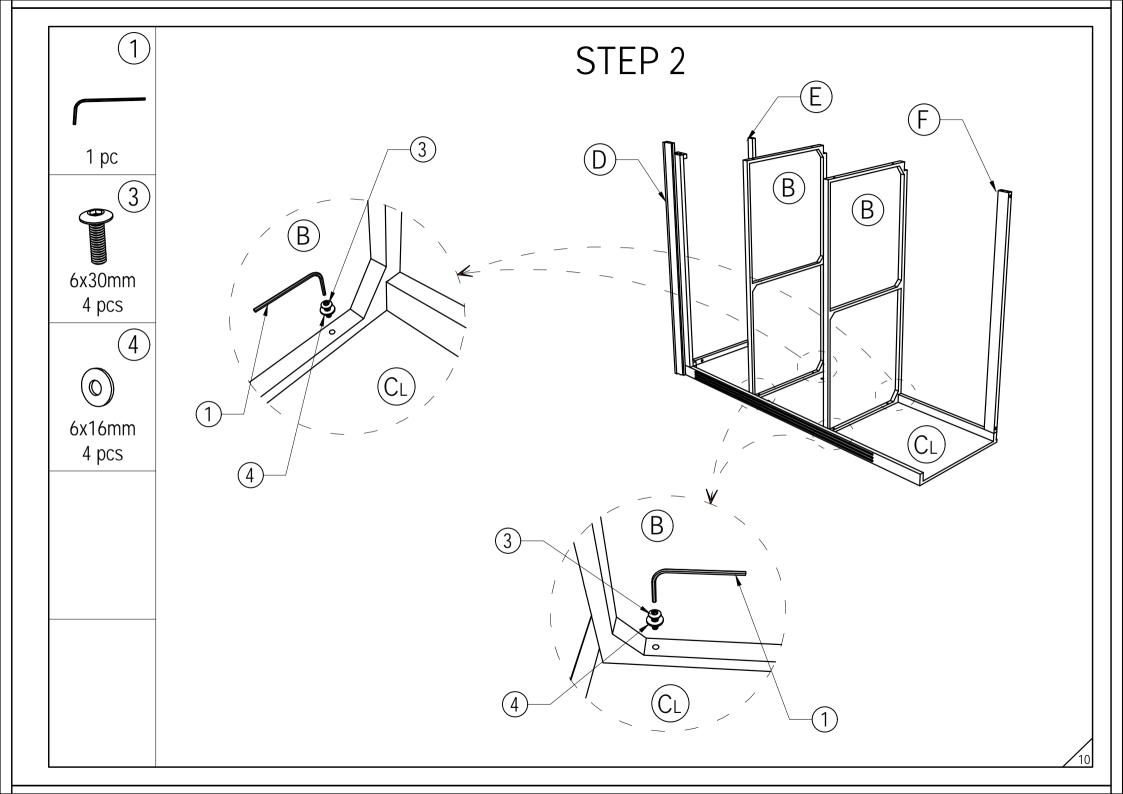

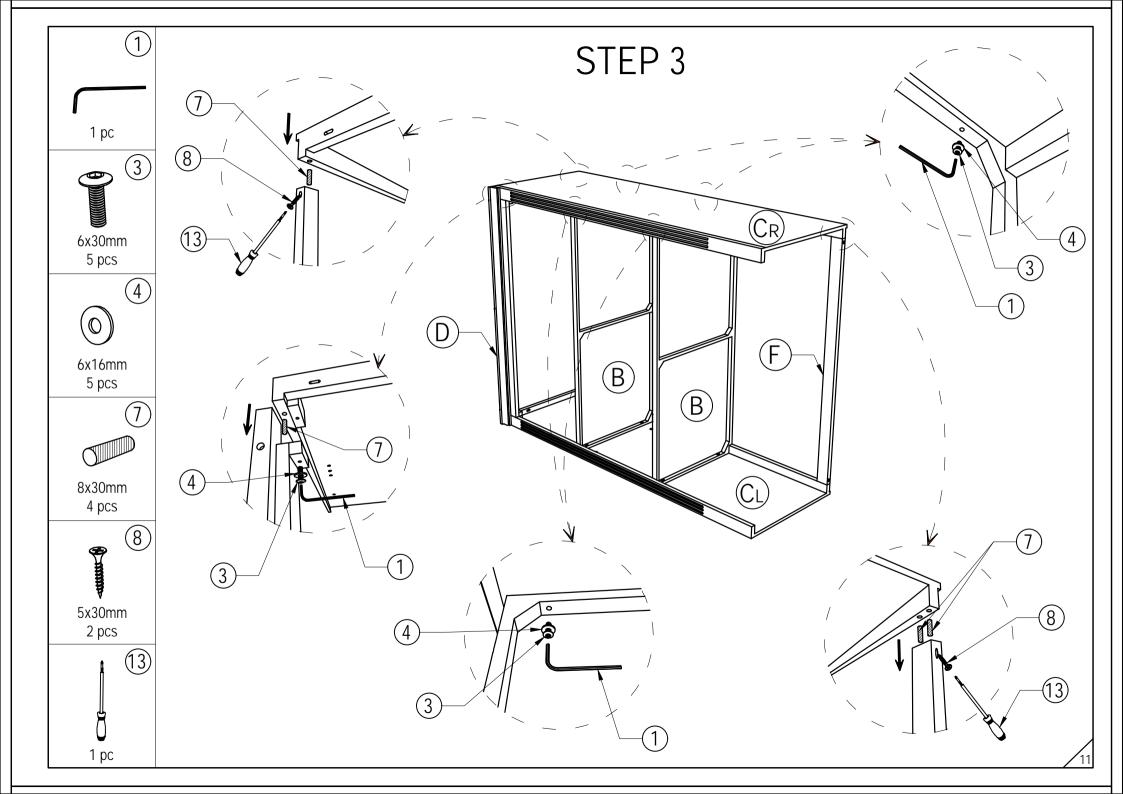

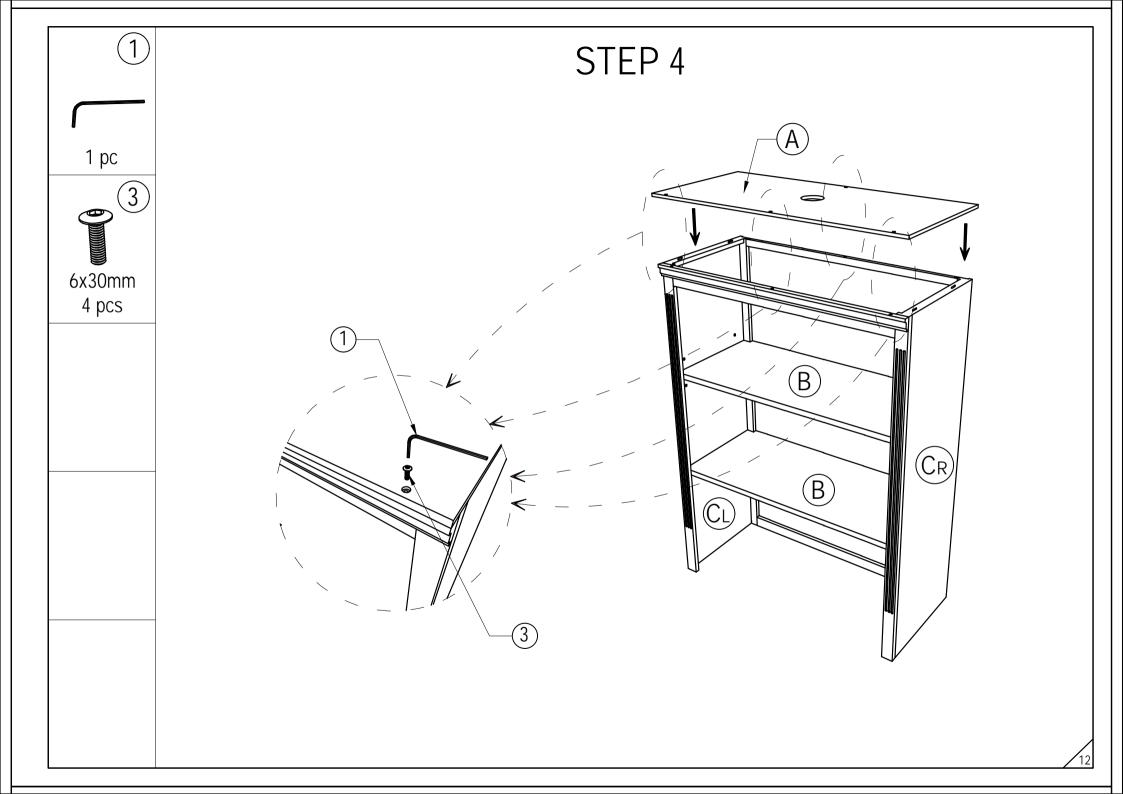

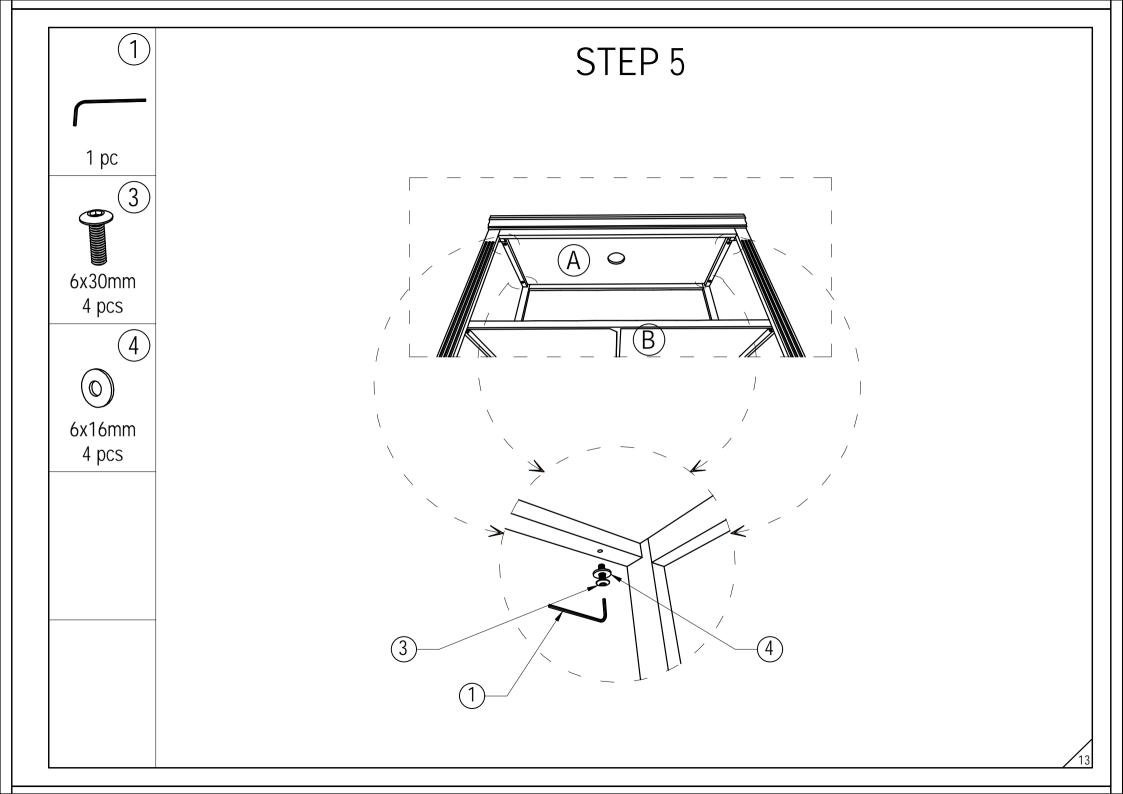

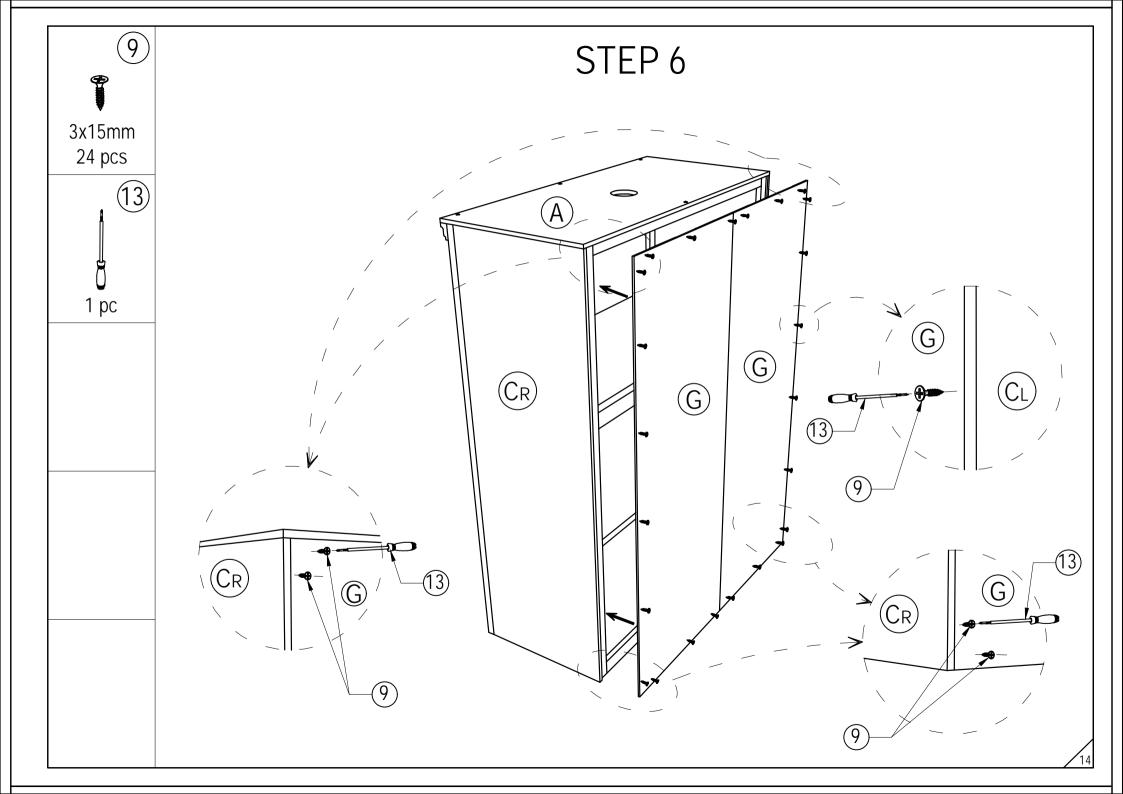




1 pc








2 pcs

#### STEP 7

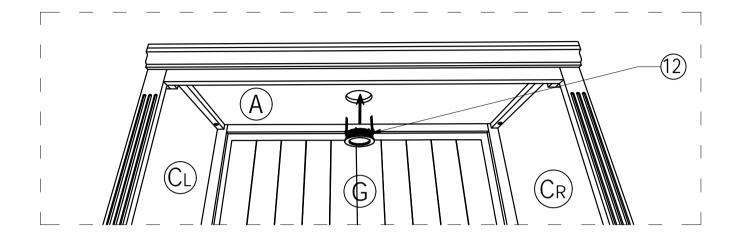

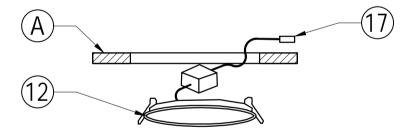


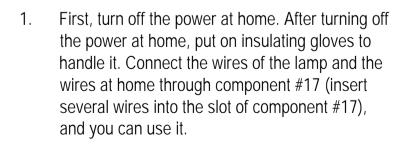






2. If you still don't understand, you can watch the video provided. The yellow wire in the video is the electrical wire that can be powered in the user's home.


### COMPONENTS - KEY DIAGRAM N751P280595

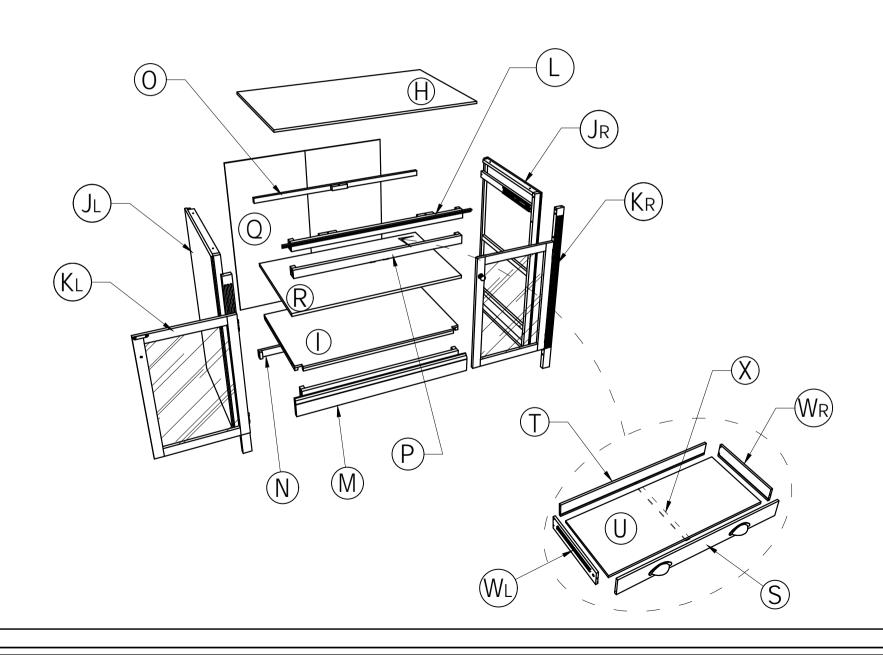


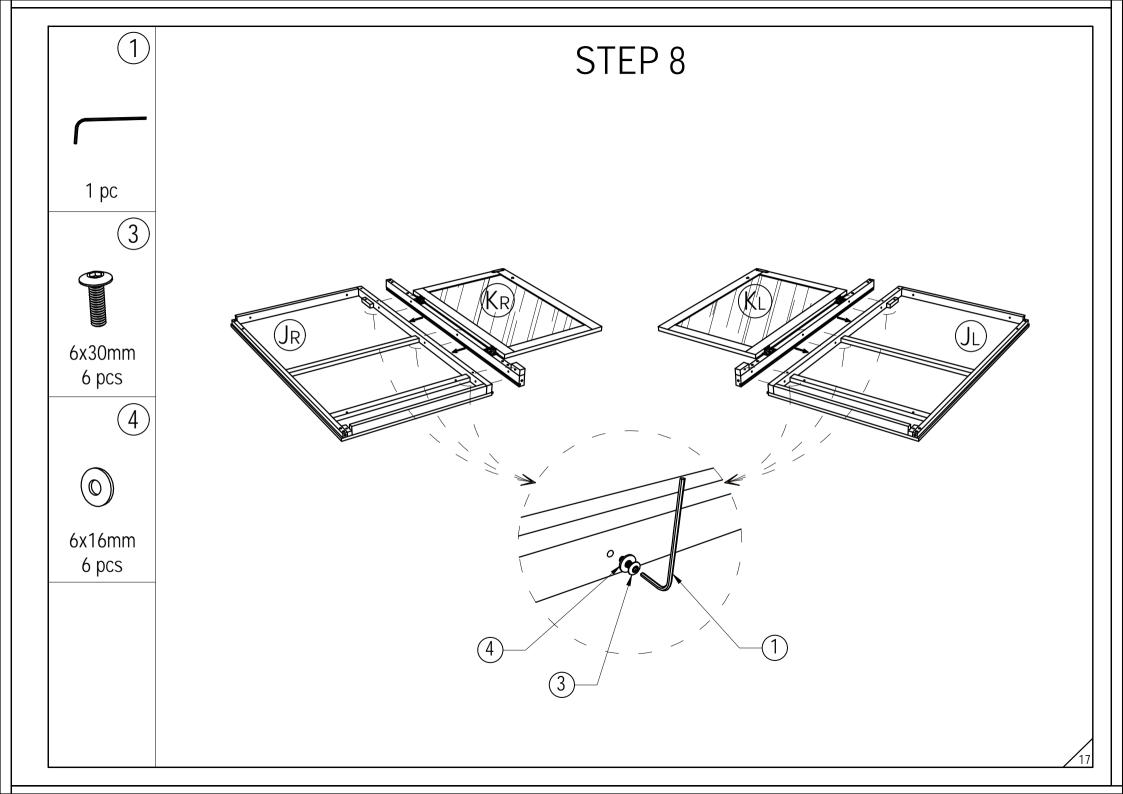


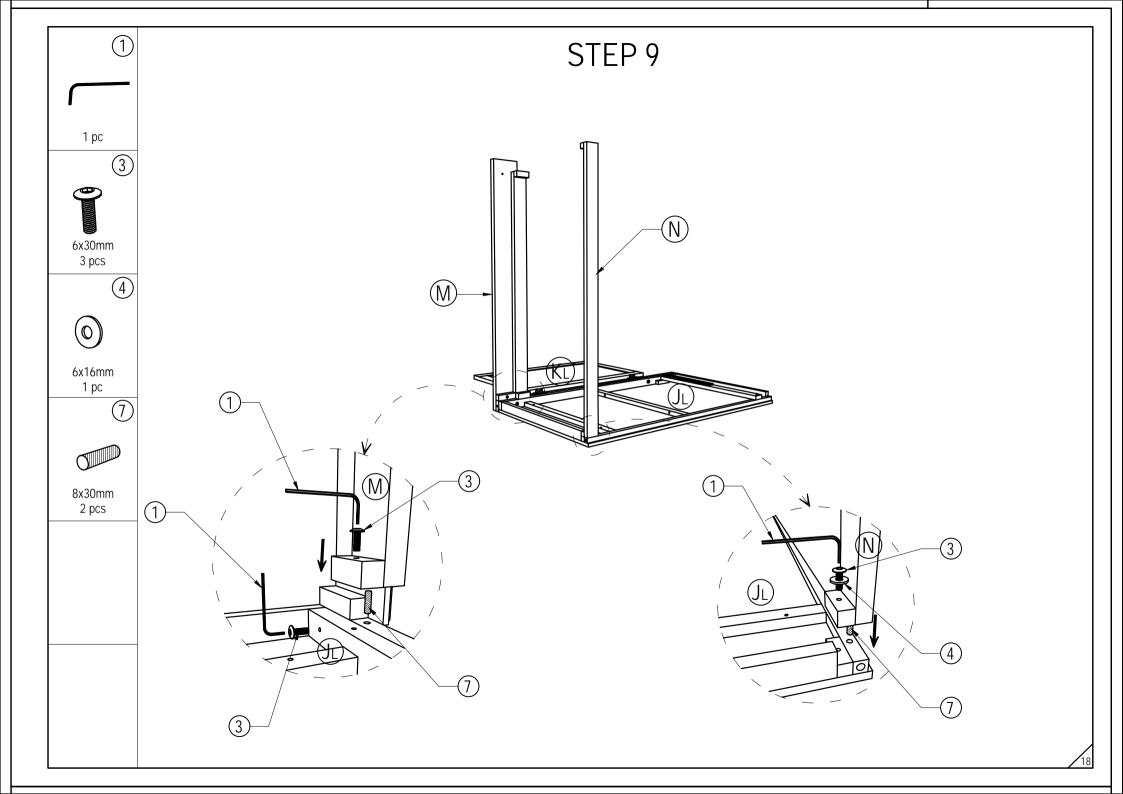


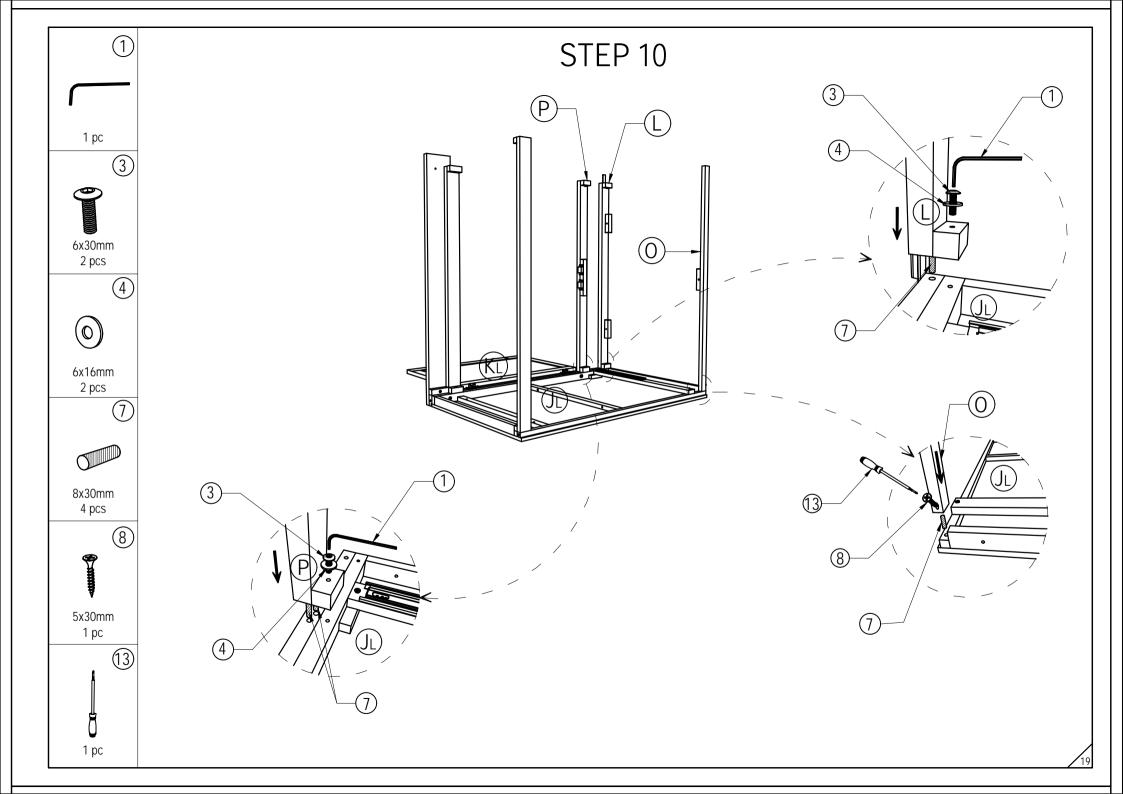


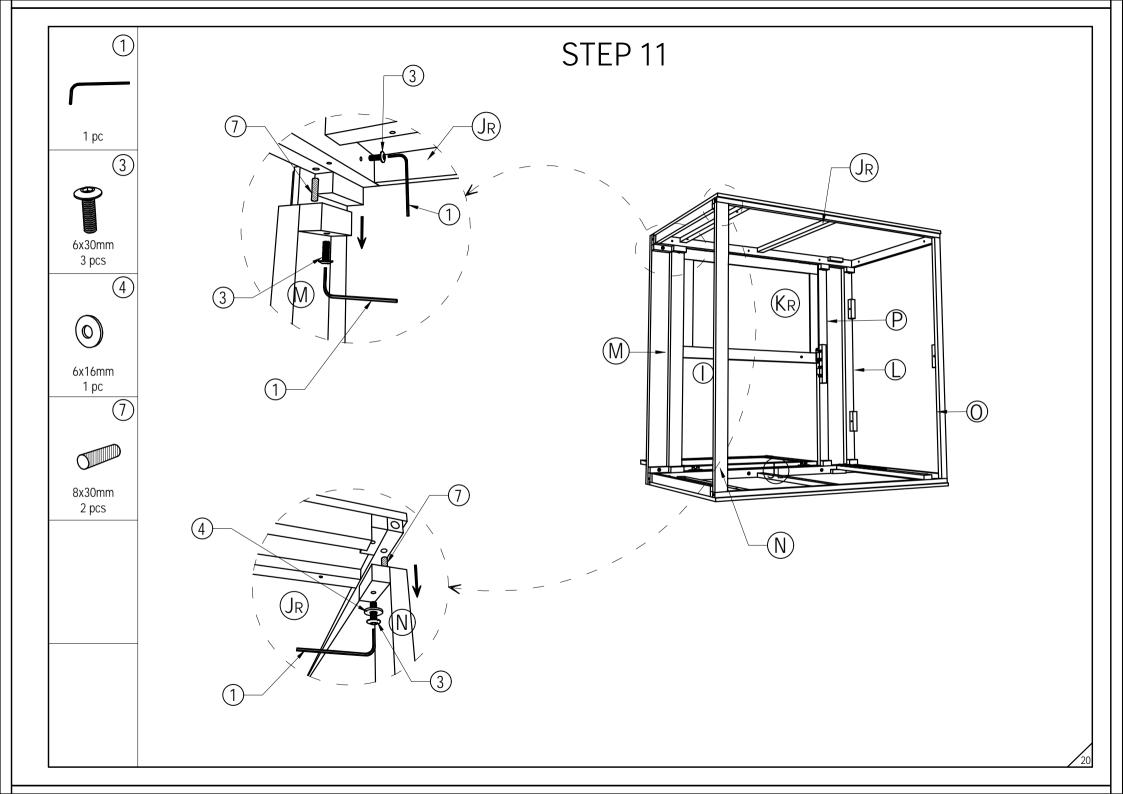


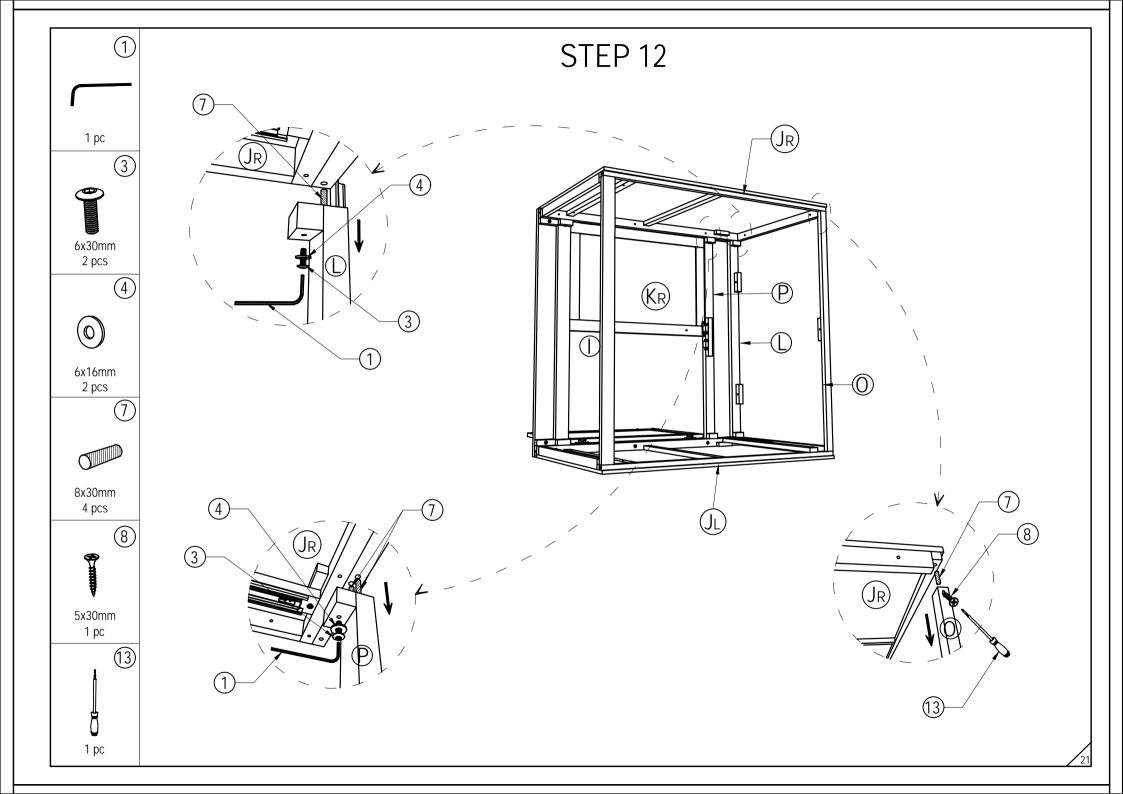


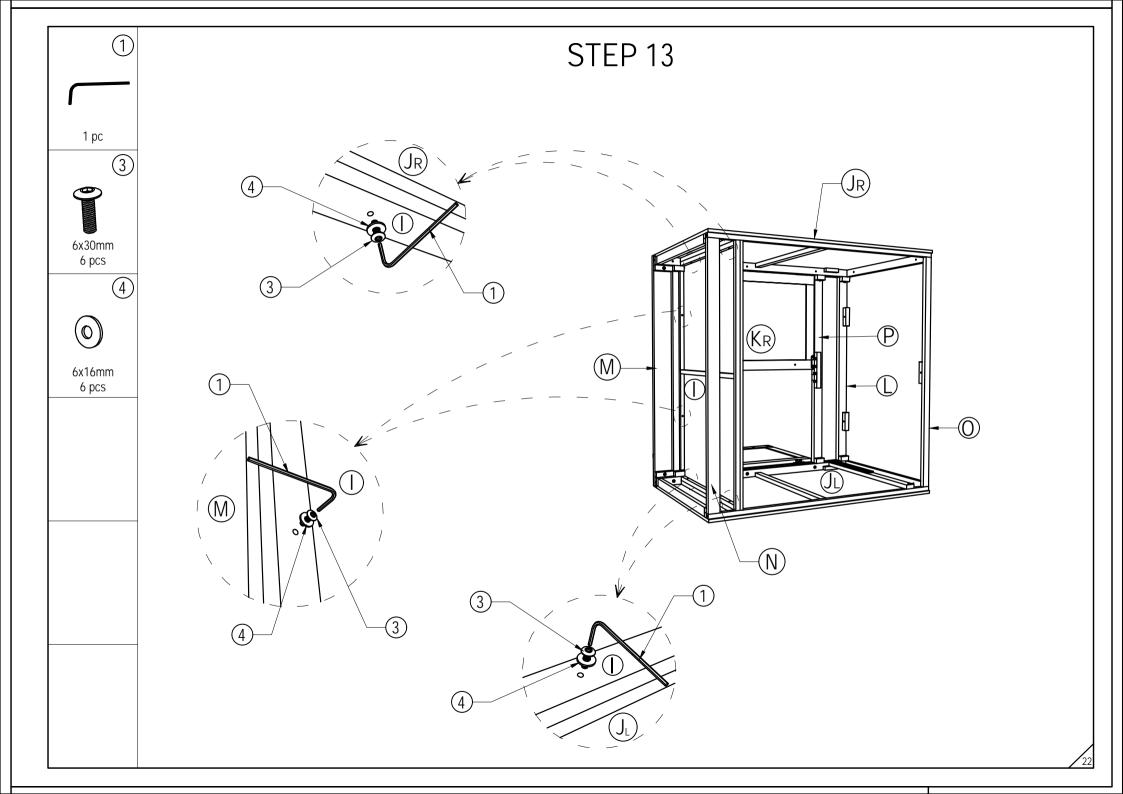

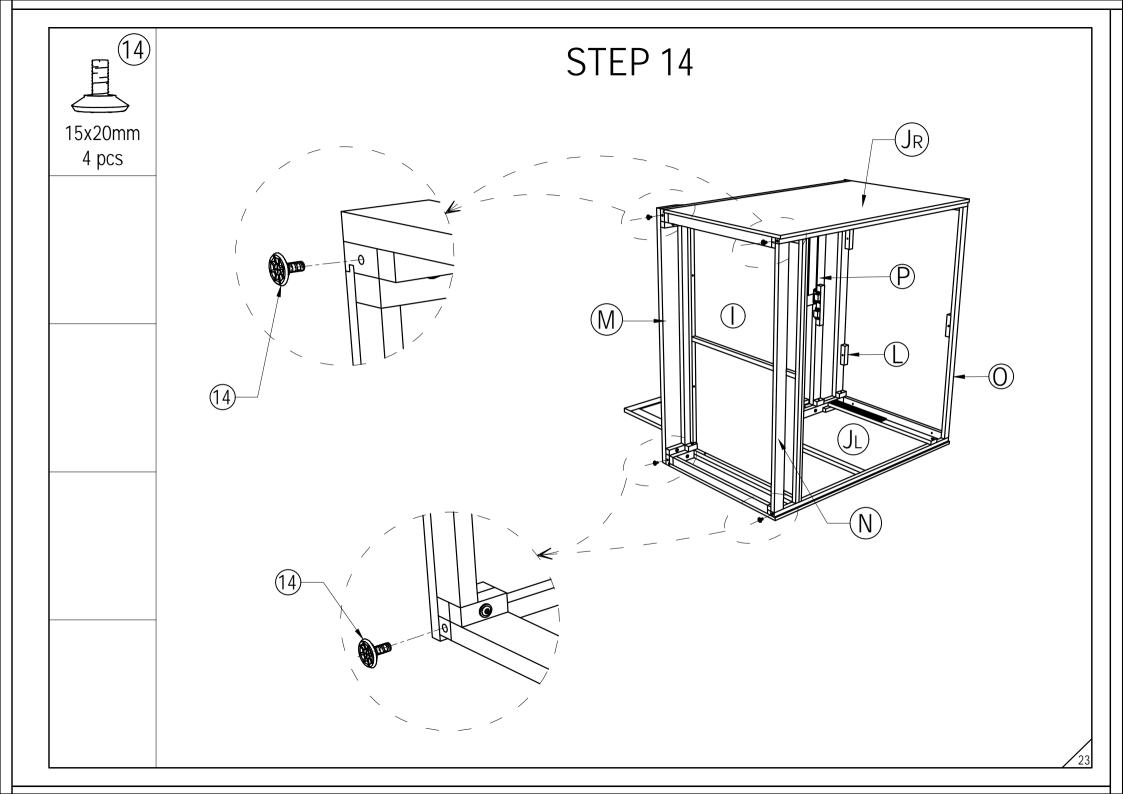


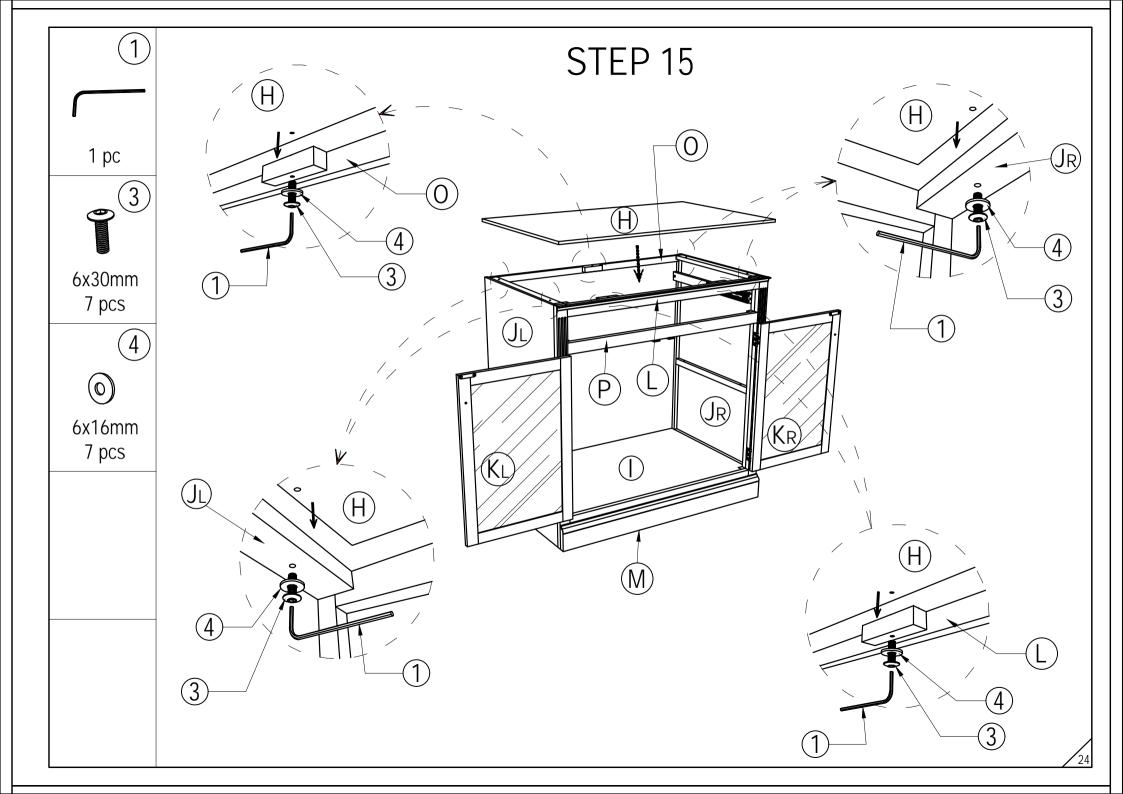

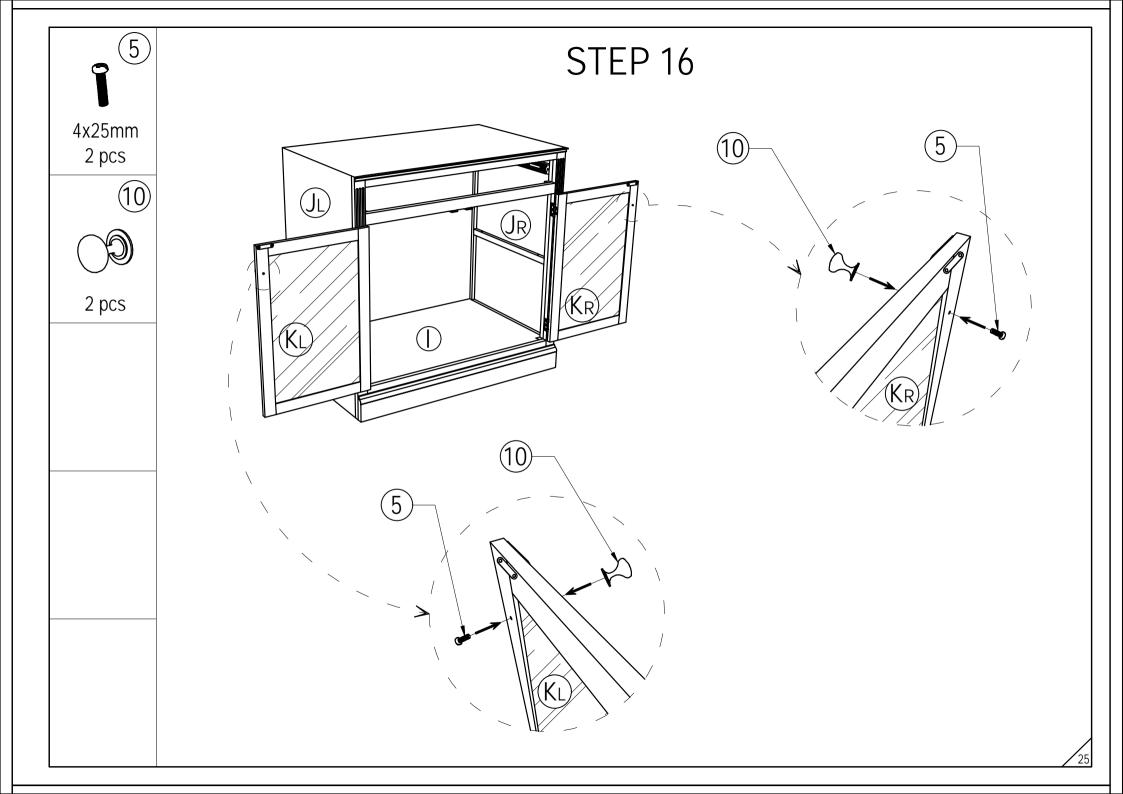


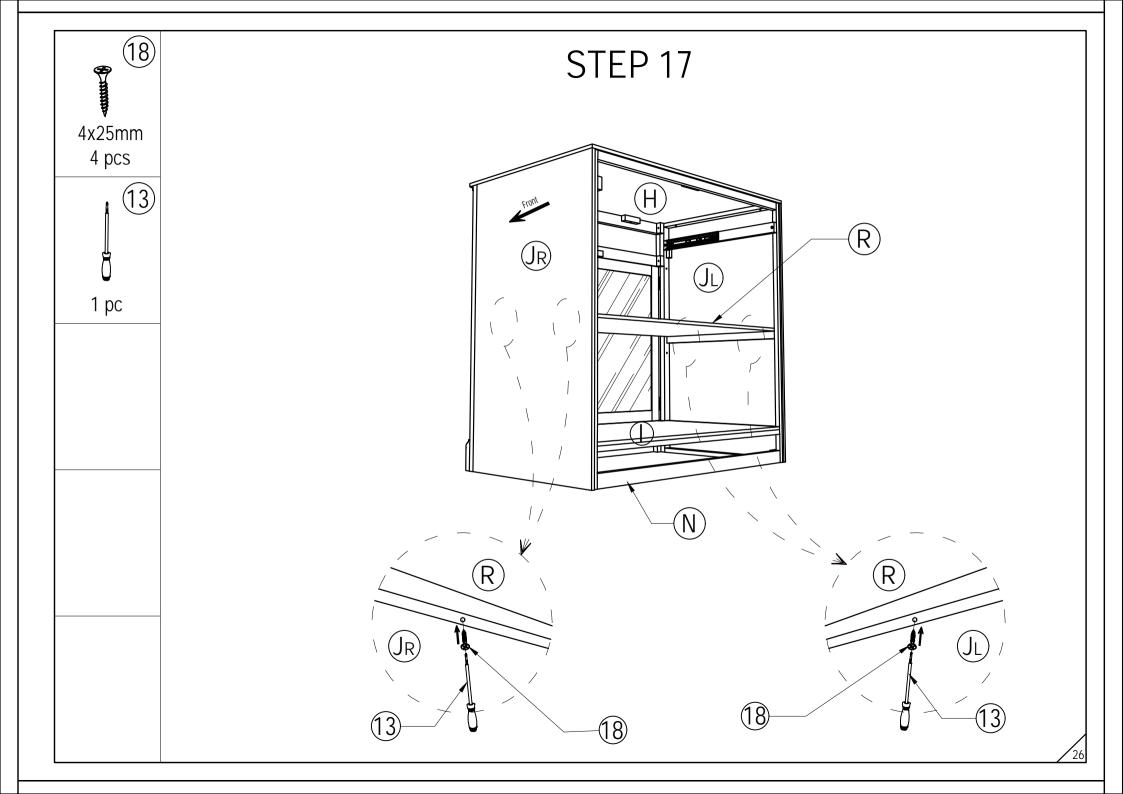


## Typical way to install cam screws • 4. Done

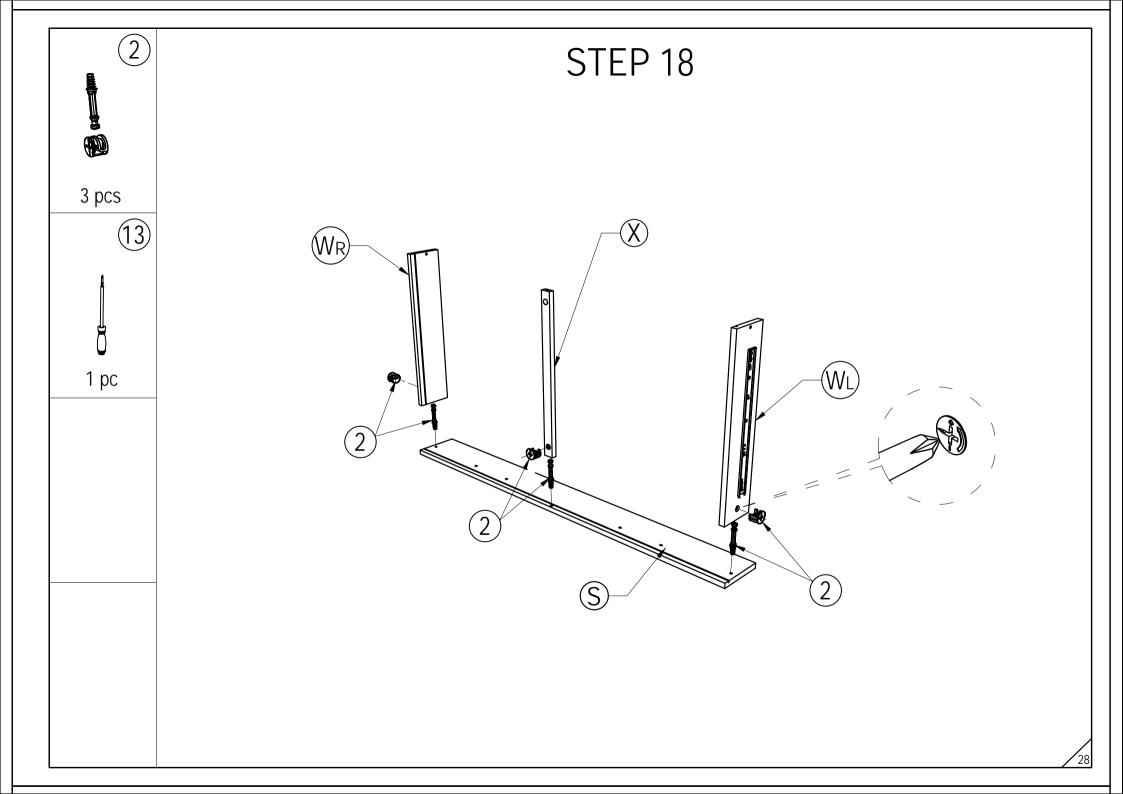

# STEP 19

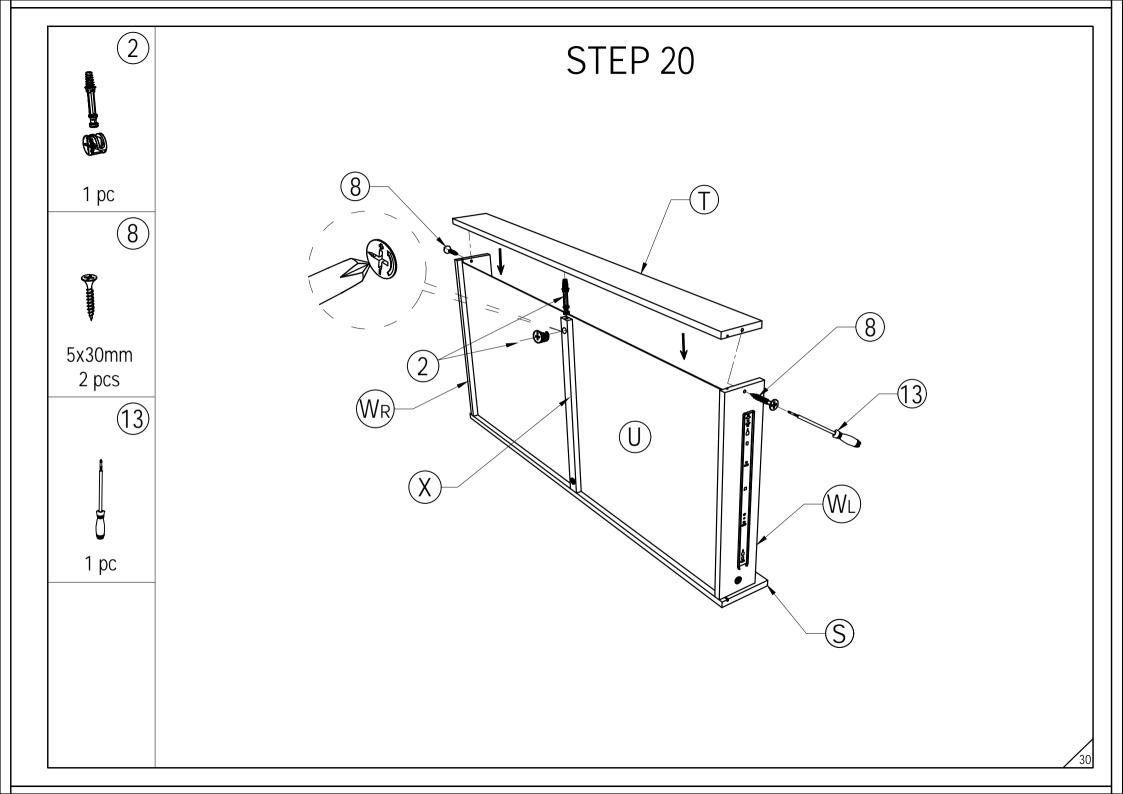

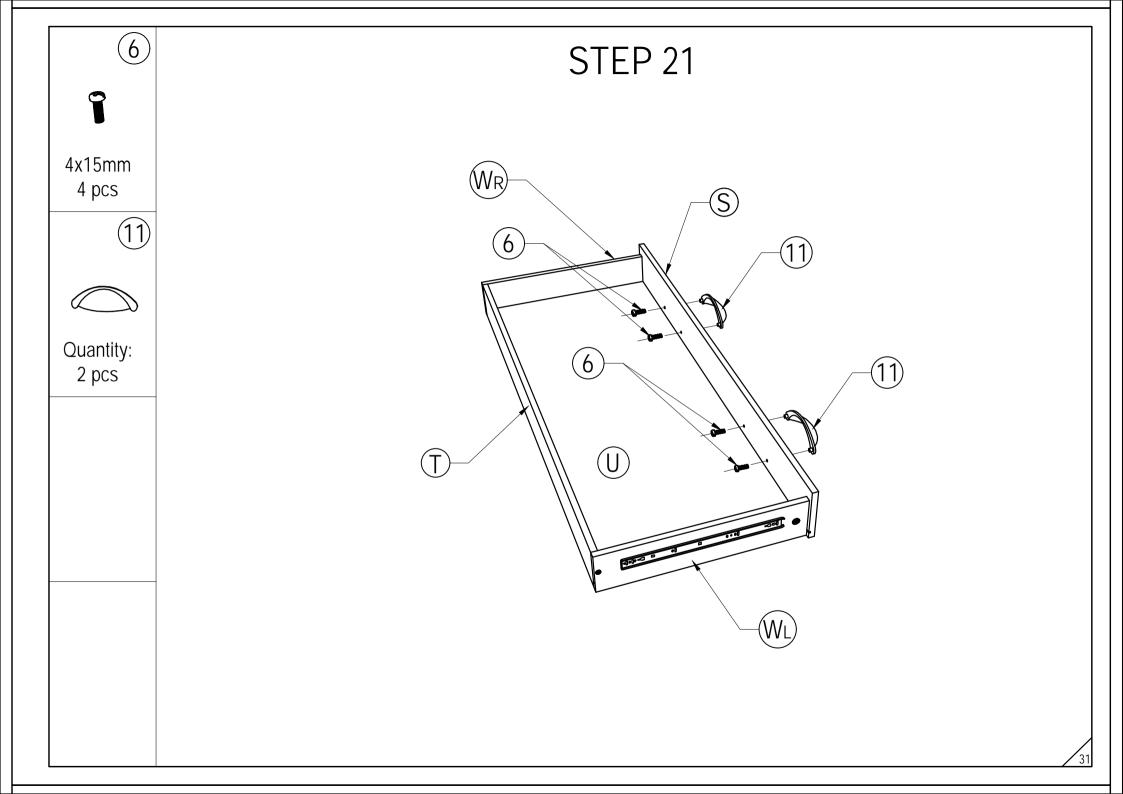

# STEP 22

