



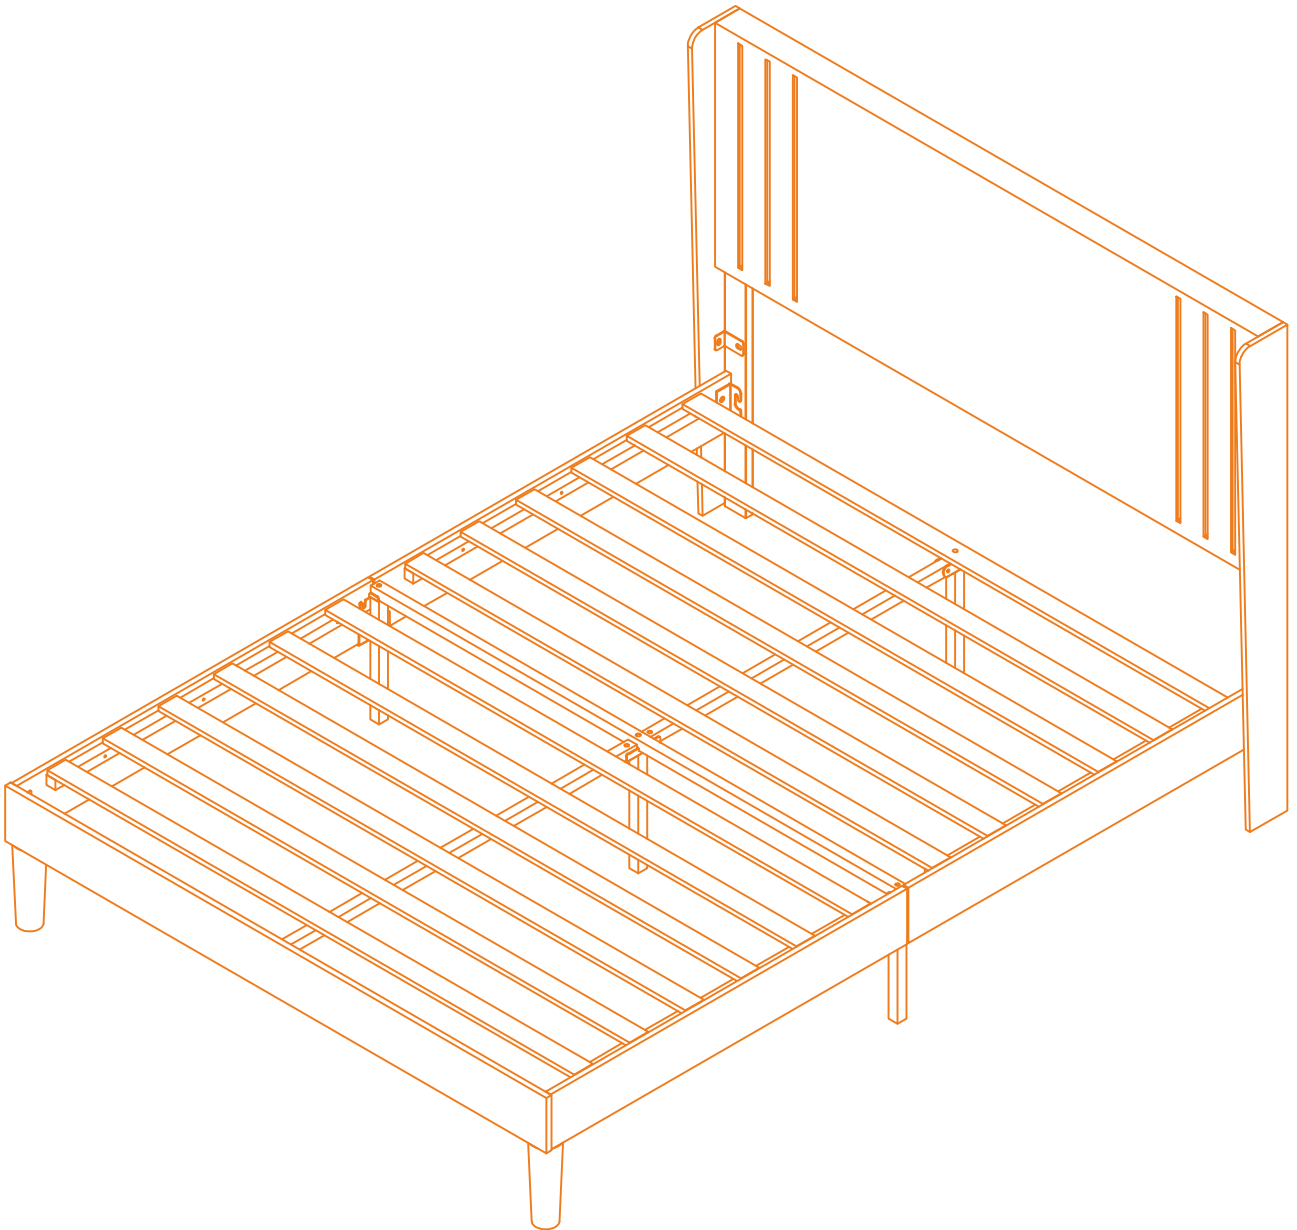


X 2

75X54 Upholstered Bed Frame
80X60 Upholstered Bed Frame
Model: BF41 / BF42

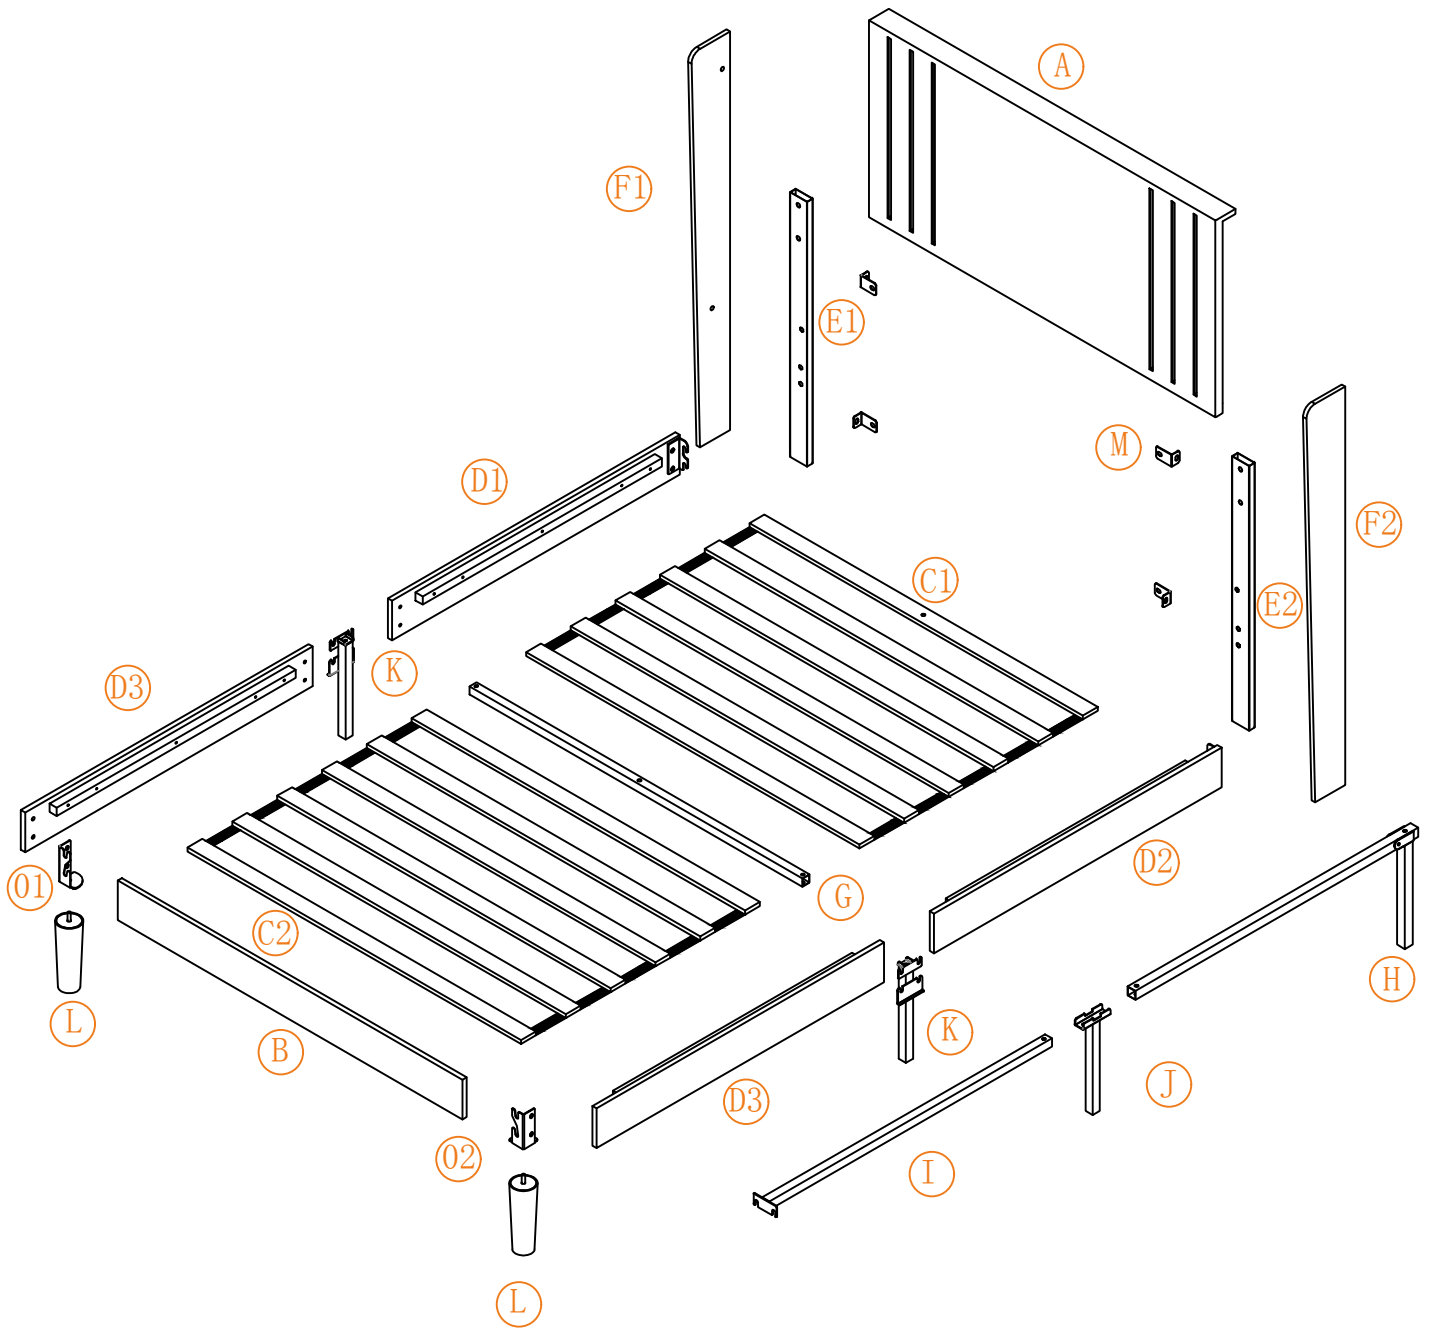





P x 1

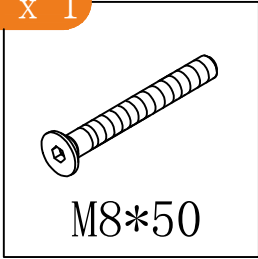


Q x 7

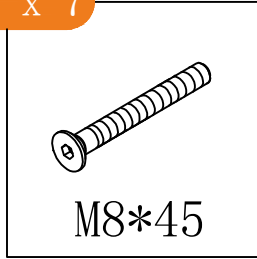


R x 2

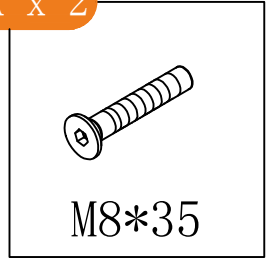


S x 4

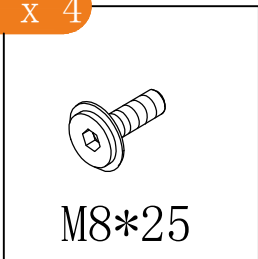


Ux16

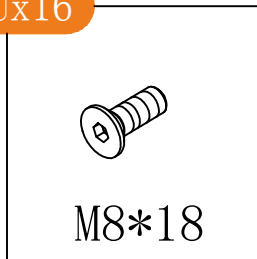


V x 4

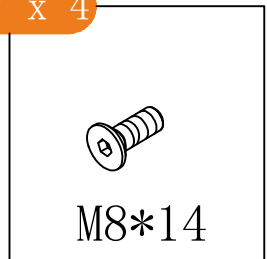


W x 5

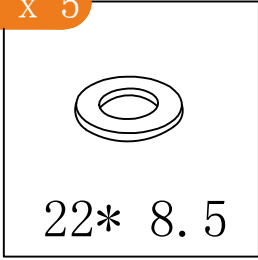


Y x 1

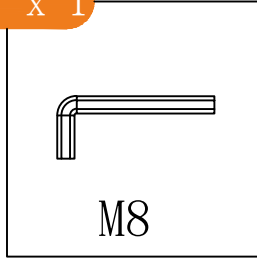


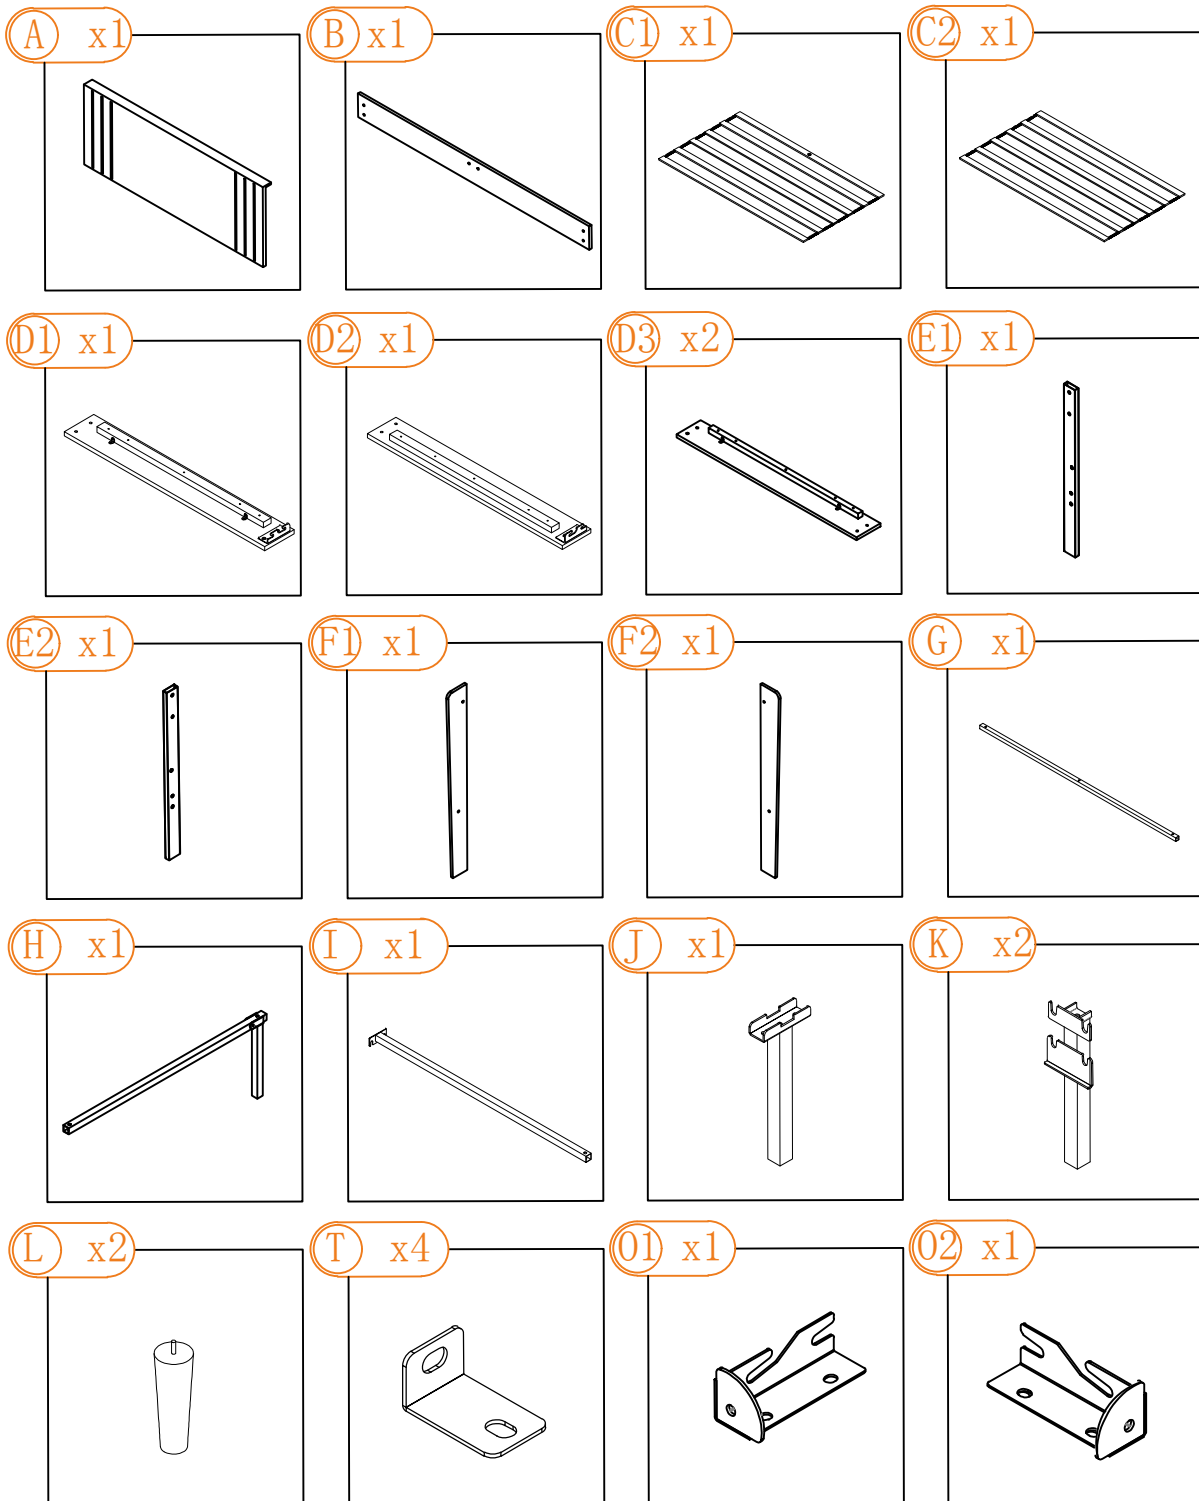

1






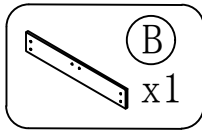


pre-installed screws.





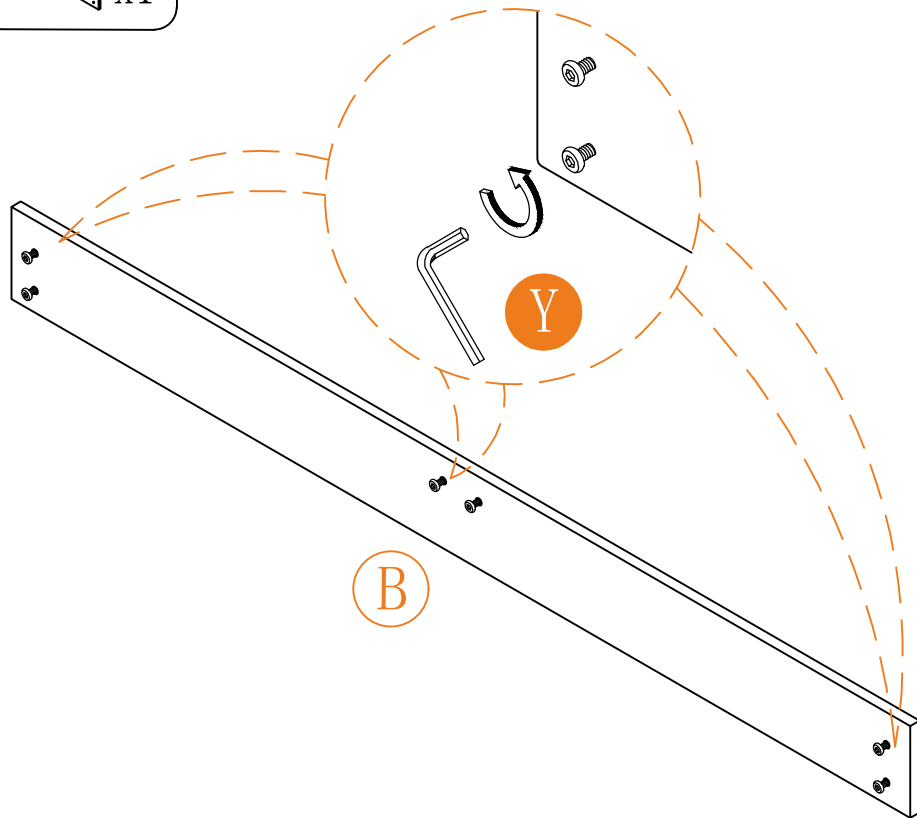


Loosen but don't remove the pre-installed screws.


2

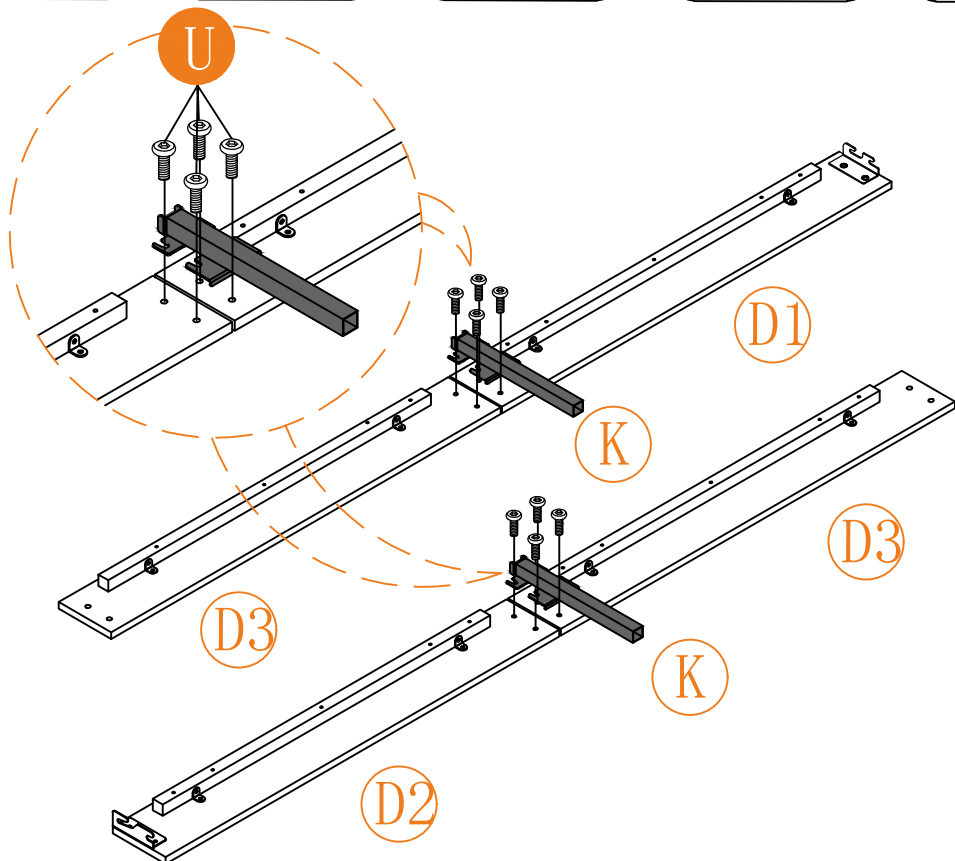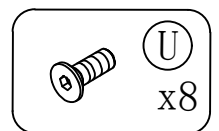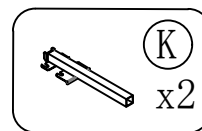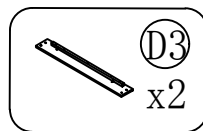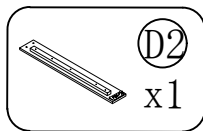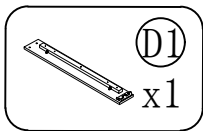






3

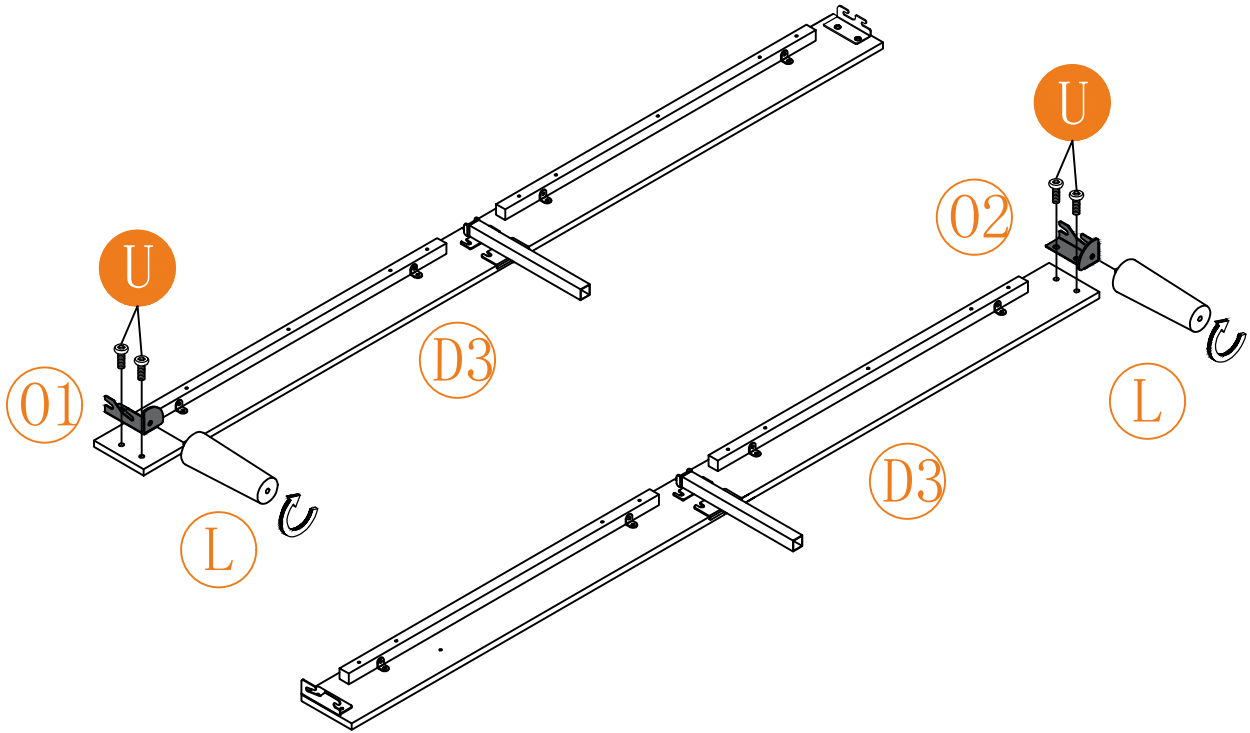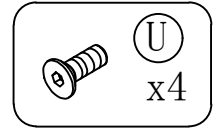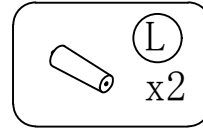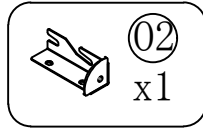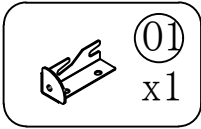



4

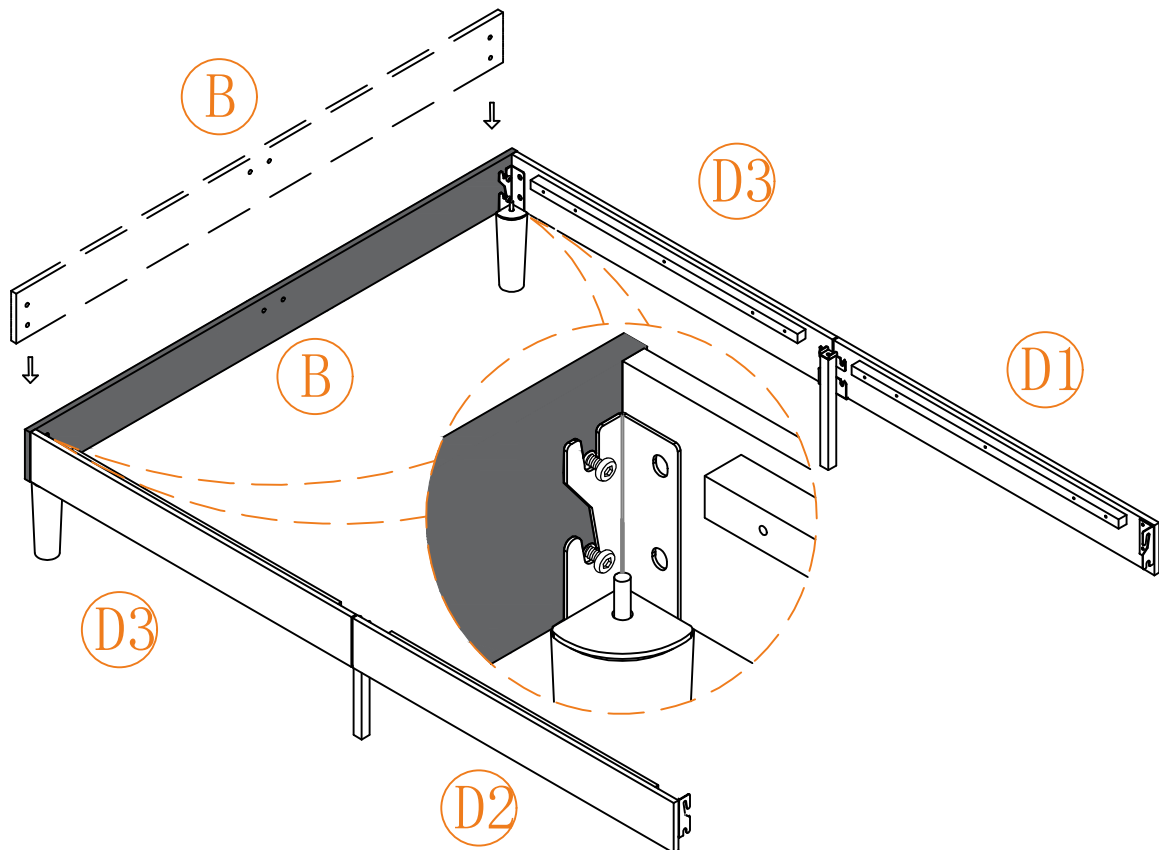





5

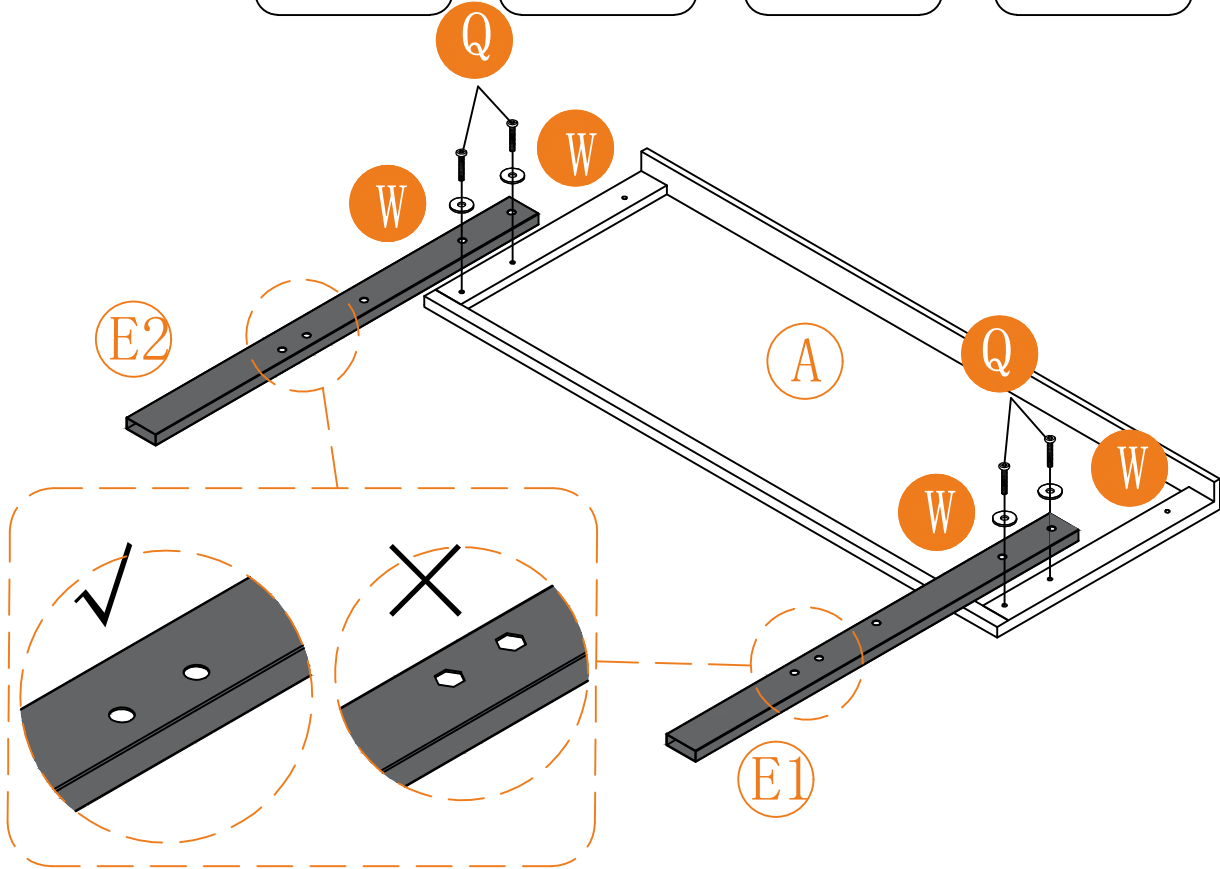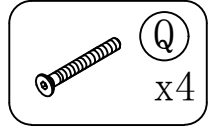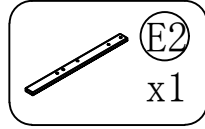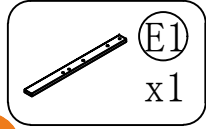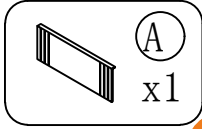





6


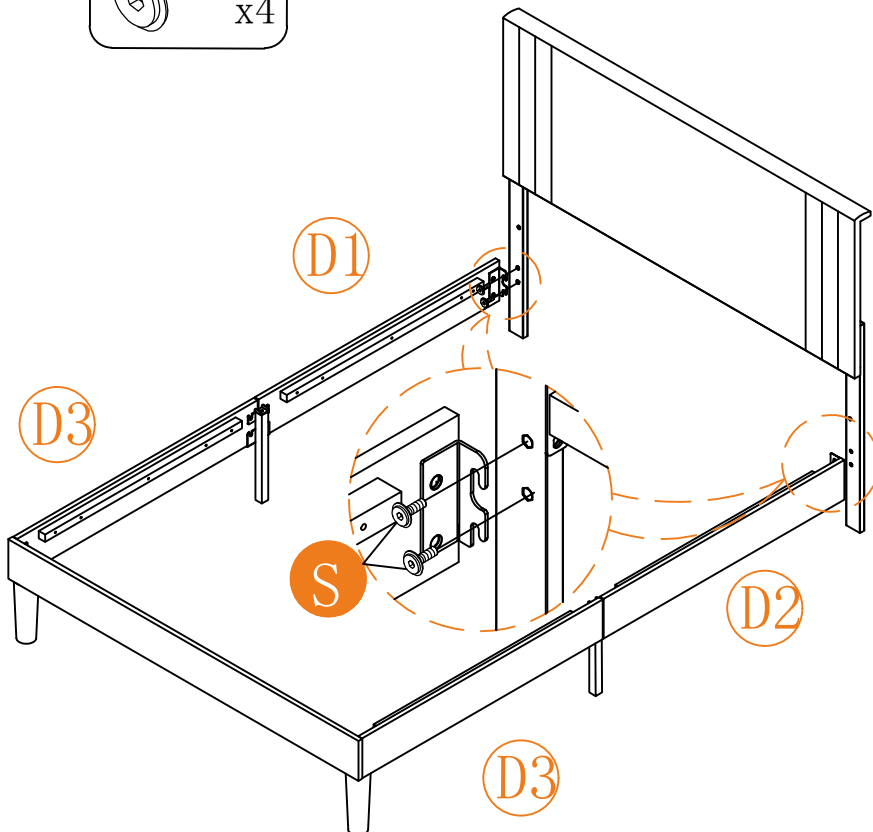
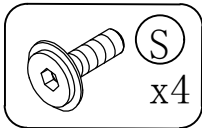


7

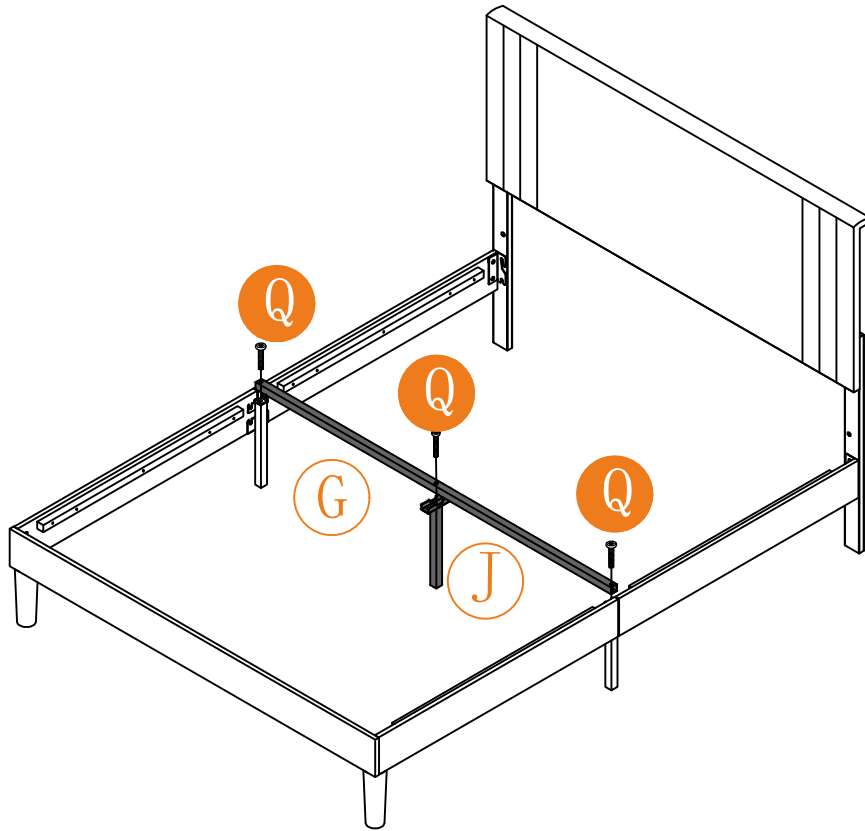
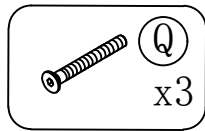
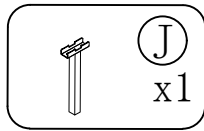
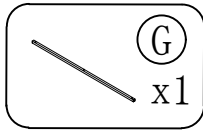


8

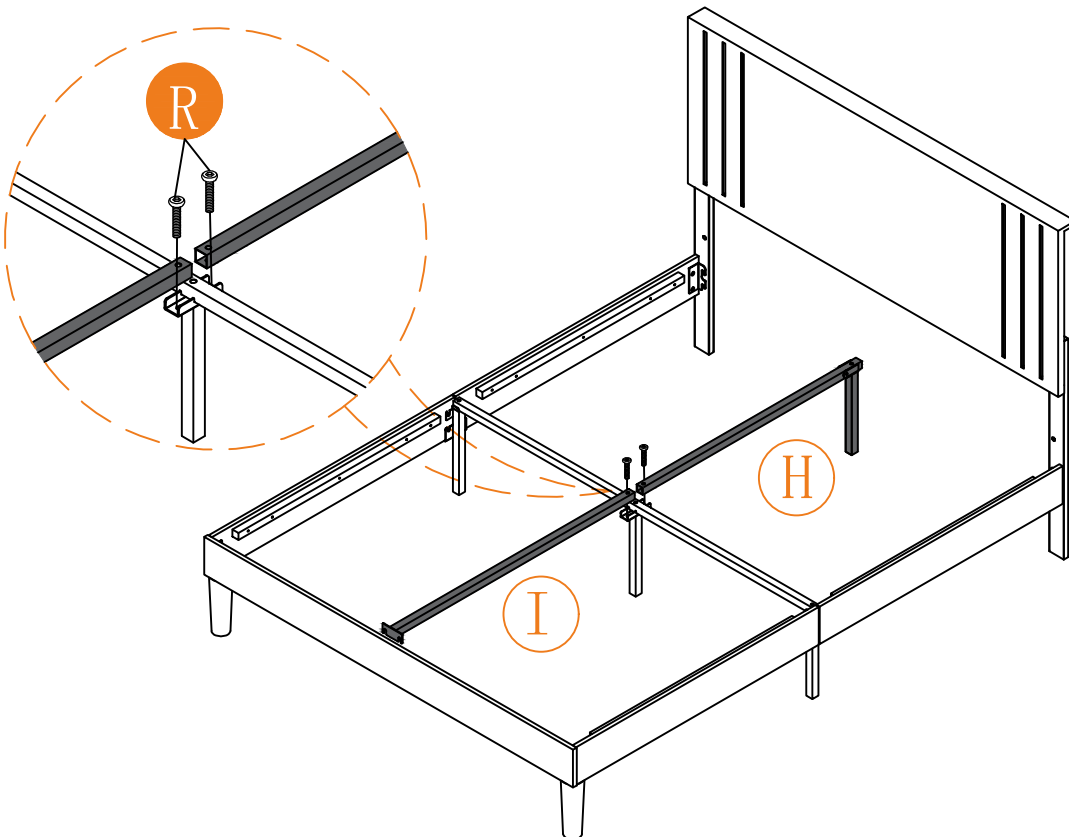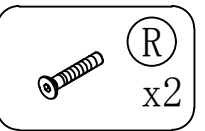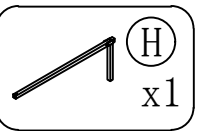
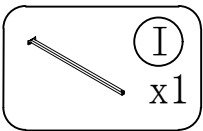


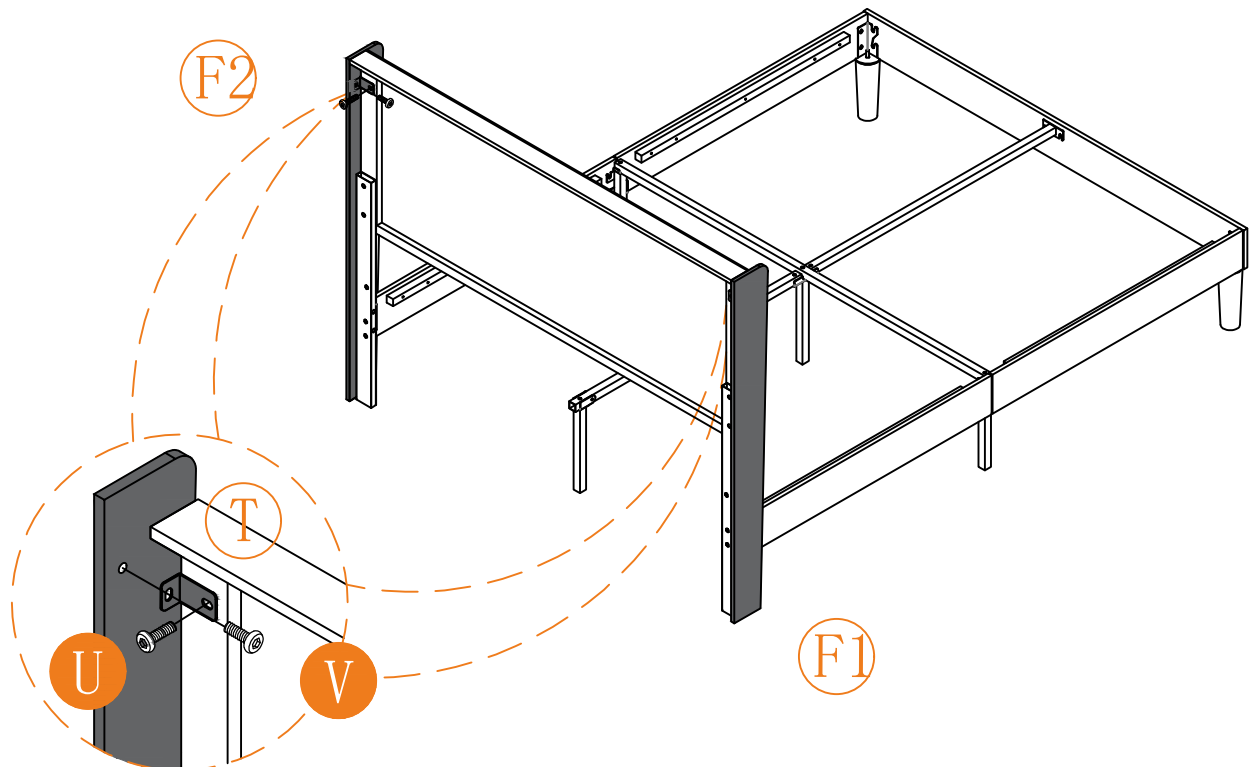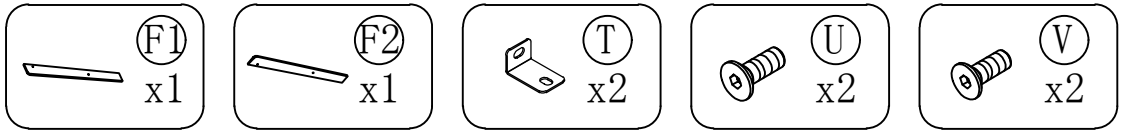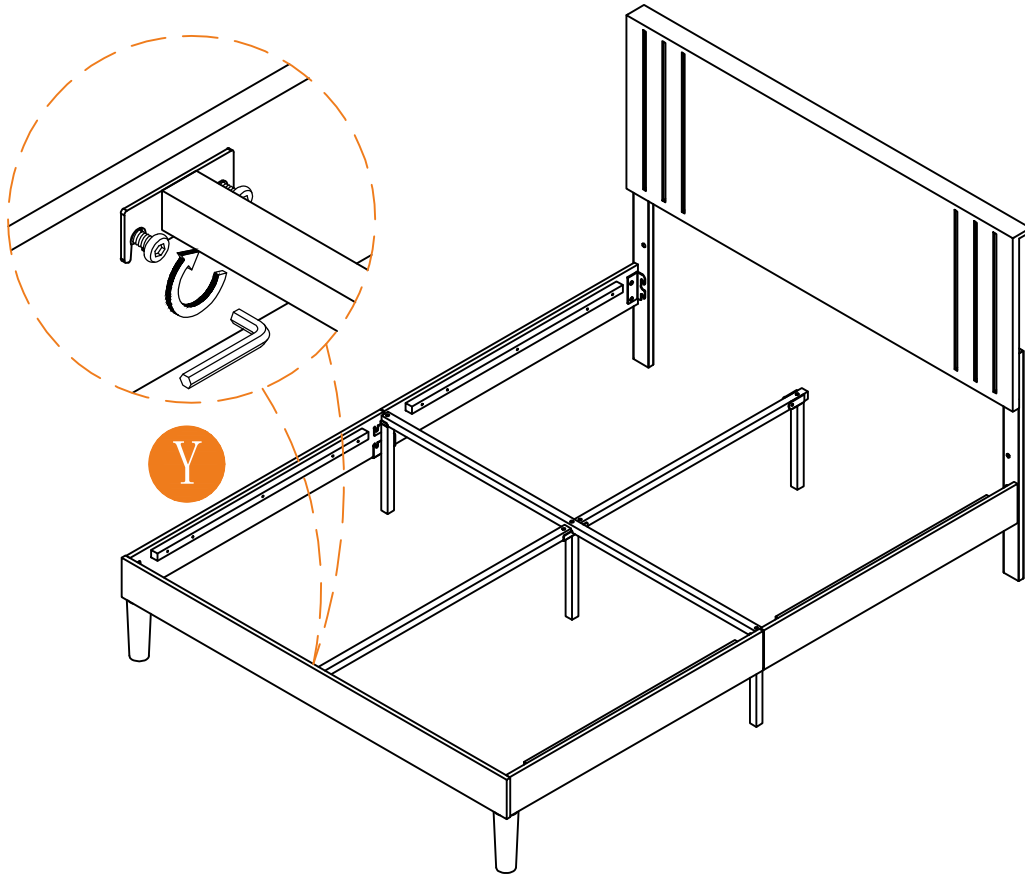




11

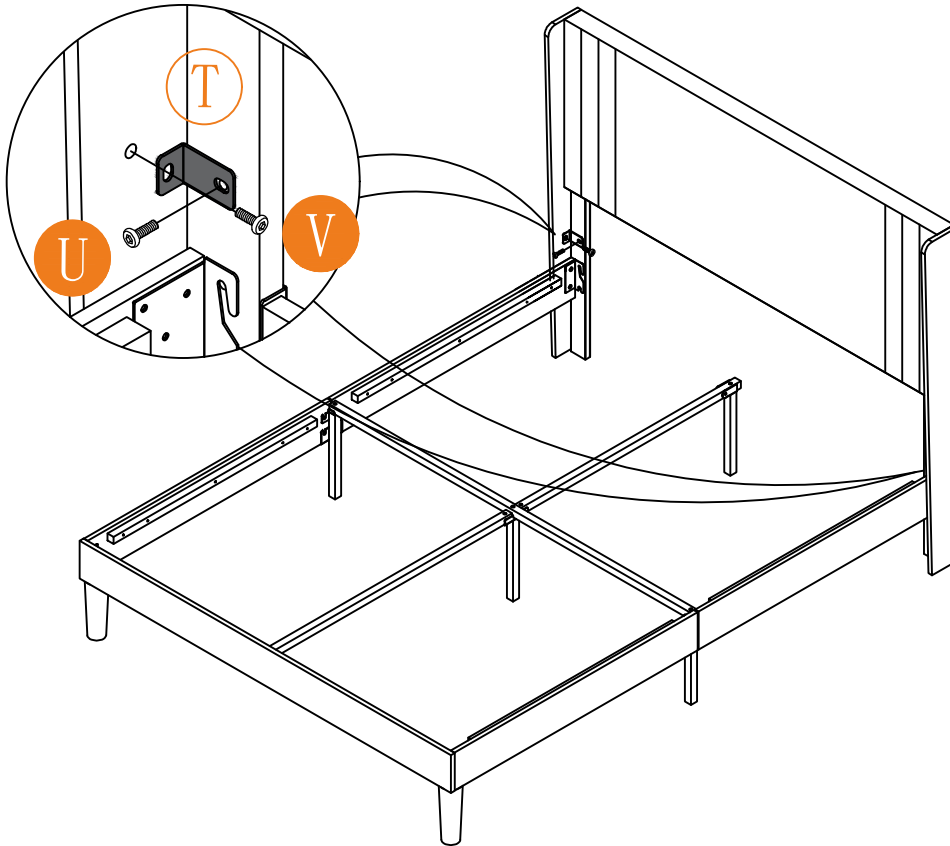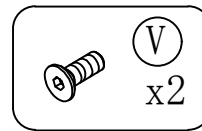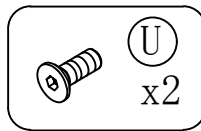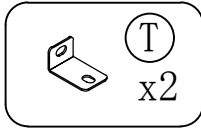

12

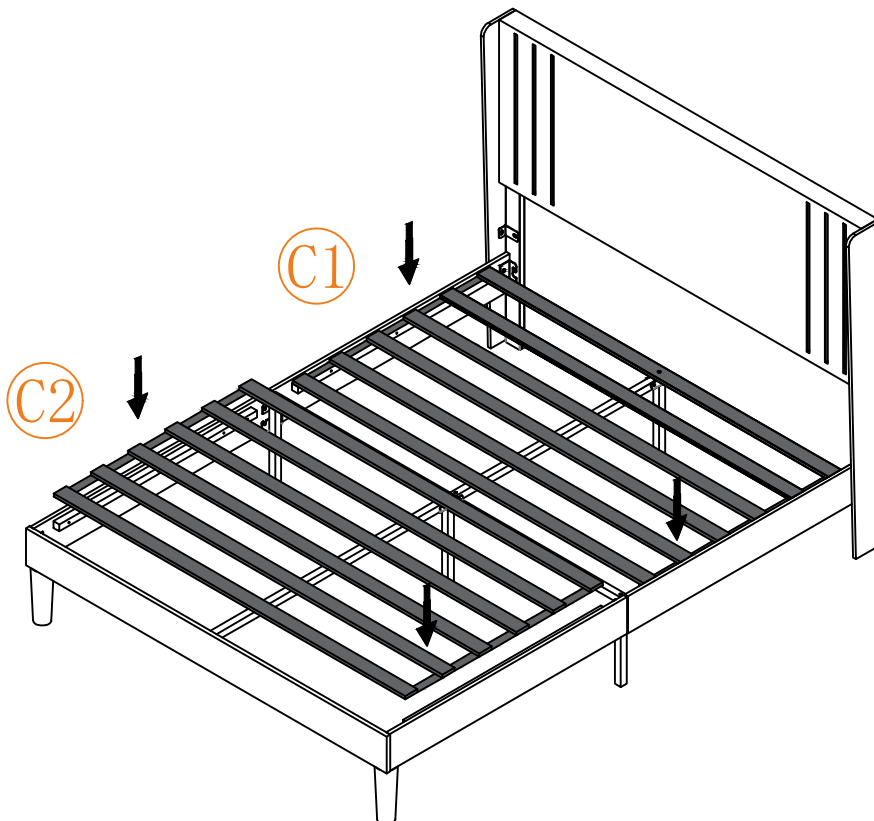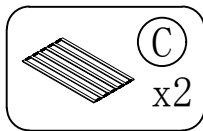

13

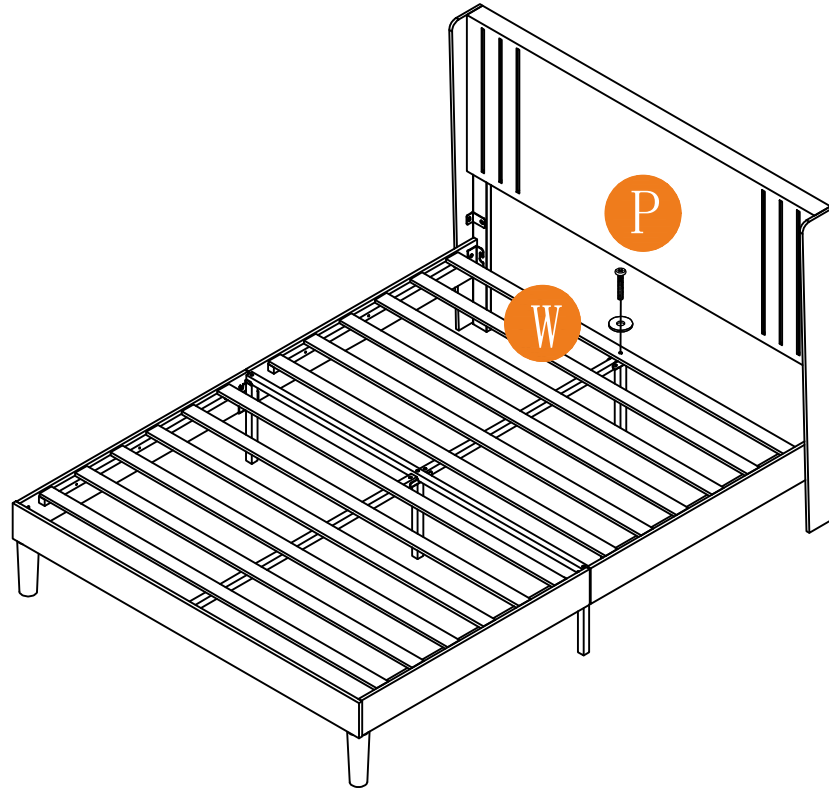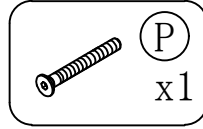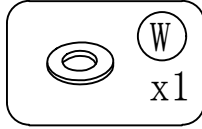

14

