




## C50848 ASSEMBLY INSTRUCTIONS

### Parts:


(2) Side Piece



Top Piece



Bottom Piece

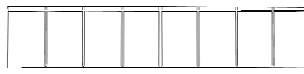

(2) Long Divider - 3/8" Thick



(2) Back Piece



Center Shelf Piece



Center Divider - 5/8" Thick



Top Shelf Piece



Short Divider



(2) Skirt



### Tools Needed:

(32) Hex Screws    Allen Wrench




(8) Double Hooks    (16) Small Screws



Phillips Head Screw Driver  
(Not Included)



**Notice - KEEP BACK GROOVES ALIGNED - Do Not Drill!**

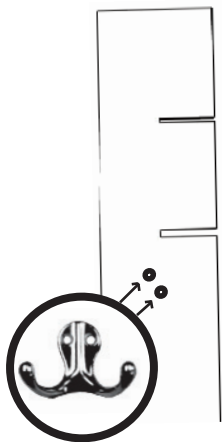


**Step 1:** Attach hooks to **Side Pieces**, both sides of the **Center Divider** and both sides of the **Long Dividers** by using phillips head screwdriver to screw small screws into pre-drilled holes before assembling unit. Make sure hooks are pointed upwards toward the top of the panels as seen in illustration.




**Step 2:** Align **Skirt** with pre-drilled holes on **Bottom Piece**. Insert hex screws into pre-drilled holes in **Bottom Piece**. Tighten down. Repeat for remaining skirt piece.


**Step 3:** Insert edge of **Bottom Piece** into mortise of **Side Piece**. Make sure back grooves are aligned. Insert hex screws into each of pre-drilled holes in **Side Piece** and each of the **Skirt**. Tighten down halfway.

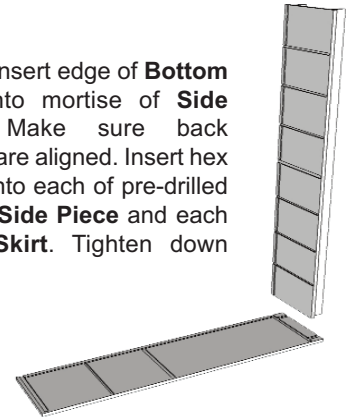


**Step 4:** Insert edge of **Center Shelf** into mortise of **Side Piece**. Insert hex screws into each of pre-drilled holes in **Side Piece**. Tighten down halfway. Repeat for **Top Shelf Piece**.

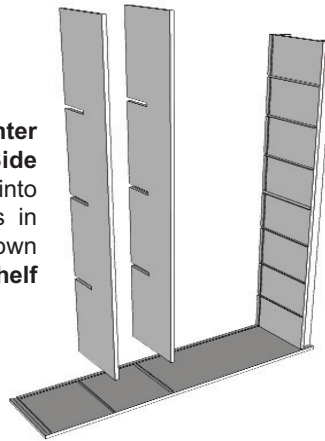

**Step 5:** Insert edge of **Center Divider** into mortise of **Side Piece**, **Top Shelf**, and **Center Shelf**. Make sure back grooves are aligned. Insert hex screws into each of pre-drilled holes in **Bottom piece**. Tighten down halfway.

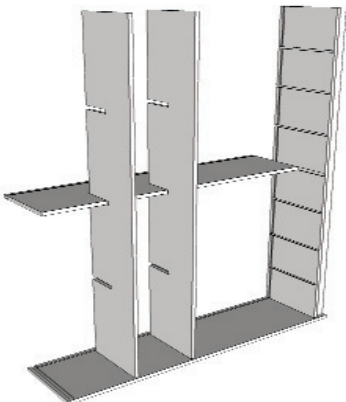


**Step 6:** Insert edge of **Long Divider** into mortise of **Side Piece**, **Top Shelf**, and **Center Shelf**. Insert hex screws into each of pre-drilled holes in **Bottom piece**. Tighten down halfway.

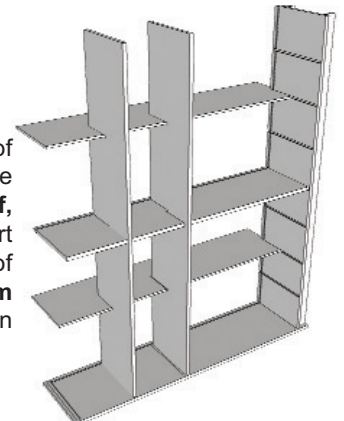




## C50848 ASSEMBLY INSTRUCTIONS

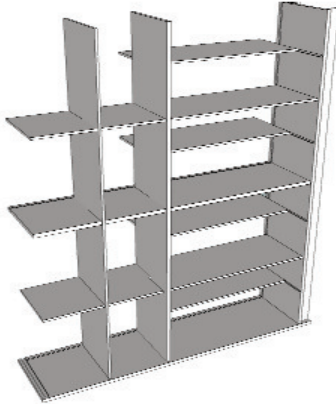


**Step 7:** Insert edge of **Short Divider** into mortise of **Bottom** piece, and **Center Shelf**. Repeat for remaining **Short Dividers**.


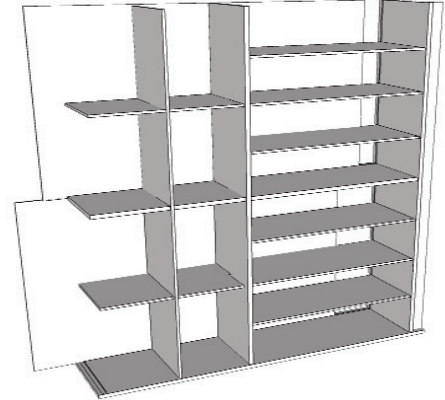


**Step 8:** Insert edge of **Back Piece** into mortise of **Side Piece**, and **Center Shelf** until edge rests firmly in the back groove of **Bottom Piece**. Repeat for remaining **Back Piece**.

**Step 9:** Insert edge of **Top Piece** into remaining mortise of the **Side Piece**, aligning back grooves. Insert edge of each divider into the corresponding mortise on **Top Piece**. Insert hex screws into pre-drilled holes of **Top Piece** and tighten down halfway.

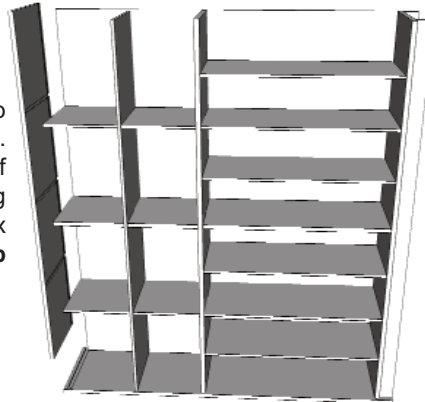

**Step 10:** Fit remaining **Side Piece** over edge of the assembled pieces, inserting edges into mortises of **Side Piece**. Make sure that back panels fit into back grooves of **Side Piece**. Insert hex screws into pre-drilled holes on **Side Piece** and tighten down halfway.

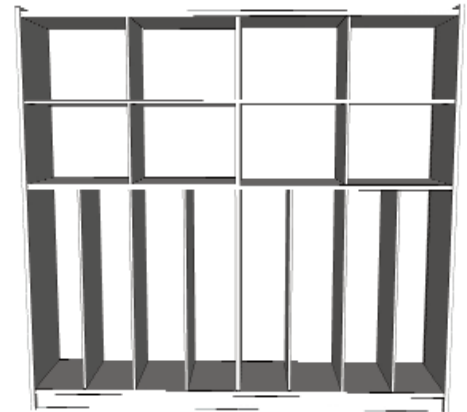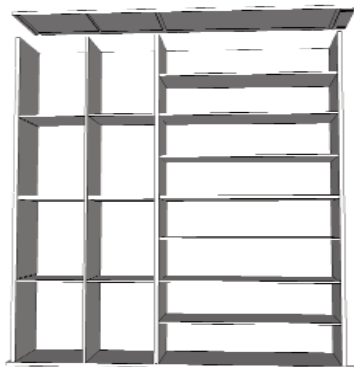

**Step 11:** Finish tightening all hex screws. **DO NOT OVER TIGHTEN**. Stand unit upright so that it is resting on **Bottom Piece** and the edge of the **Side Pieces**. Assembly is complete.

**For assistance, call: Customer Service  
1-800-247-8465**