

Assembly Intruction


Return Swivel



Insert 2 Bolts with washers
on 2 opposite sides
of the Swivel Plate



Place Bucket upside down
on a flate surface.

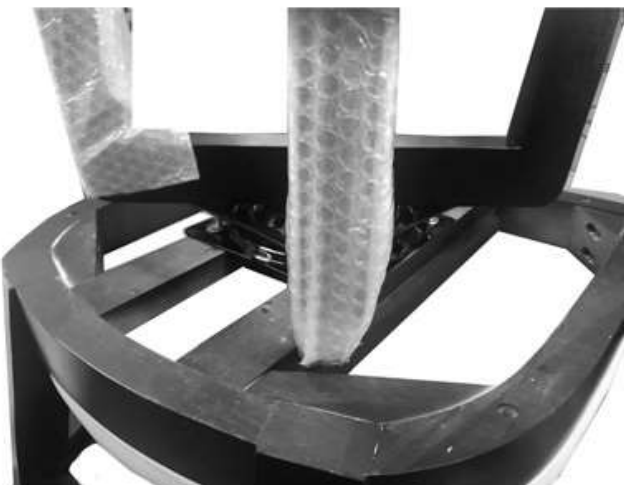

Turn Base upside down on Bucket
while inserting Bolts
the "Front Tag" of the Swivel Plate
Must Face the Front
Make sure 2 bolts are inserted
into the Nut Holes in the Bucket



Once the 2 bolts are inserted
Rotate the swivel Plate 45%
insert the remaining 2 bolts & washers
Then tighten all 4 Bolts