







CT-001

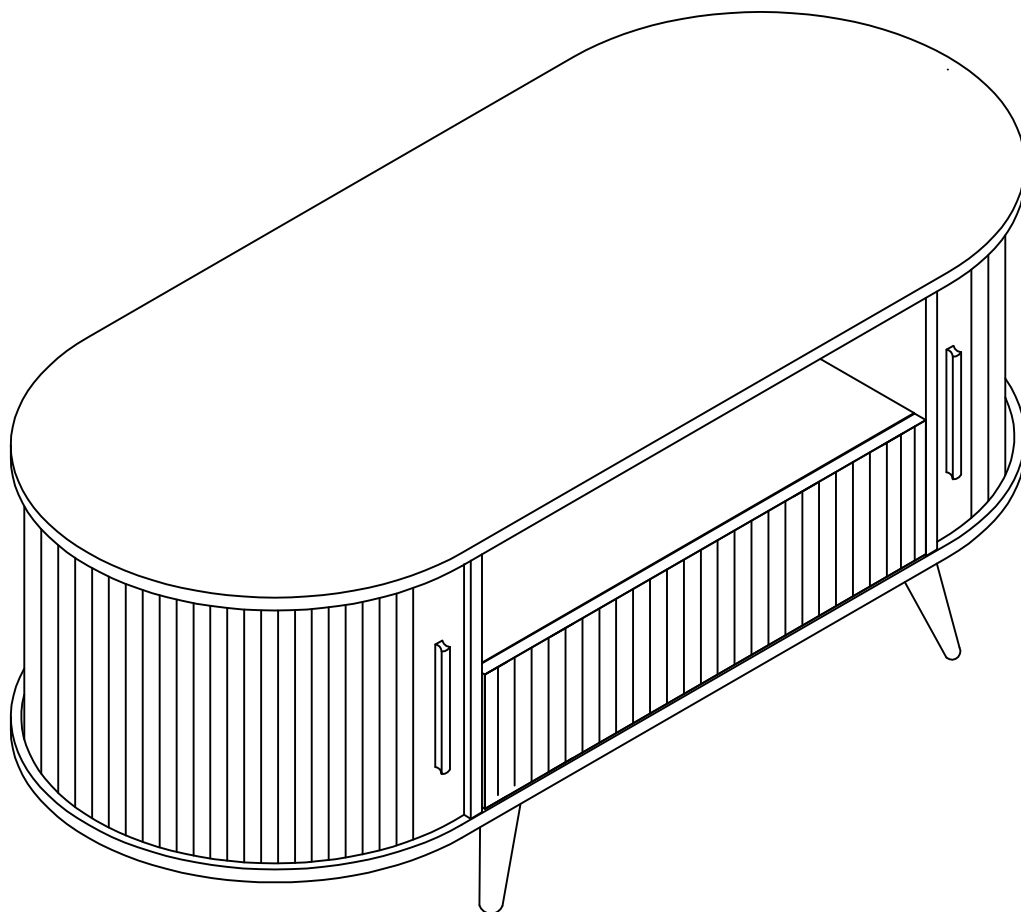





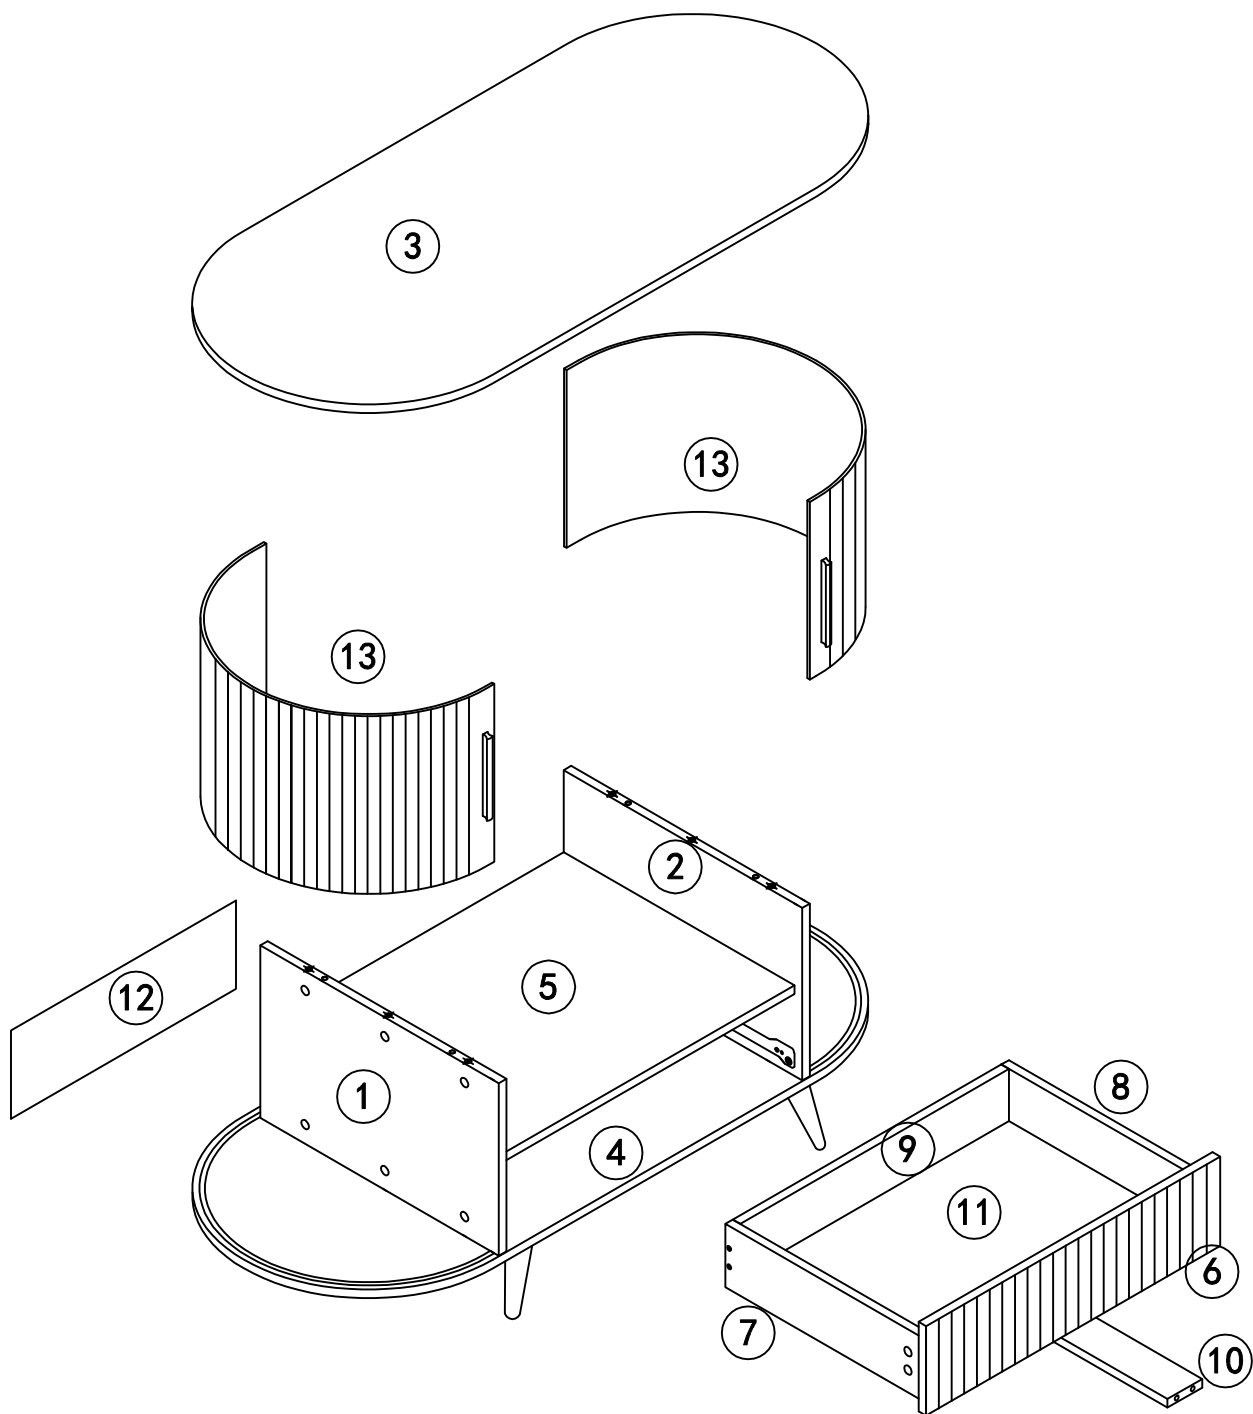



A	26 PCS	B	12 PCS	C	2 PCS	D	4 PCS	E	4 PCS	F	4 PCS
		 $\phi 8*30$				 $\phi 4*8$					
G	28 PCS	H	26 PCS	J	1 PCS	K	4 PCS	L	PCS	M	PCS
 $\phi 3.5*14$		 $\phi 21$		 400mm		 $\phi 3.5*30$					

Step 1

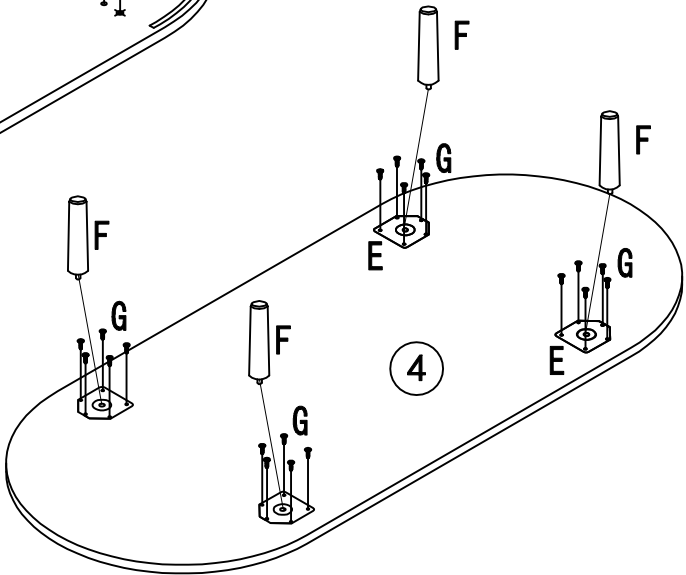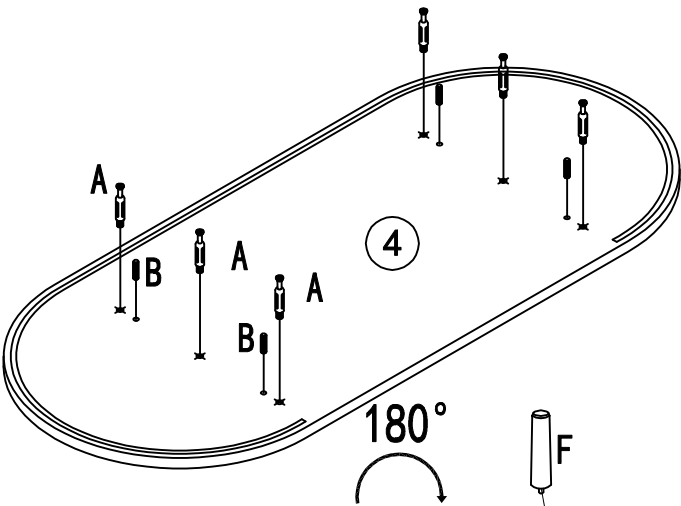
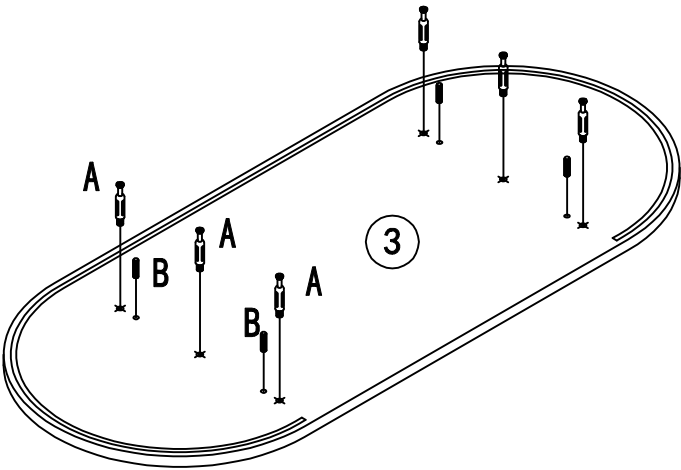
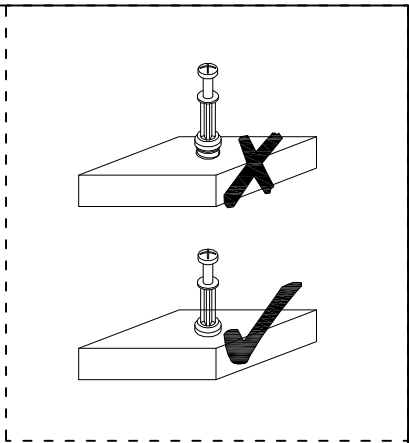


A	12 PCS	B	8 PCS	E	4 PCS	F	4 PCS	G	20 PCS
									

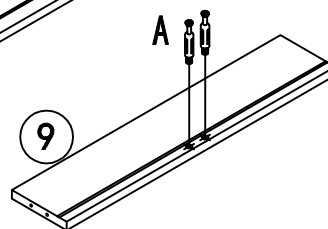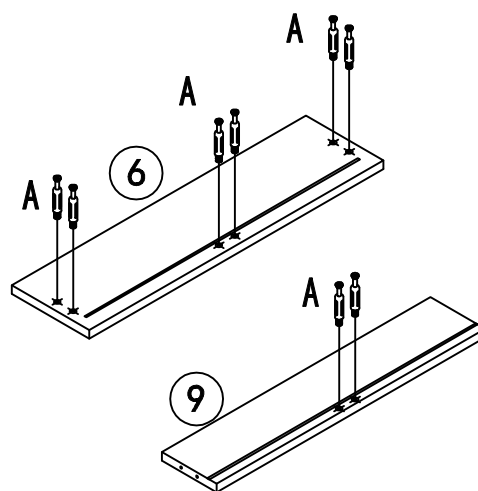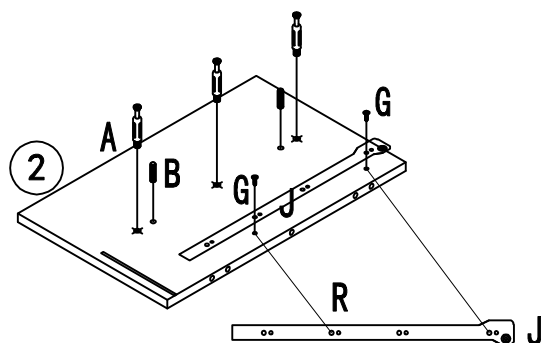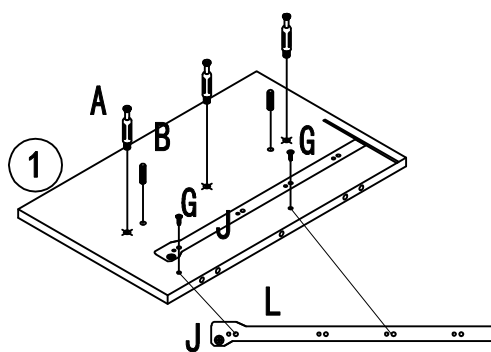


A	14 PCS	B	4 PCS	G	4 PCS	J	1 PCS
						 400mm	

Step 2

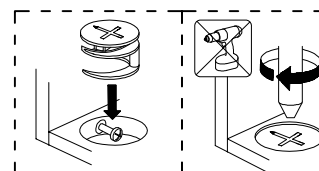
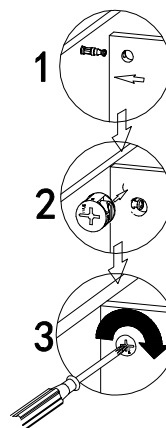
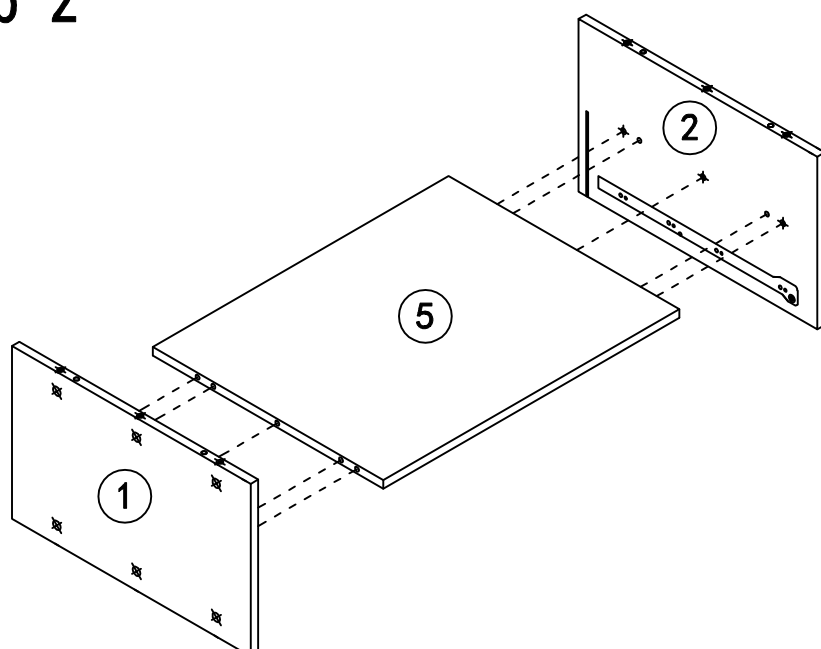


A	6 PCS
	

Step 3

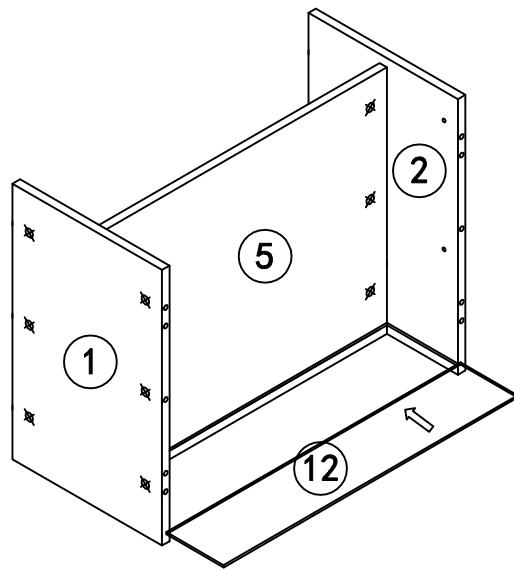


Step 4

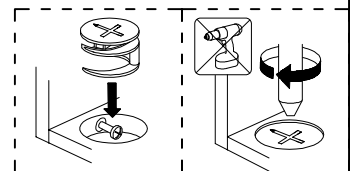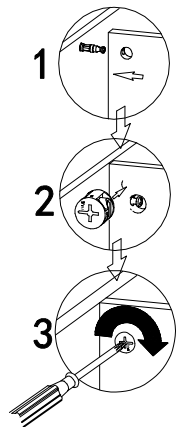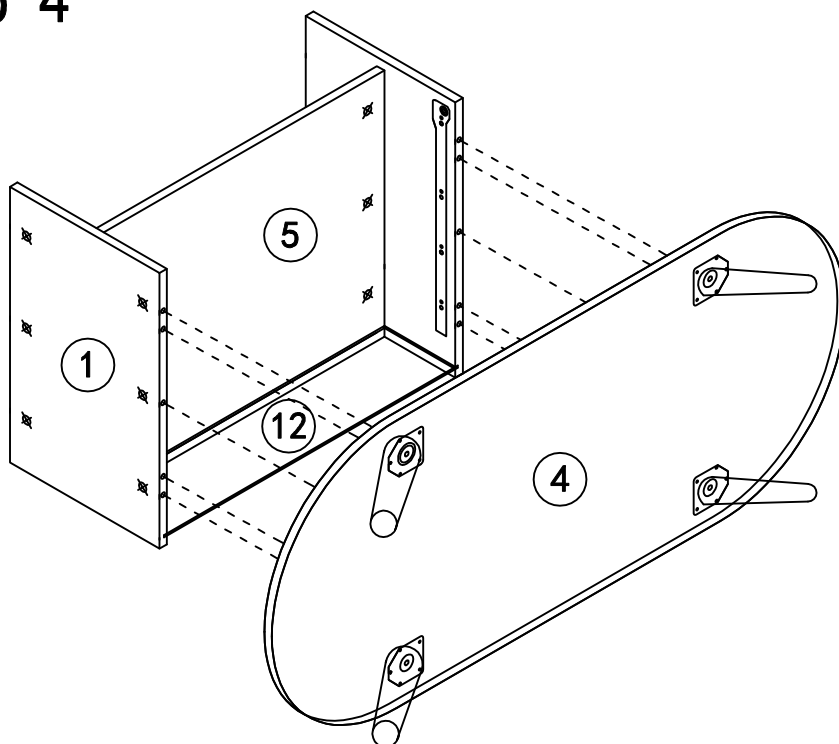

A	6	PCS
---	---	-----




Step 5



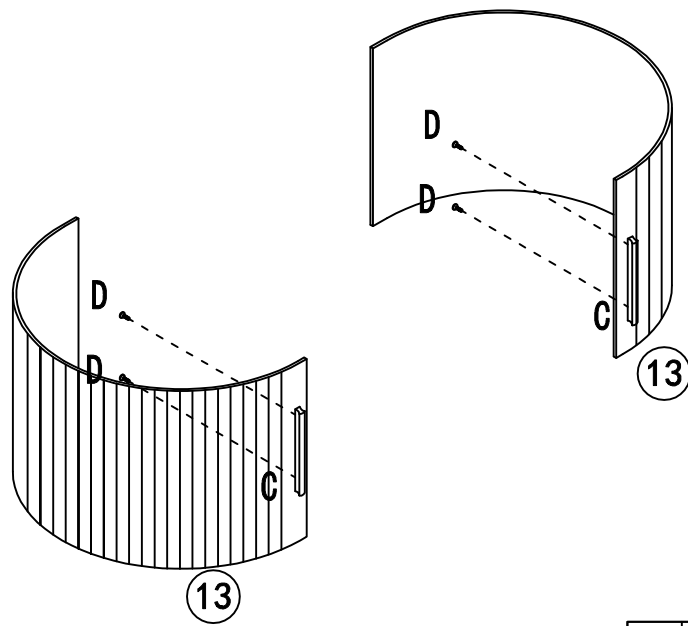


C	2 PCS	D	4 PCS
		 φ 4*8	

Step 6



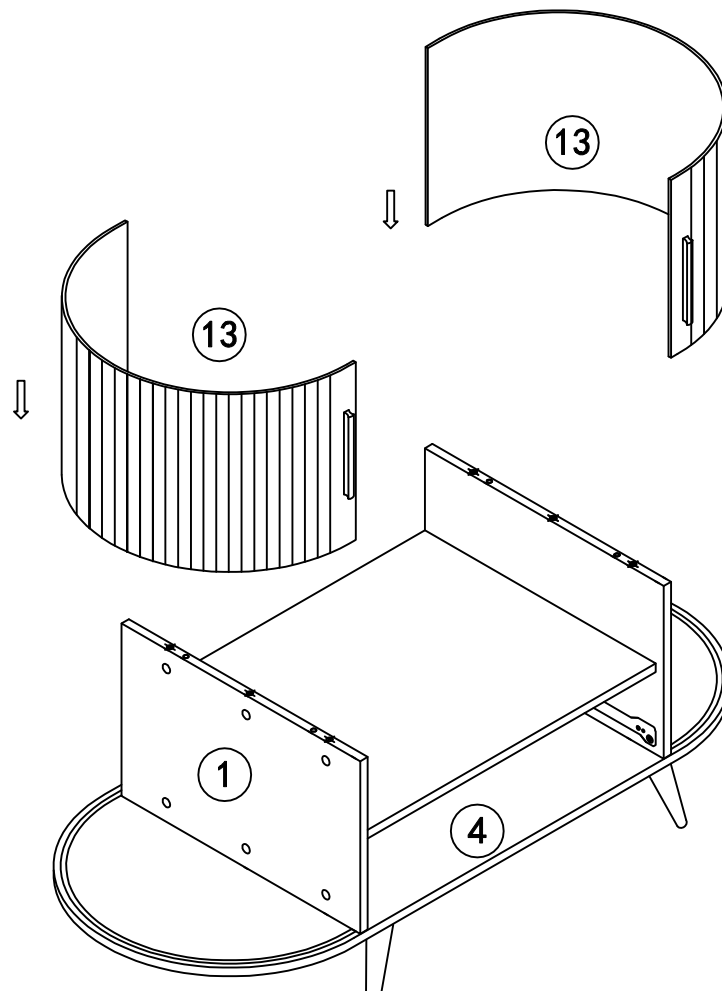


Step 7

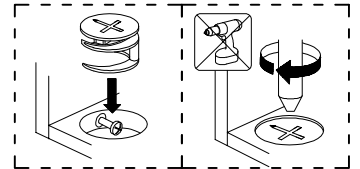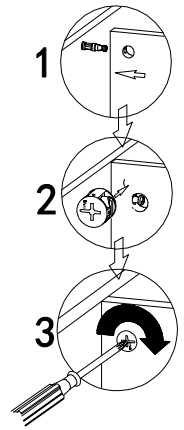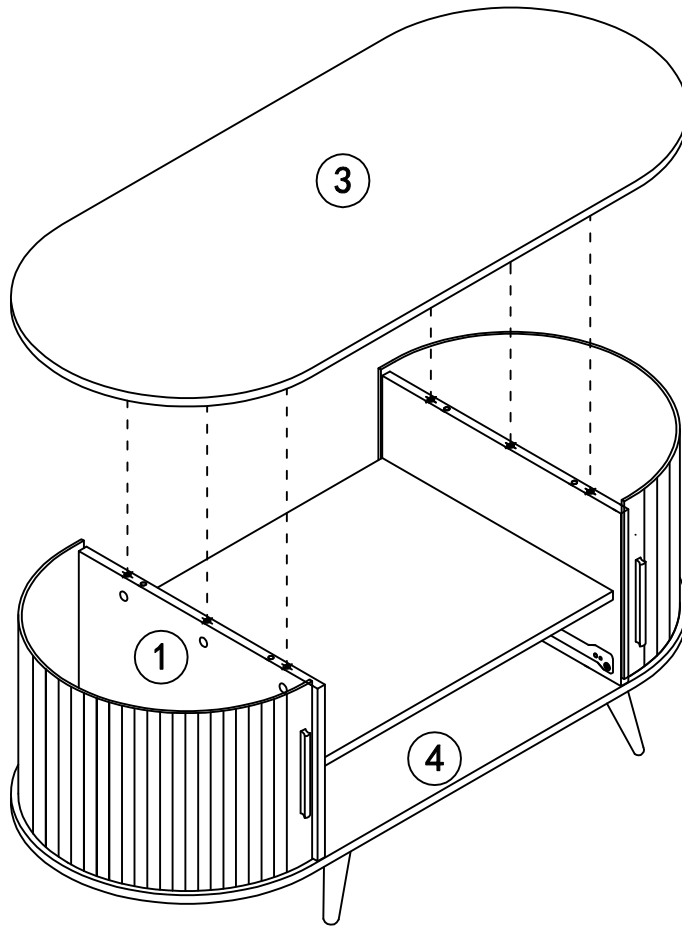


A	6 PCS

Step 8

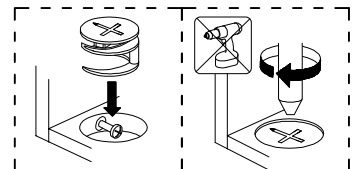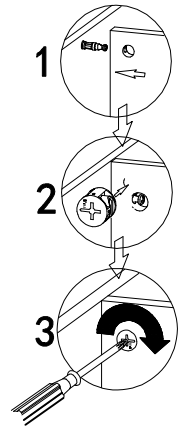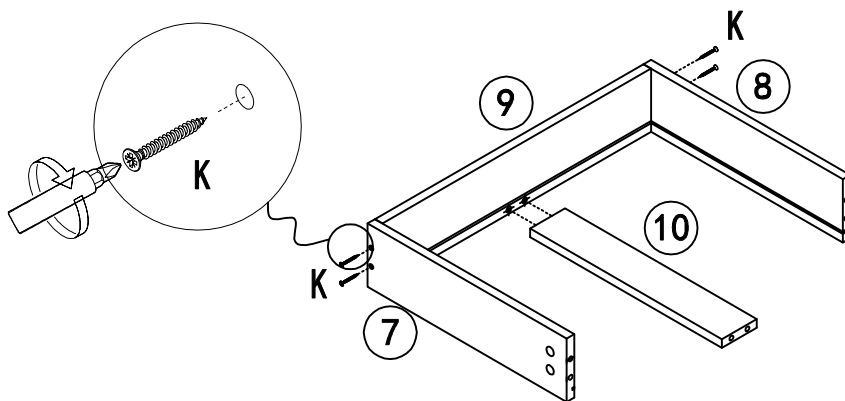


A	2 PCS	K	4 PCS
		$\phi 3.5 \times 30$	

Step 9

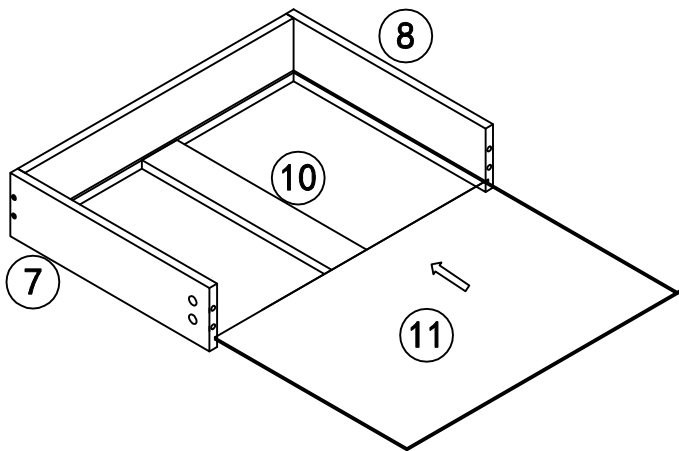


Step 10

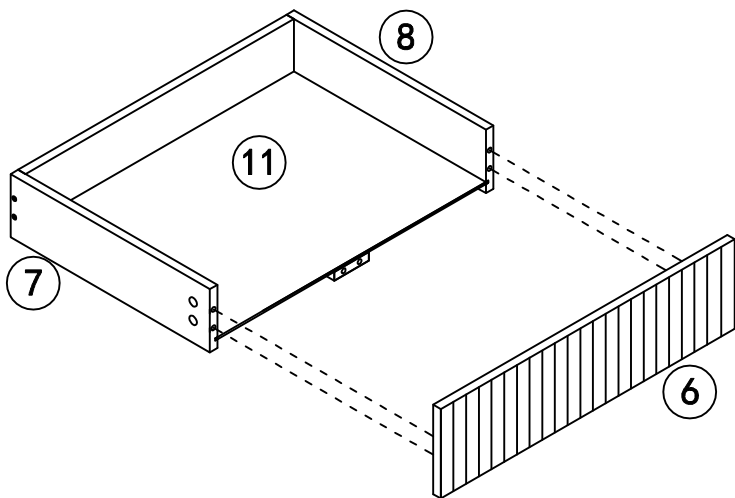

A	6	PCS

Step 11

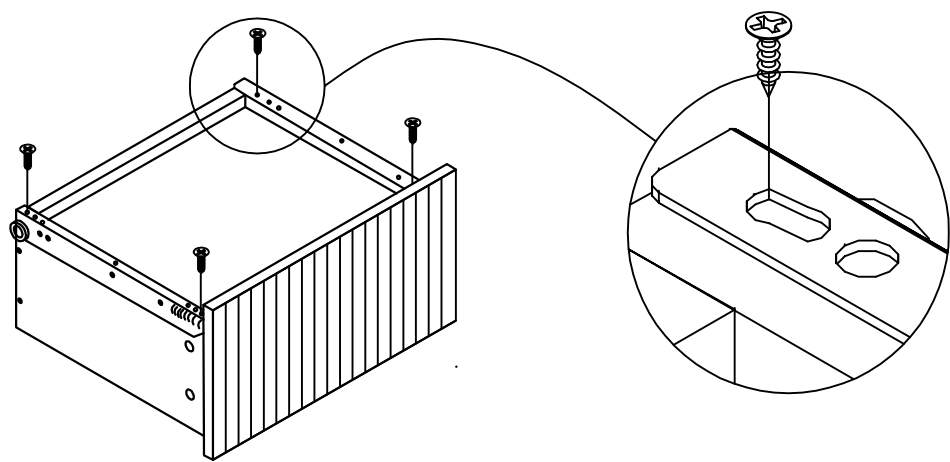

G	4	PCS	J	1	PCS
					
φ 3.5*14			400mm		

Step 12

