Product Name:	White Wood 18-Pair Shoe Storage Cabinet
---------------	---


Thank you for purchasing this Luxen Home product. This product has been manufactured with the highest standards of safety and quality.

PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.


Unpack all parts from Styrofoam and bubble wrap inside the carton to ensure there are no missing or damaged parts. If any parts are missing or damaged, do not attempt to assemble or use the product.

Tools required for assembly: Screwdriver, flat head screwdriver, hammer, and measuring tape.

Assembly Instructions:

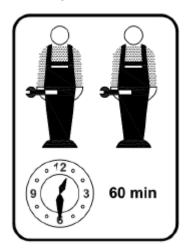


CARTON CONTENTS:

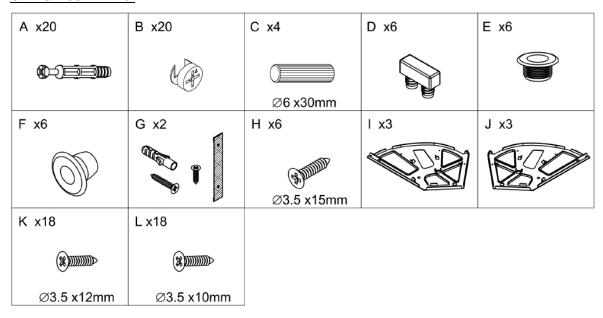

Product Name:	White Wood 18-Pair Shoe Storage Cabinet
---------------	---

PANEL CONTENTS:

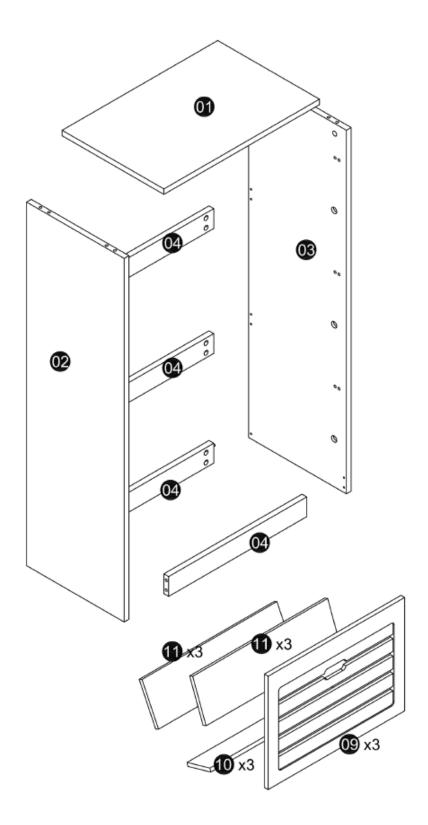

Please save this manual for future reference.

Product Name:	White Wood 18-Pair Shoe Storage Cabinet
---------------	---

Step 1Make sure the pins are installed correctly as shown with the "check mark" below:



Below shows how the pins are used to assemble the panels together.






FIGURE A

Place panels (1, 2, 3) on a soft flat surface. Insert and screw in A as seen below. Insert D and E as seen below. Insert C to inner top hole of panels (2, 3).

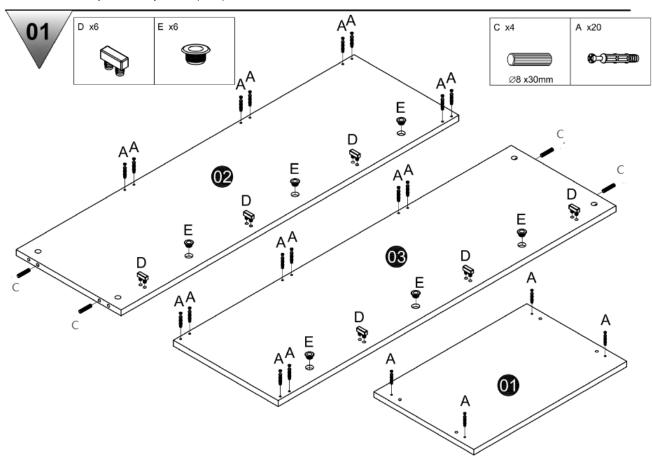


Product Name:	White Wood 18-Pair Shoe Storage Cabinet
---------------	---

Step 2With panel 2, insert panels 4 and screw in B to lock in place.

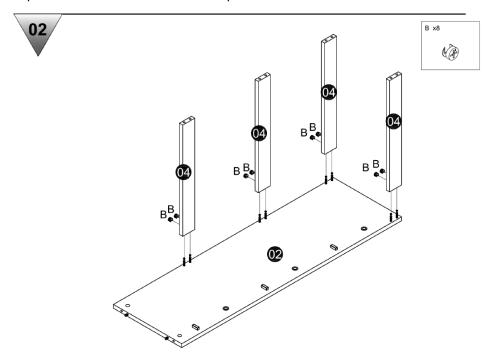


Step 3Insert panel 3 to panels 4. Screw in B to lock in place.

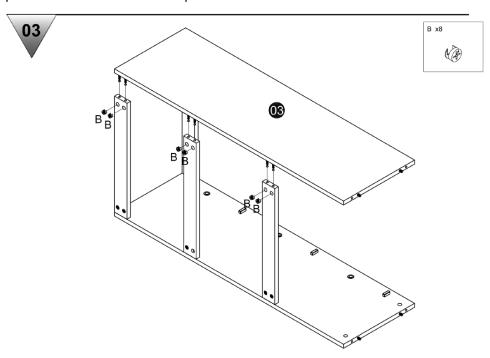


Product Name:	White Wood 18-Pair Shoe Storage Cabinet
i i oddet i tallici	Winte Wood 10 i an once storage cabinet

Step 4
Insert panel 1 to (2, 3). Screw in B to lock in place.

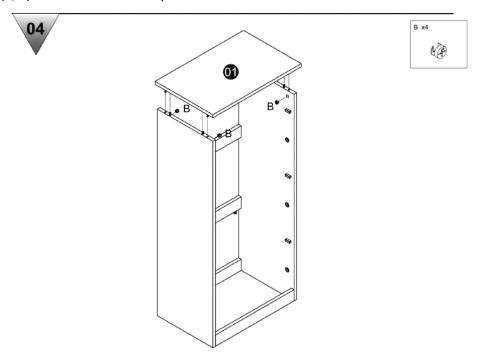

Step 5
To install the cabinet on the wall, align wall mount to panel 1 and screw in G.

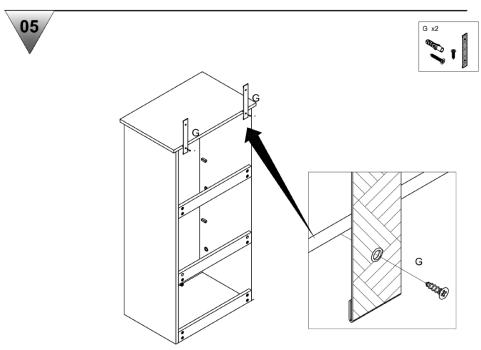

Product Name:	White Wood 18-Pair Shoe Storage Cabinet
---------------	---

Step 6

Secure cabinet to the wall using hardware (G), see image below.


Installation Tips

Measure the distance between the hardware on the cabinet using a measuring tape.

Locate the stud in the wall or joist in the wall where you plan to mount the storage cabinet. Use a stud finder or tap the wall lightly with a hammer. A solid thud indicates a stud, while a hollow sound means no stud is present. Mark the storage cabinet hardware measurement on the wall with a pencil. When possible, all screws used to secure the storage cabinet to the wall should be in a stud.

Drill a pilot hole through the drywall and into the stud at the marked location. Use a drill bit one size smaller than the mounting screws.


Drill a hole slightly larger than a toggle bolt for any mounting screws that won't be located in the stud. Toggle bolts have a metal sheath that opens like wings. These wings anchor the screw when no stud is present and can support loads of 25 pounds or more without damaging the wall.

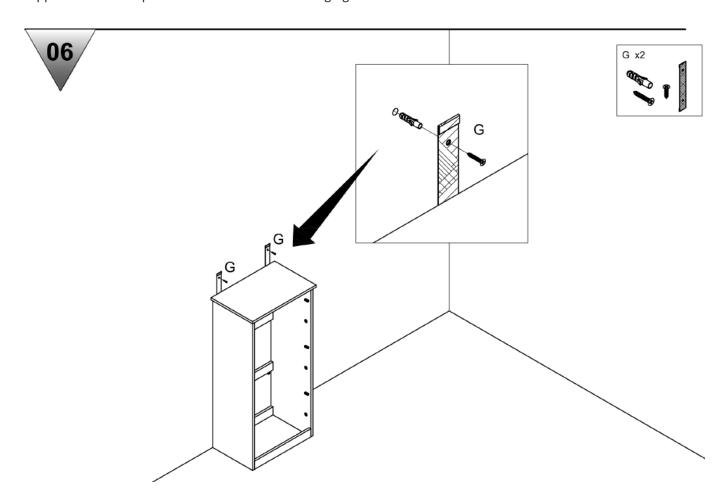


Please save this manual for future reference.

Product Name: White Wood 18-Pair Shoe Storage Cabinet

Step 7 Align I and J to panel 9 and screw in K.

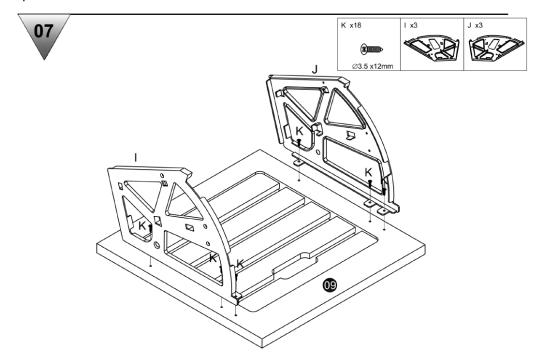


Step 8
Align panels (10, 11, 12) to I and J and screw in L.

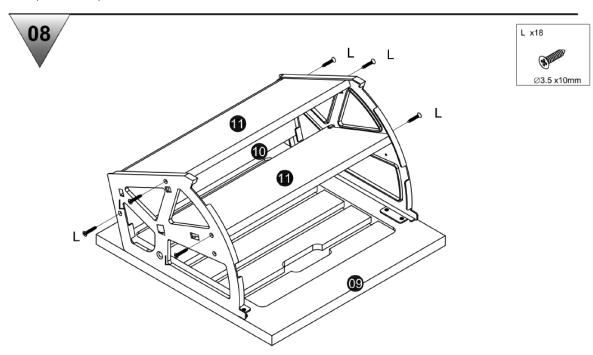


Product Name:	White Wood 18-Pair Shoe Storage Cabinet
---------------	---

Step 9Place drawer in cabinet. Insert F to I and J. Screw in H.

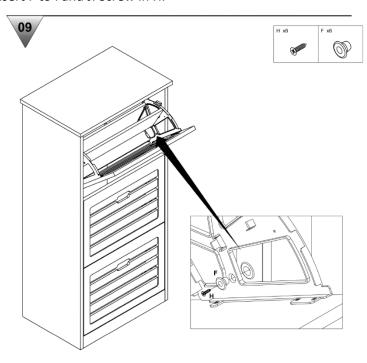

Final

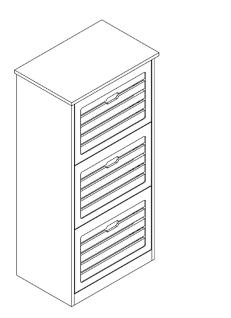

Special Warnings and Cautions:

To avoid injury and/or damage, please do not sit or stand on the cabinet as this may cause serious bodily injuries and/or product damage.