


Outdoor Privacy Screen

ASSEMBLY MANUAL

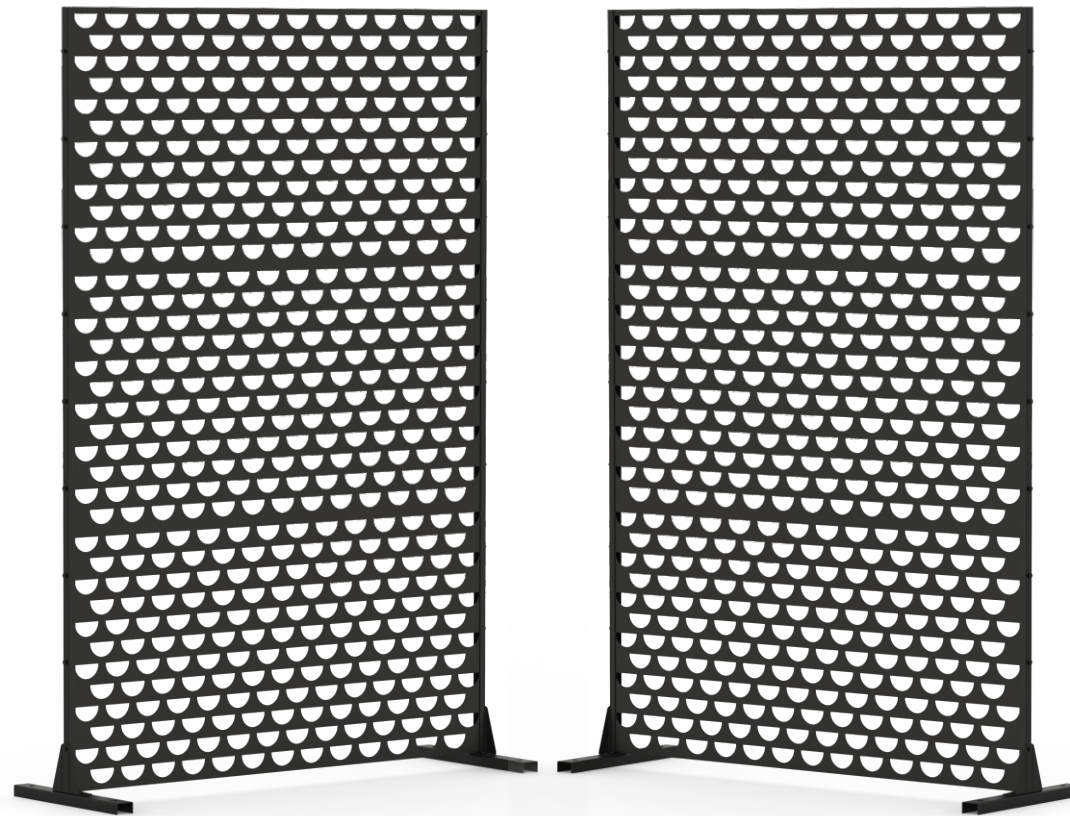




If the privacy screen will be used in a strong wind area, we highly recommend you using four Hex-Head Sleeve Anchors to fix the privacy screen on solid ground.

Before assembling, we recommend:


1. Wear Gloves.





2. Don't assemble the privacy screen on a Hard Surface.

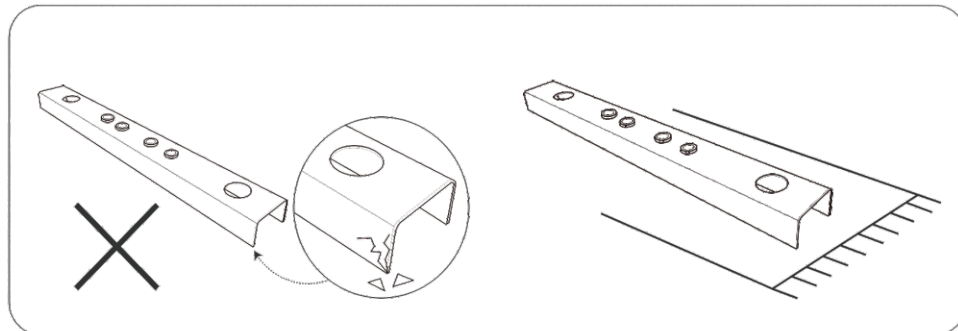





3. Ask for a Helping Hand.




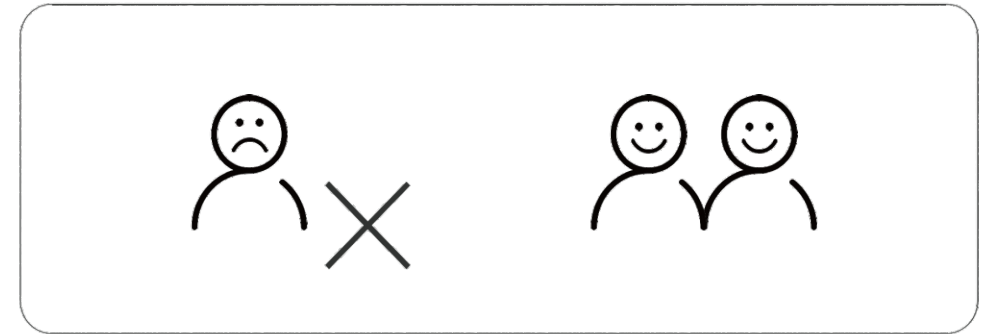






4. Use Hex-Head Sleeve Anchors to fix the privacy screen on solid ground if necessary.

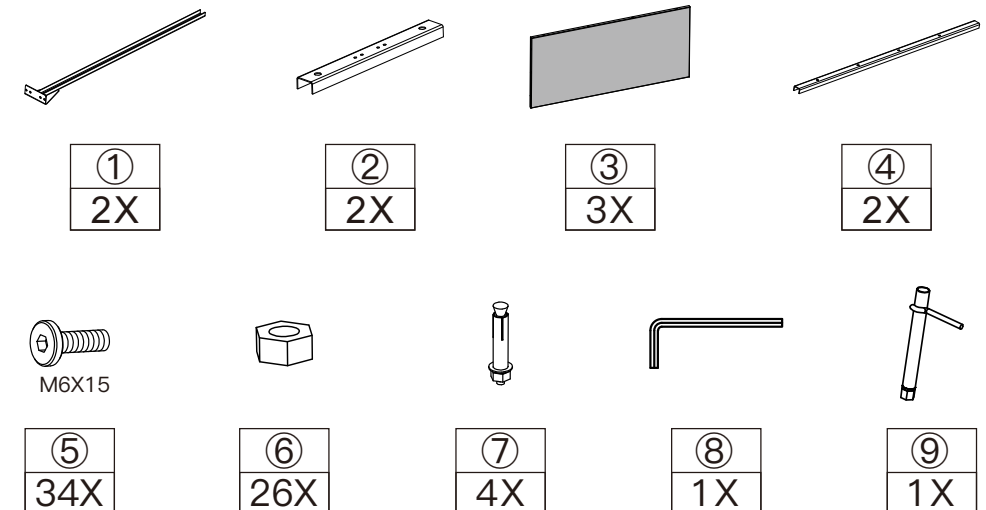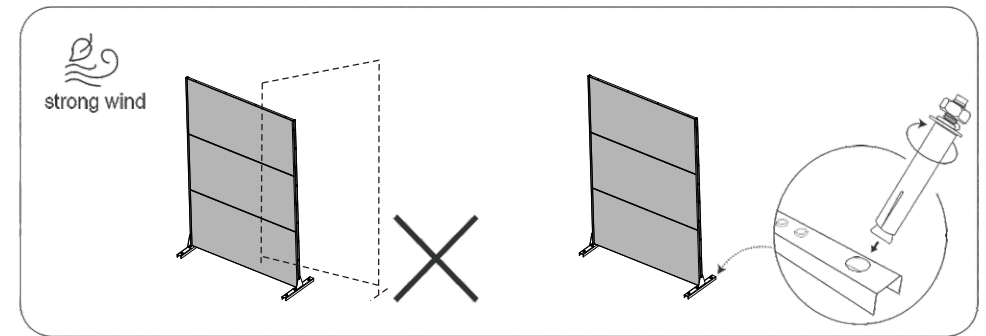

Vertically Install

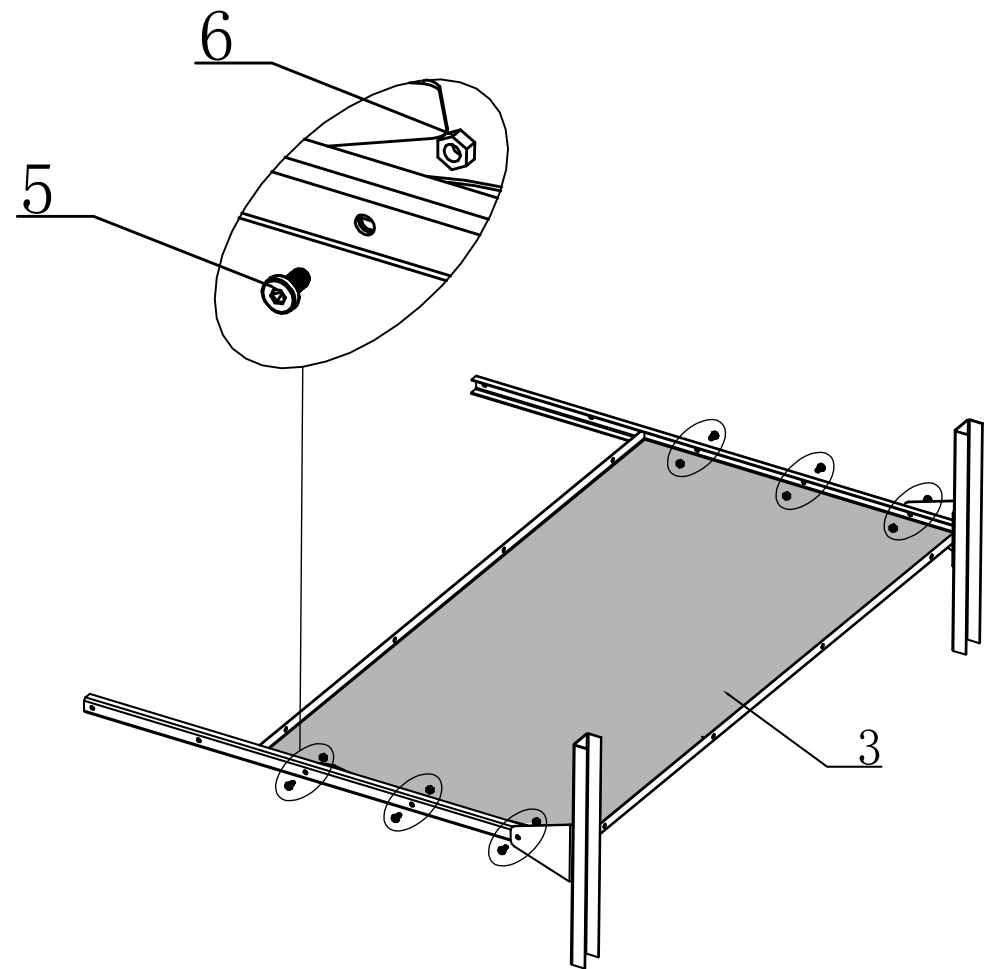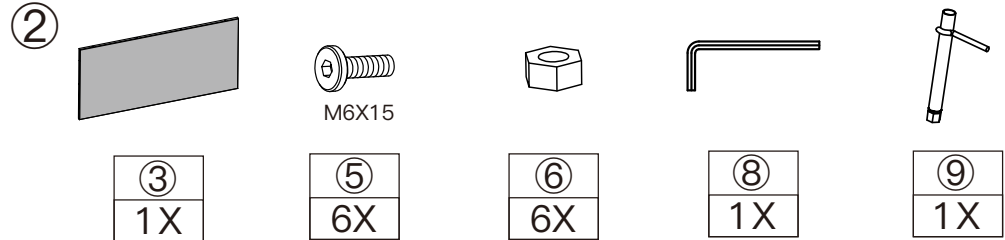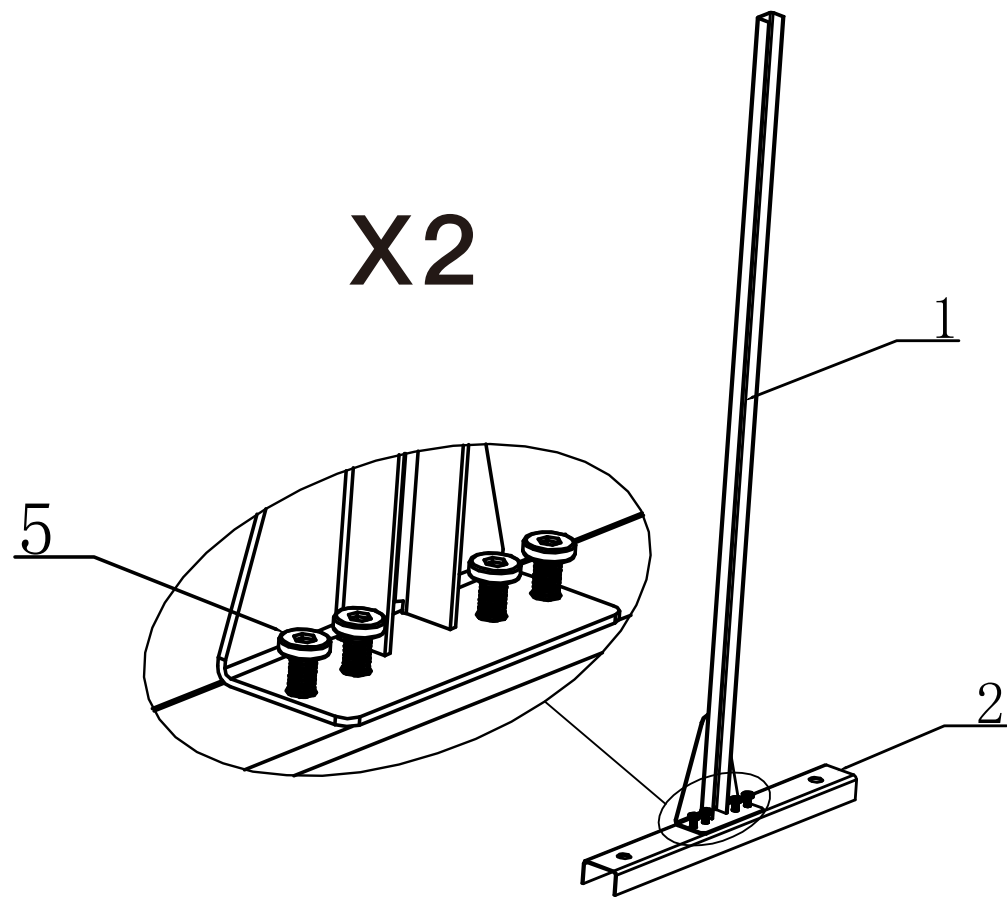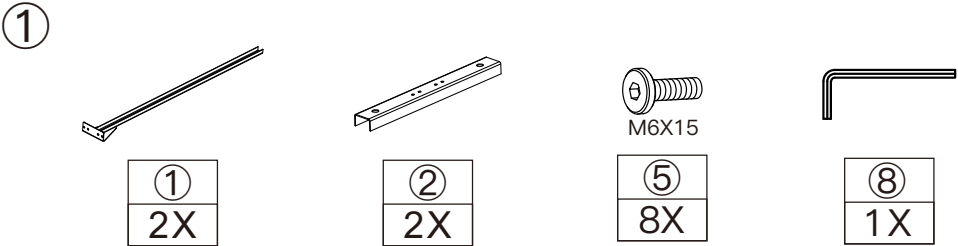

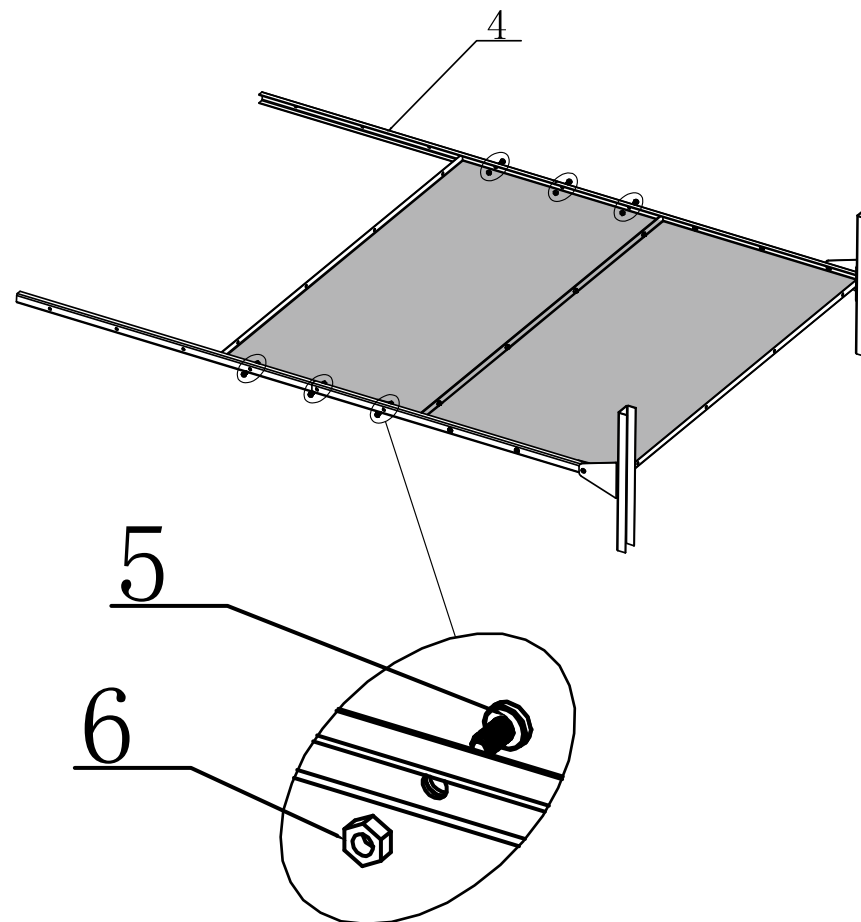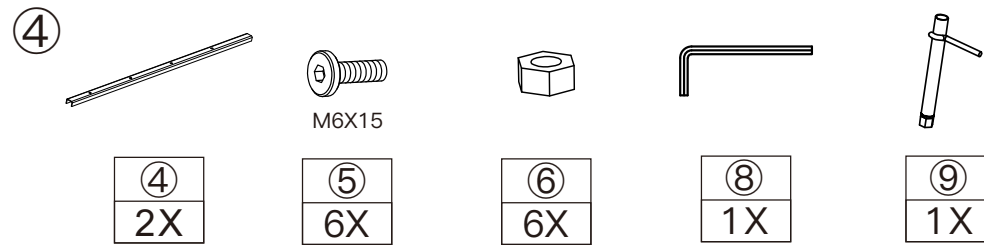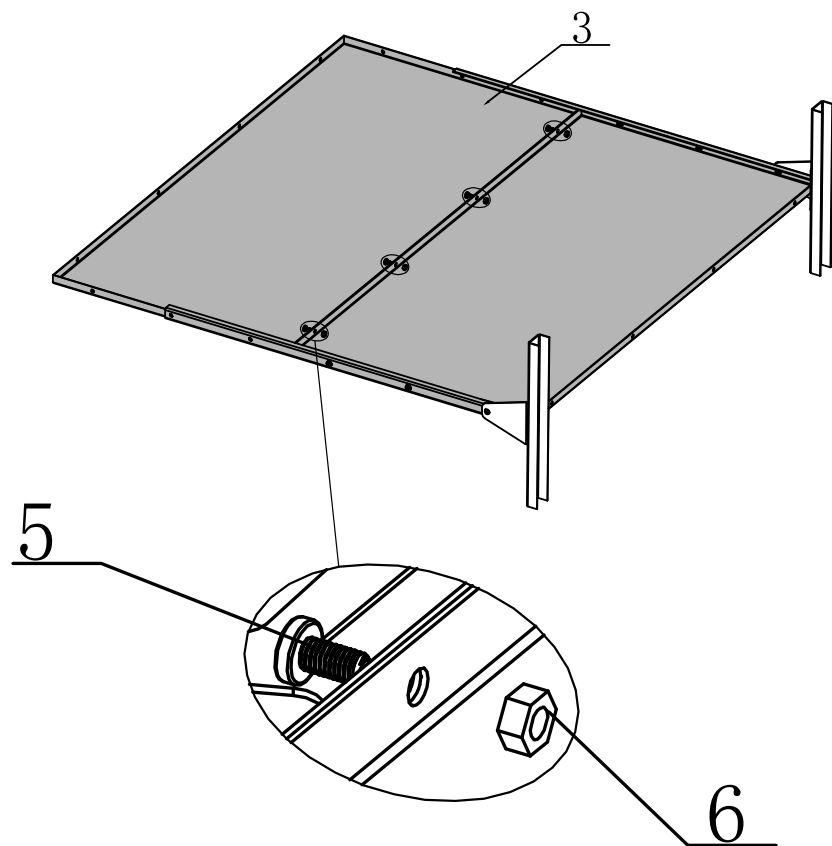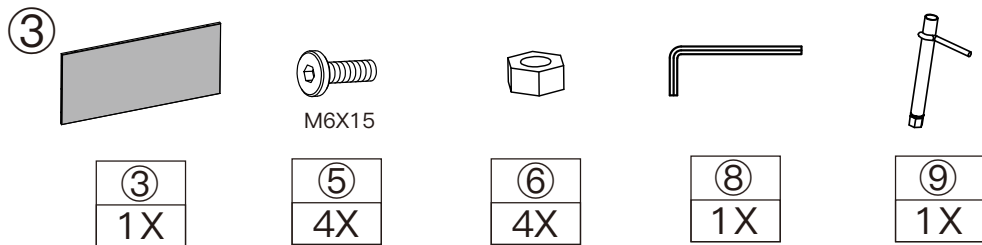

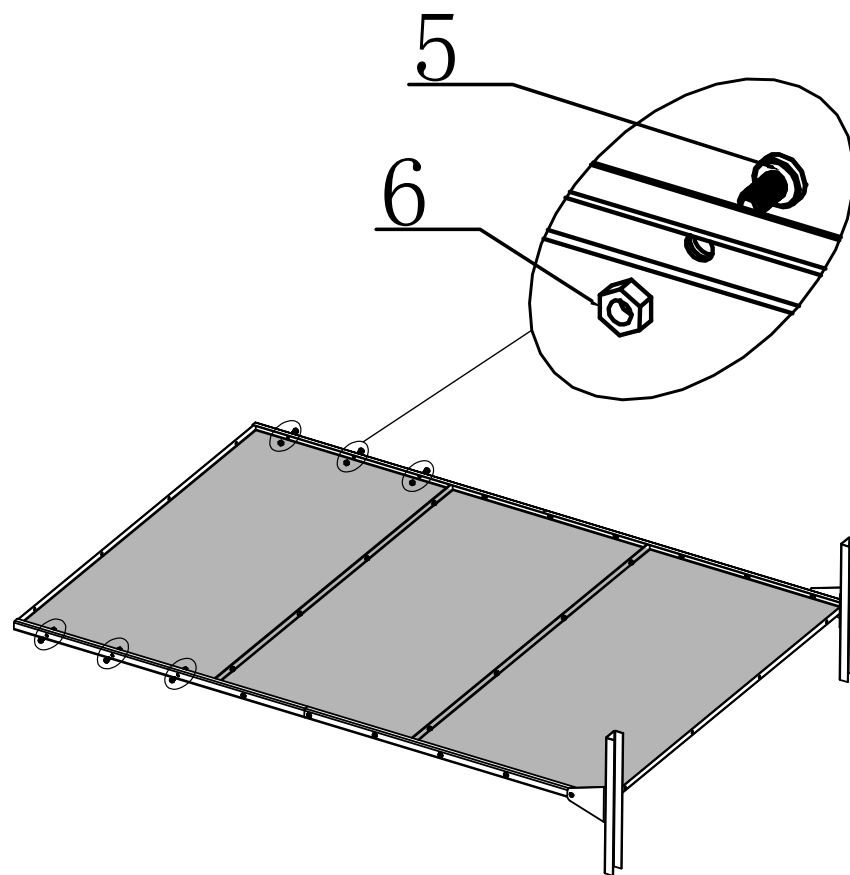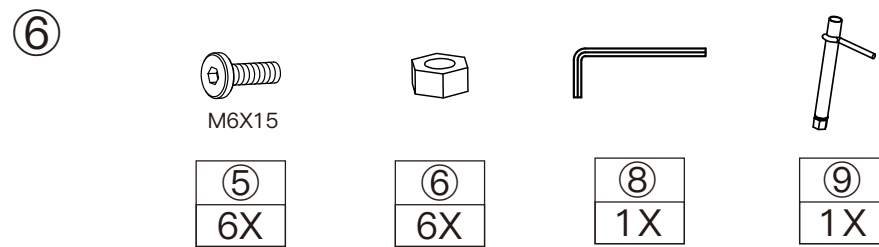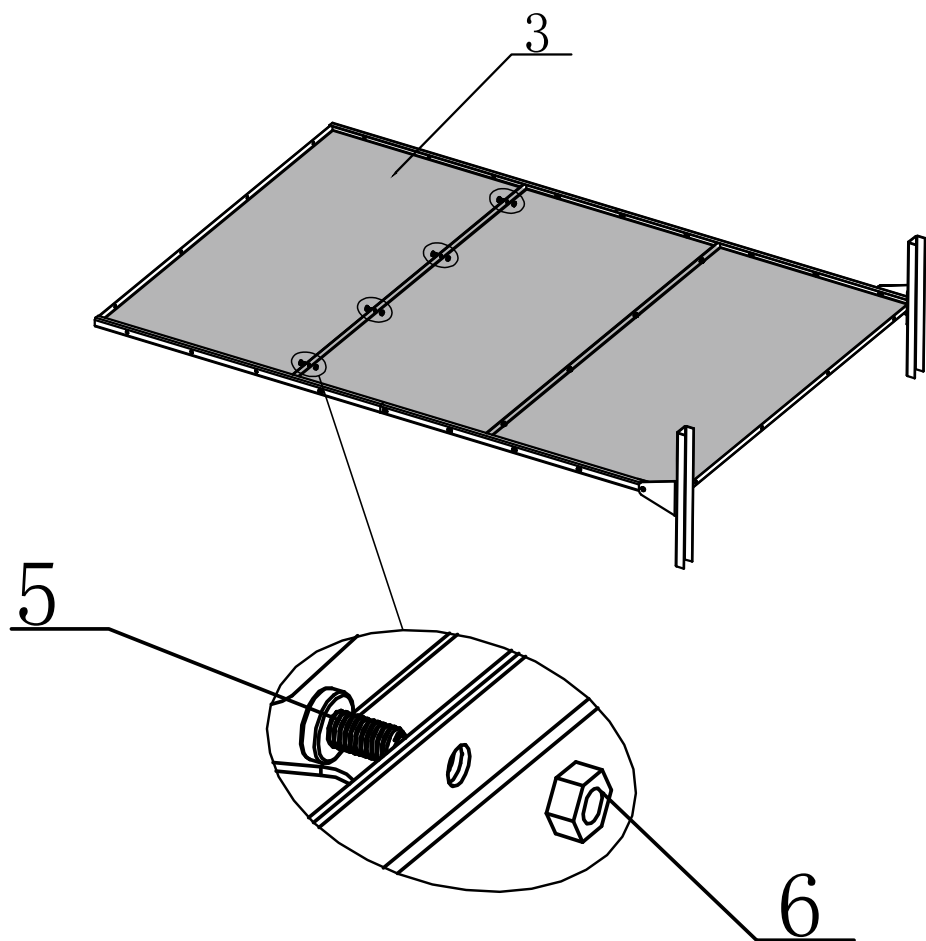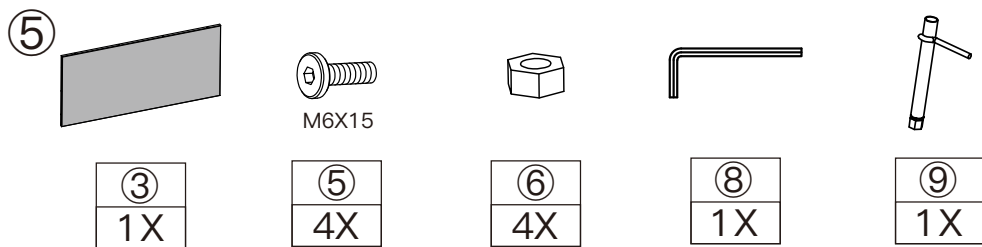


Single Panel Installtion


⑦



⑦
4X

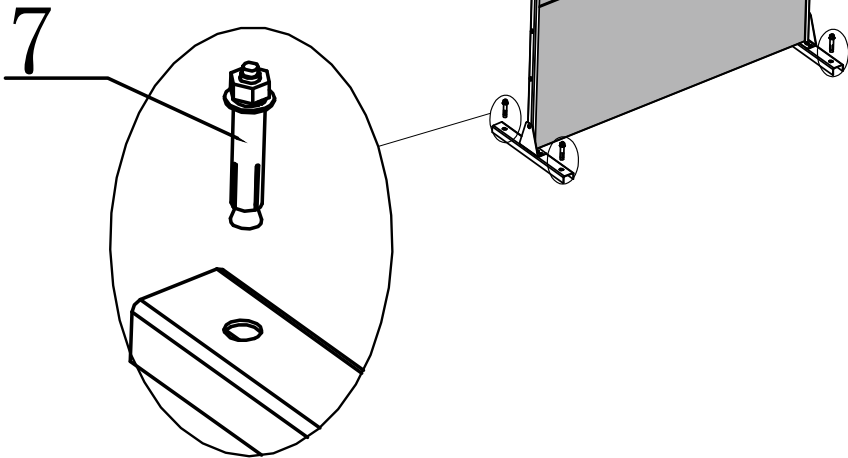

⑧

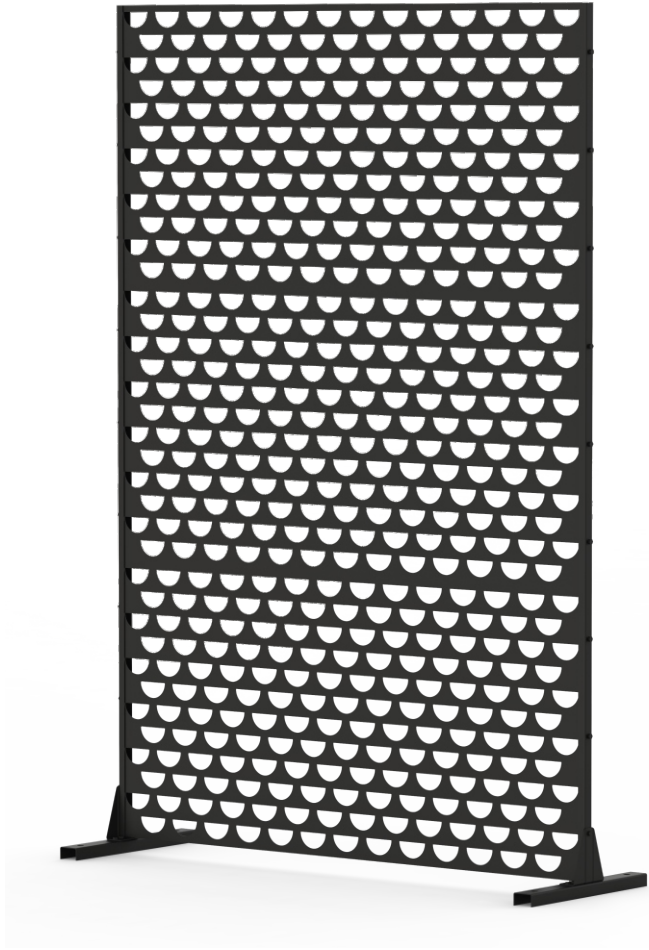

We have various choices of pattern for you:

