



**1.0hr**

**APPROXIMATE ASSEMBLY TIME**



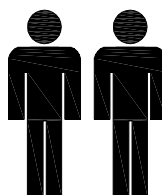


**2 PERSON OF ASSEMBLY**

**FLOOR AREA**  
1.0M X 2.2M




**REQUIRED ASSEMBLY SPACE**

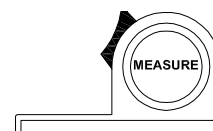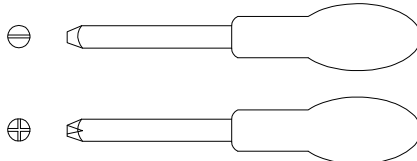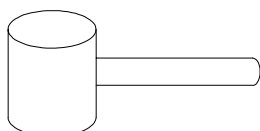

**REQUIRED ASSEMBLY TOOLS**


**ASSEMBLED DIMENSIONS**

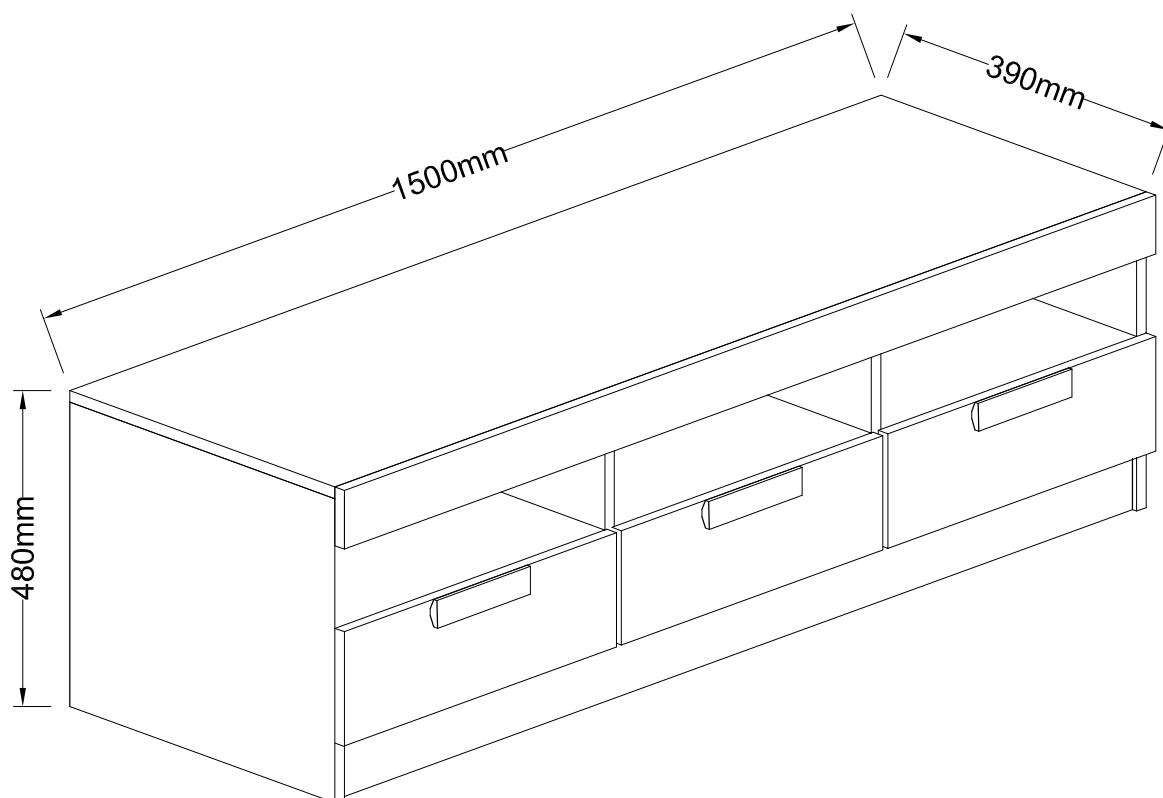


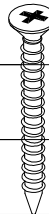
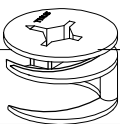
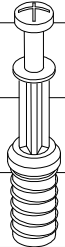













**NOTE : THE MAXIMUM WEIGHT THIS PRODUCT CAN HOLD UP TO 30 KGS.**

NO.	PART LIST	QTY	NO.	PART LIST	QTY
(A)	RIGHT SIDE PANEL	1	(M)	DRAWER COVER (RIGHT)	1
(B)	LEFT SIDE PANEL	1	(N)	DRAWER COVER (LEFT)	1
(C)	CENTRE PANEL (RIGHT)	1	(O)	DRAWER COVER (CENTRE)	1
(D)	CENTRE PANEL (LEFT)	1	(P)	DRAWER RIGHT SIDE PANEL	3
(E)	TOP PANEL	1	(Q)	DRAWER LEFT SIDE PANEL	3
(F)	FRONT PANEL	1	(R)	DRAWER BACK PANEL	3
(G)	BOTTOM PANEL	1	(S)	DRAWER BOTTOM SUPPORT	3
(H)	CROSSBAR	2	(T)	DRAWER BOTTOM PANEL	3
(I)	FIX PANEL (RIGHT)	1	(U)	HANDLE	3
(J)	FIX PANEL (LEFT)	1			
(K)	FIX PANEL (CENTRE)	1			
(L)	BACK PANEL	3			
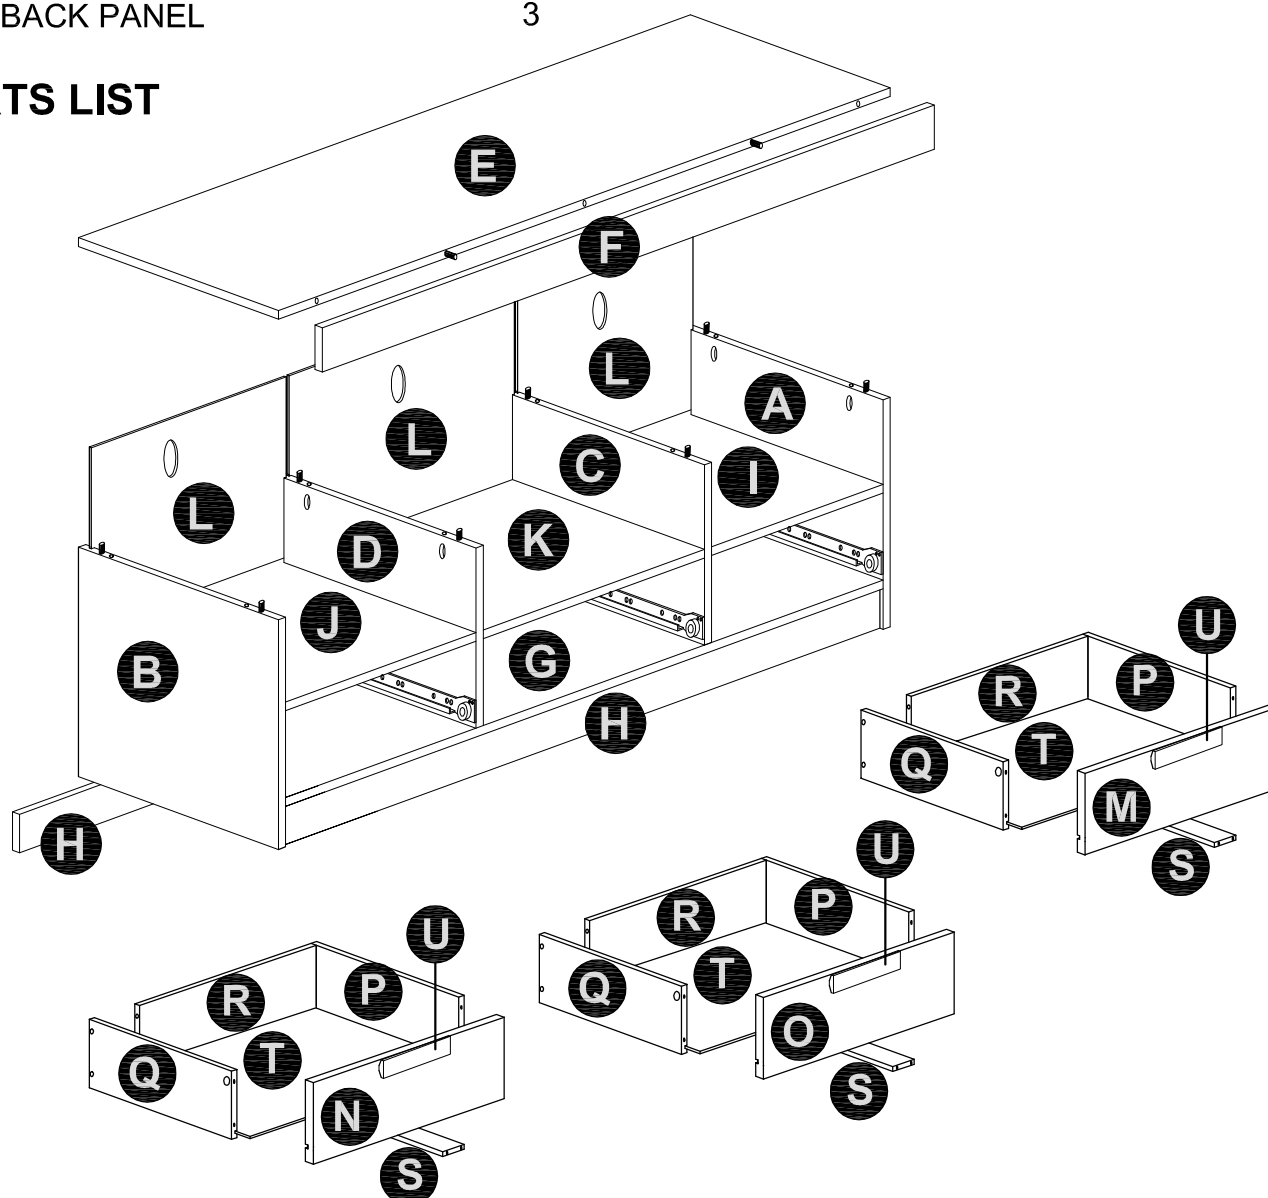
## PARTS LIST



## HARDWARE LIST

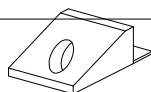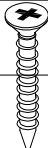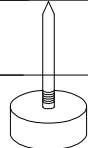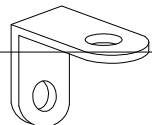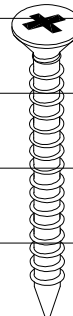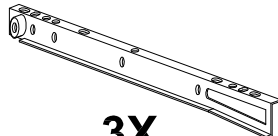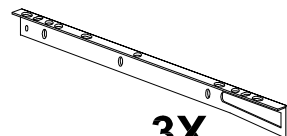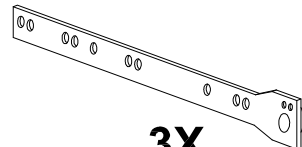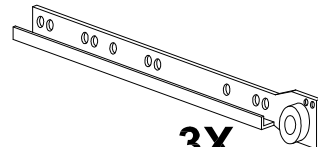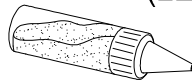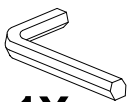					4cm
					3cm
					2cm
					1cm
					0cm
					
<b>32X</b> M3.5 x 12mm <b>1</b> FLAT HEAD SCREW	<b>24X</b> M3.5 x 25mm <b>2</b> FLAT HEAD SCREW	<b>29X</b> Dia.15mm <b>3</b> CAMLOCK	<b>35X</b> M6.5 <b>4</b> QUICKFIT	<b>46X</b> Dia.6 x 30mm <b>5</b> WOOD DOWEL	
					4cm
					3cm
					2cm
					1cm
					0cm
					
<b>6X</b> Dia.15mm <b>6</b> DRAWER CAMLOCK	<b>12X</b> <b>7</b> BACKPLY STOPPER	<b>12X</b> M3 x 20mm <b>8</b> FLAT HEAD SCREW	<b>8X</b> <b>9</b> LEG COVER	<b>4X</b> <b>10</b> L-BRACKET	<b>4X</b> M8 x 38mm <b>11</b> FLAT HEAD SCREW
					
<b>3X</b> <b>12</b> DRAWER RUNNER (RIGHT)	<b>3X</b> <b>13</b> DRAWER RUNNER (LEFT)	<b>3X</b> <b>14</b> DRAWER RUNNER (LEFT)	<b>3X</b> <b>15</b> DRAWER RUNNER (RIGHT)		
					
<b>2X</b> <b>16</b> GLUE 10CC		<b>1X</b> M4 <b>17</b> ALLEN KEY			

## **Top Tips before you start!**


1. Please check that all parts are present before you start the assembly of your furniture, as once assembled, the furniture is exempt from our home approval policy.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people ( as indicated on page 1 ) to assemble your product safely
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, particularly items of high gloss finish, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product.
7. Always place the product on a flat, steady and stable surface.
8. Do not sit or stand on the product.
9. This product is intended for indoor, household use only as it is non industrial product.
10. This product is constructed from re-inforced hollow board. Excessive pressure will cause irreparable damage. Please do not kneel on any part of this product during assembly.

## **Care and Maintenance of your Furniture**



- Please periodically check all fittings are re-tighten as necessary.
- To clean your item, please use a damp cloth and wipe clean.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- Please do not place hot items (e.g. hot drinks ) directly on to the wood surface.
- Please do not drag and pull your furniture.

# SPECIAL TIPS FOR FITTING CAM-LOCKS AND QUICKFIT

## CAM-LOCK


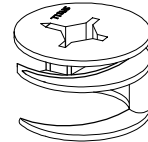


WHEN FITTING CAMLOCK  
ENSURE STARTING POSITION IS CORRECT  
BEFORE YOU INSERT CONNECTING QUICKFIT  
TURN CLOCKWISE UNTIL SECURE

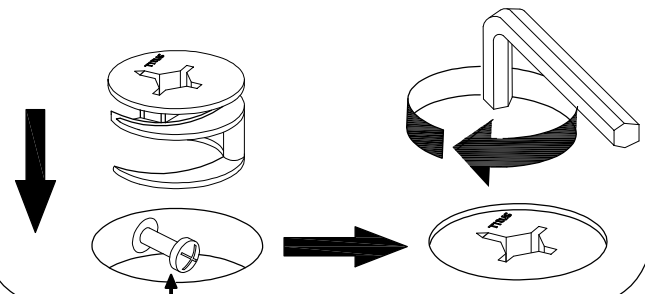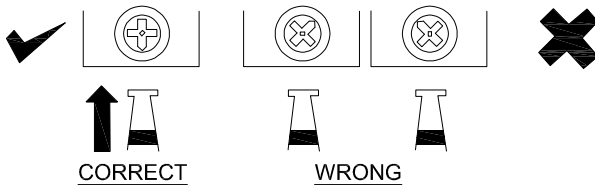

Quickfit head needs to be in centre




## DRAWER CAM-LOCK

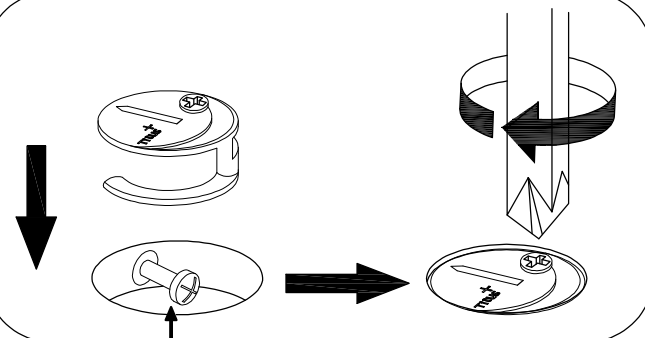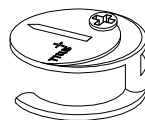


Quickfit head needs to be in centre

## QUICKFIT


Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

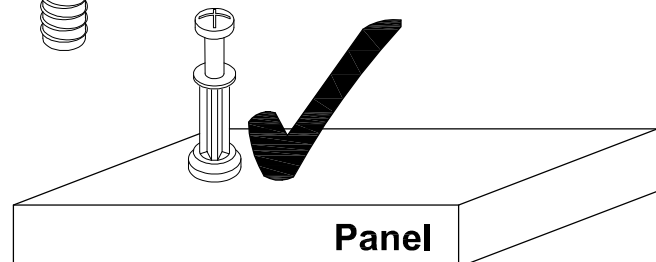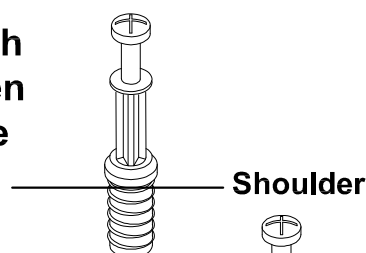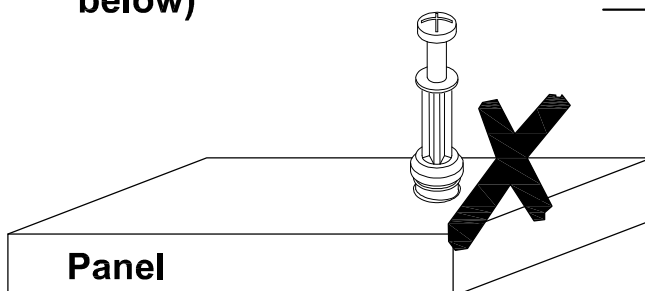


## STEP 1

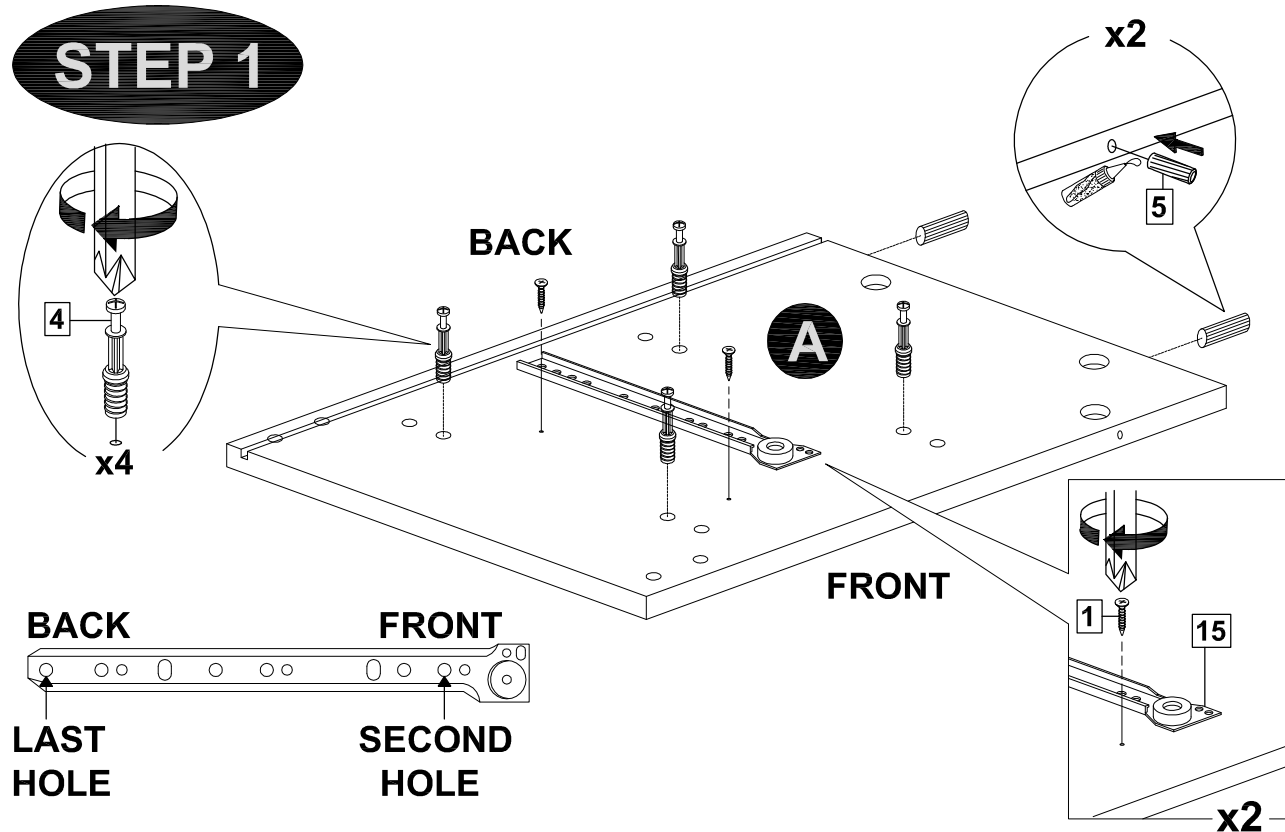


## STEP 2

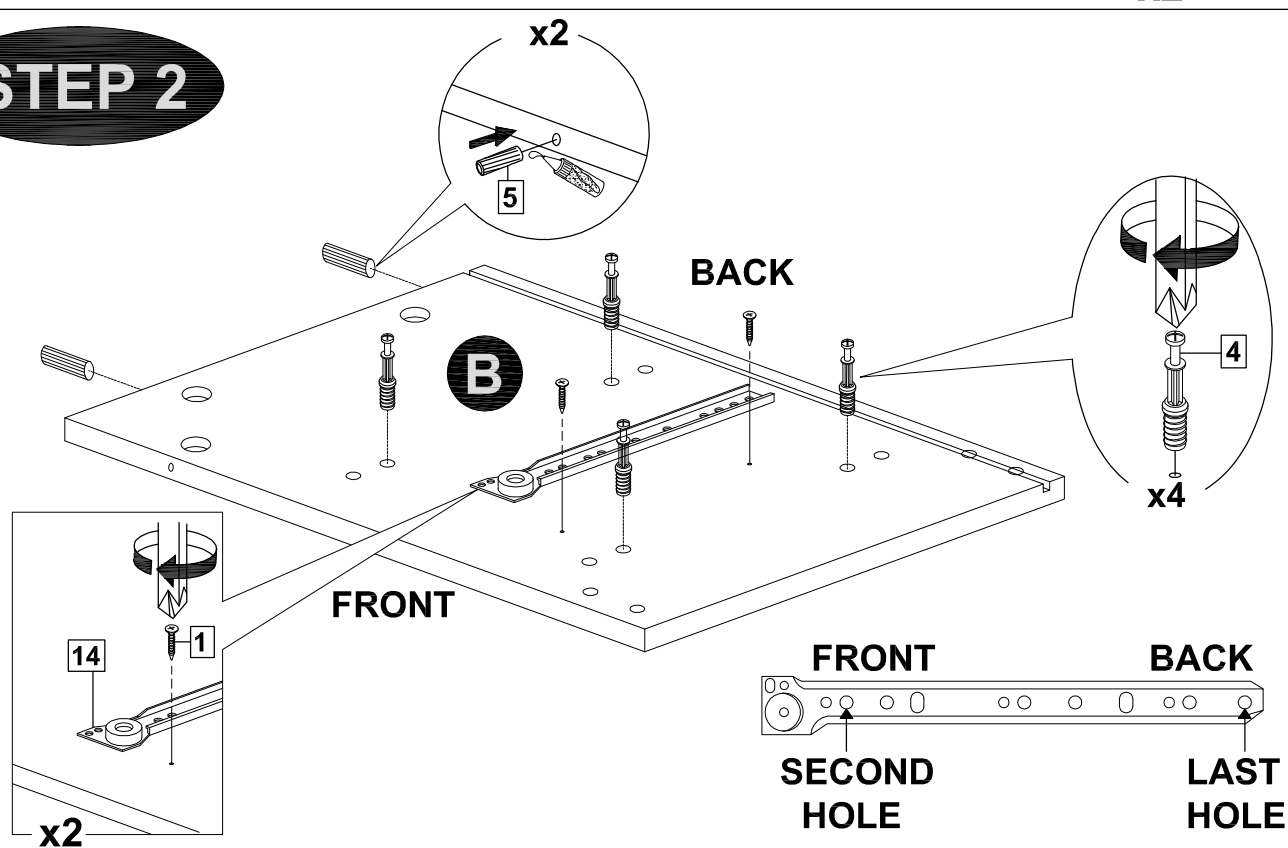

# STEP 3

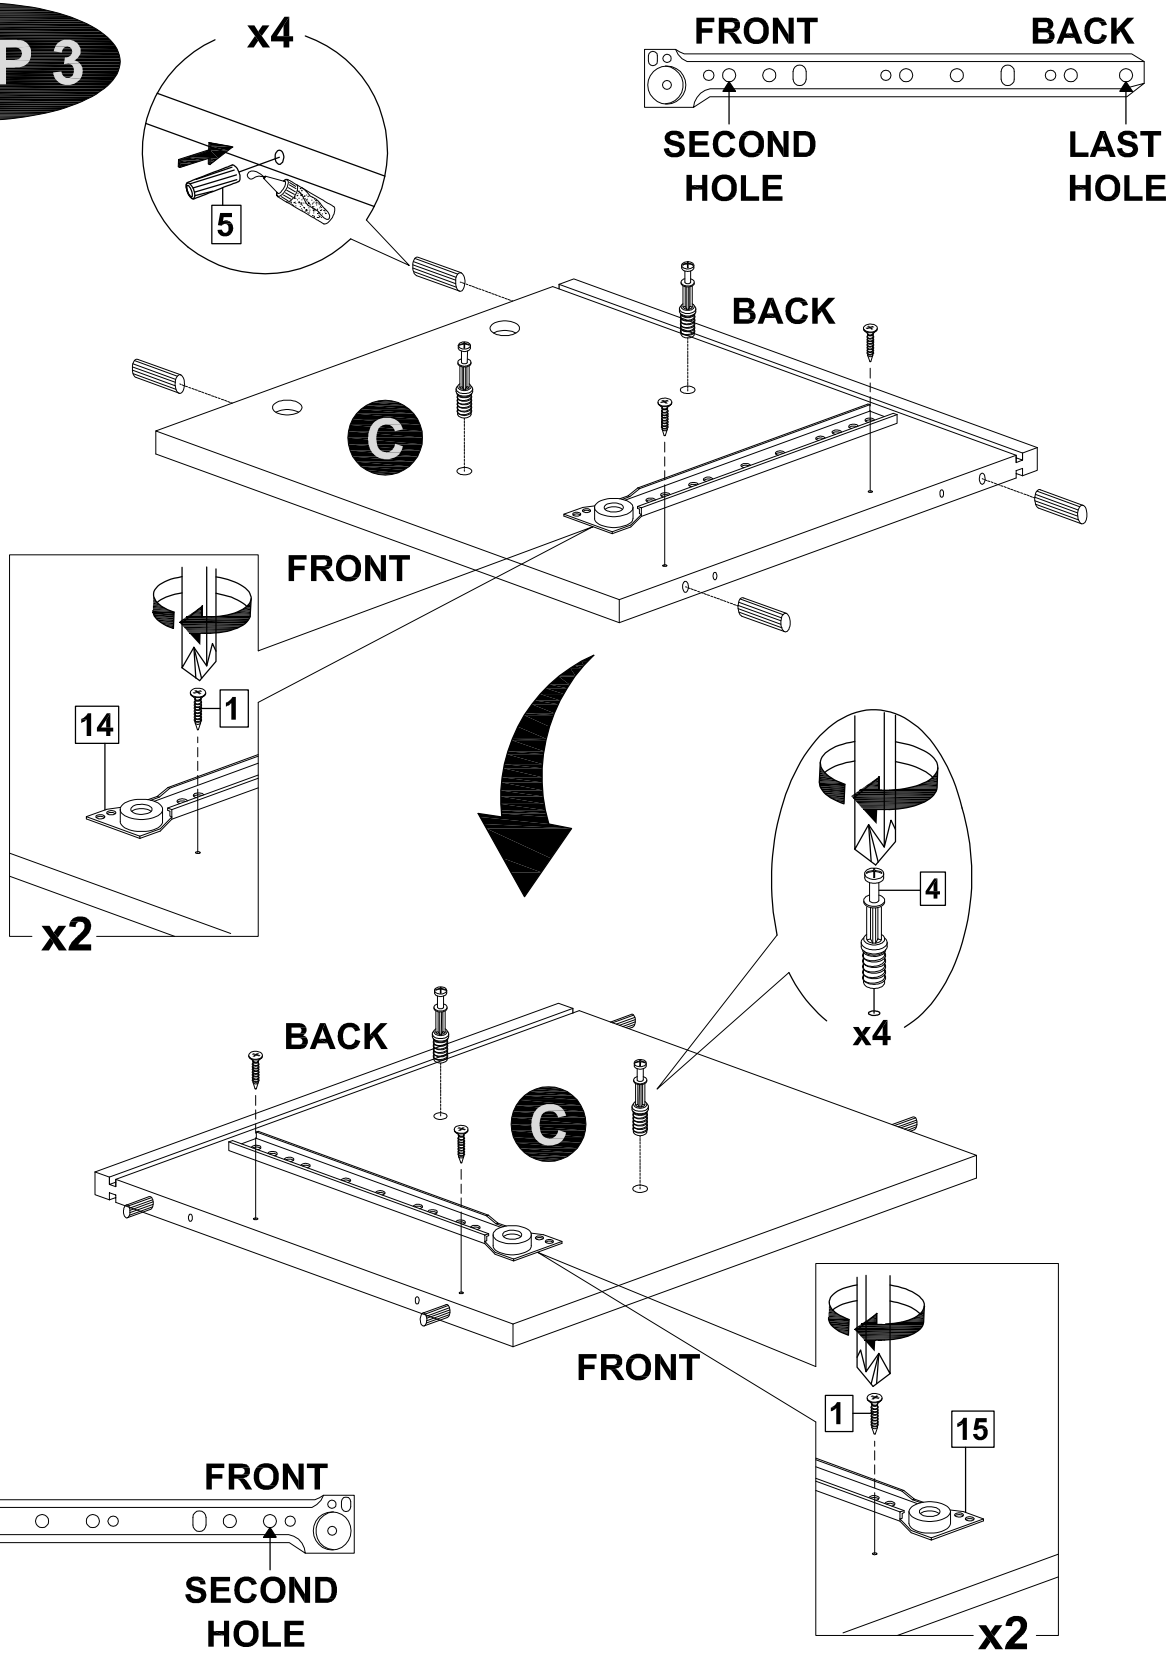


# STEP 4

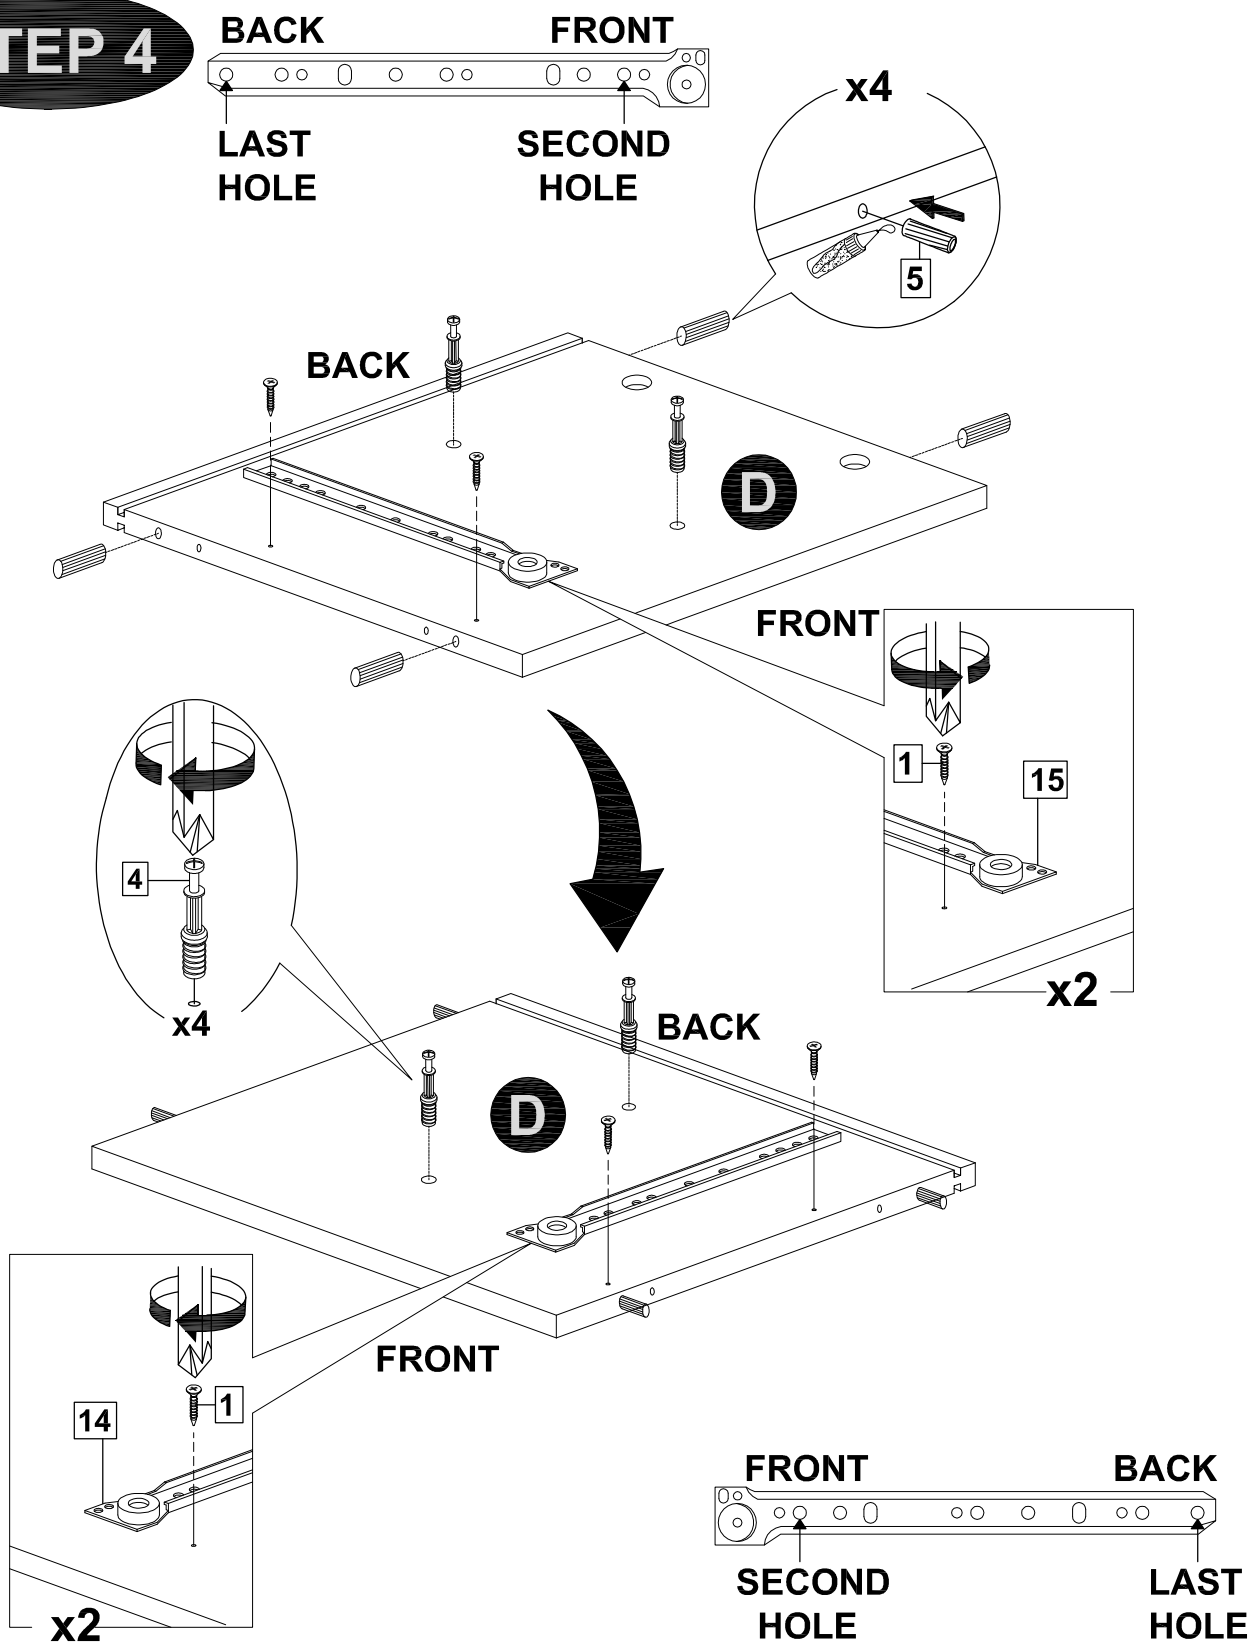





## STEP 5

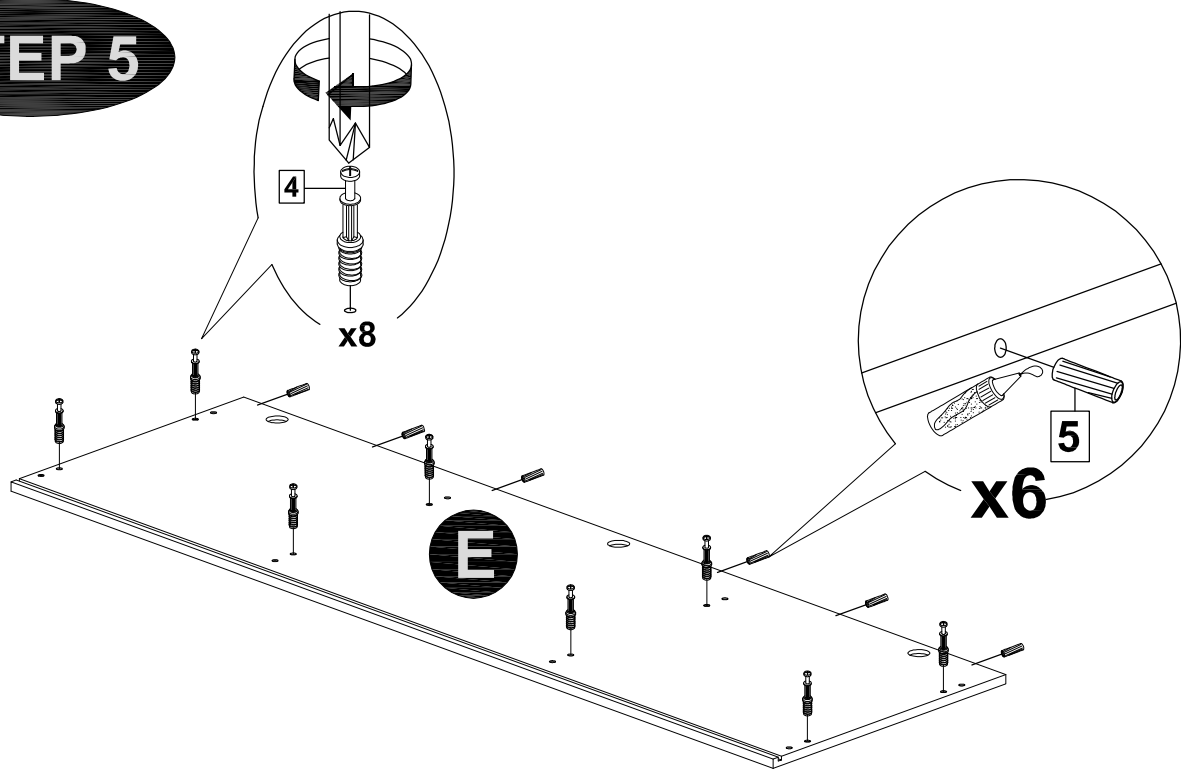


## STEP 6

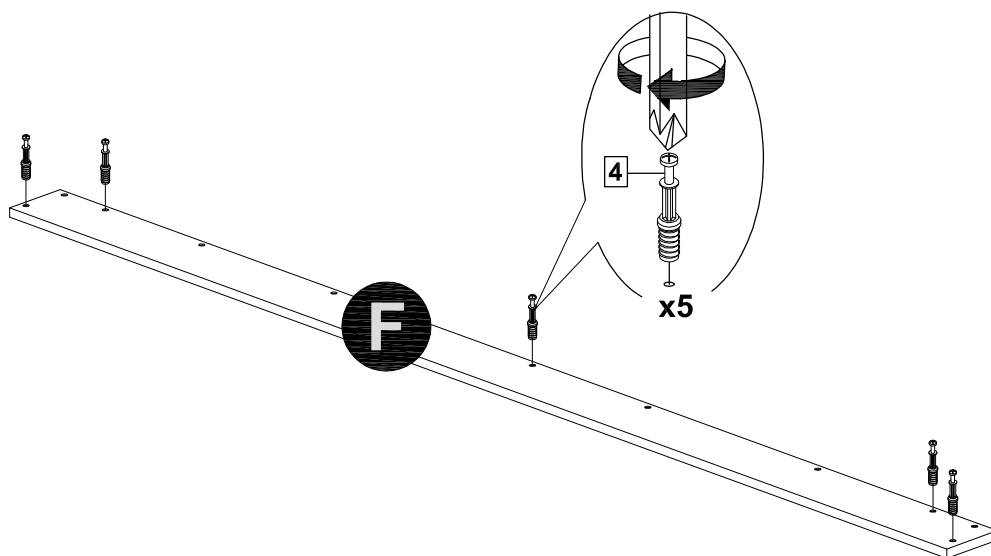


## STEP 7

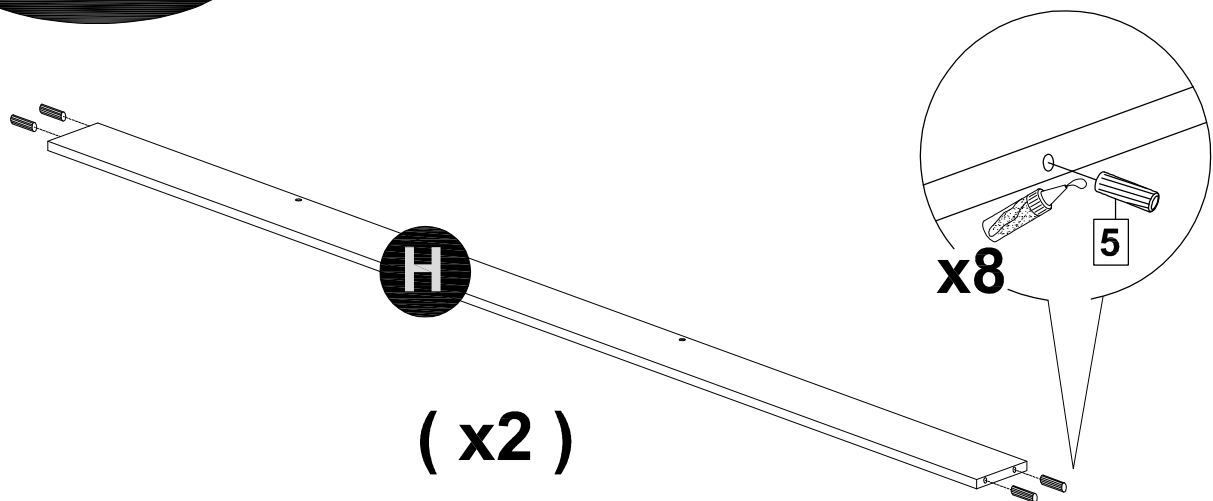


## STEP 8

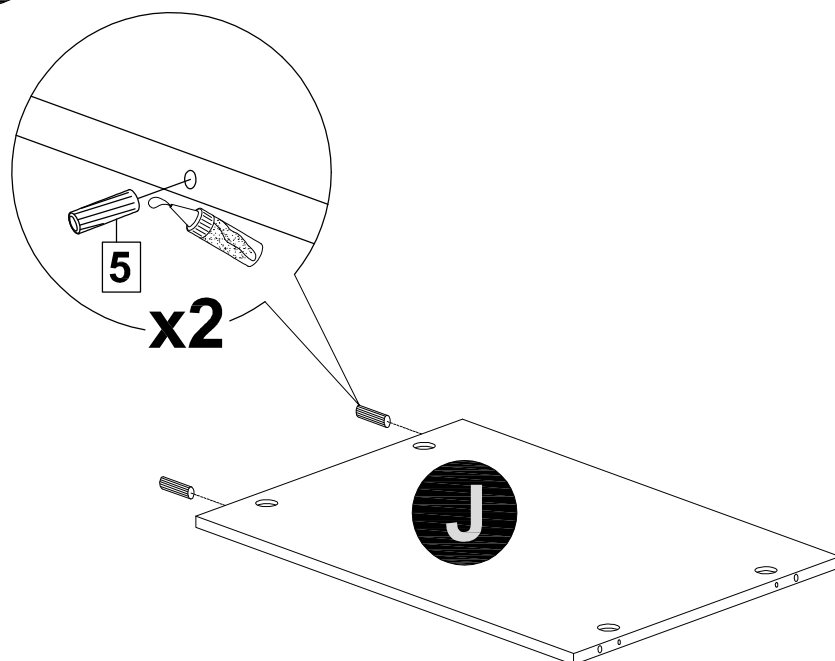


## STEP 9

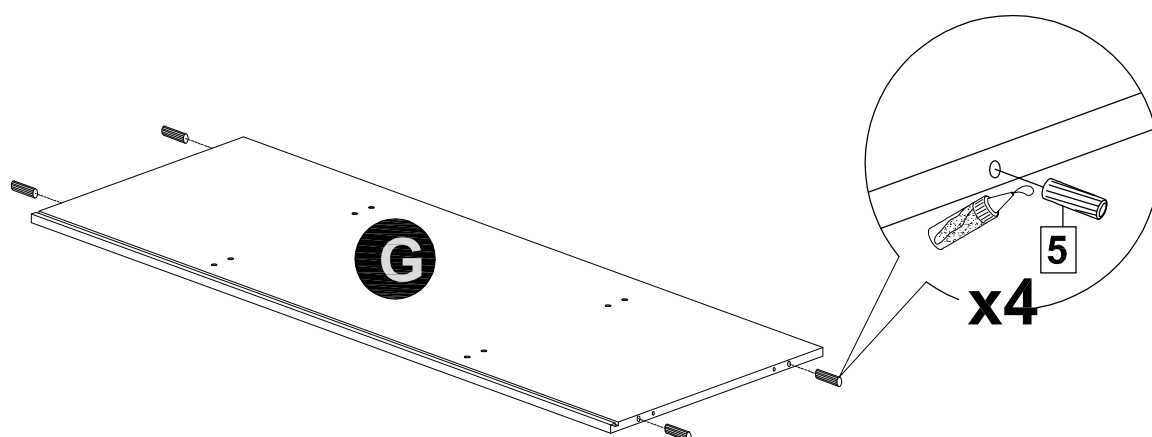


## STEP 10

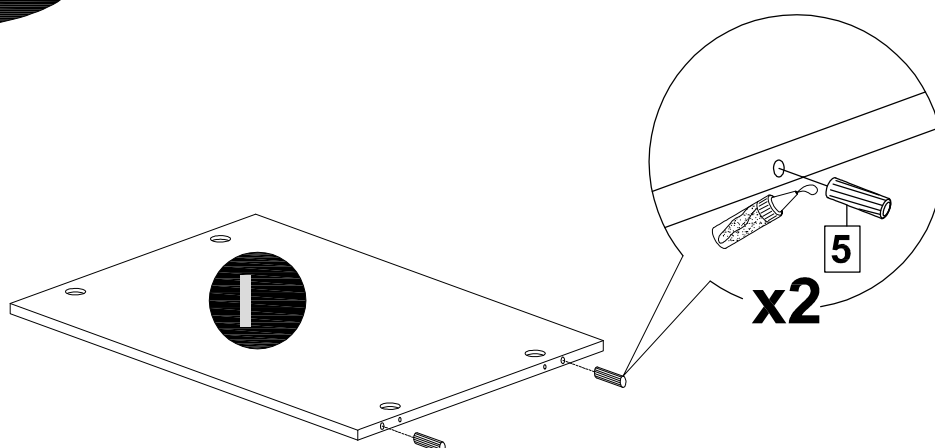


## STEP 11

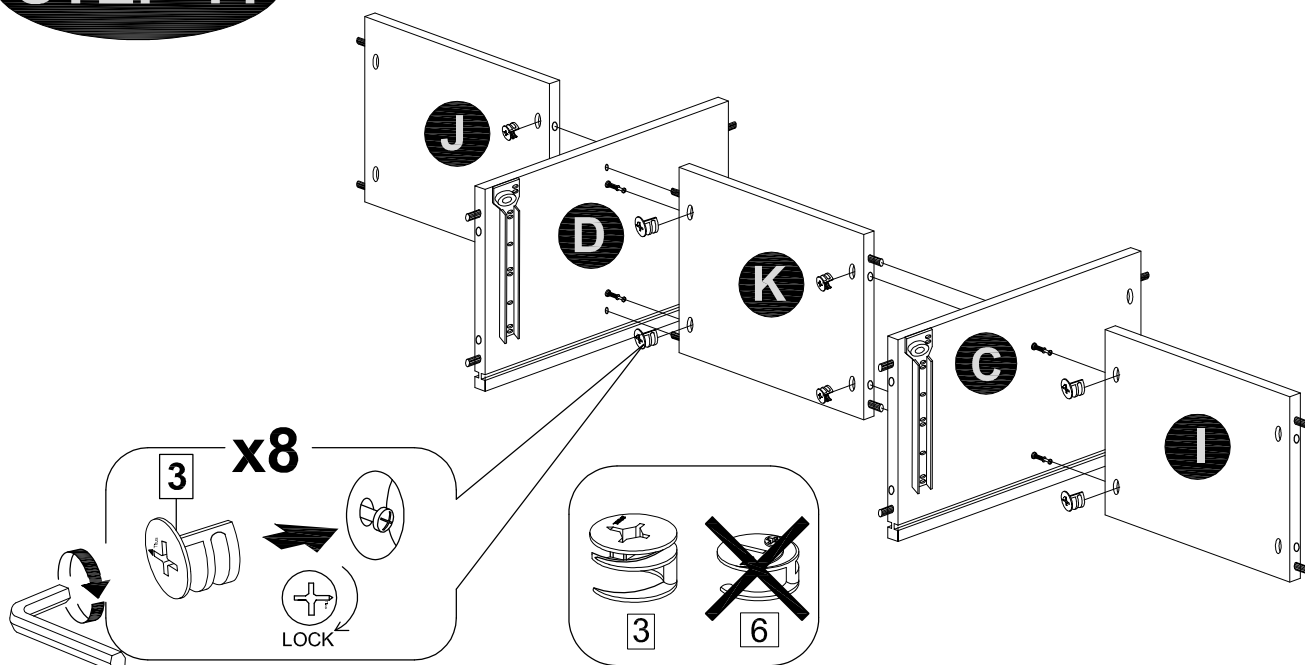


## STEP 12

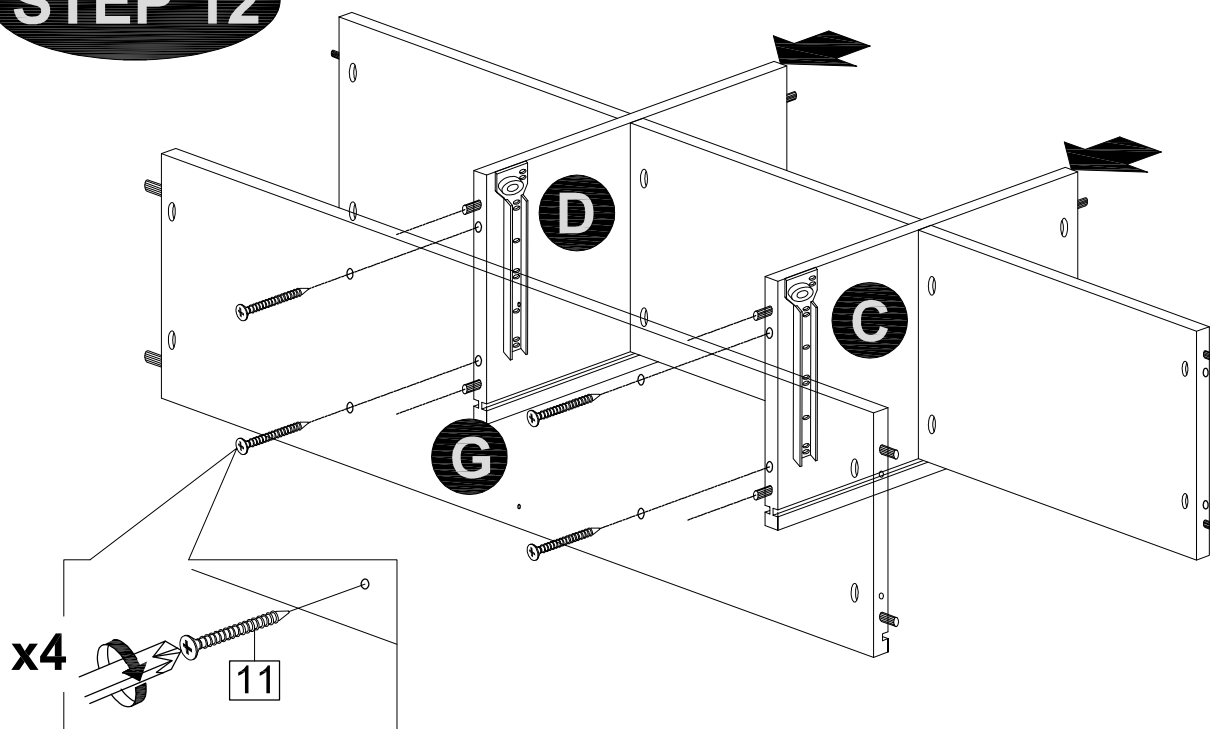


## STEP 13

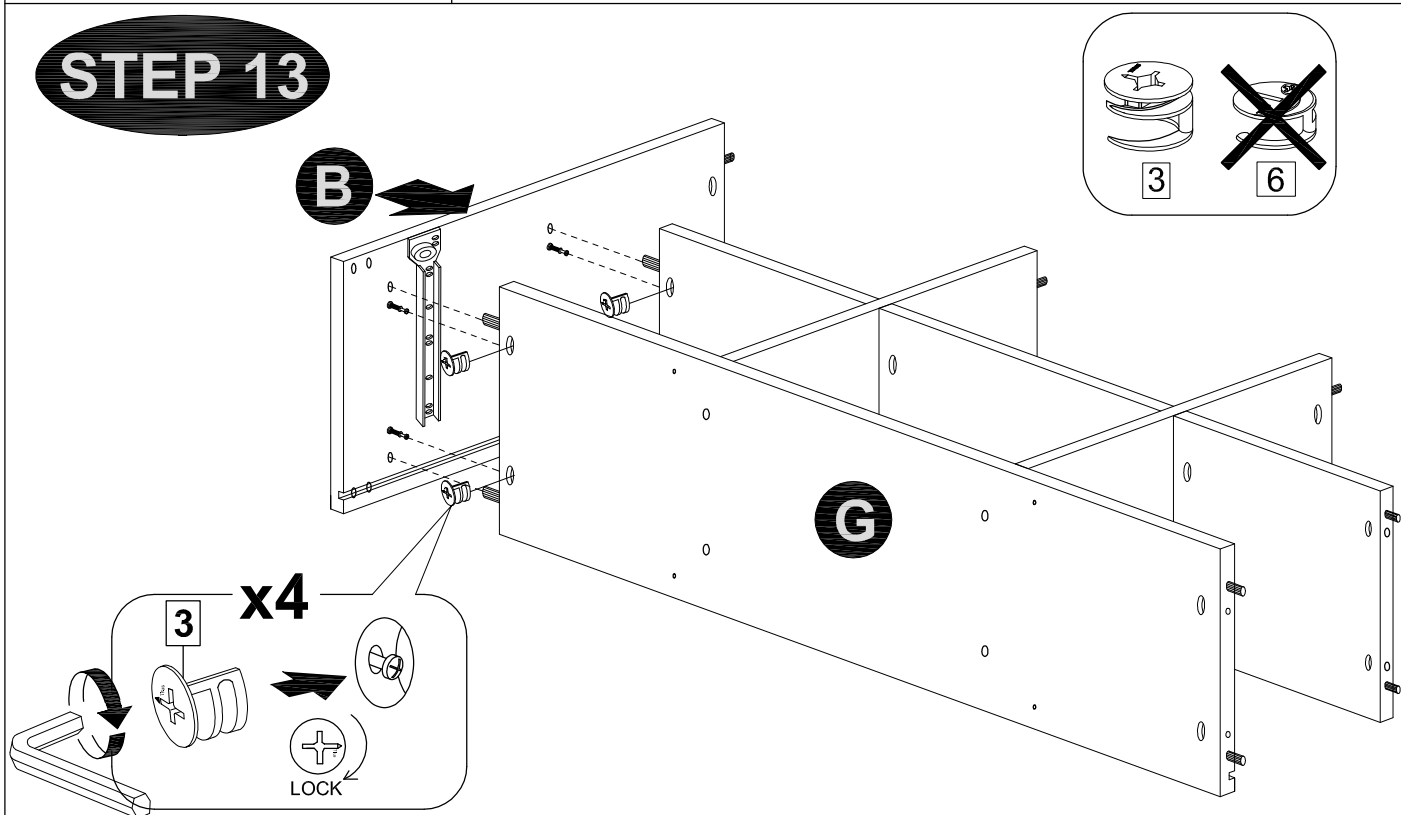


## STEP 14

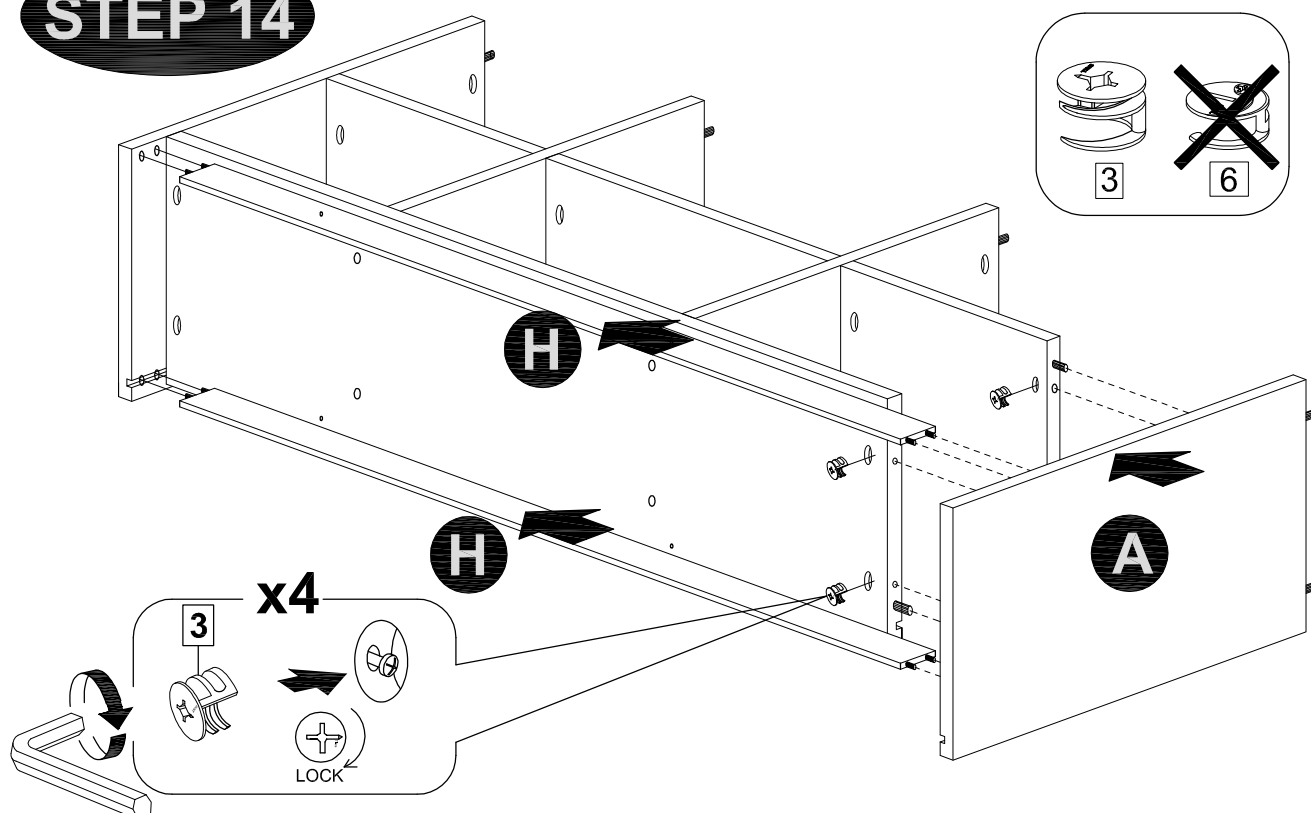

## STEP 15

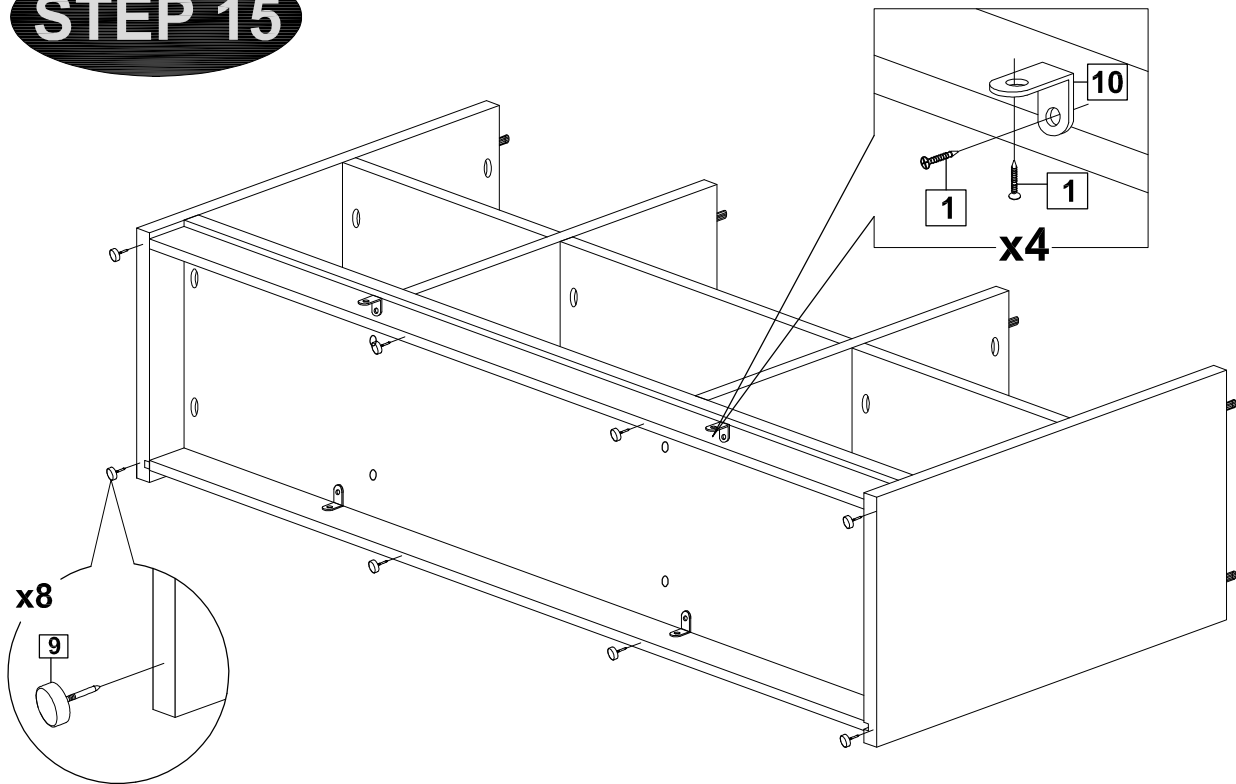


## STEP 16

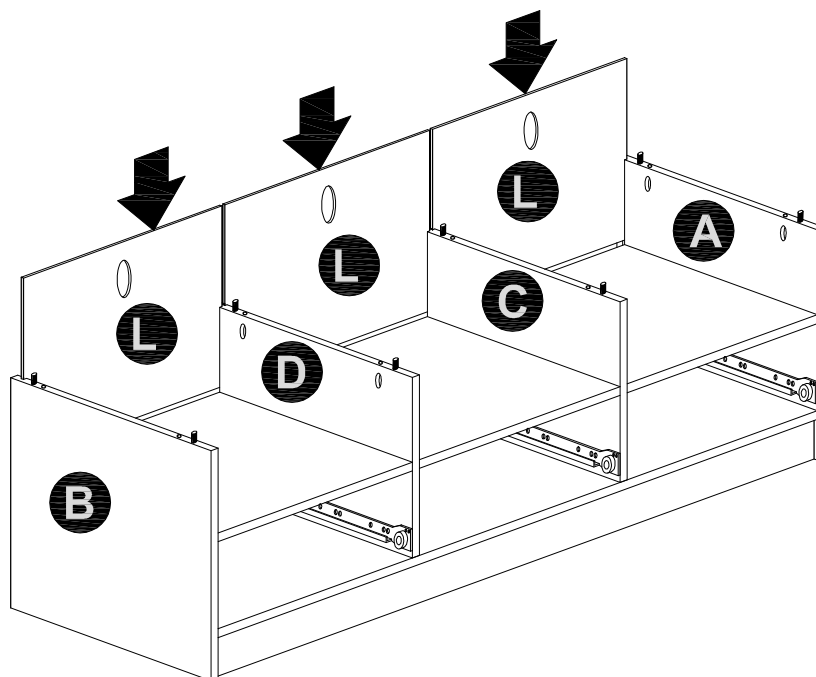




## STEP 19

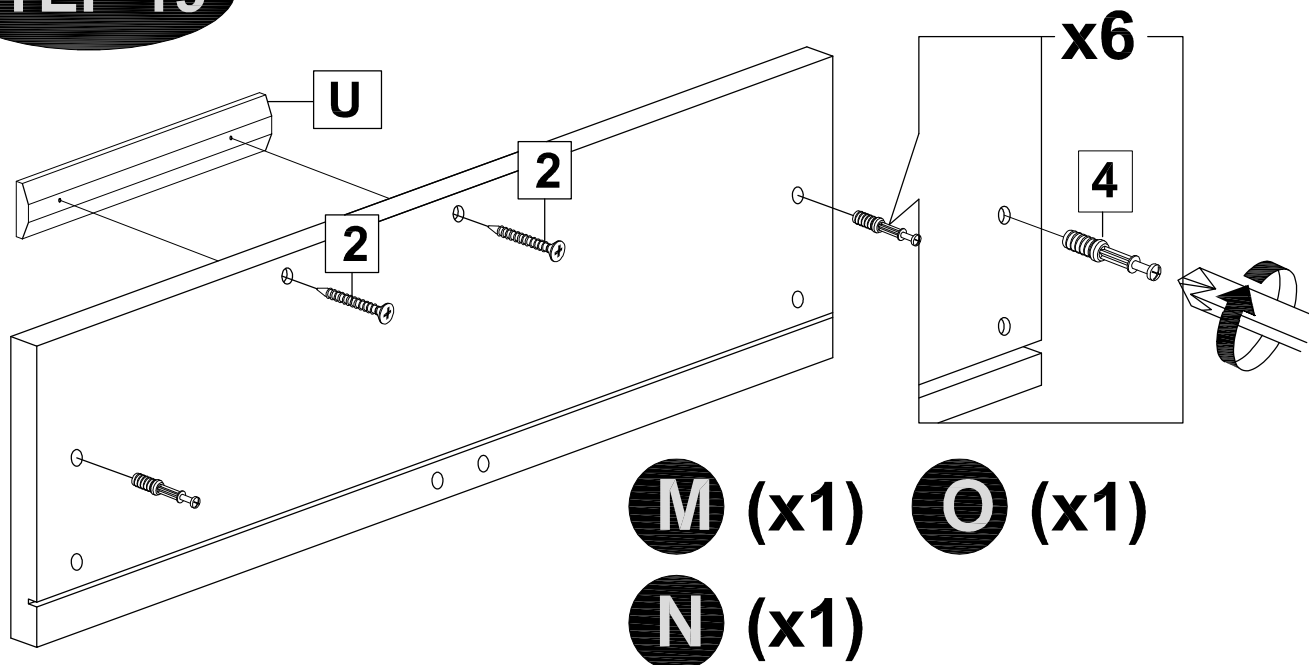


## STEP 20

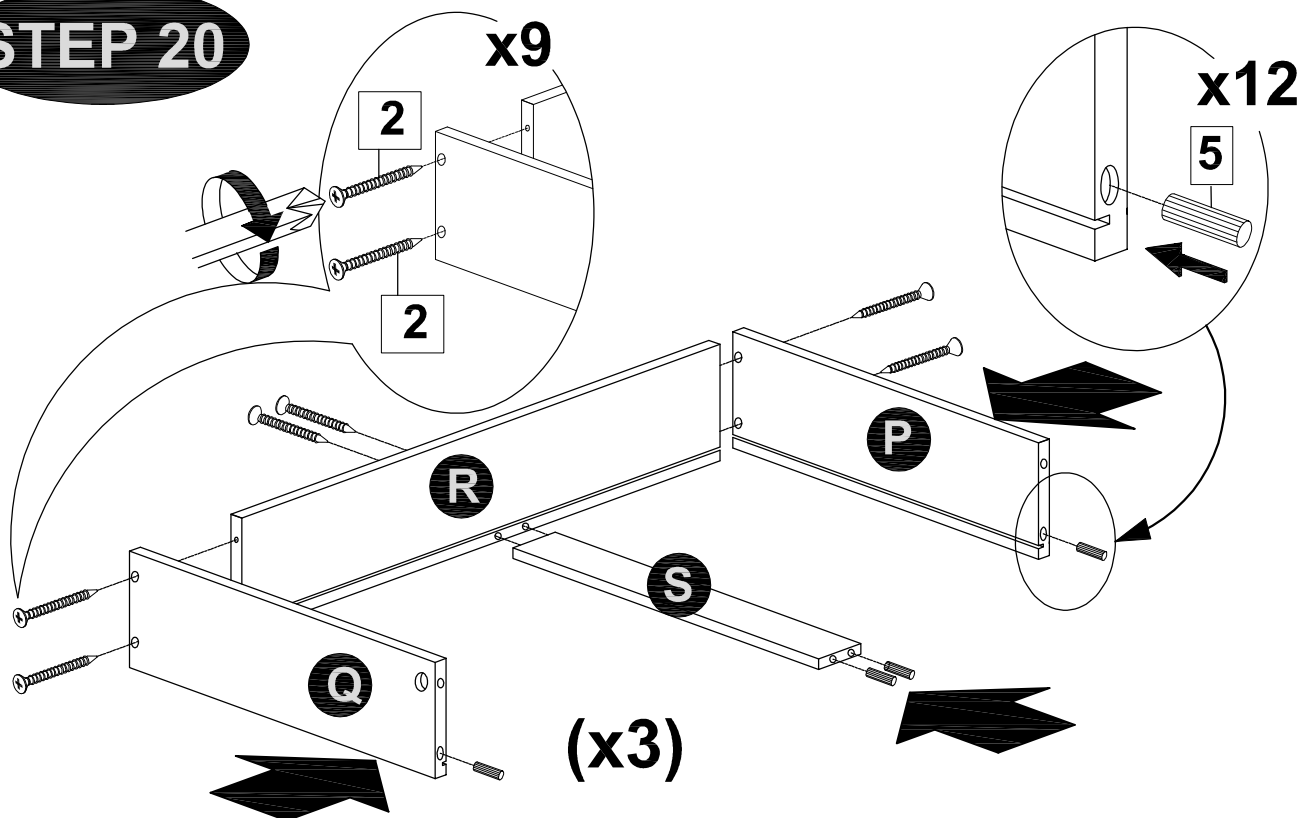





## STEP 21

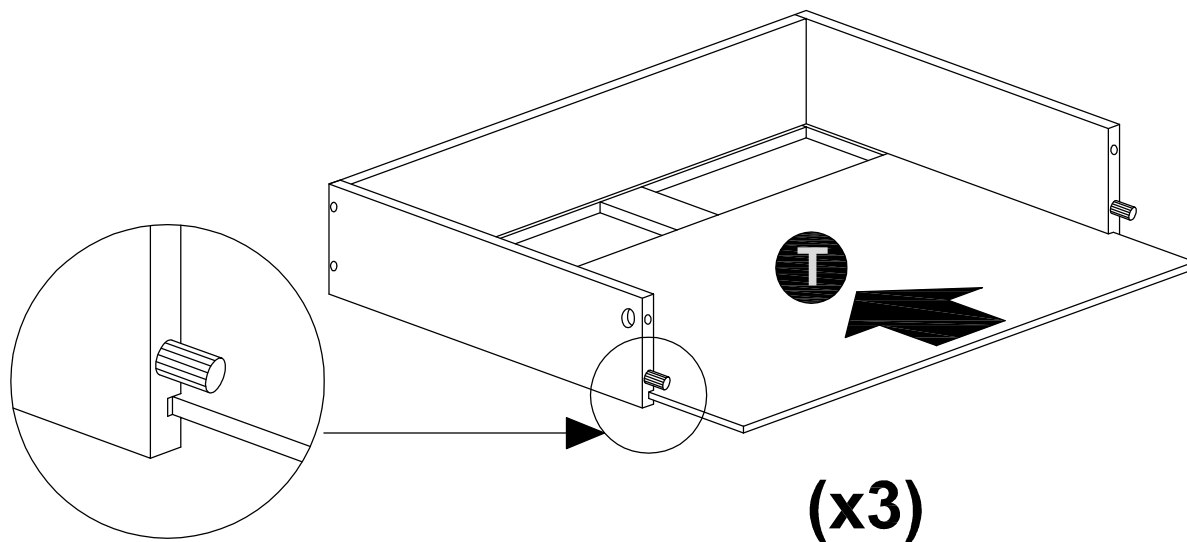


## STEP 22

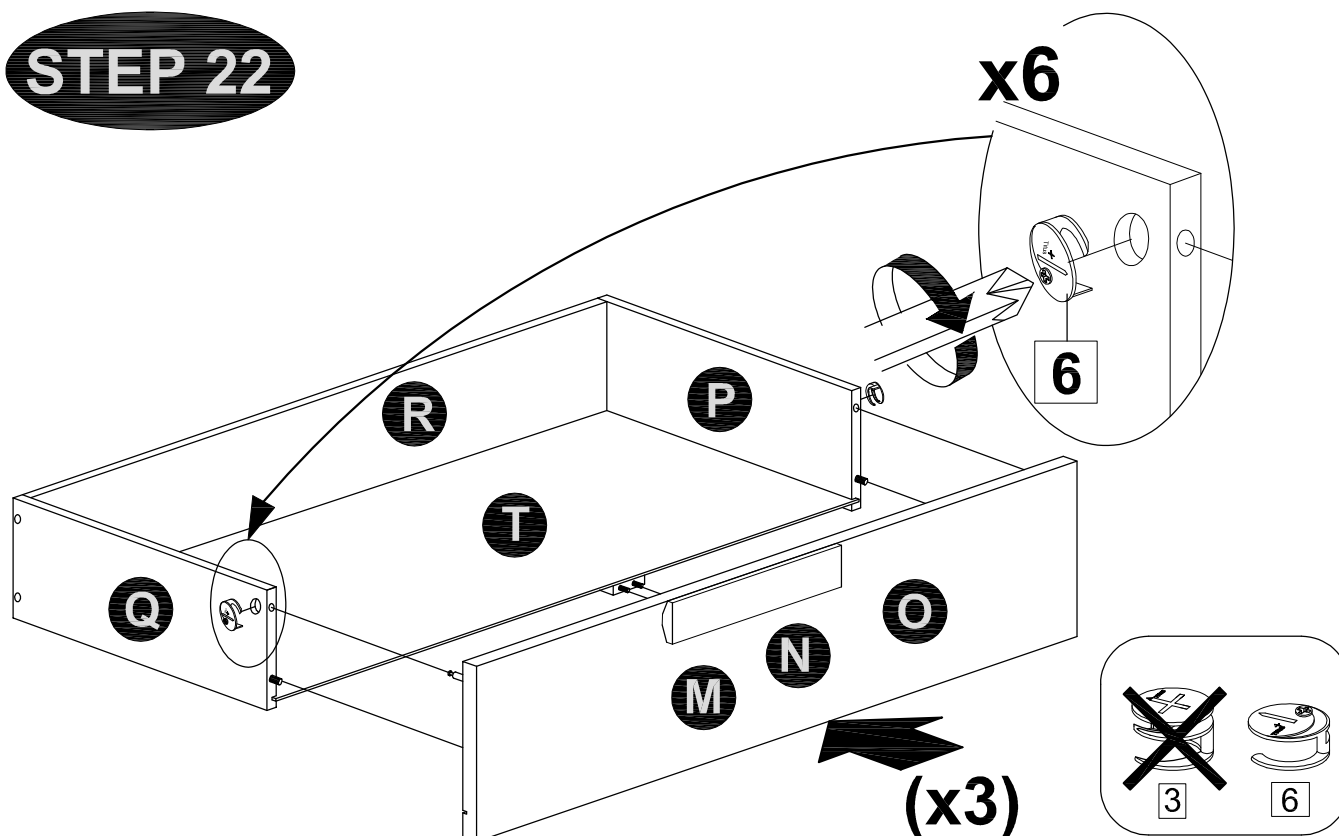


## STEP 23

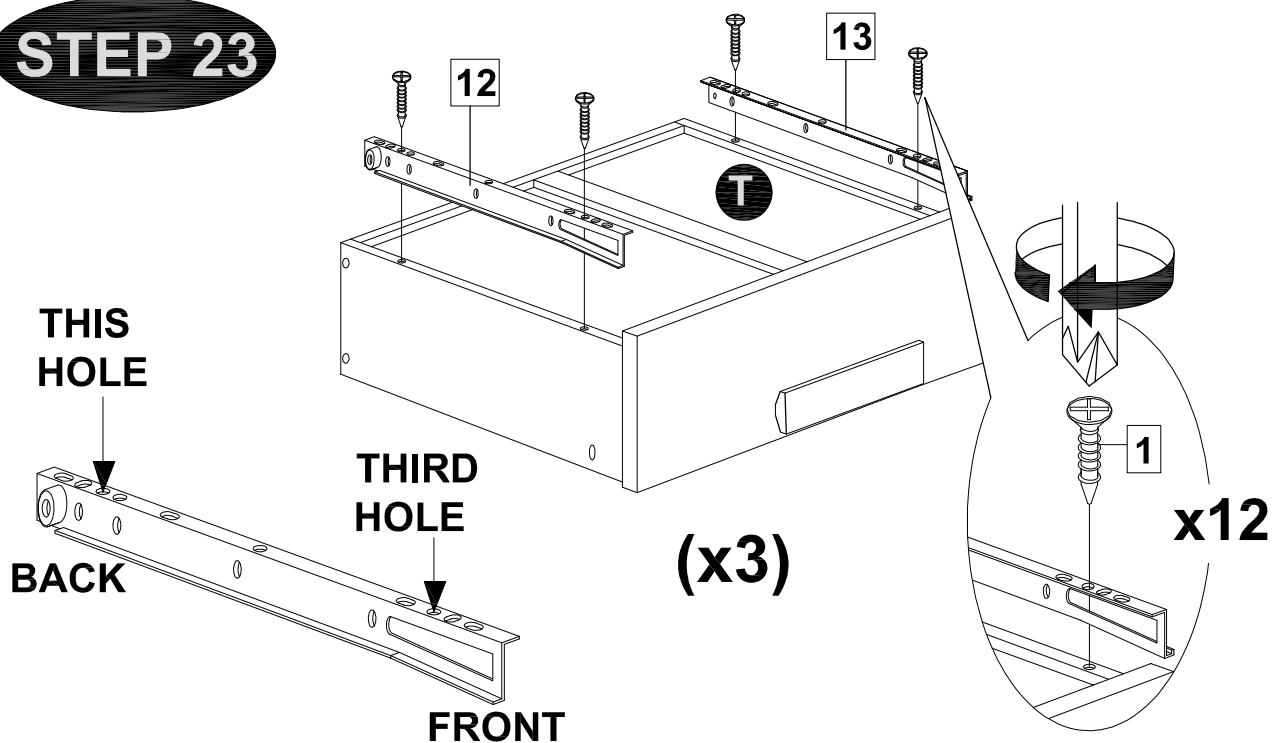

## STEP 24

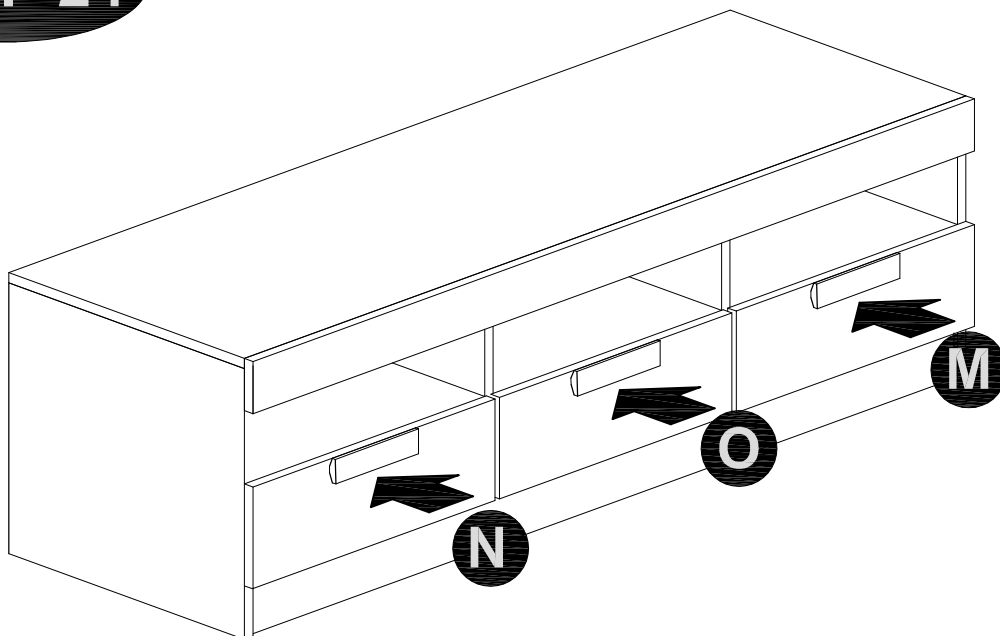

## STEP 25

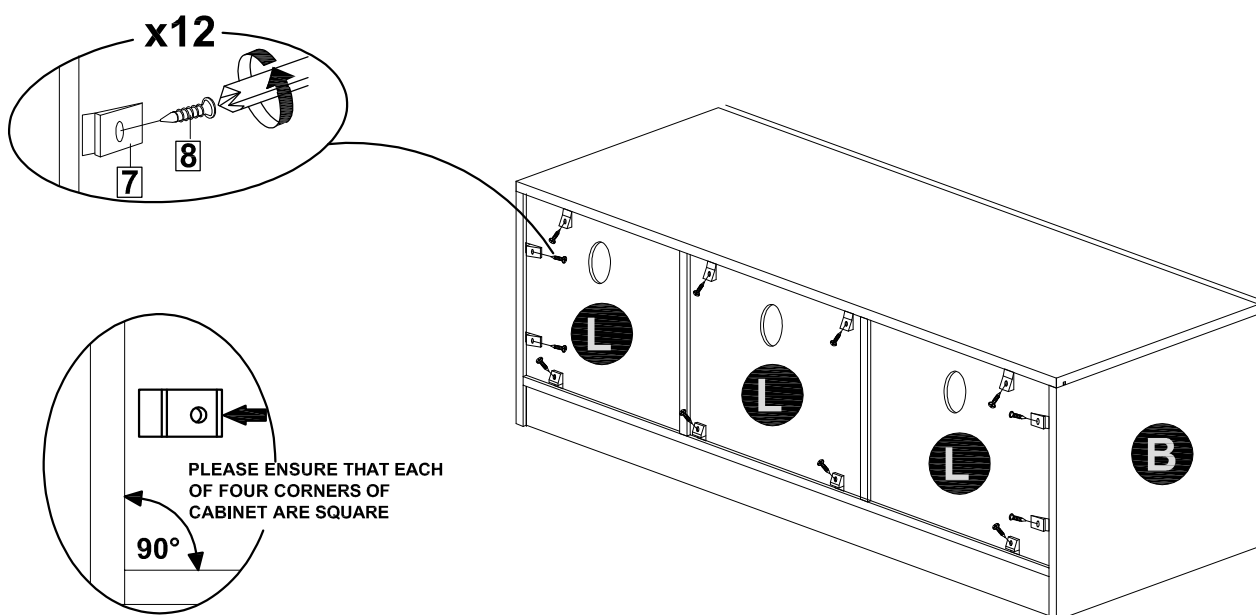

## STEP 26

