

Assembly instructions

Queen over Queen



SAFETY WARNINGS AND GENERAL NOTES:

- 1. Follow the information on the warnings on the bunk bed endstructure and on the carton. Do not remove the warning label from the bed.
- 2. Always use the recommended size mattress on mattress support, or both, to help prevent the likelihood of entrapment or falls.
- 3. Do not allow children under 6 years of age to use the upper bunk.
- 4. Periodically check and ensure the guardrail, ladder and other components are in their proper position, free from damage, and all connectors are tight.
- 5. Do not allow horseplay on or under beds.
- 6. Always prohibit jumping on the bed.
- 7. Prohibit more than one person on upper bunk.
- 8. Always use the ladder for entering and leaving the upper bunk.
- 9. Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
- 10. Use of a night-tight may provide added safety precaution for a child using the upper bunk.
- 11. Always use guardrails on both long sides of the upper bunk.
- 12. If the bunk bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall. The use of water or sleep flotation mattresses is prohibited.
- 13. **STRANGULATION HAZARD**-Never attach or hang items to any part of the bunk bed that are not designed for use with the bed, for example, but not limited to, hooks, belts and jump ropes.
- 14. Keep these instructions for future reference.
- 15. we recommend assembling your bunk bed on the shipping carton to protect your floor or carpet.
- 16. Be certain all staples are out of the box before beginning assembly on the shipping carton.
- 17. USE ONLY MATTRESSES WHICH ARE AS THE TABLE BELOW ON UPPER AND ON LOWER BUNKS.

Upper bed

Bed type	Length	Width	Thickness
Queen Standard	79" - 80"	59 ½"	6" max

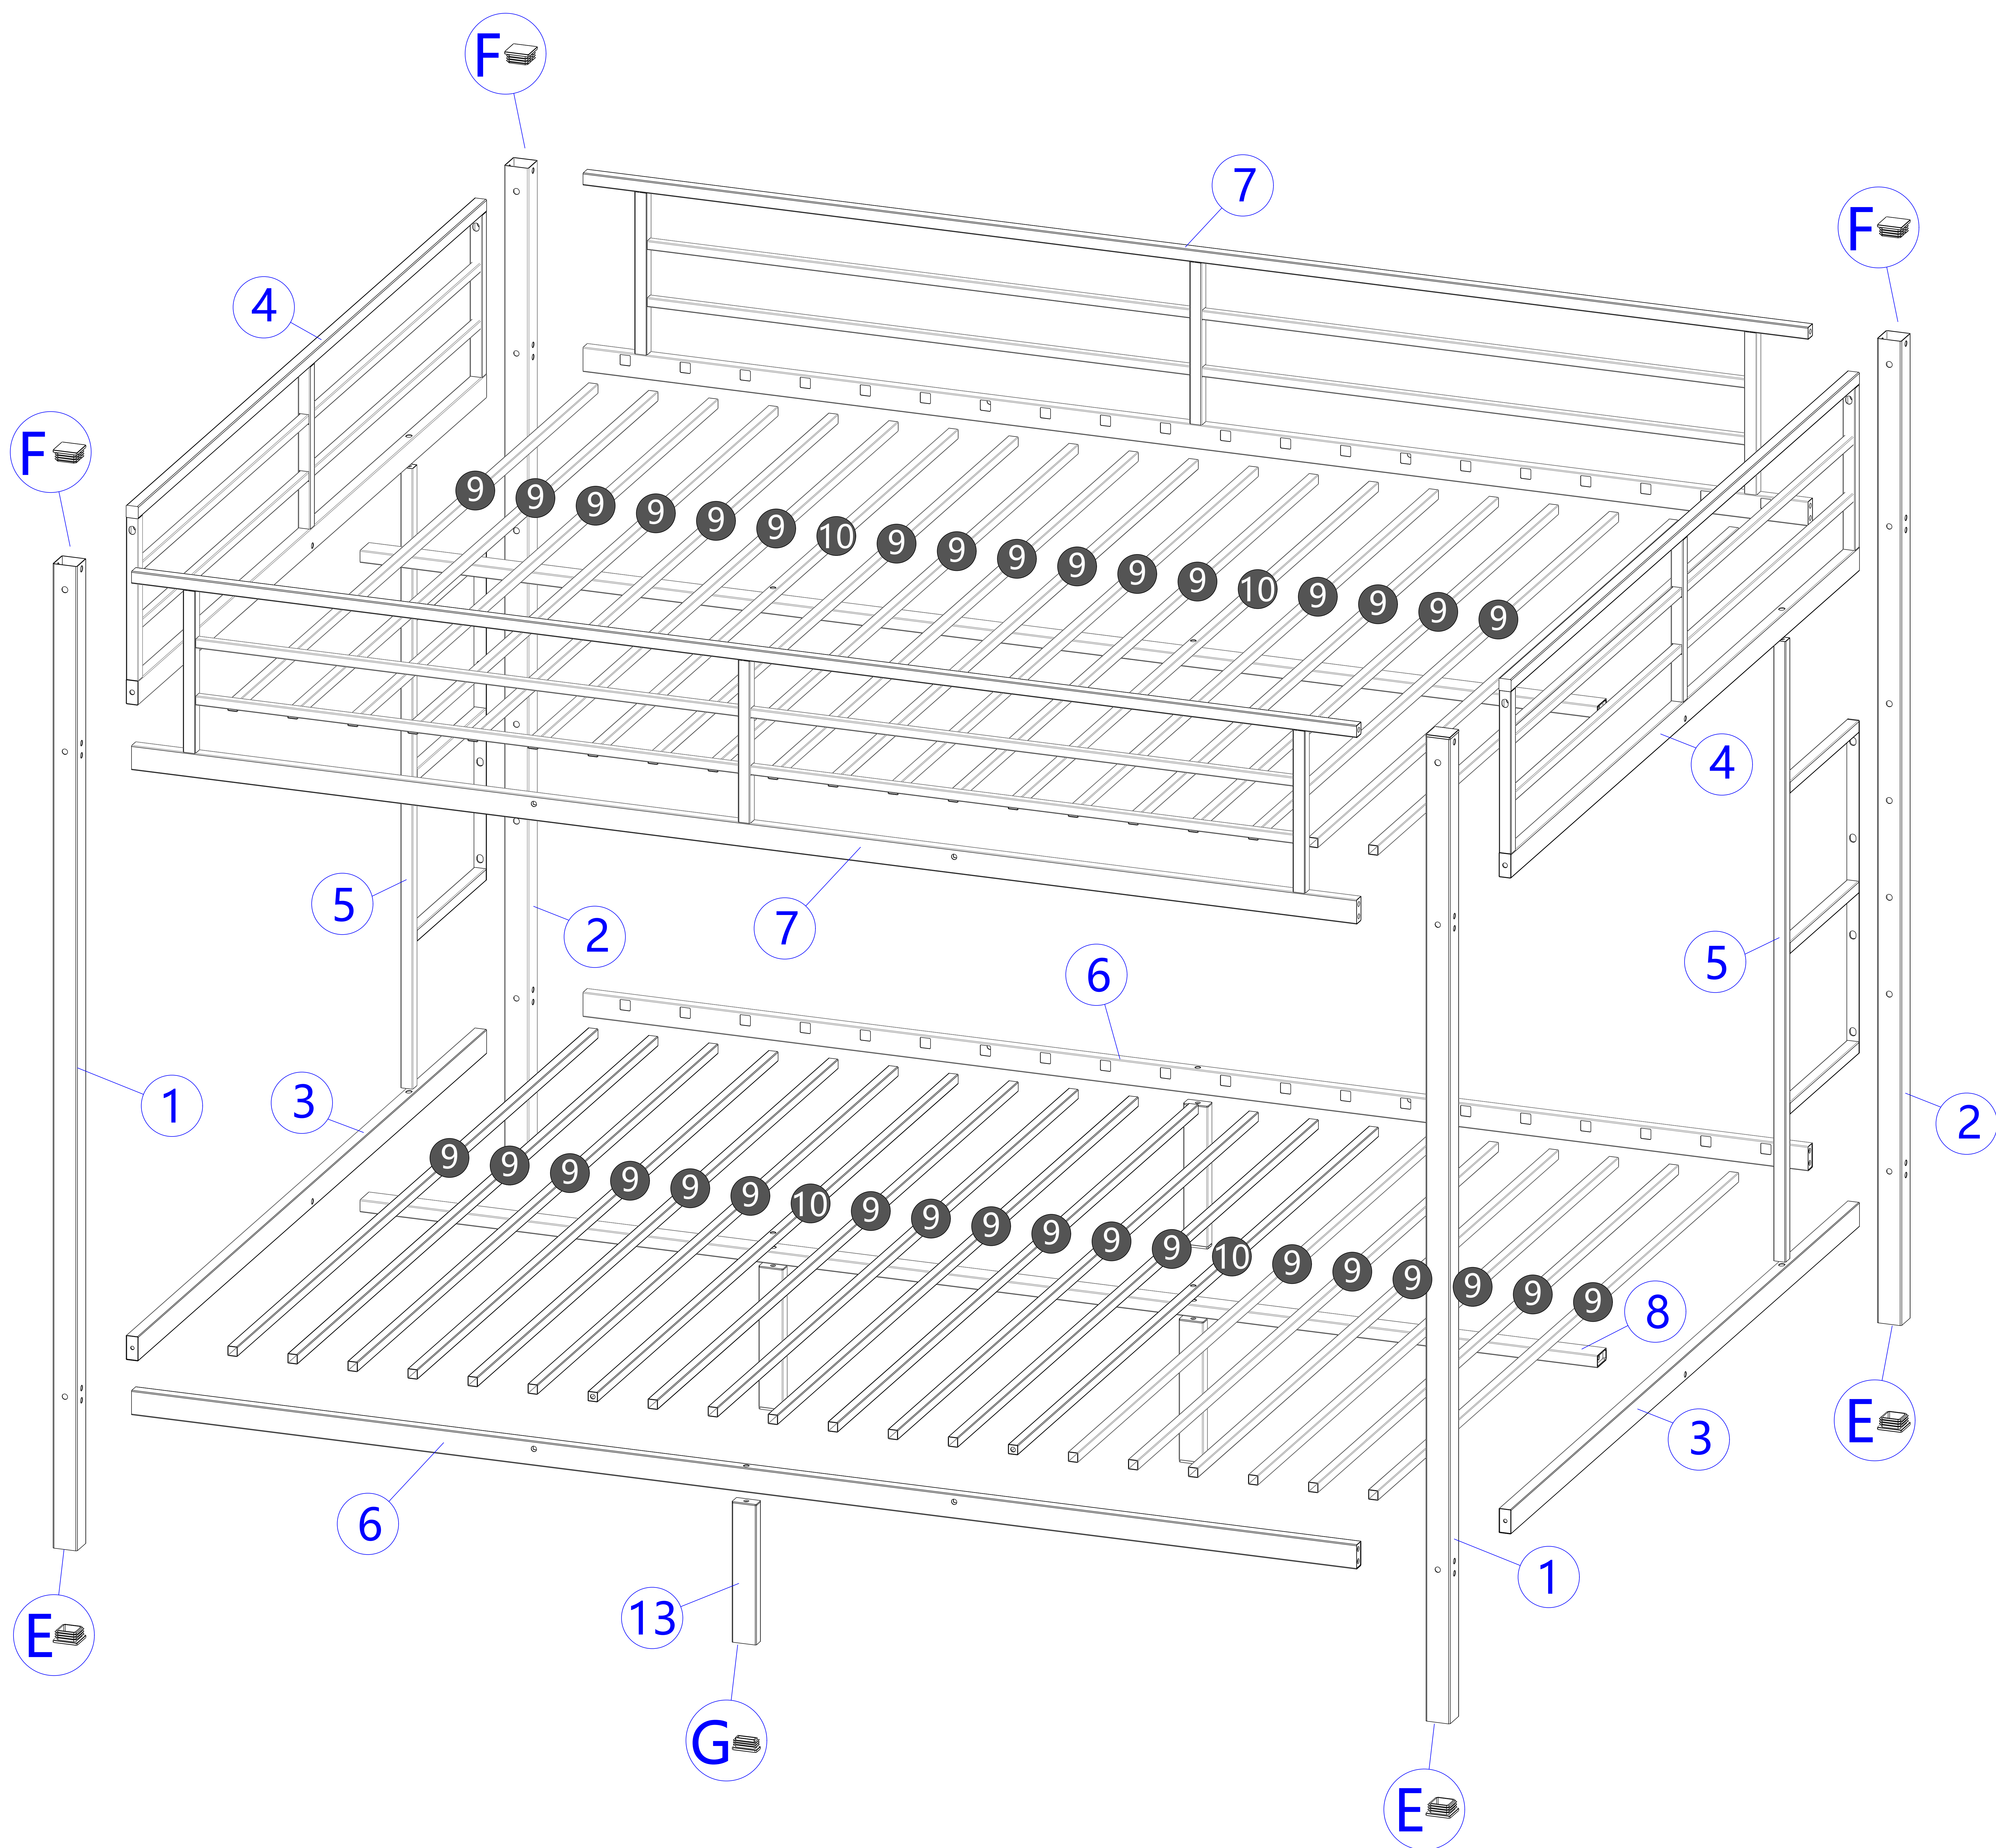
Bottom bed

Bed type	Length	Width	Thickness
Queen Standard	79" - 80"	59 ½"	8"

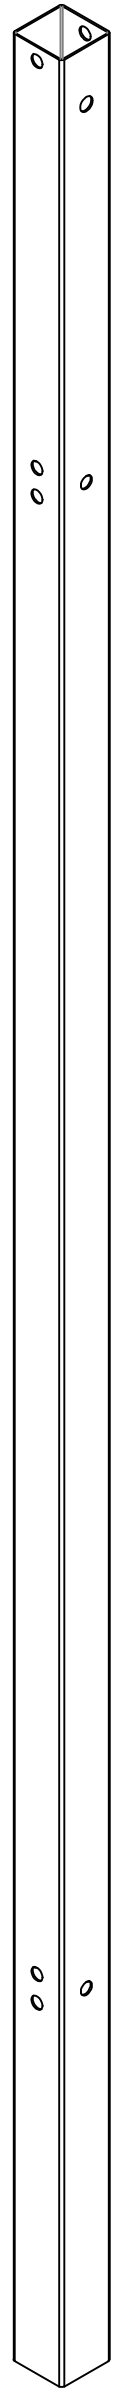

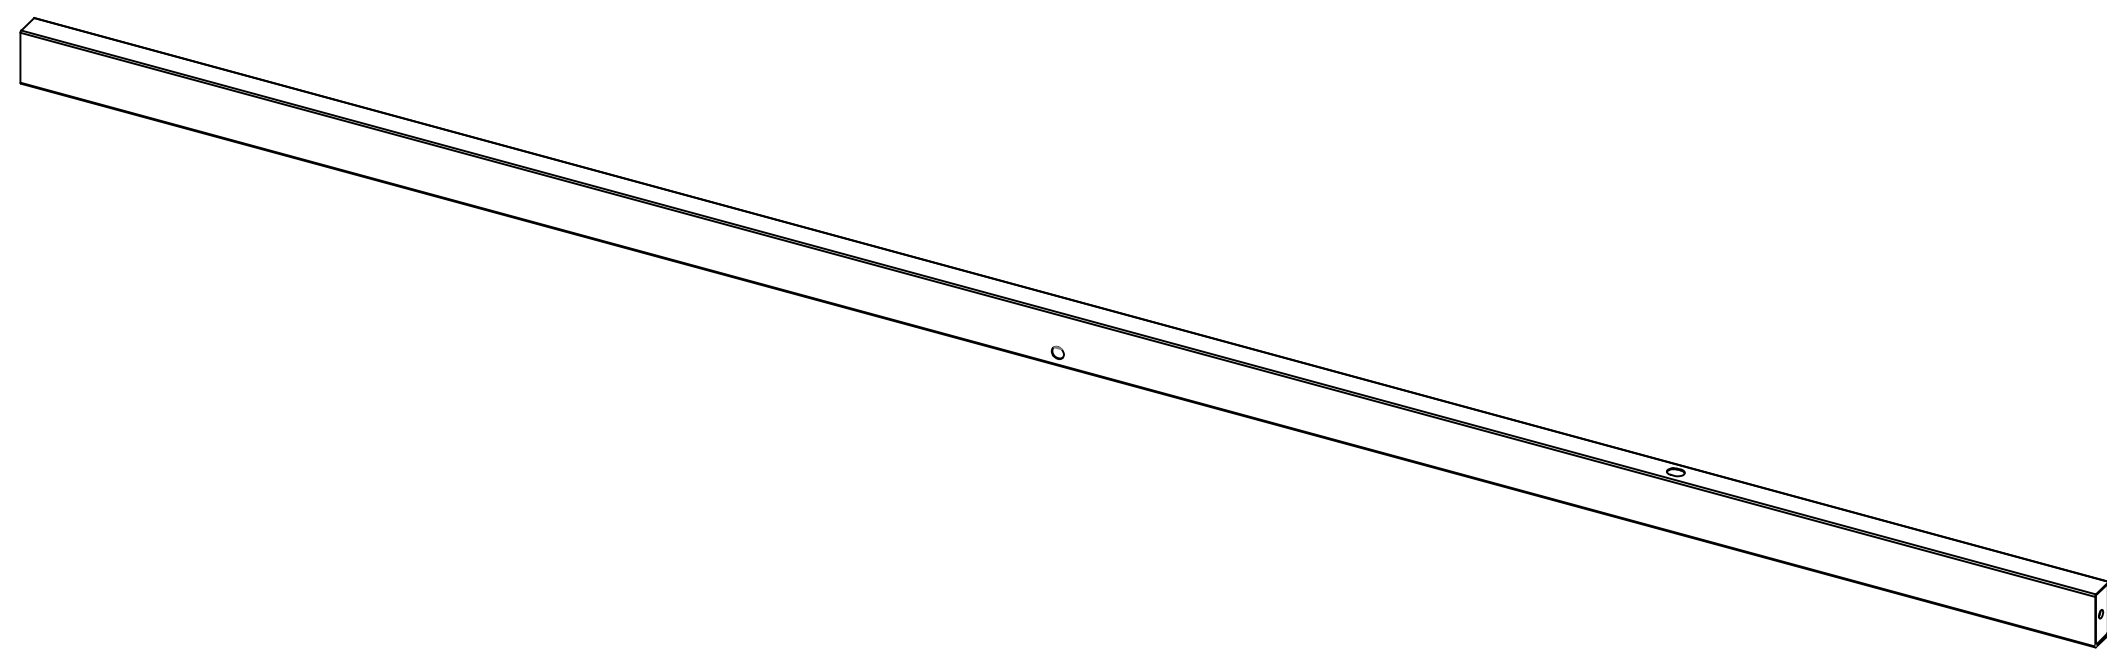
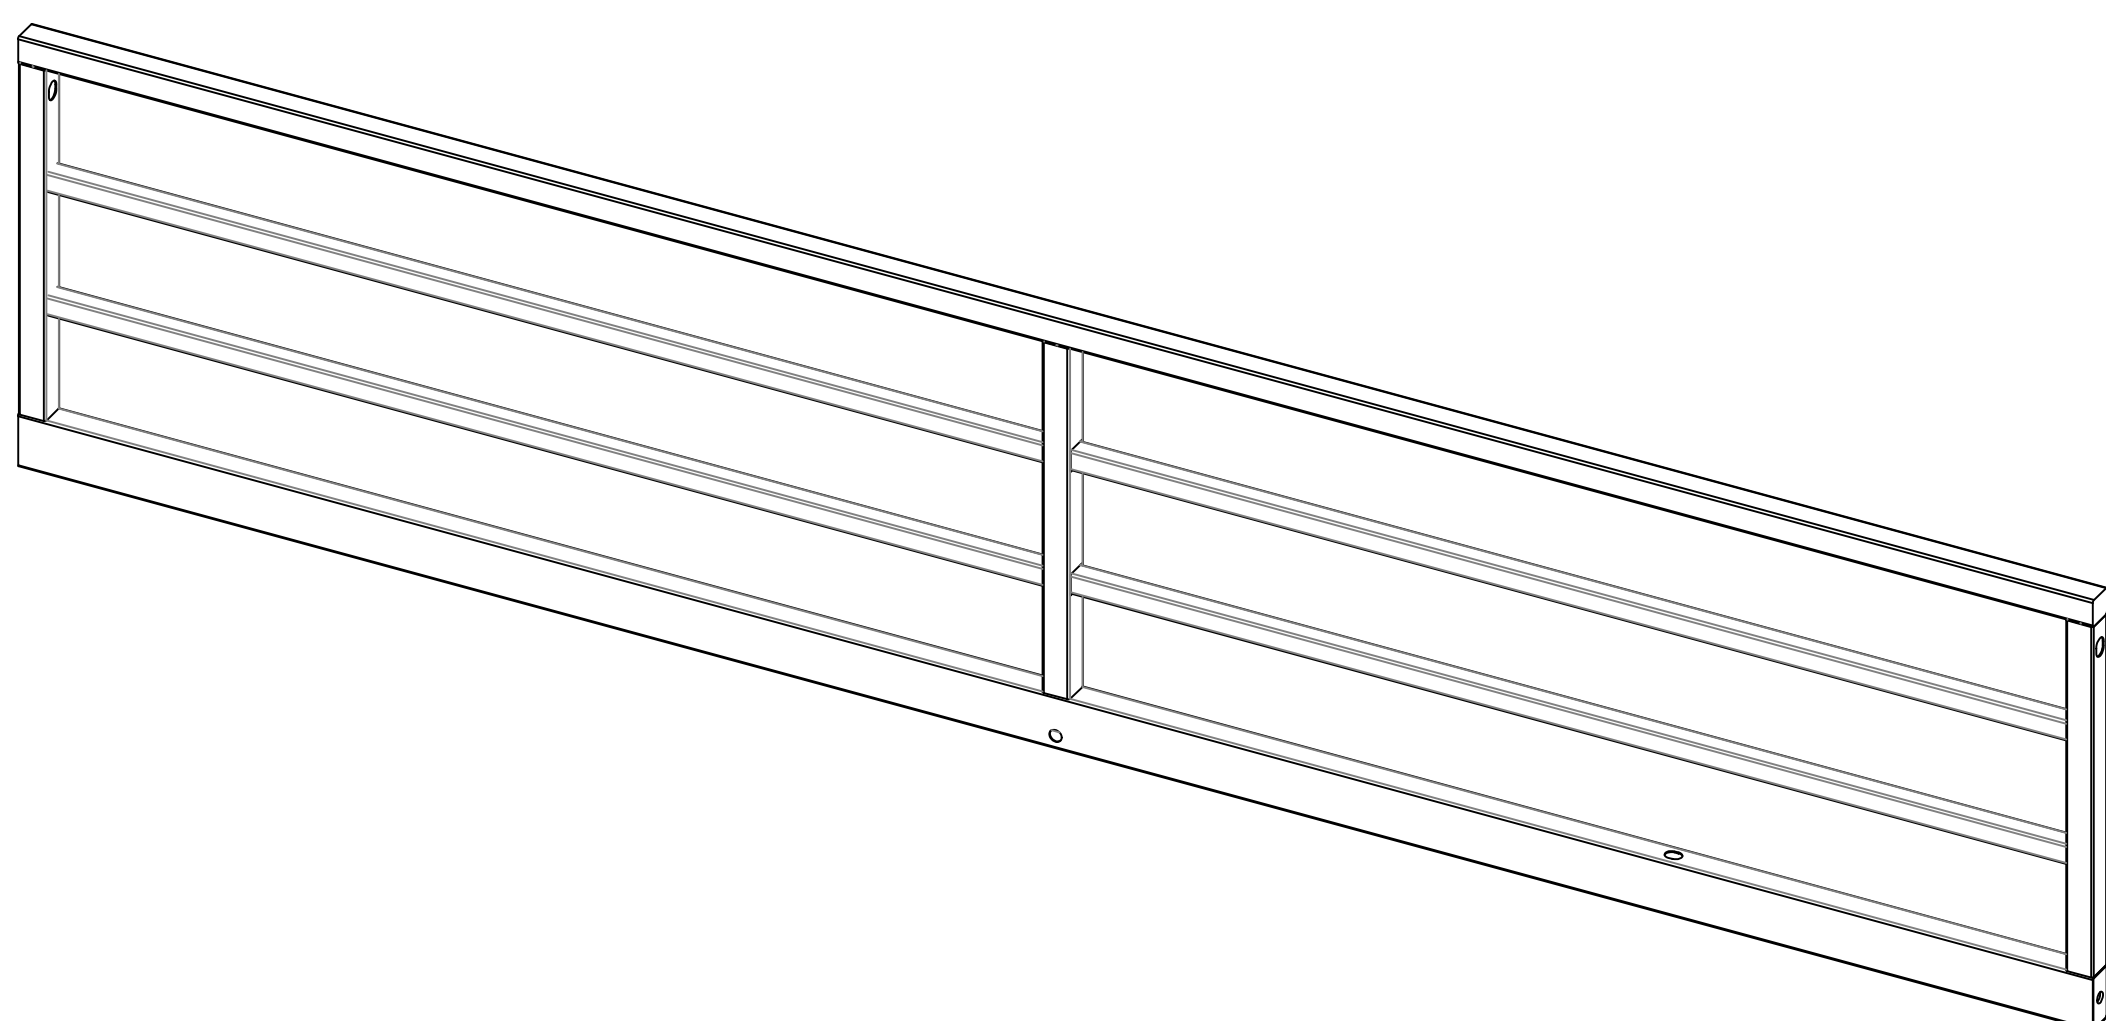
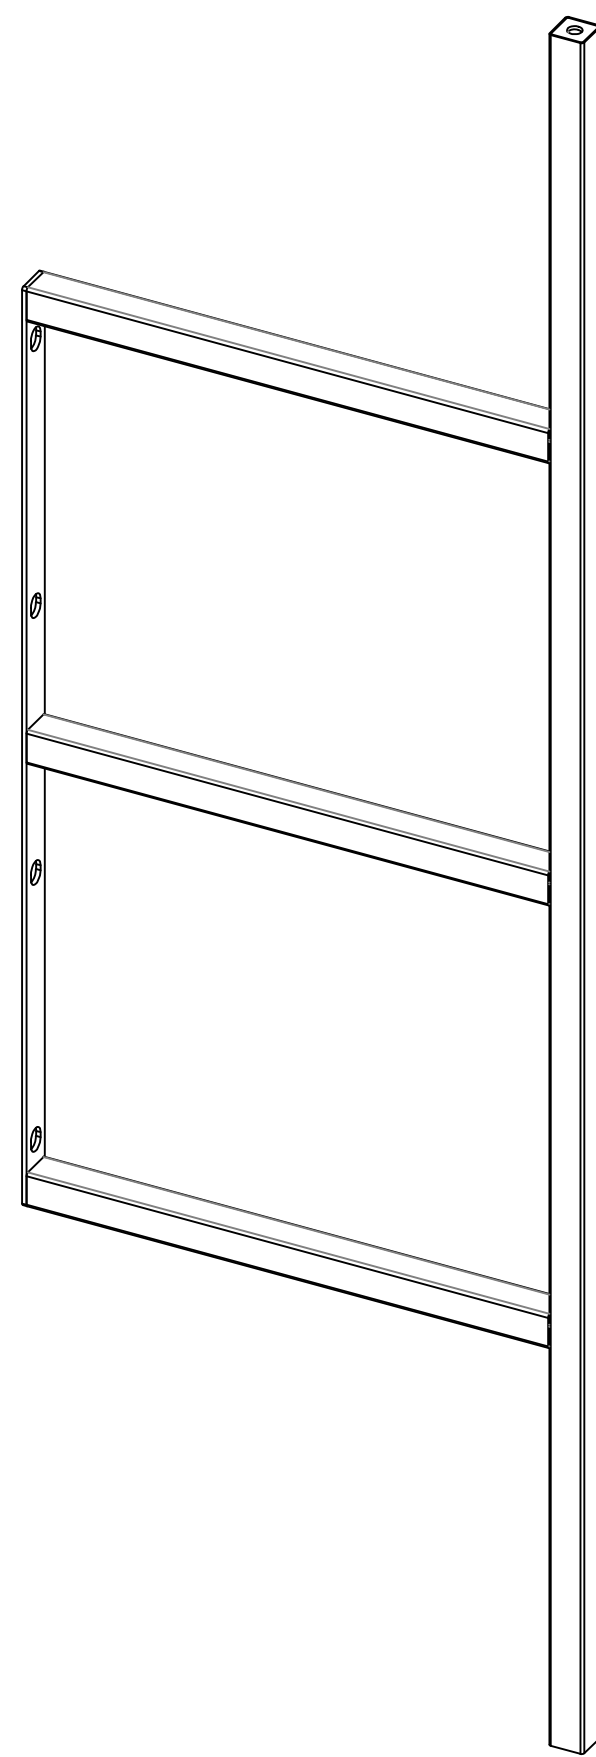
18. SURFACE OF MATTRESS MUST BE AT LEAST 5"(127MM) BELOW THE UPPER EDGE OF GUARDRAILS.

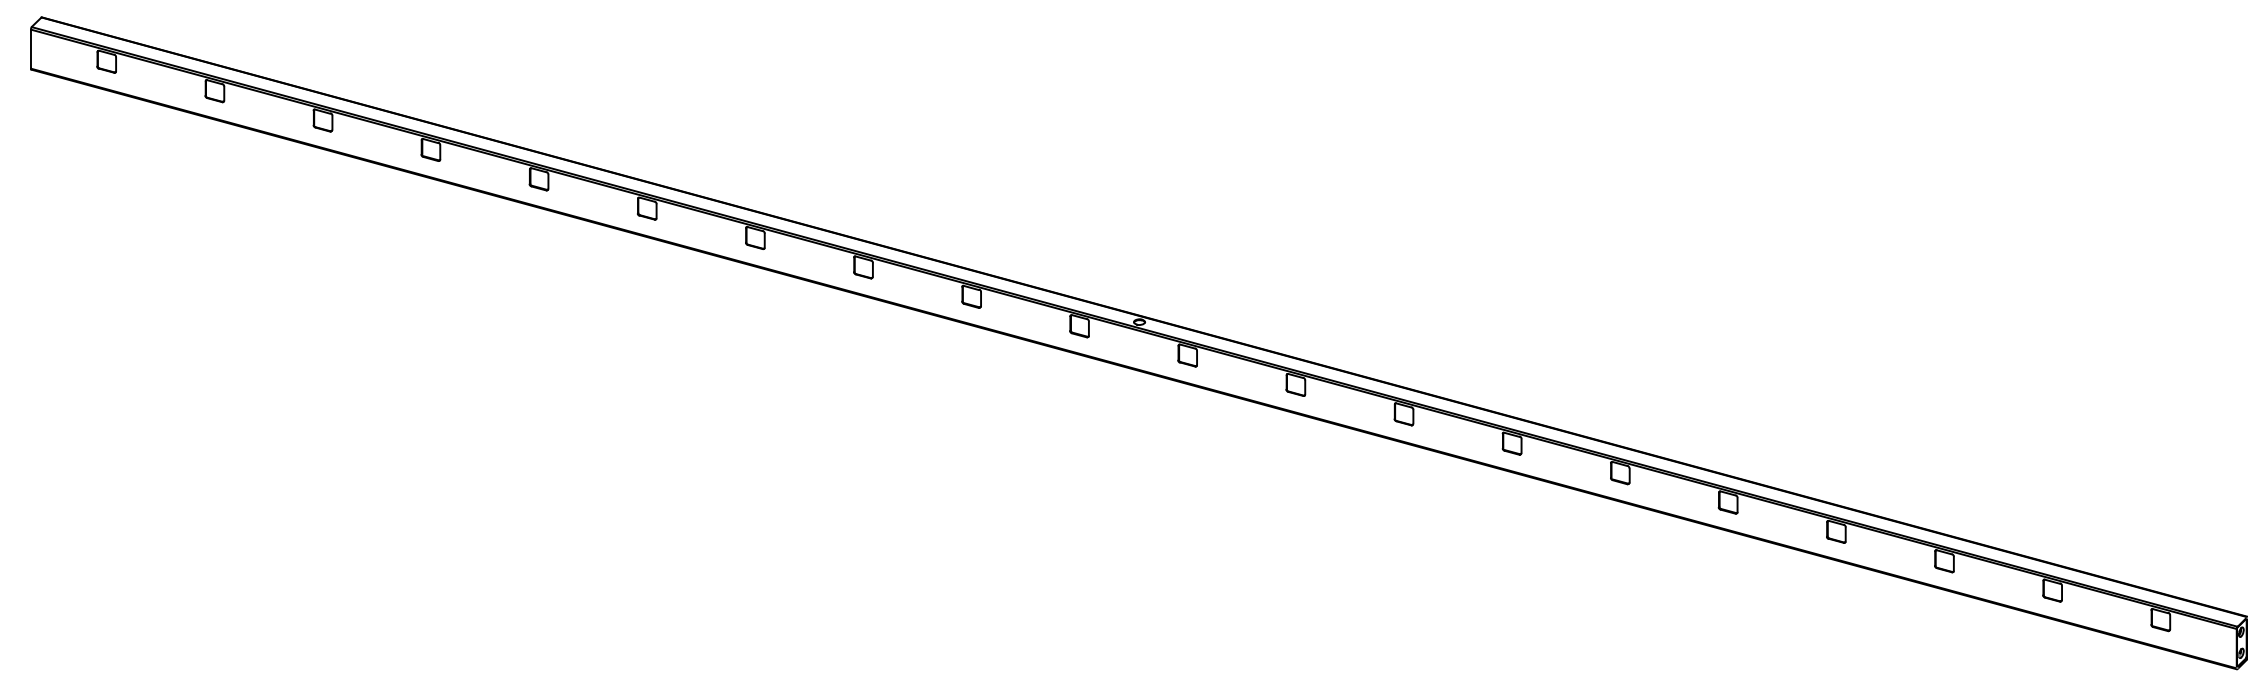
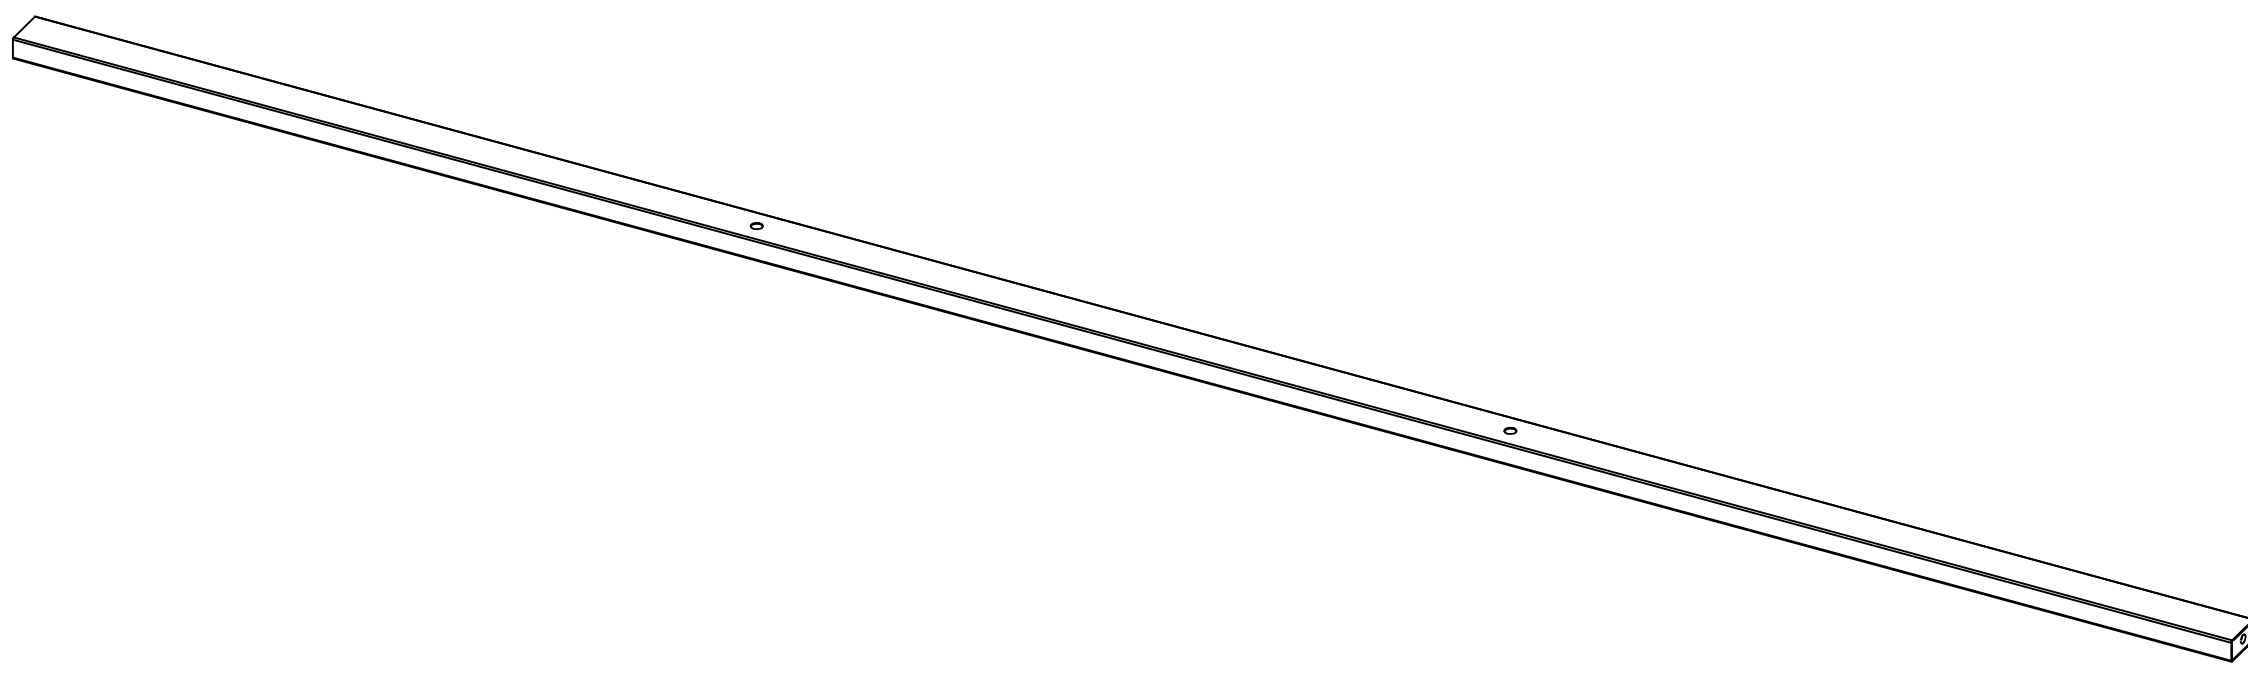
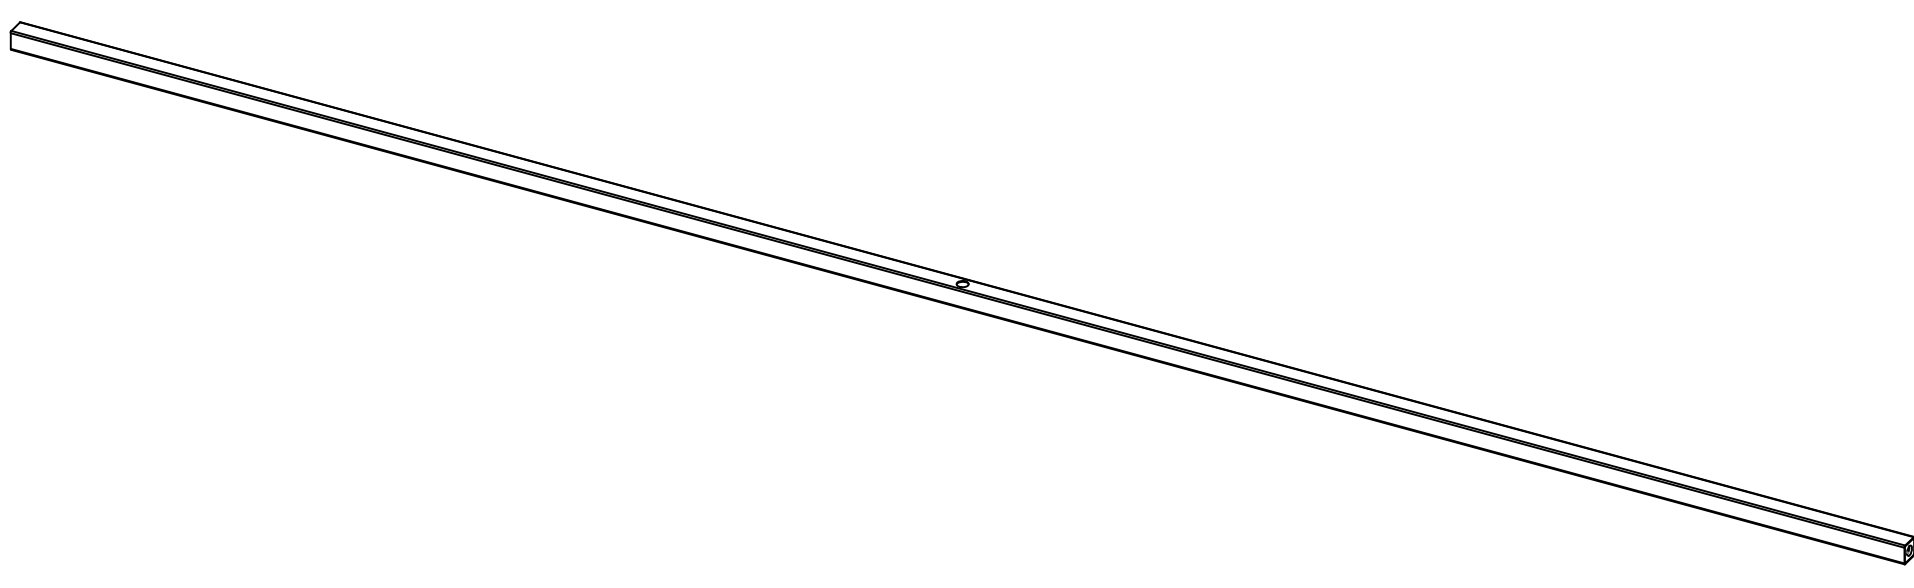
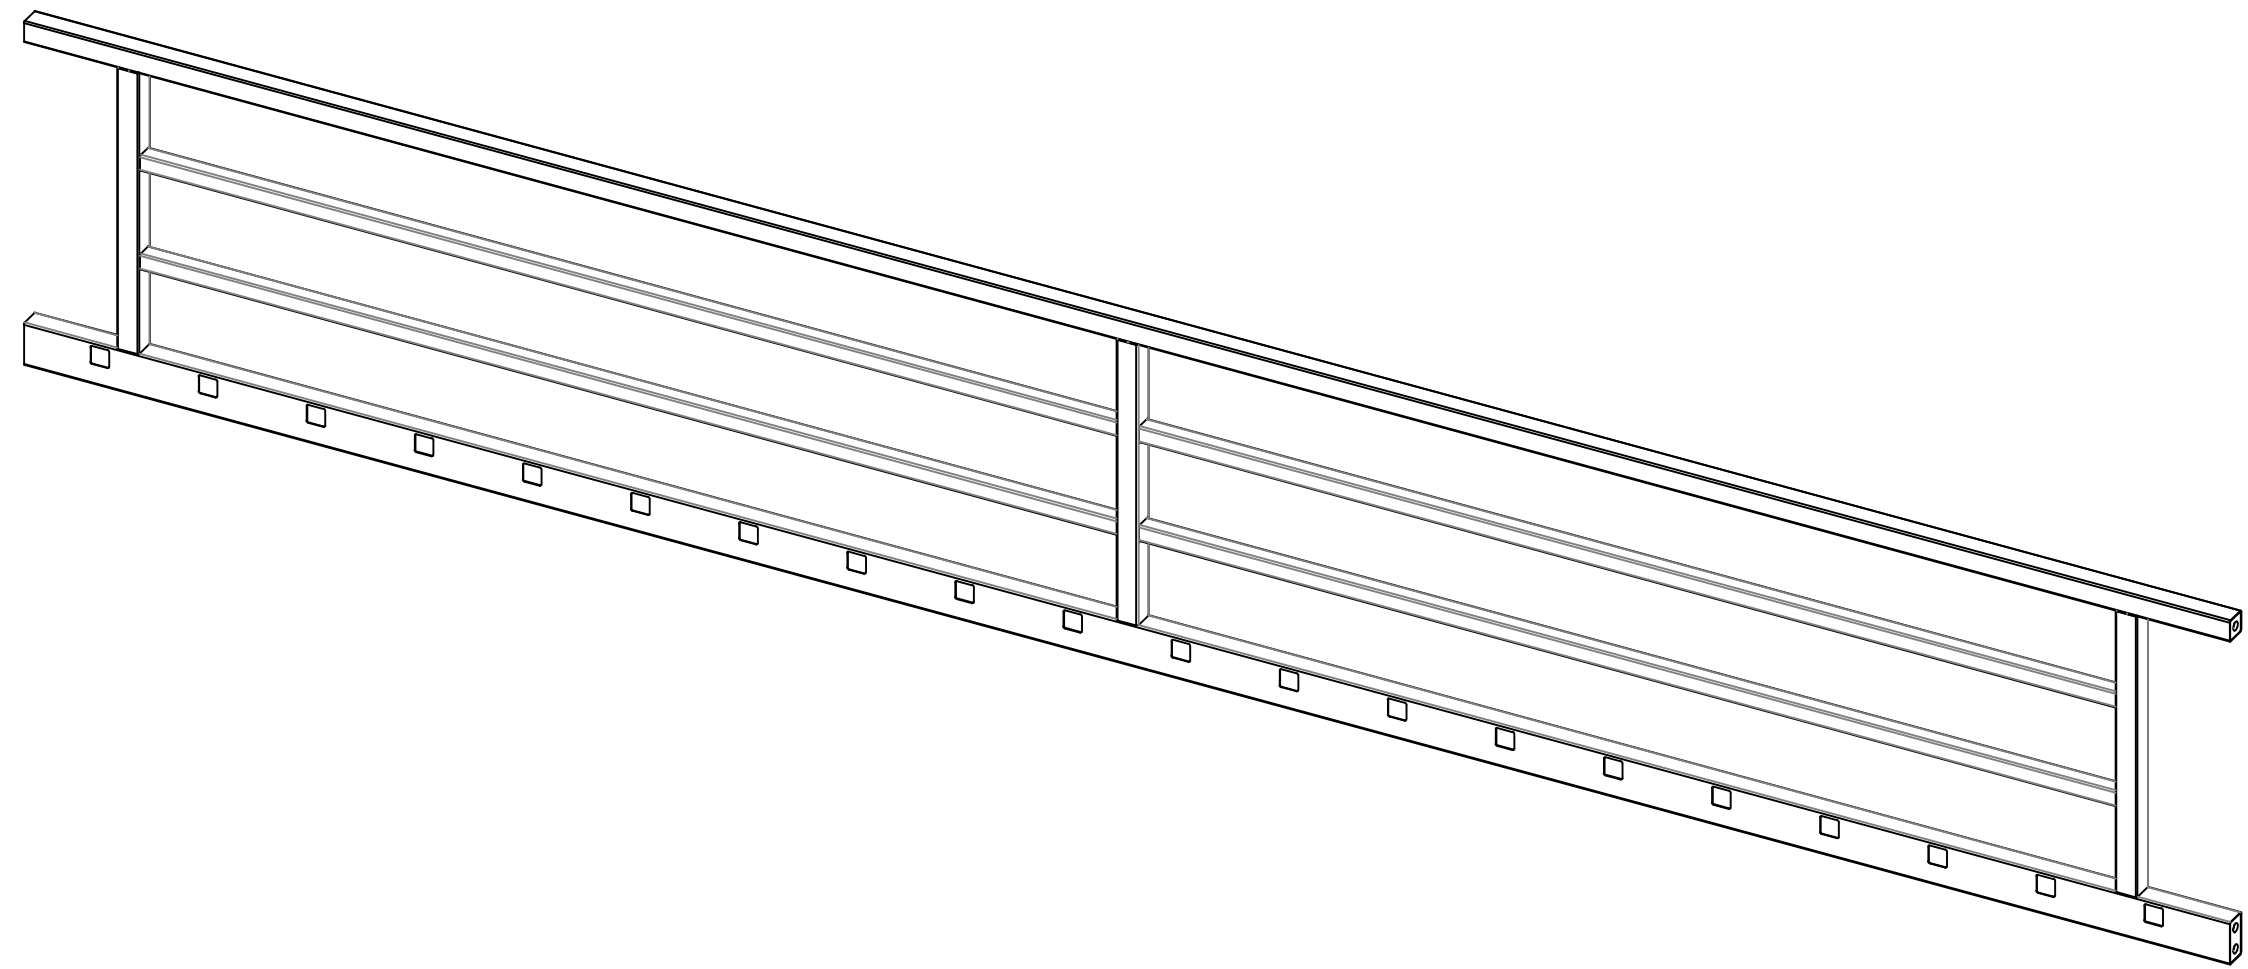
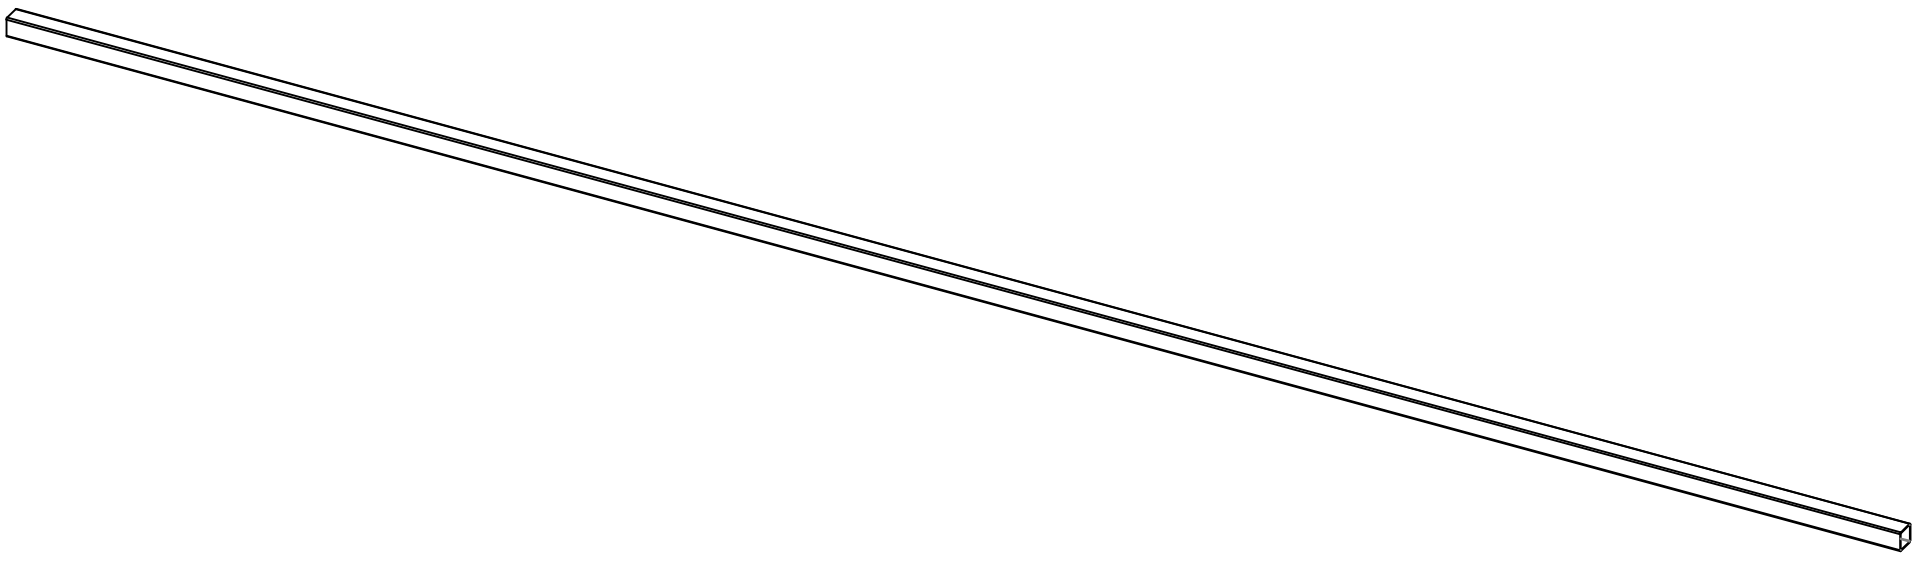
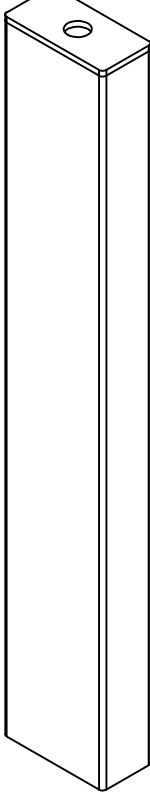
19. Replacement Parts:

Replacement Parts, including additional guardrails, may be obtained from any of our dealers.

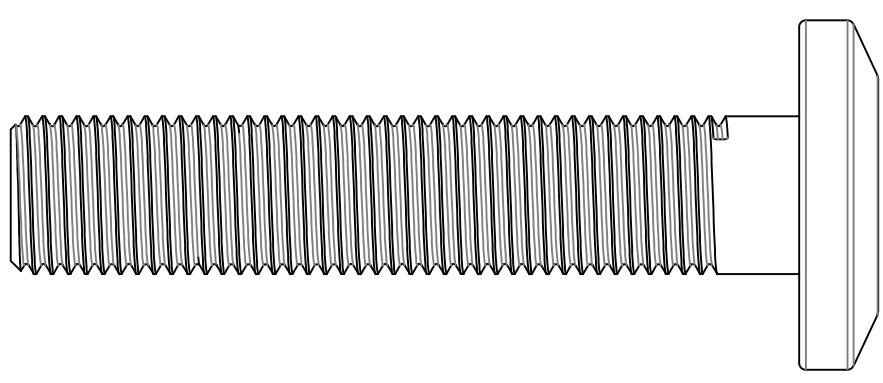
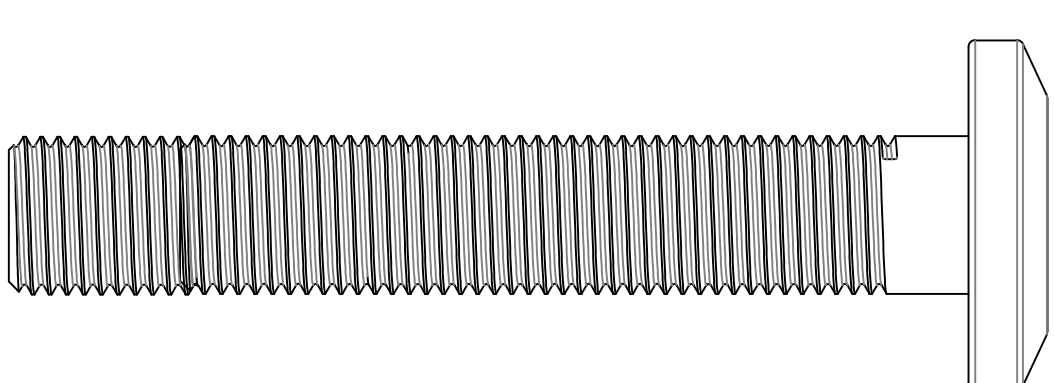
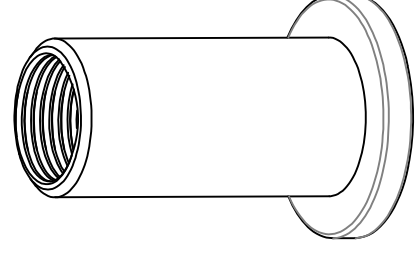
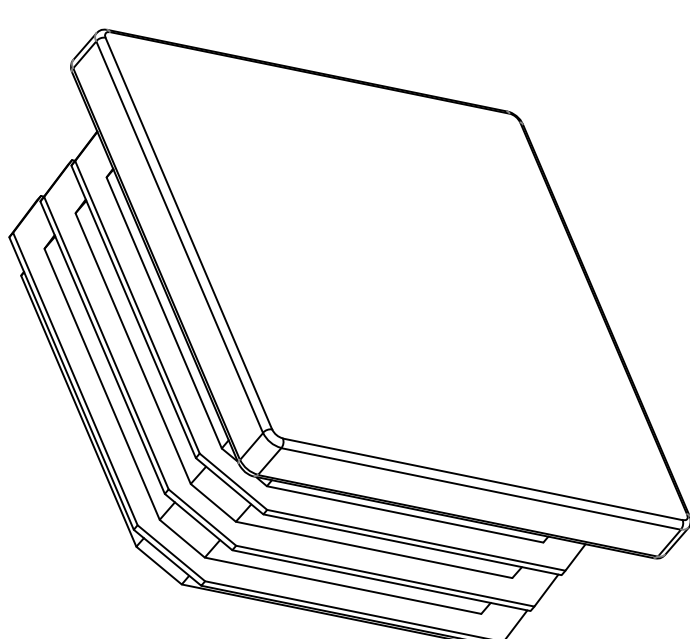
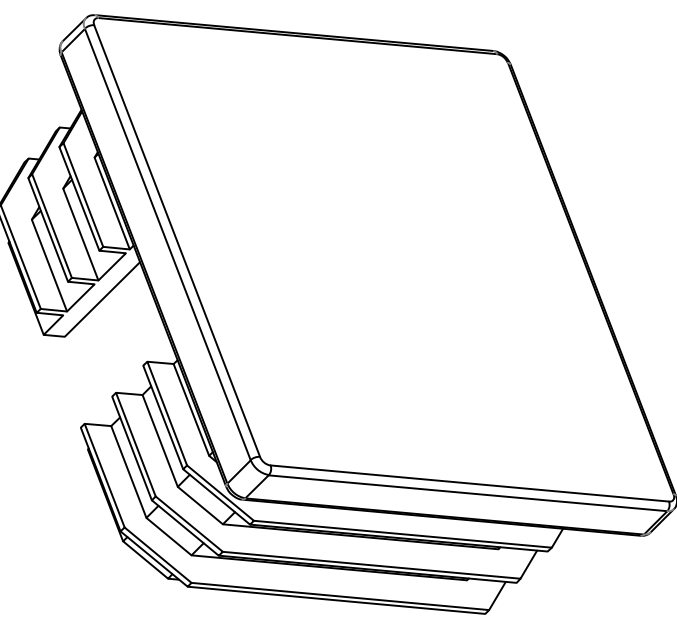
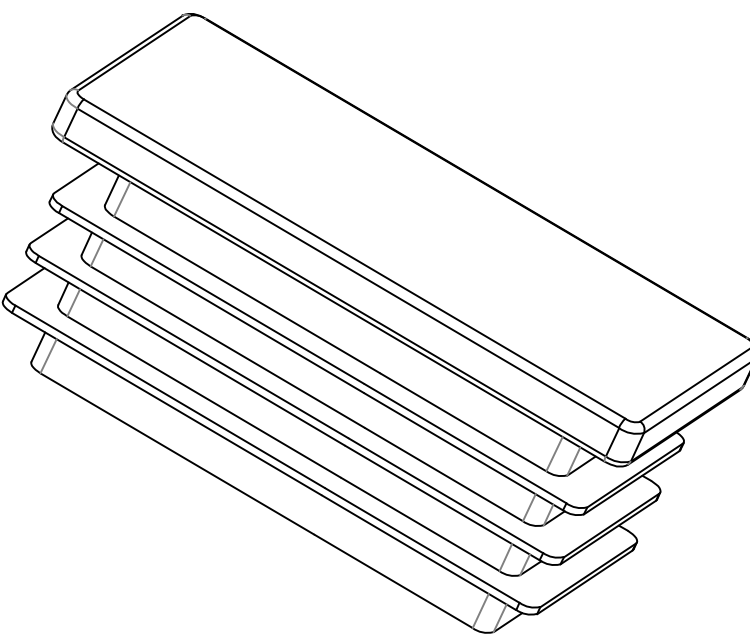
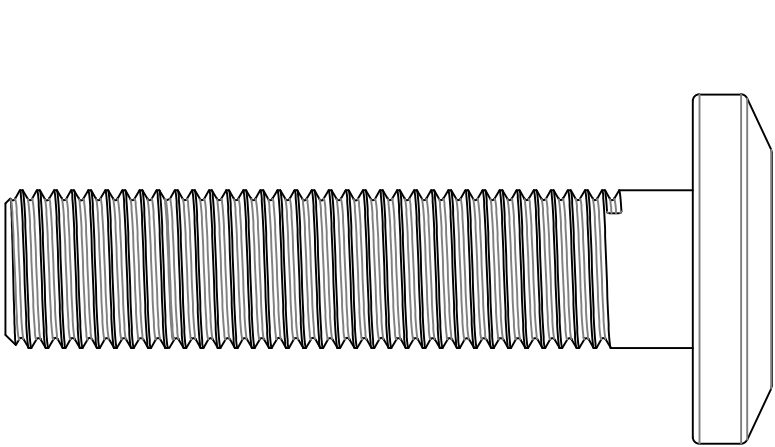
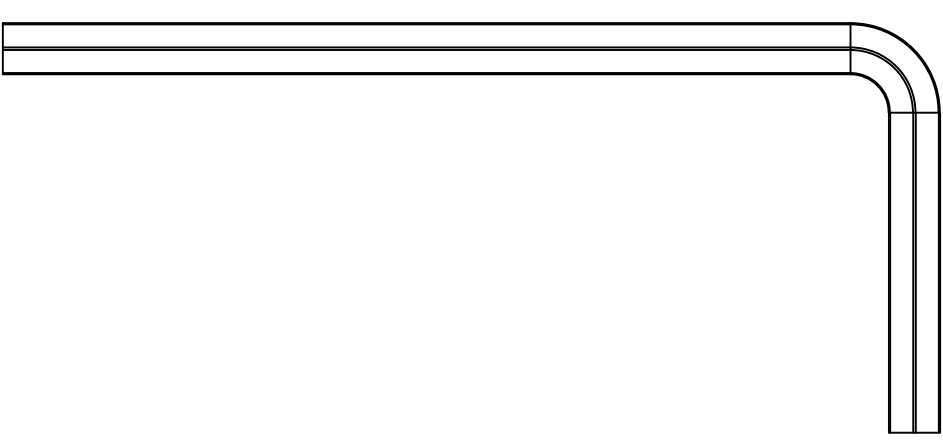
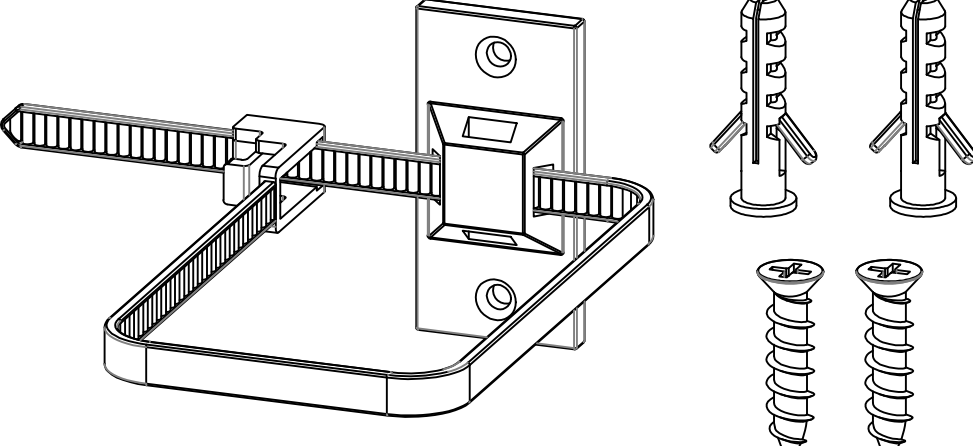


PARTLIST

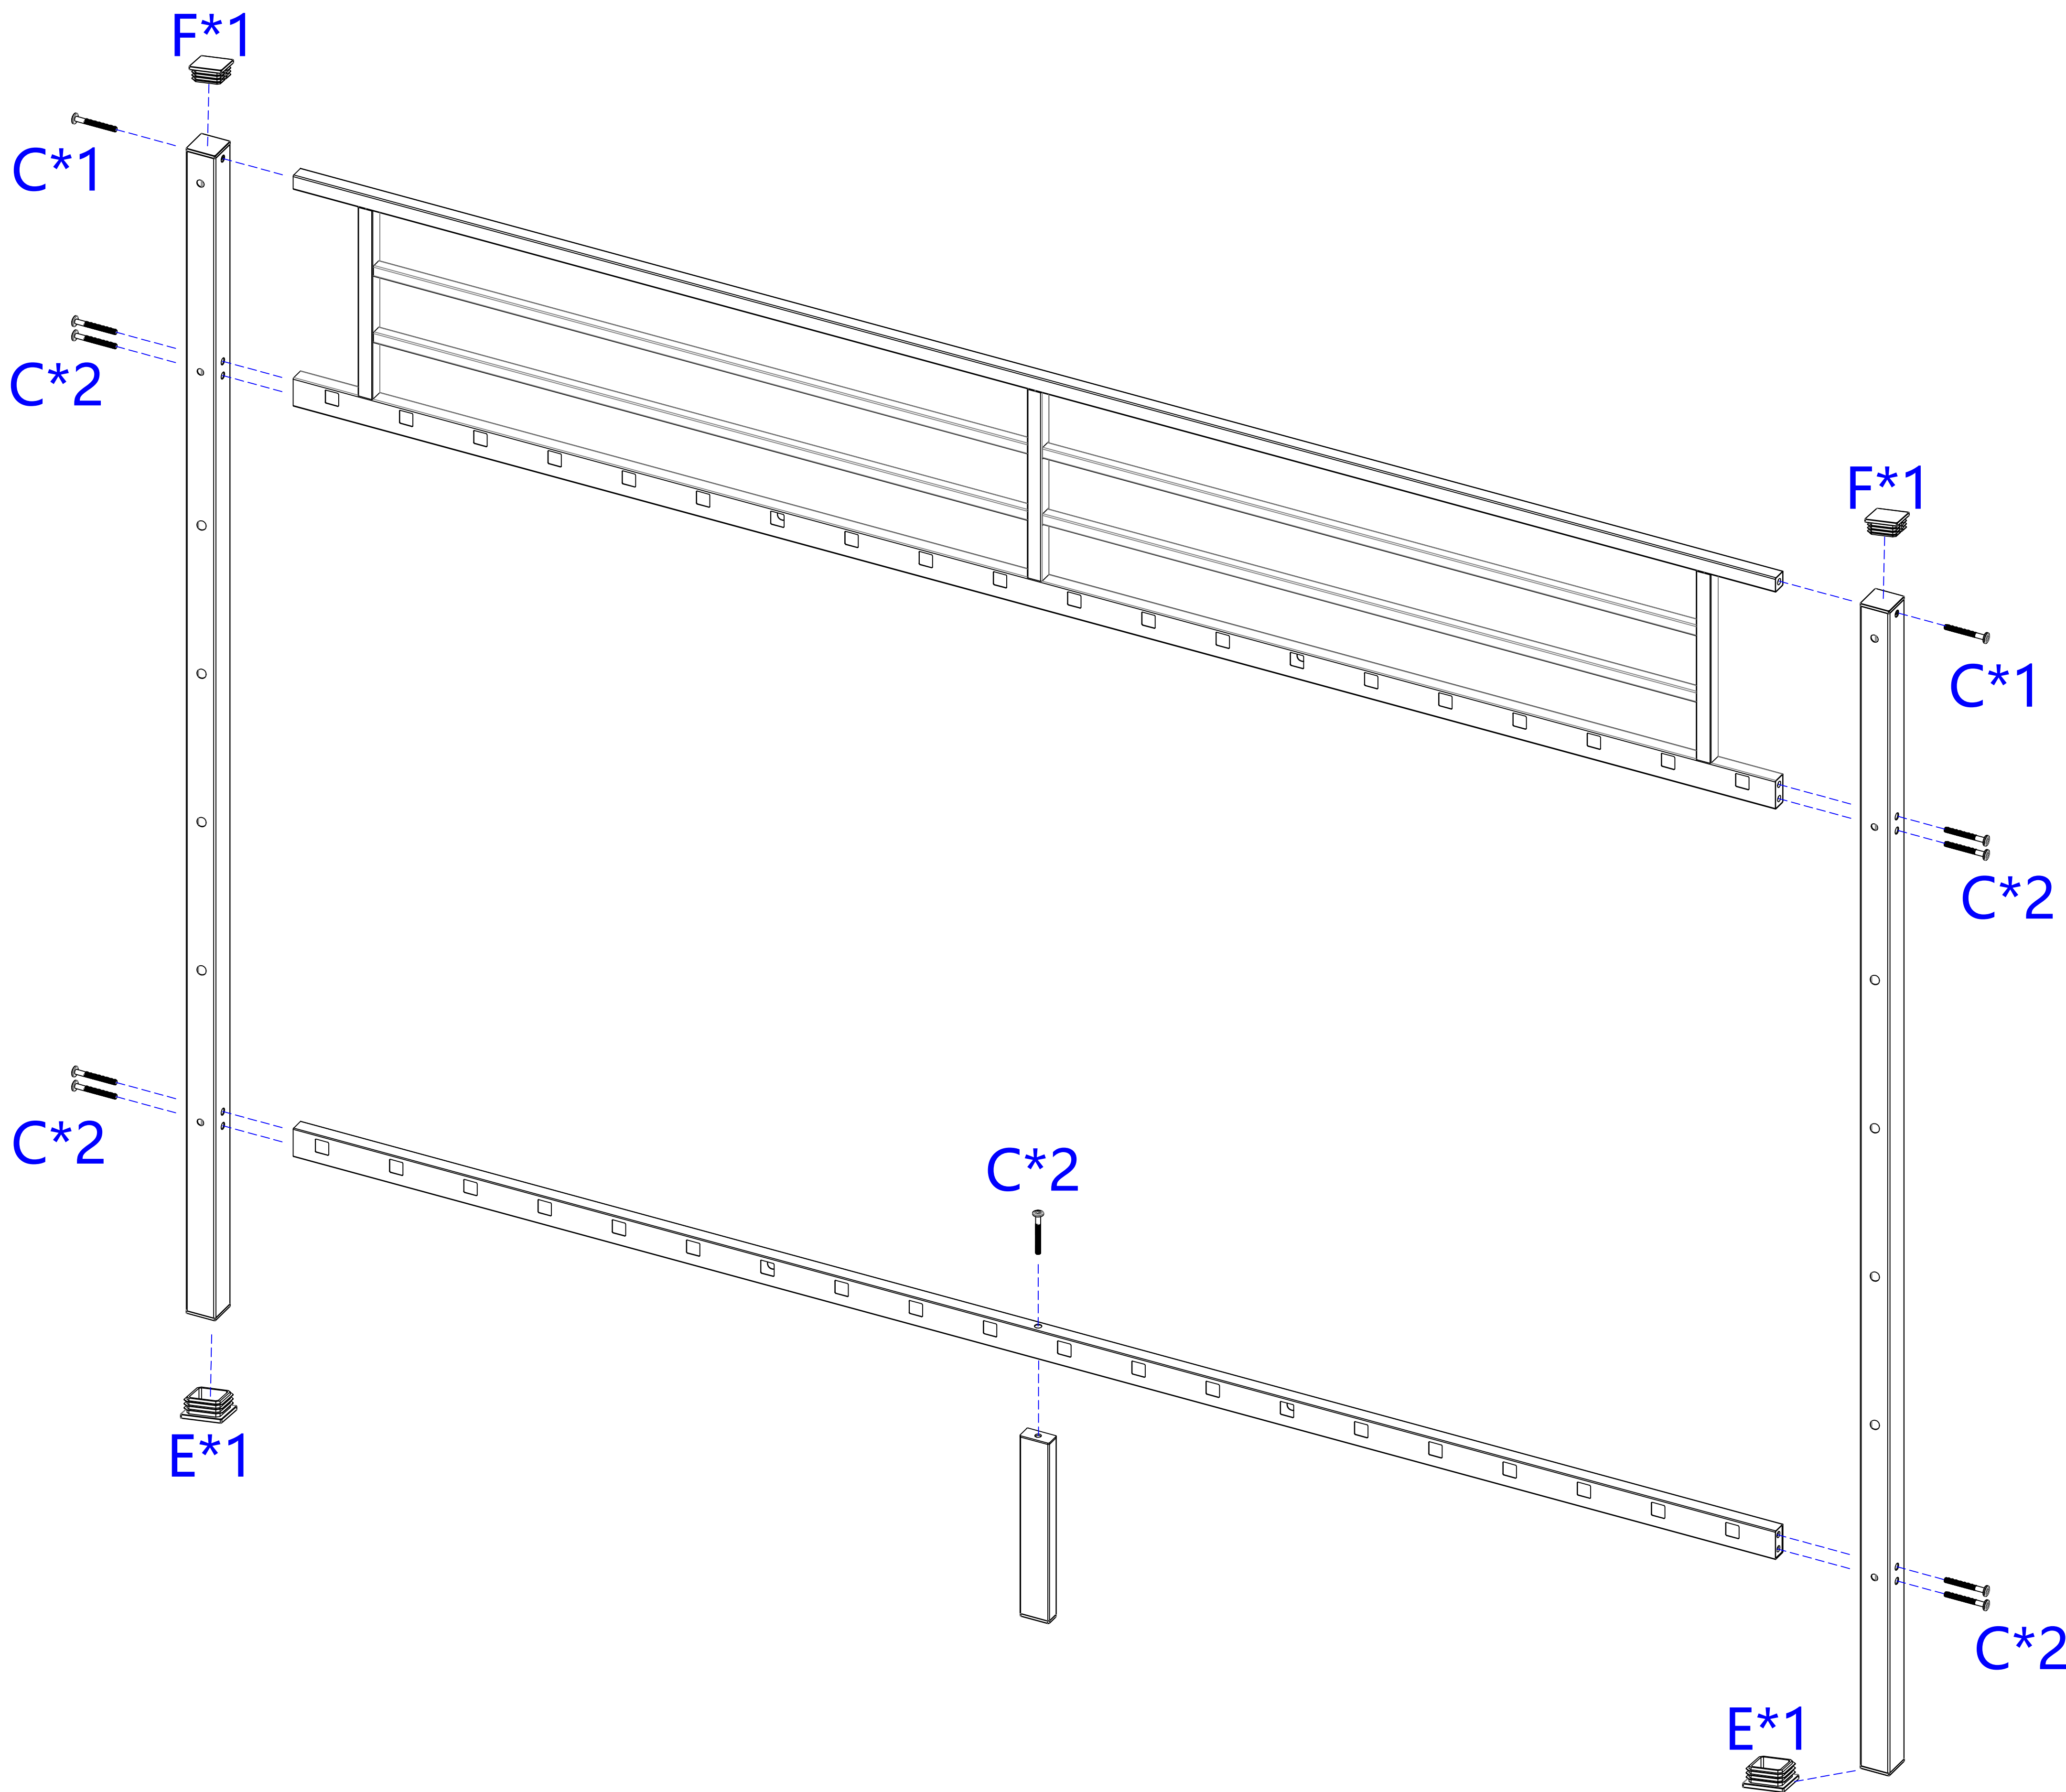
		 3-2pcs 	
1-2pcs	2-2pcs	4-2pcs	5-2pcs

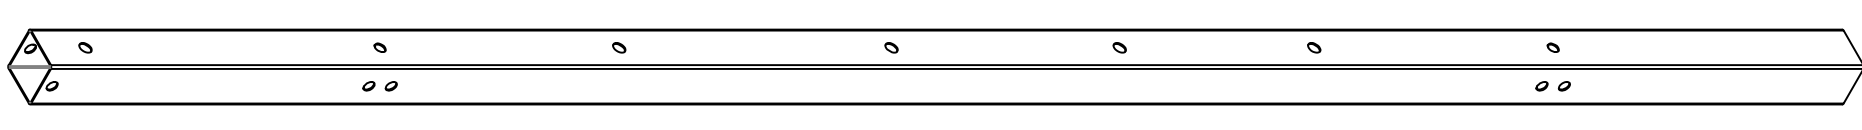
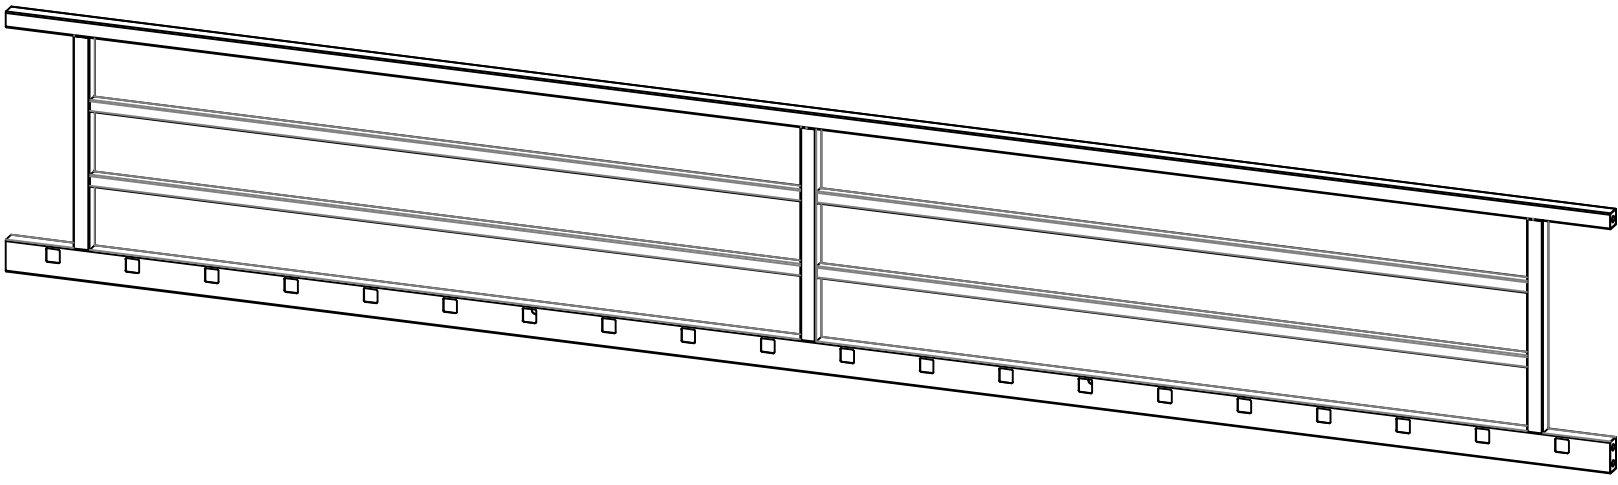
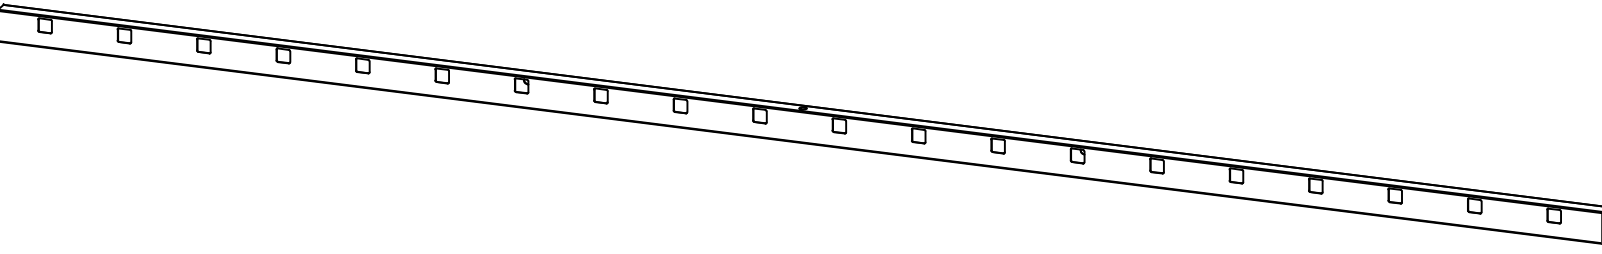
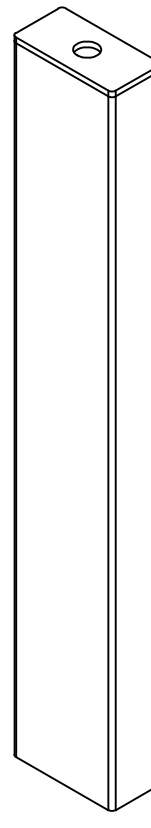
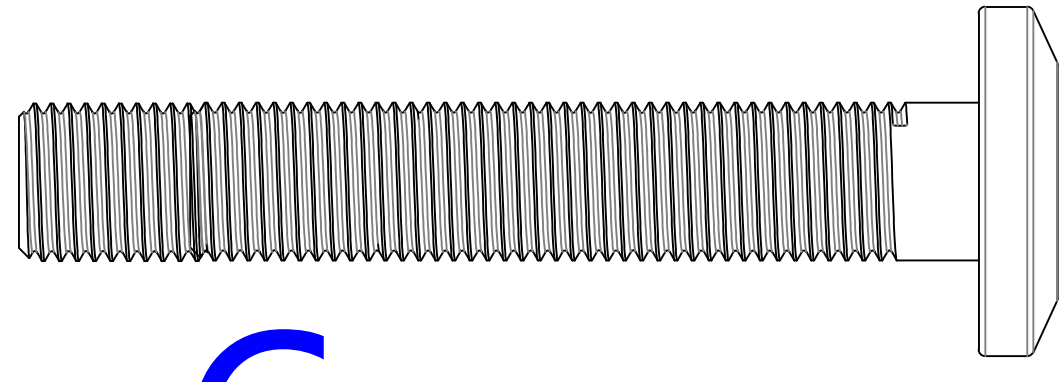
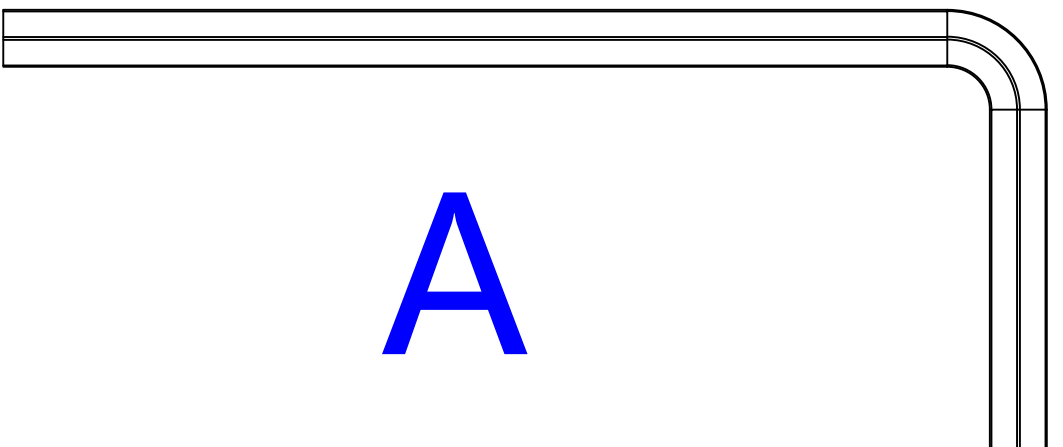
		
6-2pcs	8-2pcs	10-4pcs
		
7-2pcs	9-36pcs	13-4pcs

HARDWARE LIST

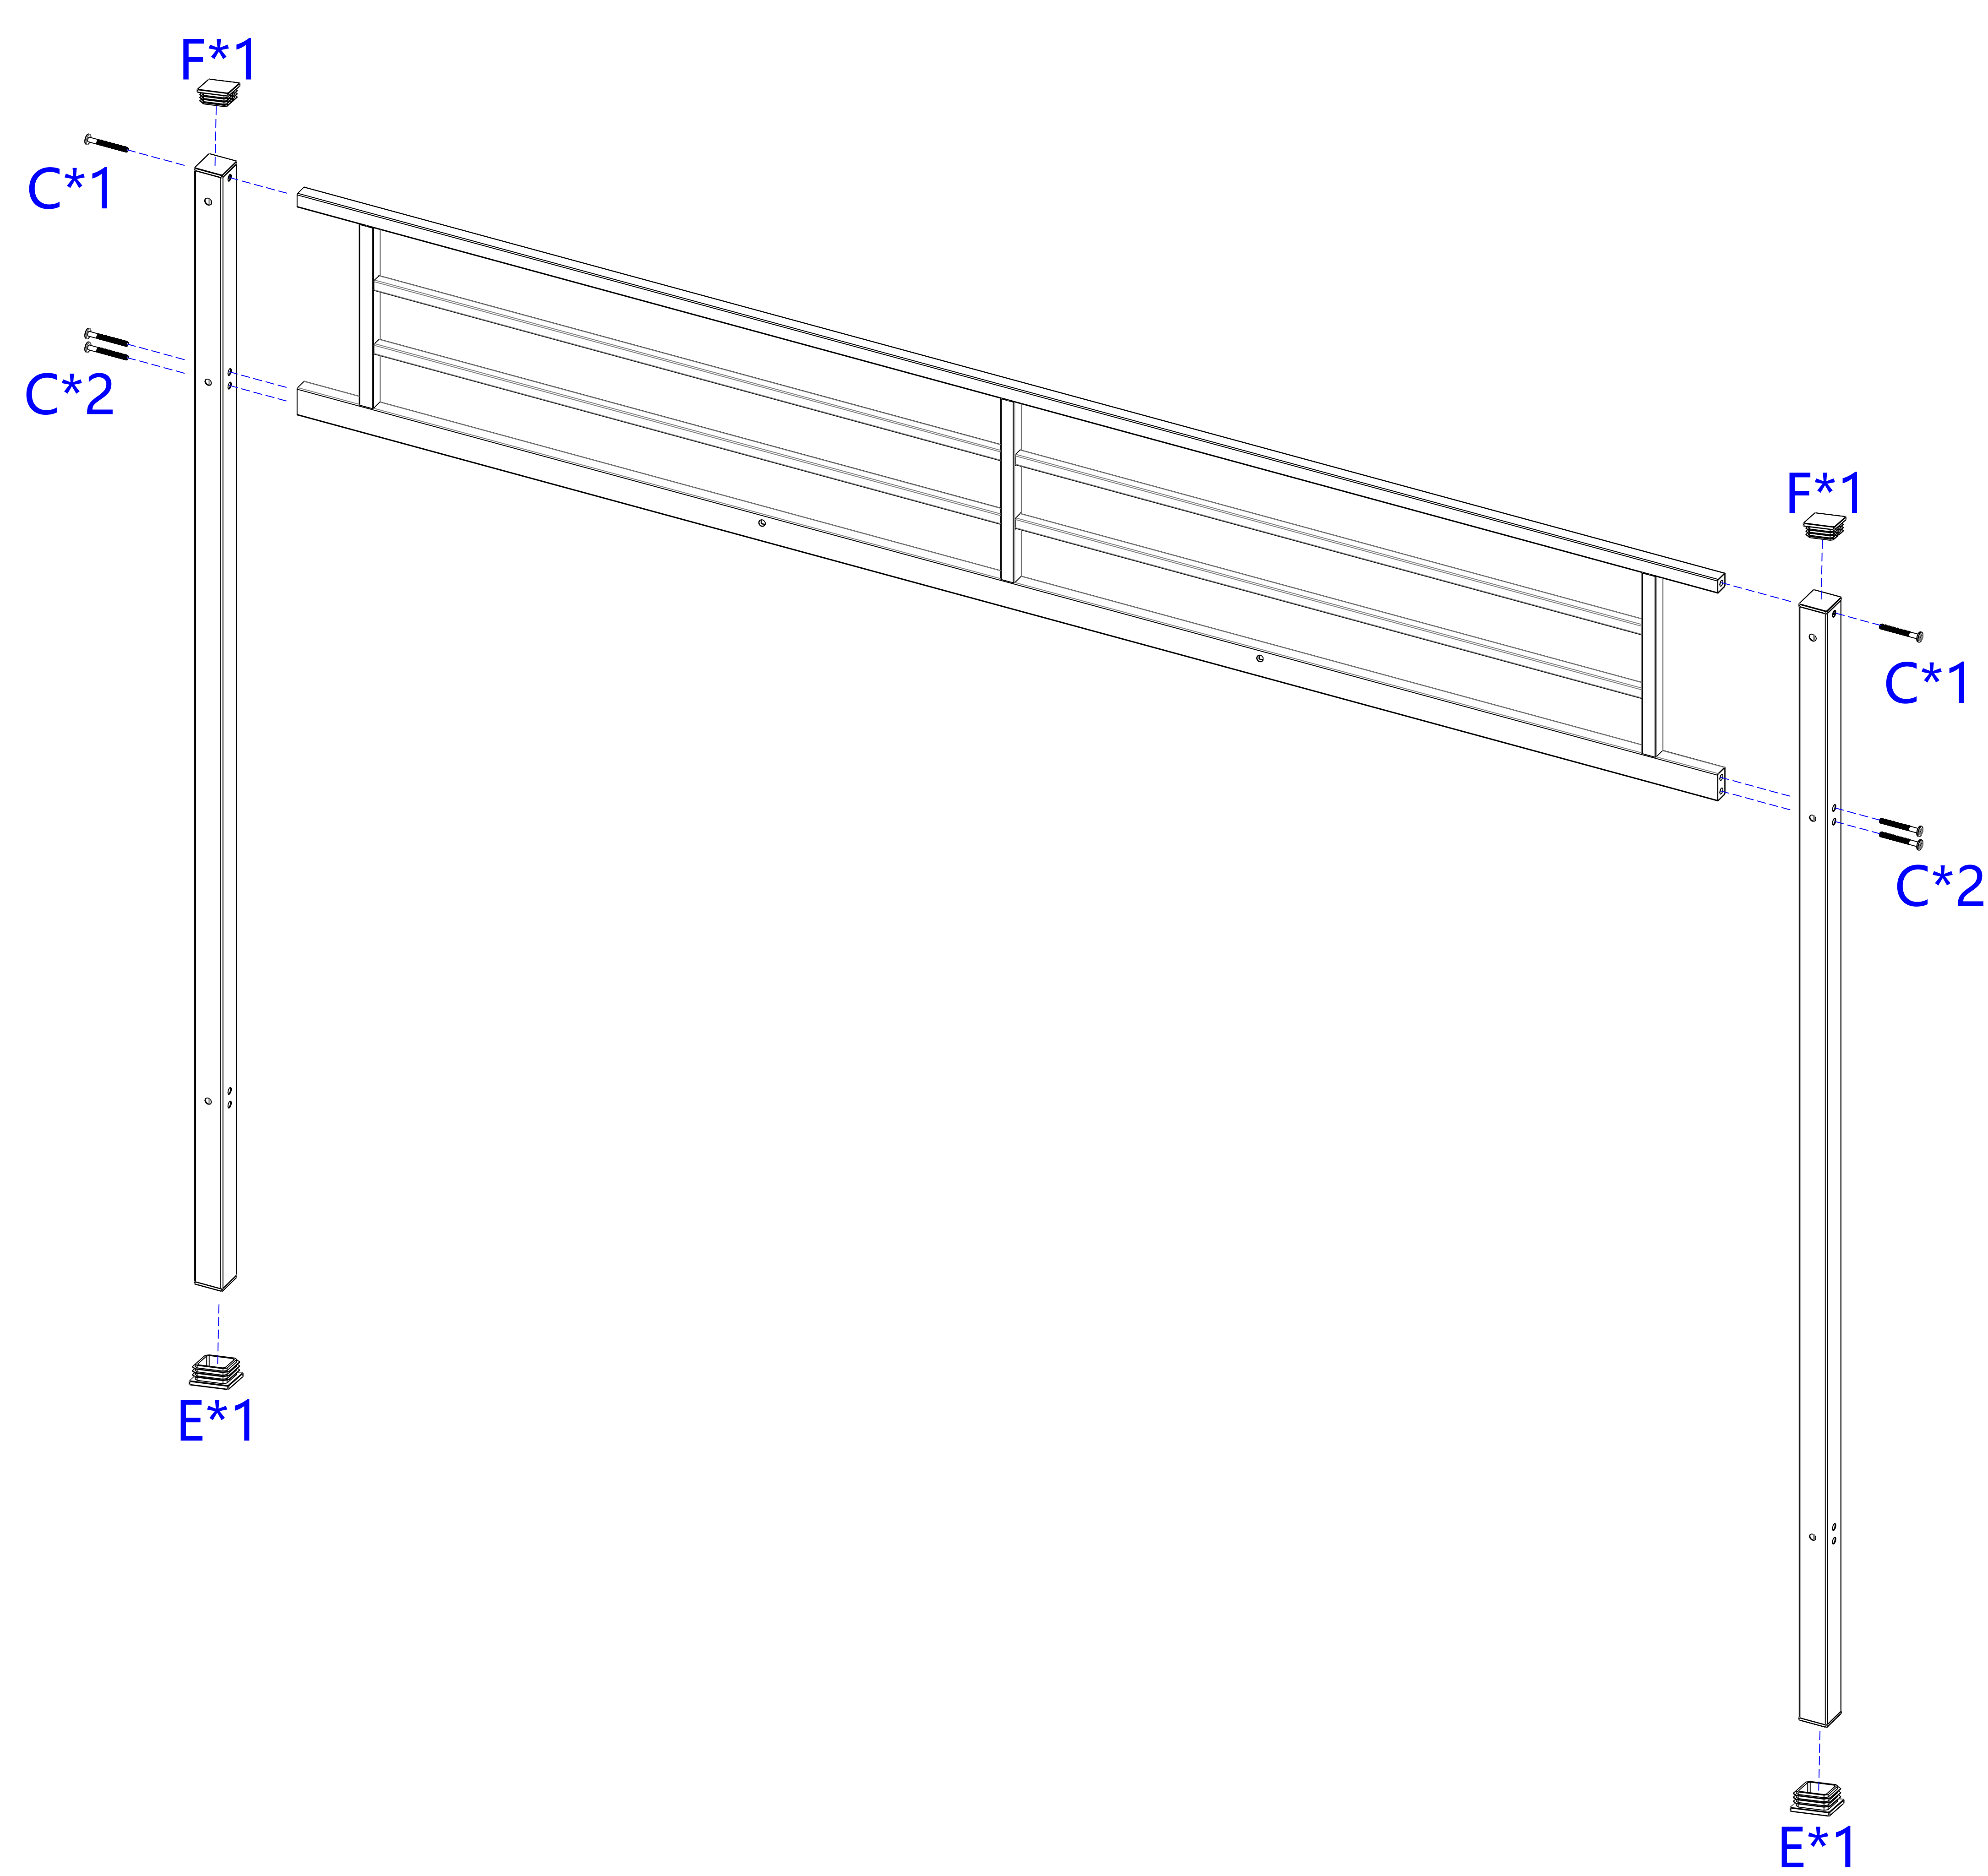
							
B	C	D	E	F	G	H	A 2pcs
8*35-12pcs	8*55-40pcs	8*16-14pcs	4pcs	4pcs	Installed 4pcs	8*30-10pcs	 k 2pcs


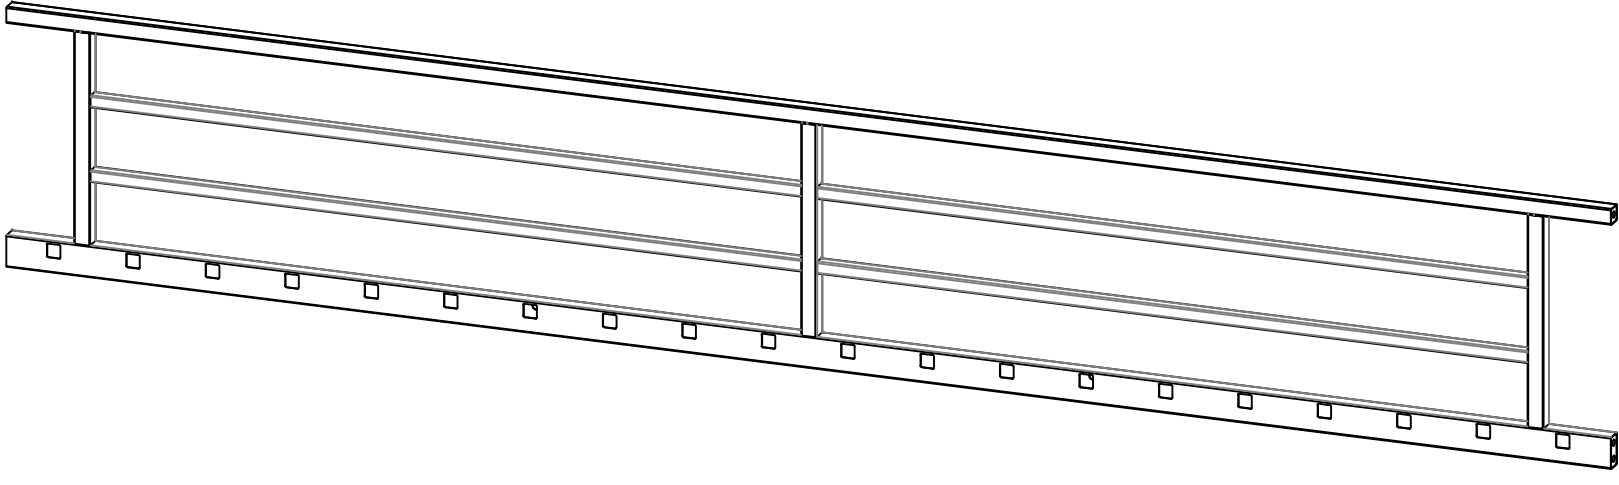
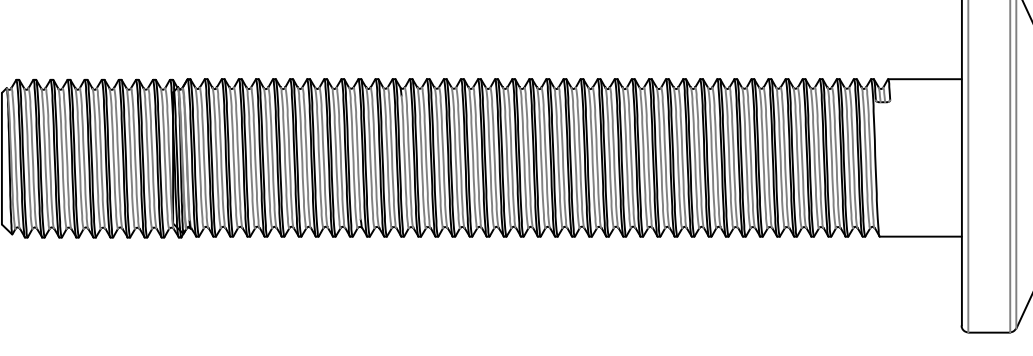
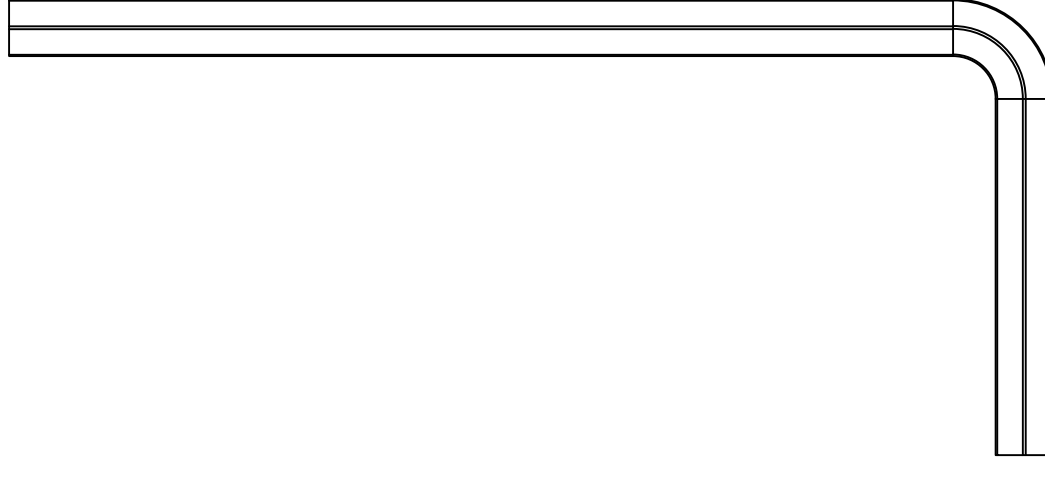
Step 1: Use hardware A, C, and connect #2, #7, #6 and #13 together.



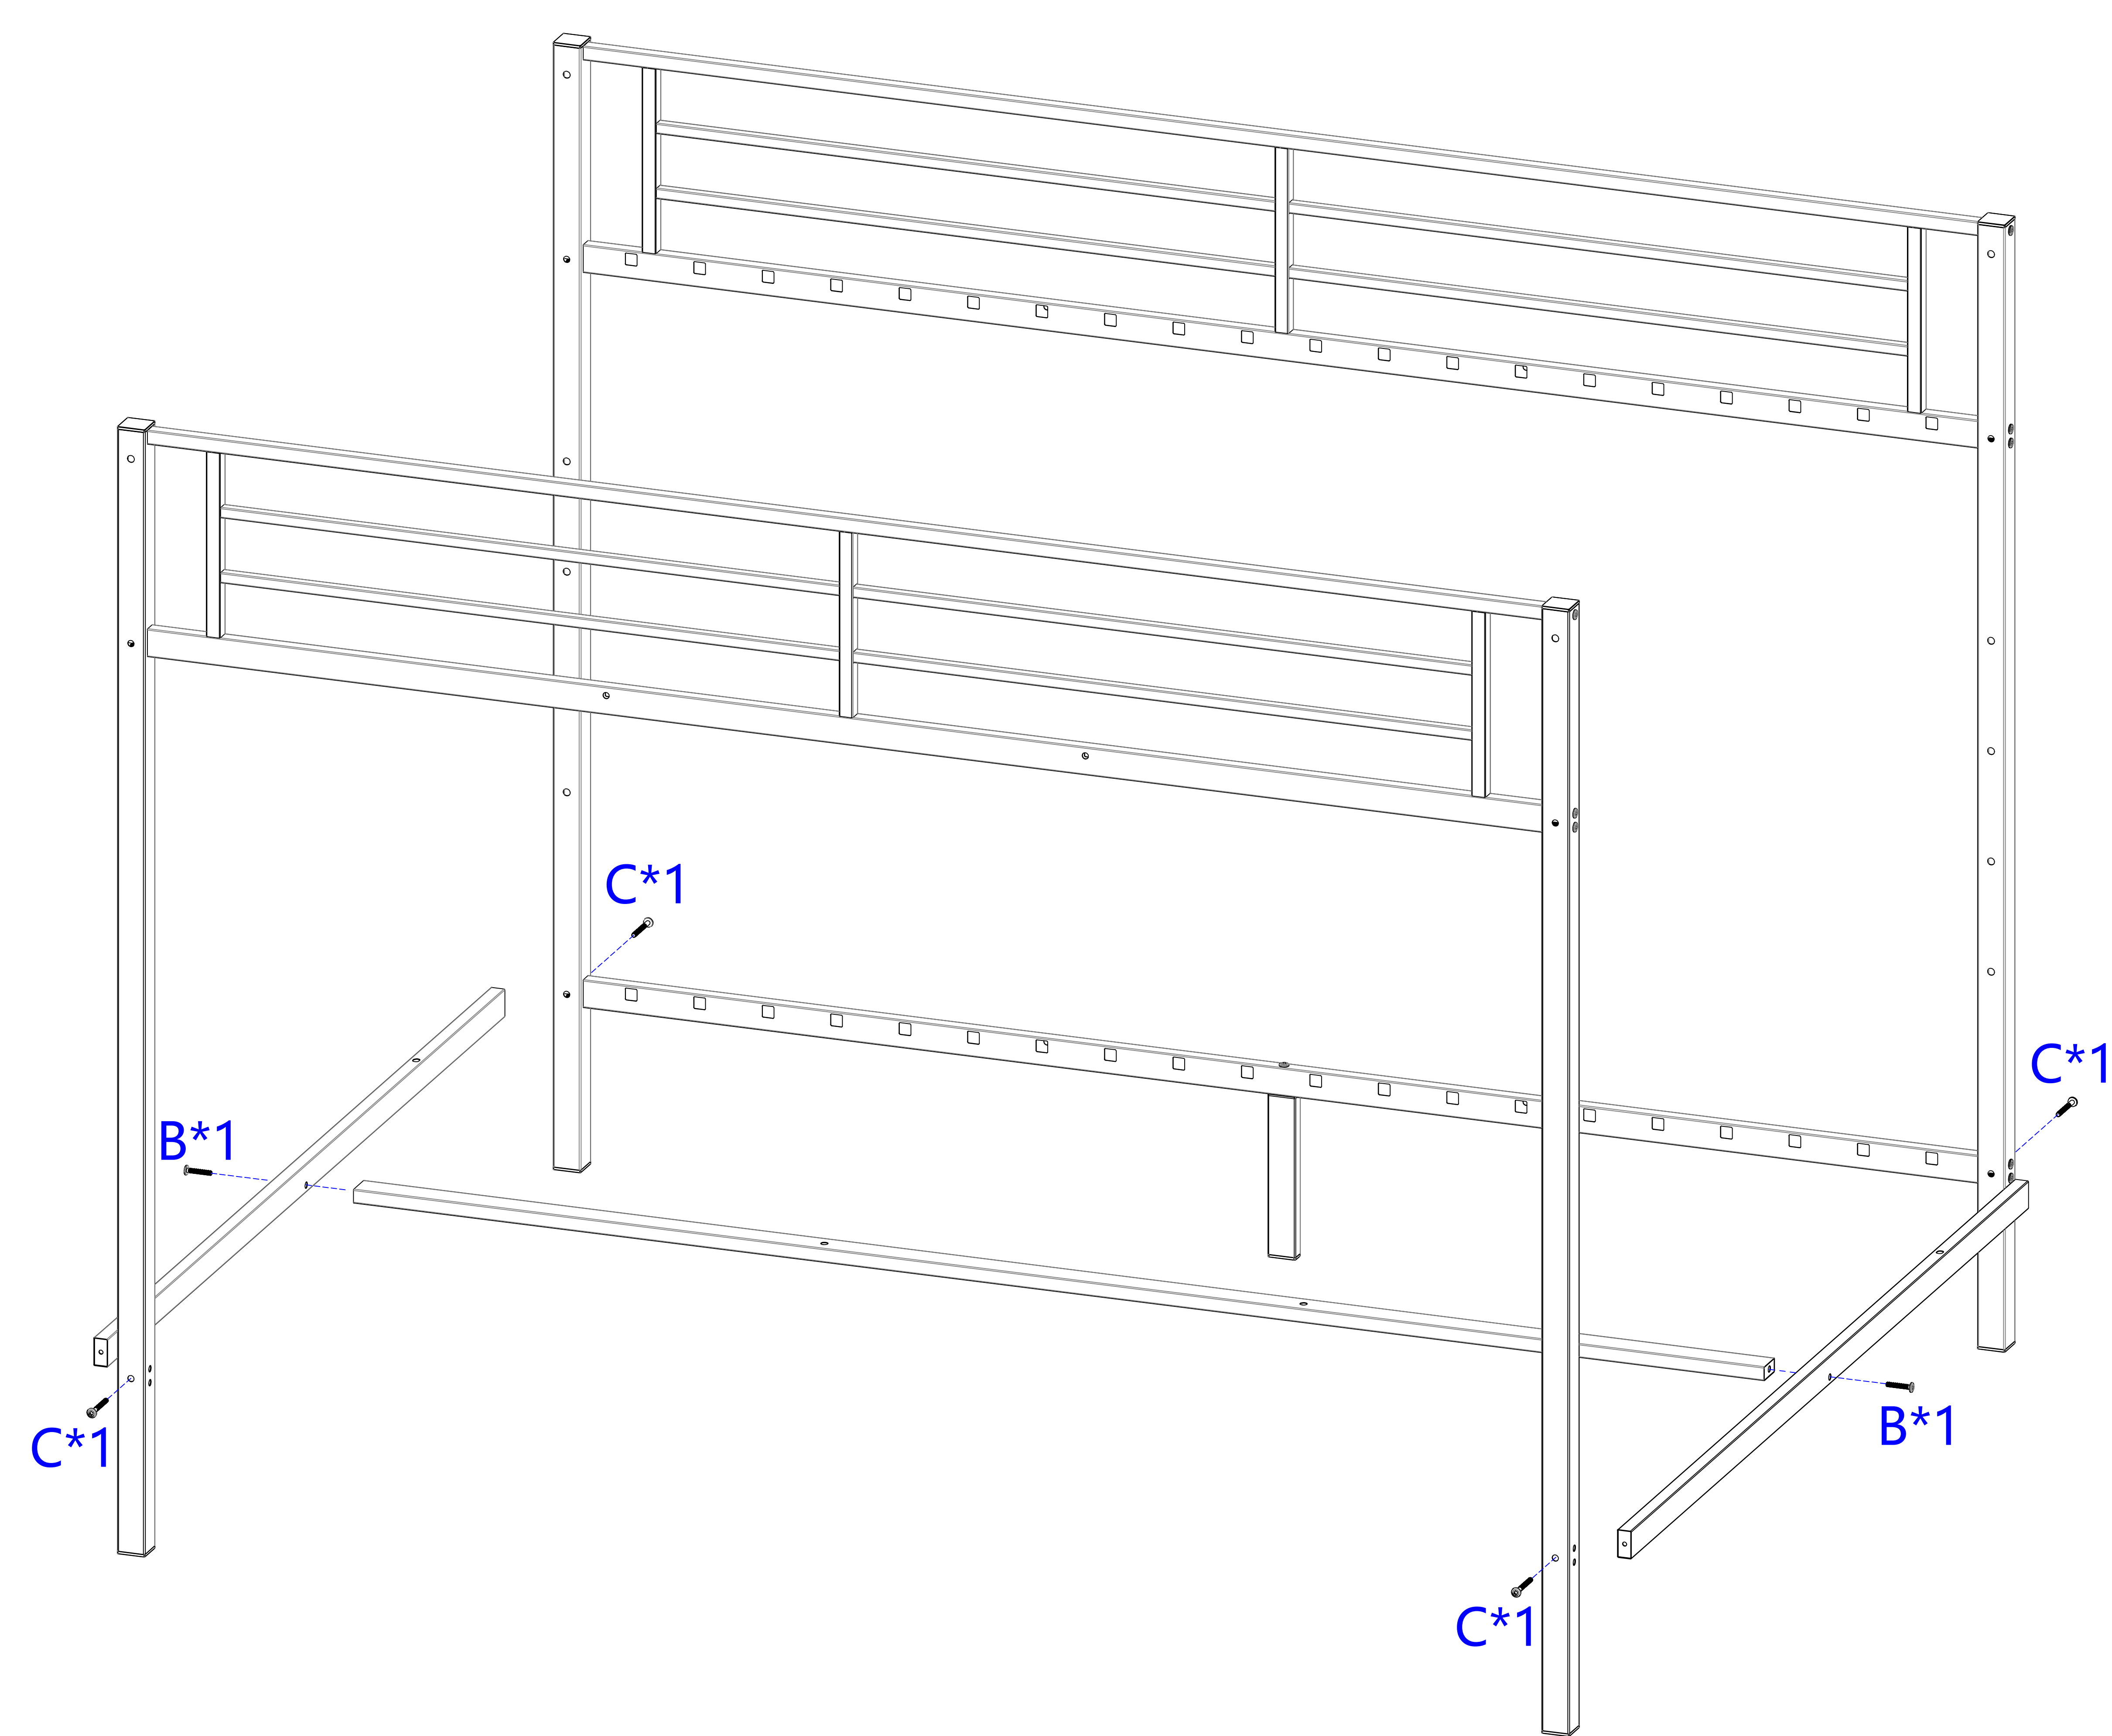
				
2-2pcs	7-1pcs	6-1pcs	13-1pcs	C 8*55-11pcs
				

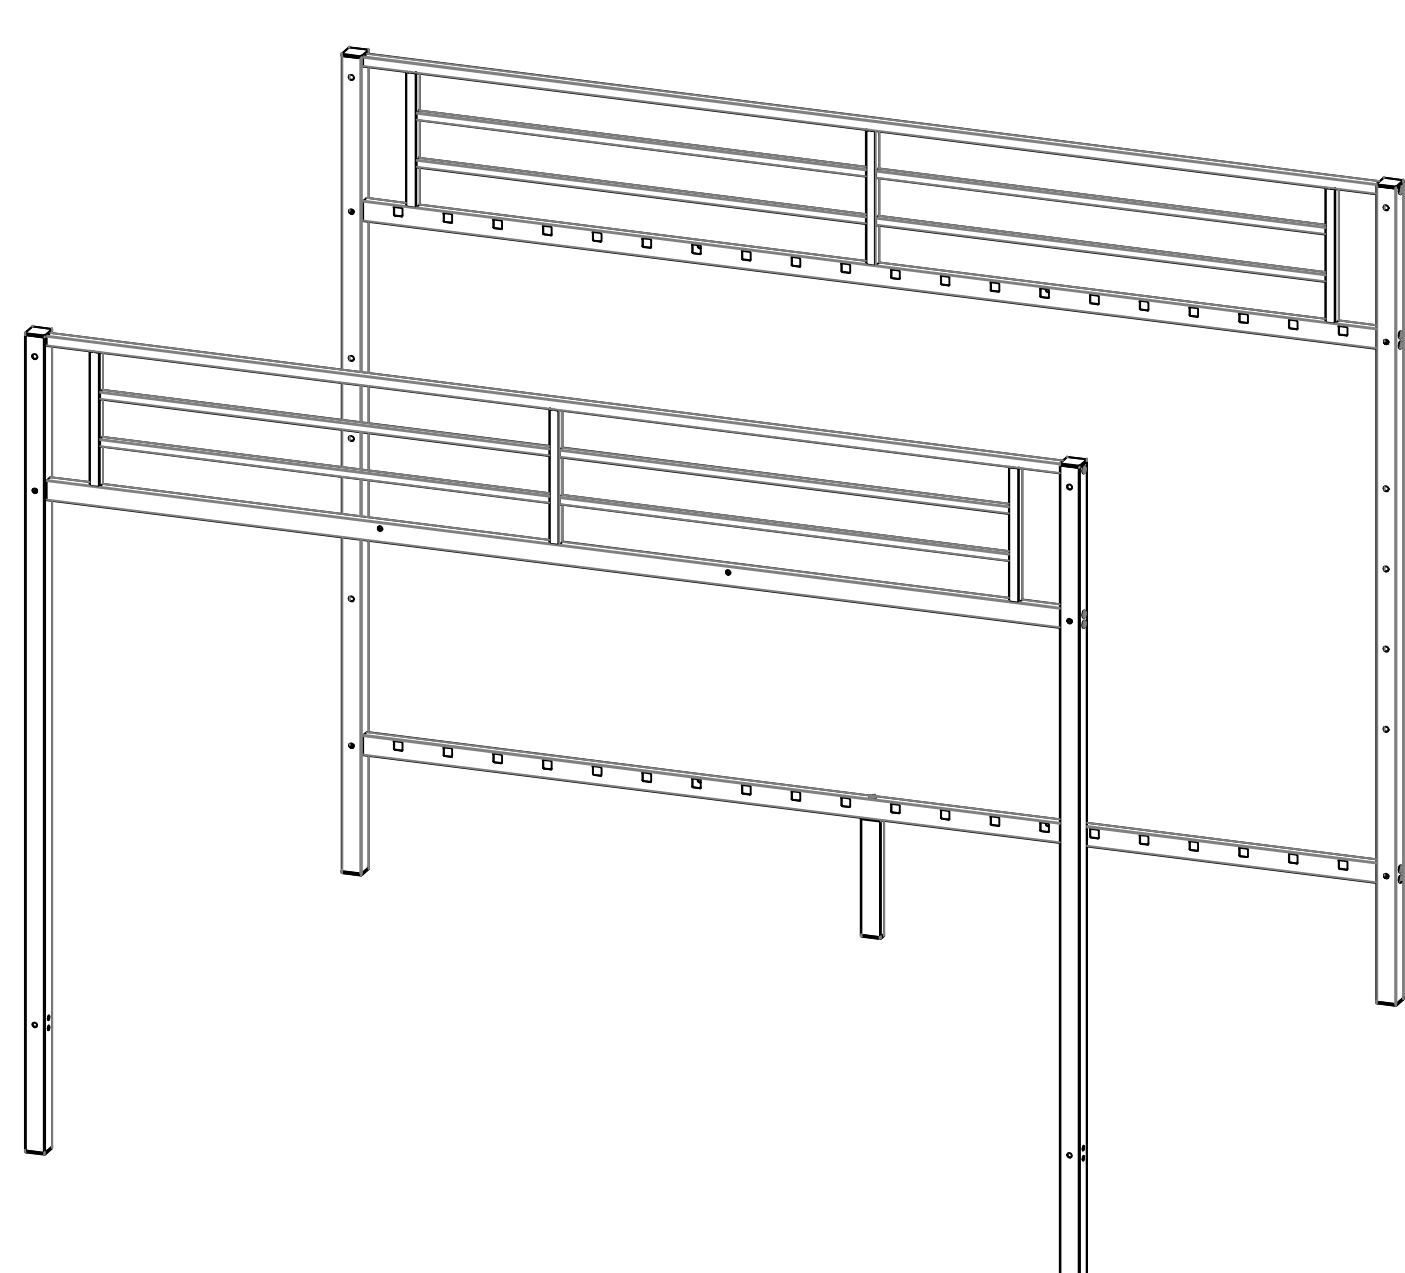
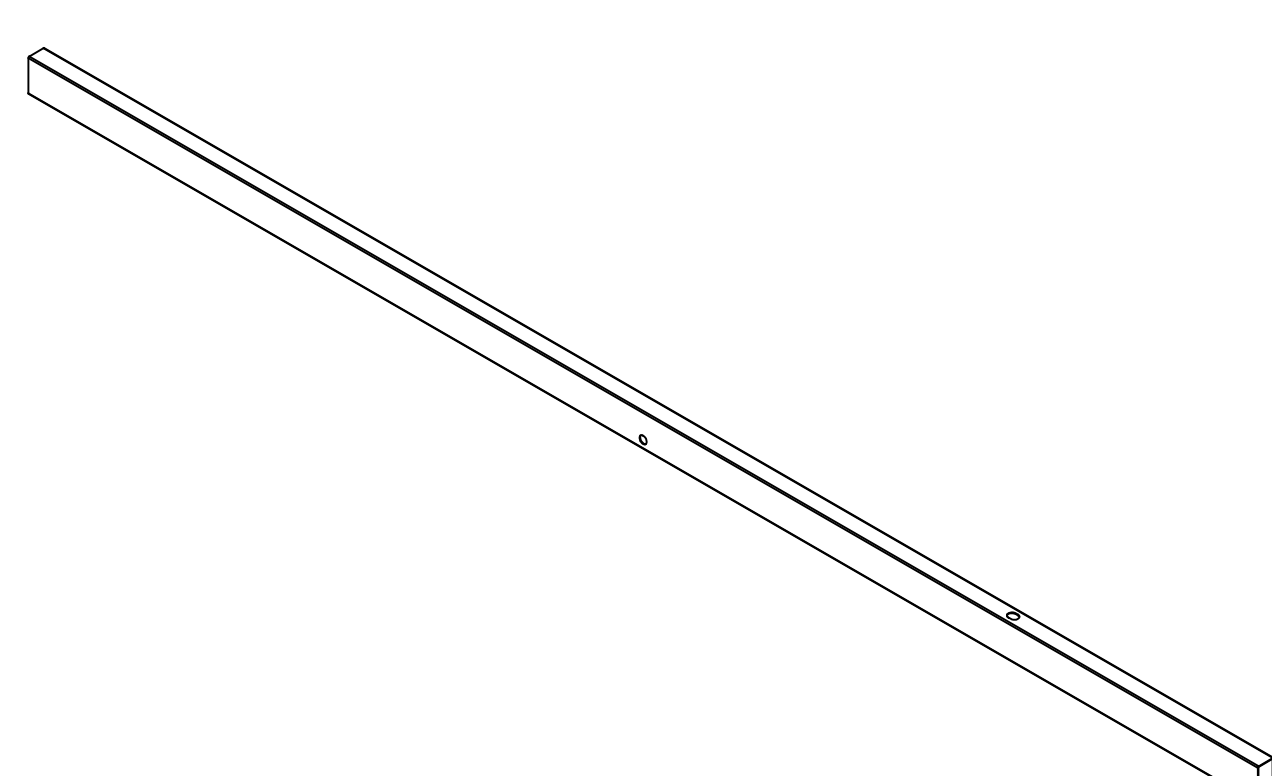
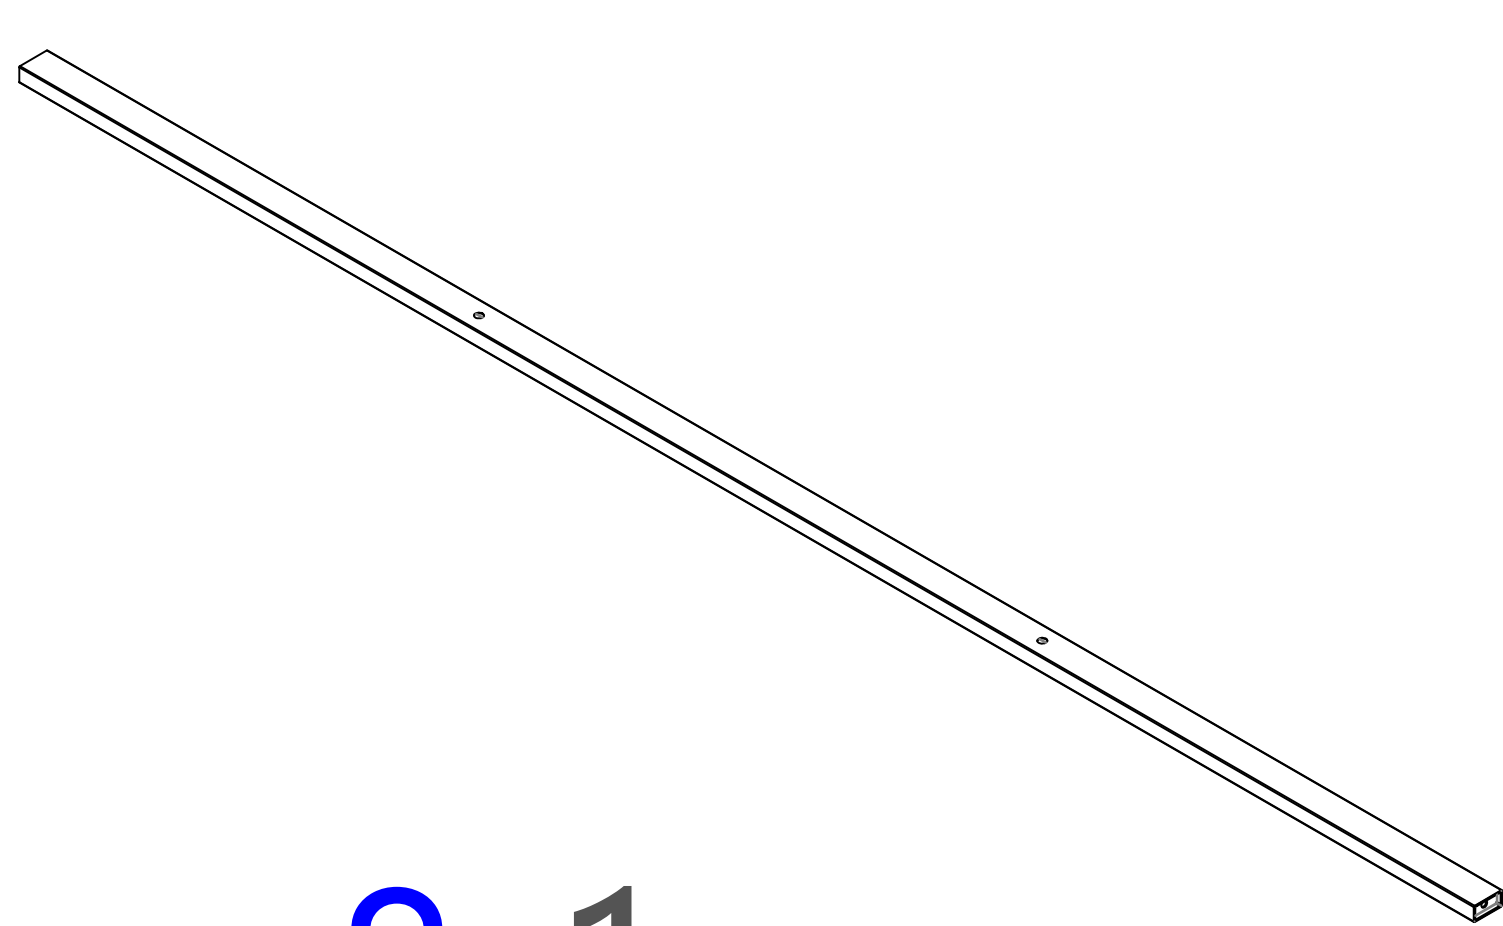
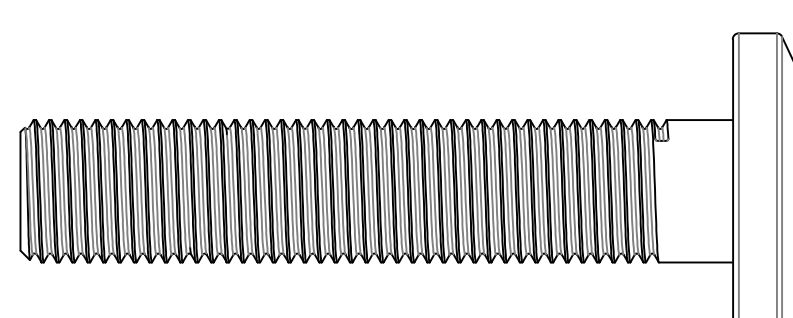
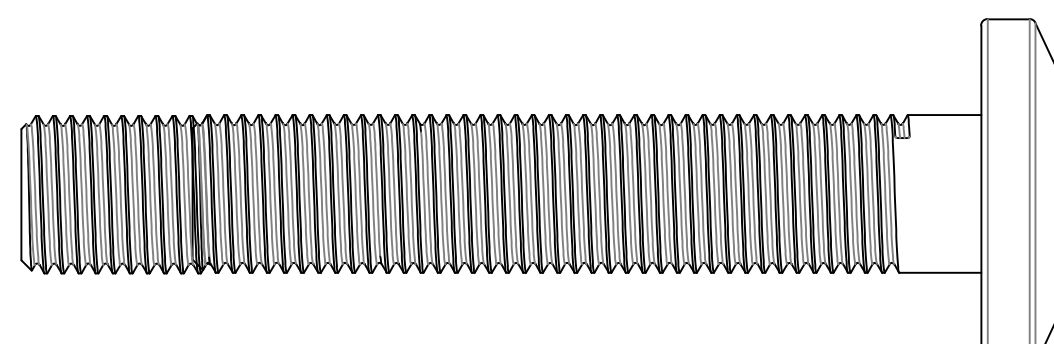
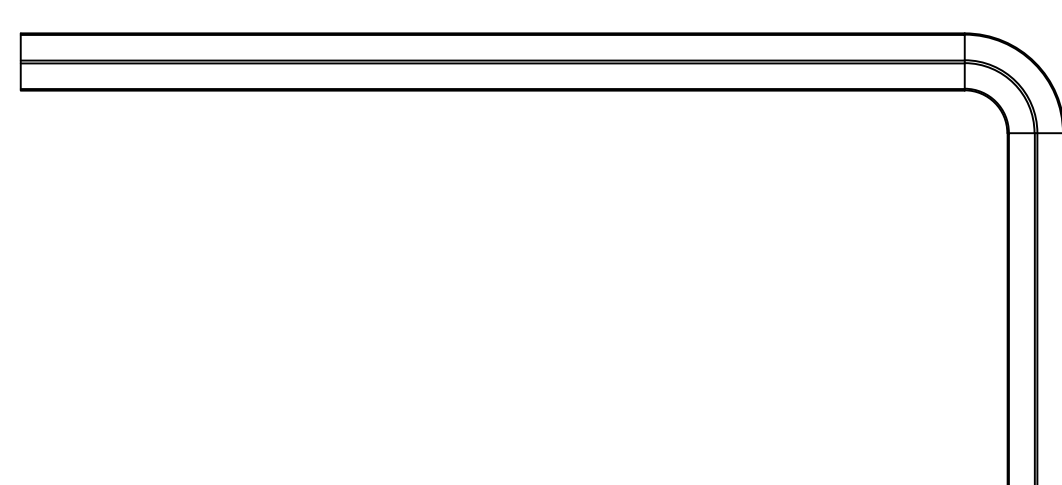
Step 2: Use hardware A and C to connect #1 and #7 together.



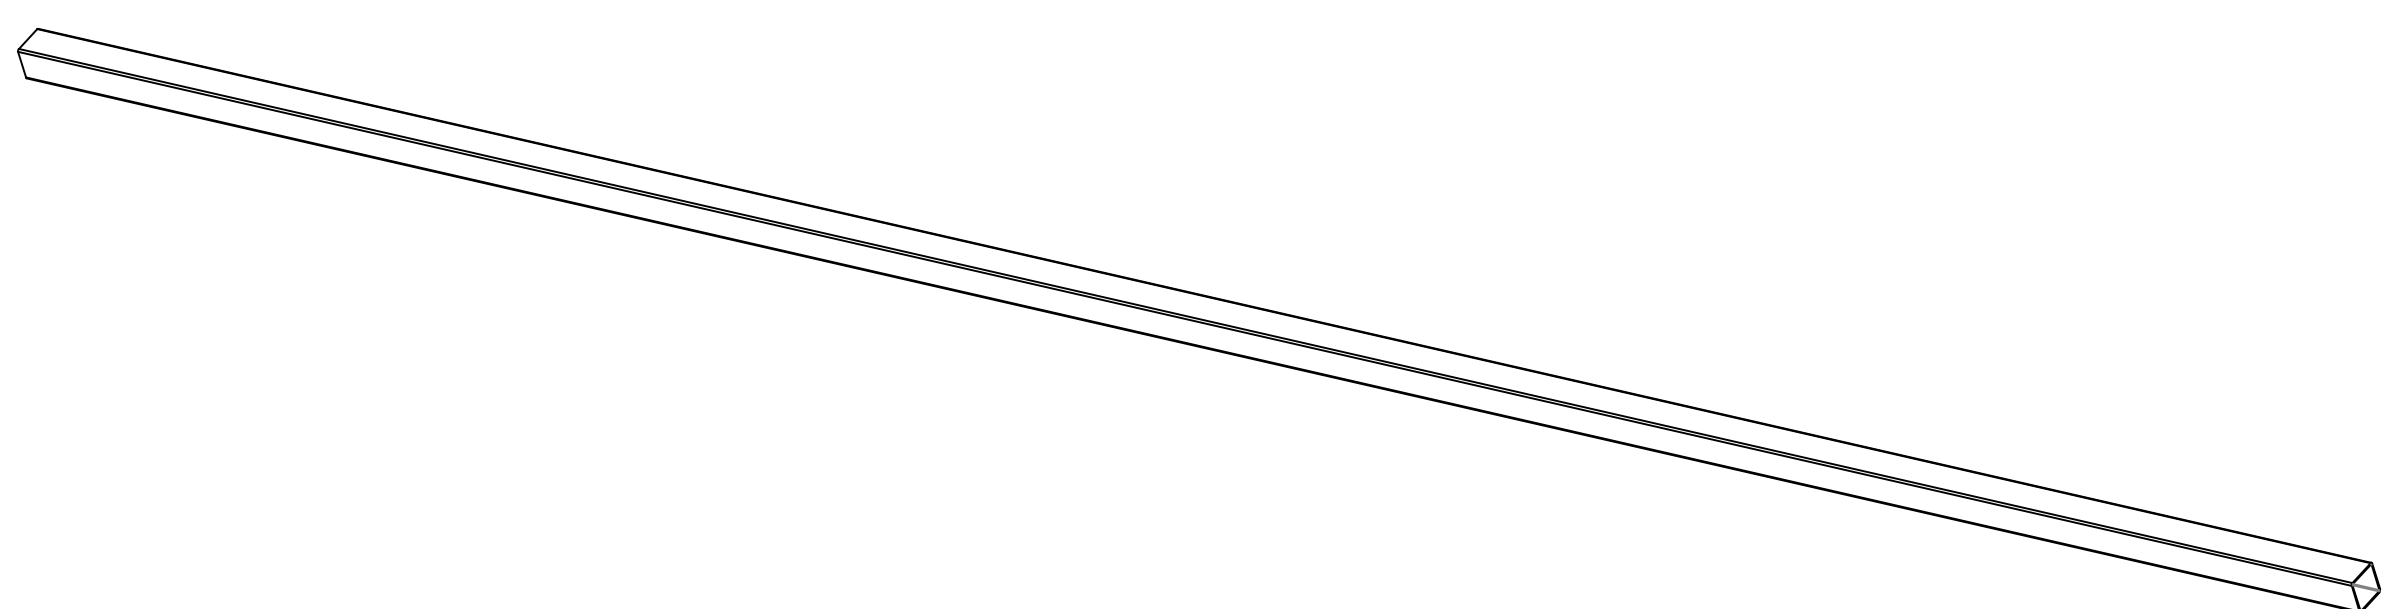
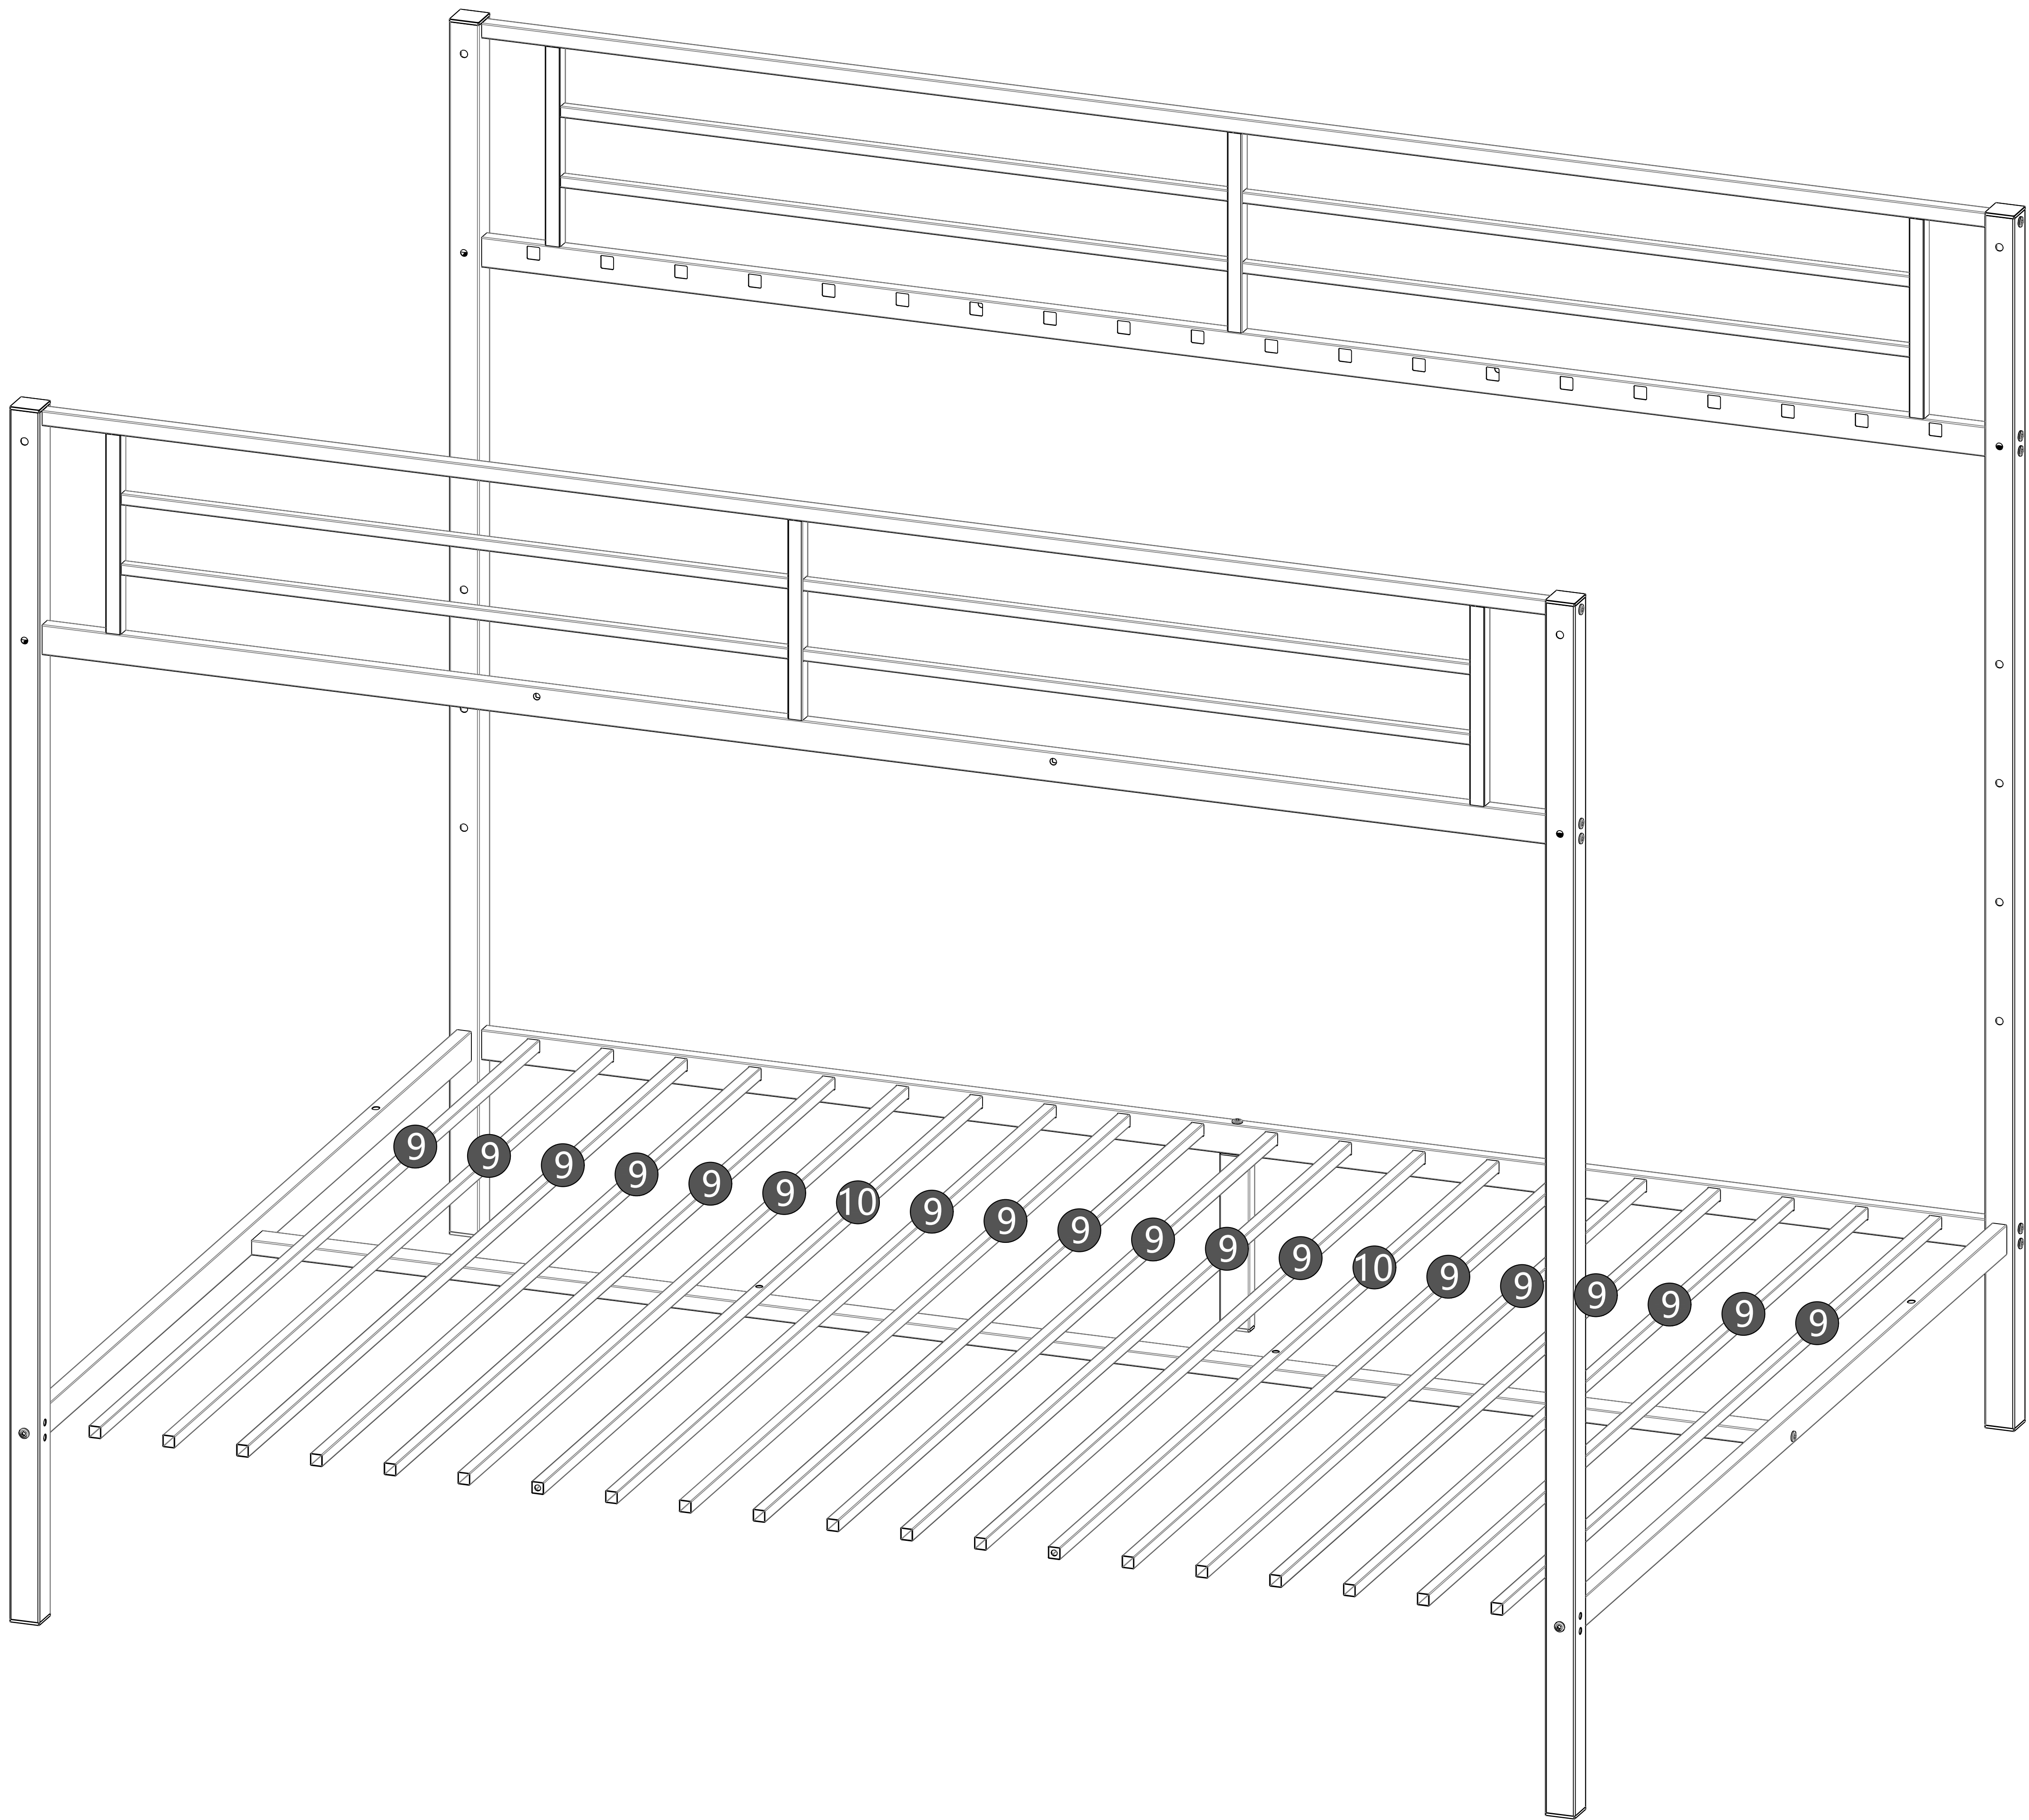
			
1-2pcs	7-1pcs	C 8*55-6pcs	A

Step 3: Use hardware A, C, and B to connect #3 and #8 to the front part.

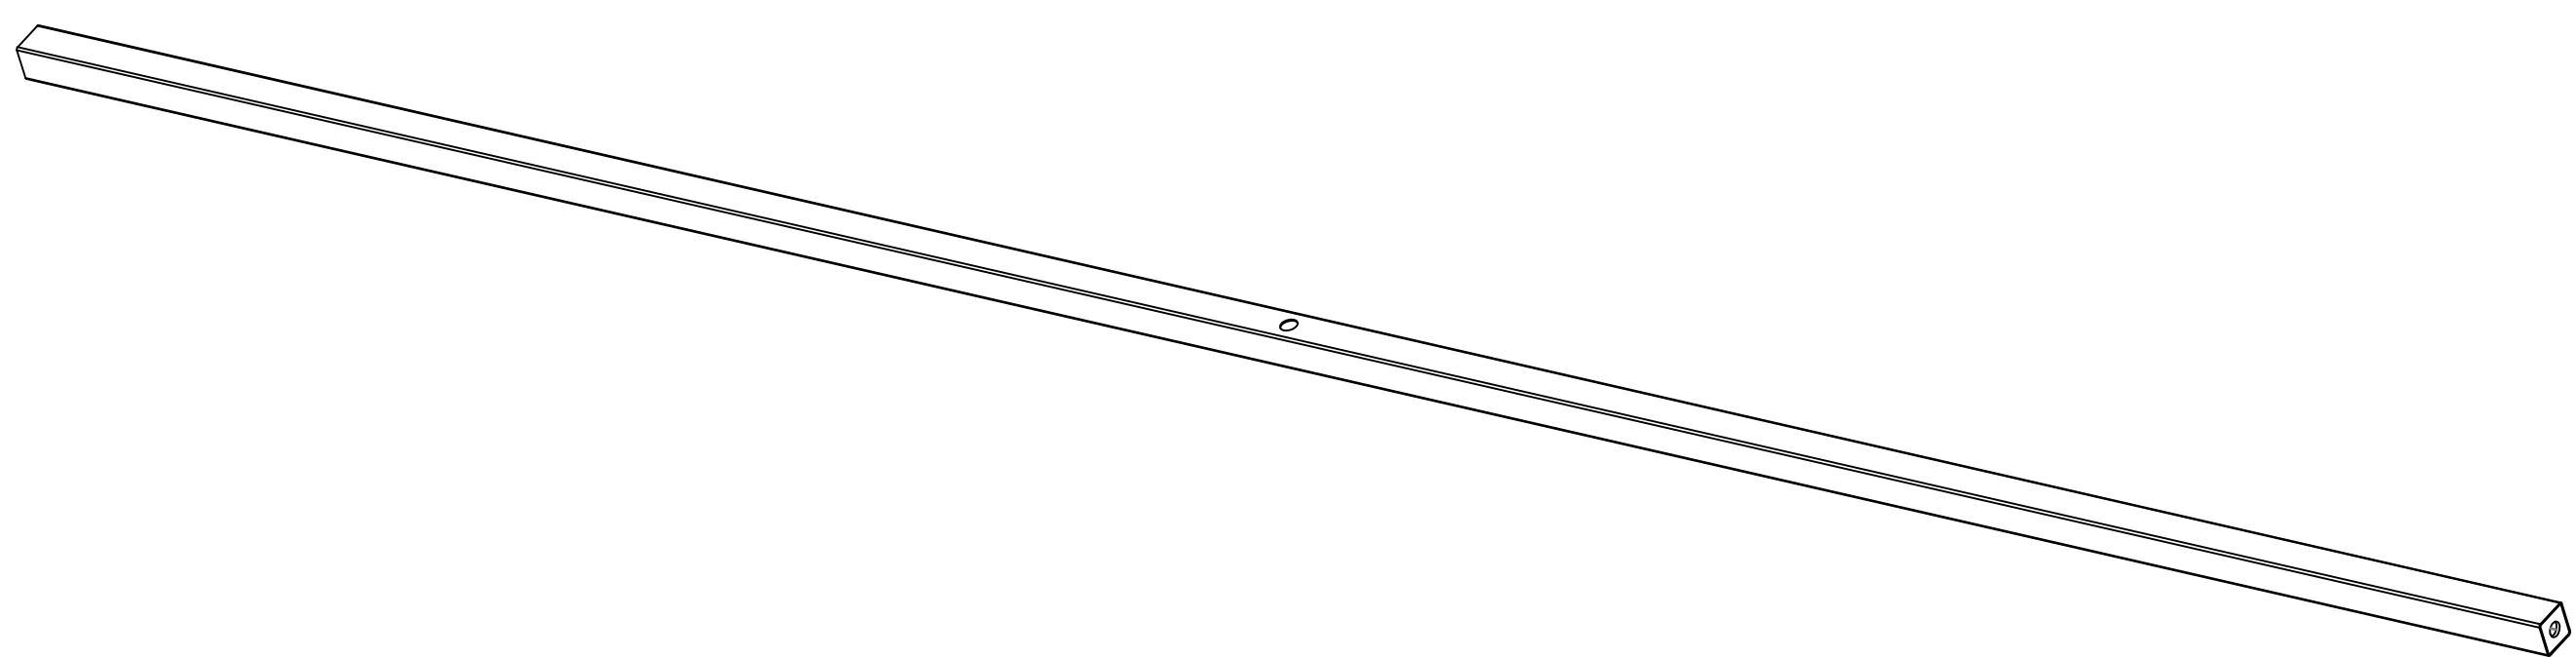


	 3-2pcs	 8-1pcs	 B 8*35-2pcs	 C 8*55-4pcs	 A
---	---	--	--	--	--

Step 4: Use #9 and #10 to insert the corresponding square hole of #6.

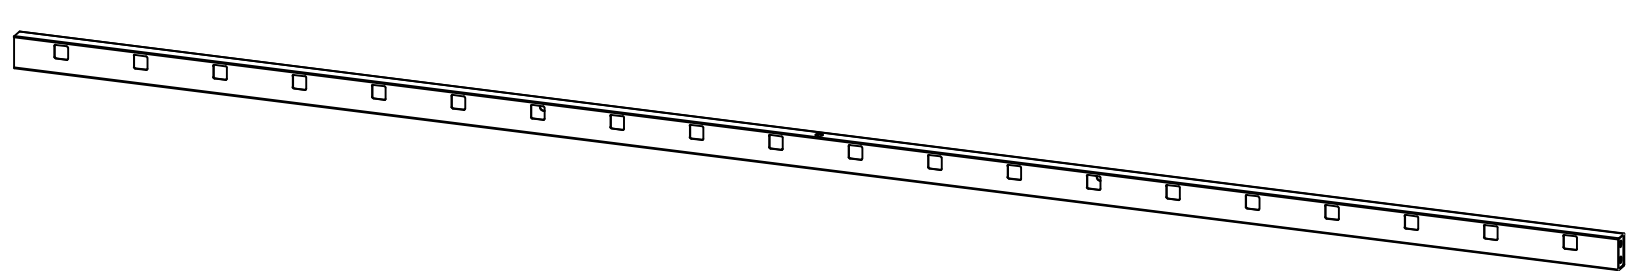
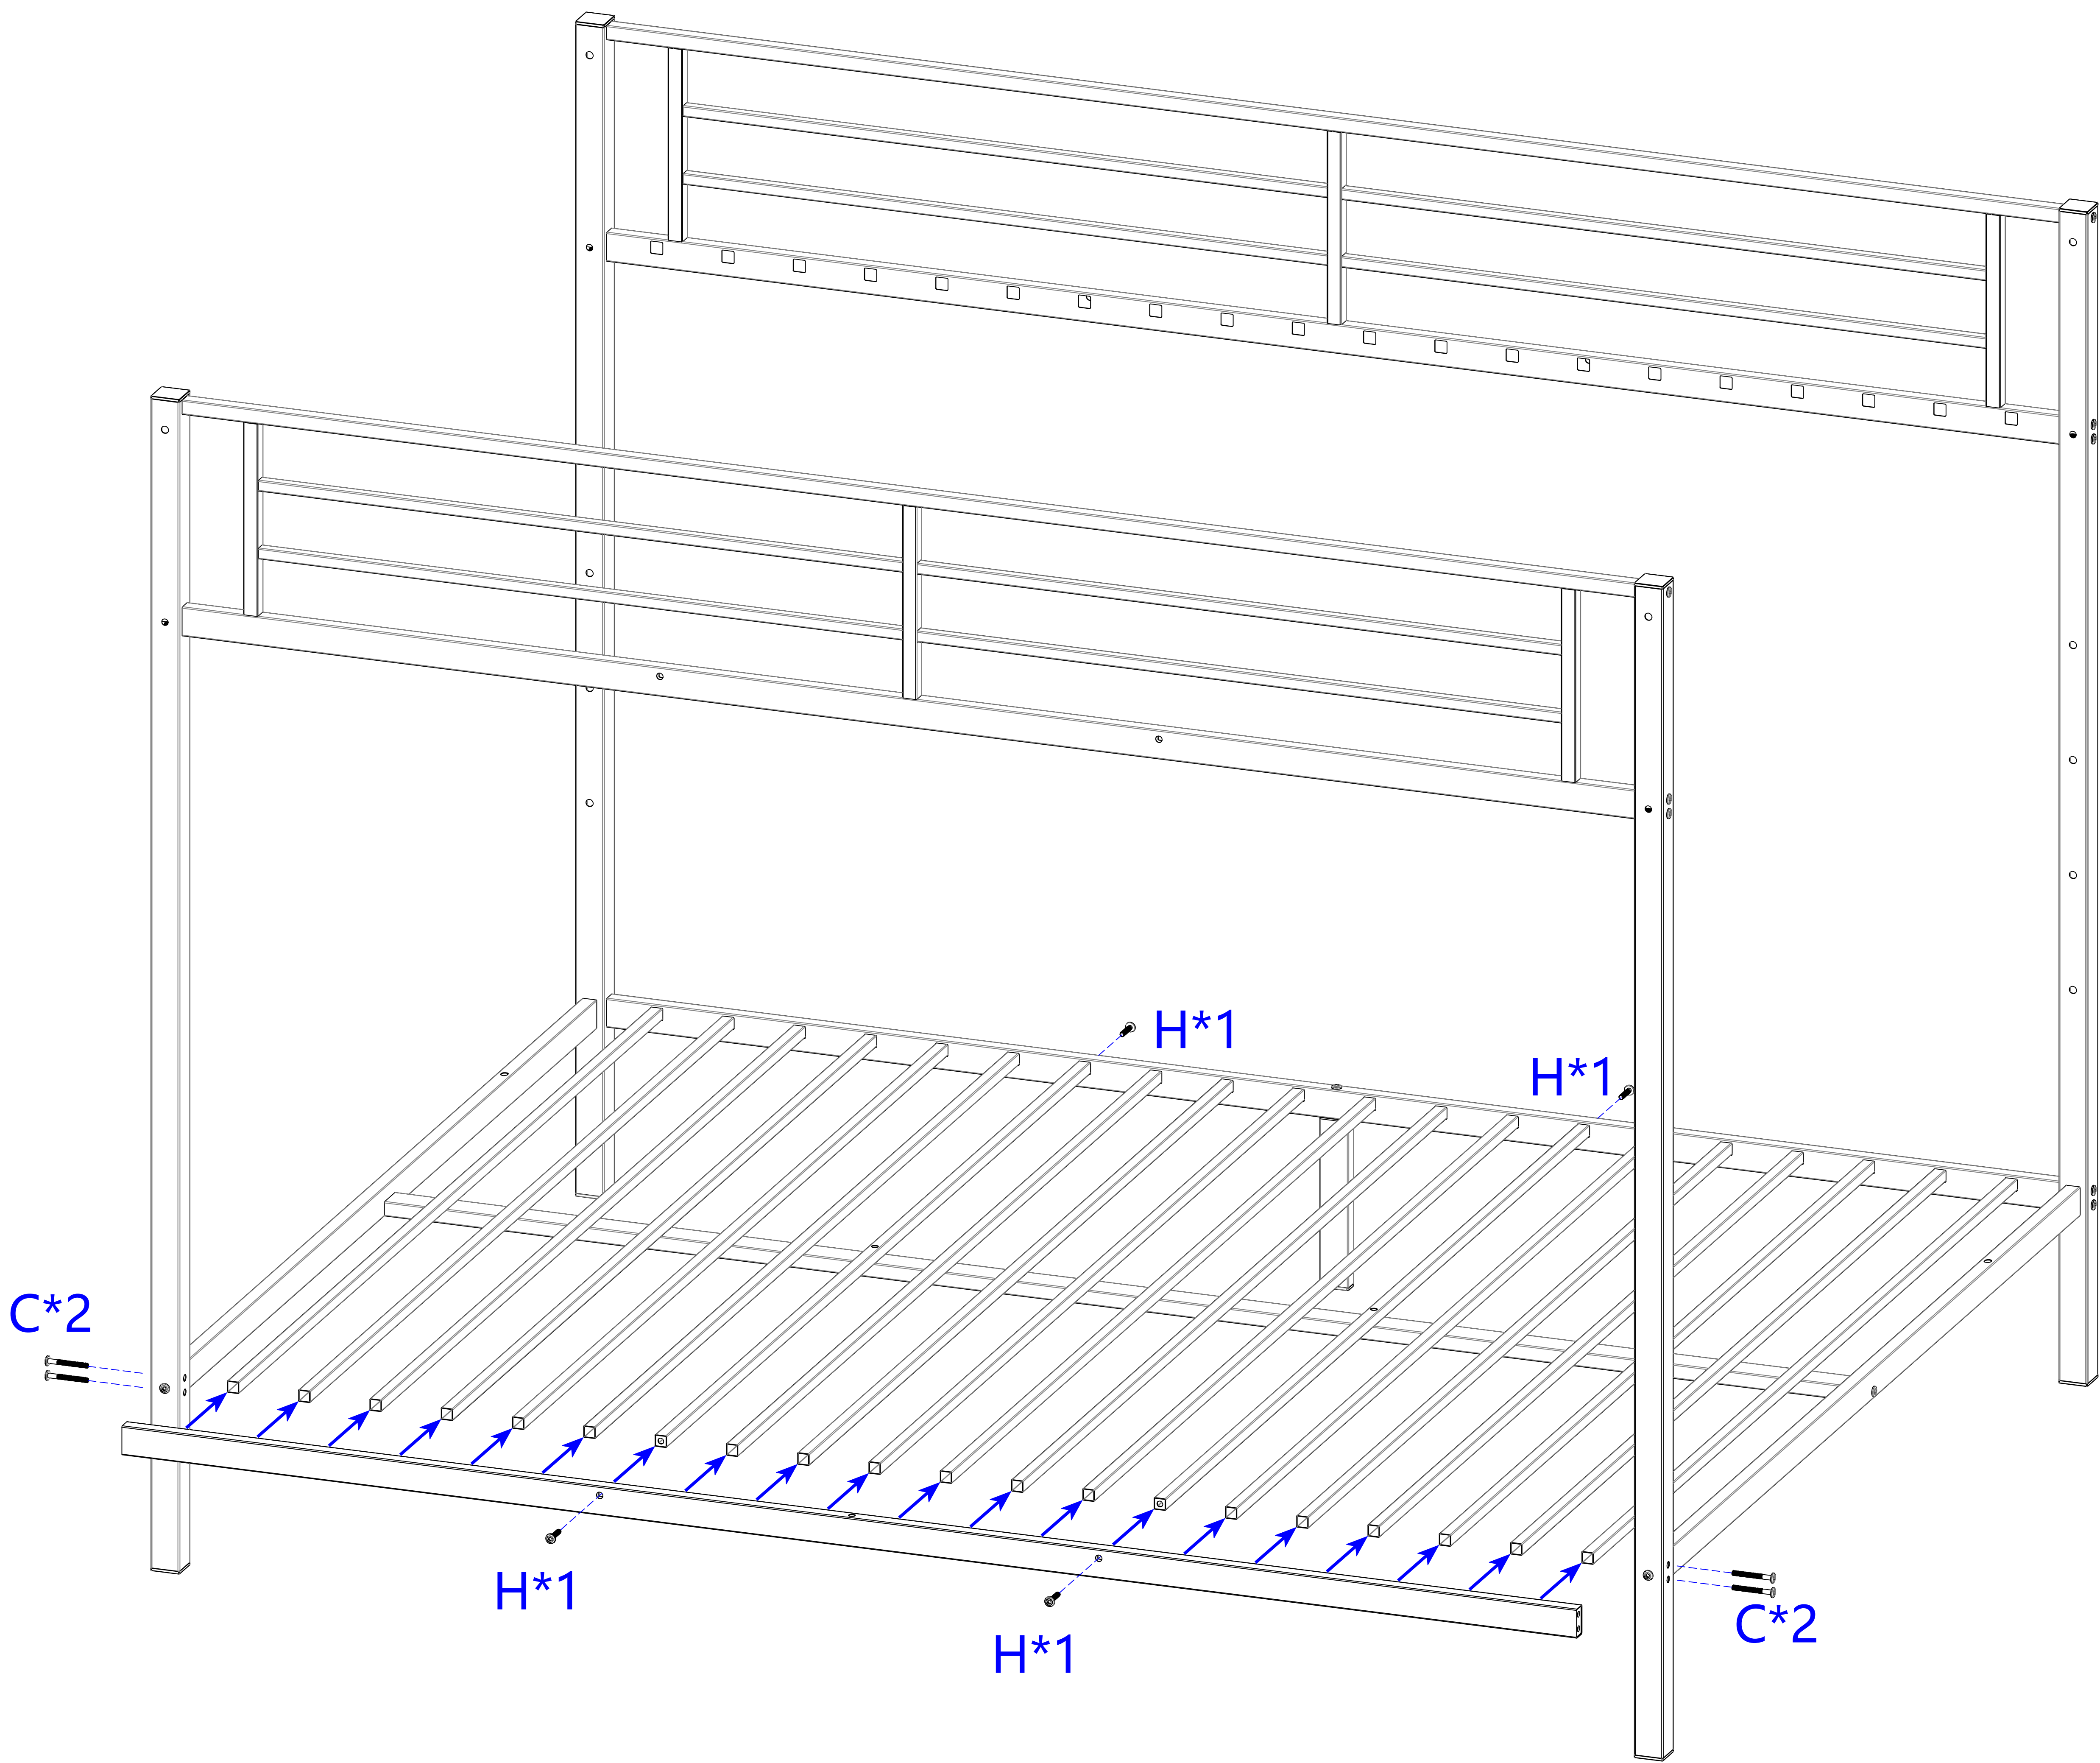


9-18pcs

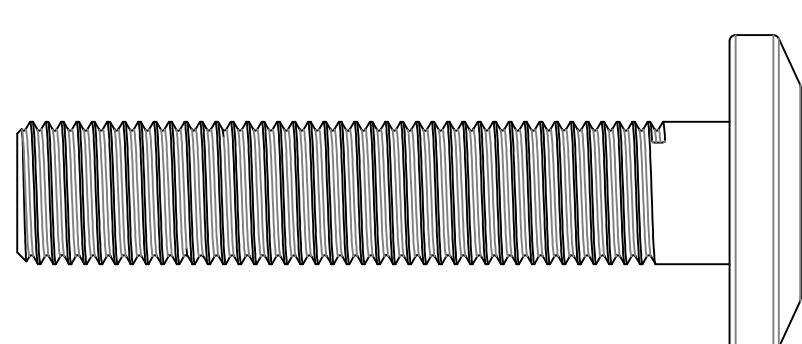


10-2pcs

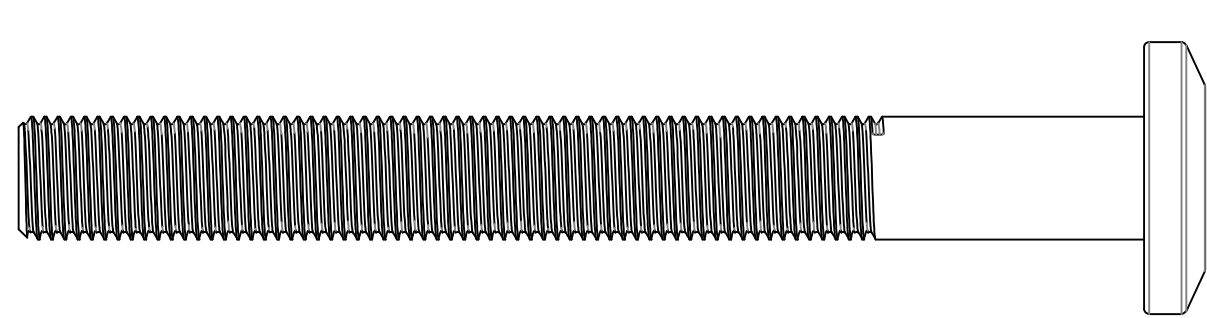
Step 5: Use hardware A, H, and C to connect #6 together.



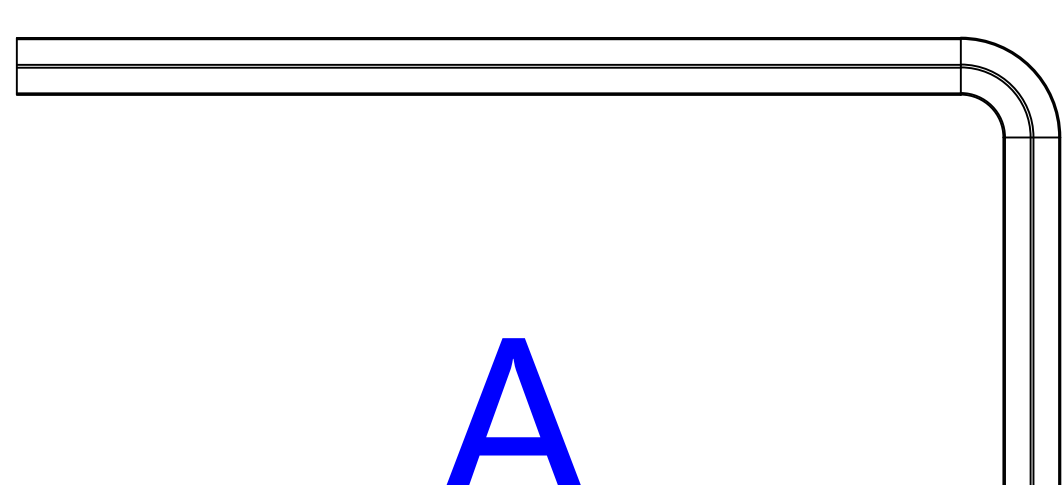
6-1pcs



H 8*30-4pcs

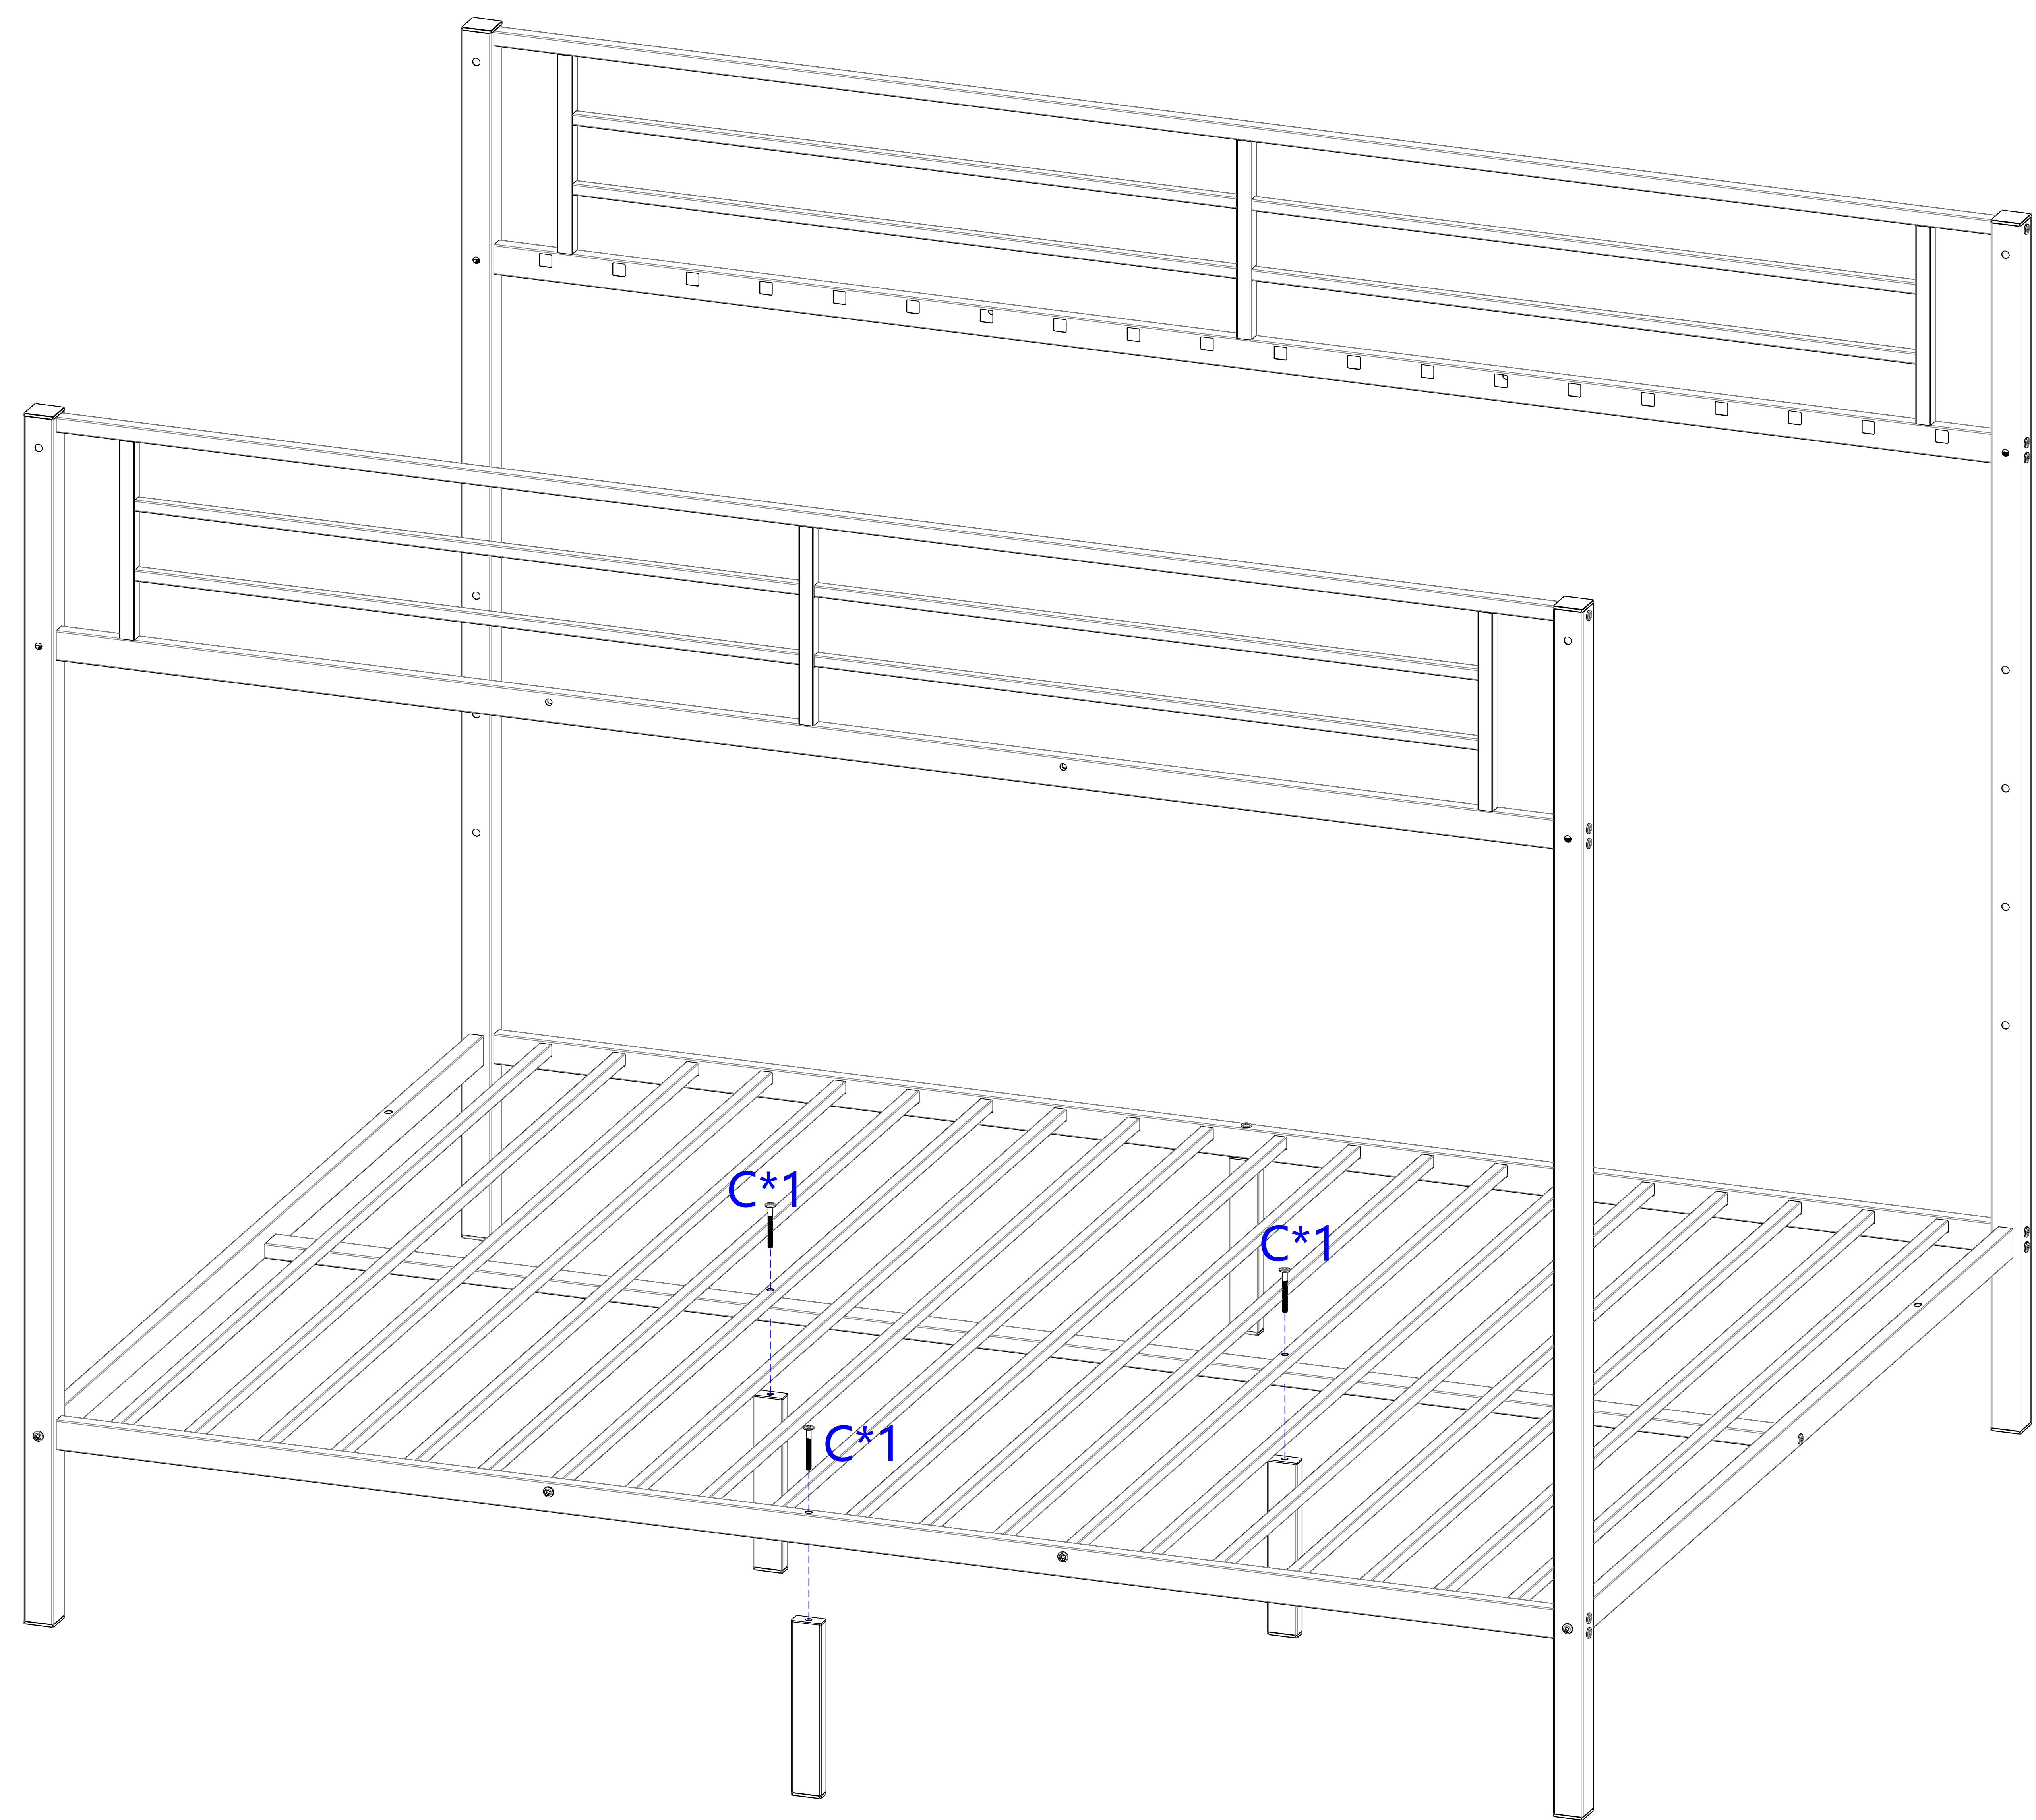


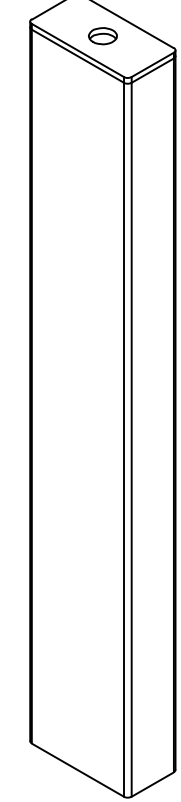
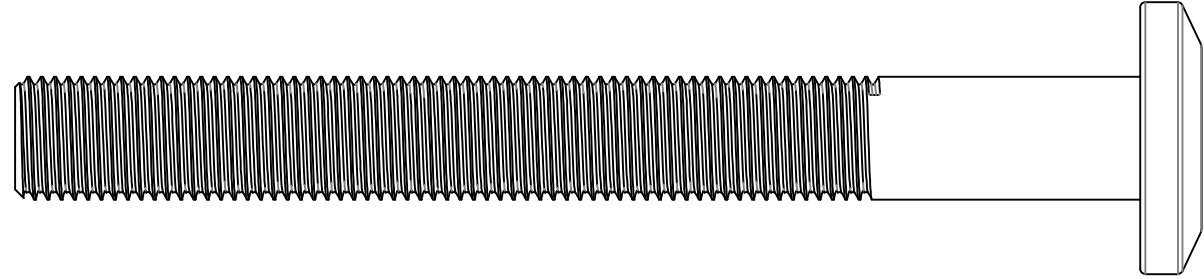
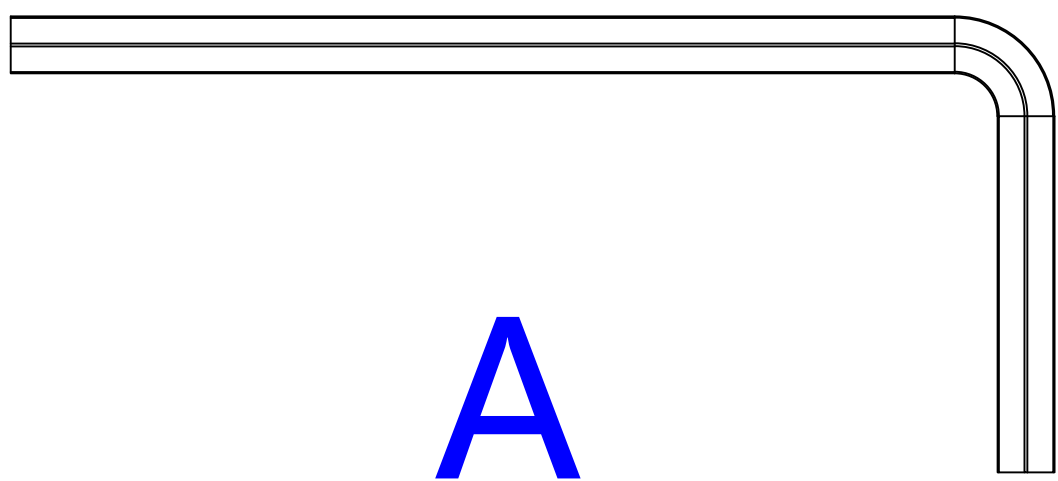
C 8*55-4pcs



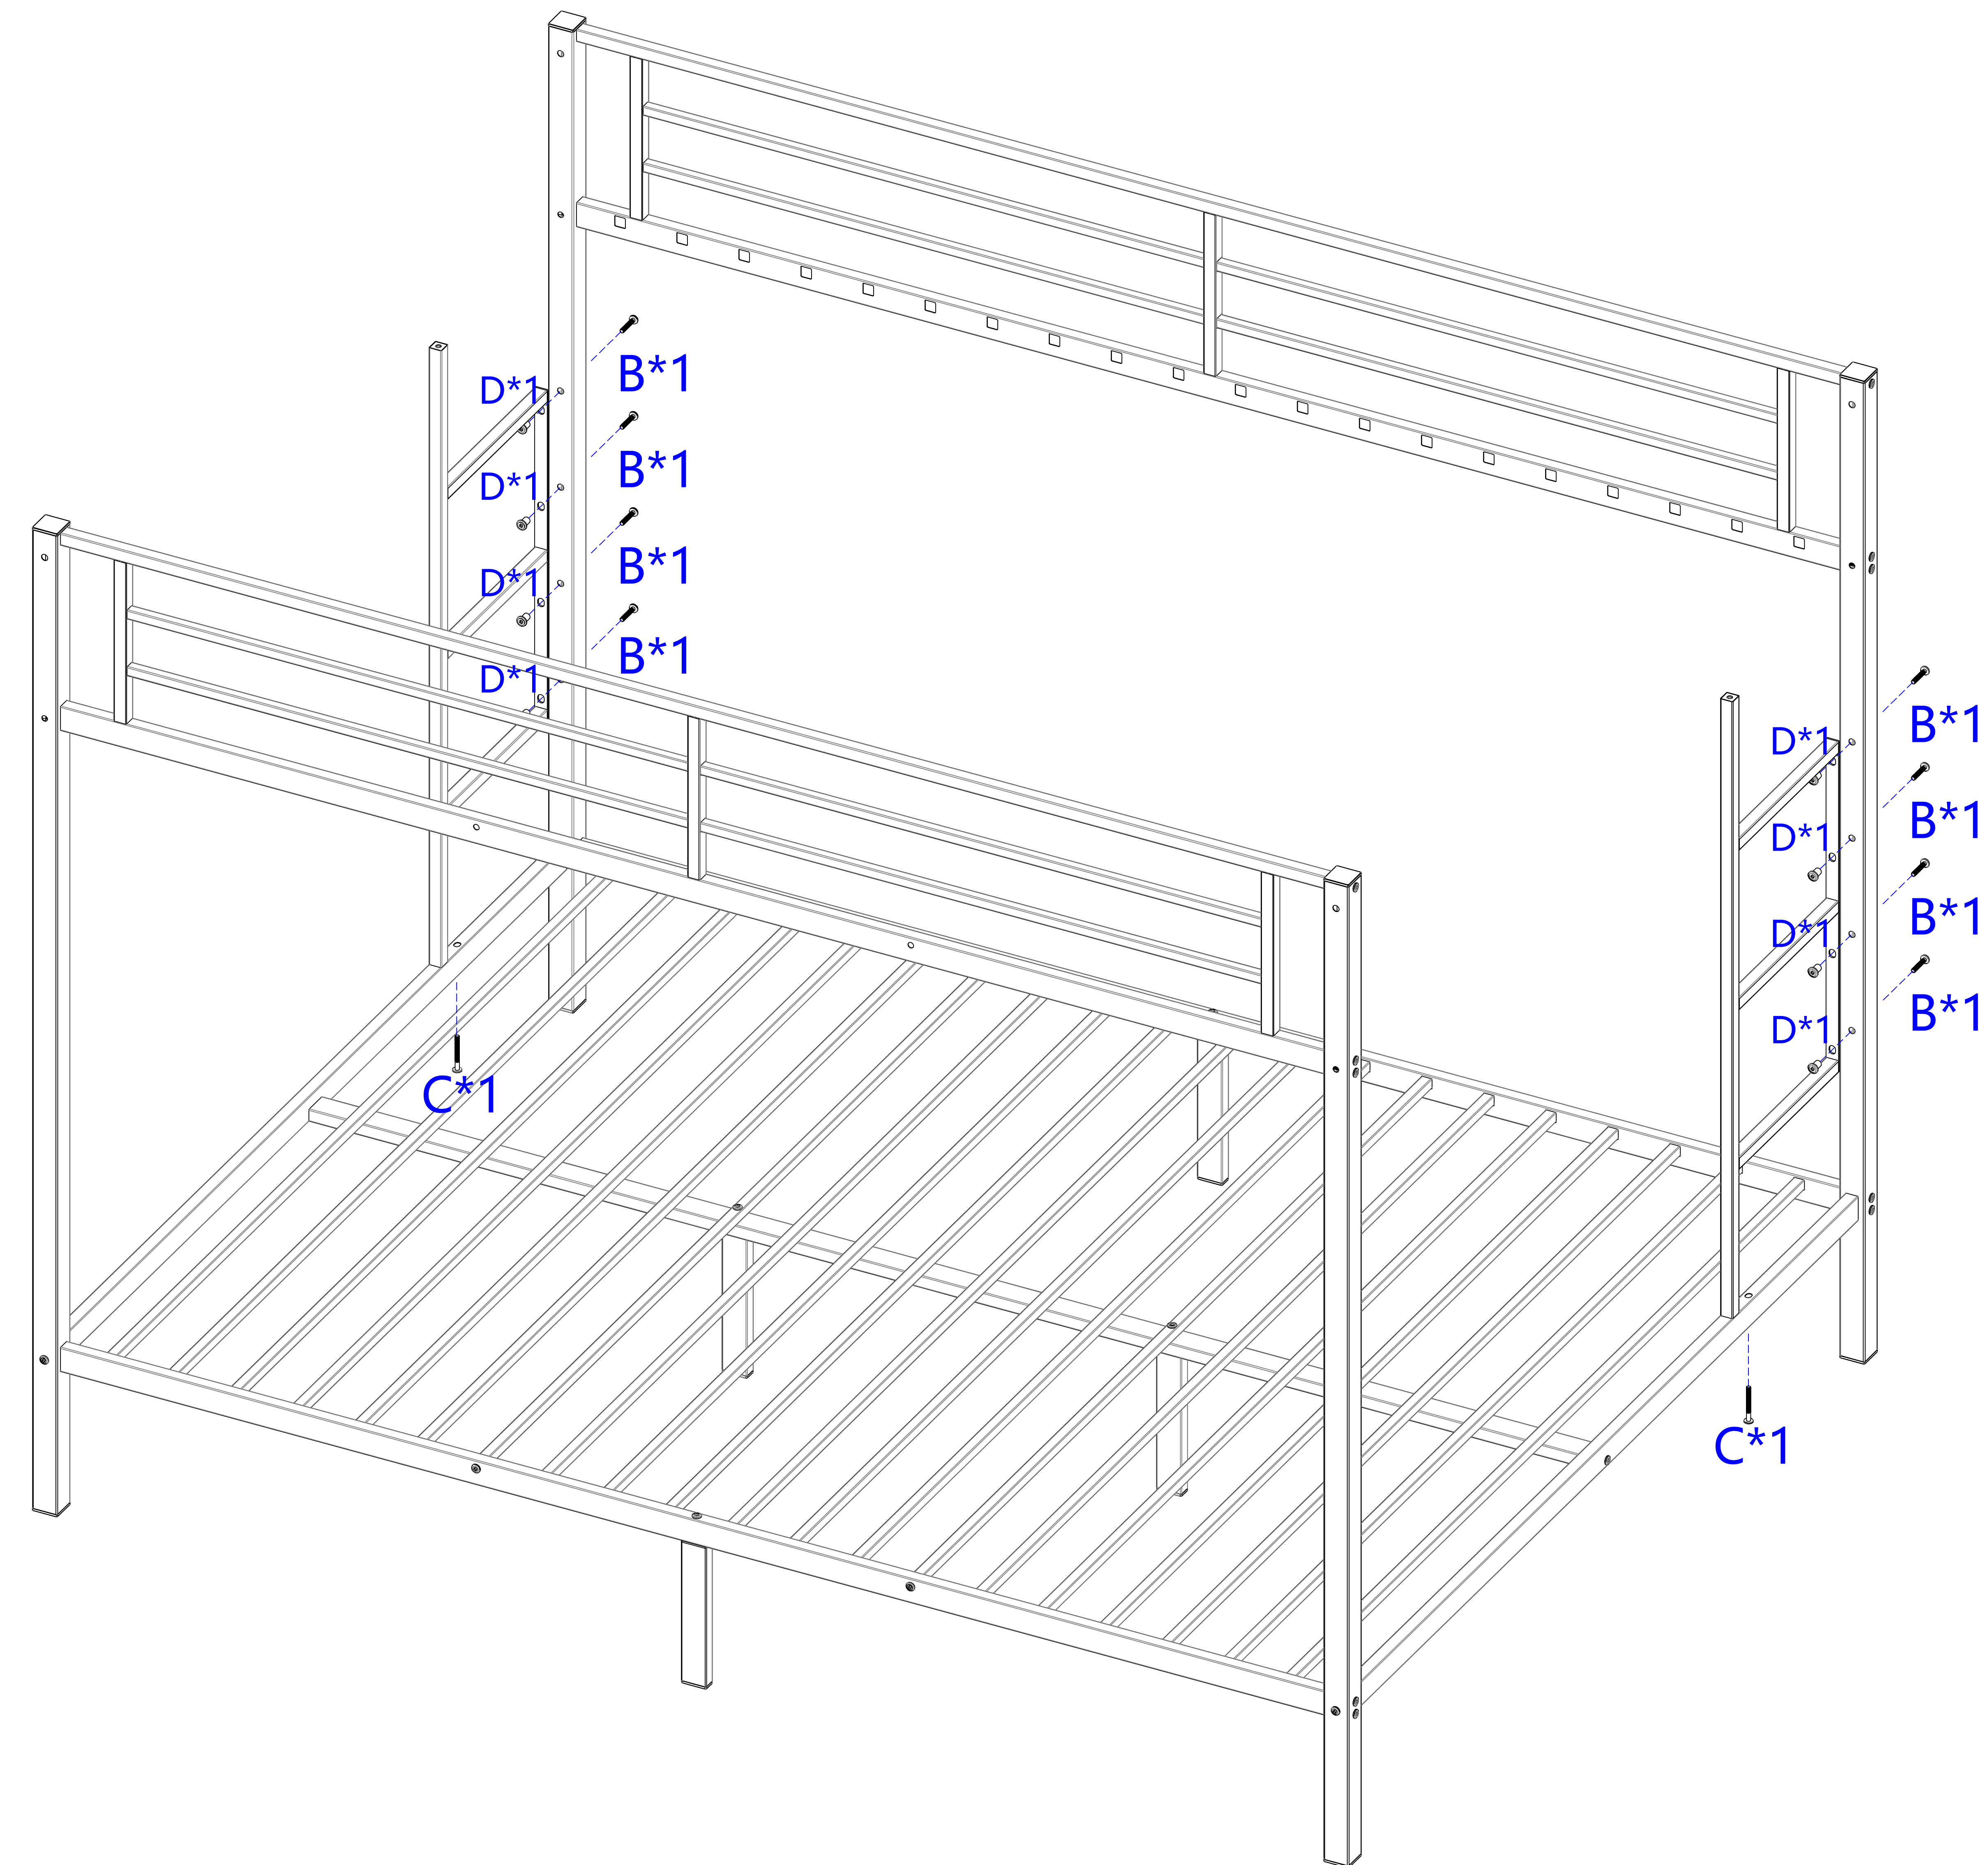
A

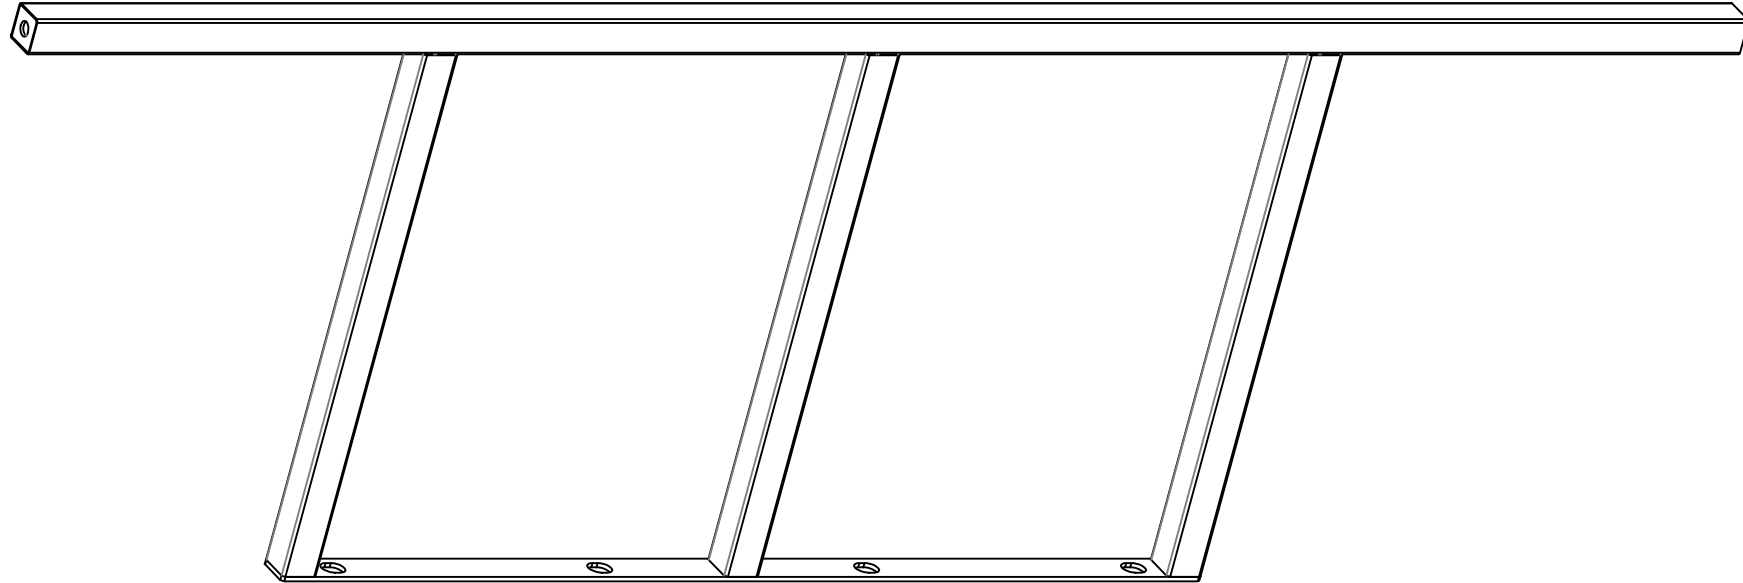
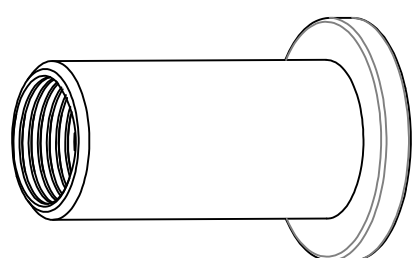
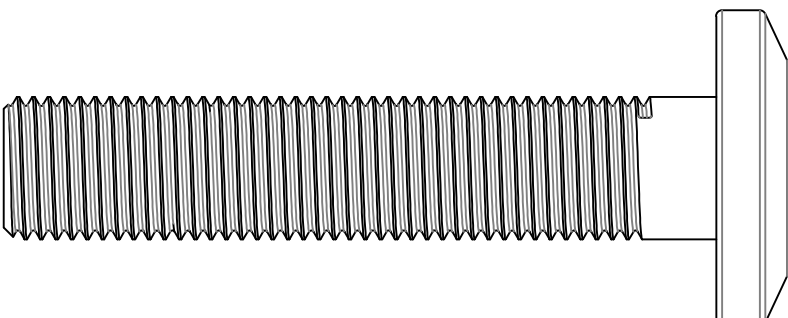
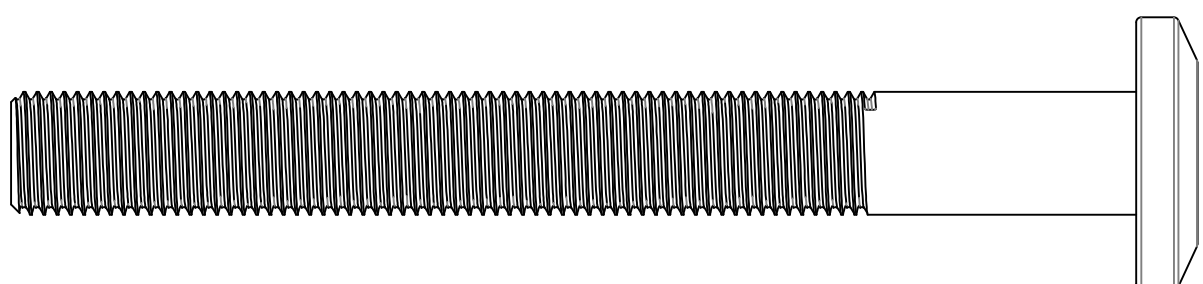
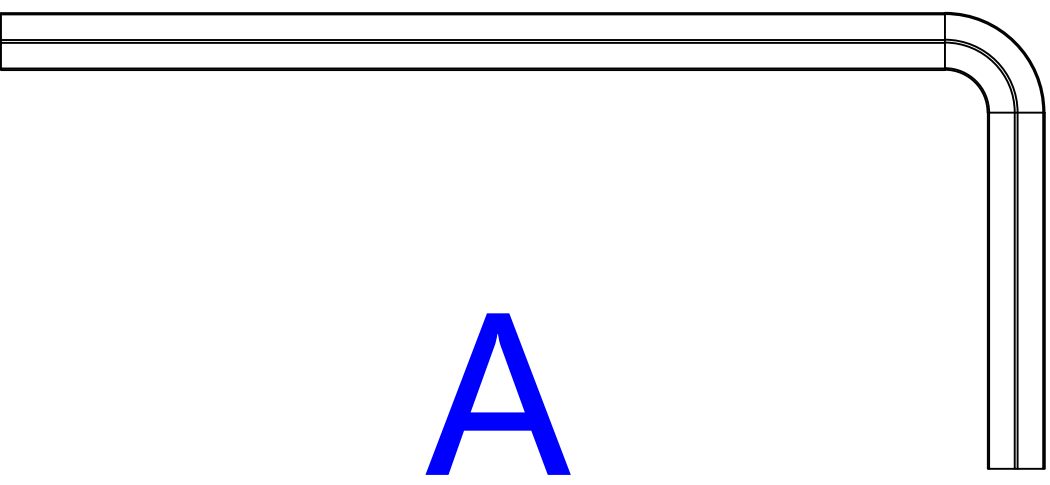
Step 6: Use hardware A and C to connect #13 together.



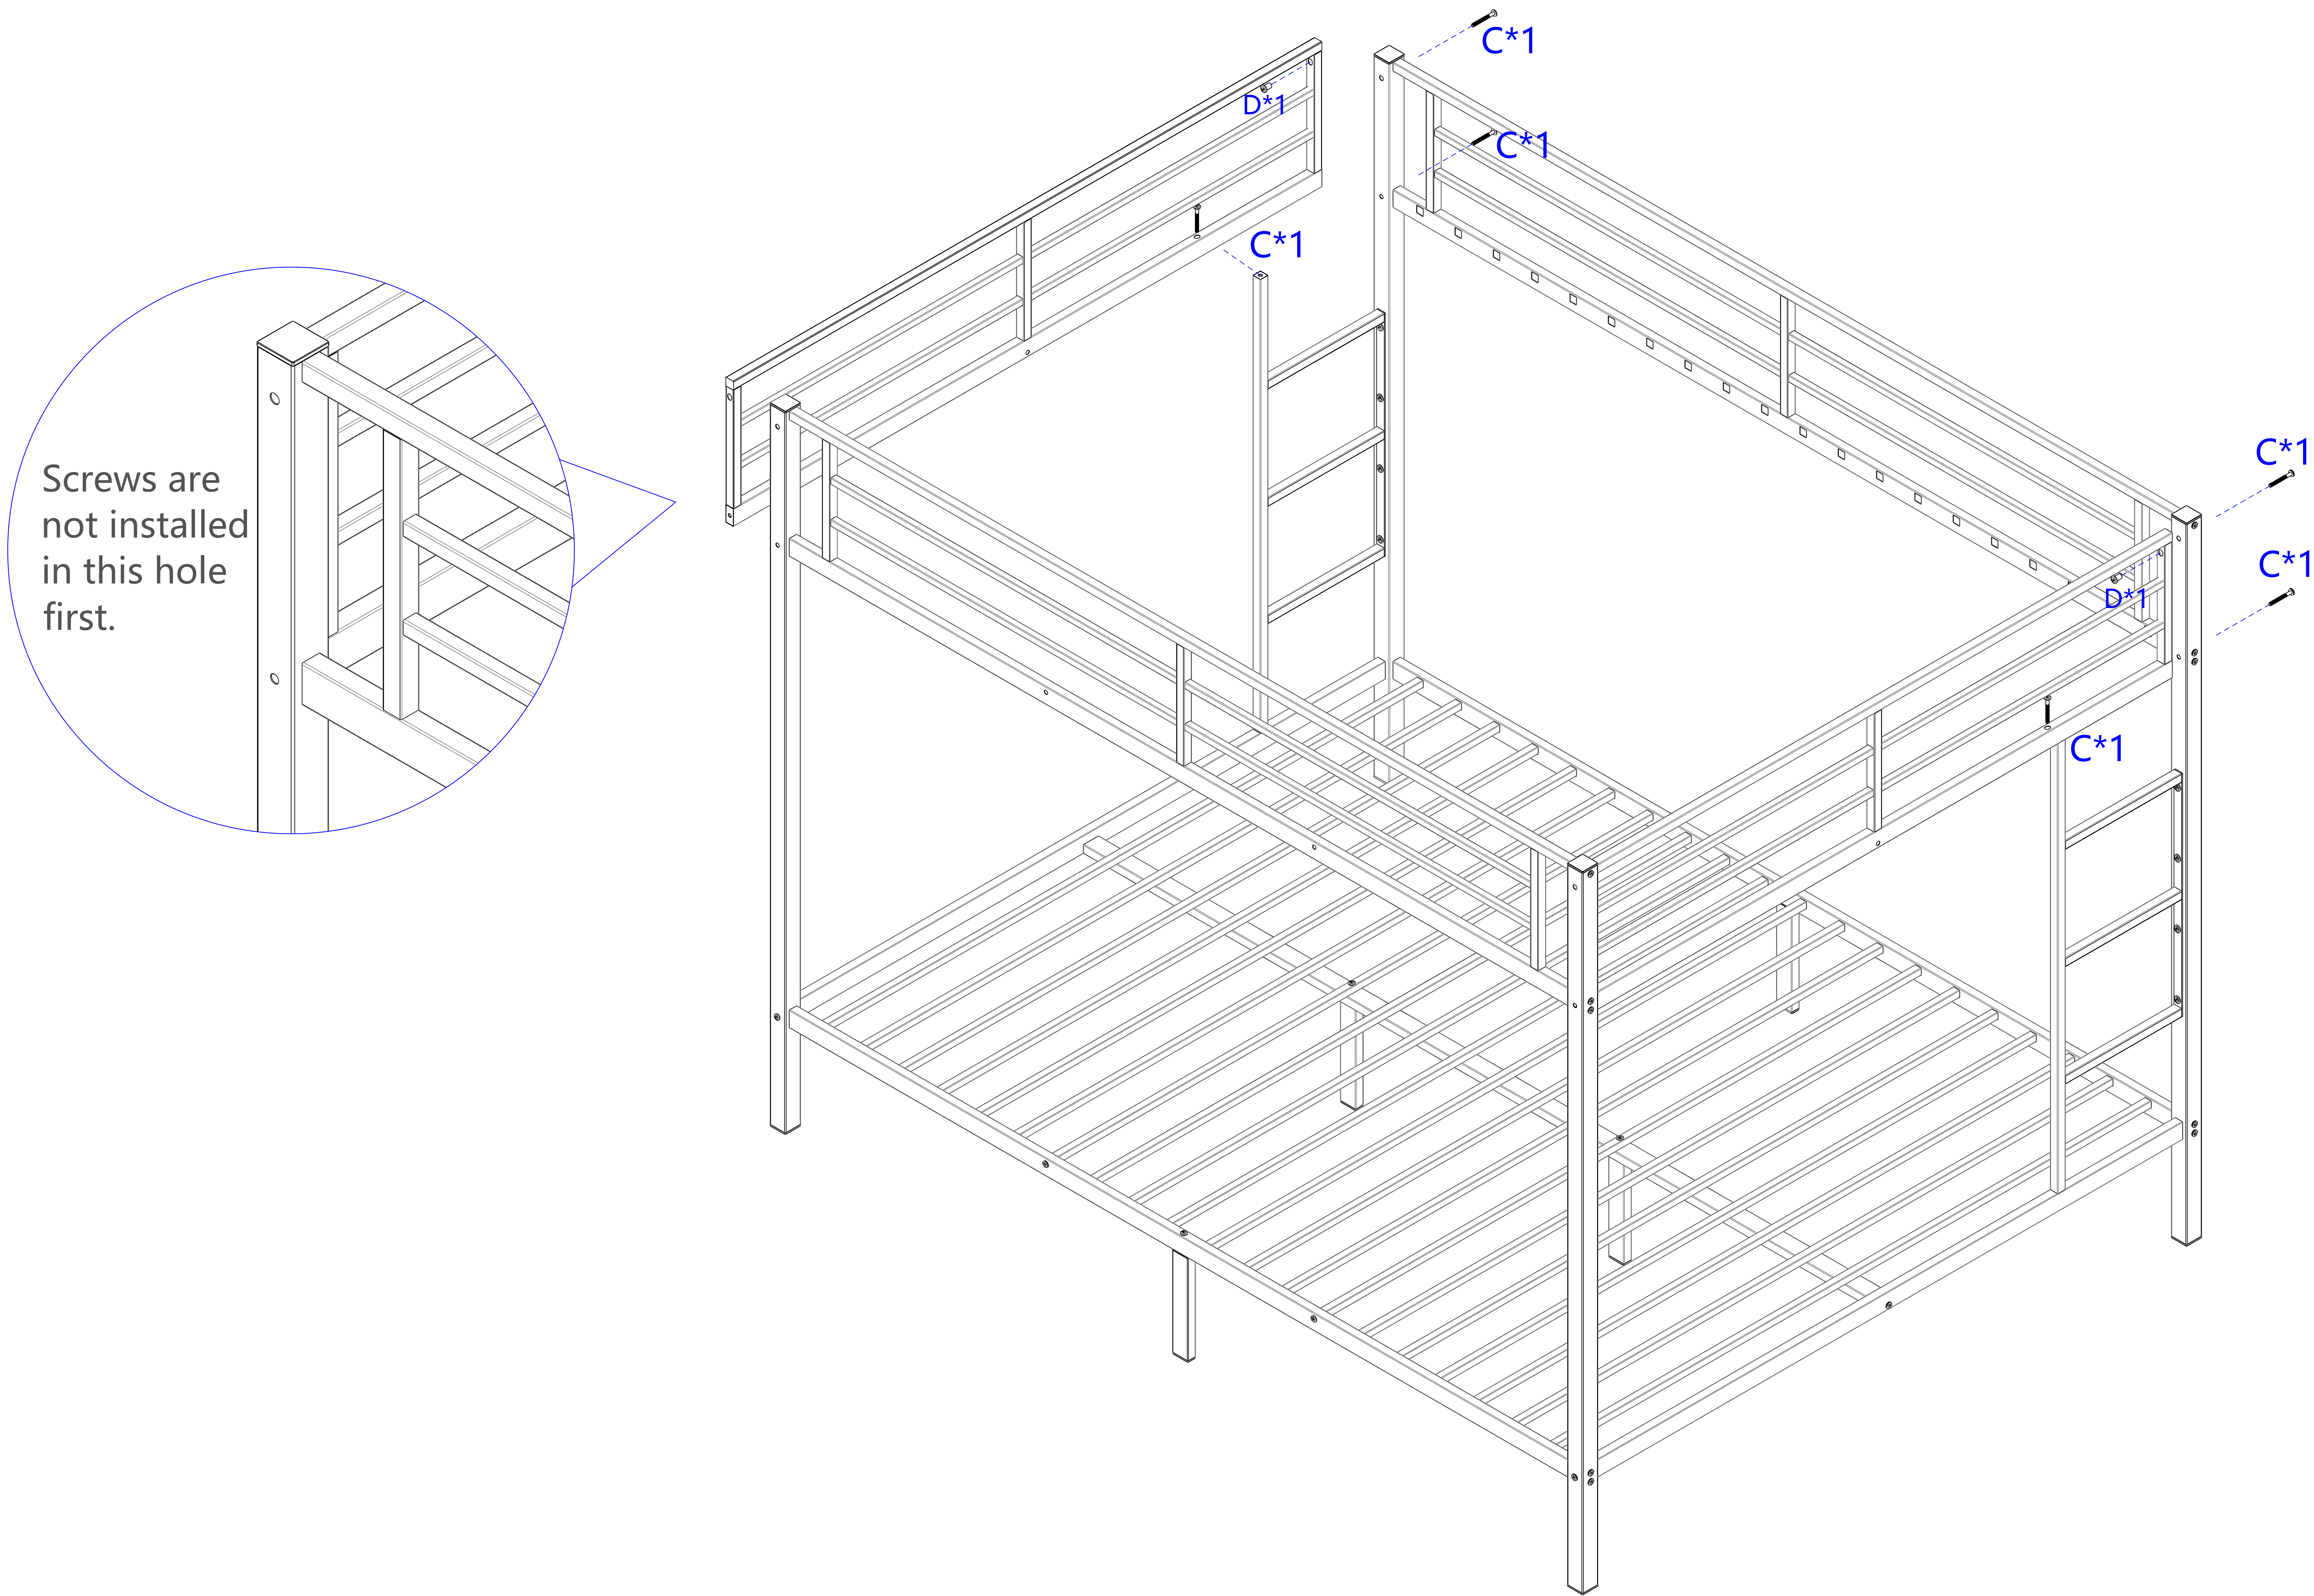
	13-3pcs		C 8*55-3pcs		A
---	---------	---	-------------	---	---

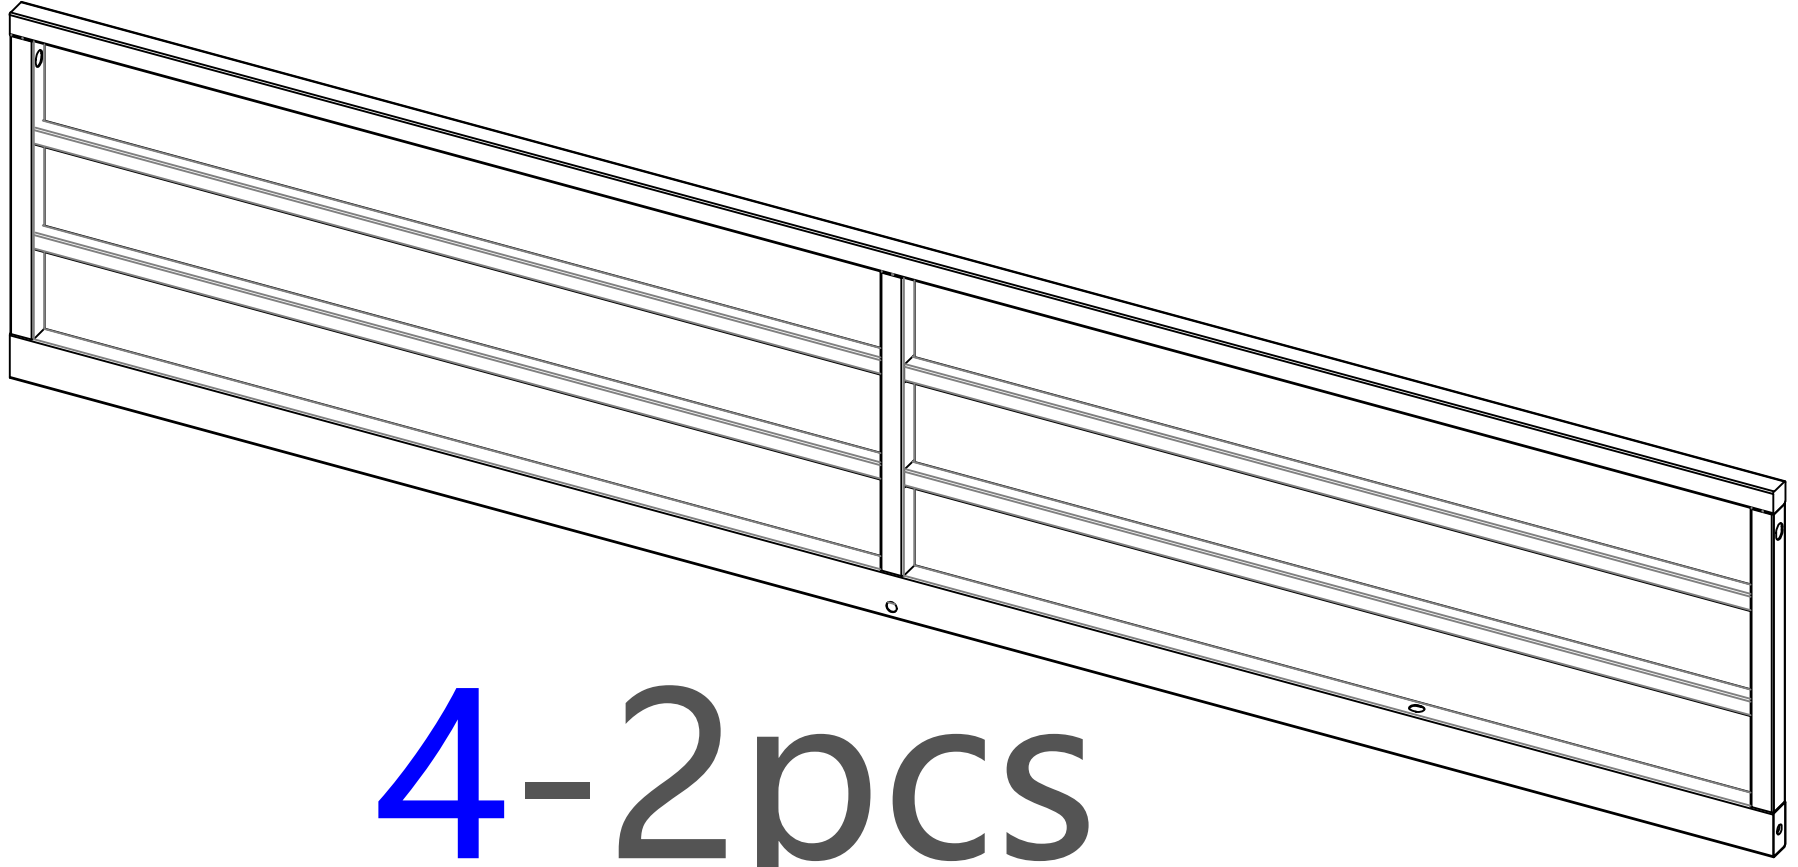
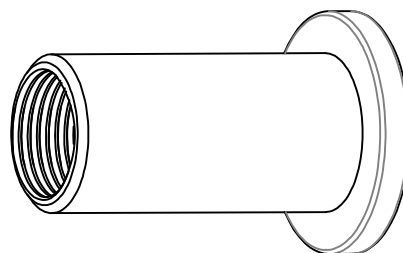
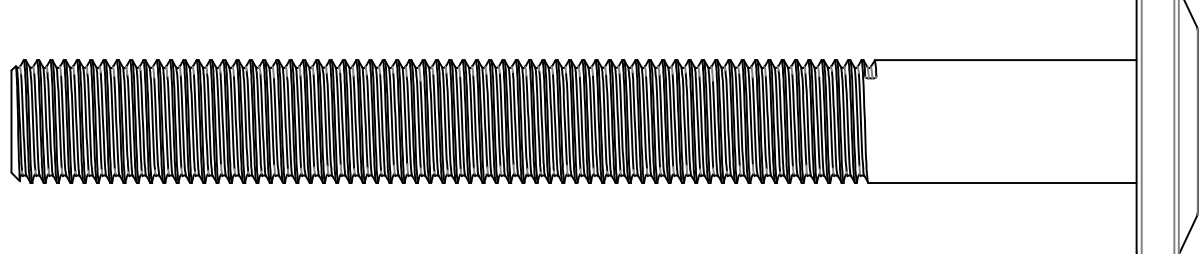
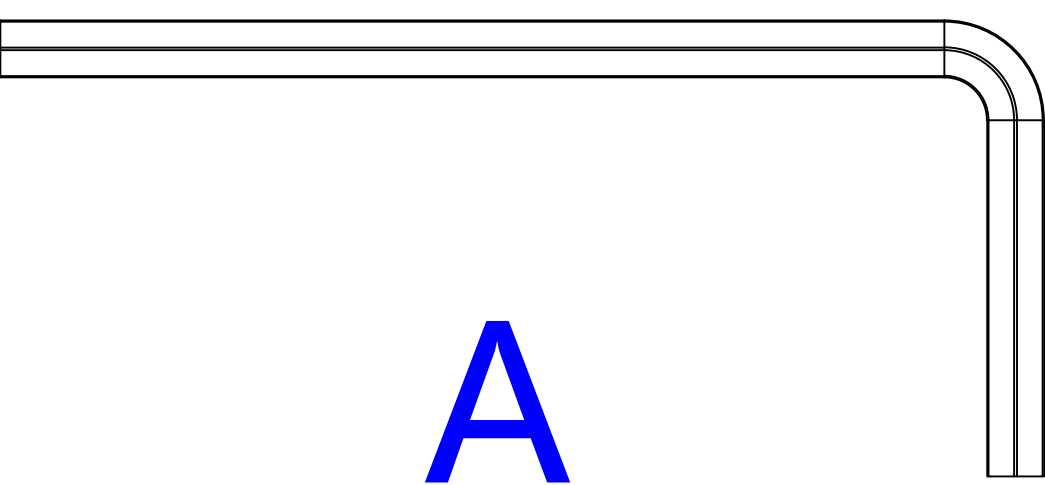
Step 7: Use hardware A, B, C, D to connect #5 together.



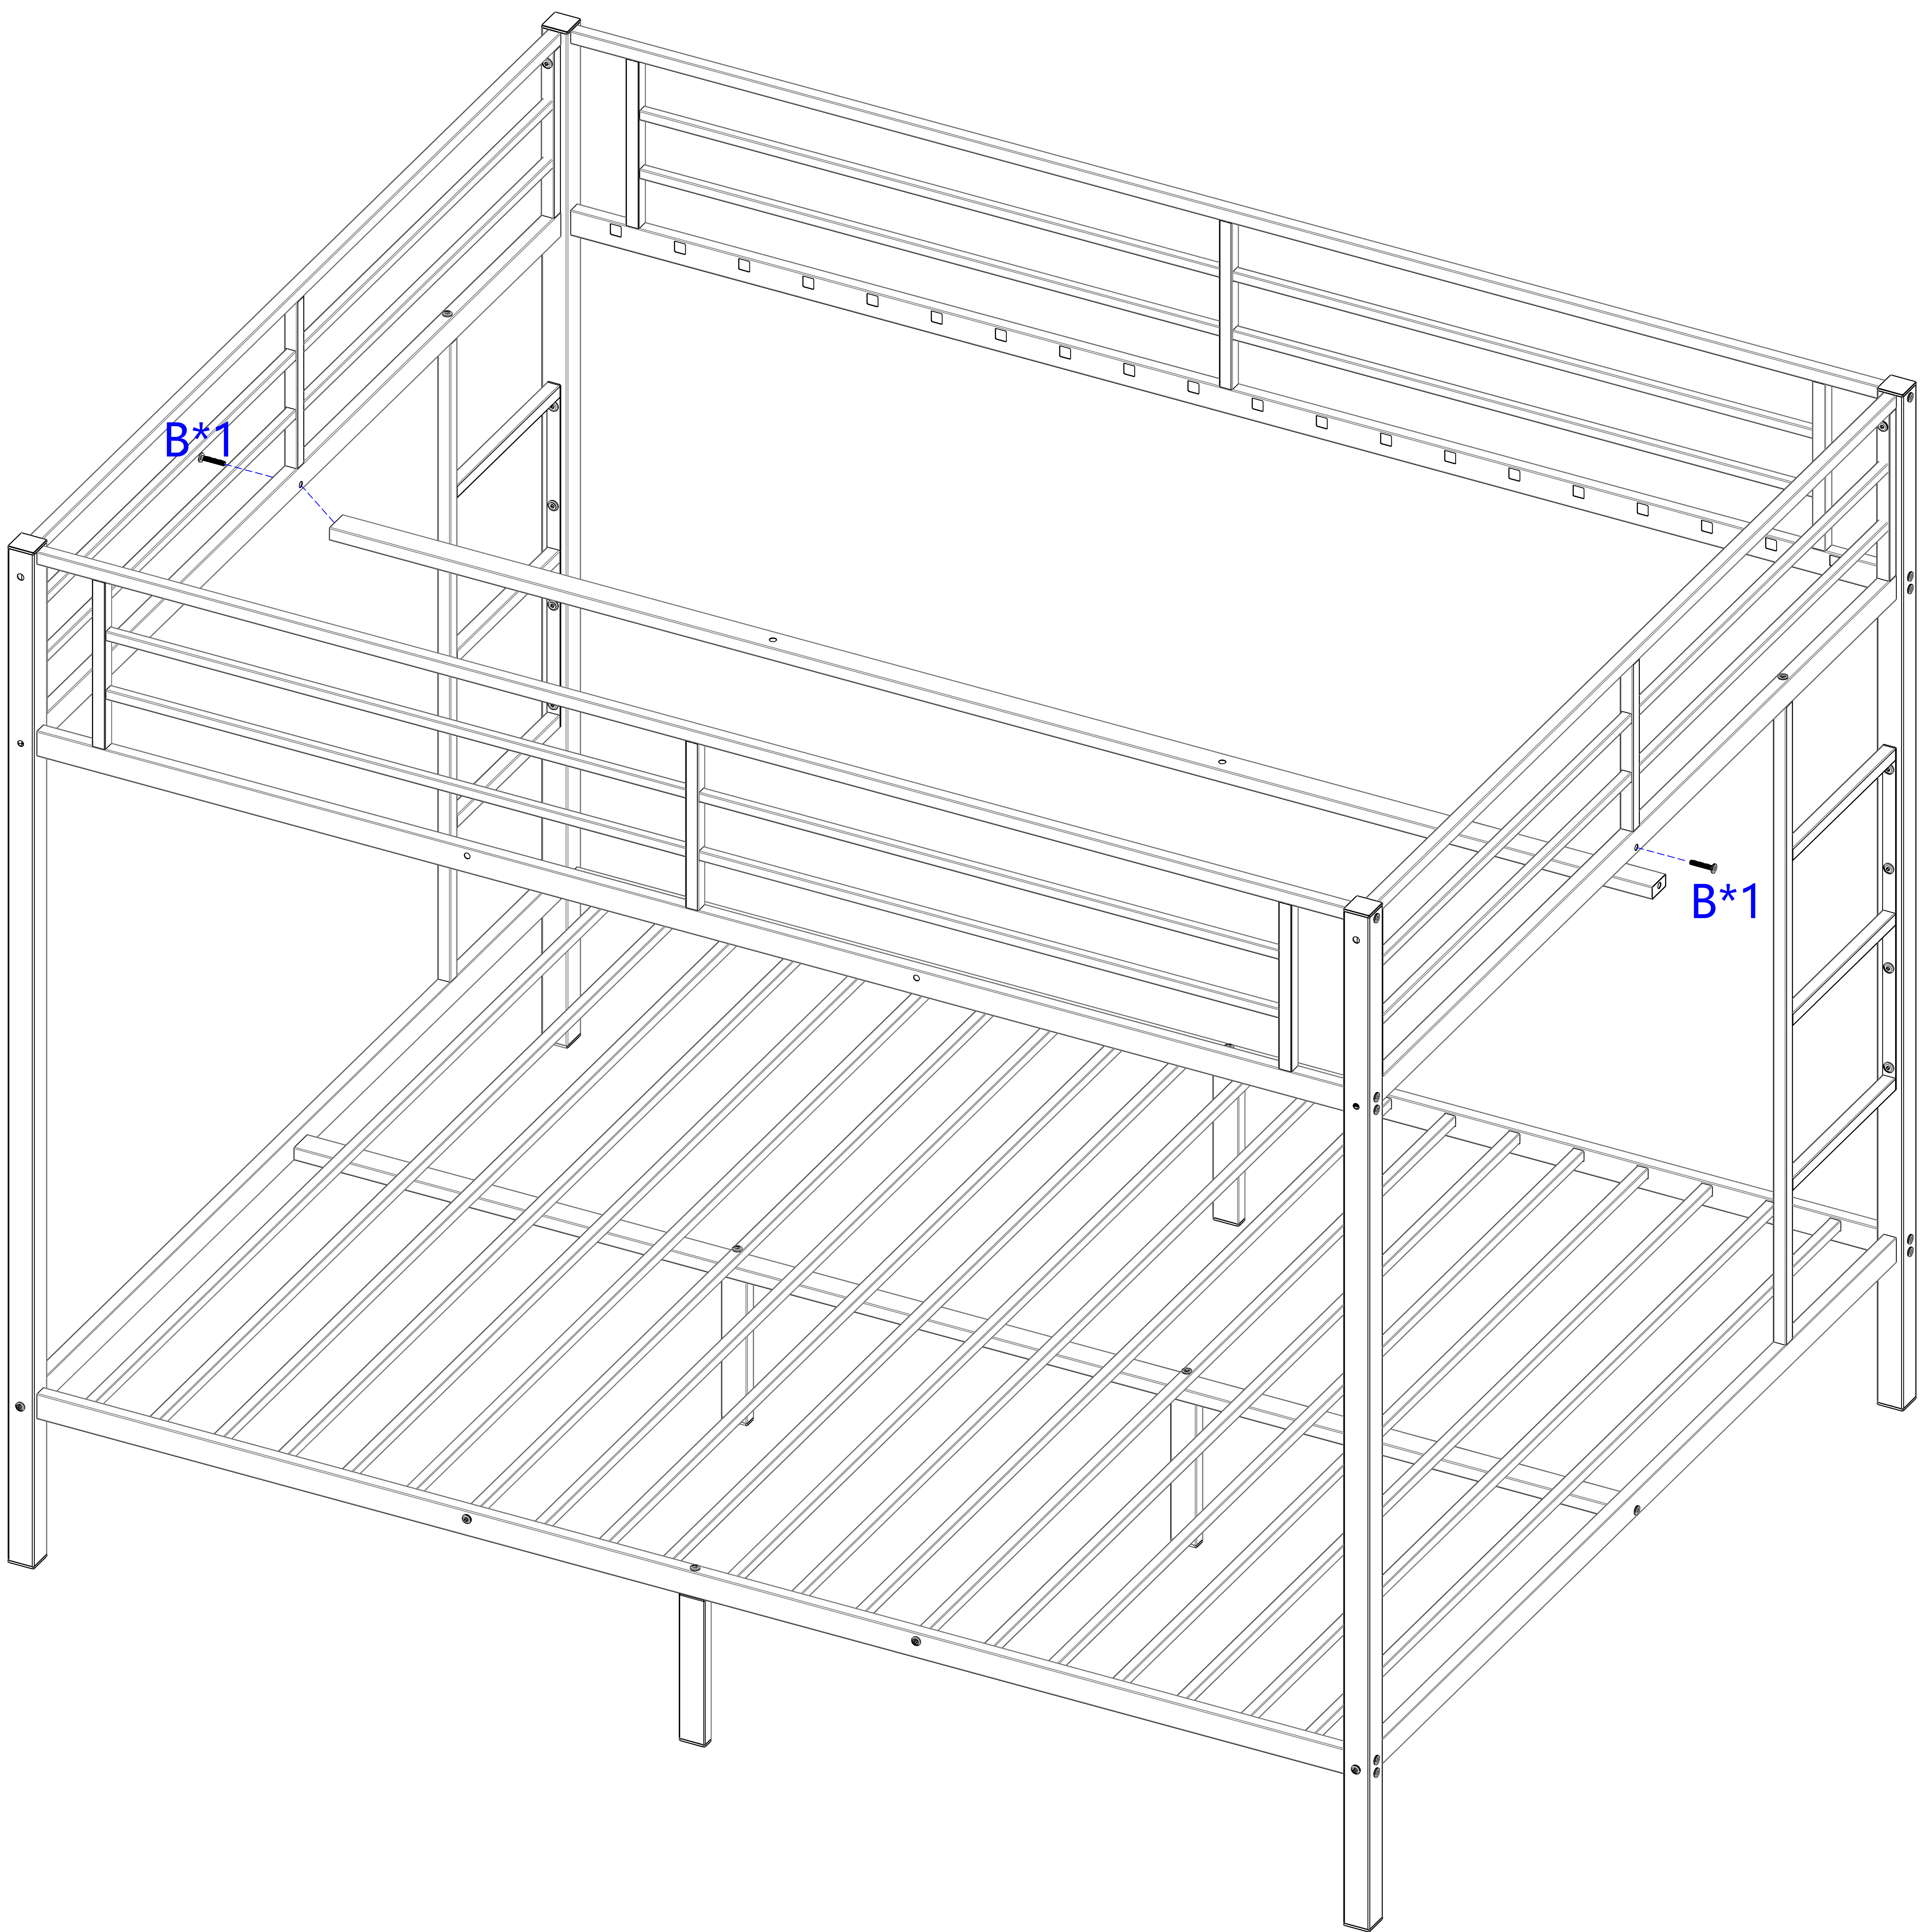
	5-2pcs		D 8*16-8pcs		B 8*35-8pcs		C 8*55-2pcs		A
---	--------	---	-------------	--	-------------	---	-------------	---	---

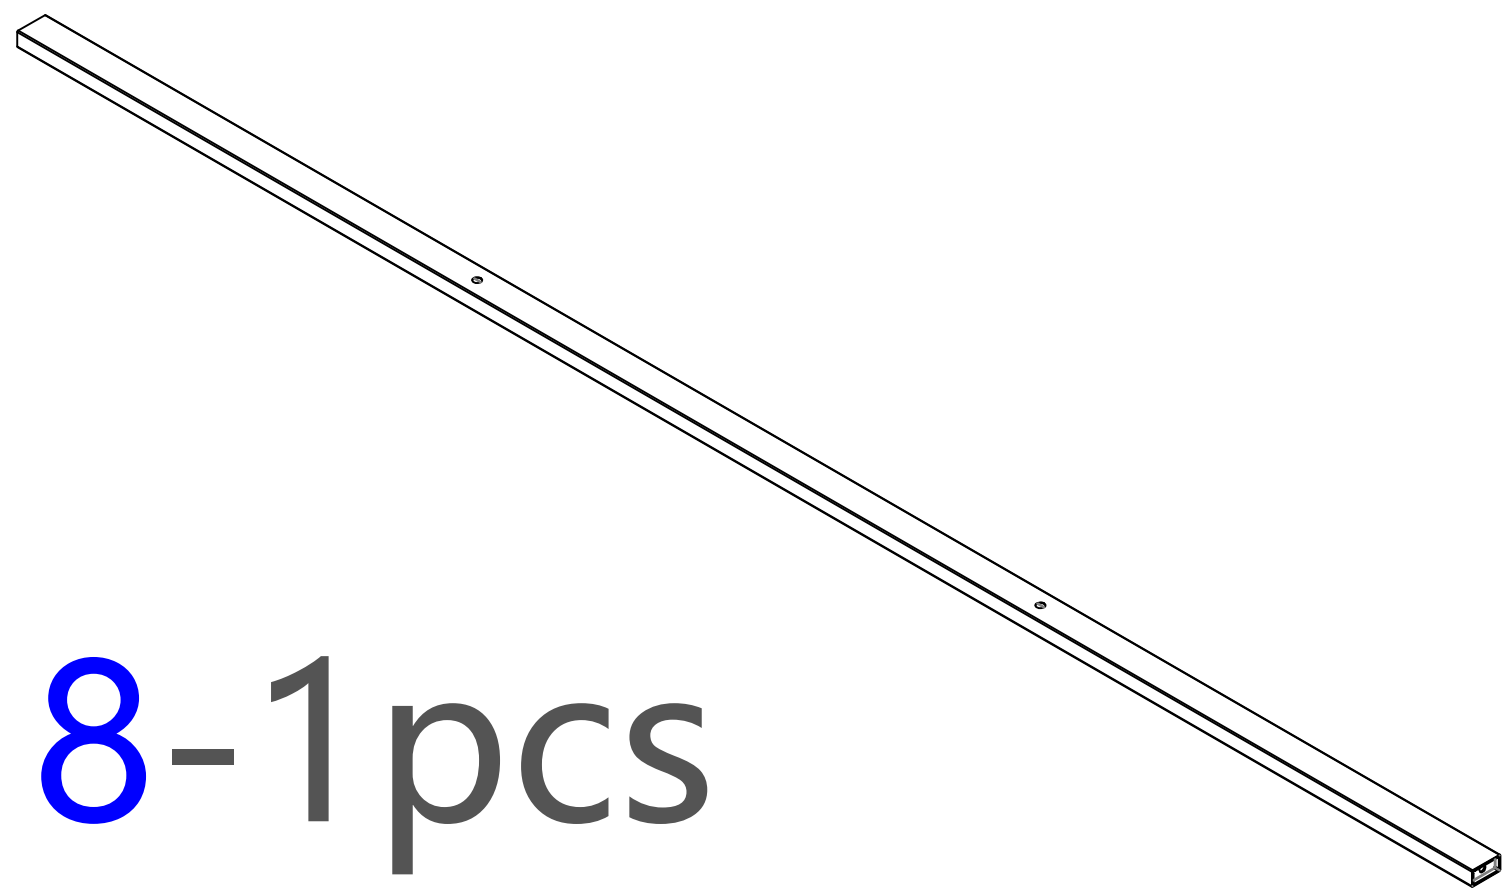
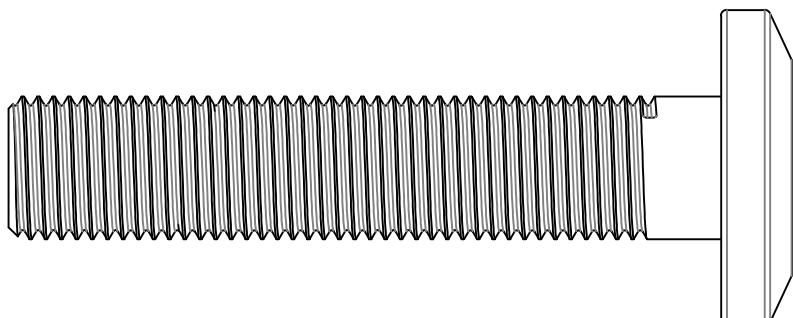
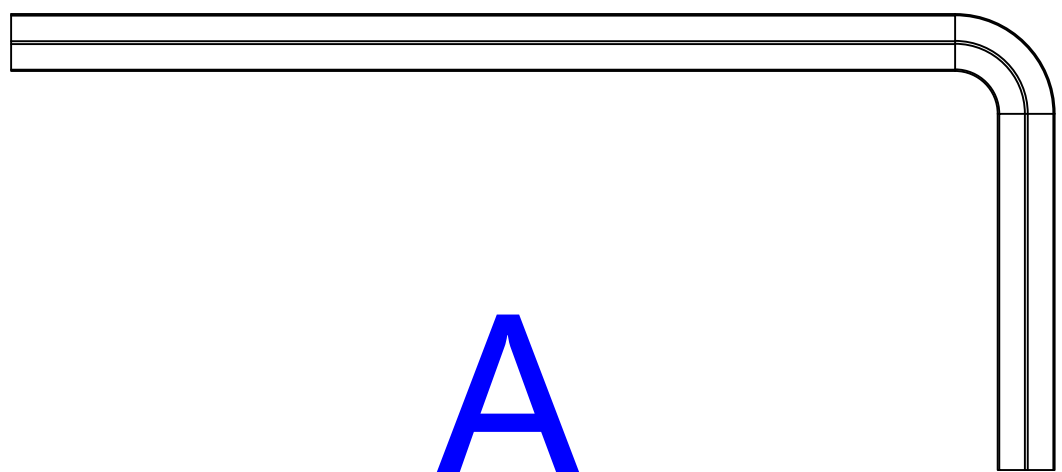
Step 8: Use hardware A, C, and D to connect #4 together.



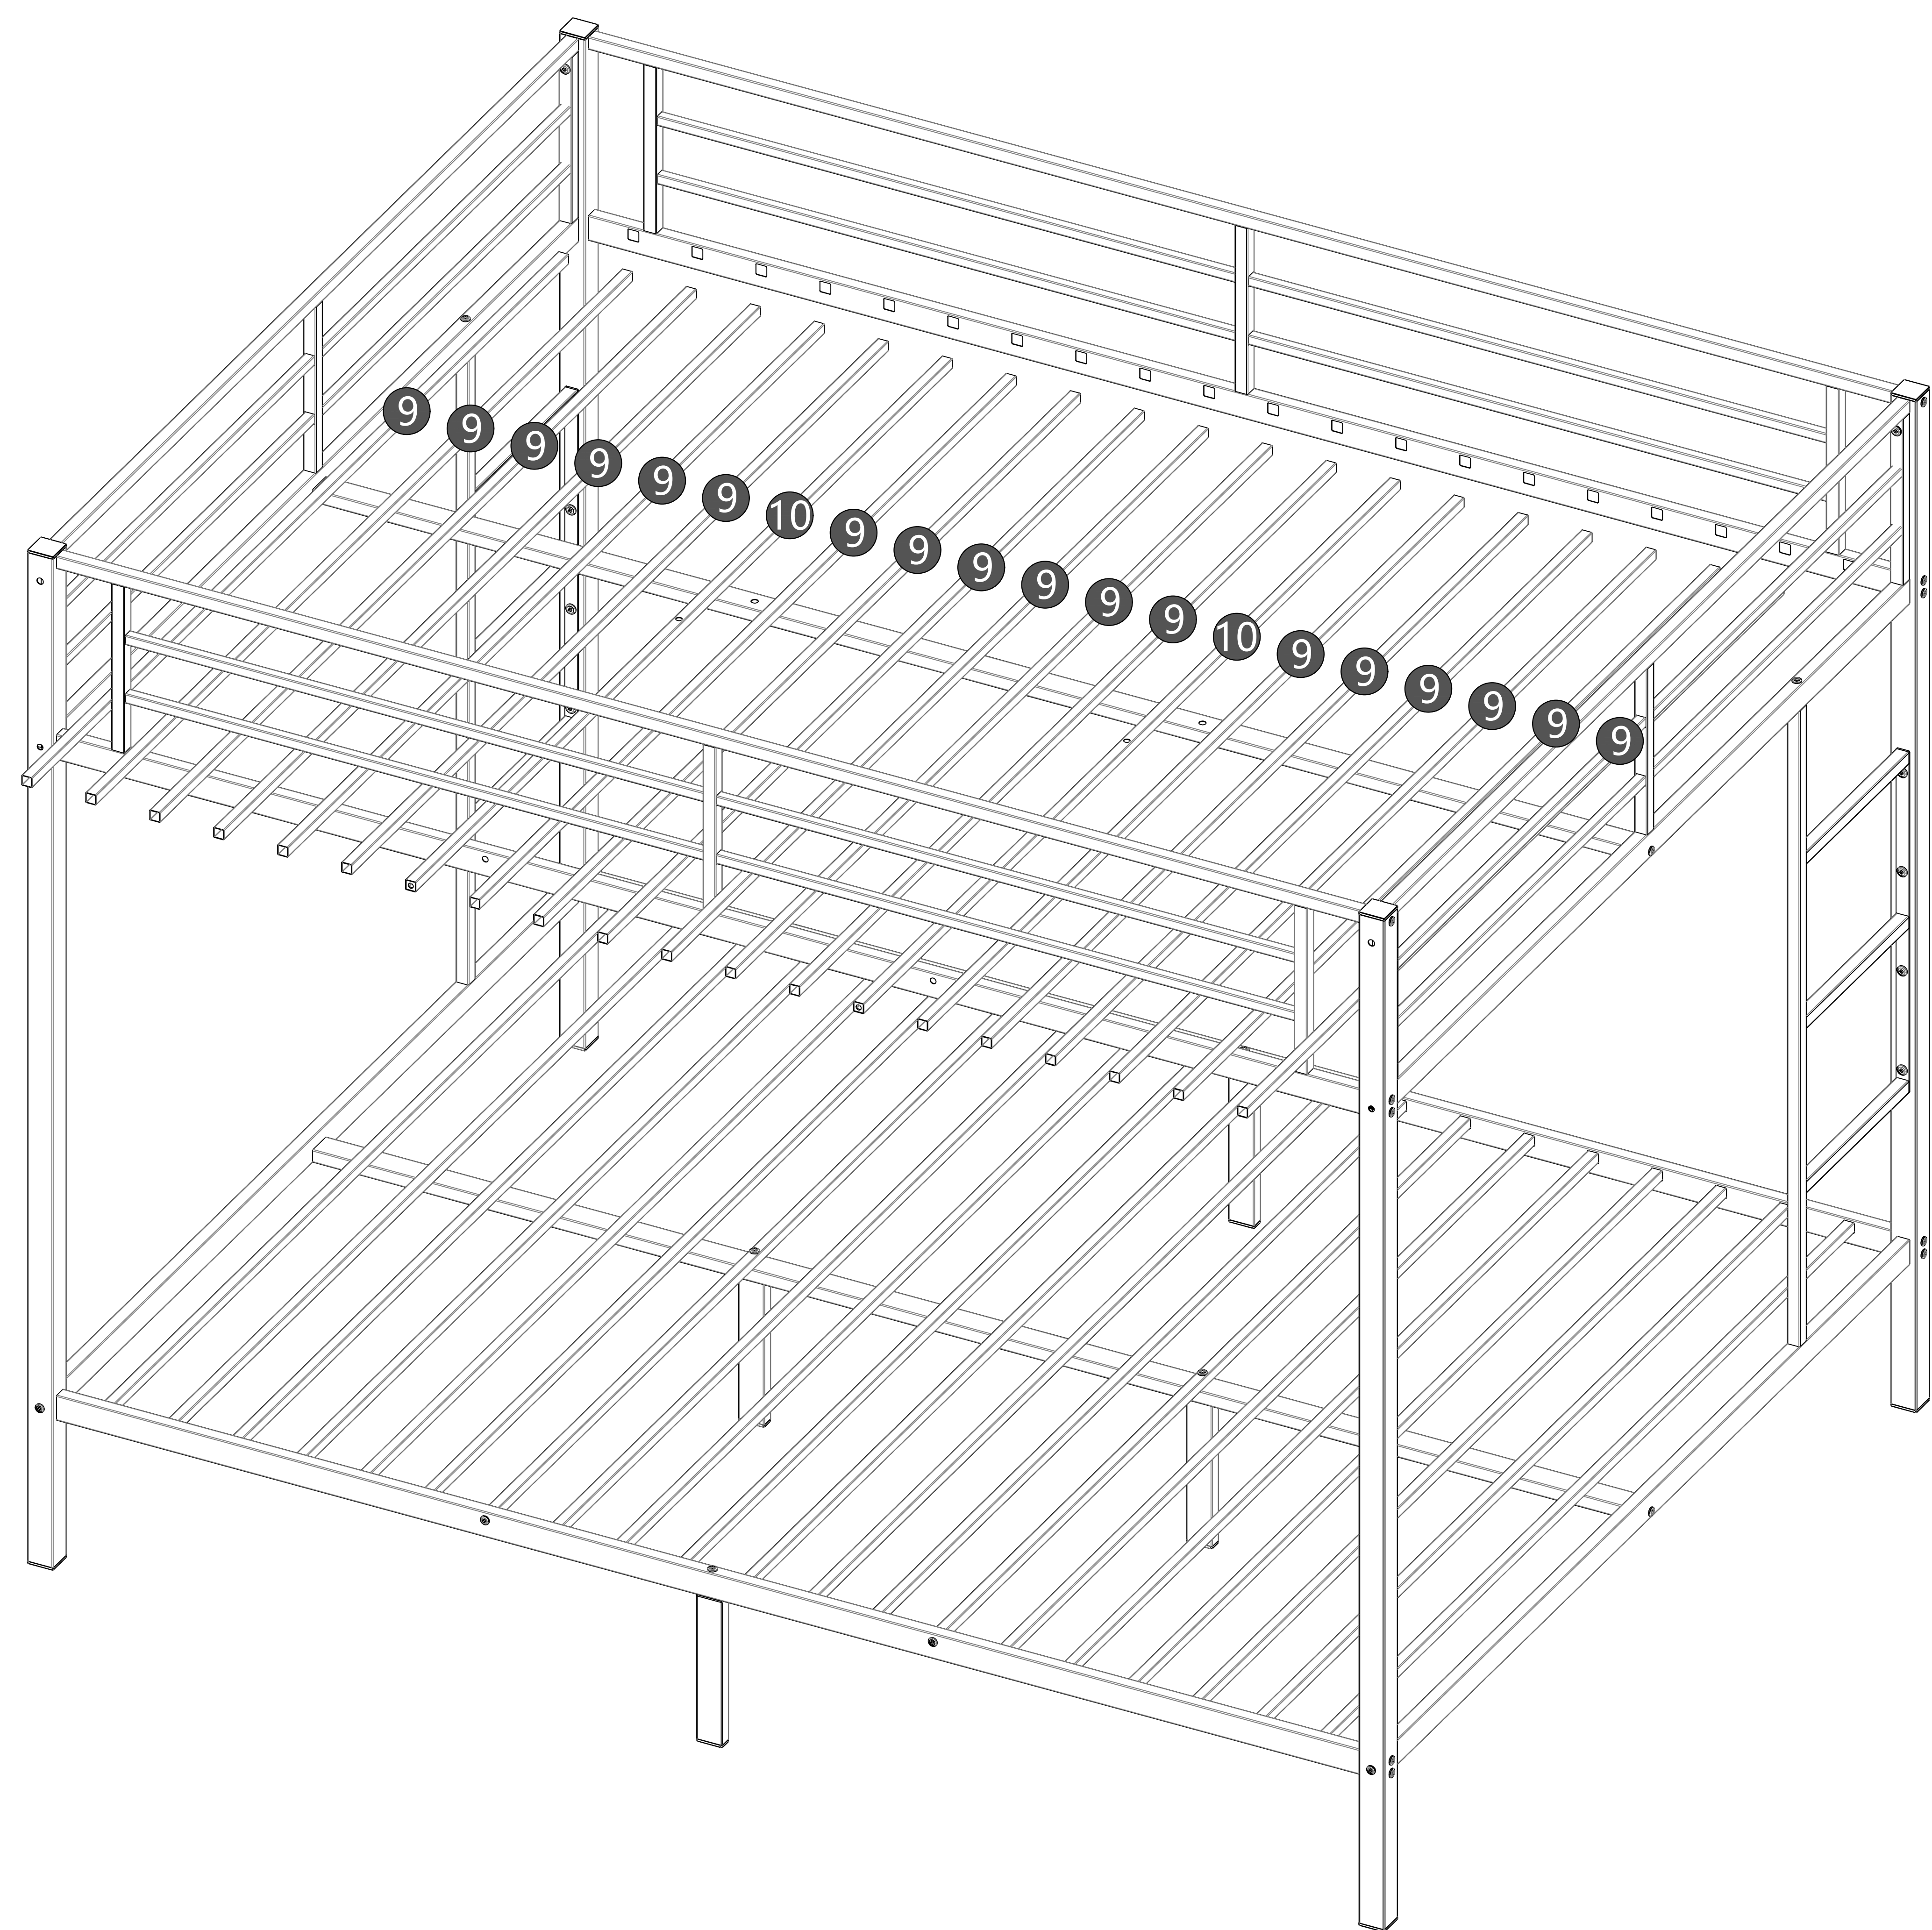
 4-2pcs	 D 8*16-2pcs	 C 8*55-6pcs	 A
---	--	--	--

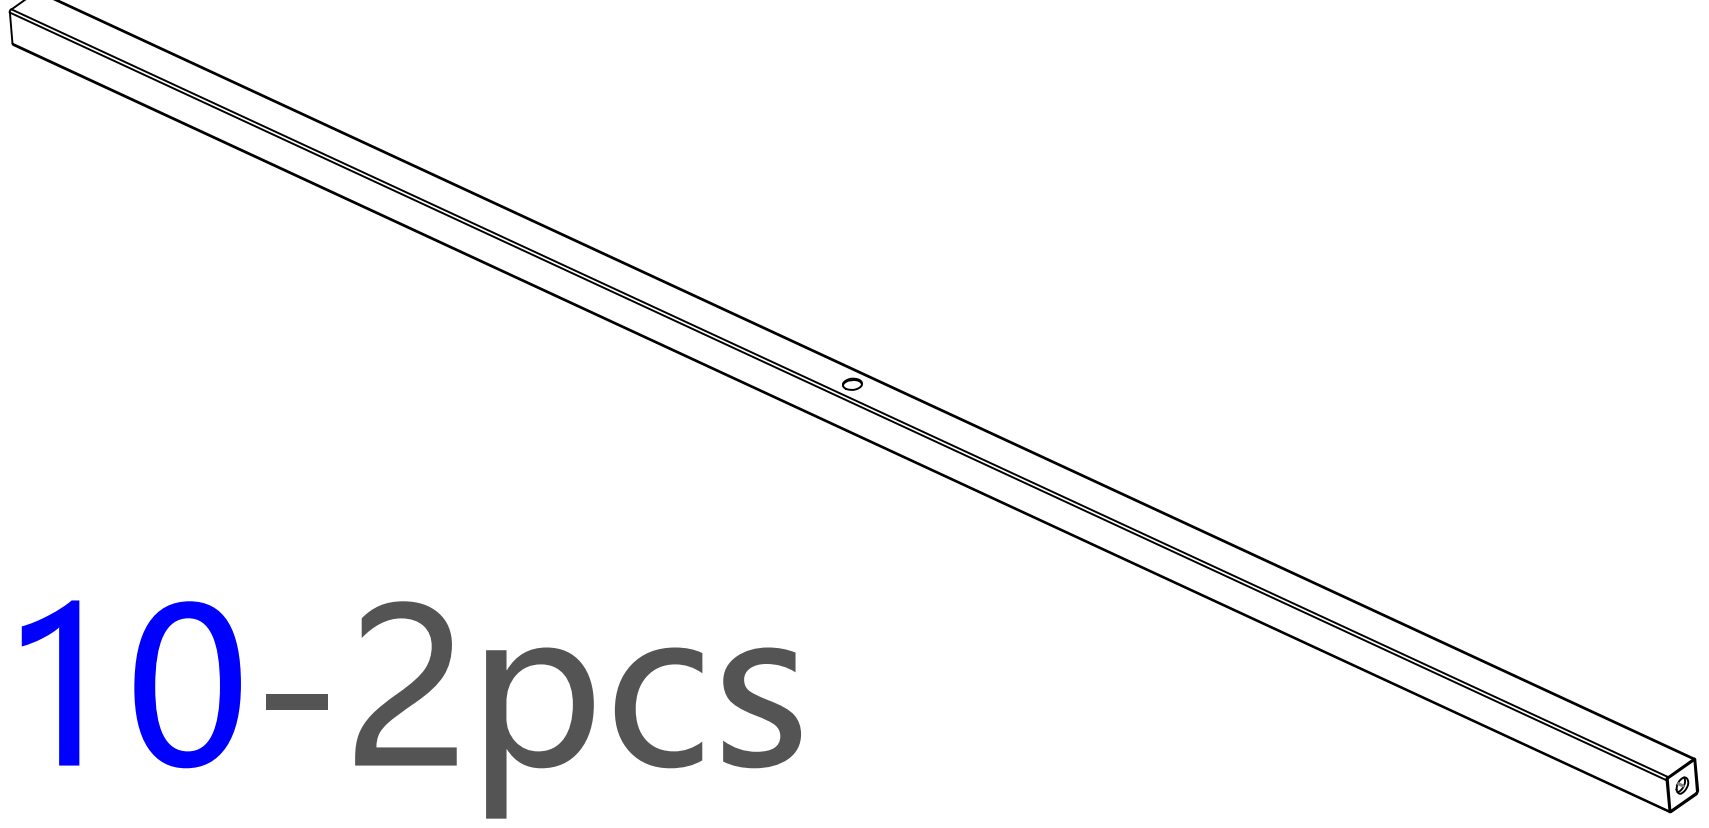
Step 9: Use hardware A and C to connect #8 together.



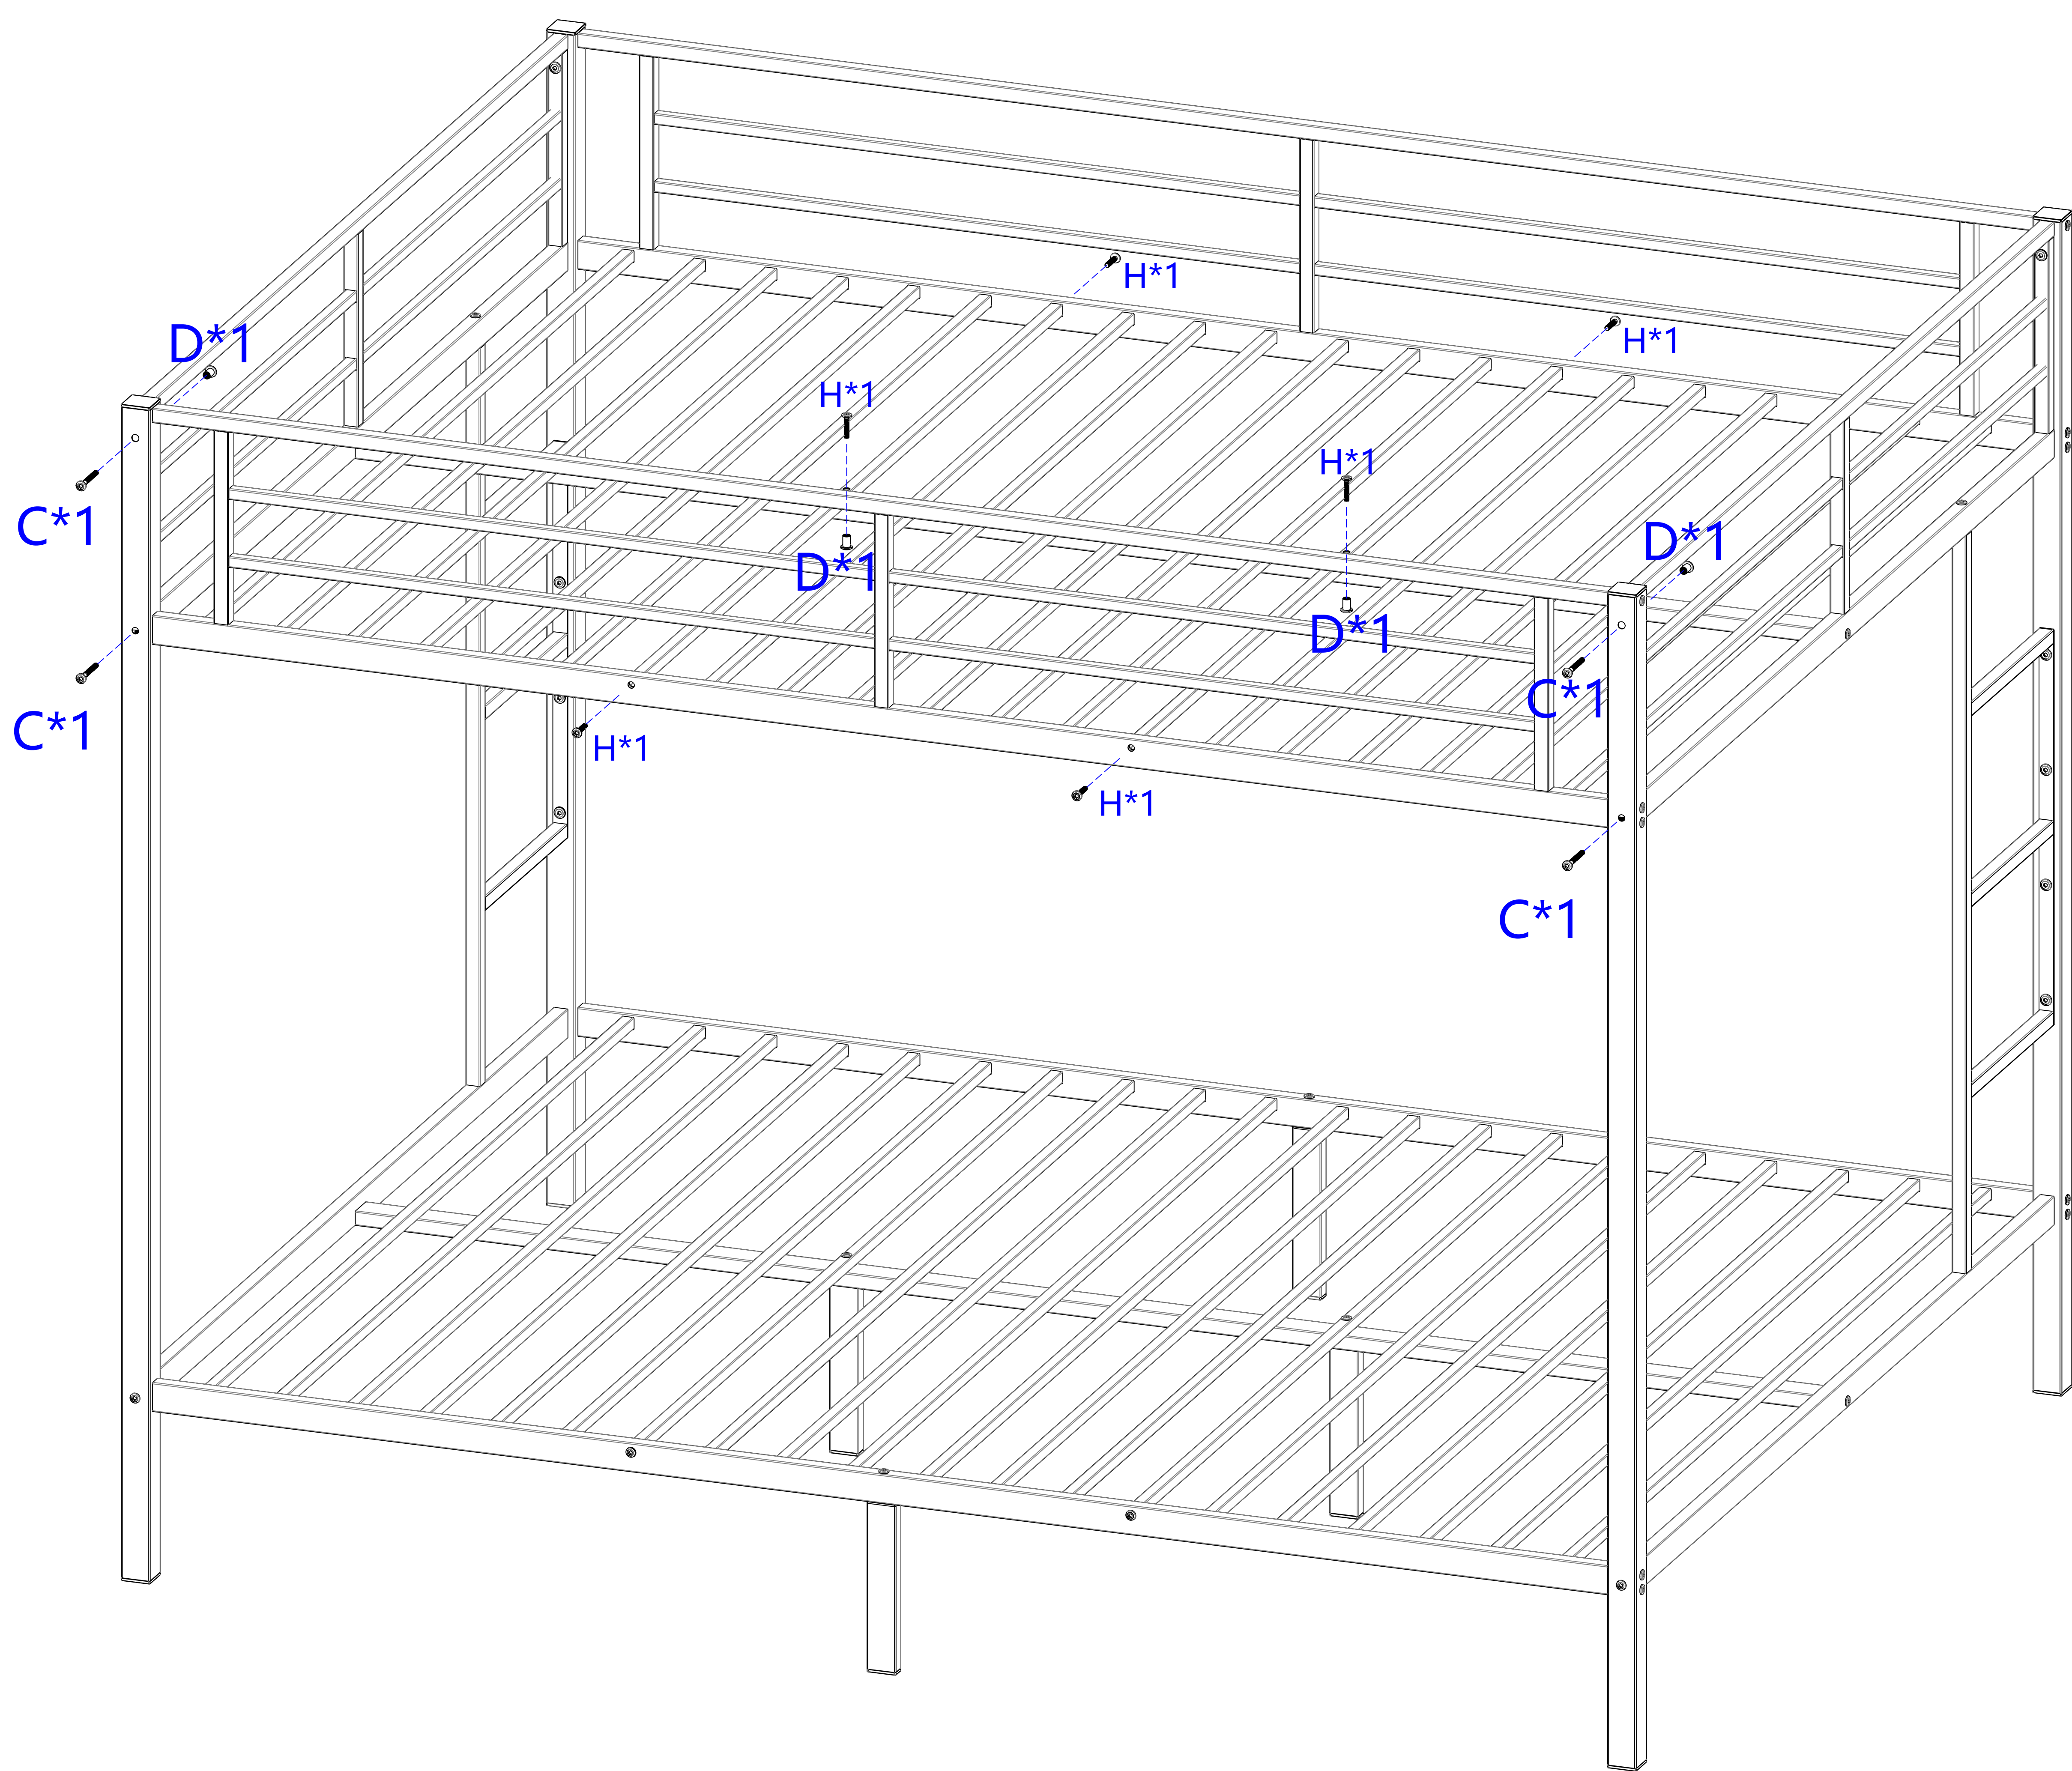
 8-1pcs	 B 8*35-2pcs	 A
---	--	--

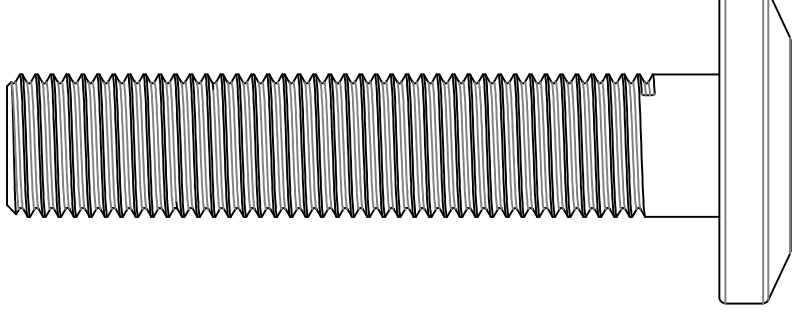
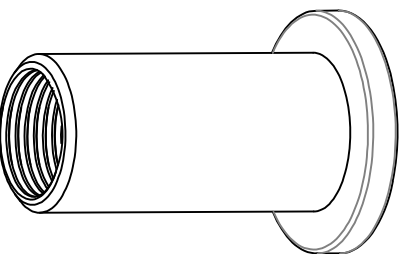
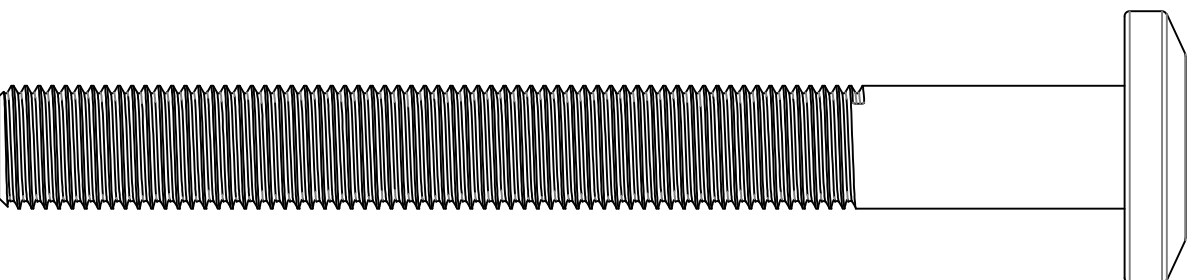
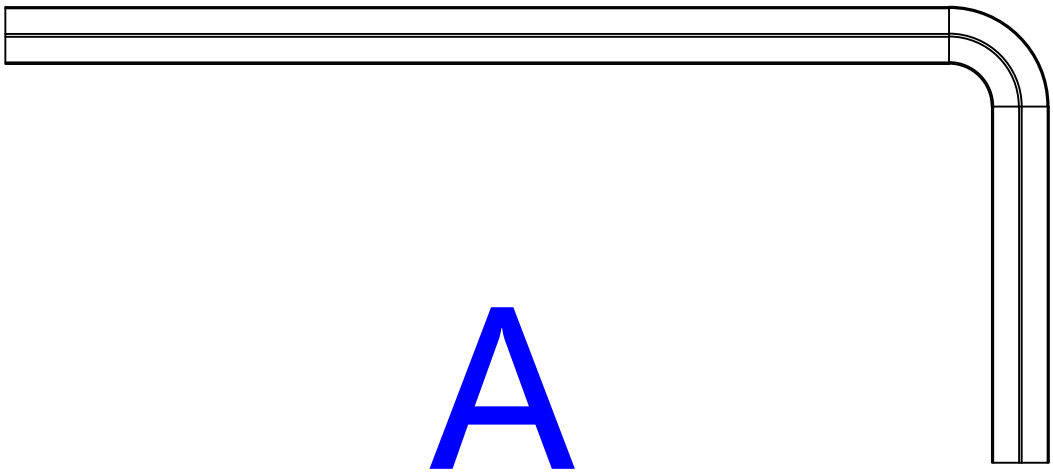
Step 10: Use #9 and #10 to insert #7 into the corresponding square hole.



 9-18pcs	 10-2pcs
--	--

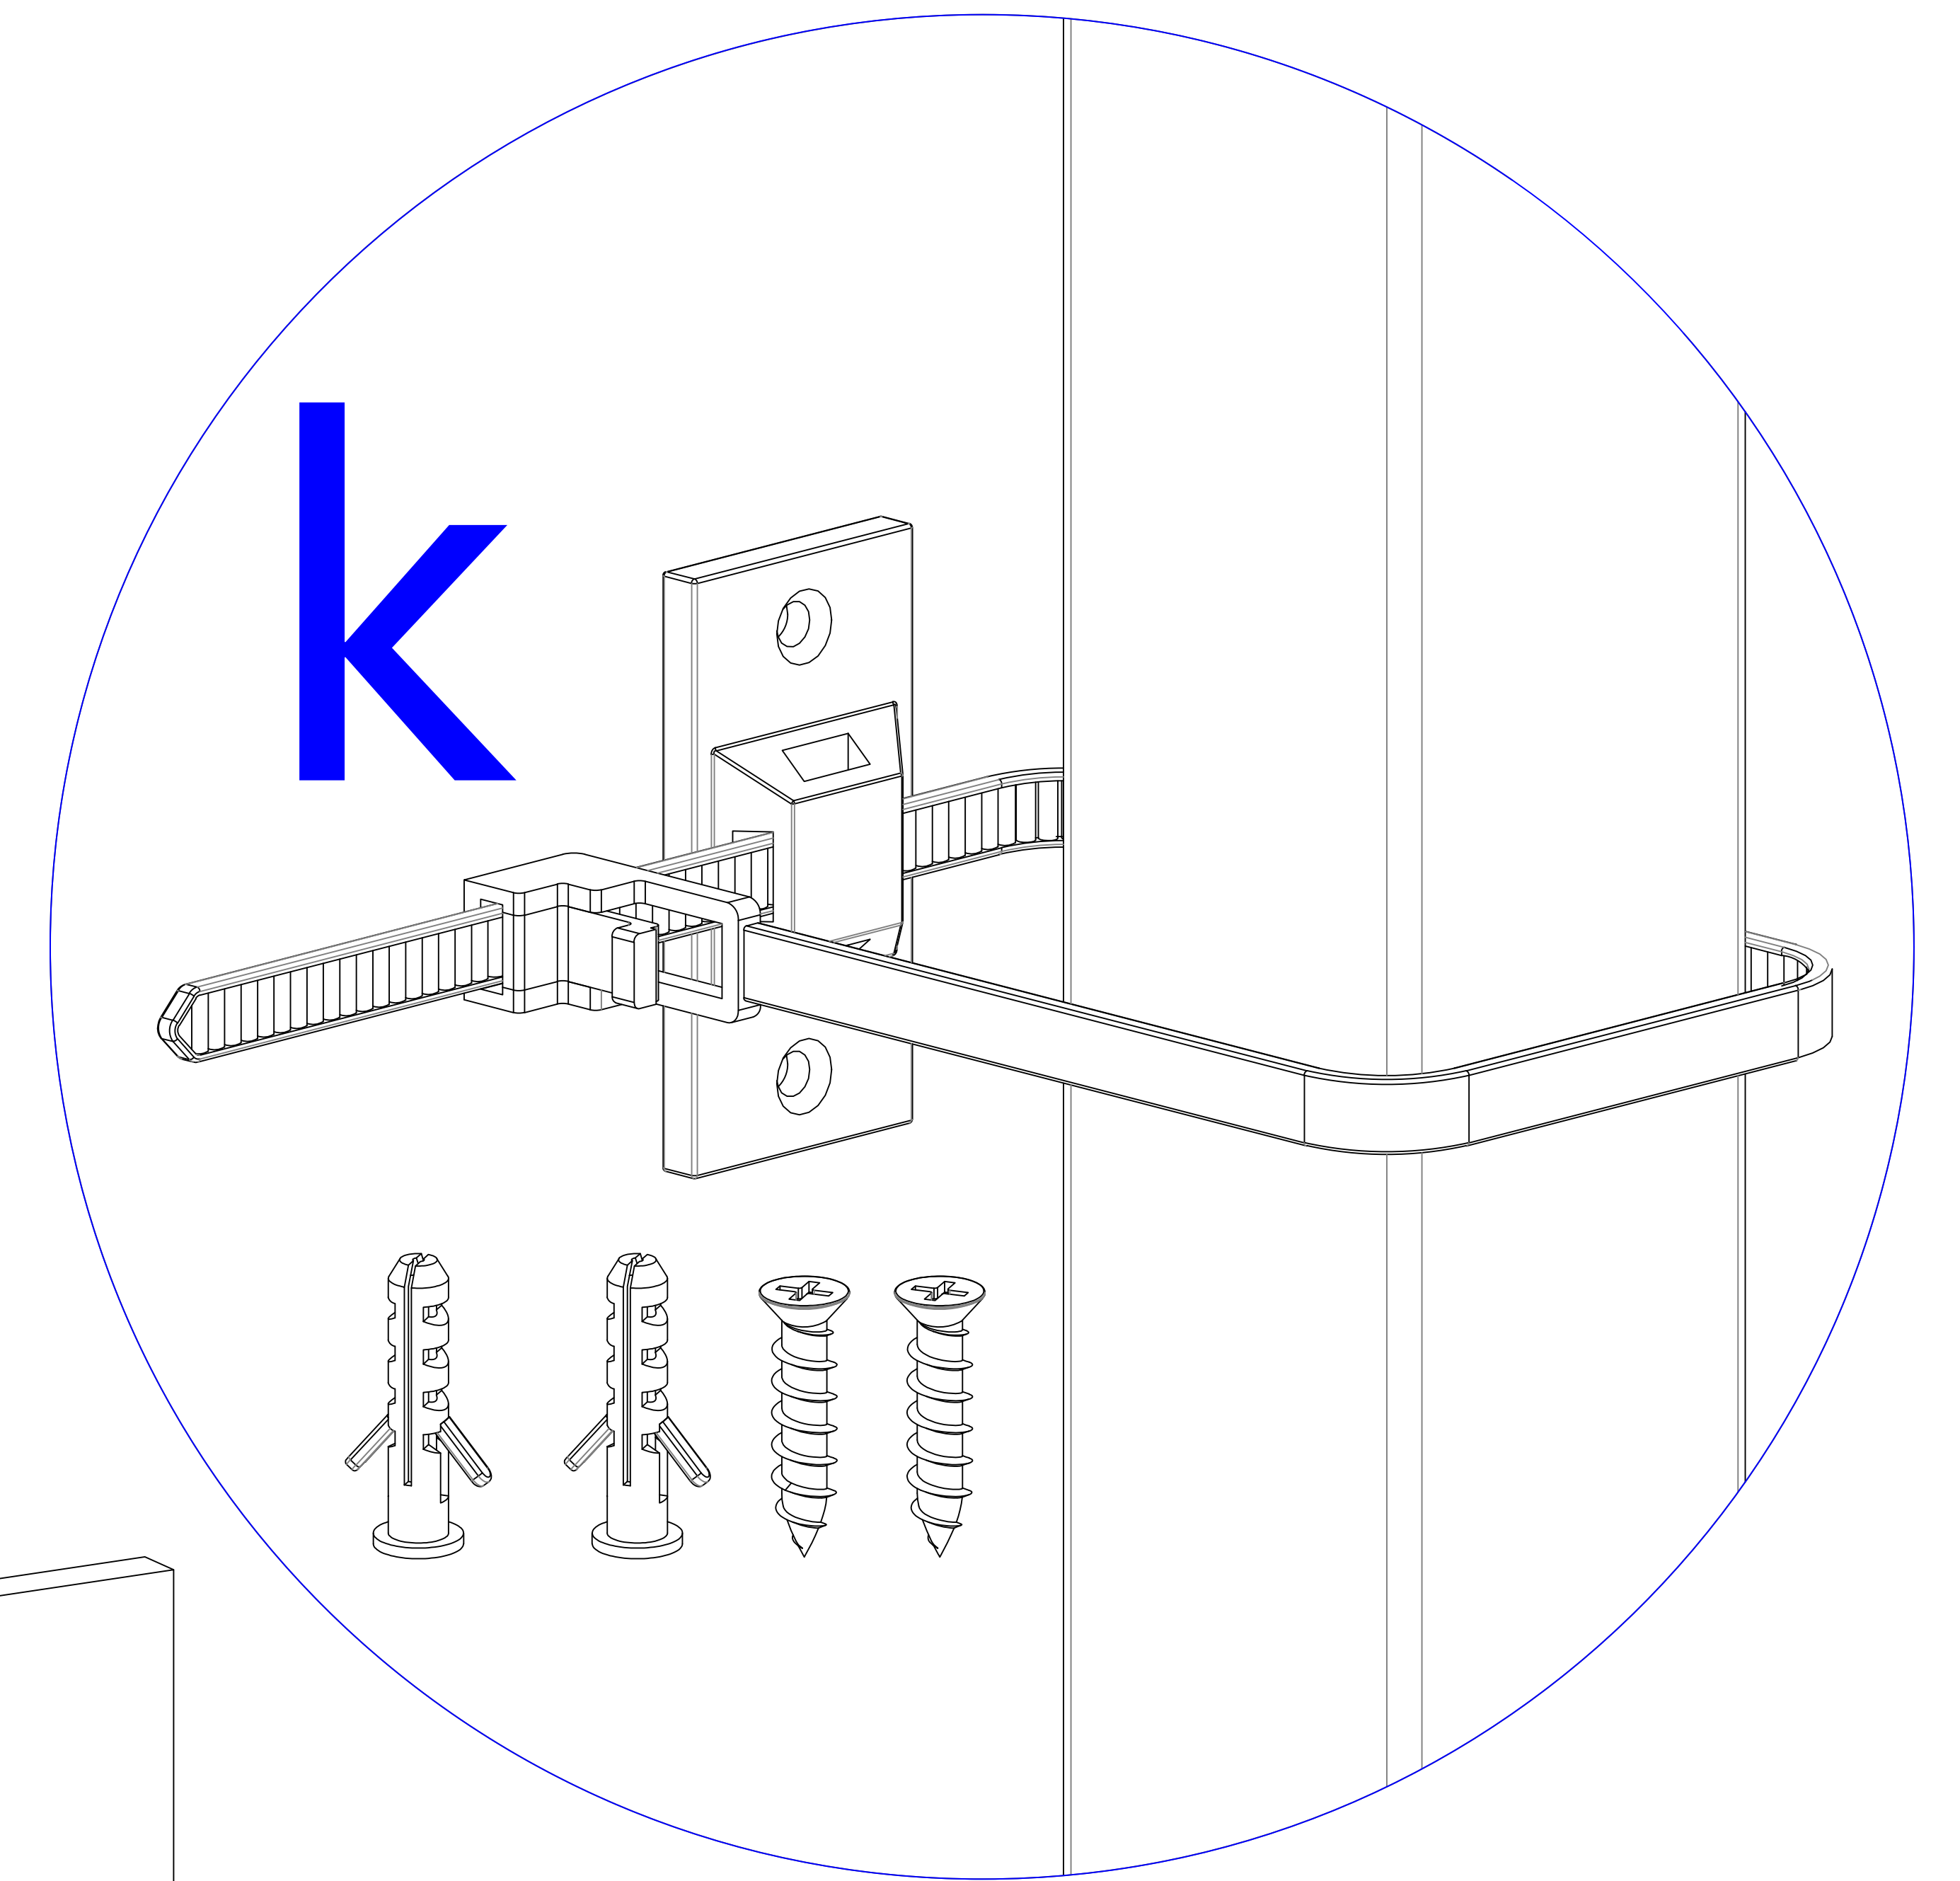
Step 11: Use hardware C and D to tighten the #1 and #4 connections, hardware H and D to tighten the #8 and #12 connections, and hardware H to tighten the #7 and #12 connections.



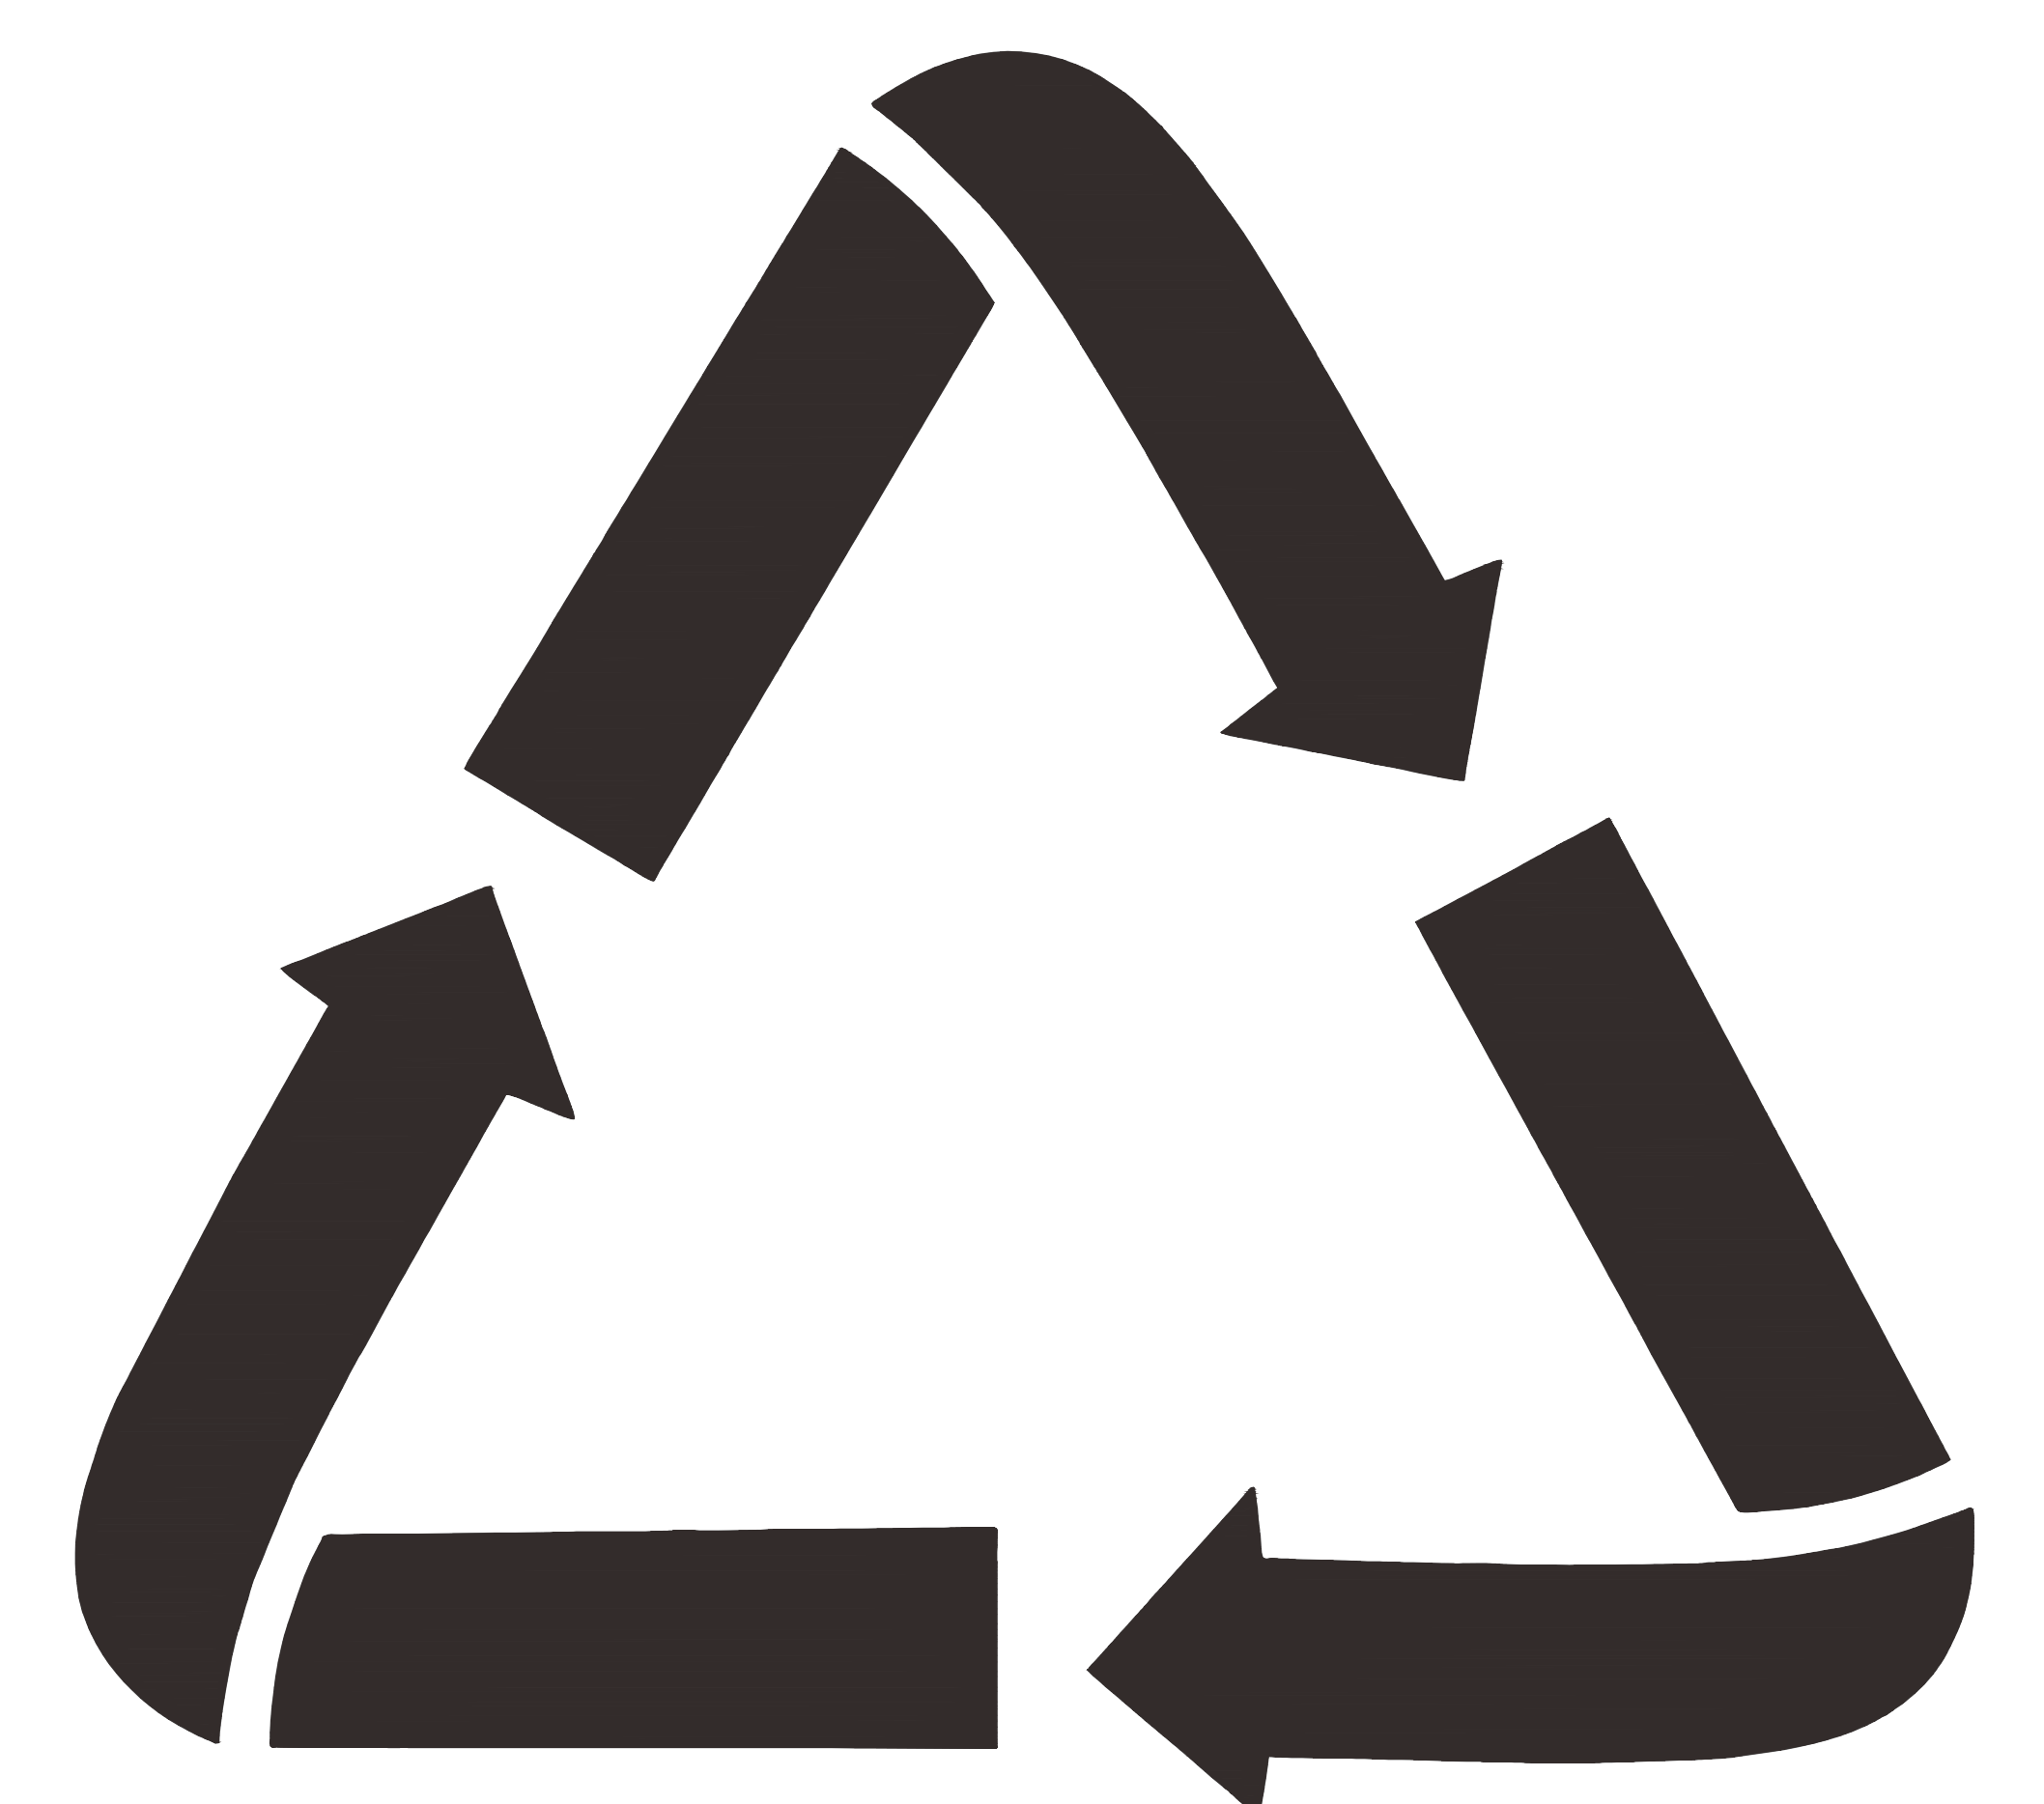
 H 8*30-6pcs	 D 8*16-4pcs	 C 8*55-4pcs	 A
--	--	--	--

Completed attic bed

Fix the wall, prevent movement,
selective installation



Note: Tighten all the steps before use, thank you.



Recyclable garbage