

Installation & Assembly



Before You Start

-  Please read all instructions carefully.
-  Retain instructions for future reference.
-  Separate and count all parts and hardware.
-  Read through each step carefully and follow the proper order.
-  We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
-  Always place the product on a flat, steady and stable surface.
-  Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.


Assembly Instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.





Please do not return to the store
Broken or missing Hardware?
Need help with Assembly?
If you have any questions just email us.

Completed Assembly

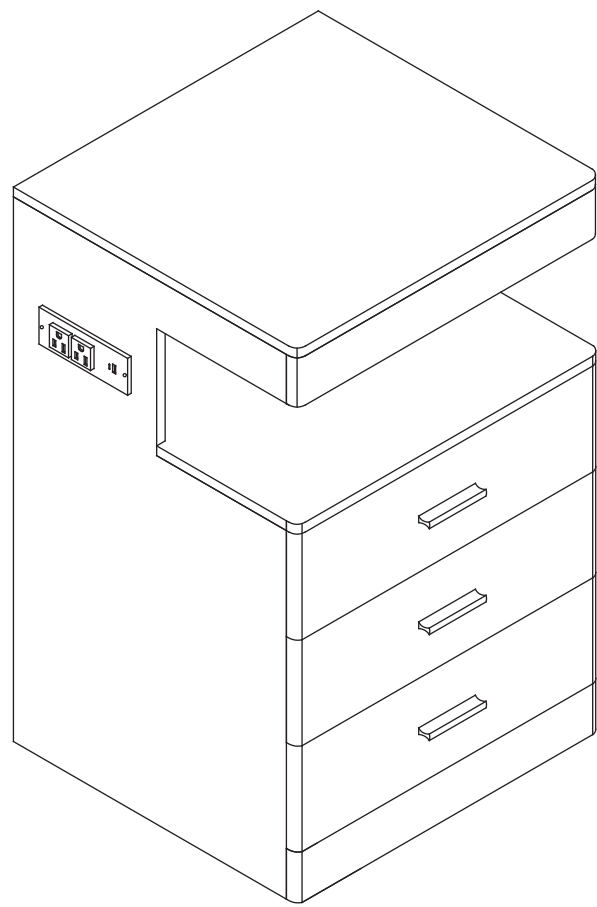


Parts Description

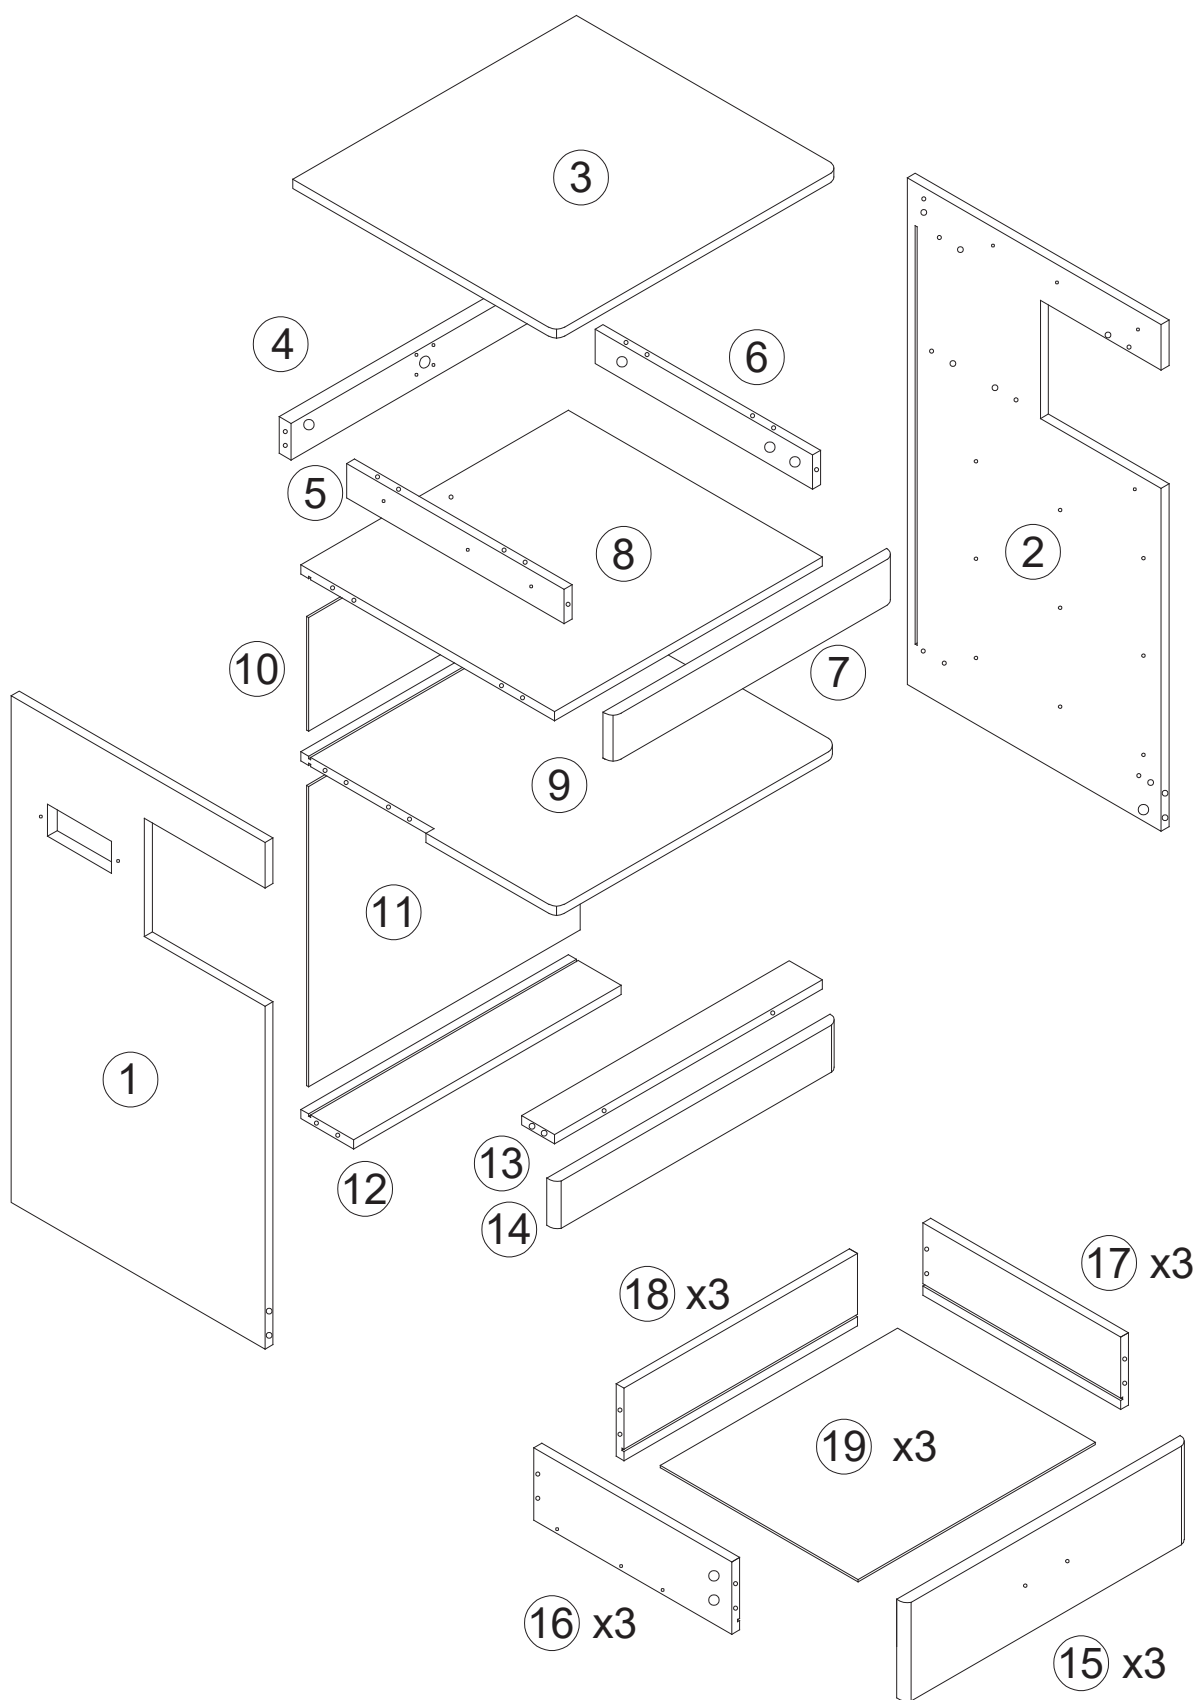


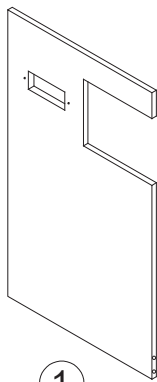


1

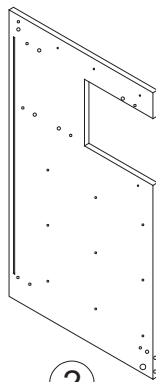


2

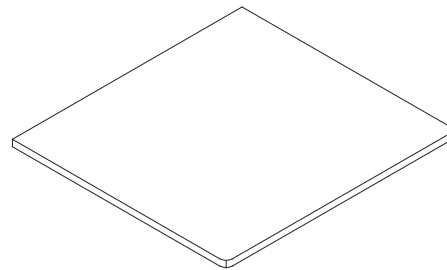


3

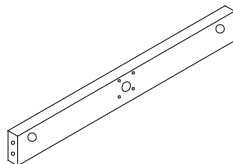


4

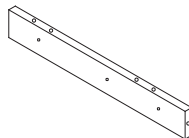


5

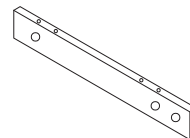


6

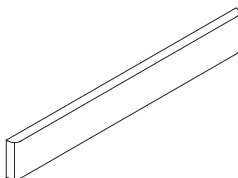


7

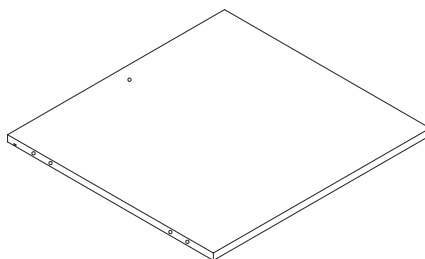


8

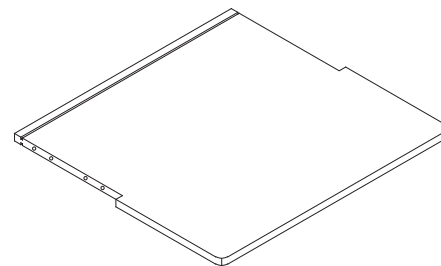


9

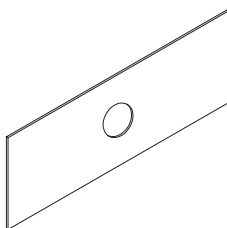


10

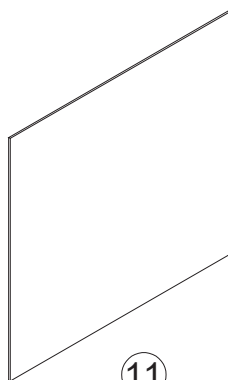


11

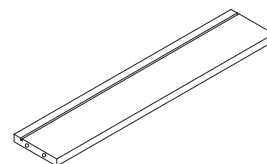


12

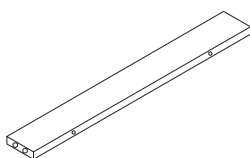


13

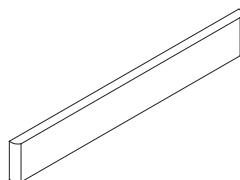


14

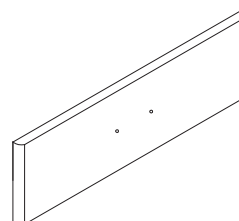


15 x3

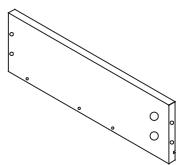


①⑥ x3

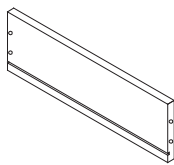










①⑦ x3




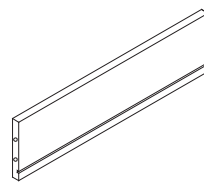


①⑧ x3

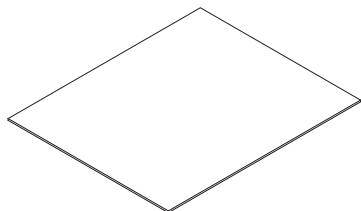

①⑨ x3

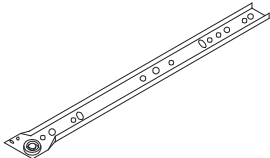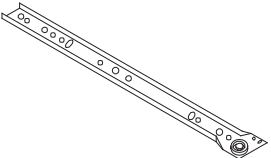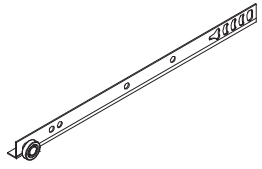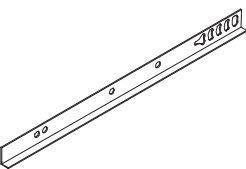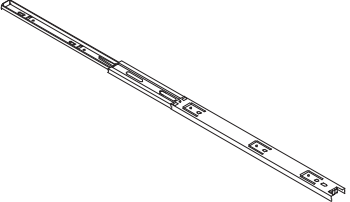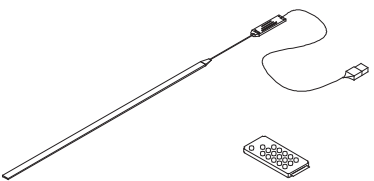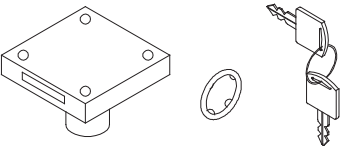CL  Left Glider 3	CR  Right Glider 3	DL  Left Slider 3
DR  Right Slider 3	A  Cam Bolt 39+2	B  Cam Lock 39+2
C  3x12mm Screw 58+2	D  8x30mm Wooden Dowel 18+1	E  Three Section Rail 2
F  Iron Sheet 2	G  Light Strip 1	H  1
I  Screw 4	J  4x30mm Screw 13+1	K  Bolt 6

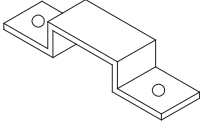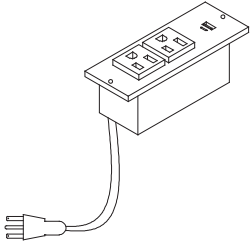L  Handle3	M  Fixed Buckle2	N  Outlet1
		



Note: Please do not use any power tools. Use of power tools may cause damage and void manufacture warranty.

Instructions For Fastening Cam Bolt and Cam Lock





CAM BOLT





CAM LOCK

Cam Bolt

Place Cam Bolt on the designated pre-drilled hole on the panel. Use a Phillips Screwdriver to screw in Cam Bolt vertically until shoulder is snug and flushed with panel. Do not over-tighten or under-tighten Cam-bolt. See illustrations below.

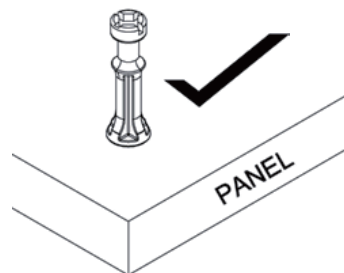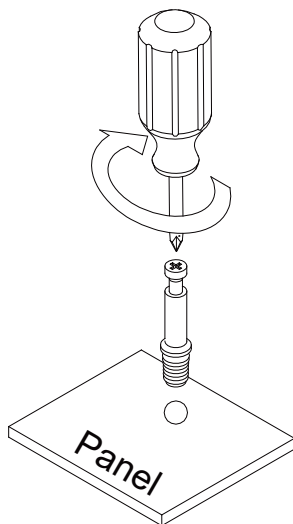



Shoulder is flushed
(on the same level)
with the panel.

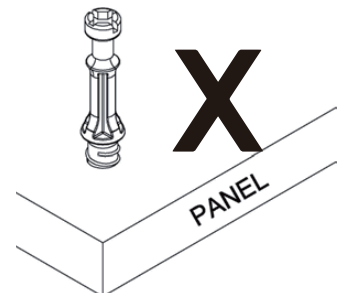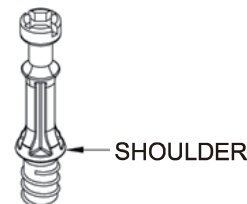

Shoulder is
above the panel.

CAM-LOCK

Align the arrow on the Cam-lock to the
Cam-bolt head and insert the Cam-lock.

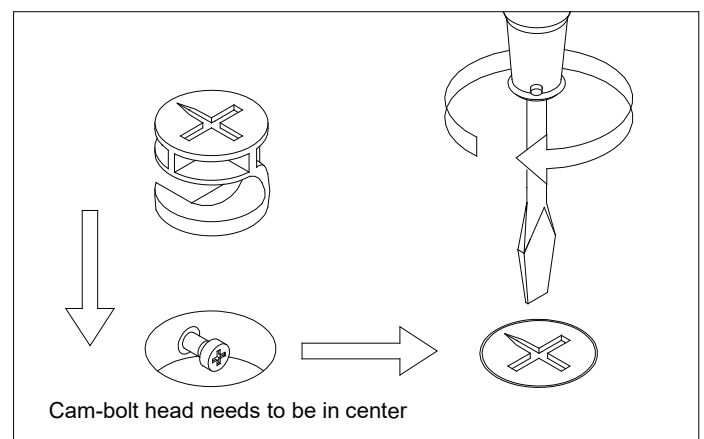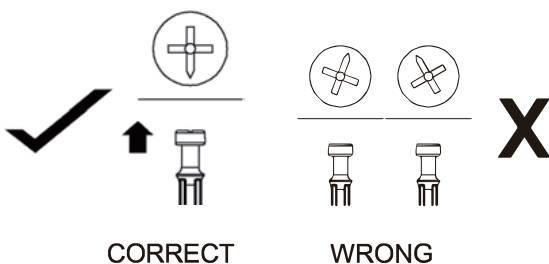


Use a Flat-head Screwdriver to turn Cam Lock clockwise to lock onto the head of the Cam Bolt. Turn until it is snug (about a half turn) – over-tightening could damage Cam Lock and/or Cam Bolt.

Step 1


Tip: Press the plastic sheet in the enlarged image according to the arrow in the picture to separate the three-section rails for subsequent installation.

Hardware Needed		
E		X2

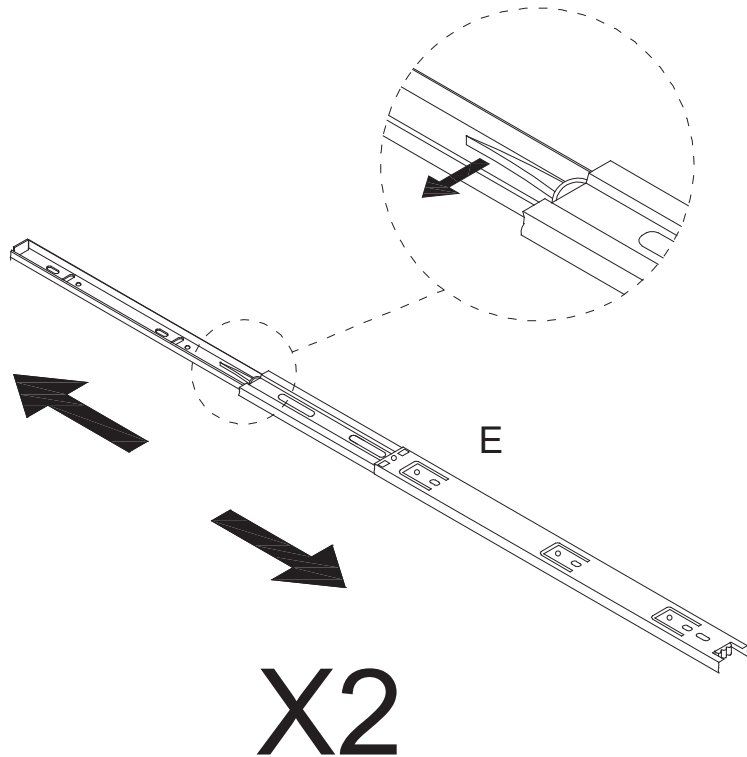

Step 2

Hardware Needed		
C		X8
F		X2

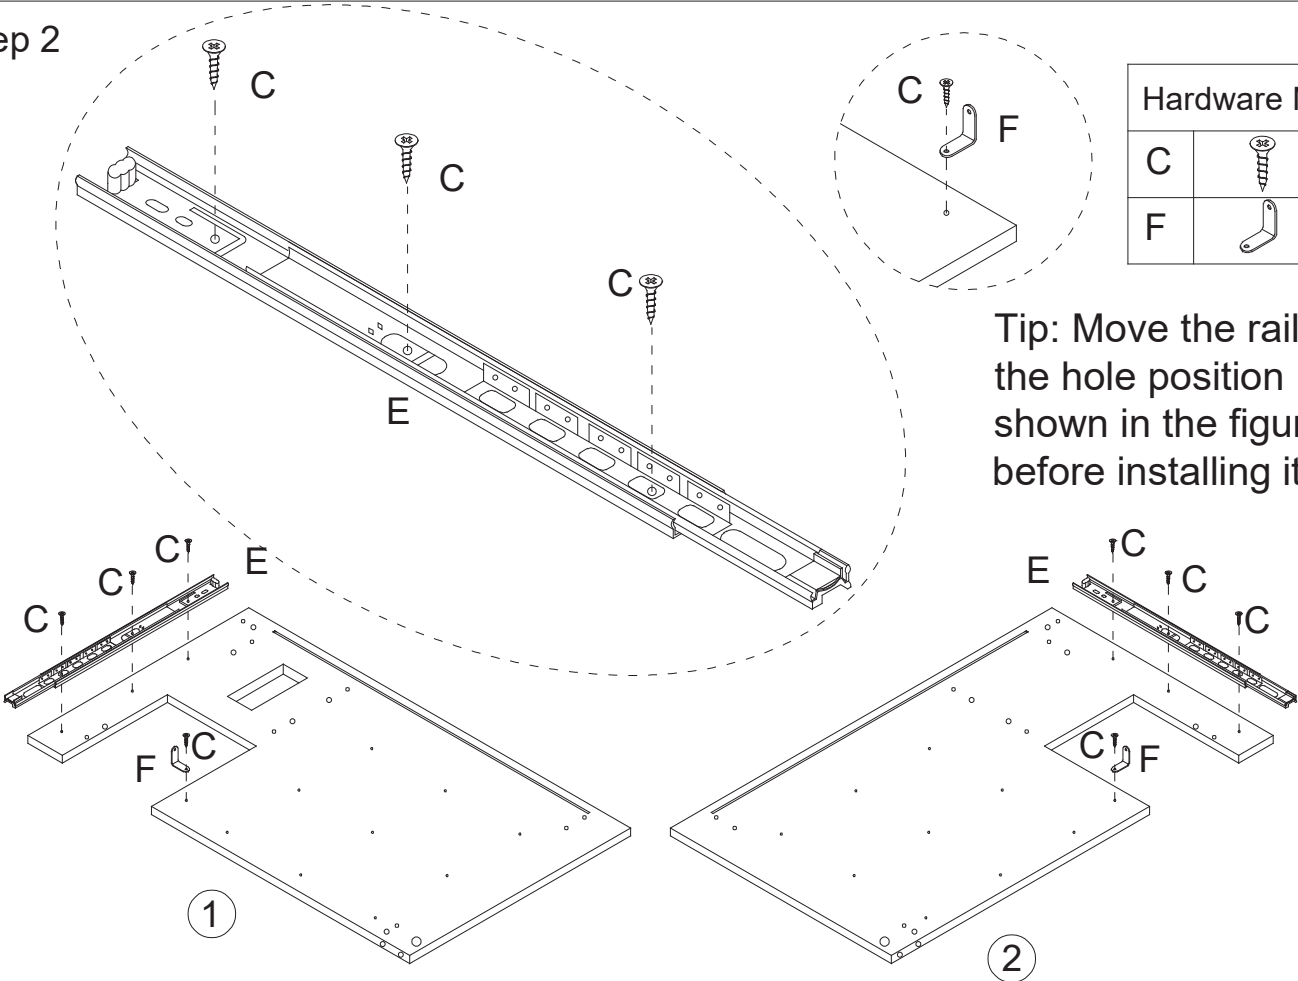

Tip: Move the rail to the hole position shown in the figure before installing it.

Step 3

Diagram showing the assembly of the top rail (CL) and bottom rail (CR) with screws (C).

Hardware Needed		
CL		X3
CR		X3
C		X18

Diagram 1: Assembly of the top rail (CL) and bottom rail (CR) with screws (C).

Diagram 2: Assembly of the top rail (CL) and bottom rail (CR) with screws (C).

Step 4

Diagram showing the assembly of the top rail (CL) and bottom rail (CR) with screws (A) and nuts (D).


Hardware Needed		
A		X16
D		X12

Diagram 1: Assembly of the top rail (CL) and bottom rail (CR) with screws (A) and nuts (D).

Diagram 2: Assembly of the top rail (CL) and bottom rail (CR) with screws (A) and nuts (D).


Step 5

Hardware Needed		
C		X4
G		X1
M		X2

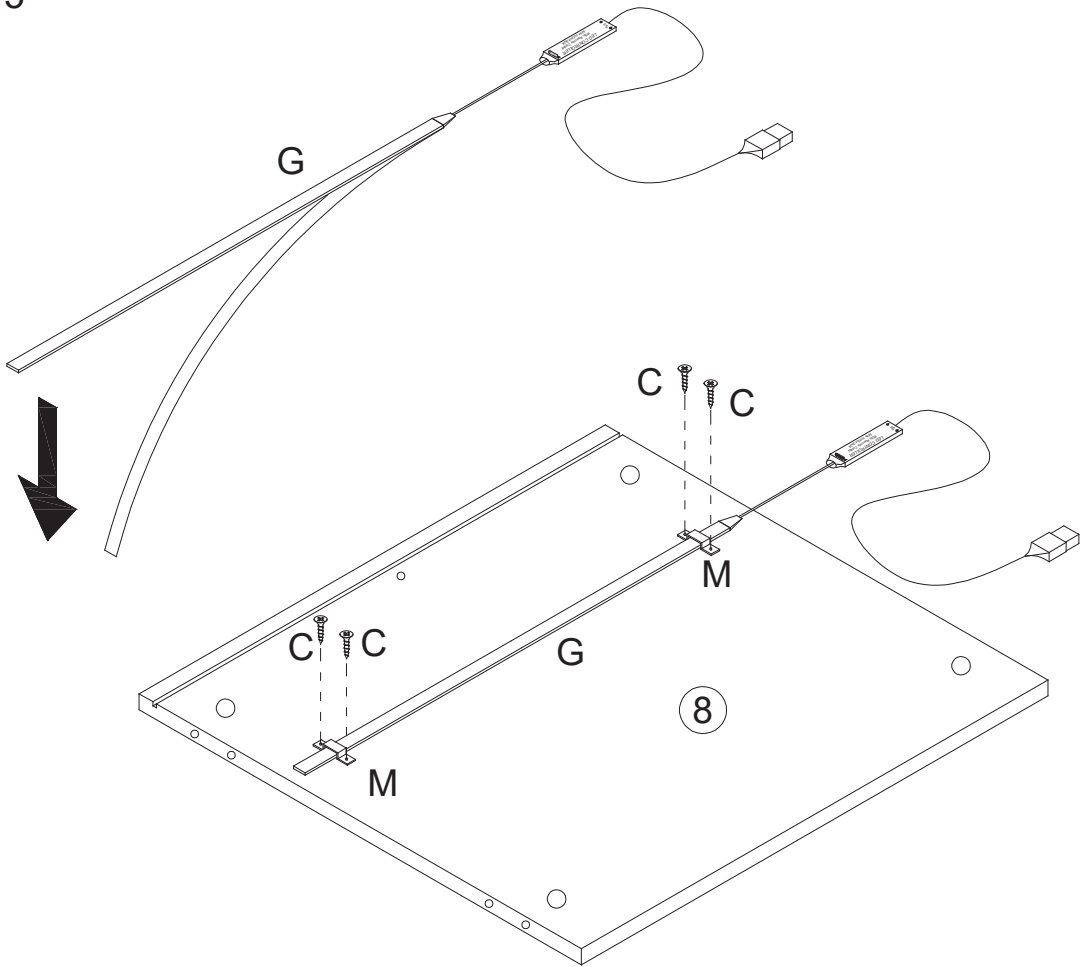



Step 6

Hardware Needed		
H		X1
I		X4

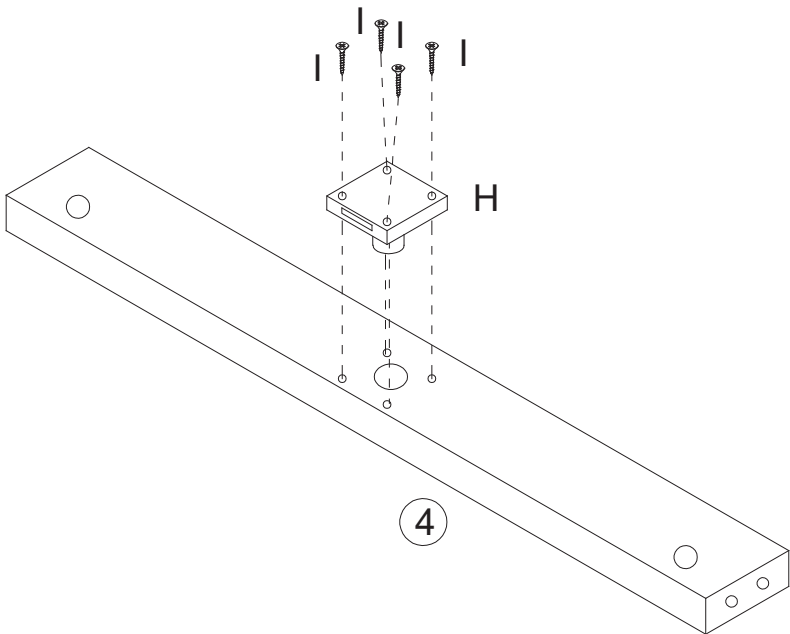


Step 7

Hardware Needed		
J		X1

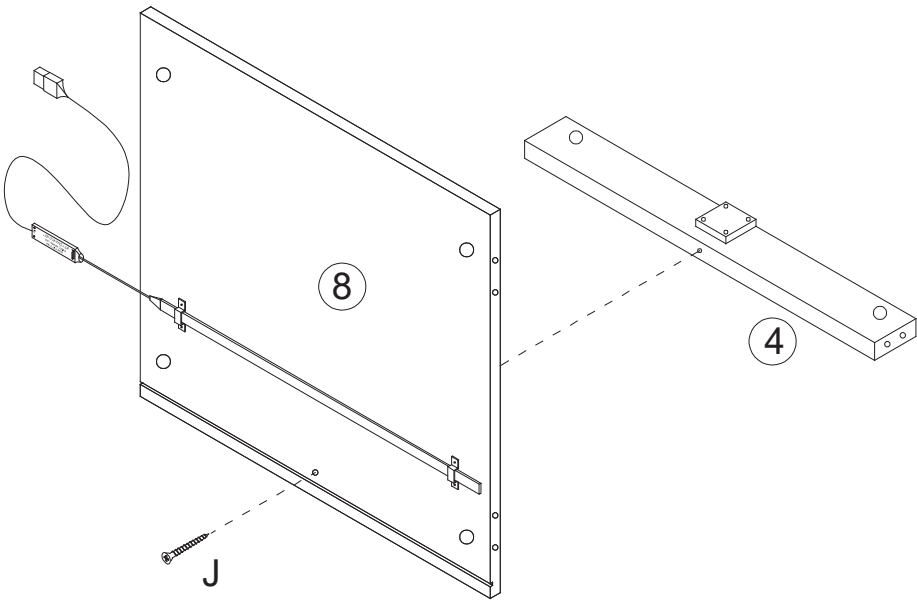



Step 8

Hardware Needed		
B		X3

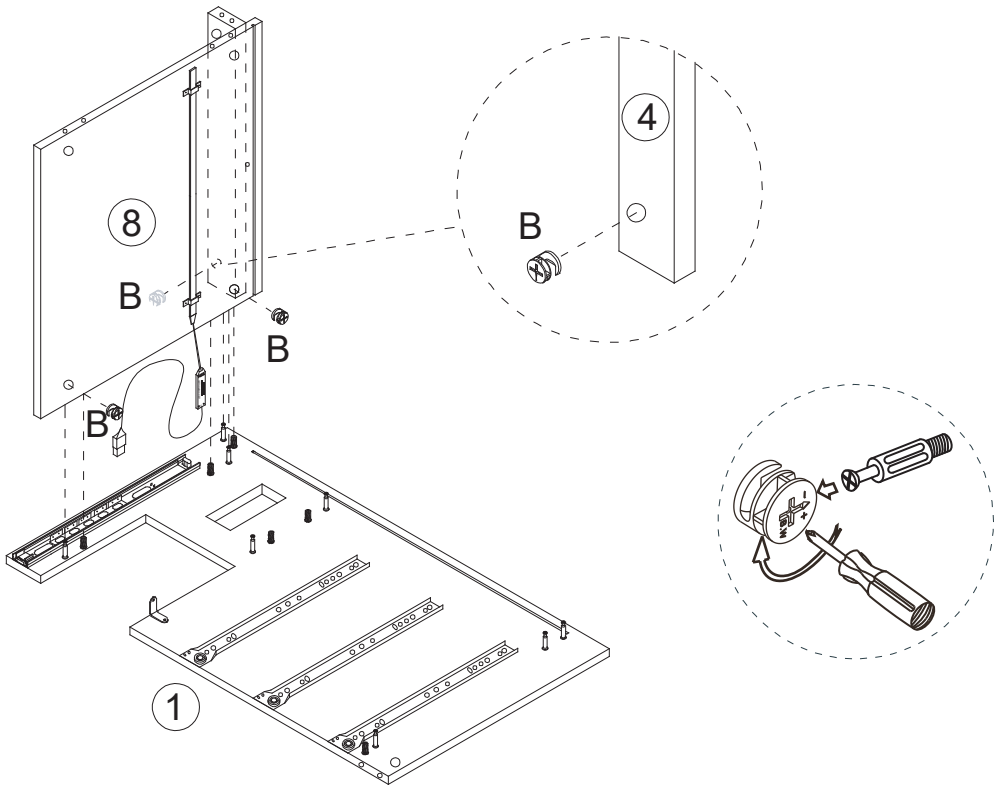



Step 9

Hardware Needed		
B		X2

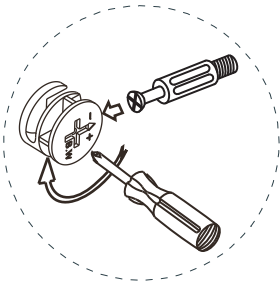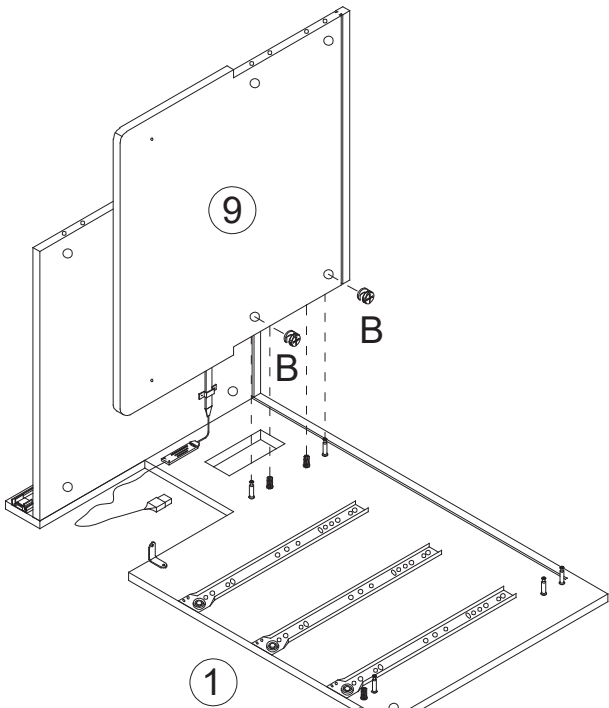


Step 10


Hardware Needed		
B		X3

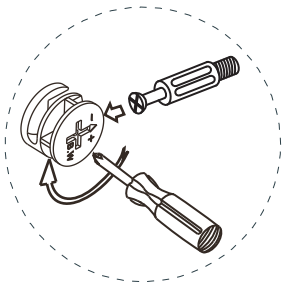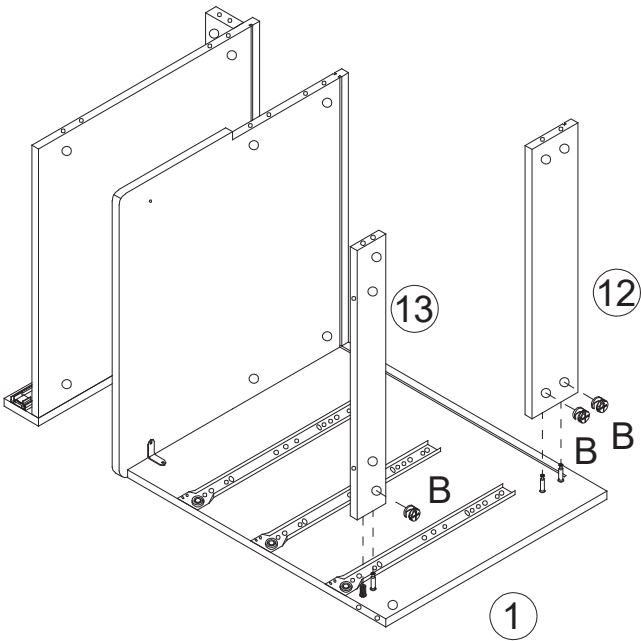

Step 11

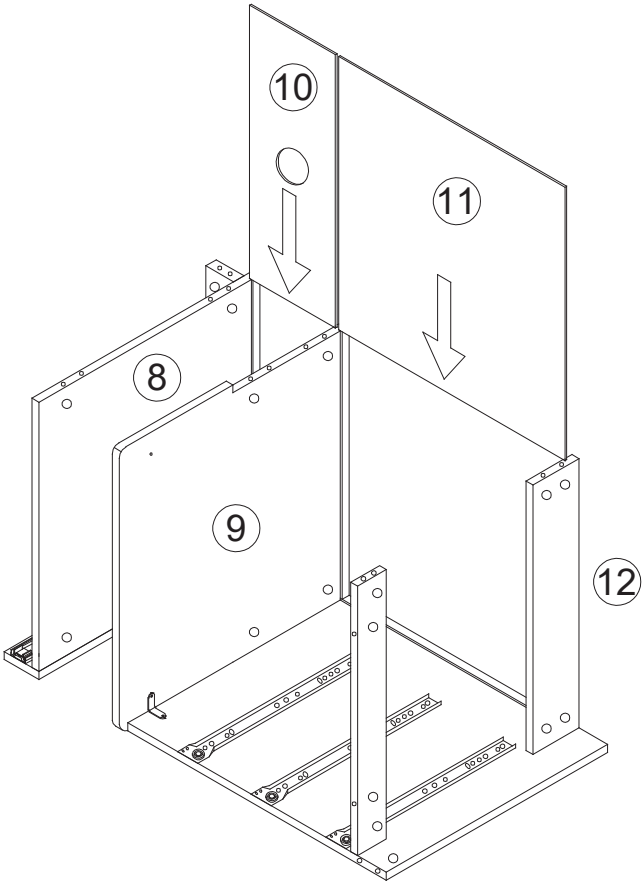

Step 12

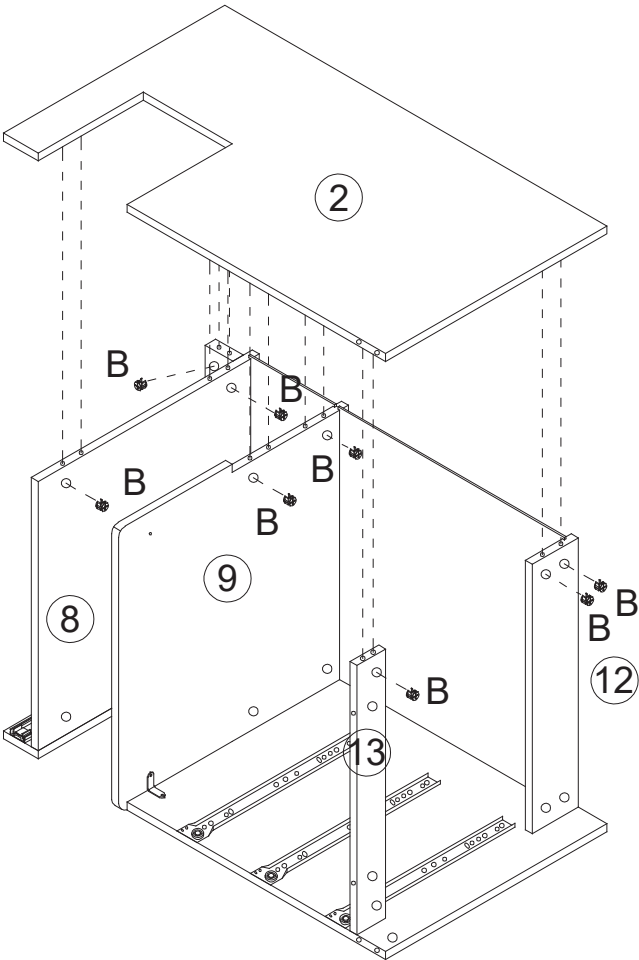


Hardware Needed

B





X8

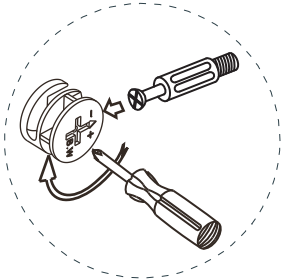



Step 13

Hardware Needed		
A		X4
D		X2

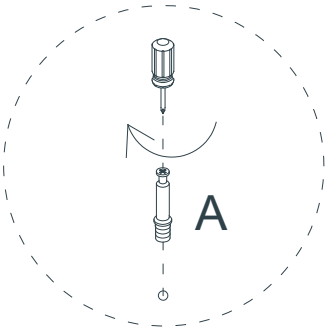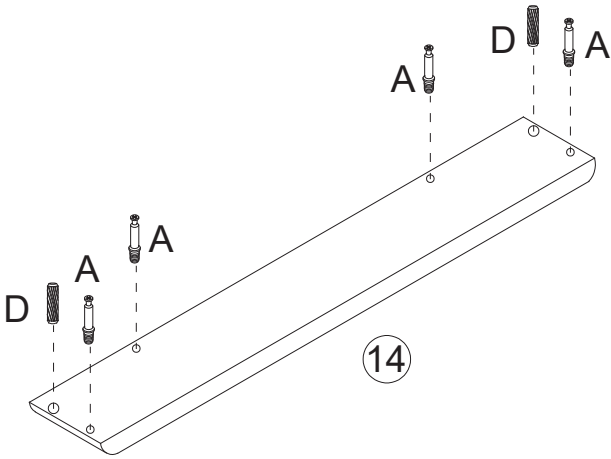

Step 14


Hardware Needed		
B		X4
C		X2

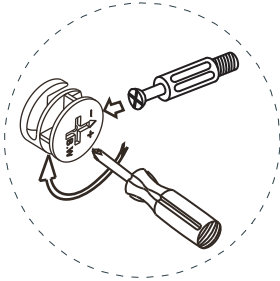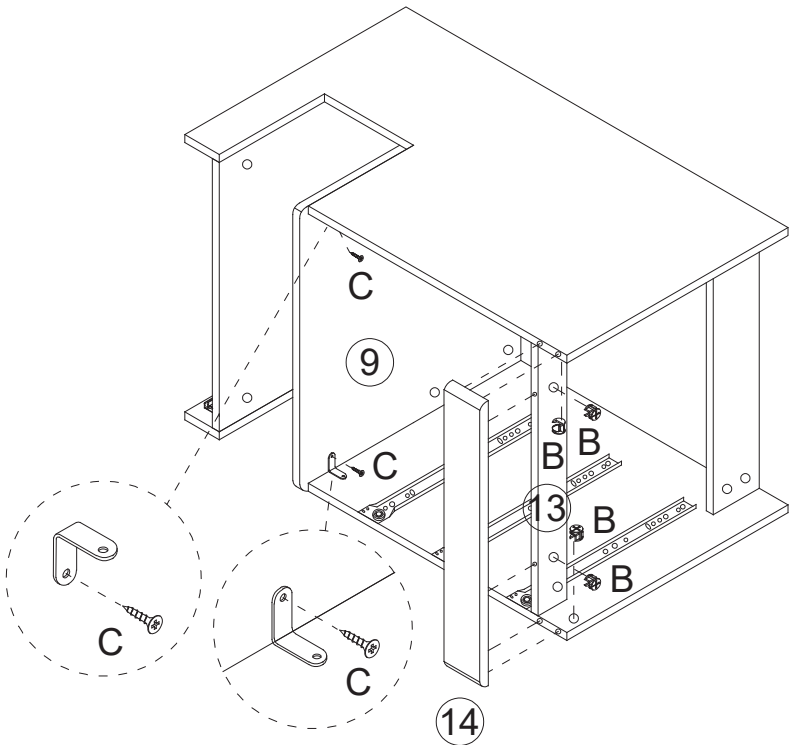


Step 15


Tip: Please pay attention to the direction of the holes on plates 5, 6, and 7 during installation.

Hardware Needed		
A		X2
B		X2

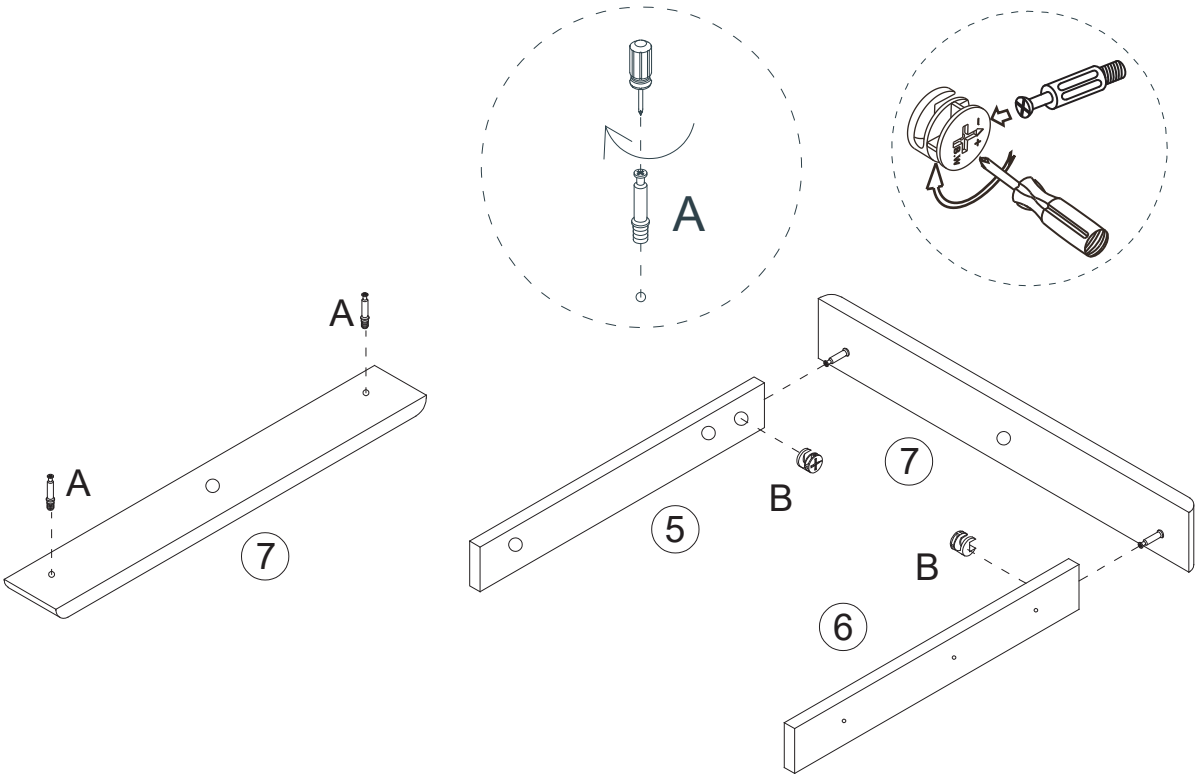



Step 16

Hardware Needed		
A		X5
D		X4

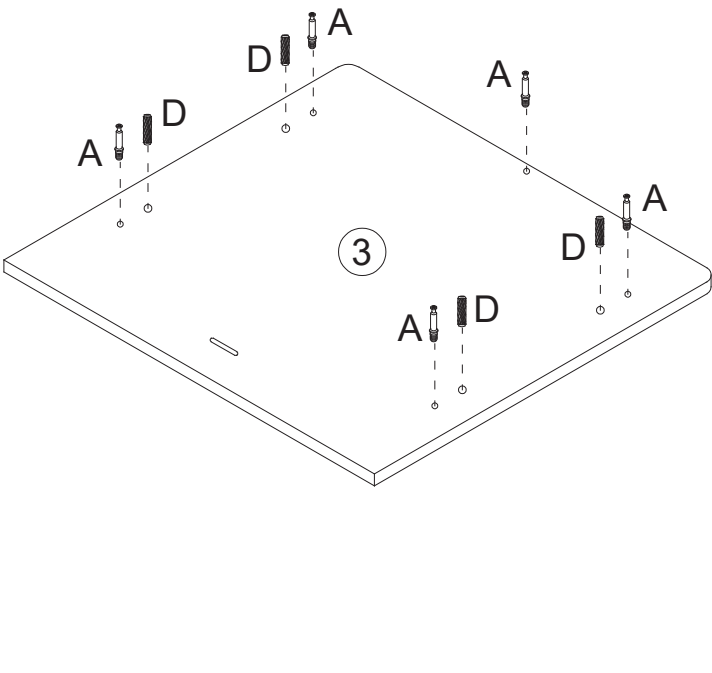



Step 17

Hardware Needed		
B		X5

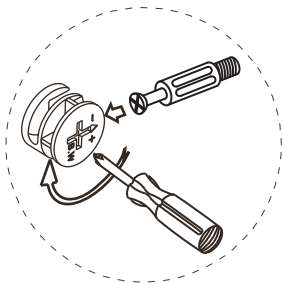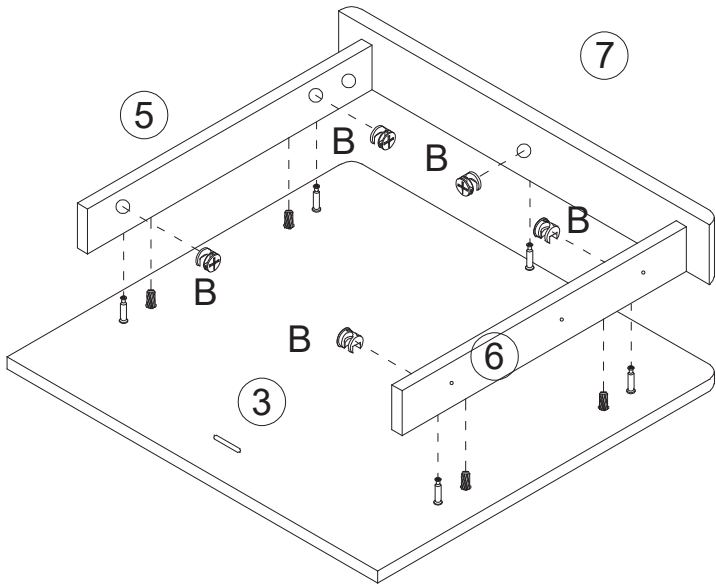


Step 18



Hardware Needed		
C		X6

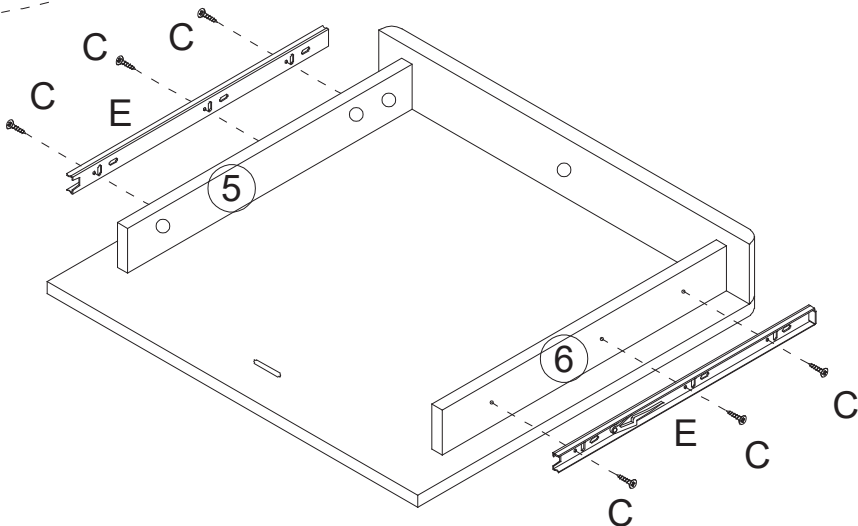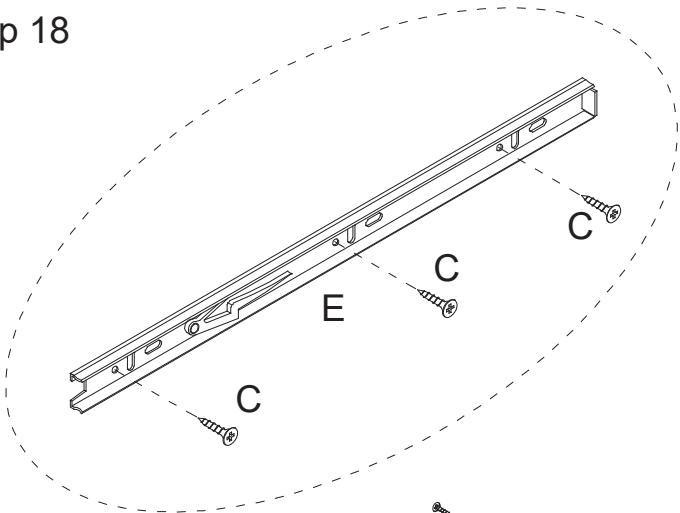


Step 19

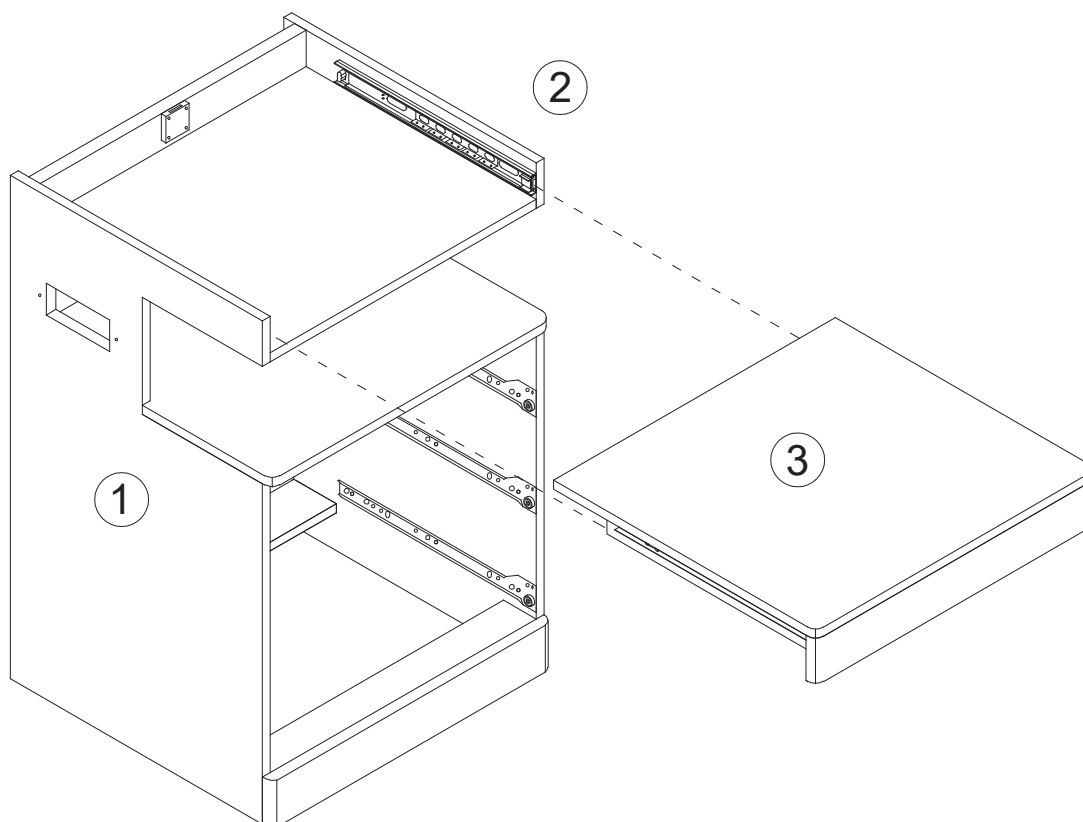


Tip: Pull out the inner iron sheet of the three-section rail in the direction of the arrow, and then install it correctly as shown in the diagram.

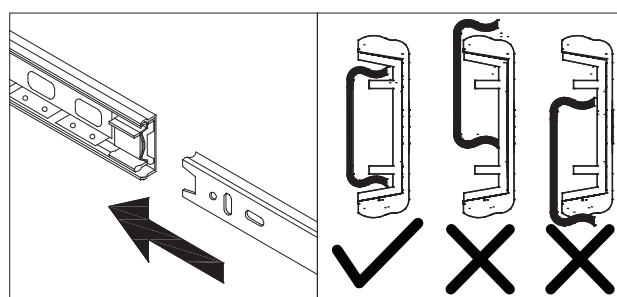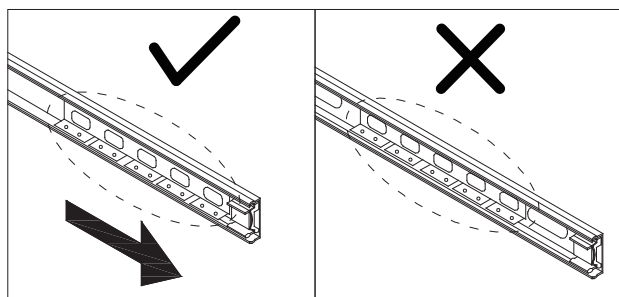


Step 20

Hardware Needed		
J		X12

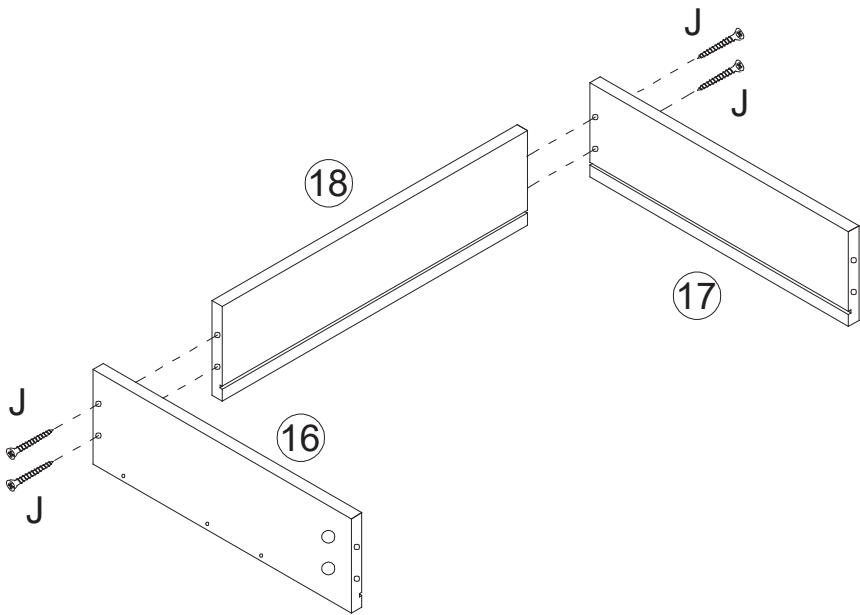

X3



Step 21

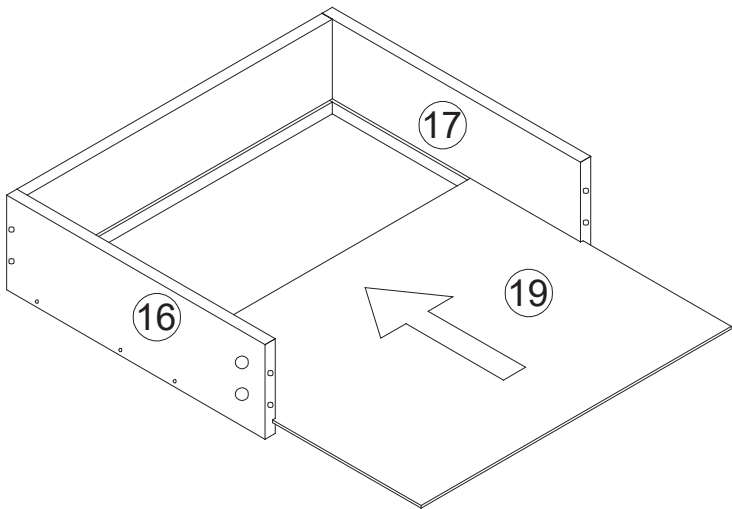

X3

Step 22


Hardware Needed		
A		X12

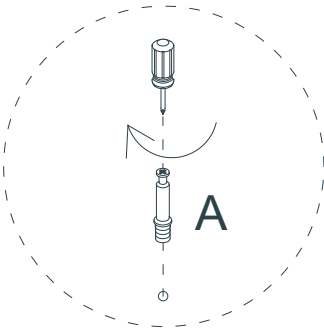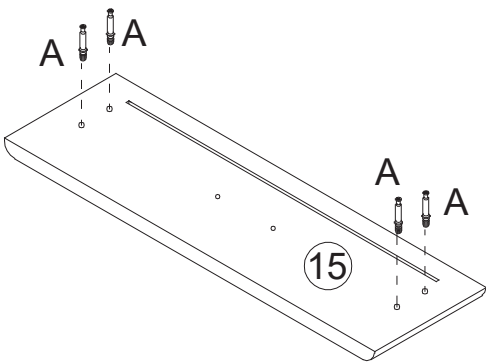

X3


Step 23

Hardware Needed		
B		X12

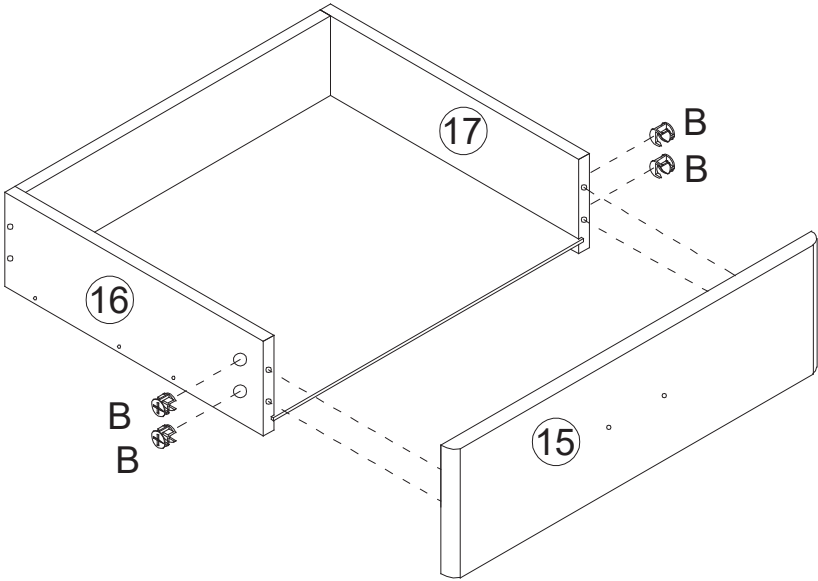


X3

Step 24

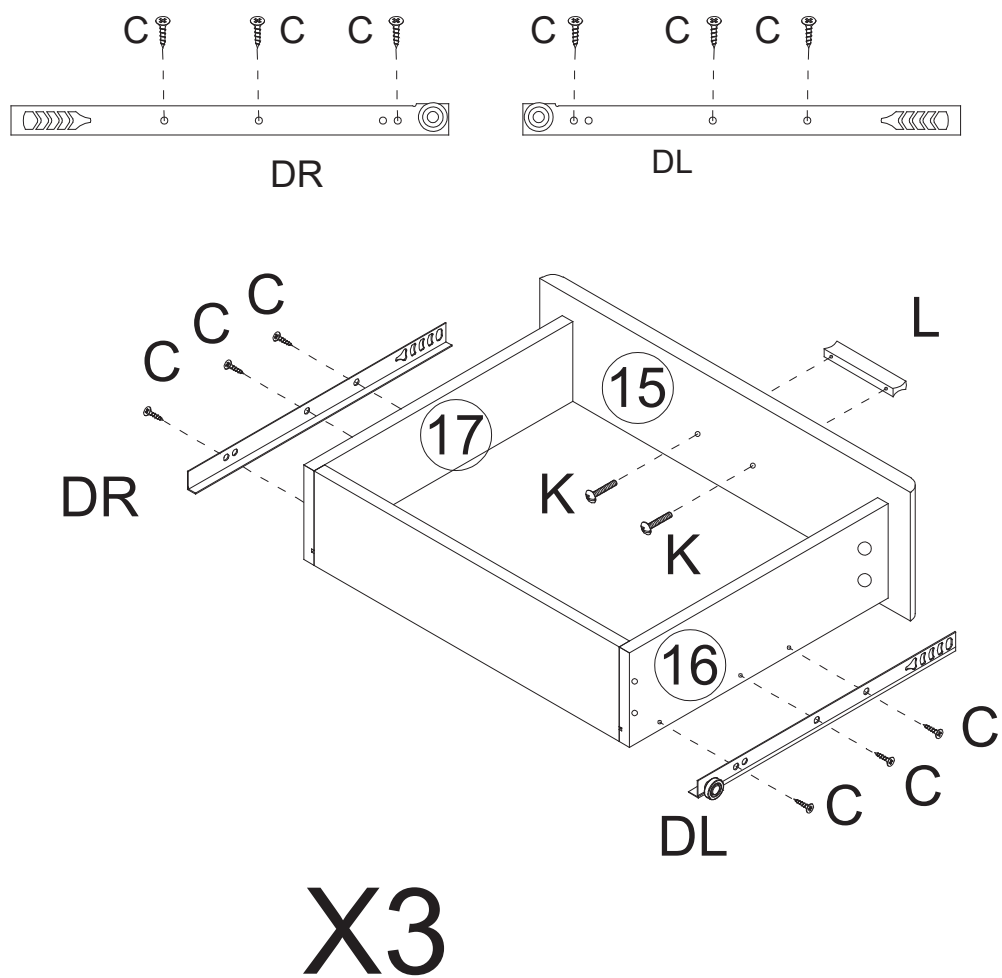


Hardware Needed		
DL		X3
DR		X3
C		X18
K		X6
L		X3

Step 25

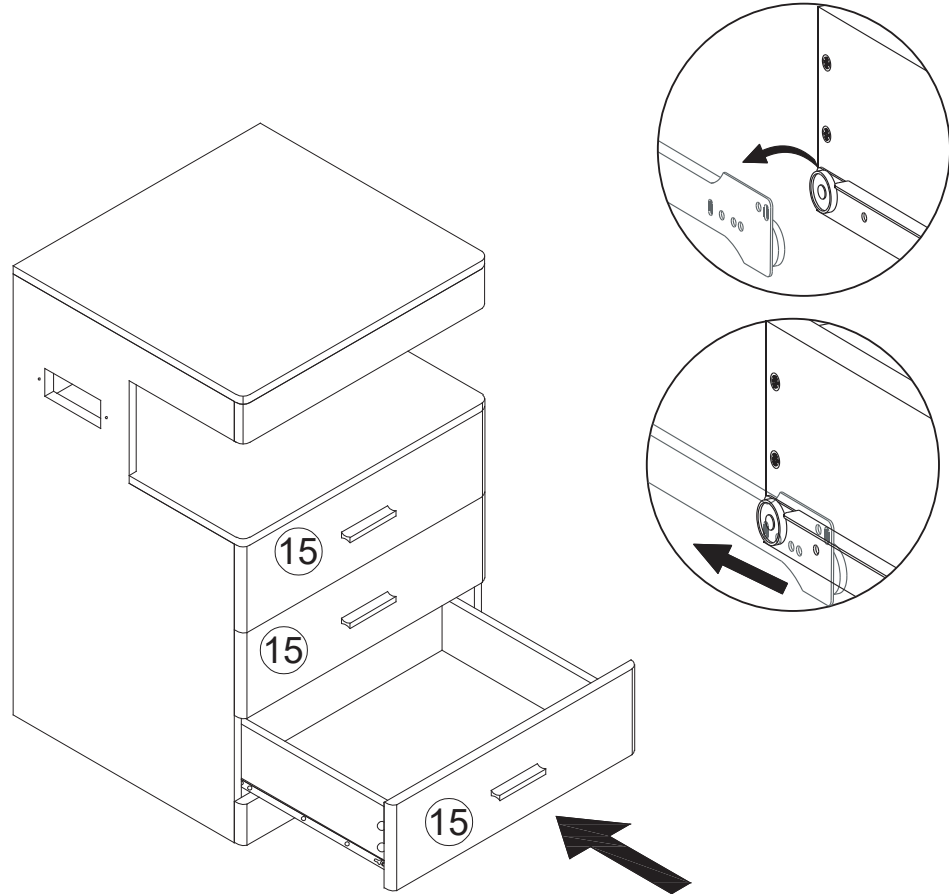


Step 26

Hardware Needed			
H			X1

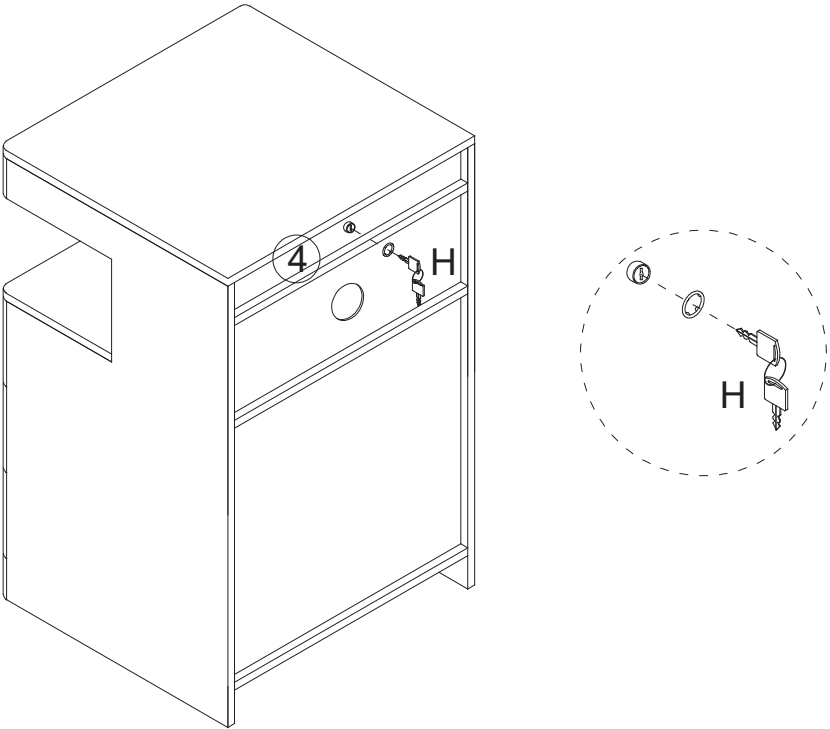


Step 27

Hardware Needed			
C			X2
N			X1

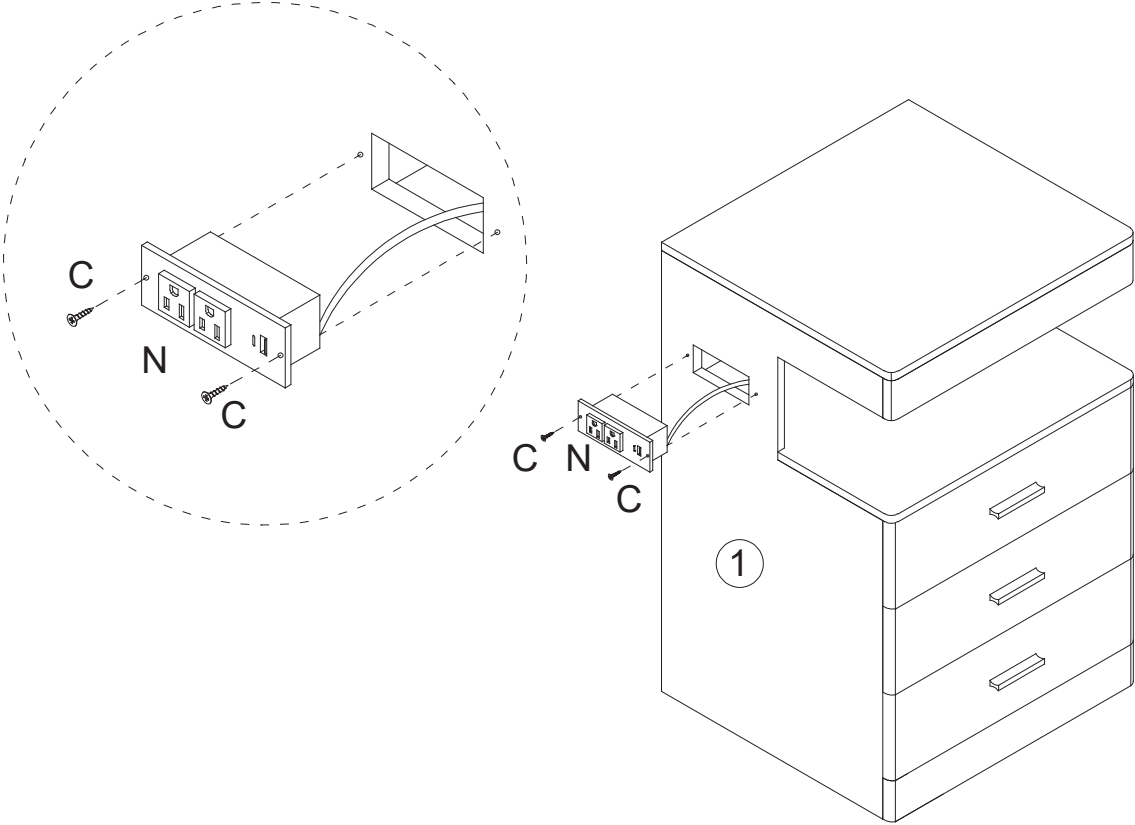

Step 28

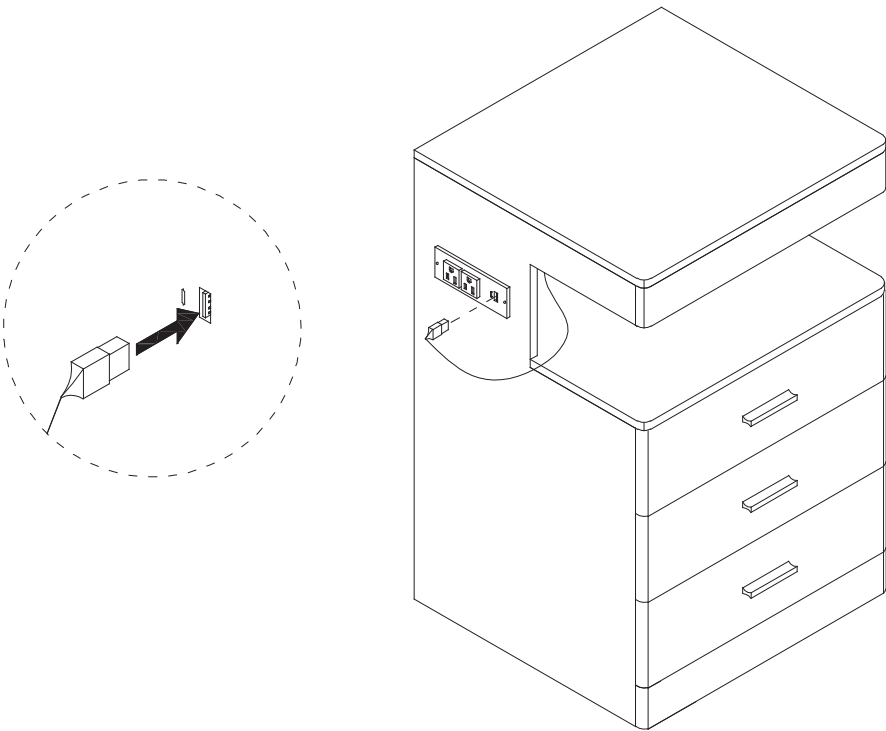

Step 29 Tip: Remove the thin sheet from the bottom of the remote control.

Hardware Needed		
G		X1

