
ASSEMBLY INSTRUCTIONS
INSTRUCTIONS DE MONTAGE

BAR CABINET
MEUBLE BAR

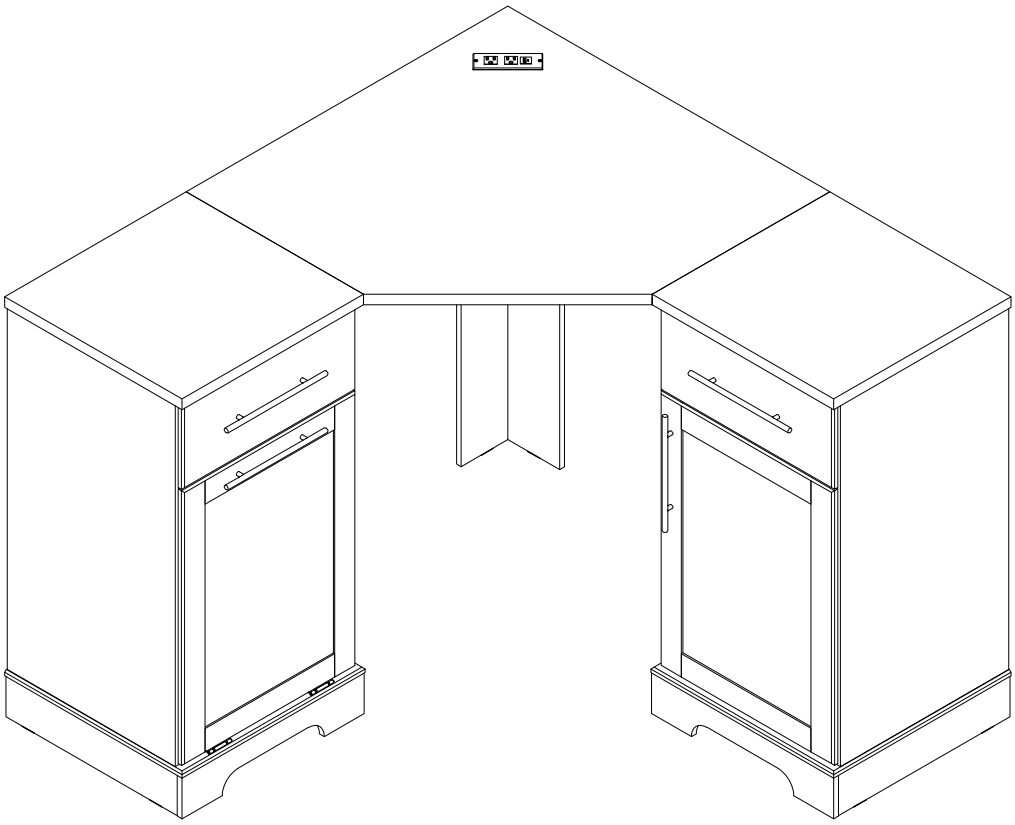

WARNING



This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.


AVERTISSEMENT



Ce produit N'EST PAS une unité derangement pour vêtements (CSU).
NE l'utilisez PAS pour le rangement de vêtements.
Une utilisation impropre peut entraîner un basculement des meubles.




































N707P542034

Detail View/ Vue détaillée

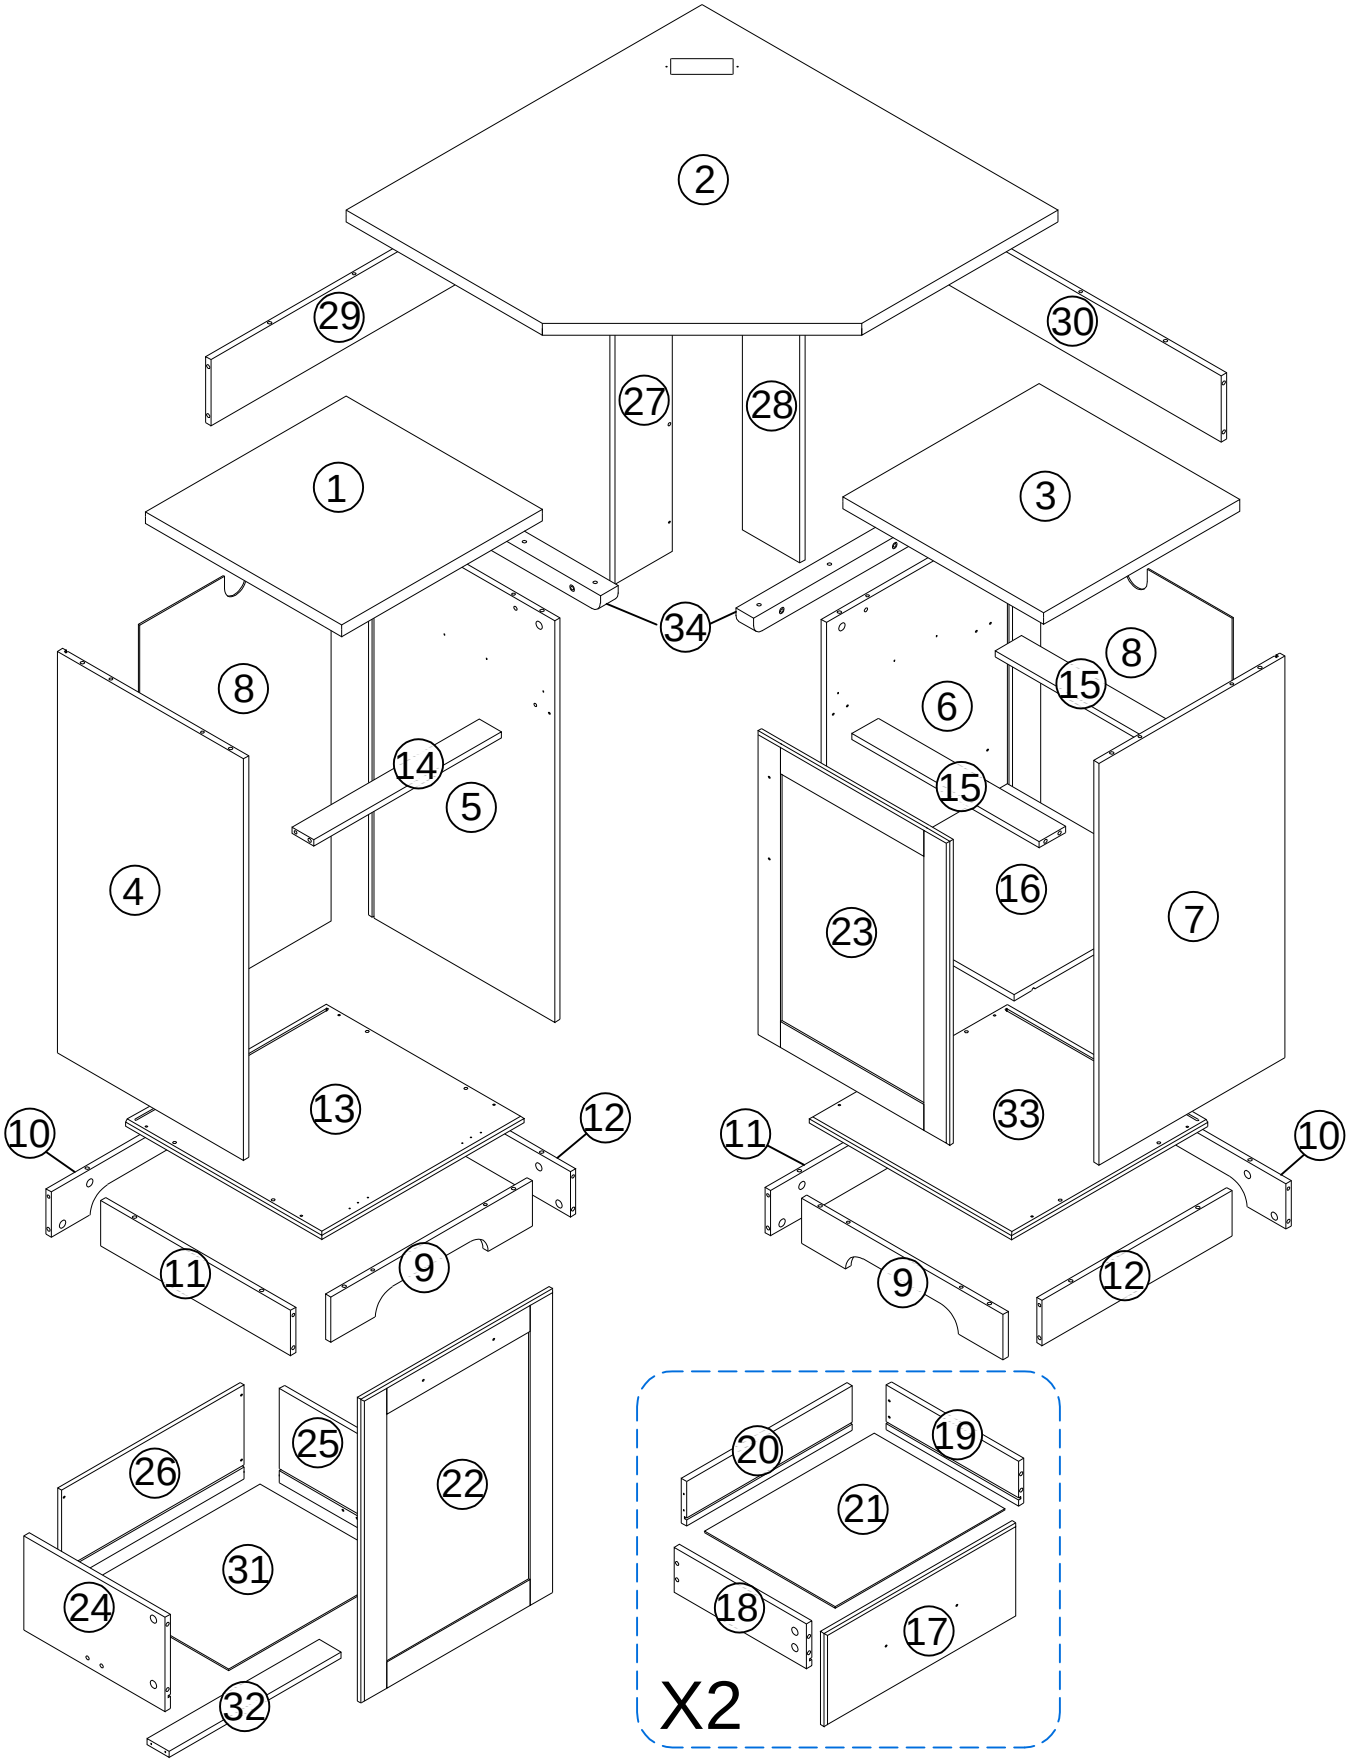













Part List/ Liste des pièces

N707P542034

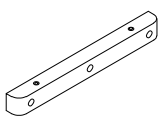
 1: 1pc	 2: 1pc	 3: 1pc	 4: 1pc	 5: 1pc	 6: 1pc
 7: 1pc	 8: 2pcs	 9: 2pcs	 10: 2pcs	 11: 2pcs	 12: 2pcs
 13: 1pc	 14: 1pc	 15: 2pcs	 16: 1pc	 17: 2pcs	 18: 2pcs
 19: 2pcs	 20: 2pcs	 21: 2pcs	 22: 1pc	 23: 1pc	 24: 1pc
 25: 1pc	 26: 1pc	 27: 1pc	 28: 1pc	 29: 1pc	 30: 1pc
 31: 1pc	 32: 1pc	 33: 1pc	 34: 2pcs	 Hardware box Liste du matériel	

Hardware List/Liste du

N707P542034

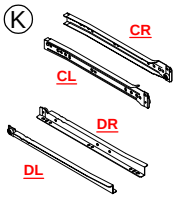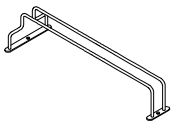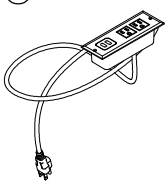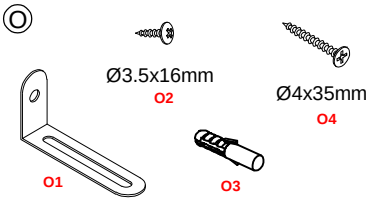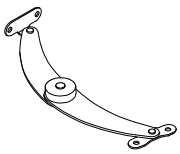
Ⓐ  Ø6x33mm 70+4pcs	Ⓑ  70+4pcs	Ⓒ  Ø6x30mm 34+3pcs	Ⓓ  Ø4x30mm 16+2pcs	Ⓔ  Ø4x40mm 11+1pcs	Ⓕ  Ø3.5x12mm 46+3pcs
Ⓖ  10pcs	Ⓗ  4pcs	Ⓘ  2pcs	J1  4pcs	J2  8pcs	Ⓚ  300mm x2sets
Ⓛ  3pcs	Ⓜ  1pc	N1  12+2pcs	N2  Ø3x16mm 18+2pcs	Ⓞ  2sets	
Ⓟ  10pcs	Ⓠ  35pcs	Ⓡ  1pc	Ⓢ  1pc	T1  1pcs	T2  Ø3x10mm 4pcs
Ⓤ  2pcs					

ASSEMBLY TOOLS REQUIRED (INCLUDED)
OUTILS D'ASSEMBLAGE REQUIS (INCLUS)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !
FAITES ATTENTION À NE PAS ENDOMMAGER LA POSITION DE MAINTIEN LORSQUE VOUS UTILISEZ DES OUTILS ÉLECTRIQUES !


Step 1/ Etape 1

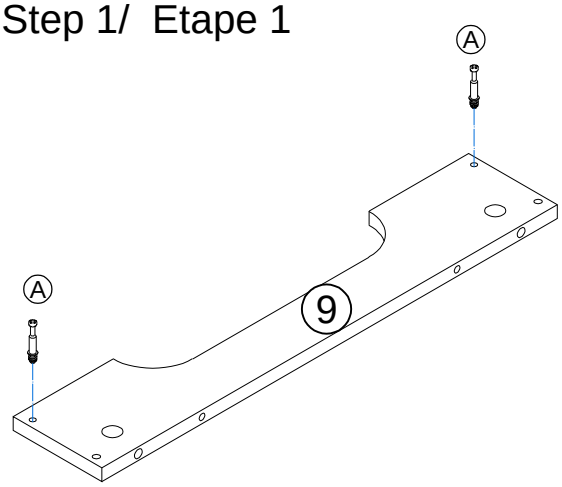


X2

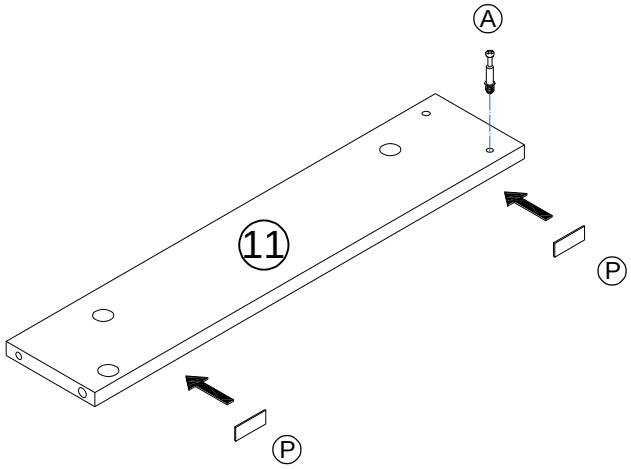


X2

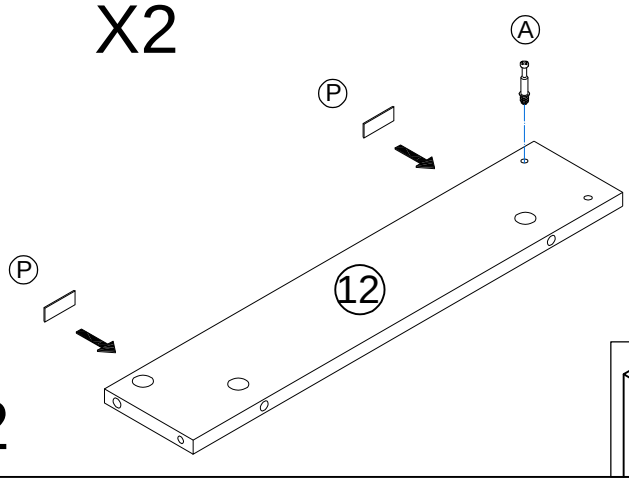


X2

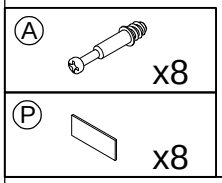


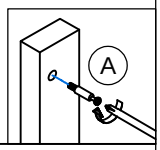


Step 2/ Etape 2

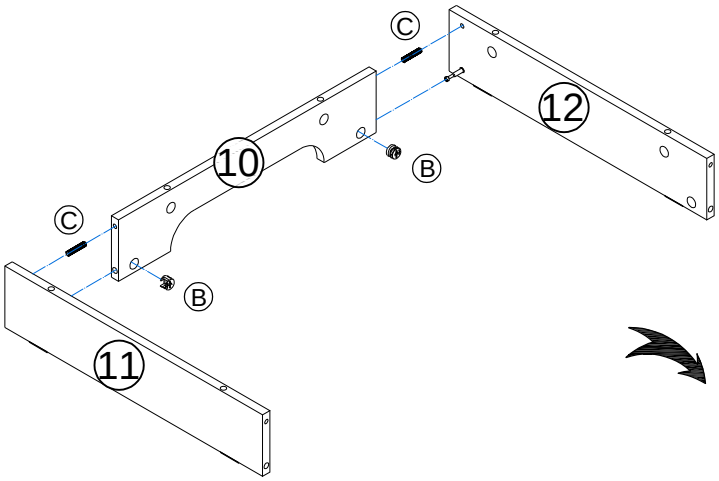


X2

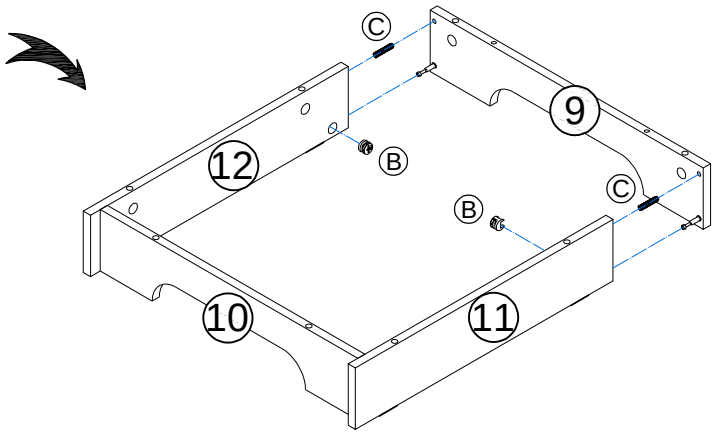



X2

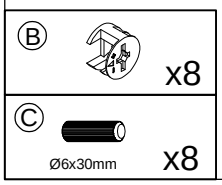


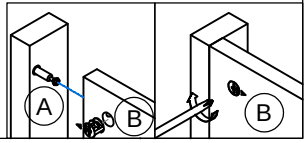

Step 3/ Etape 3

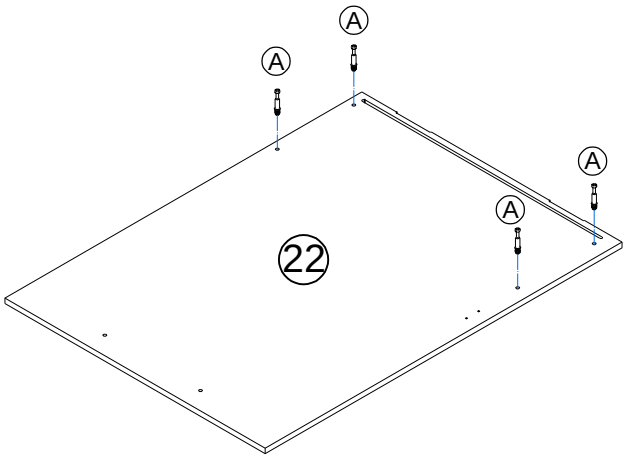

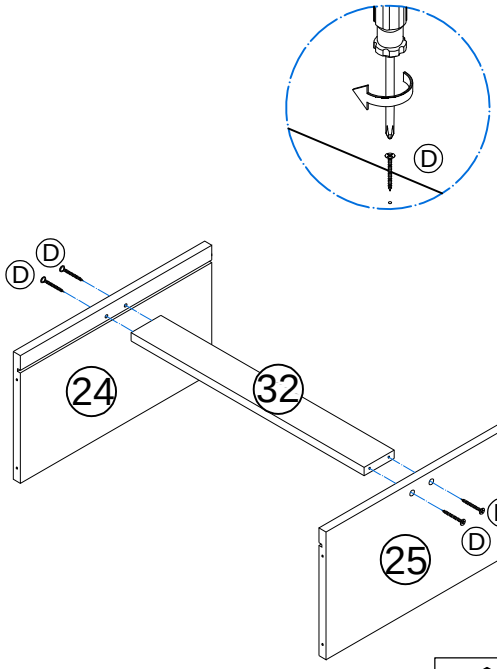

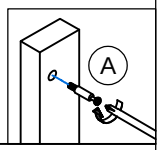



A 	x4
D  Ø4x30mm	x4


Step 4/ Etape 4

The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

La plaque mince doit être complètement insérée dans la rainure. Si l'insertion n'est pas facile, vous pouvez essayer d'appuyer par l'avant ou par l'arrière pour ajuster la position jusqu'à ce que la plaque mince soit complètement insérée dans la rainure.

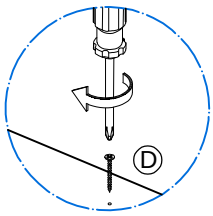


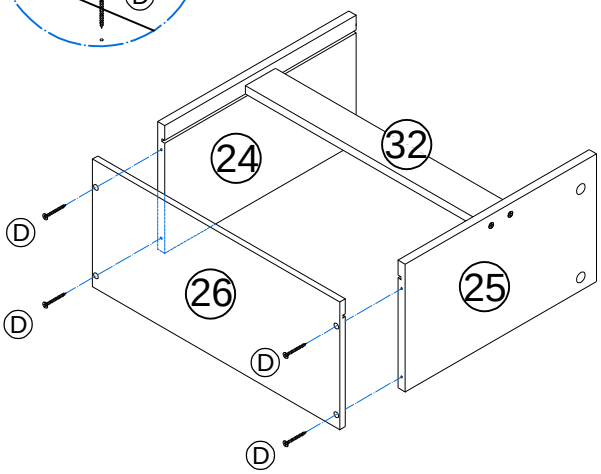

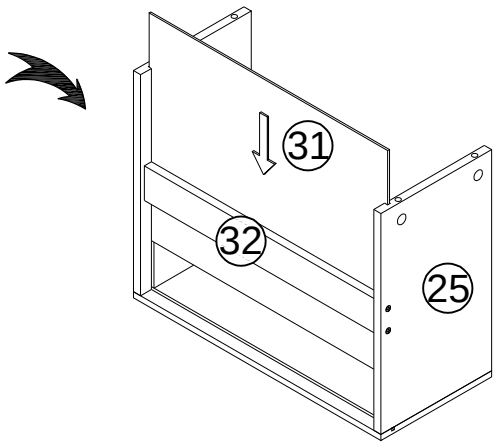


D  Ø4x30mm	x4

Step 5/ Etape 5

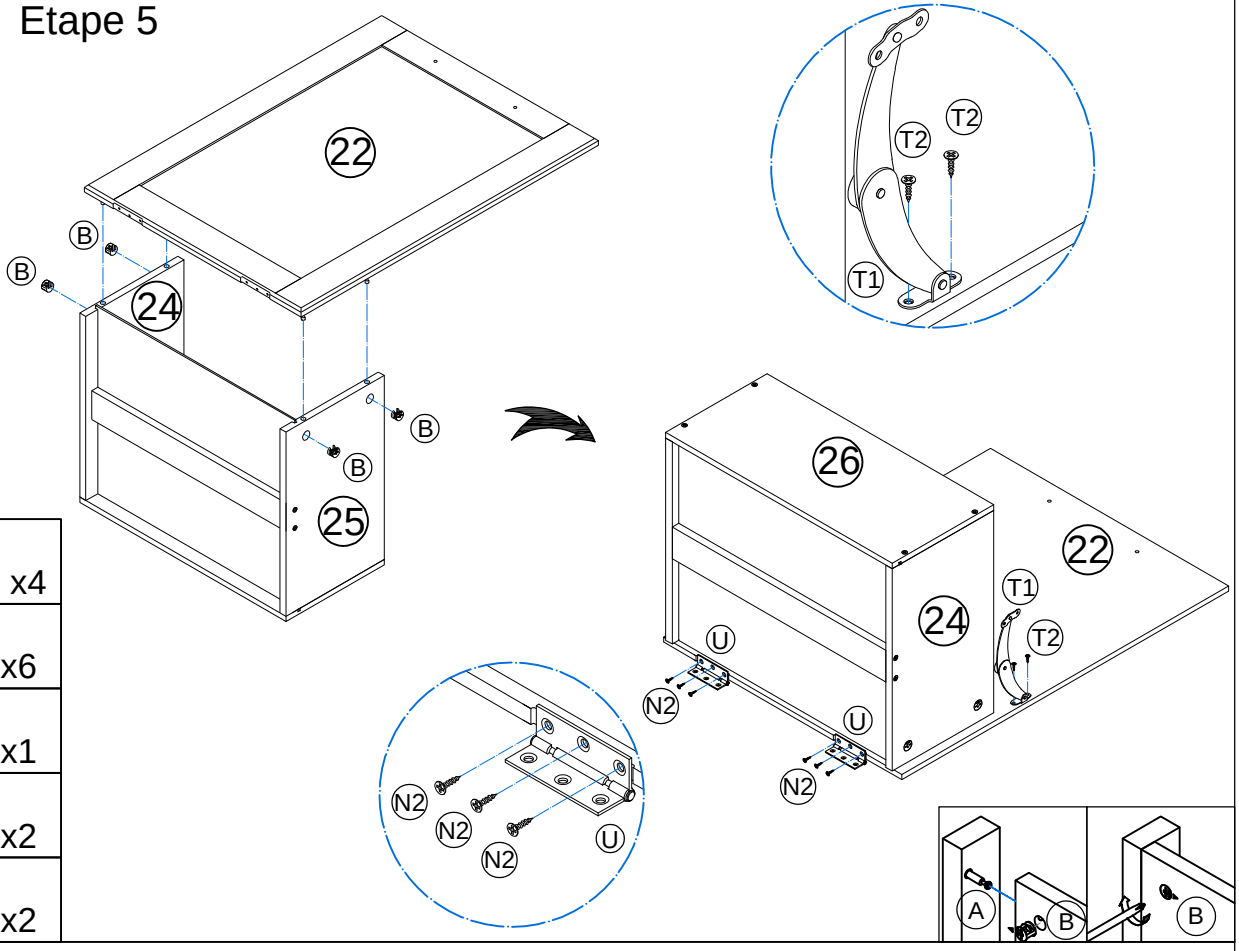


B		x4
N2	Ø3x16mm	x6
T1		x1
T2	Ø3x10mm	x2
U		x2

Step 6/ Etape 6

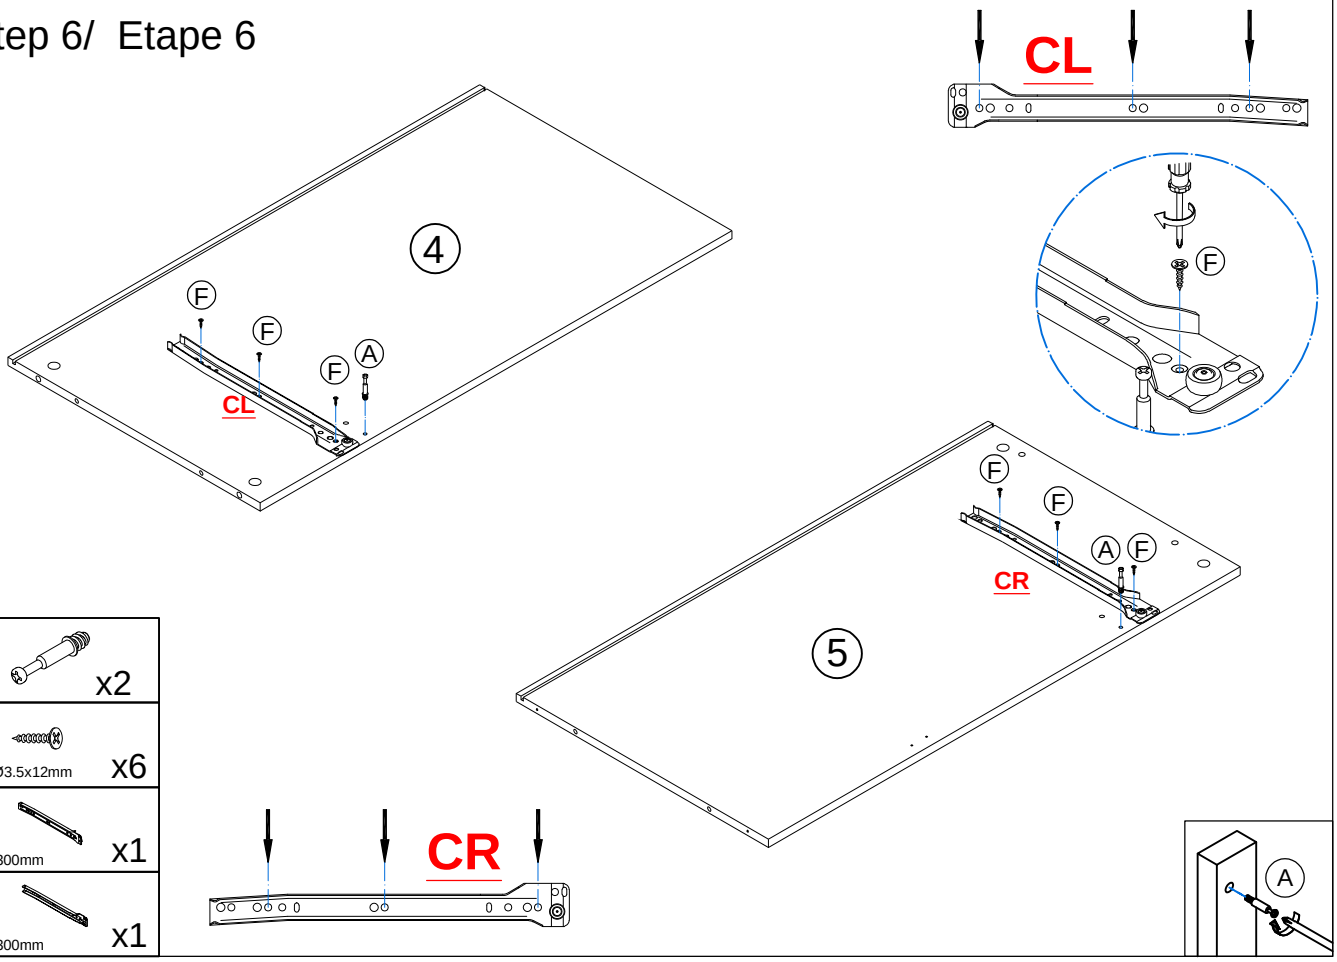


A		x2
F	Ø3.5x12mm	x6
CL	300mm	x1
CR	300mm	x1


Step 7/ Etape 7

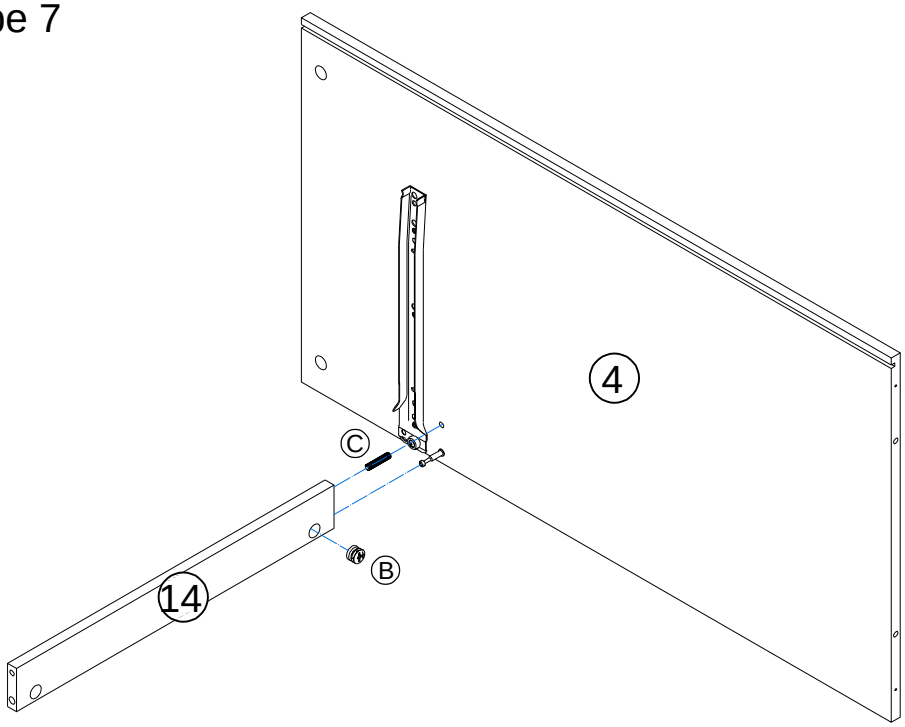


B		x1
C	 Ø6x30mm	x1

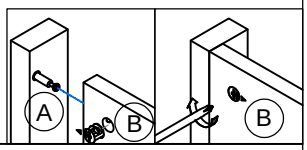


Step 8/ Etape 8

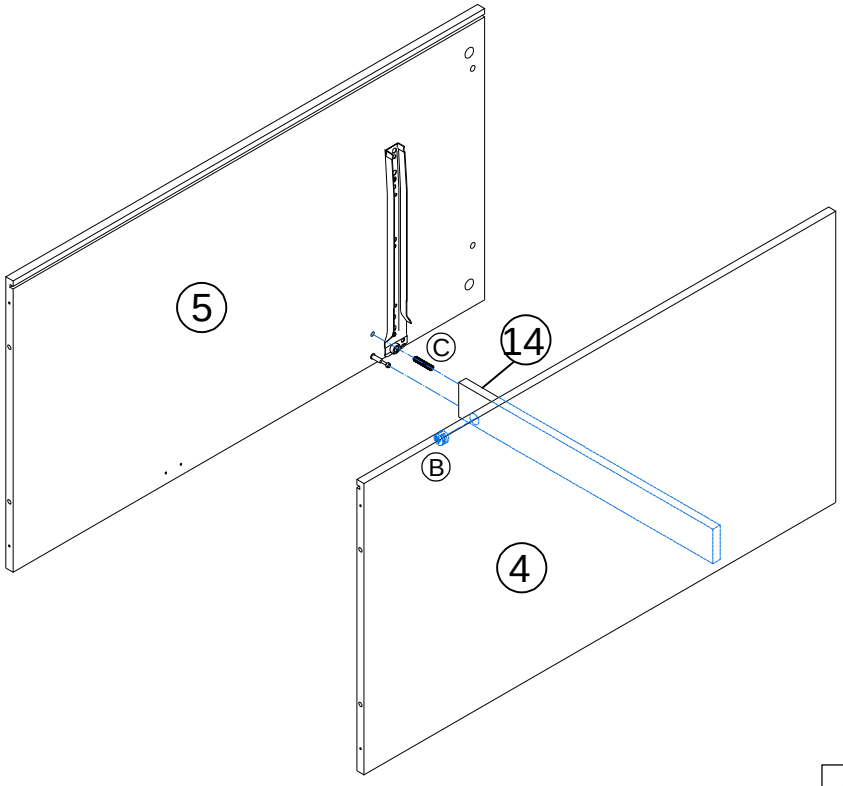


B		x1
C	 Ø6x30mm	x1

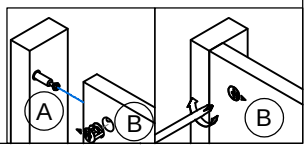

Step 9/ Etape 9

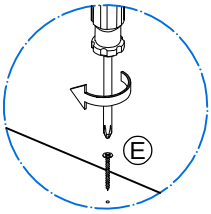


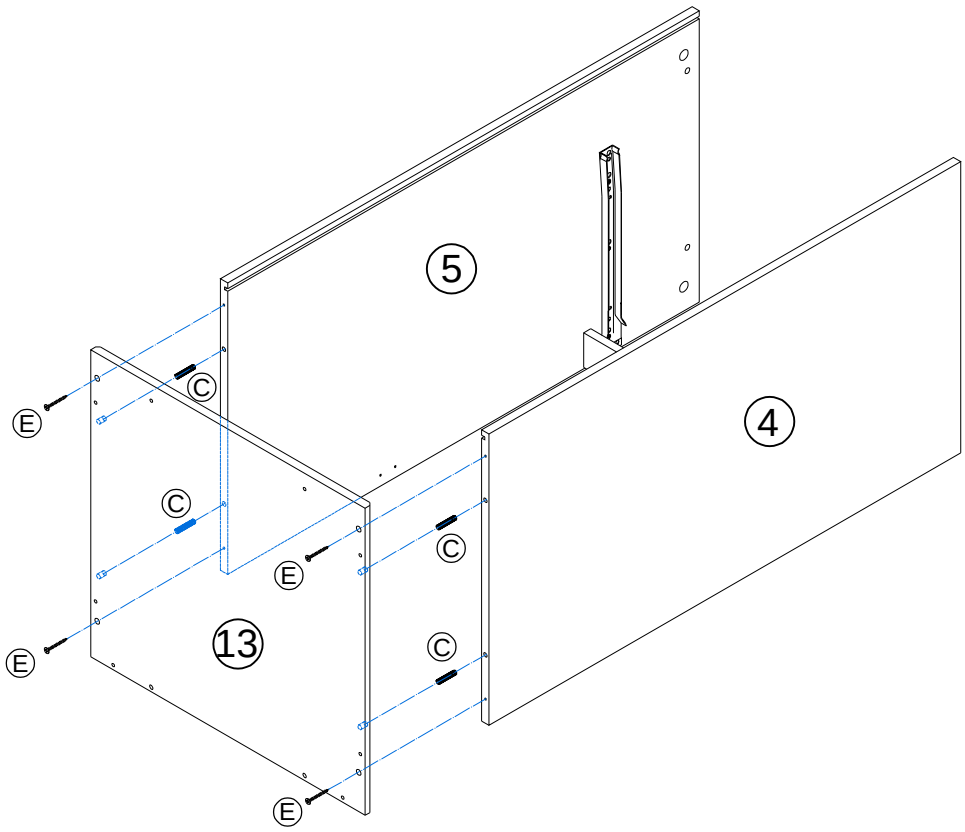


C Ø6x30mm x4

E Ø4x40mm x4


Step 10/ Etape 10

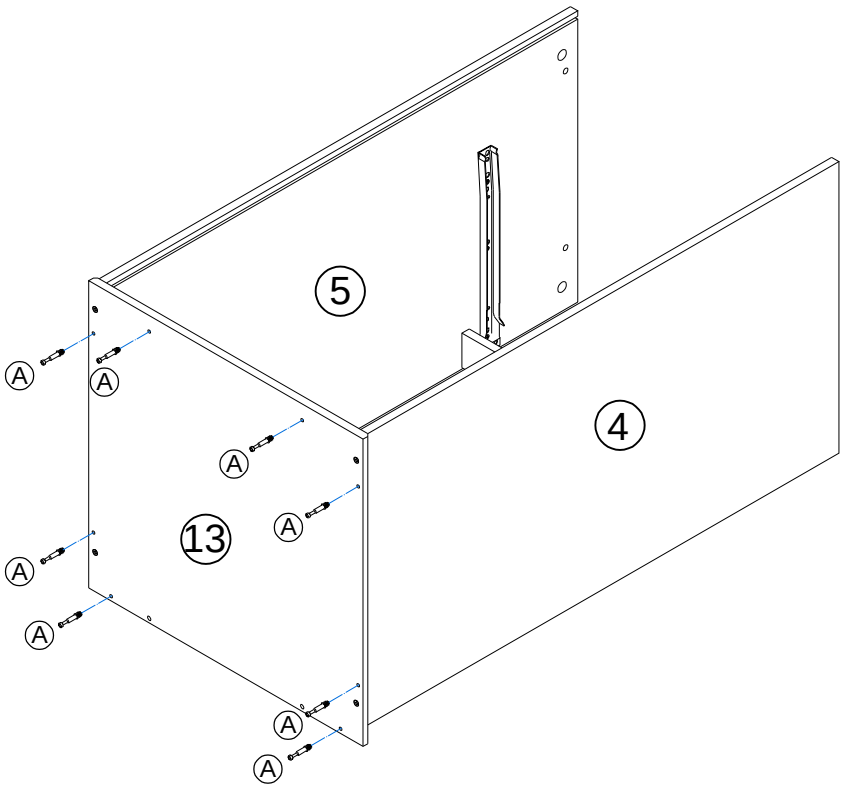



A x8

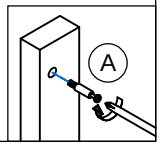

Step 11/ Etape 11

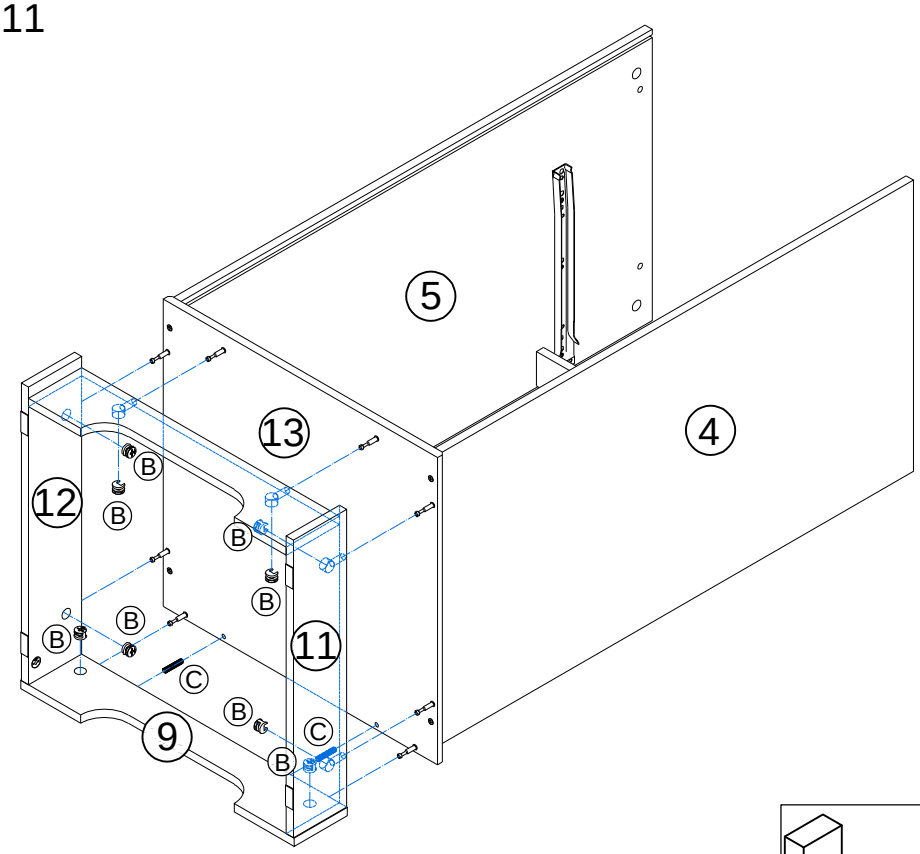


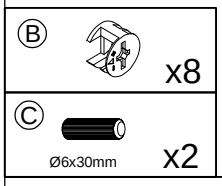


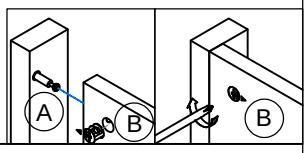



Step 12/ Etape 12

Stand the cabinet up/ Mettez l'armoire debout.

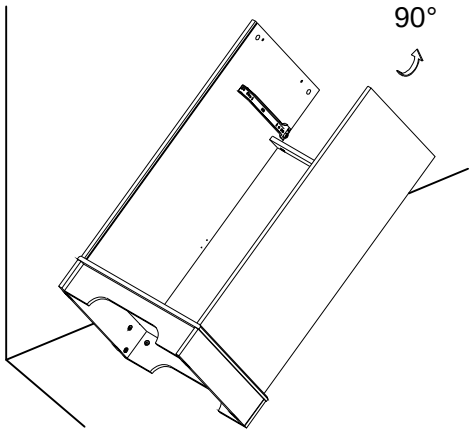


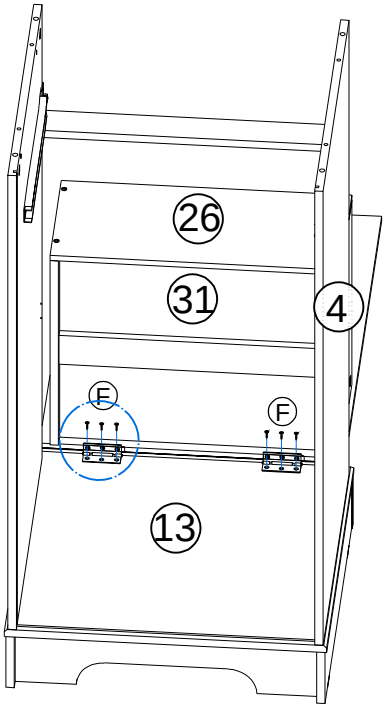


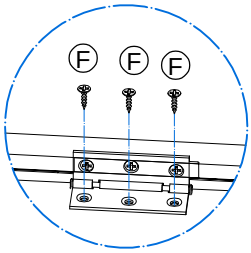




Step 13/ Etape 13

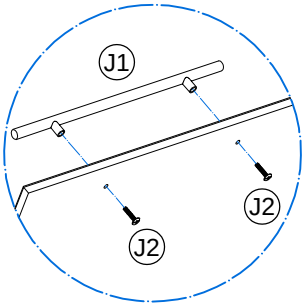


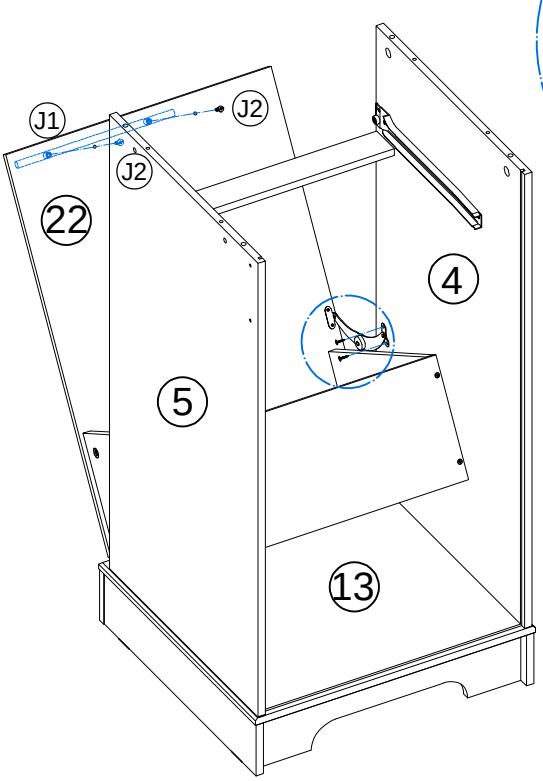


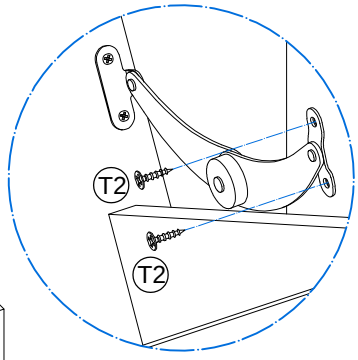

J1	x1
J2	x2
T2 Ø3x10mm	x2

Step 14/ Etape 14

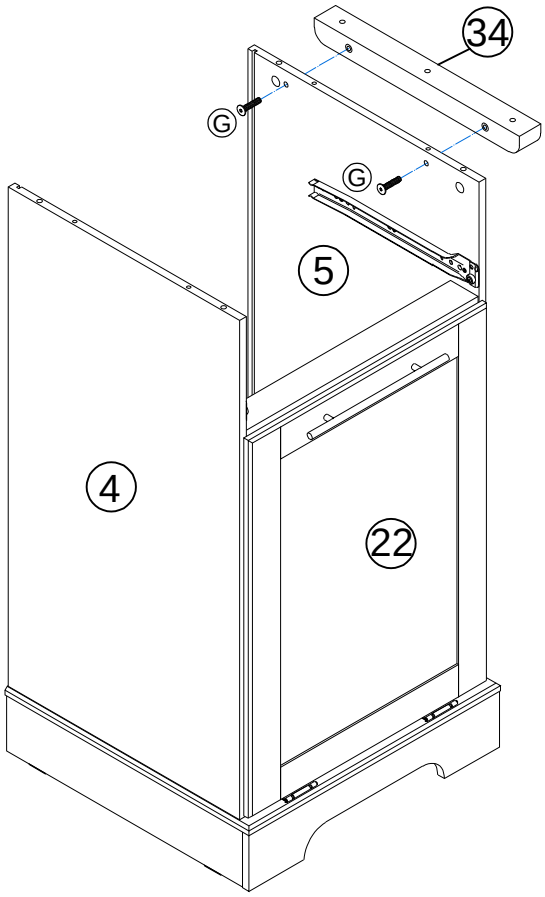

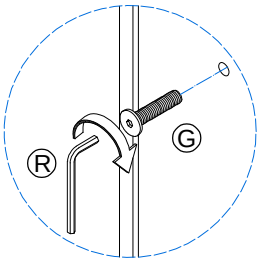


G	x2

Step 15/ Etape 15


The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.


La plaque mince doit être complètement insérée dans la rainure. Si l'insertion n'est pas facile, vous pouvez essayer d'appuyer par l'avant ou par l'arrière pour ajuster la position jusqu'à ce que la plaque mince soit complètement insérée dans la rainure.

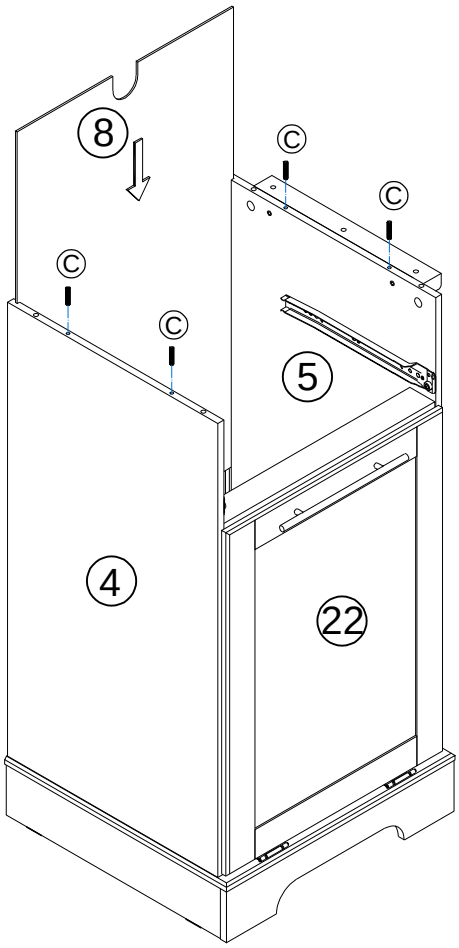



C	Ø6x30mm	x4

Step 16/ Etape 16

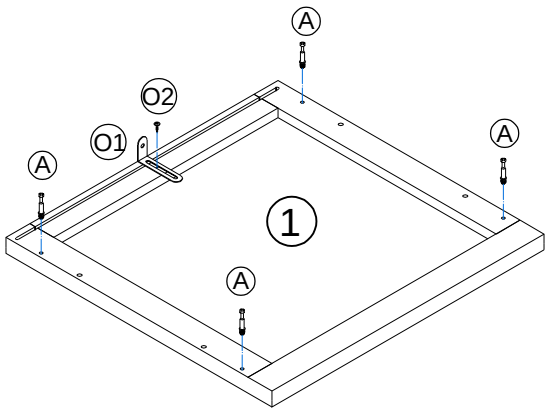

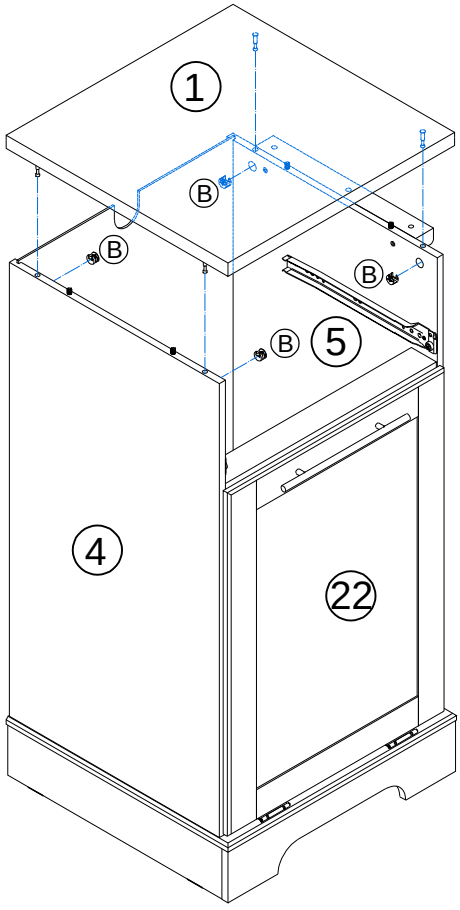


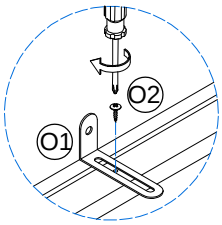

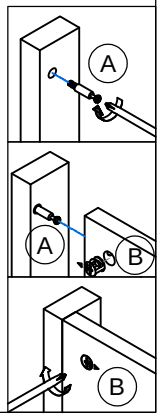


A		x4
B		x4
O1		x1
O2	Ø3.5x16mm	x1


Step 17/ Etape 17

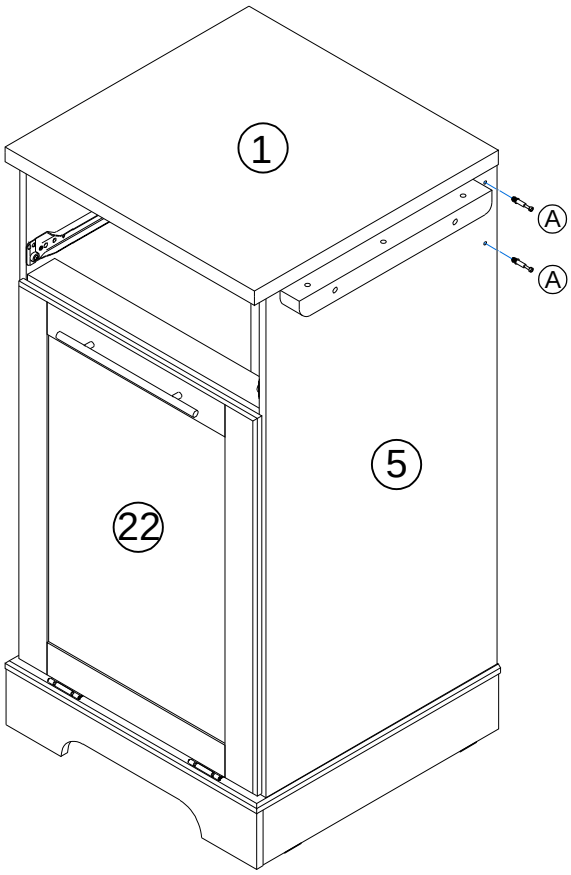



A 	x2

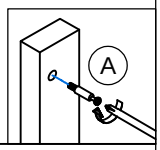


Step 18/ Etape 18

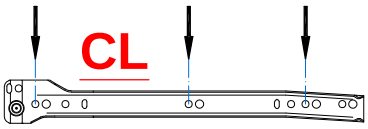


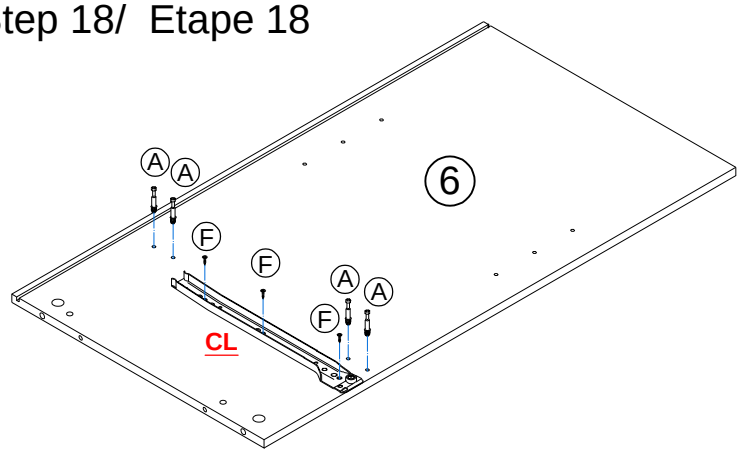


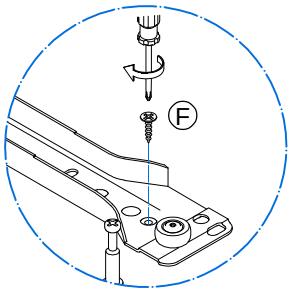

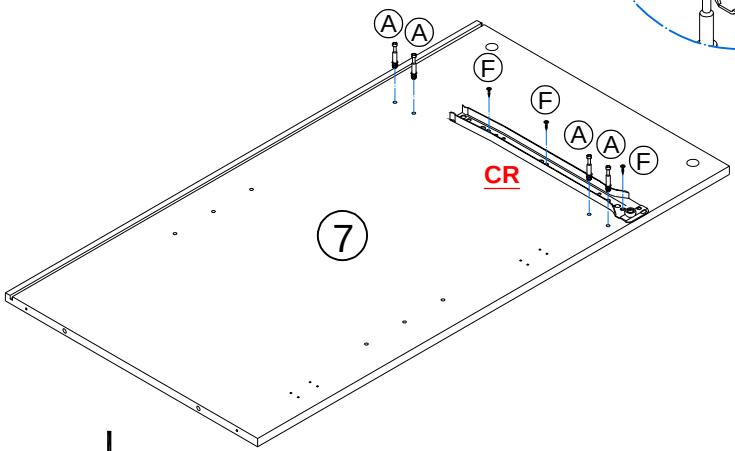


A 	x8
F  Ø3.5x12mm	x6
CL  300mm	x1
CR  300mm	x1

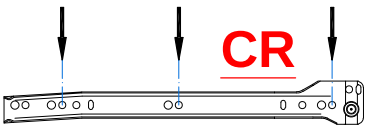


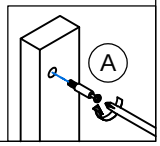


Step 19/ Etape 19

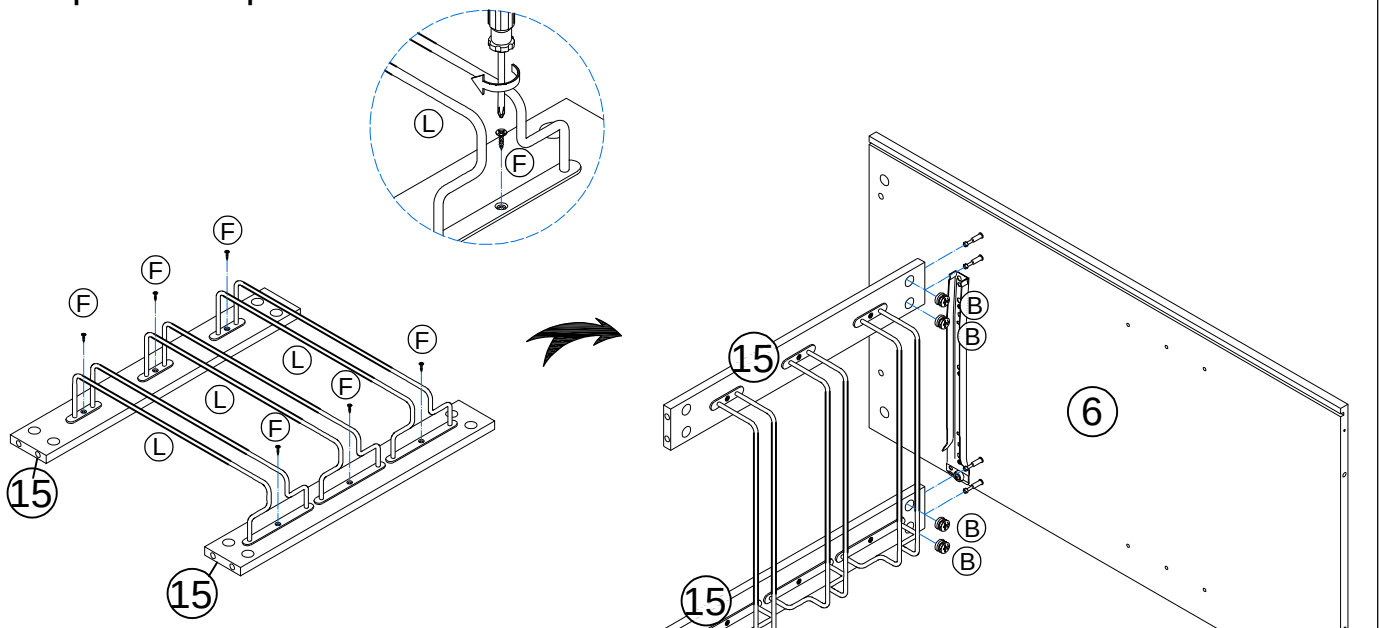


B		x4
F	 Ø3.5x12mm	x6
L		x3

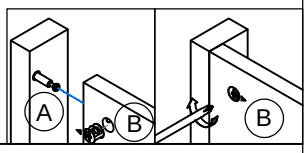


Step 20/ Etape 20

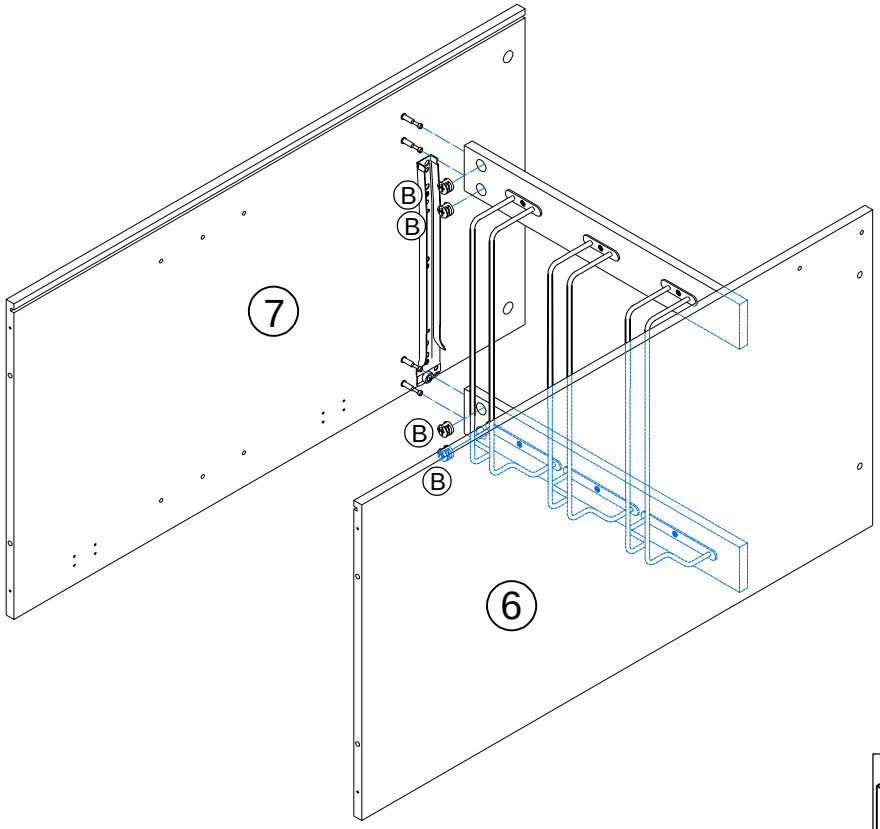


B		x4

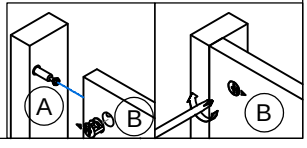

Step 21/ Etape 21

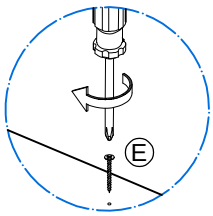


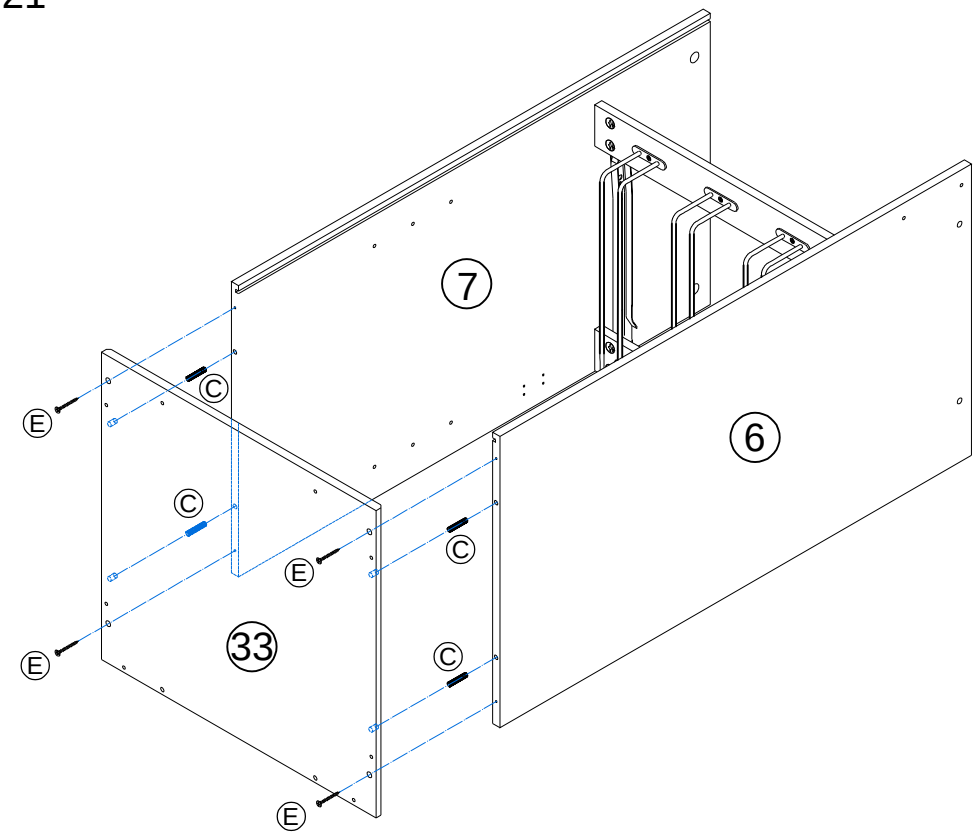


C Ø6x30mm x4

E Ø4x40mm x4


Step 22/ Etape 22

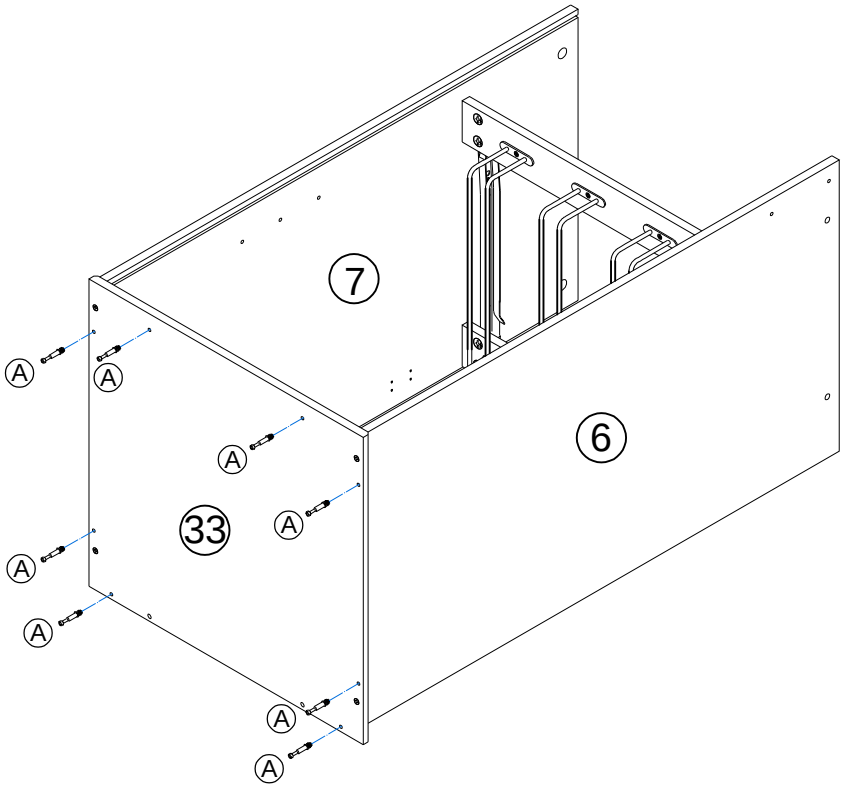



A x8

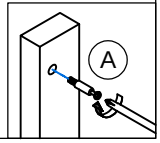

Step 23/ Etape 23

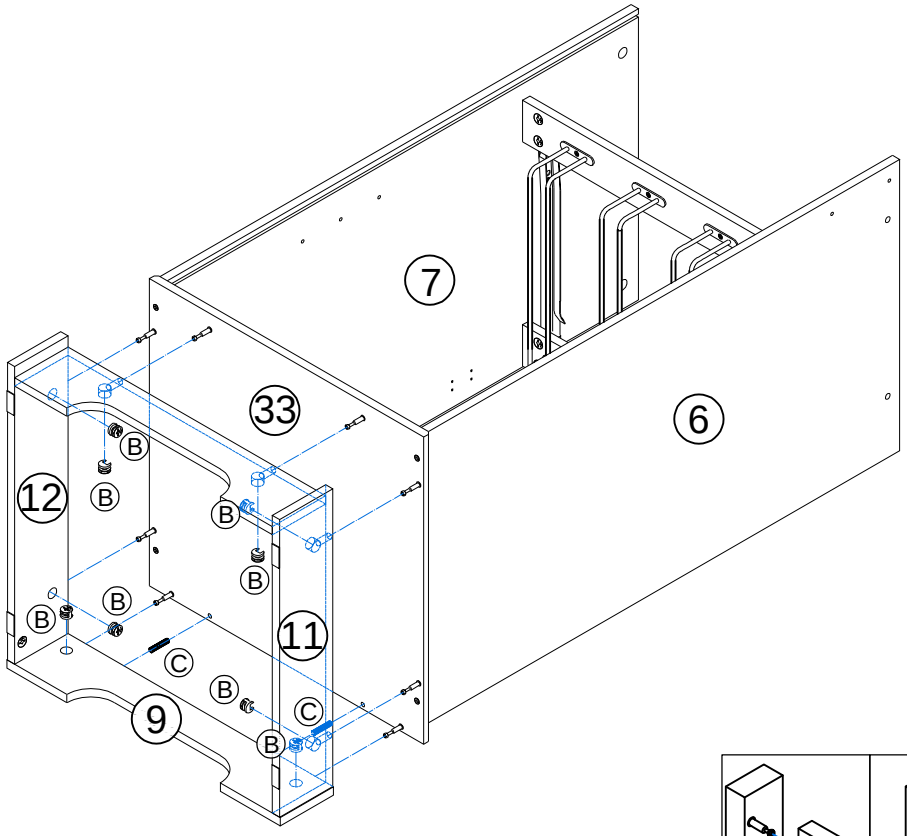


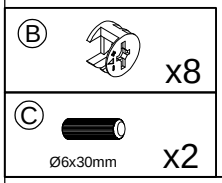


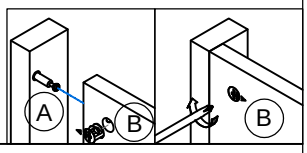

Step 24/ Etape 24

Stand the cabinet up/ Mettez l'armoire debout.

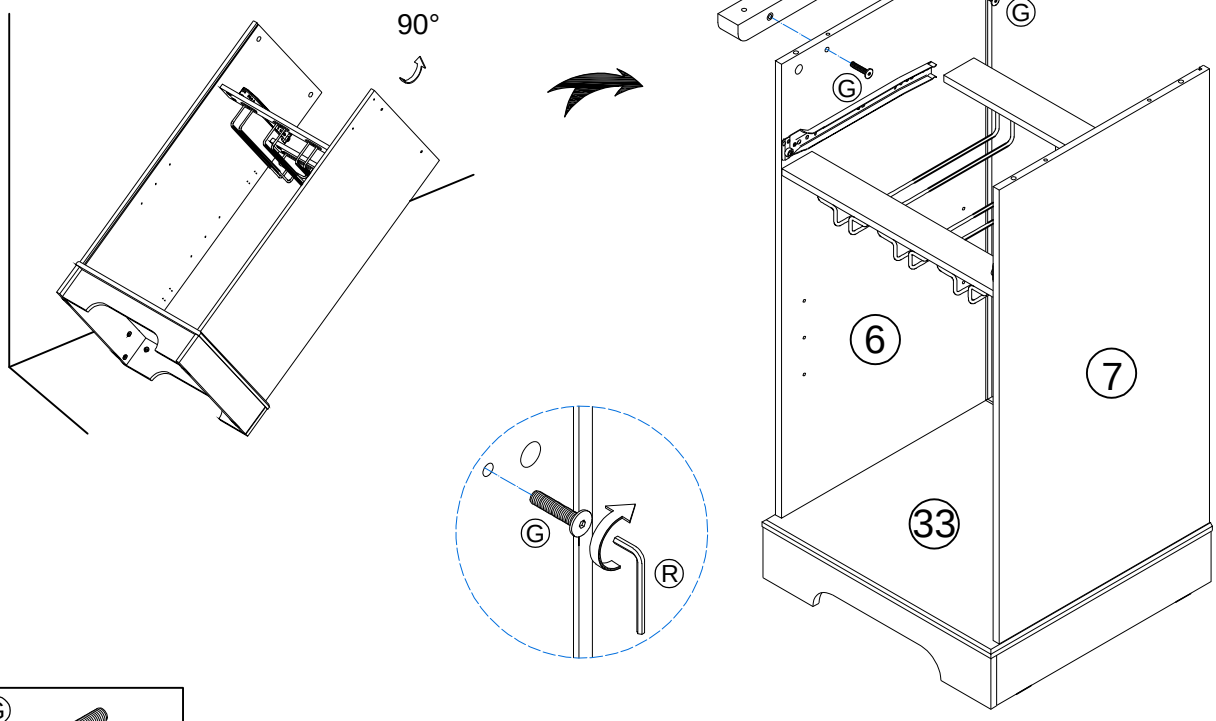




Step 25/ Etape 25


The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.


La plaque mince doit être complètement insérée dans la rainure. Si l'insertion n'est pas facile, vous pouvez essayer d'appuyer par l'avant ou par l'arrière pour ajuster la position jusqu'à ce que la plaque mince soit complètement insérée dans la rainure.

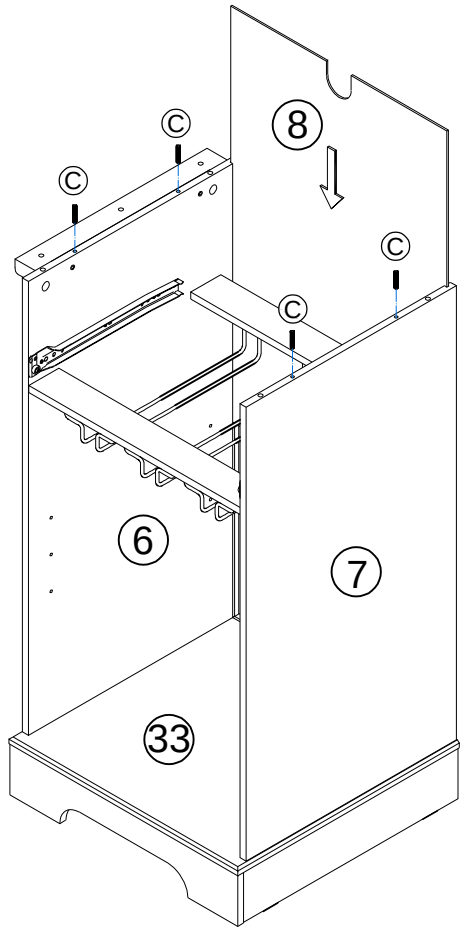


C Ø6x30mm x4

Step 26/ Etape 26

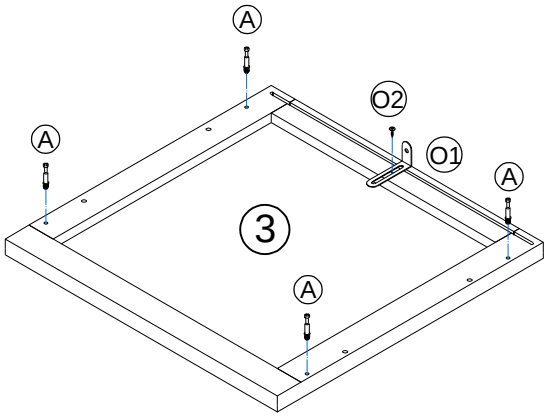

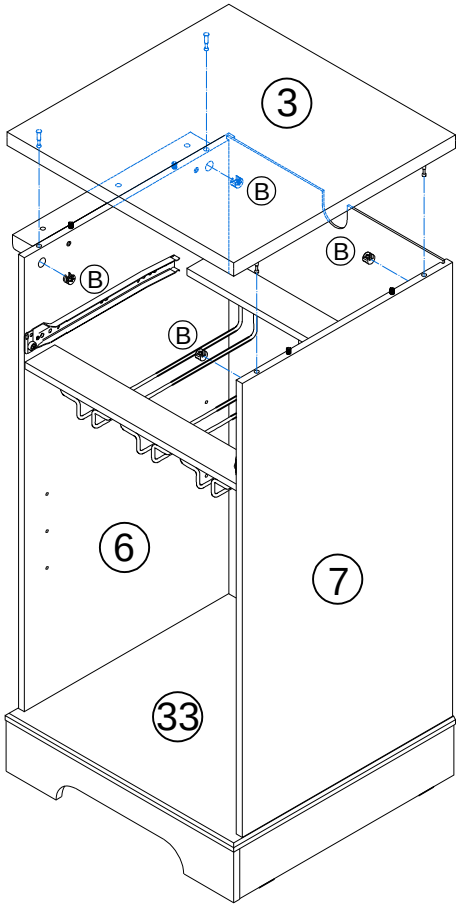

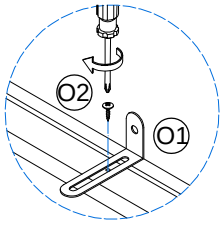


A x4


B x4


O1 x1

O2 Ø3.5x16mm x1

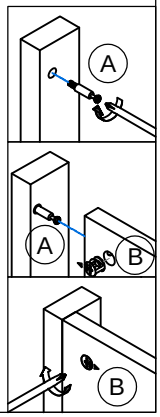


Step 27/ Etape 27

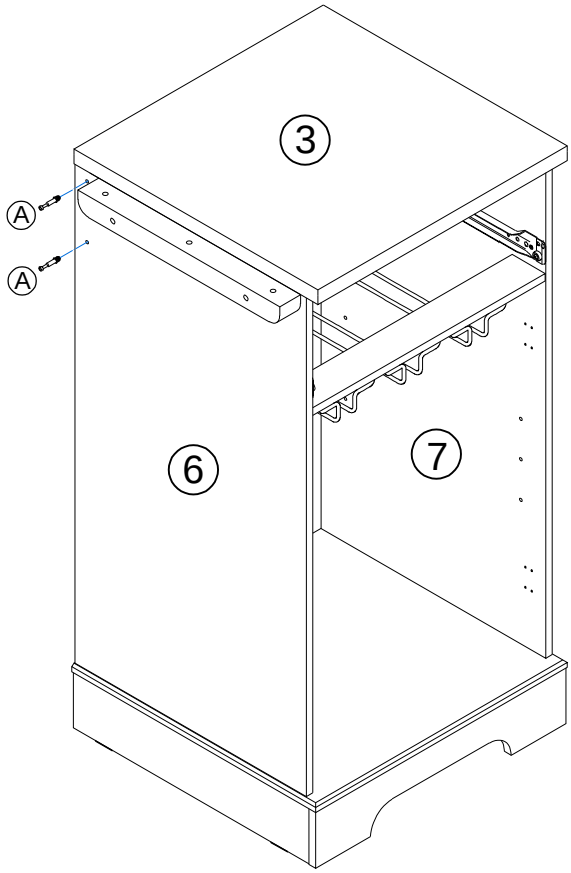


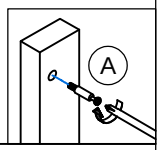



A x2


Step 28/ Etape 28

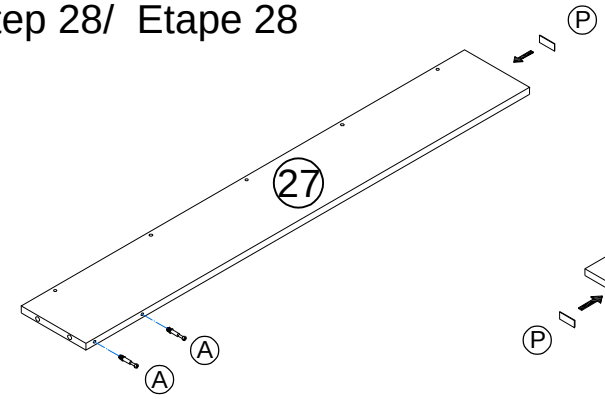

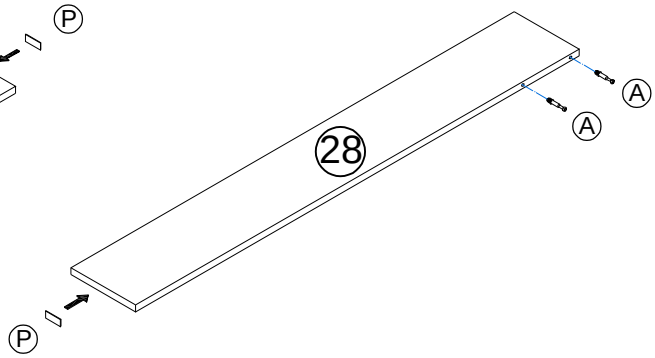

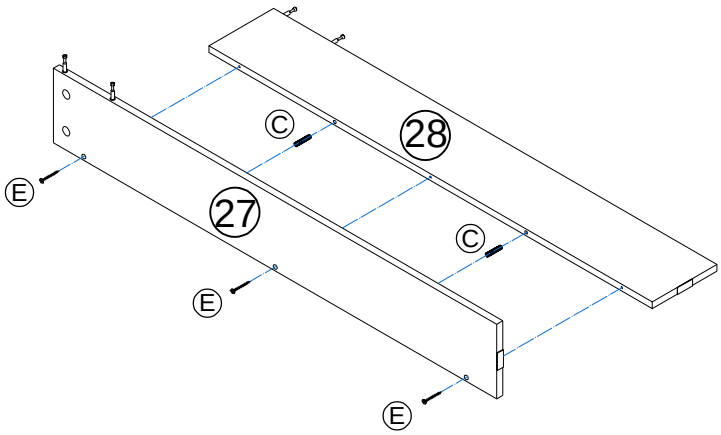

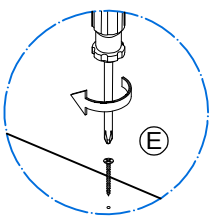

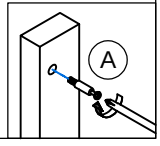


A x4


C Ø6x30mm x2

E Ø4x40mm x3

P x2

Step 29/ Etape 29

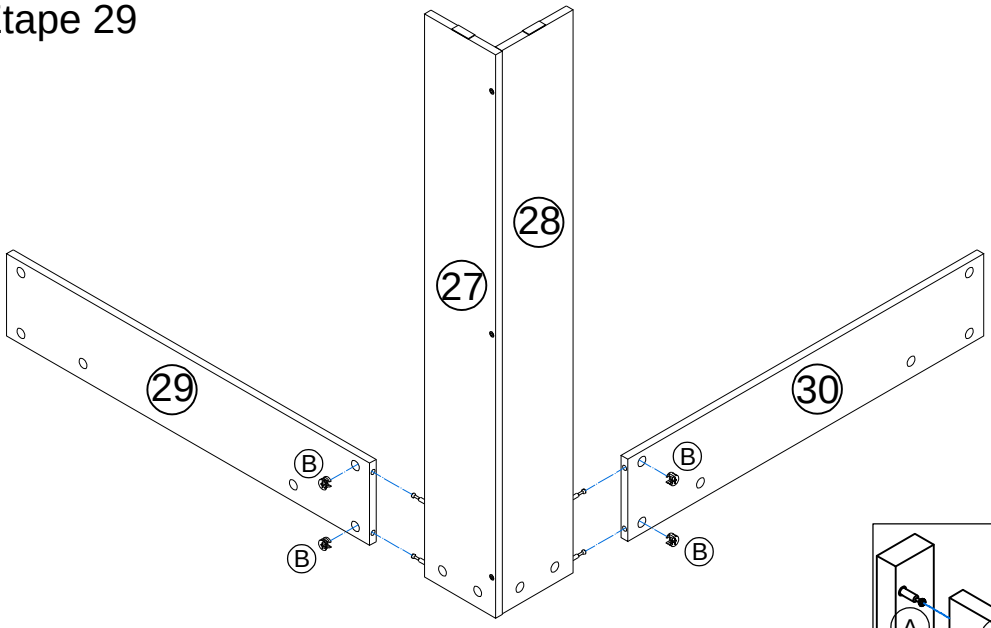


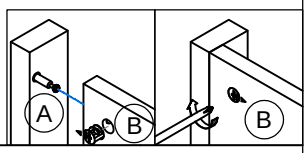


Ⓑ x4

Step 30/ Etape 30


Note: This assembly step requires two peoples to perform it simultaneously !
Remarque : Cette étape d'assemblage nécessite deux personnes pour être réalisée simultanément !

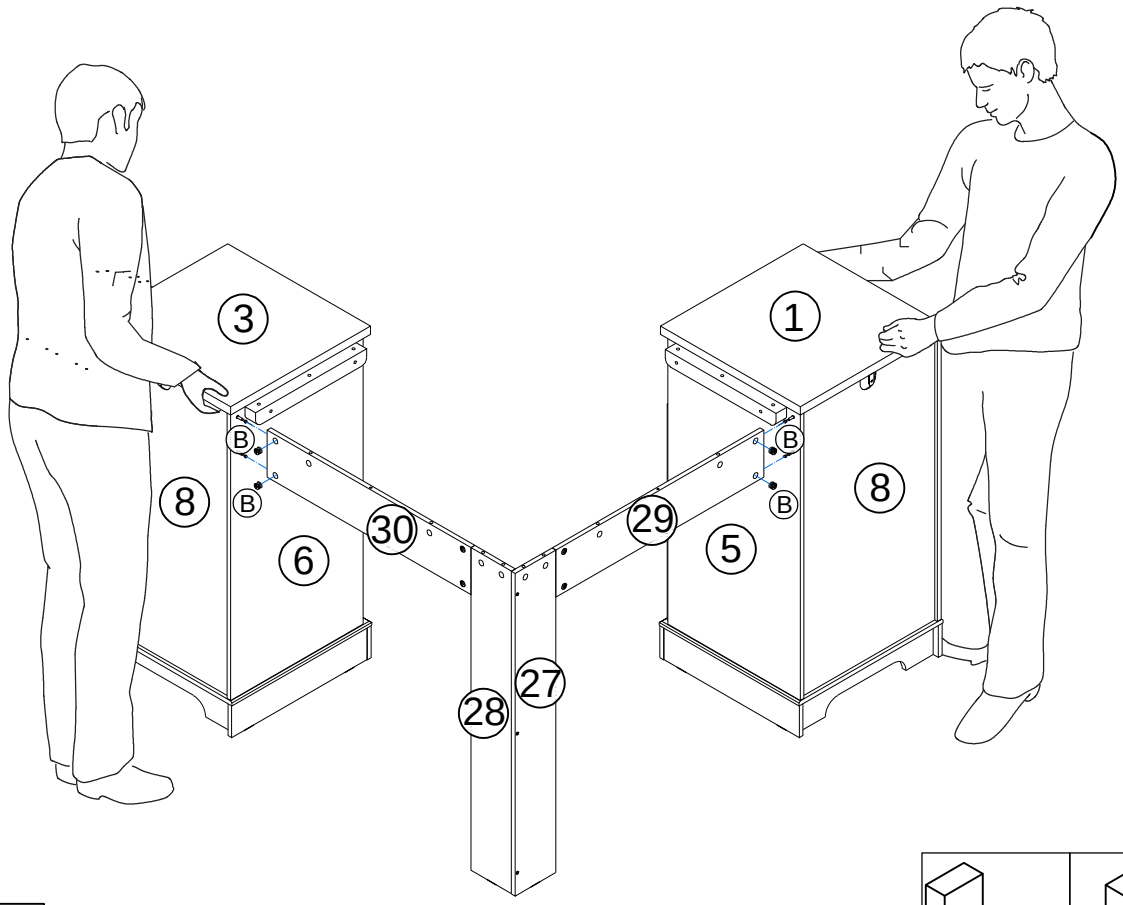


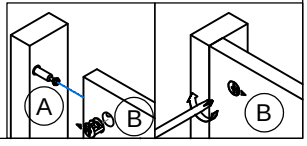


Ⓑ x4


Step 31/ Etape 31

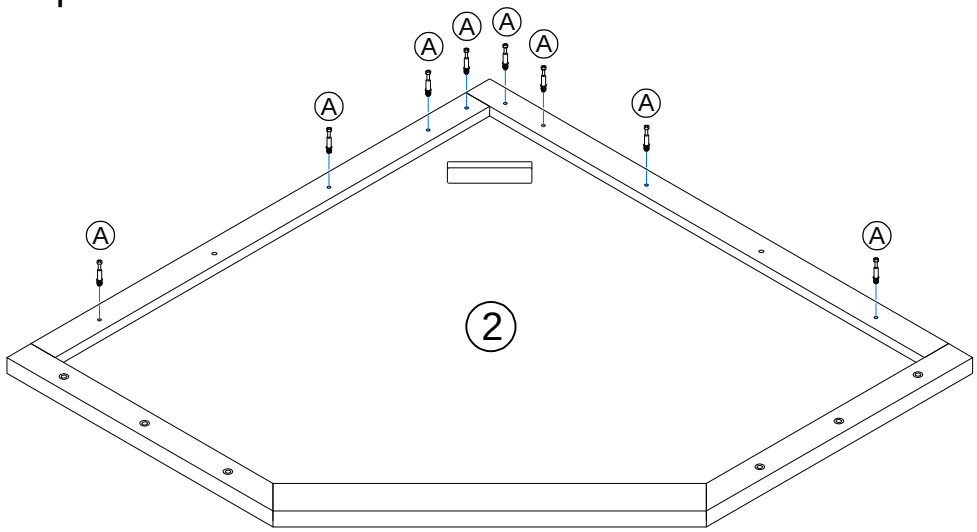





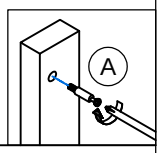


Step 32/ Etape 32

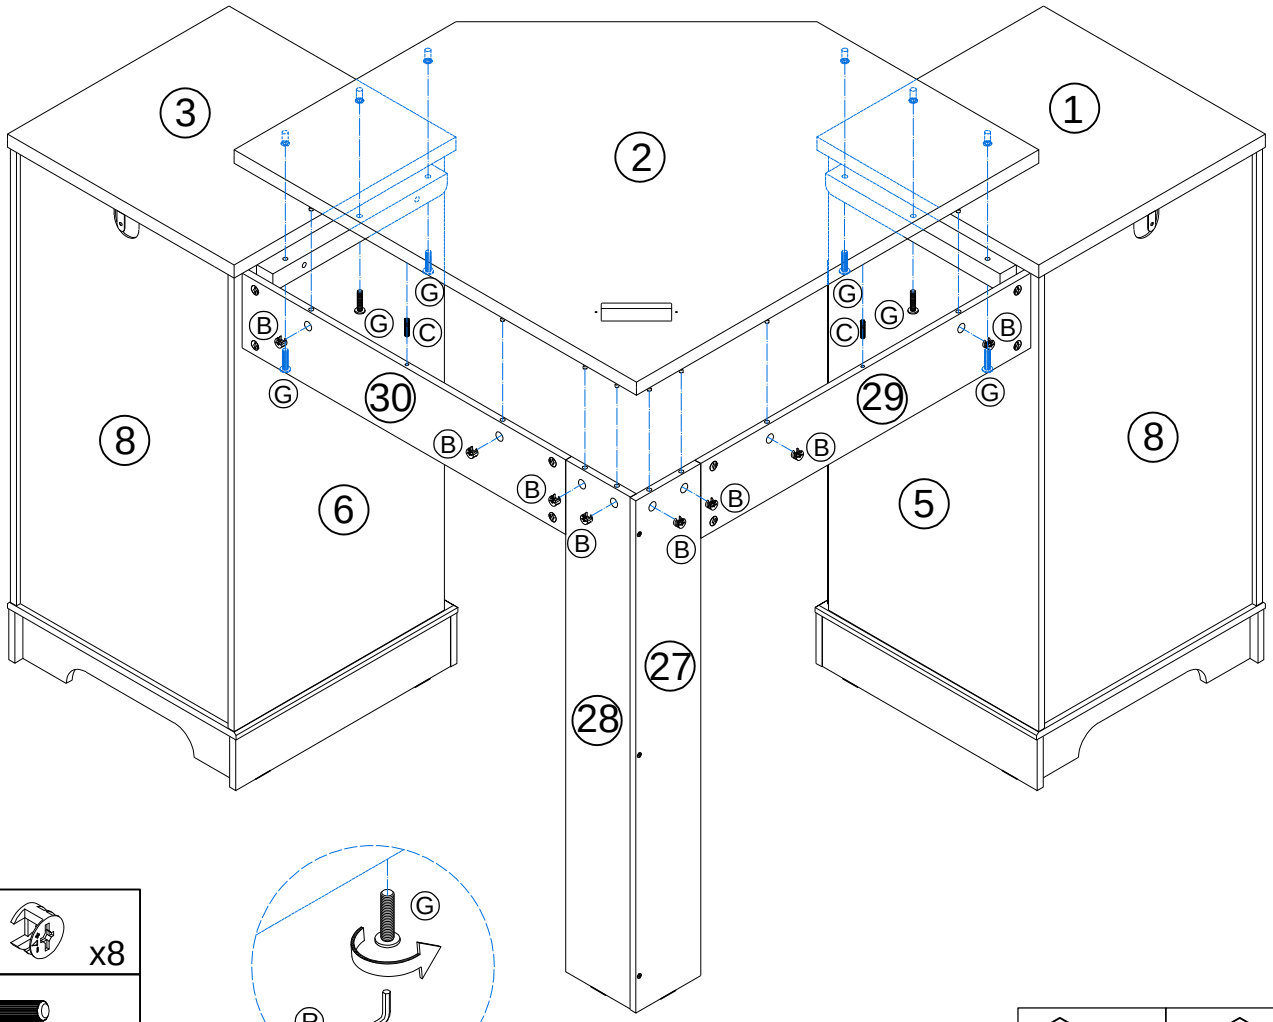

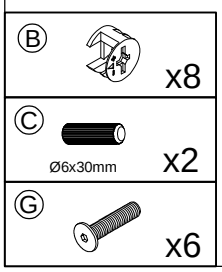

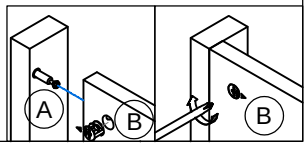



Step 33/ Etape 33

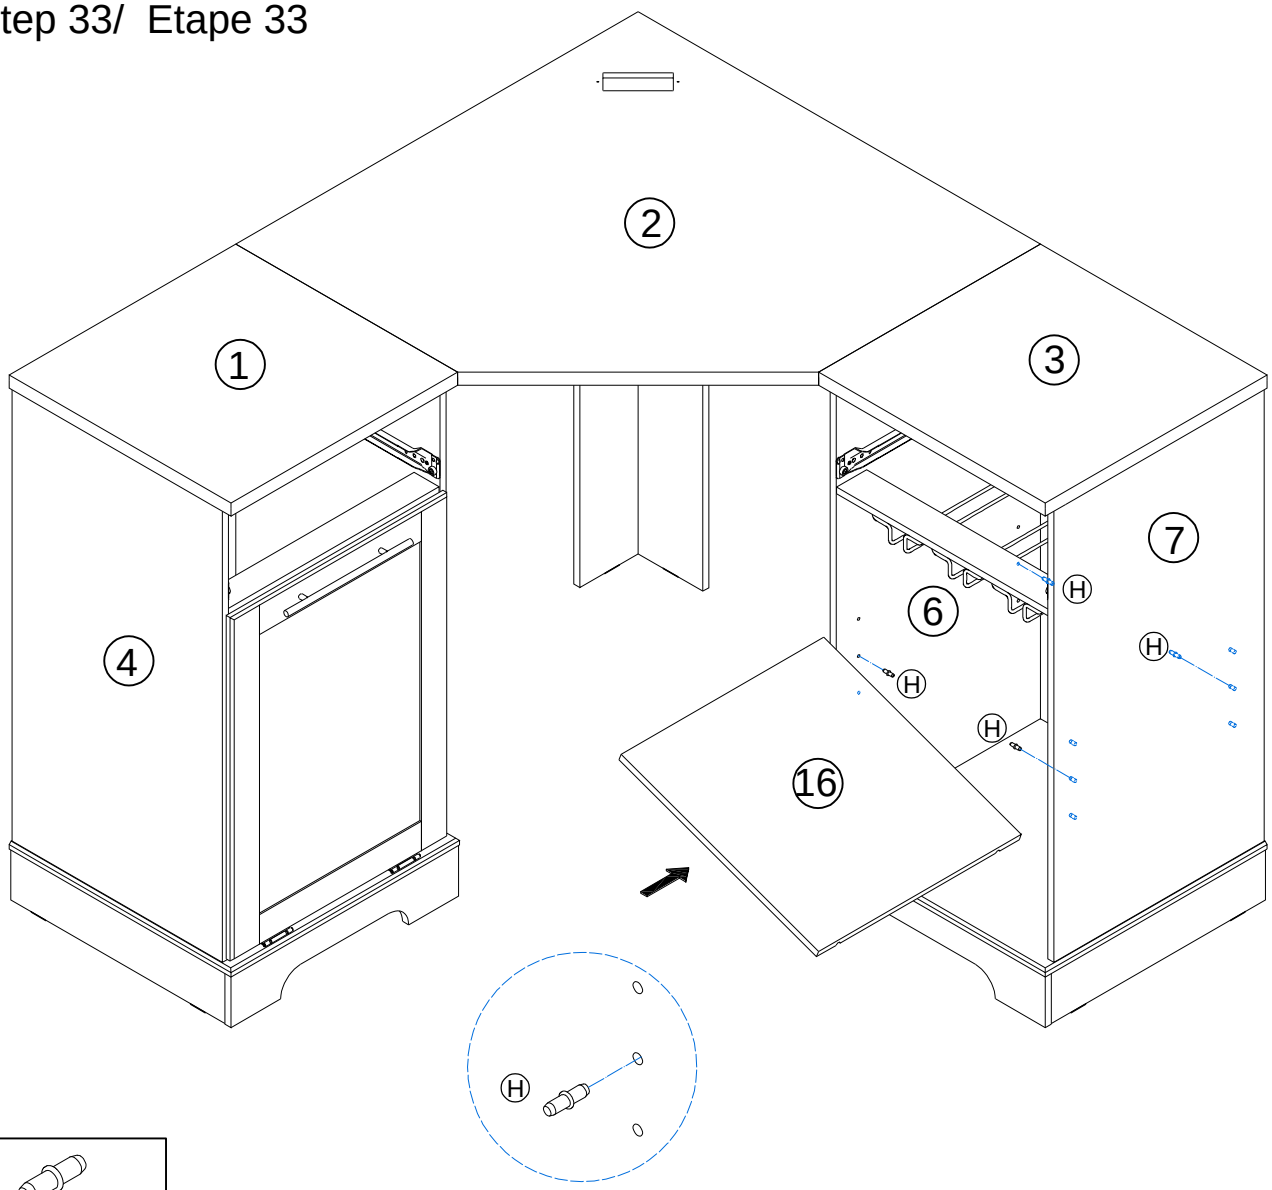

H		x4


Step 34/ Etape 34

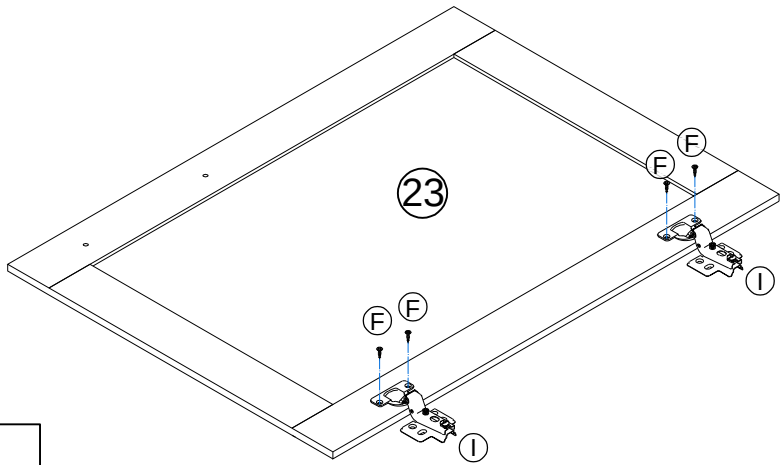

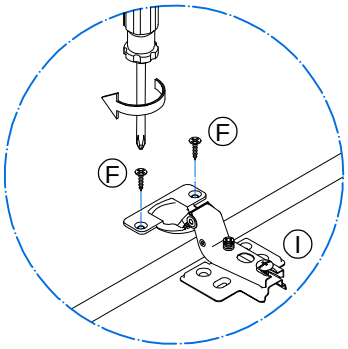


F	 Ø3.5x12mm	x4
I		x2

Step 35/ Etape 35

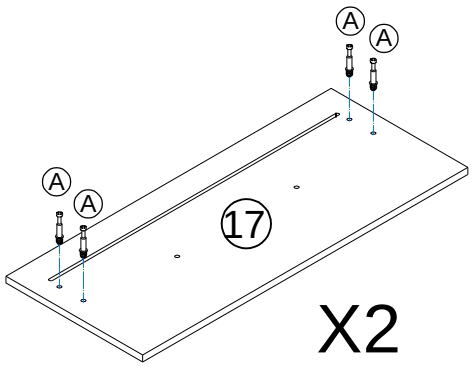


X2

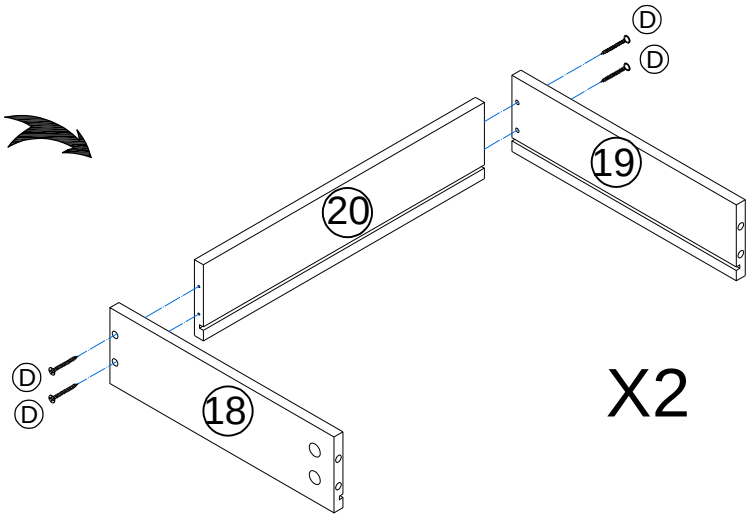


X2

The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.


La plaque mince doit être complètement insérée dans la rainure. Si l'insertion n'est pas facile, vous pouvez essayer d'appuyer par l'avant ou par l'arrière pour ajuster la position jusqu'à ce que la plaque mince soit complètement insérée dans la rainure.

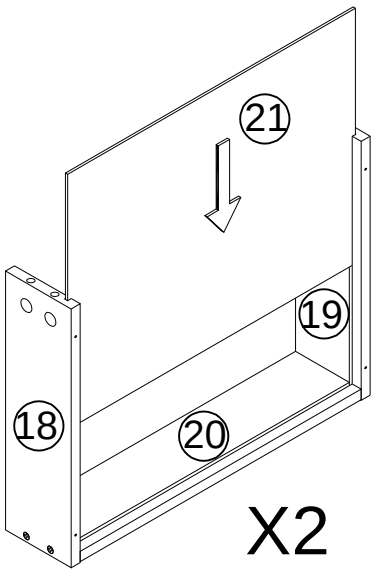


X2

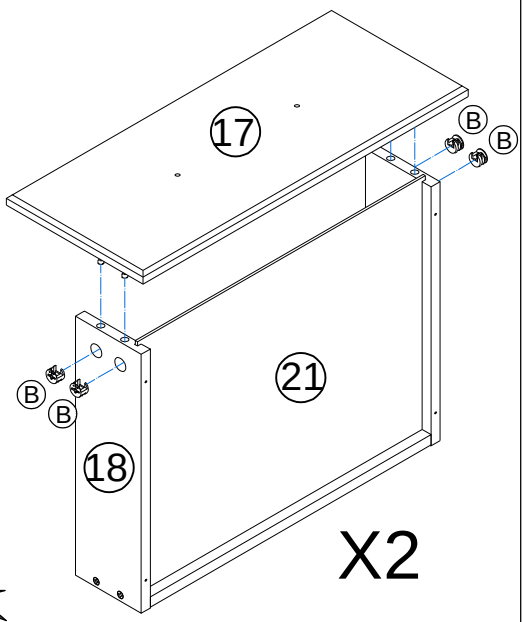


X2

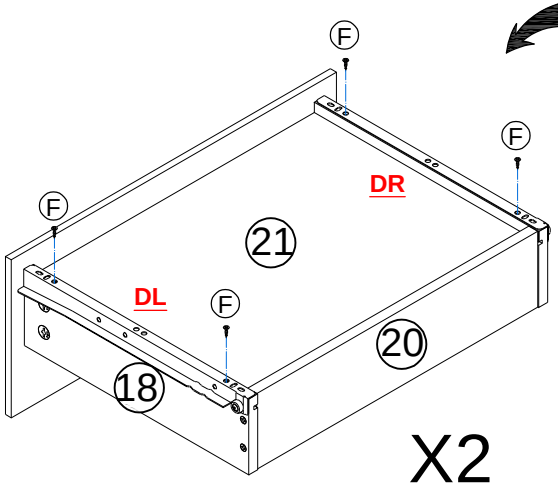


X2

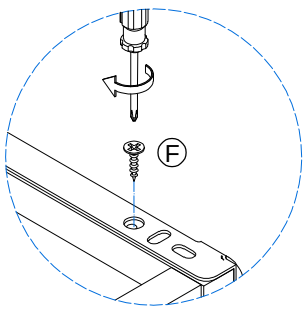

A		x8
B		x8
D	 Ø4x30mm	x8
F	 Ø3.5x12mm	x8
DL	 300mm	x2
DR	 300mm	x2

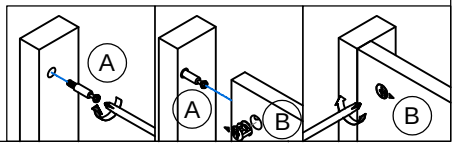



Step 36/ Etape 36

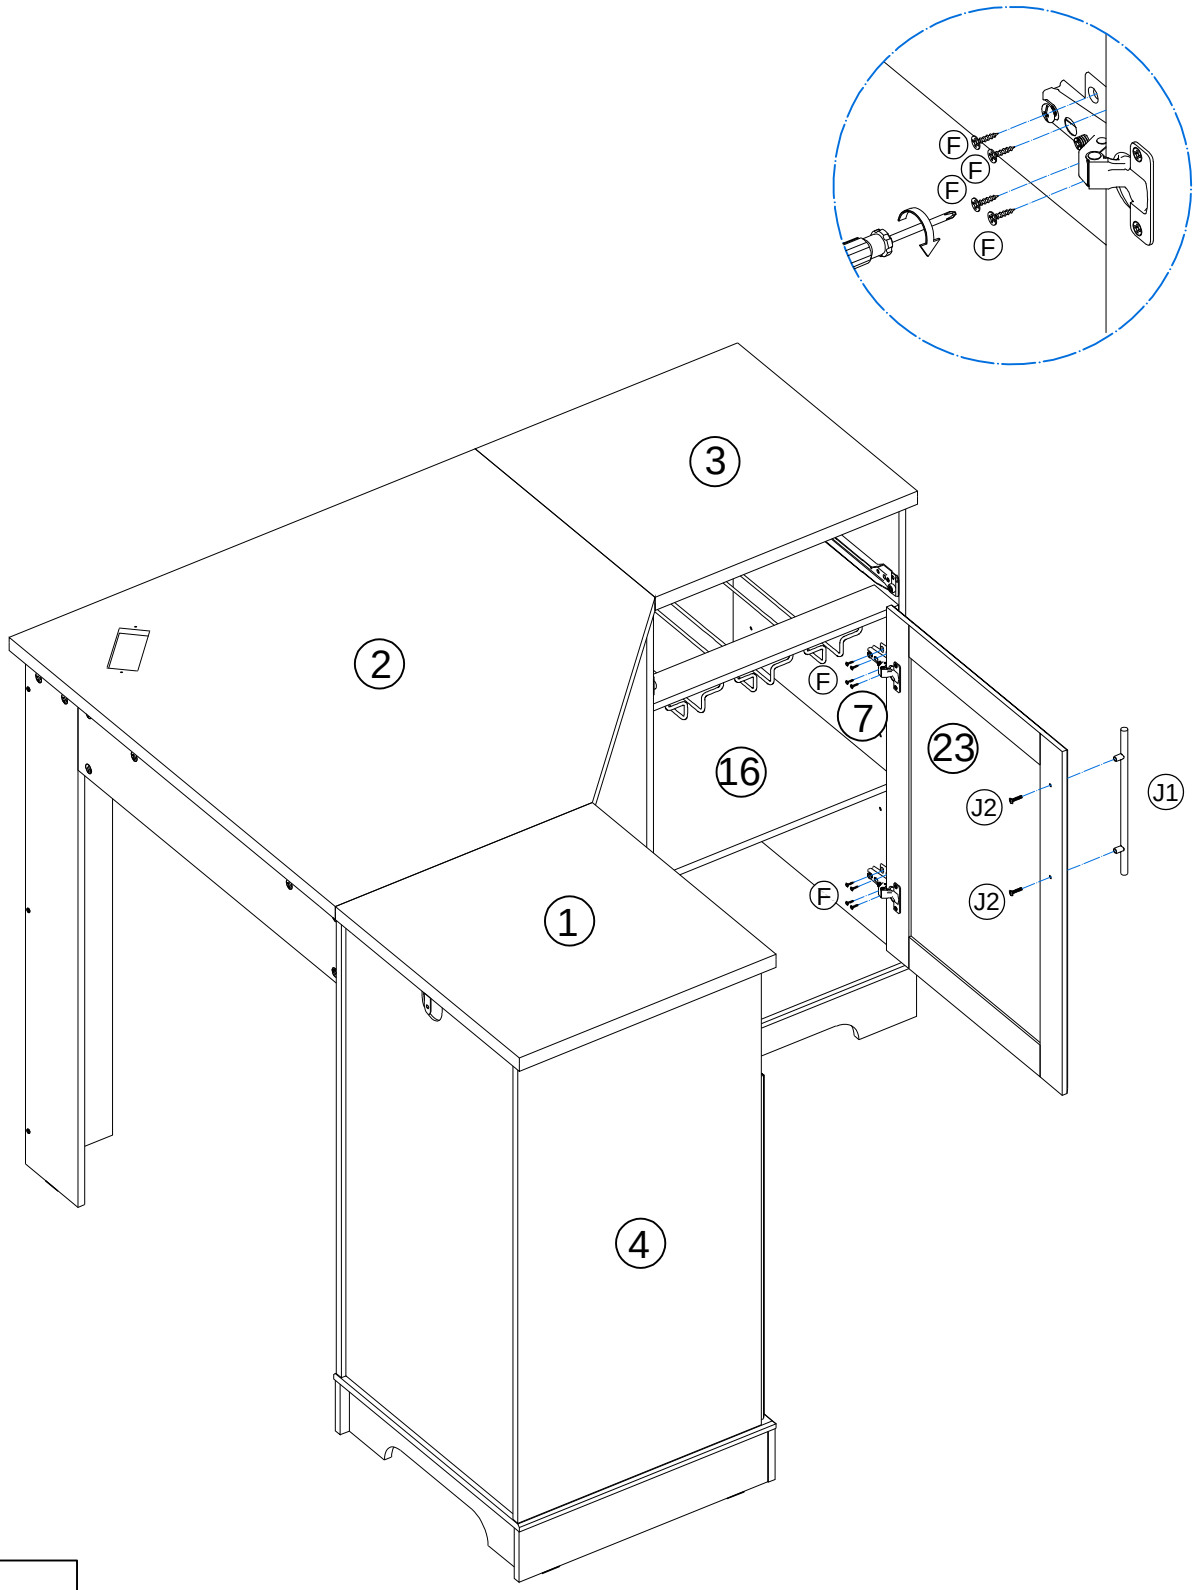



F	Ø3.5x12mm	x8
J1		x1
J2		x2

Step 37/ Etape 37

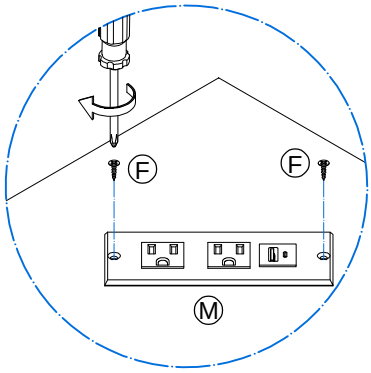

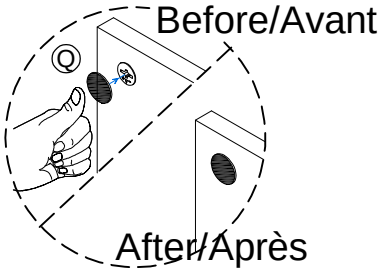


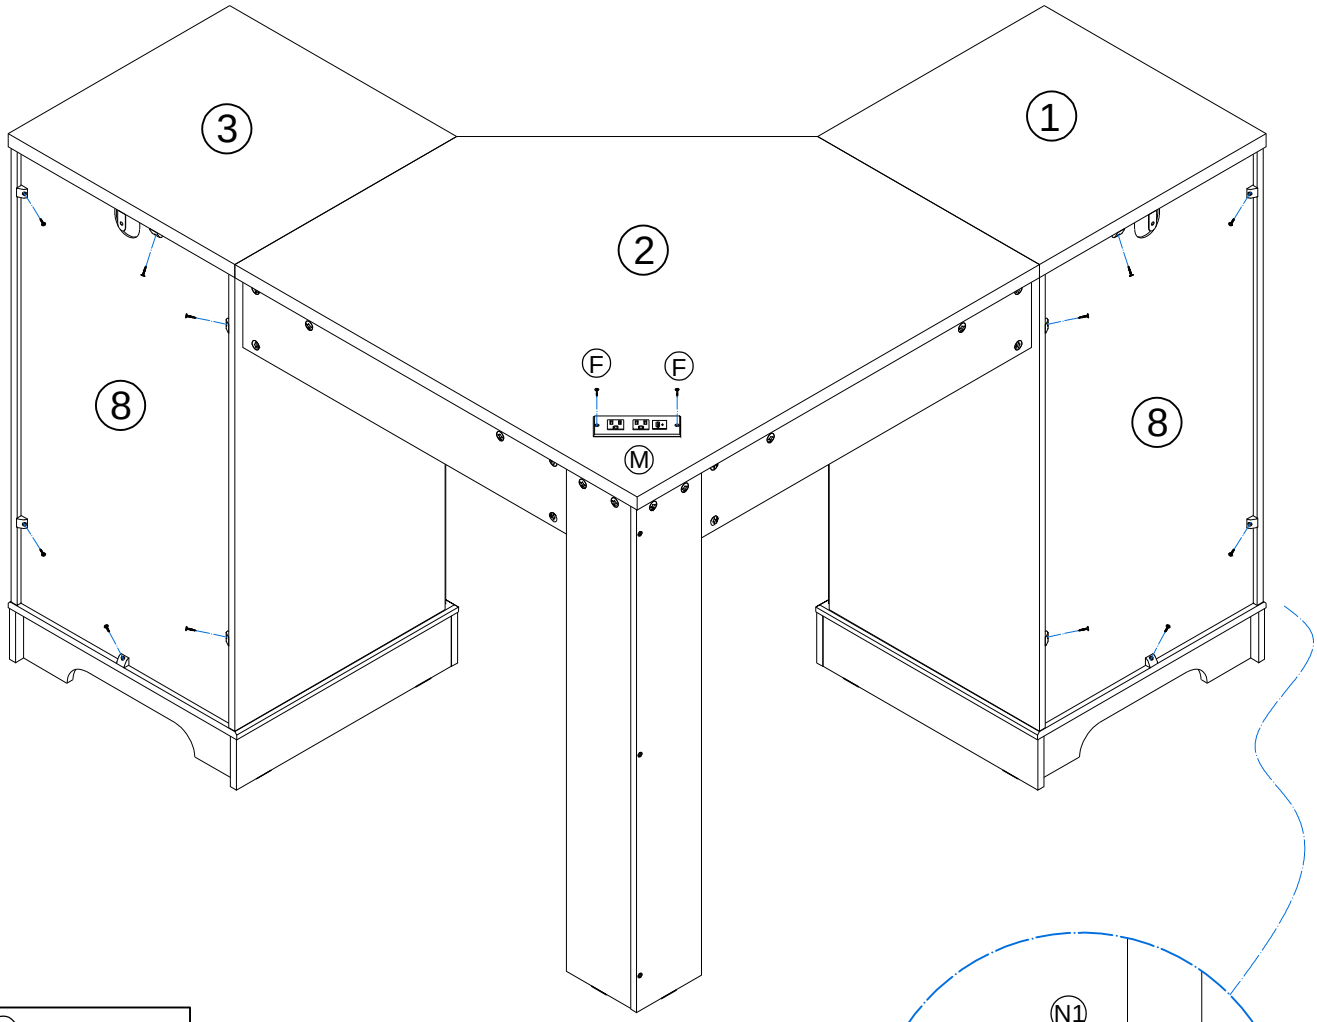

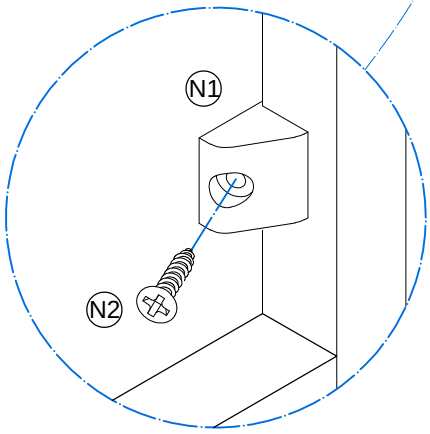

F	Ø3.5x12mm	x2
M		x1
N1		x12
N2	Ø3x16mm	x12
Q		x32+

Step 38/ Etape 38

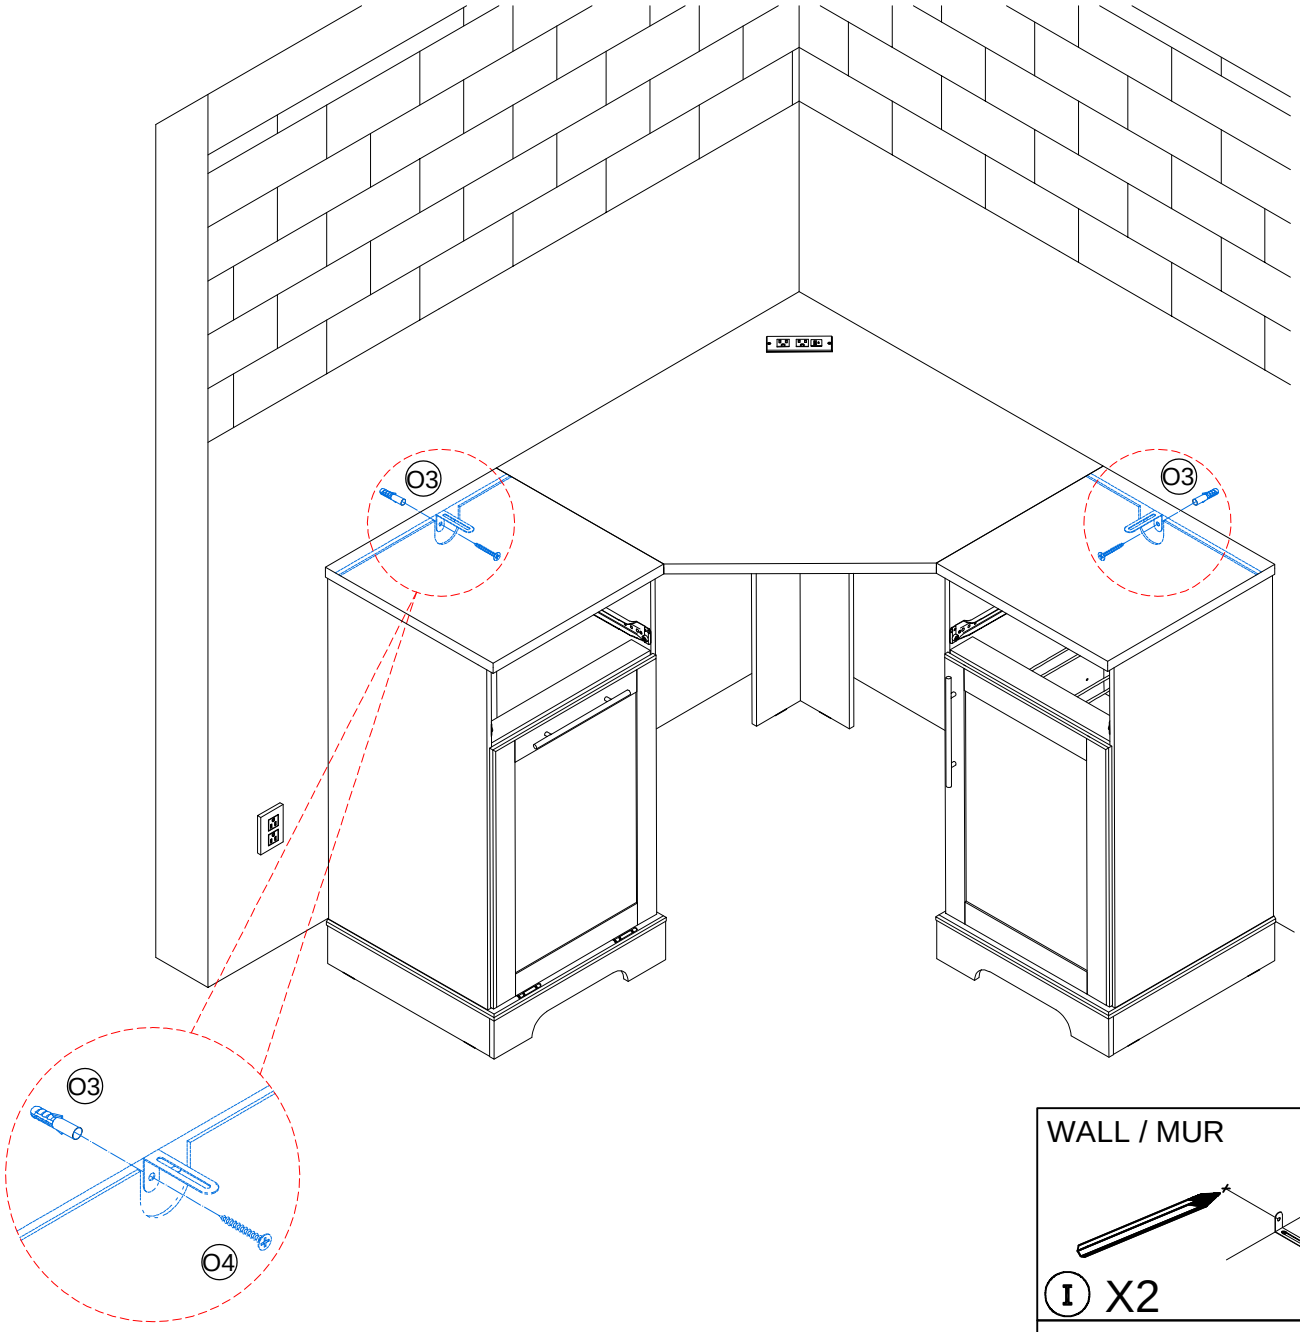

Step1: Determine the location of the anti-overturning on the wall and then mark the position after confirming the product has been balanced.
Step 2: Drill the hole and then fixed the Anchor (O3) on the wall.
Step 3: Use screw (O4) to fix the L-shaped iron pat (O1) on the wall

Étape 1 : Déterminez l'emplacement du dispositif anti-basculement sur le mur,
puis marquez la position après avoir confirmé que le produit est bien équilibré.
Étape 2 : Percez le trou, puis fixez l'ancrage (O3) sur le mur.
Étape 3 : Utilisez la vis (O4) pour fixer la sangle (O1) sur le mur.

O3 x2


O4 x2

WALL / MUR

I X2

WALL / MUR


drilling hole /
trou de perçage

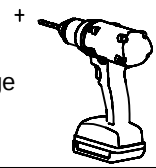

II X2

WALL


O3

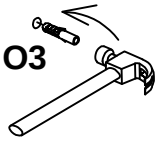


Use a hammer to close Anchor (O3)
Utilisez un marteau pour fermer l'ancrage (O3)

III

Step 39/ Etape 39

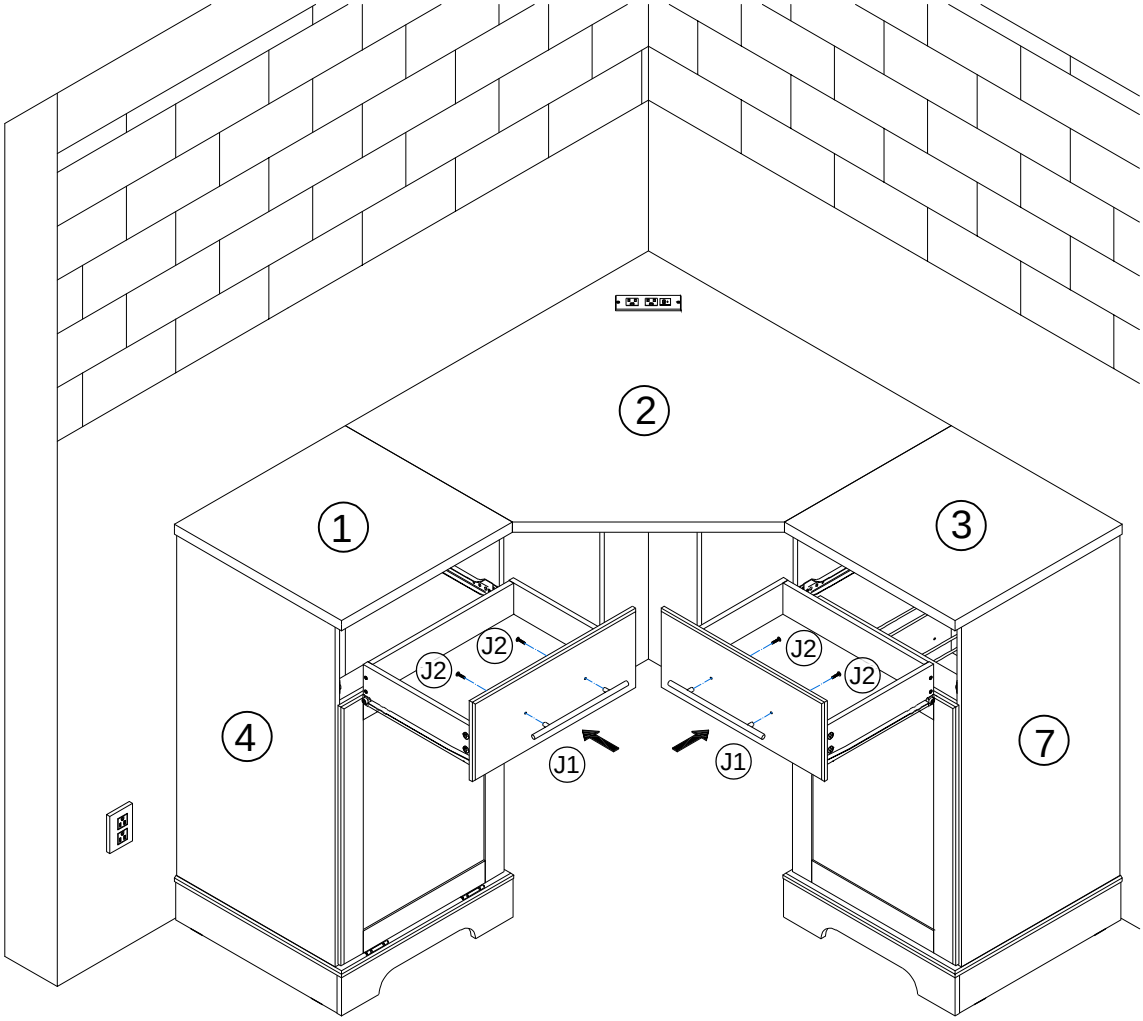

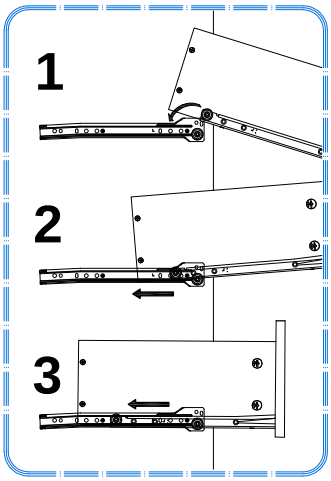


J1	x2
J2	x4


The ways to adjust the door

- Before adjusting the hinge, please check whether the cabinet is skewed.
- If the skew can not be epaired, please remove the anti-tipping device first, then adjust the cabinet to vertical position.
- Please adjust the hinge with the door open.
- Please operate it with more than 2 people, one person holds the door and the other one adjusts the screw.


Components Name

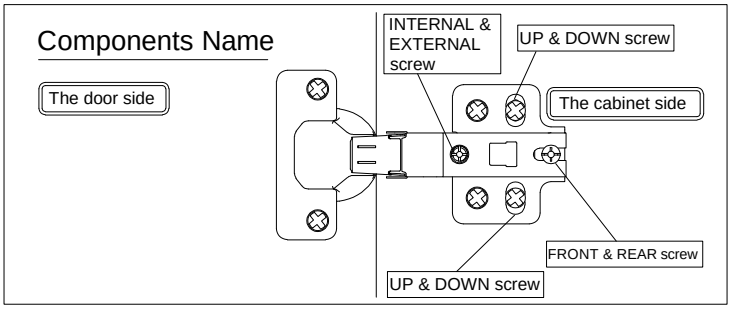

Obvious gaps between doors or Doors don't look closed

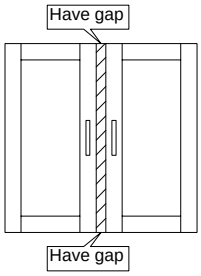


1 Turn"internal & external screw" fo the right can make the door approach inside.
Please adjust the doors little by little..

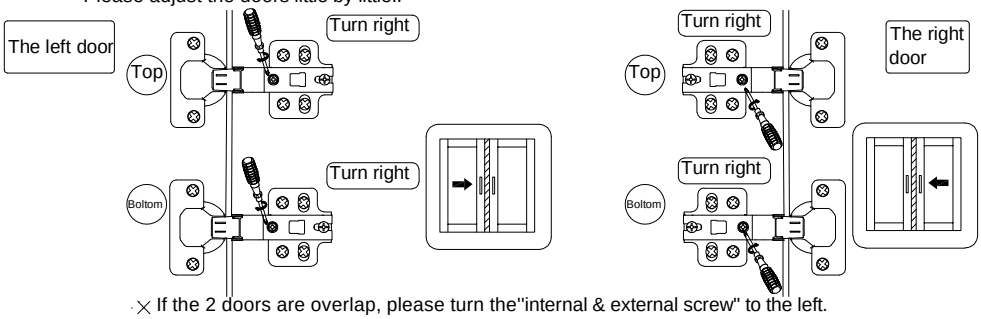


× If the 2 doors are overlap, please turn the"internal & external screw" to the left.

When door is crooked

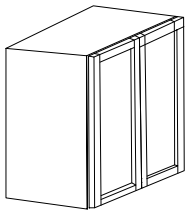


Please take the following steps to adjust first.

1 Rotate the "font and rear screws to the left

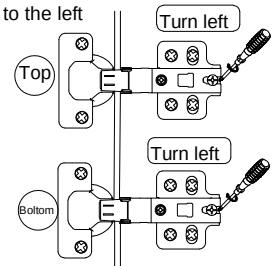


× After adjusting the "front and rear screw", the door still does not change, please turn the" internal & external screw" to the right Slightly.


2 Push the door to the cabinet

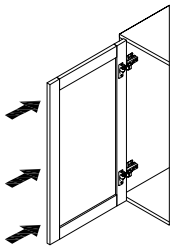


3 Rotate the "font and rear screws to the right

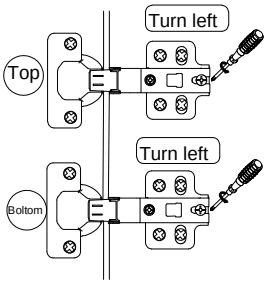


When door is leaning

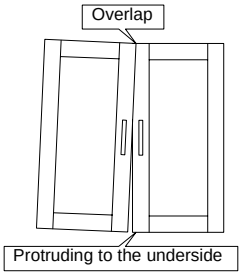


1 Turn "intemal & external screw" to the left can make the top of the door tilted outward.

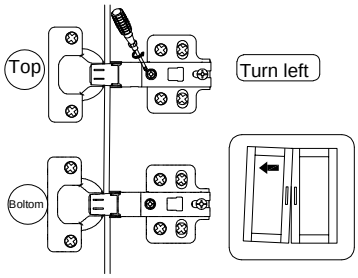


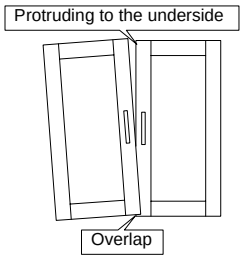


1 Turn "intemal & external screw" to the left can make the top of the door tilted outward.

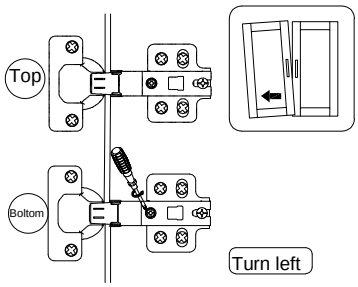


When door is higher on top

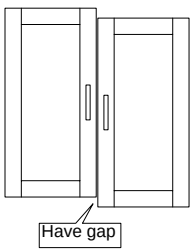


1 Turn "up & down screw" to the left

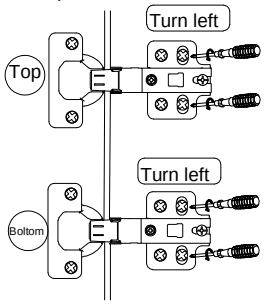

2 Lower the door's height so that 2 doors are of thesame height.

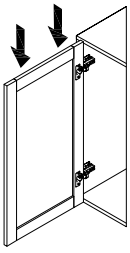

3 Turn "up & down screw" to the right

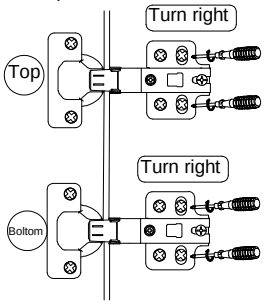

× if the door is lower on bottom, piease lift up the left door slightly on step 2

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs (rawl plugs) are supplied wich your product, e.g.:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using the incorrect fixings is the responsibility of the installer.

Important: when drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

Hints:

1: General rule: always use a larger screw and wall plug if you are not sure.

2: Ensure you use the recommended drill bit to match the wall plug and hole size.

3: Ensure you drill the hole horizontally; do not force the drill or enlarge the hole.


4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

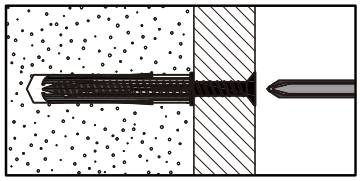


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case.For light loads,general purpose wall plugs can be used.

No.3 "Cavity Fixing" wall plug

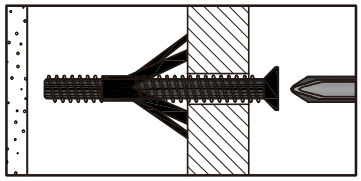


For use with plasterboard partitions or hollow wooden doors.

No.5 "Hammer Fixing" wall plug

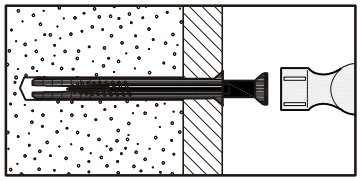


For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.2 "Plasterboard" wall plug

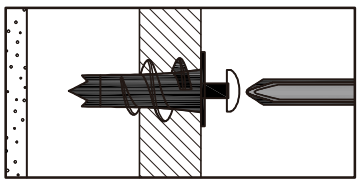


For use when attaching light loads onto plasterboard partitions.

No.4 "Cavity Fixing - Heavy Duty" wall plug

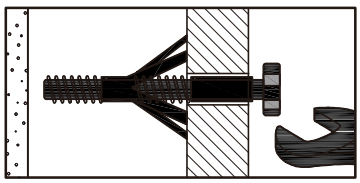

For use when fitting or supporting heavy loads such as shelving,wall cabinets and coat racks.

No.6 "Shield Anchor" wall plug - heavy loads

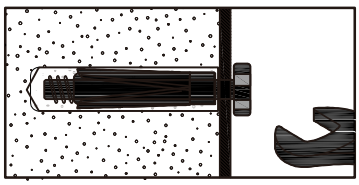


For use with heavier loads such as TV and HiFi speakers and satellite dishes etc.

Care & Maintenance

Safety: always check the fitting and location to ensure your safety in and around the home.

Fitting: from time to time check the fitting to ensure the wall plugs or screws do not become loose.

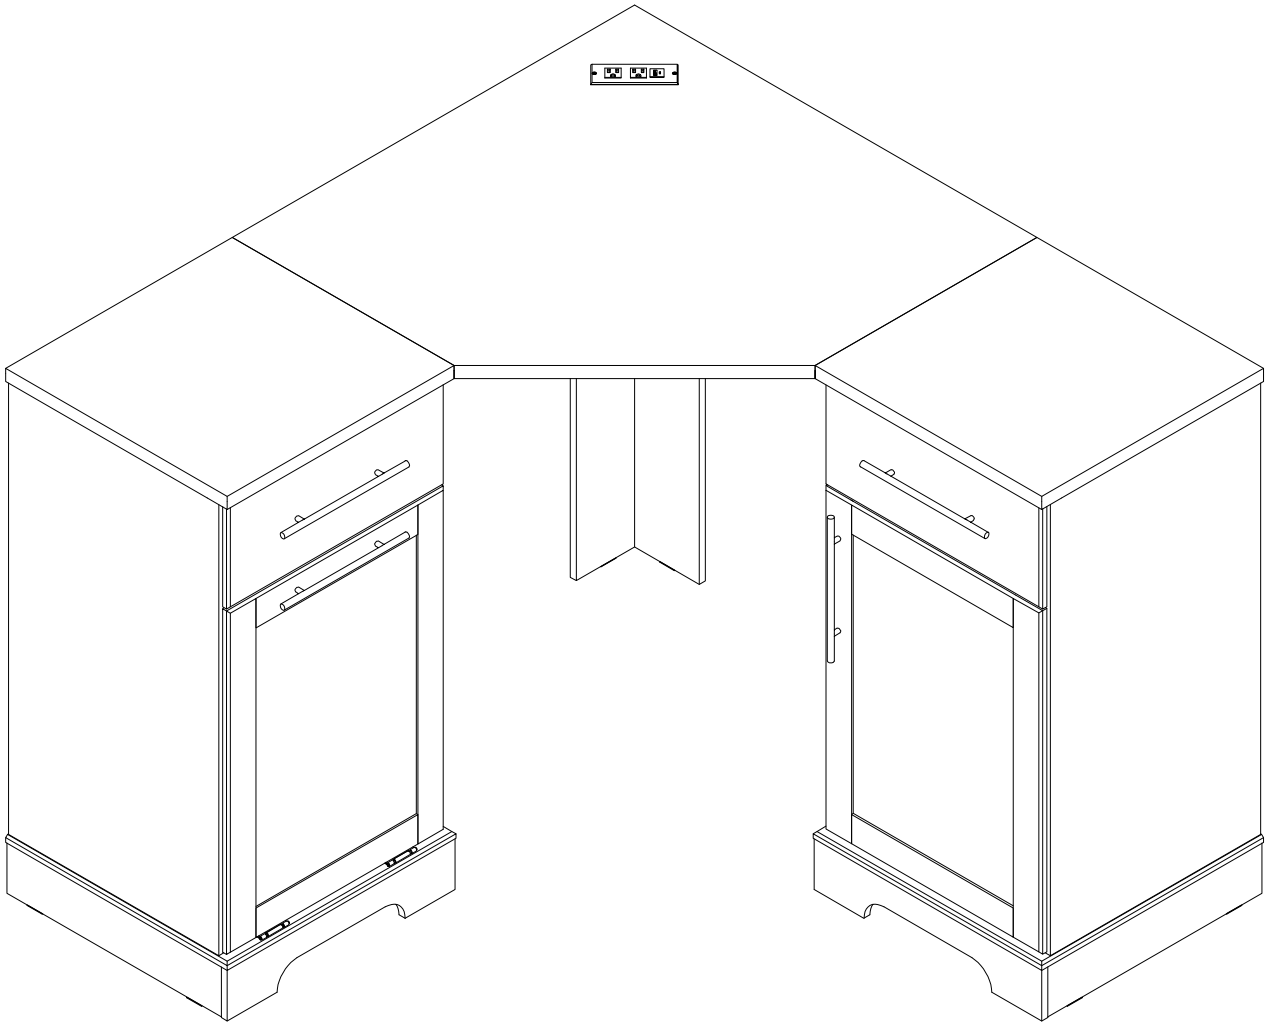

FINISH/ TERMINÉ

Made in Vietnam

Date of manufacture : 2026/08