

ASSEMBLY INSTRUCTION

MODEL :JAZZ EASTERN KING BED

(BOX 1) BOX OF HEADBOARD

NO	ITEM	QTY
A	HEADBOARD	1
B	FOOTBOARD	1
C	HEADBOARD LEG L/R	2
D	BED SLATS	4
E	BED SLATS SUPPORT	8

(BOX 2) BOX OF SIDE RAIL

NO	ITEM	QTY
F	SIDE RAILS	2


(BOX 1) HARDWARE LIST

NO	ITEM	QTY
1	ALLEN WRENCH M4 X 65MM BLK	1
2	JCBC M6 X 30MM BLK	6
3	SPRING WASHER 1/14" BLK	6
4	FLAT WASHER 1/14"IDX13MMOD BLK	6
5	ADAPTOR	1
6	ALLEN WRENCH M6 X 65MM BLK	1
7	FLAT HEAD SCREW M4 X 28MM RBW	16

STEP 1

STEP 1:1 Attach the Headboard Leg (C) to Headboard (A) as show, Using JCBC Bolt (2),Spring Washer (3),Flat Washer (4) and fasten with Allen Wrench (1).

STEP 1:2 Fix the headboard Leg (C) by using Flat Head Chipboard Screw (7) as shown.

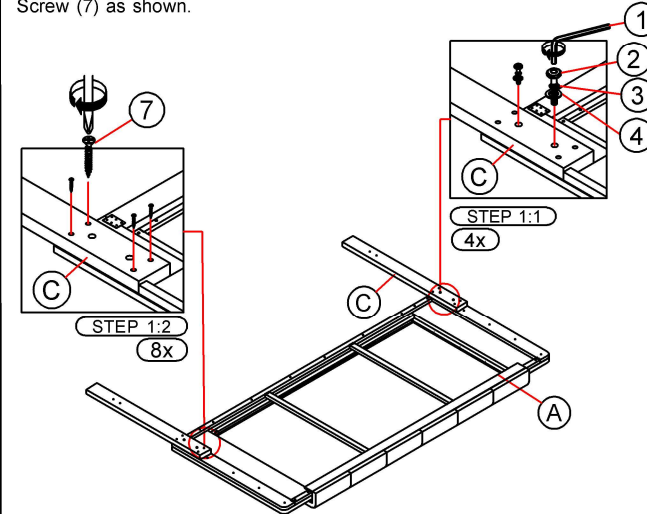


STEP 3

STEP 3:1 Attach the Footboard (B) to Side Rail (F) as show, Using JCBC Bolt (2),Spring Washer (3),Flat Washer (4) and fasten with Allen Wrench (1).

STEP 3:2 Fix the Bed Slats Support (E) to Bed Slats (D) as Shown. Loosen or Tighten the Adjuster as necessary to level the Bed.



STEP 3:3 Fix the Bed Slats (D) with Bed Slats Support (E) to Side Rail (F) by using Pan Head Screw (7).Bed assembly should be done in final location to ensure stability.

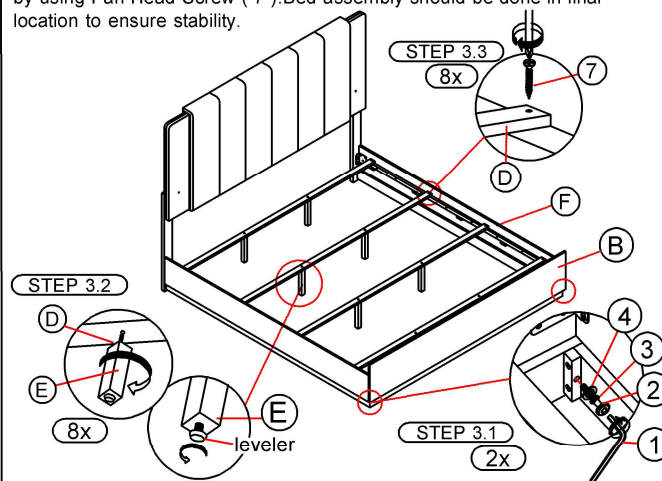

STEP 2

STEP 2:1 loosen the bolt on Headboard Leg (C) and Hook the Side Rails (F) to Headboard Leg (C) closely and push down to fit.

STEP 2:2 Retighten the bolt using an with Allen Wrench (6) as shown. Repeat the same step with other and of rail to hook onto Footboard (B).

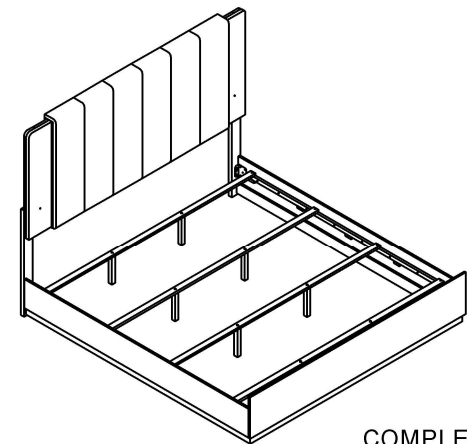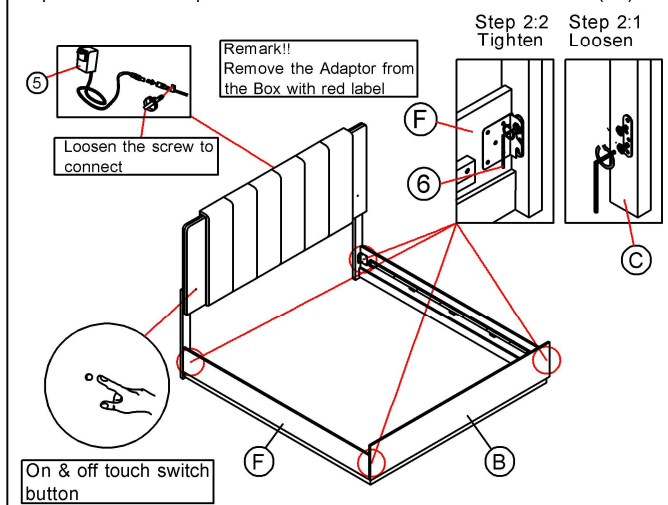

**COMPLETED
ASSEMBLY**

NOTE : MUST TIGHTEN SCREWS PERIODICALLY WITH USE SCREW WILL BECOME LOOSE.CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.
DO NOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED.