


# Wardrobe

# WF313632AAK

Assembly Instructions - Please keep for future reference

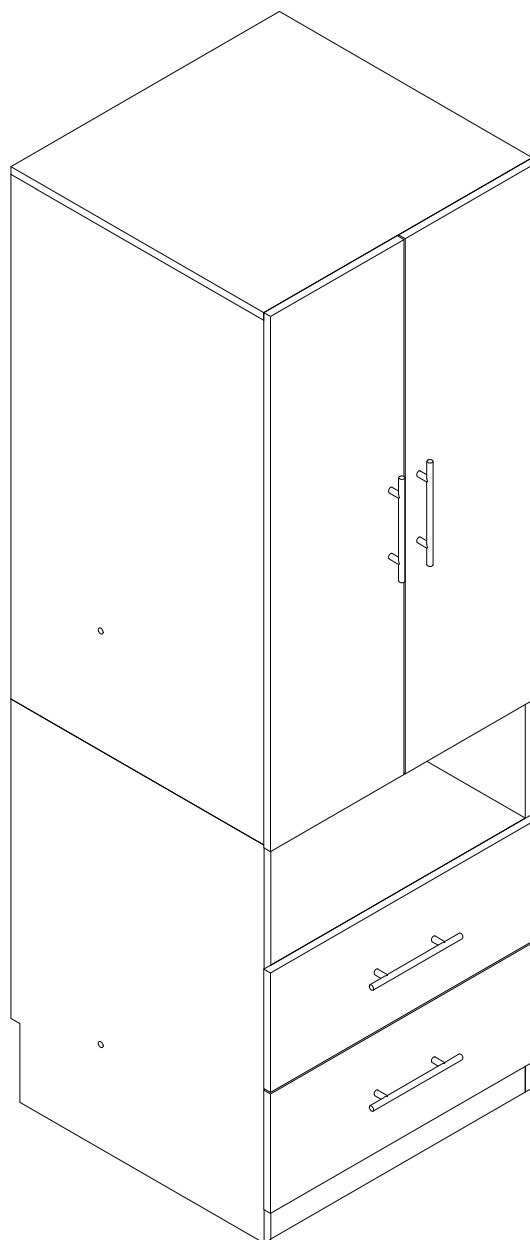

Important – Please read these instructions fully before starting assembly



# Safety and Care Advice

**Important – Please read these instructions fully before starting assembly**

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

## **WARNING** In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)  
Do not allow children to climb or hang on the furniture  
Do not open more than one drawer at a time  
Do not place heavy items in the top drawers  
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

please note that only the anti tip strap is provided.

You will need to provide wall plugs and screws applicable for your wall type


# Using Camlocks

## Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.  
NE PAS SERRER EXCESSIVEMENT.

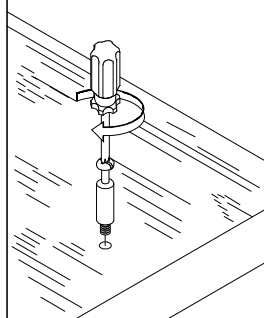

## Step 2

Push the male camlock into the entry hole.

2

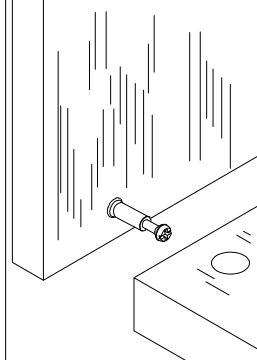


## Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

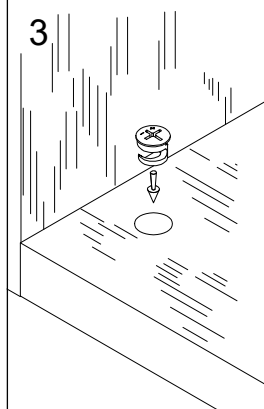


## Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.







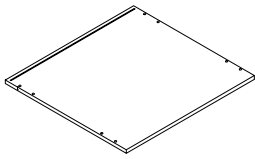
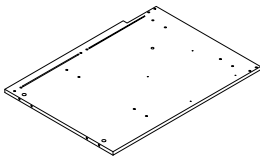
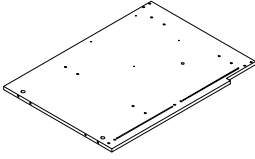
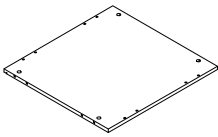
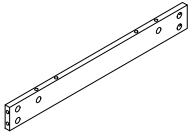
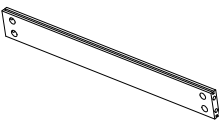
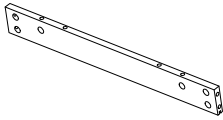
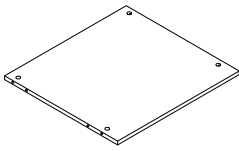
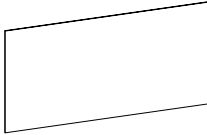
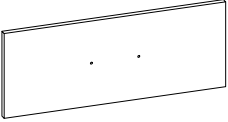






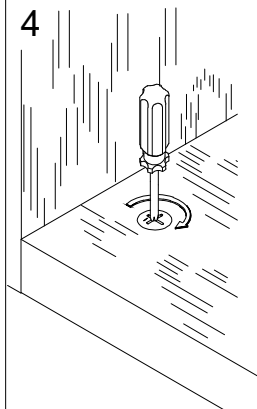
4

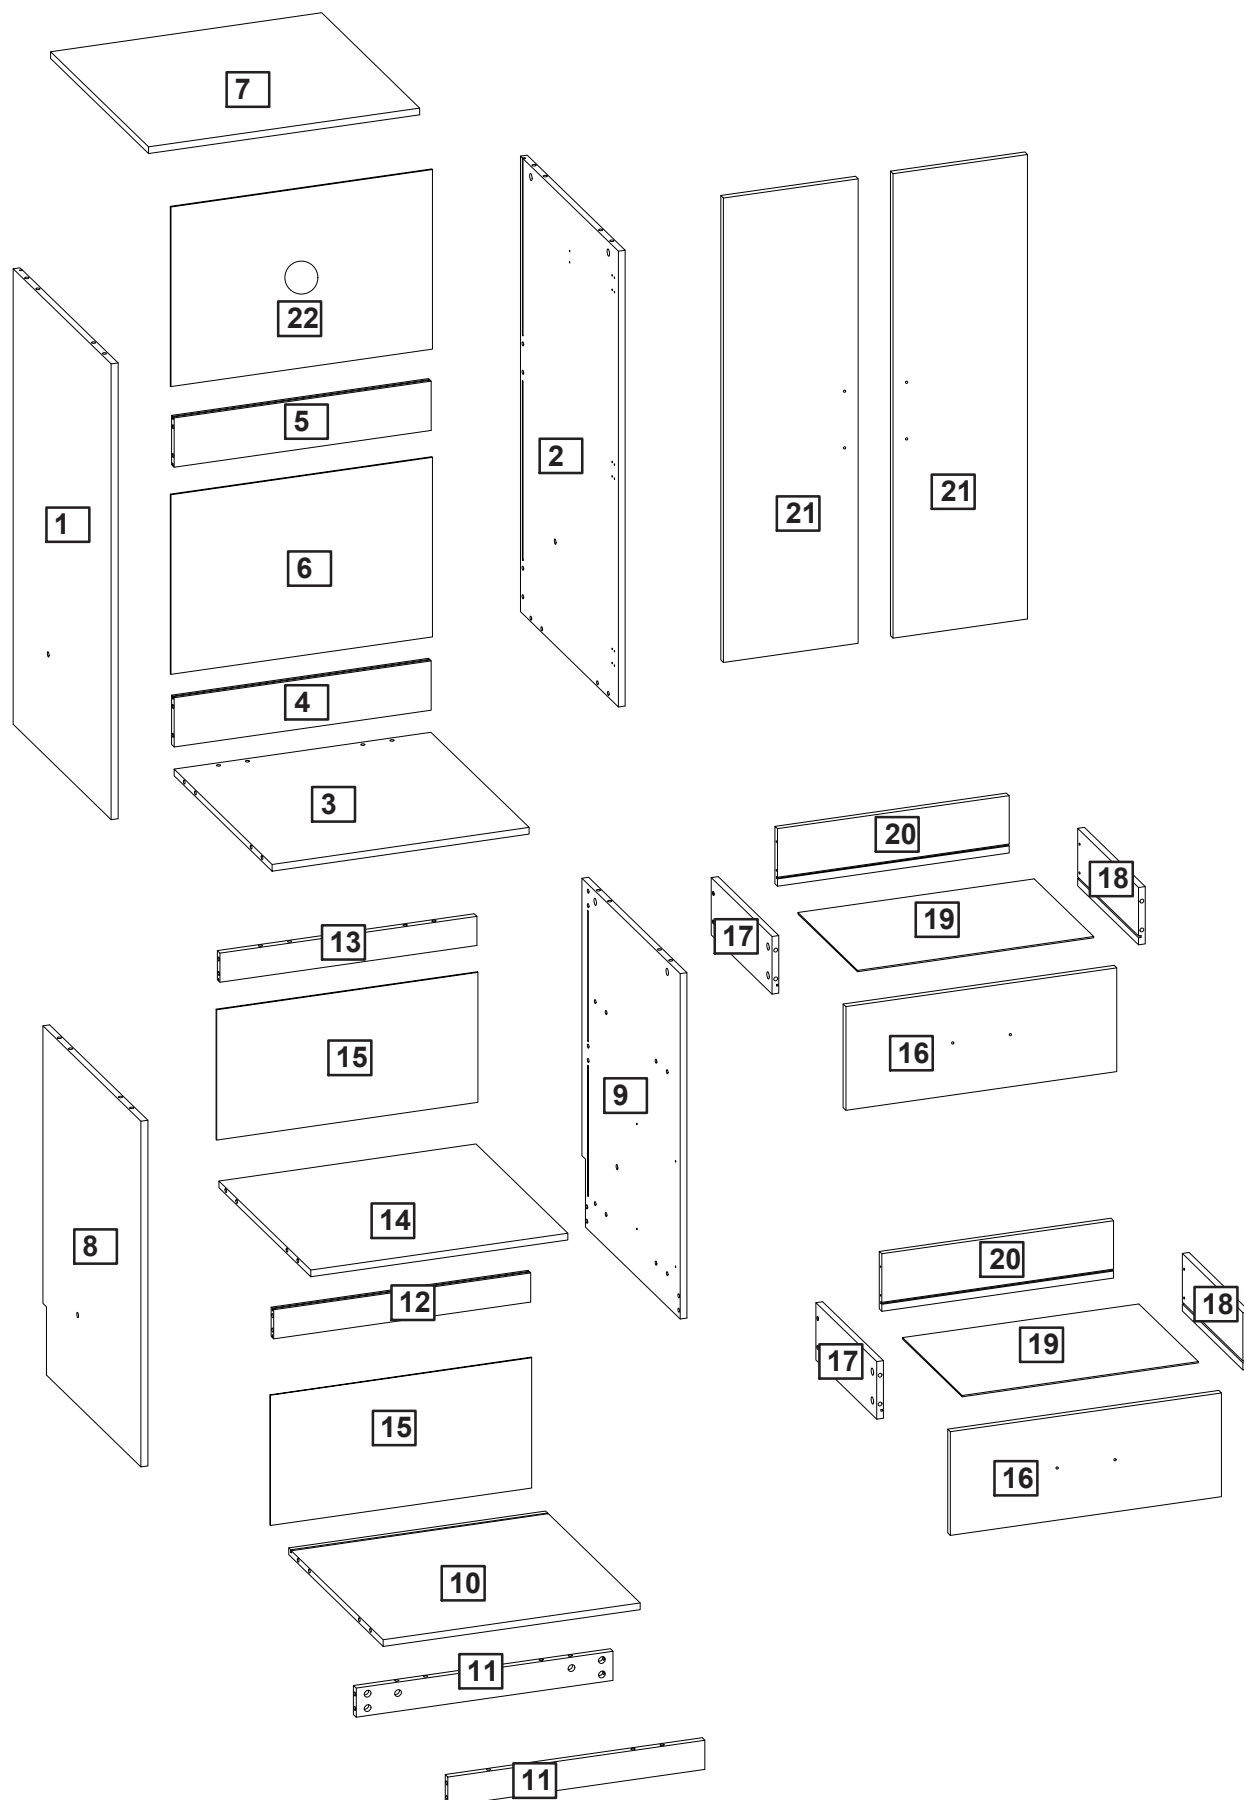

# Assembly Instructions



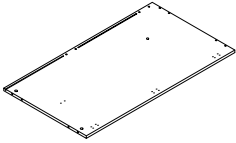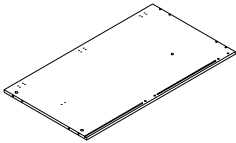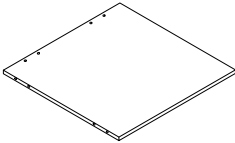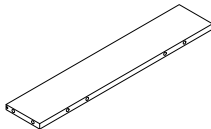

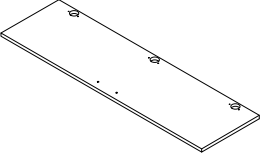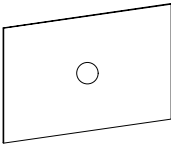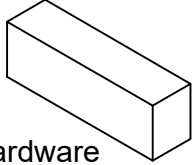












# Part List: WF313632AAK

<p>①</p>  <p>1 PC</p>	<p>②</p>  <p>1 PC</p>	<p>③</p>  <p>1 PC</p>	<p>④</p>  <p>1 PC</p>	<p>⑤</p>  <p>1 PC</p>
<p>⑥</p>  <p>1 PC</p>	<p>⑦</p>  <p>1 PC</p>	<p>⑧</p>  <p>1 PC</p>	<p>⑨</p>  <p>1 PC</p>	<p>⑩</p>  <p>1 PC</p>
<p>⑪</p>  <p>2 PCS</p>	<p>⑫</p>  <p>1 PC</p>	<p>⑬</p>  <p>1 PC</p>	<p>⑭</p>  <p>1 PC</p>	<p>⑮</p>  <p>2 PCS</p>
<p>⑯</p>  <p>2 PCS</p>	<p>⑰</p>  <p>2 PCS</p>	<p>⑱</p>  <p>2 PCS</p>	<p>⑲</p>  <p>2 PCS</p>	<p>⑳</p>  <p>2 PCS</p>
<p>㉑</p>  <p>2 PCS</p>	<p>㉒</p>  <p>1 PC</p>	<p>Hardware</p>  <p>1 PC</p>		

# Hardware list: WF313632AAK

Please check you have all the panels listed below

**Note:** The quantitie below are the correceet amount to complete the assembly. In some cases more fittings may be supplied than are required.


<b>A</b>  Male Camlock x 60	<b>B</b>  Female Camlock x 60	<b>C</b>  Dowel x 28
<b>D</b>  3*12mm Screw x 16	<b>E</b>  Clothes Hanger x 1	<b>F</b>  4*30mm Screw x 8
<b>G</b>  Back Panel Stiffener x 16	<b>H</b>  Door Hinge x 6	<b>I</b>  Handle & Fixings x 4
<b>J</b>  Drawer slider 14" x 2	<b>K</b>  3.5*14mm Screw x 40	<b>L</b>  Ø20 Sticker x 16
<b>M</b>  Nut x 2	<b>N</b>  Coat Hook x 2	<b>O</b>  Air Vent cover x 1

## Tools required




Phillips screwdriver  
(medium & large), This is not inclue in the hardware.

Ruler - Use this ruler to help correctly identify the screws



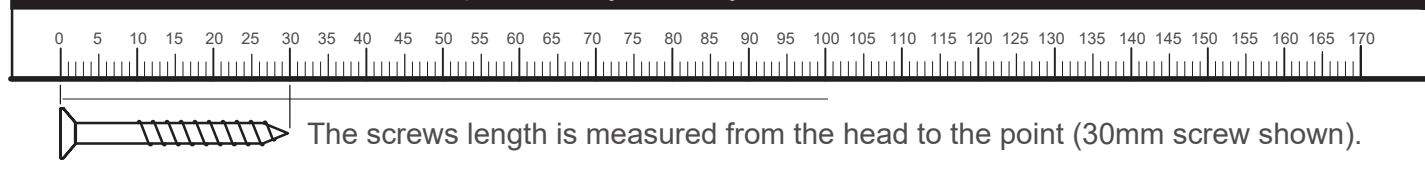


# Assembly Instructions

## Step 1



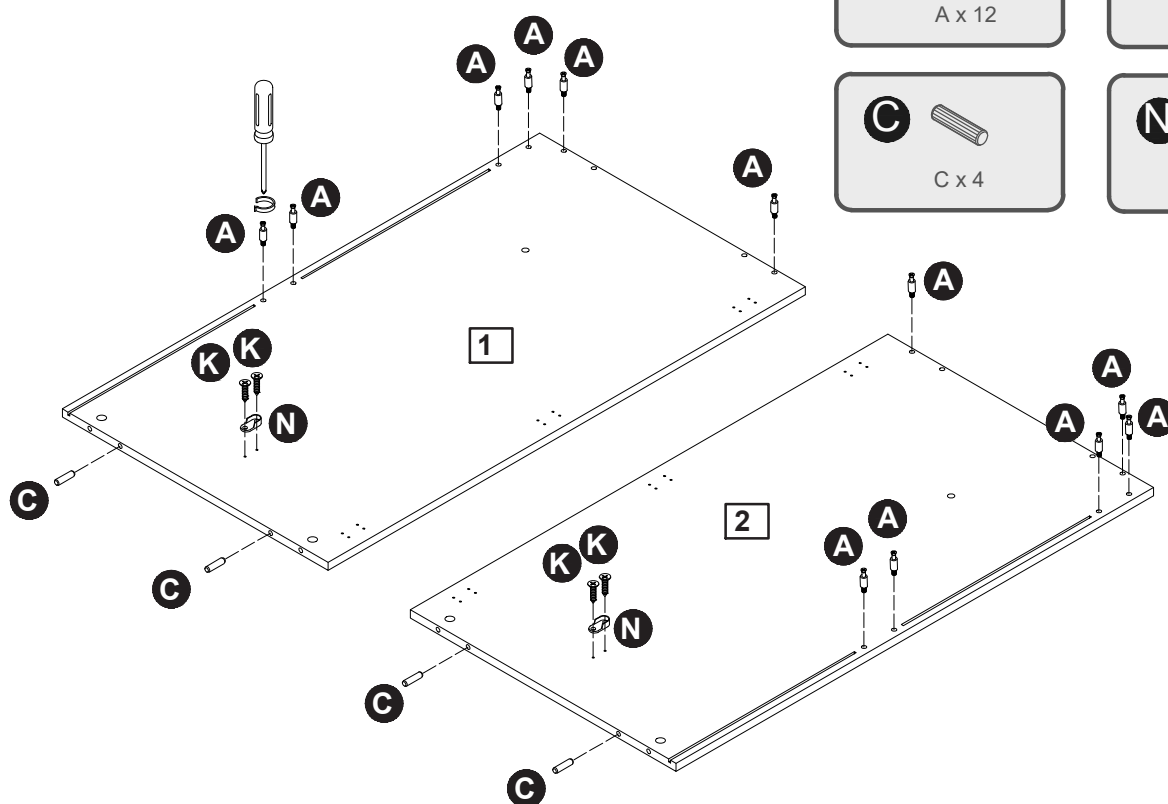


## Step 2

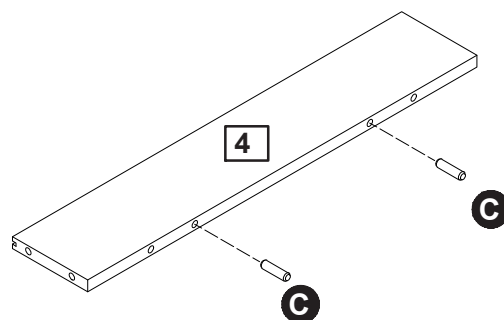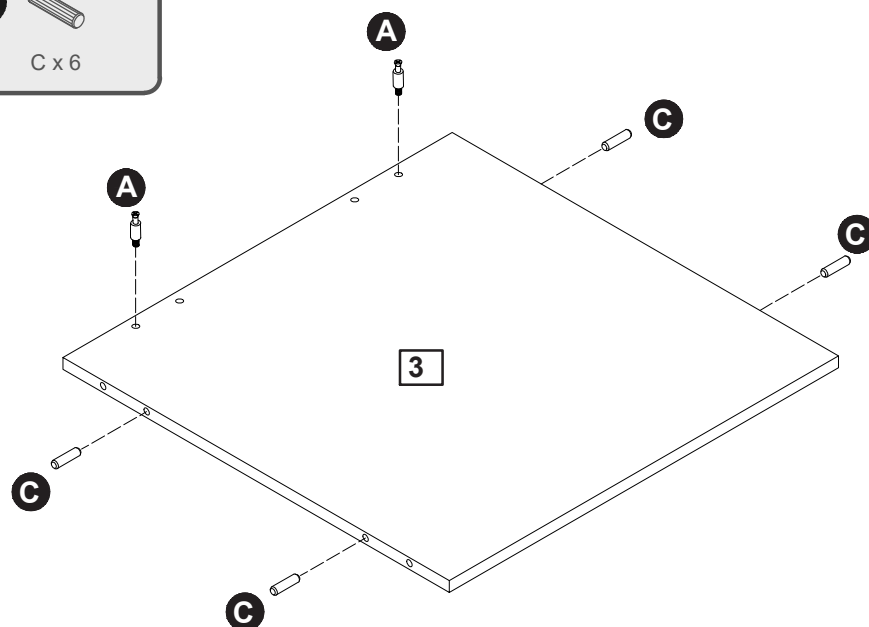
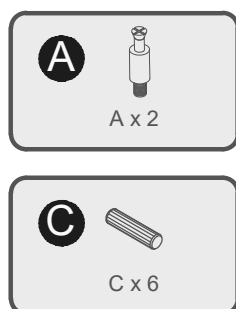


# Assembly Instructions

## Step 3

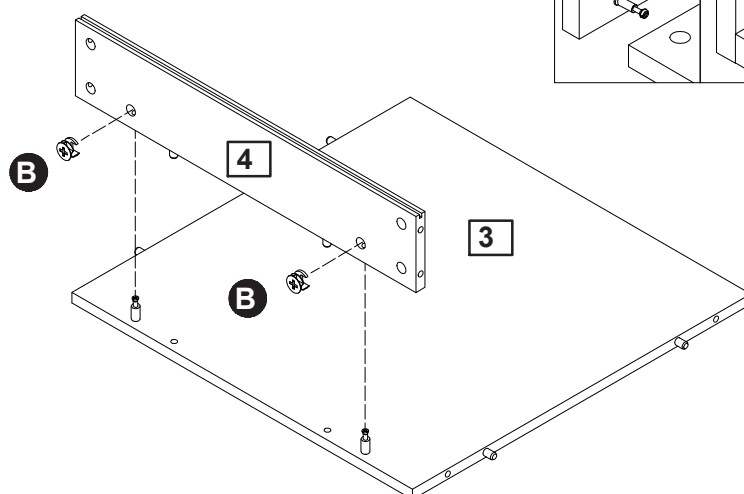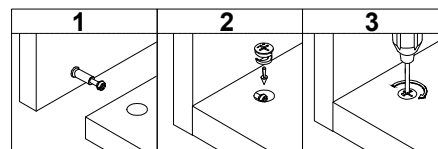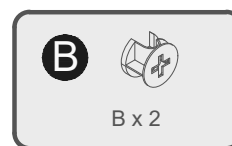


## Step 4

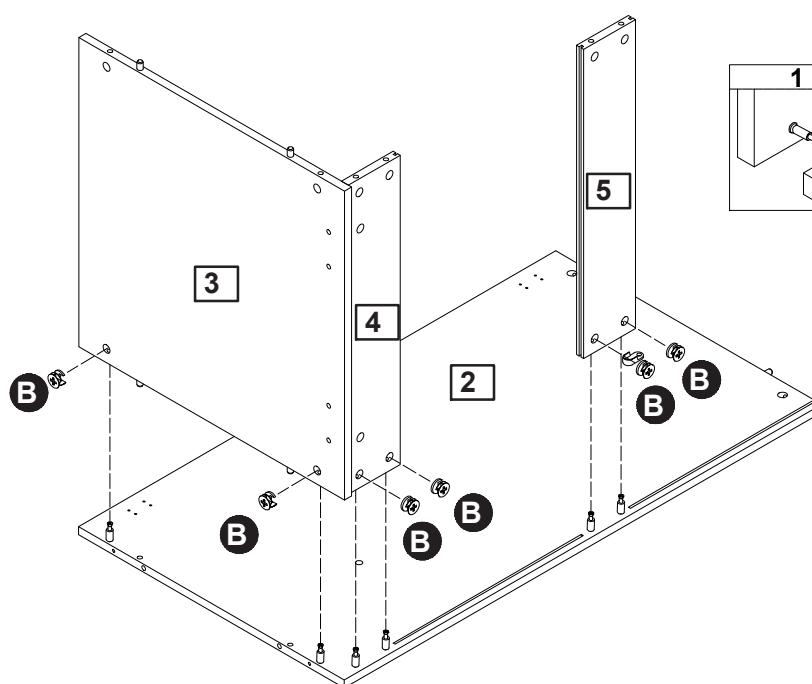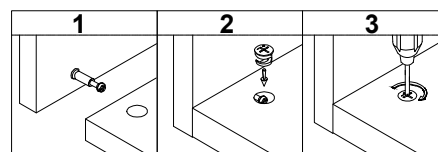




# Assembly Instructions

## Step 5

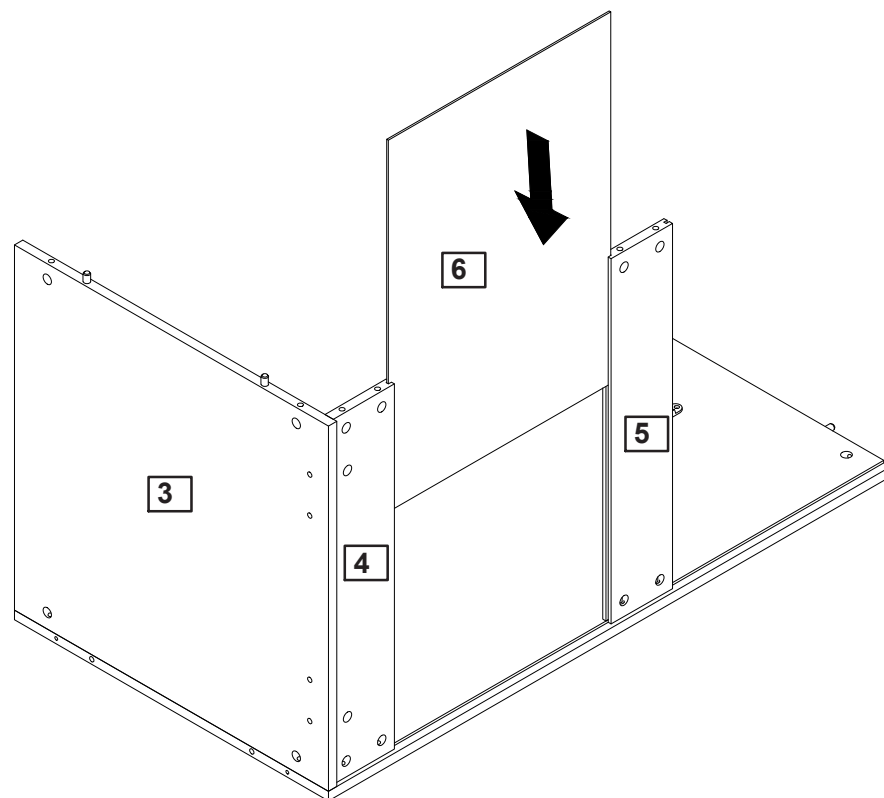


## Step 6

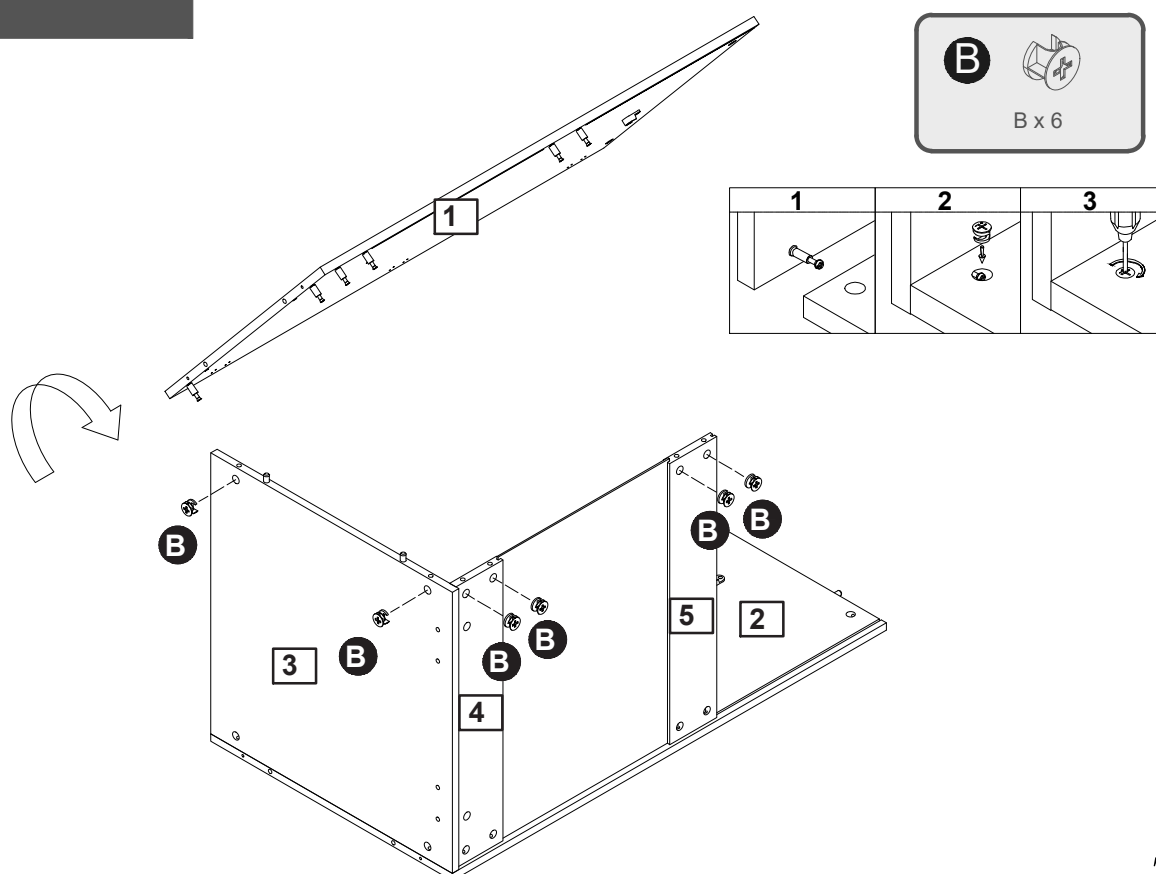


# Assembly Instructions

## Step 7



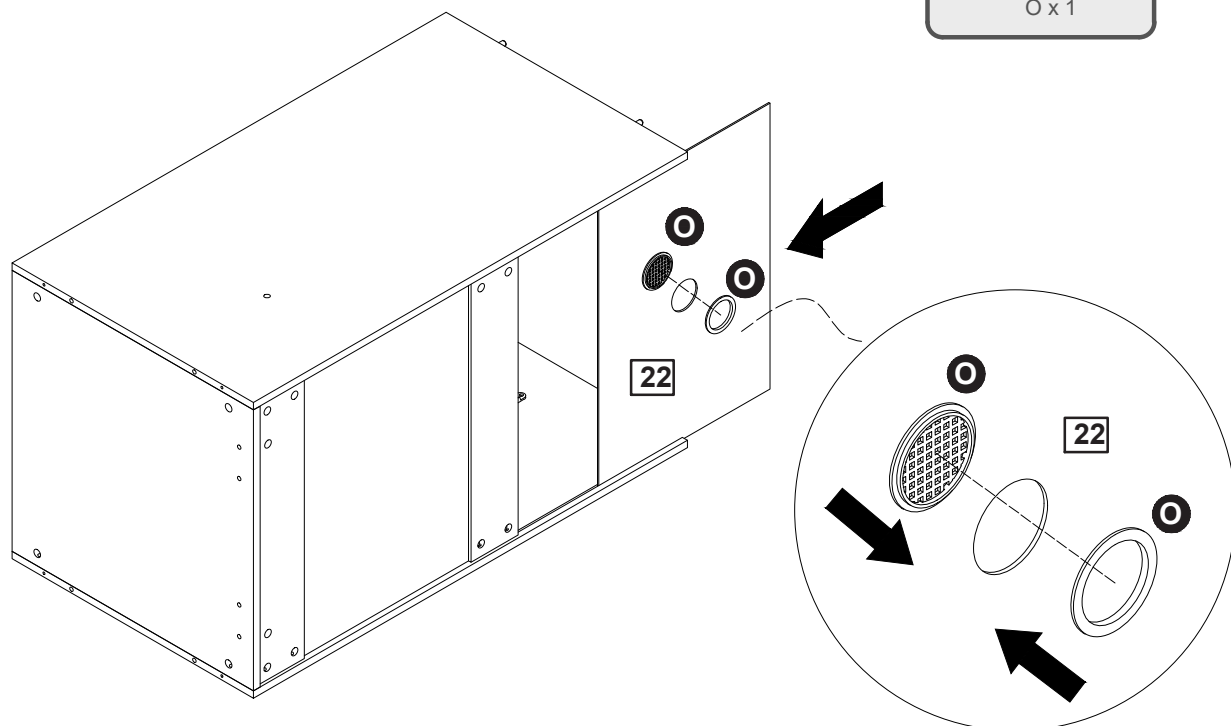


## Step 8


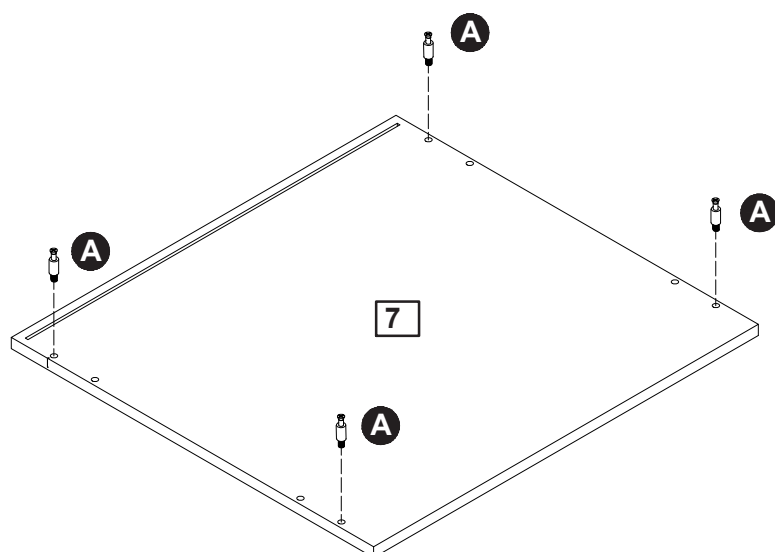


# Assembly Instructions

## Step 9

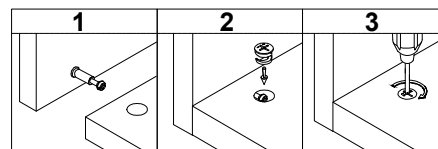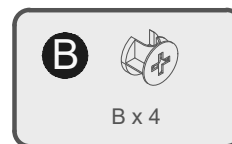
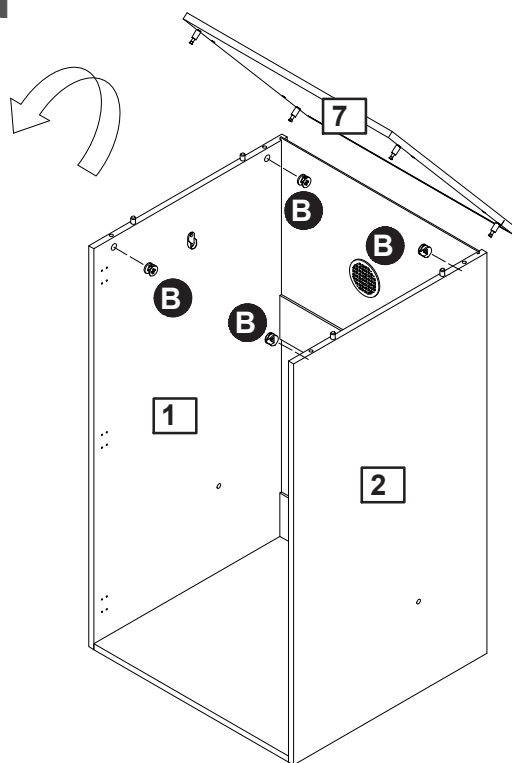


## Step 10

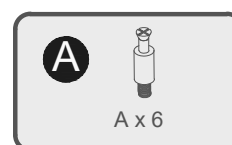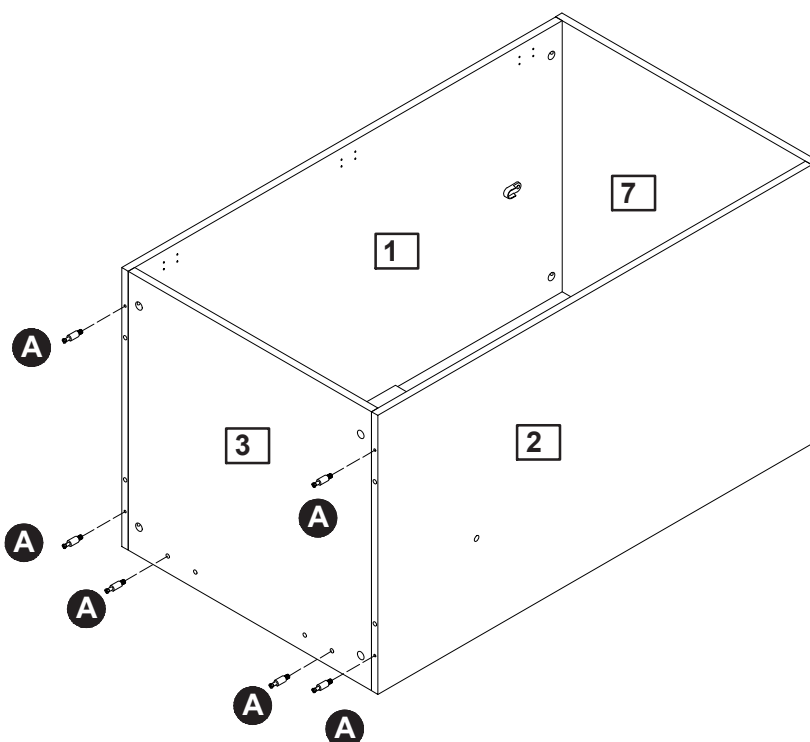

# Assembly Instructions

## Step 11

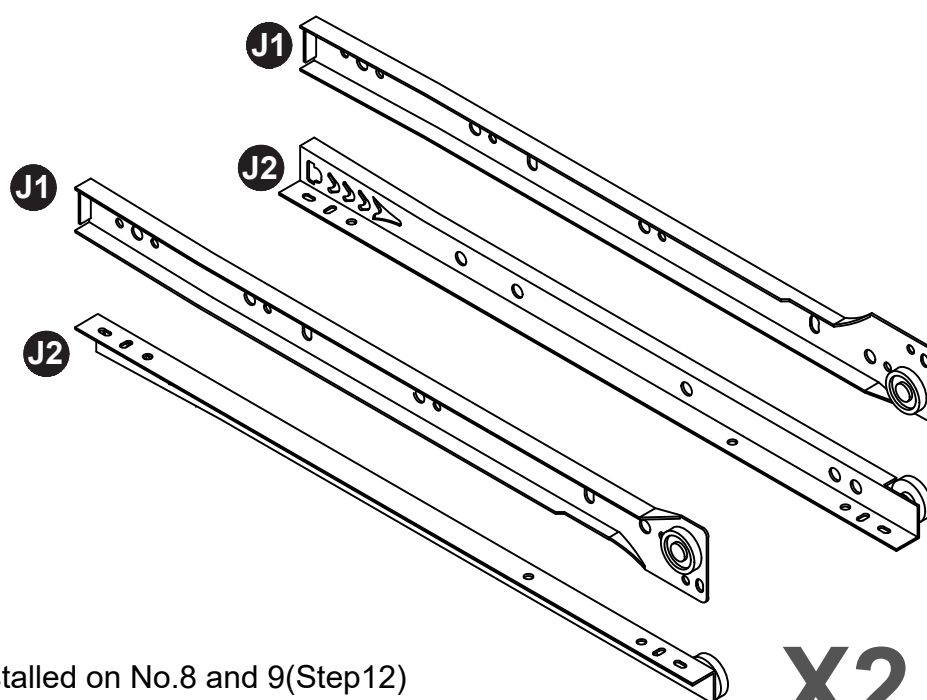
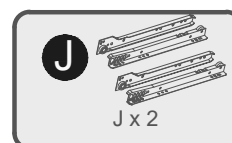


J1 installed on No.8 and 9(Step12)

J2 installed on the bottom of the drawer.(Step 29)


X2

## Step 12

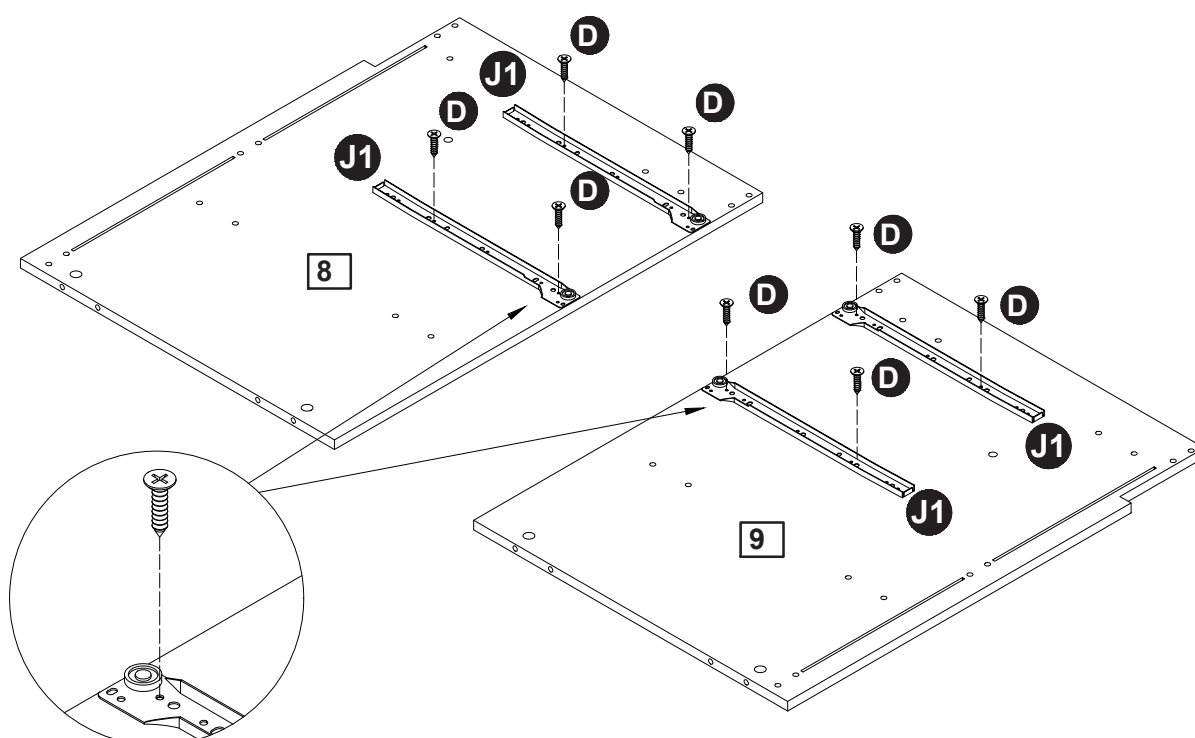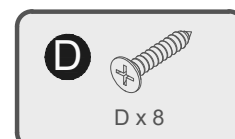


# Assembly Instructions

## Step 13



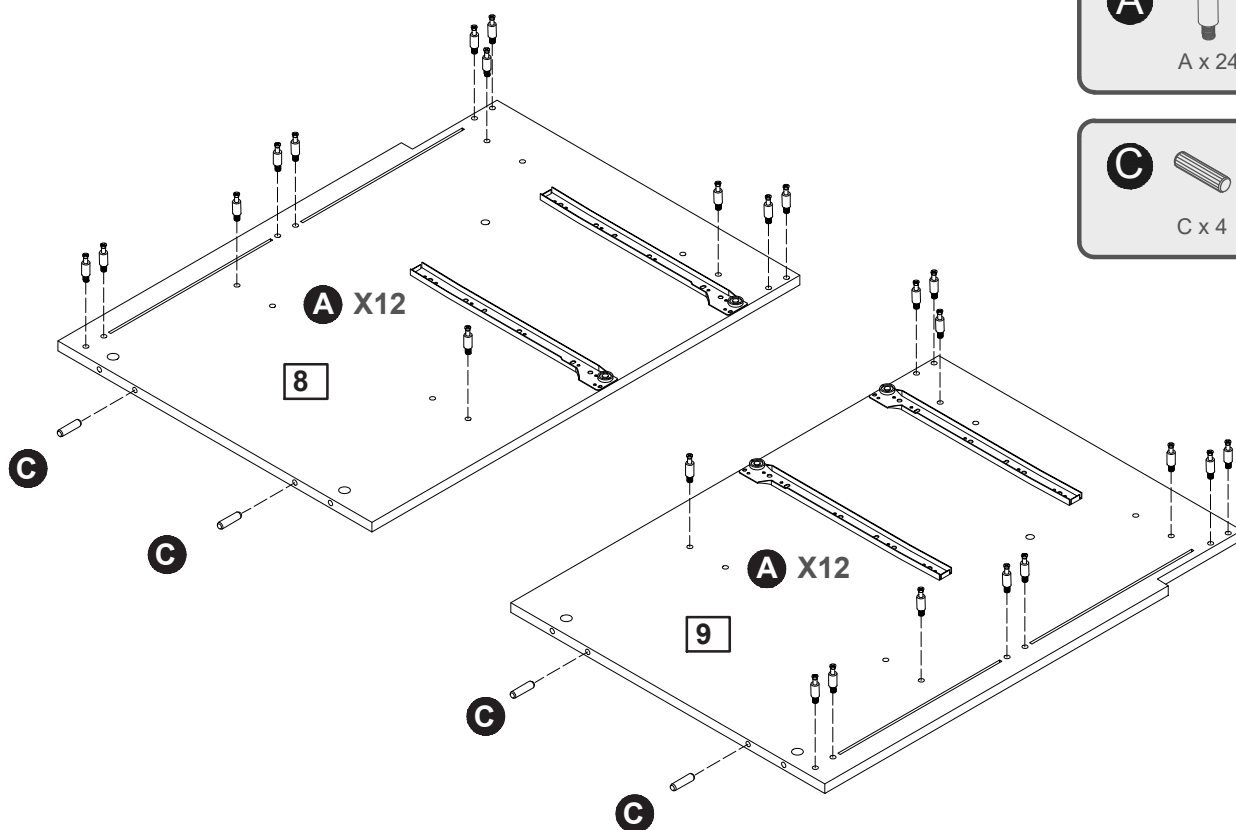


## Step 14


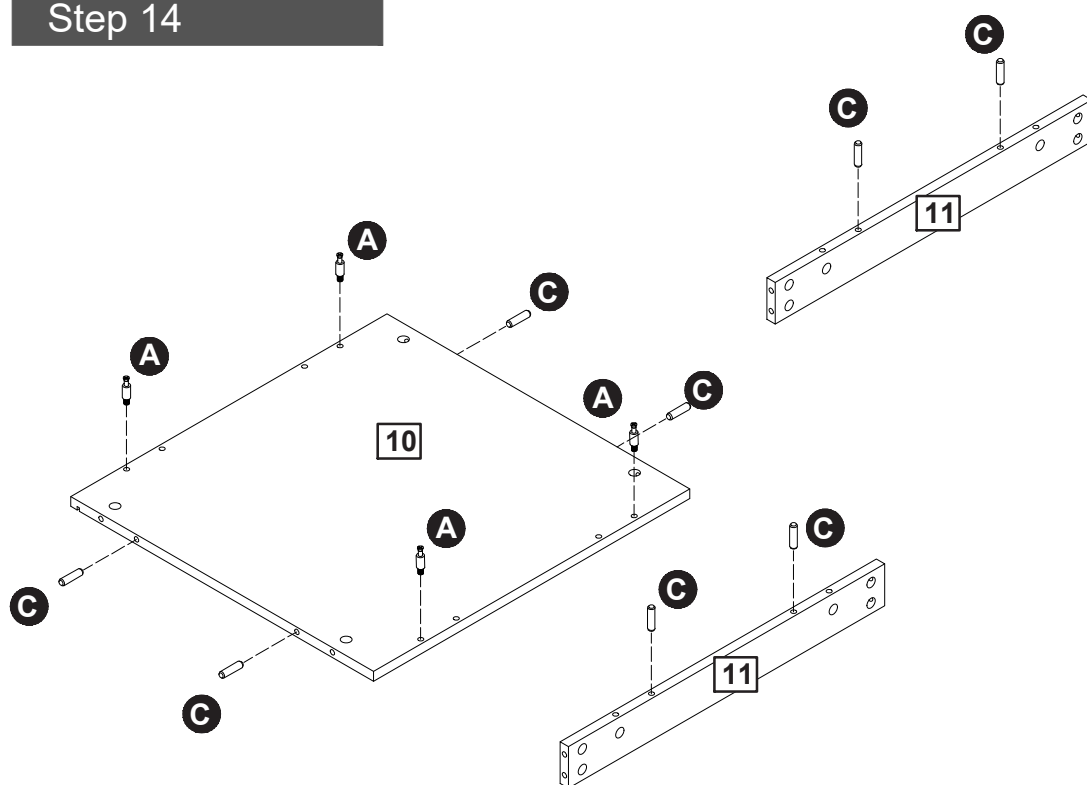


# Assembly Instructions

## Step 15

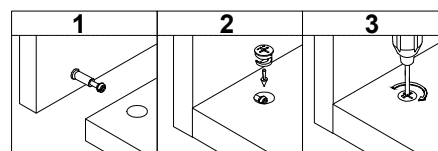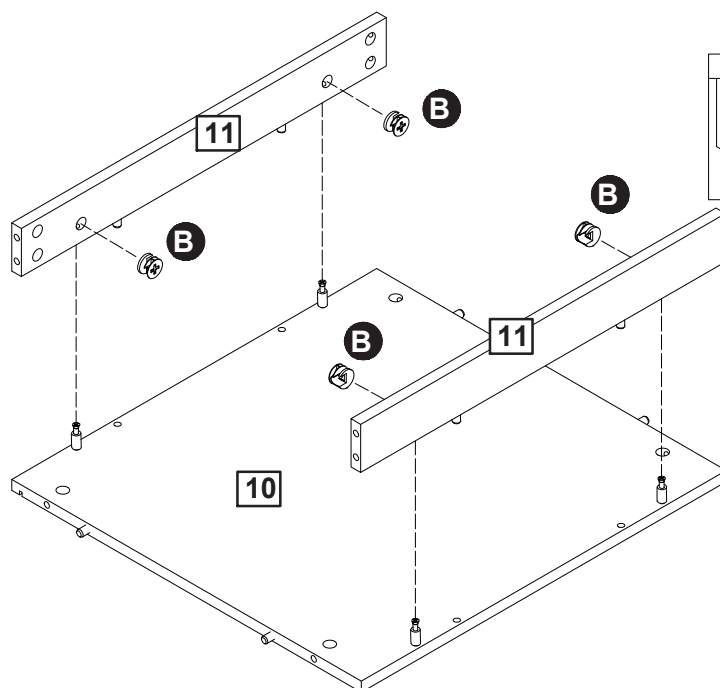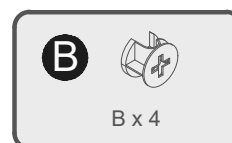

## Step 16

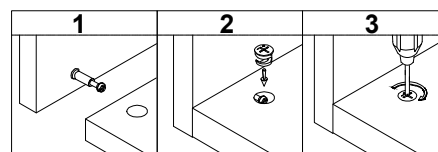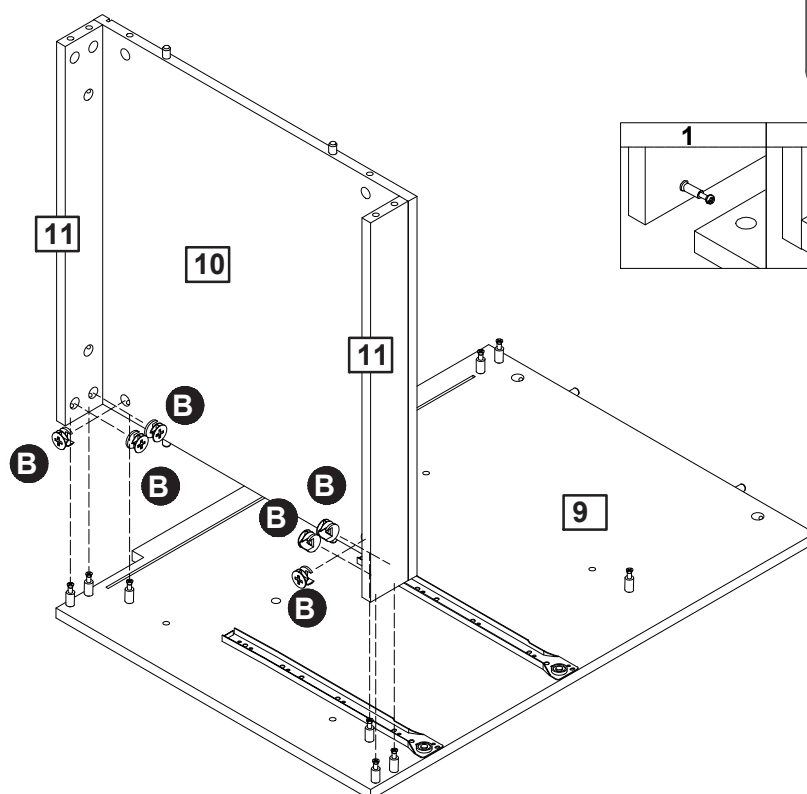


# Assembly Instructions

## Step 17

**C**



C x 6


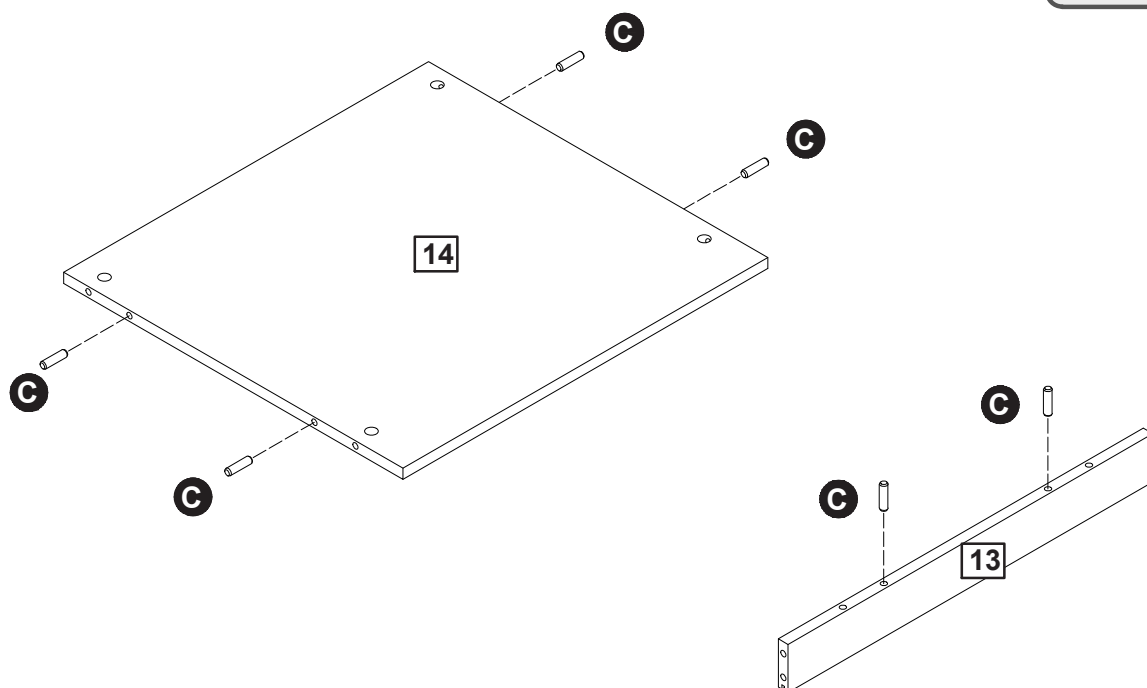


## Step 18

**B**






B x 2

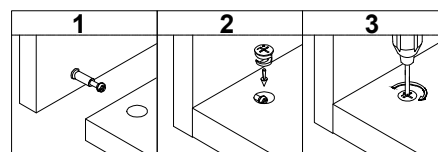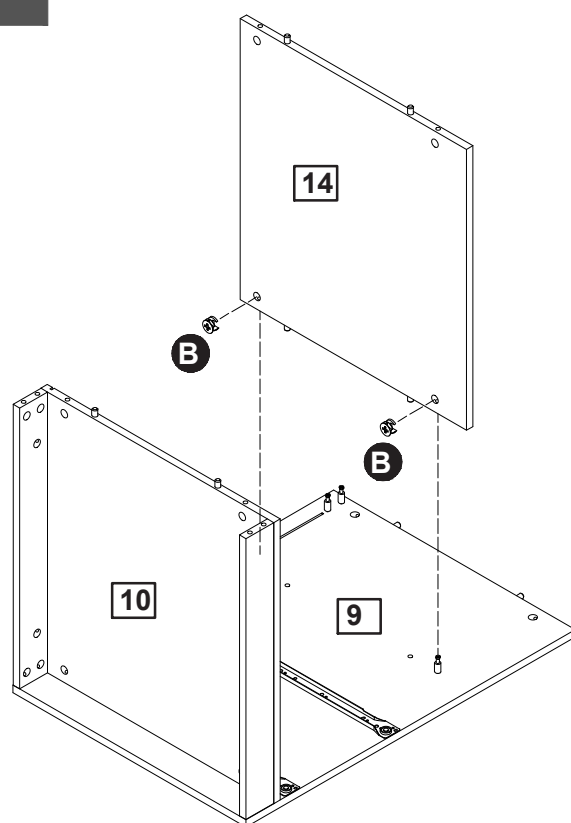


# Assembly Instructions

## Step 19

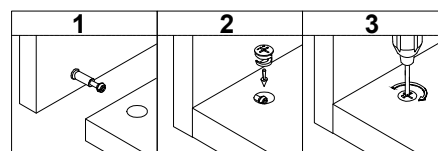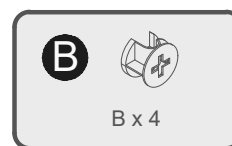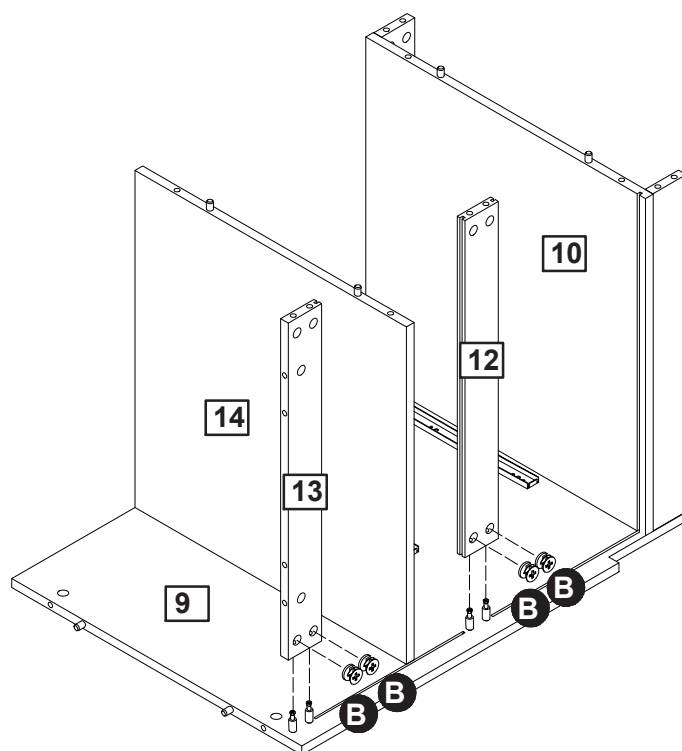




## Step 20

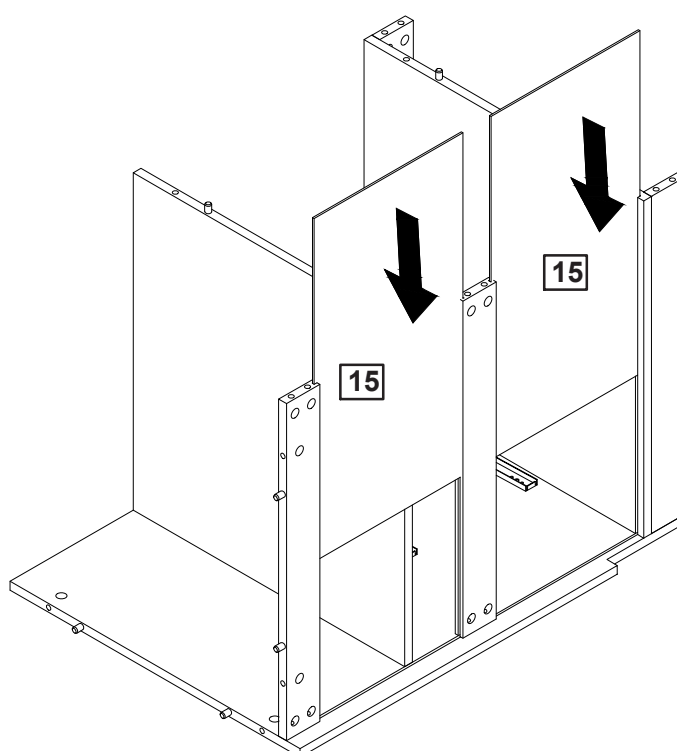





# Assembly Instructions

## Step 21

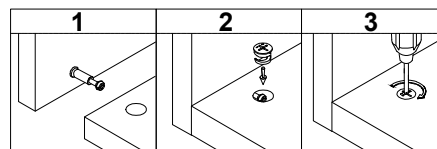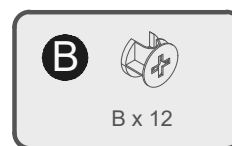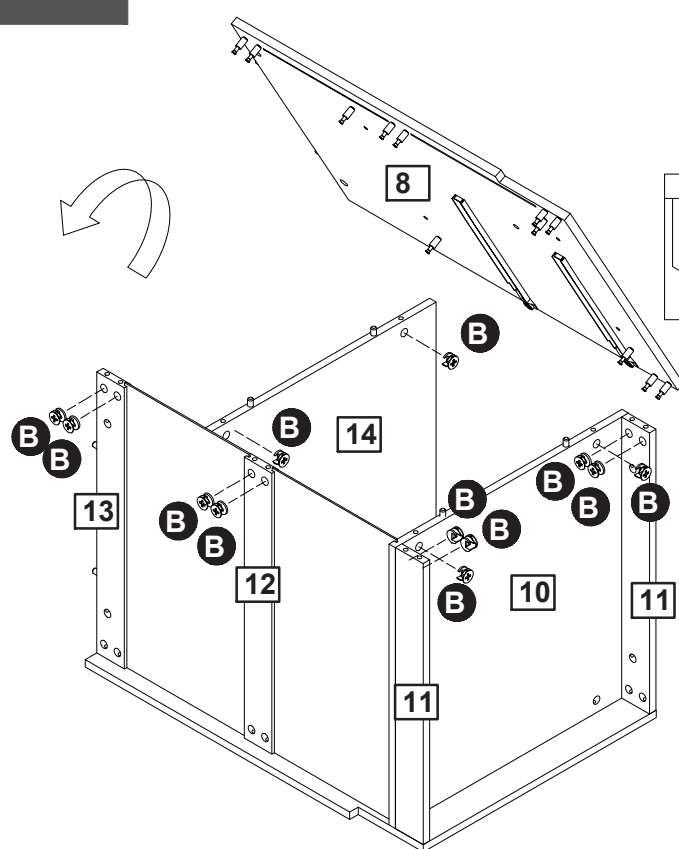




## Step 22

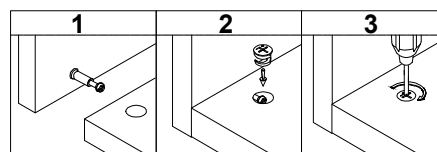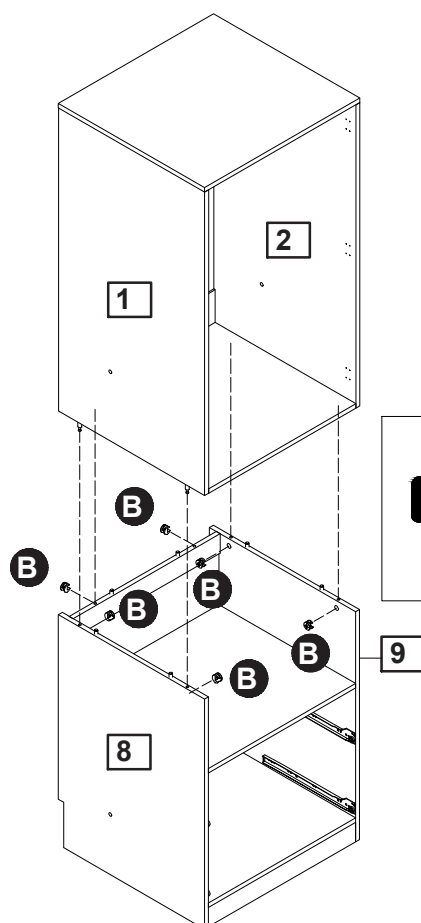

Two people are required to assemble and move this model.

# Assembly Instructions

## Step 23

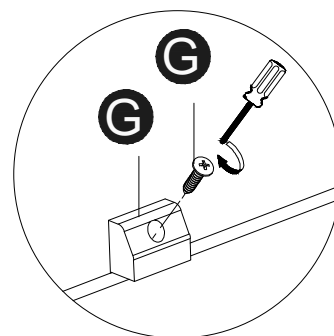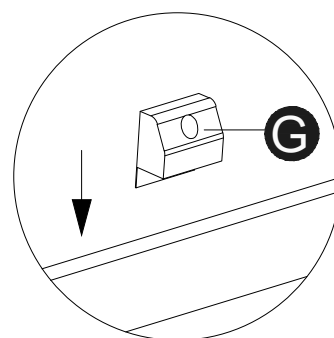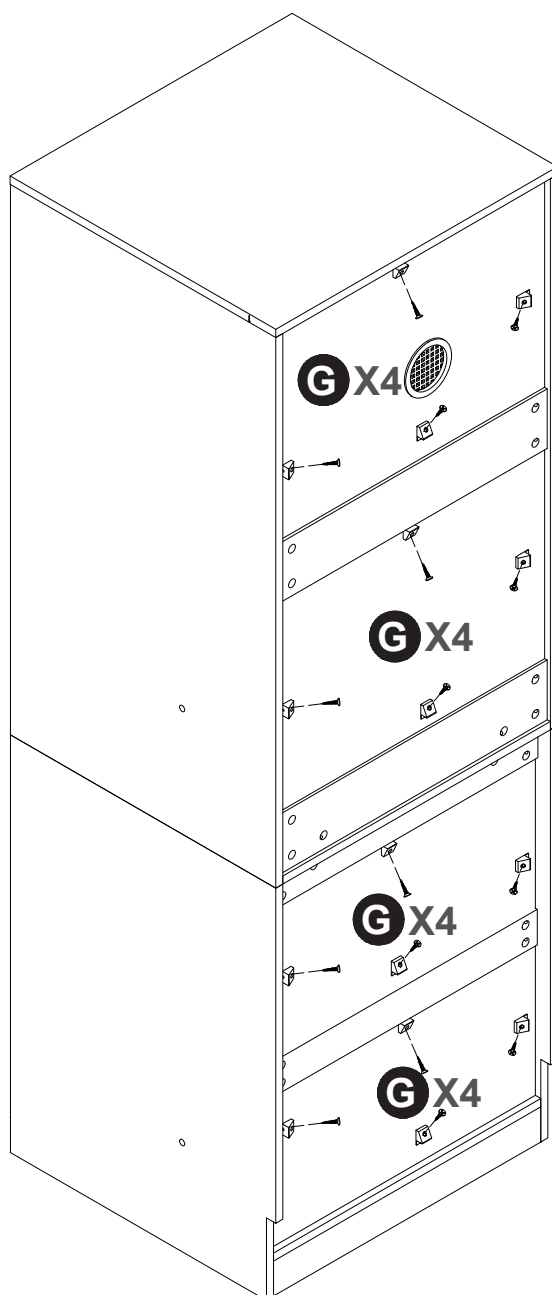


# Assembly Instructions

## Step 24




**Option 1:  
Wardrobe in right**

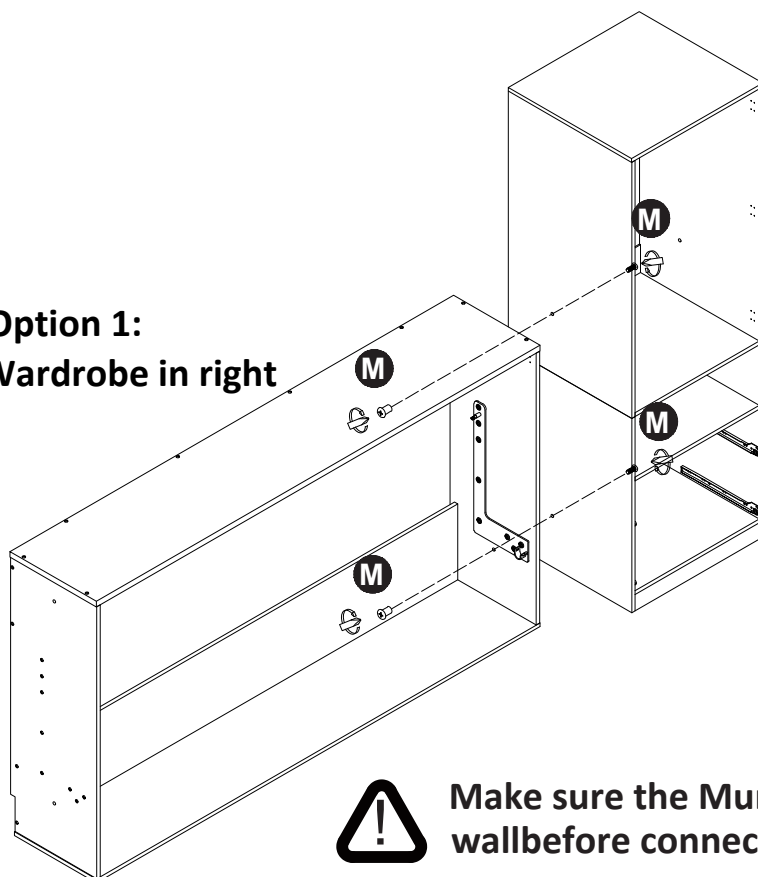


**Make sure the Murphy bed is connected to the wall before connecting the wardrobe**

**Option 2:  
Wardrobe in left**

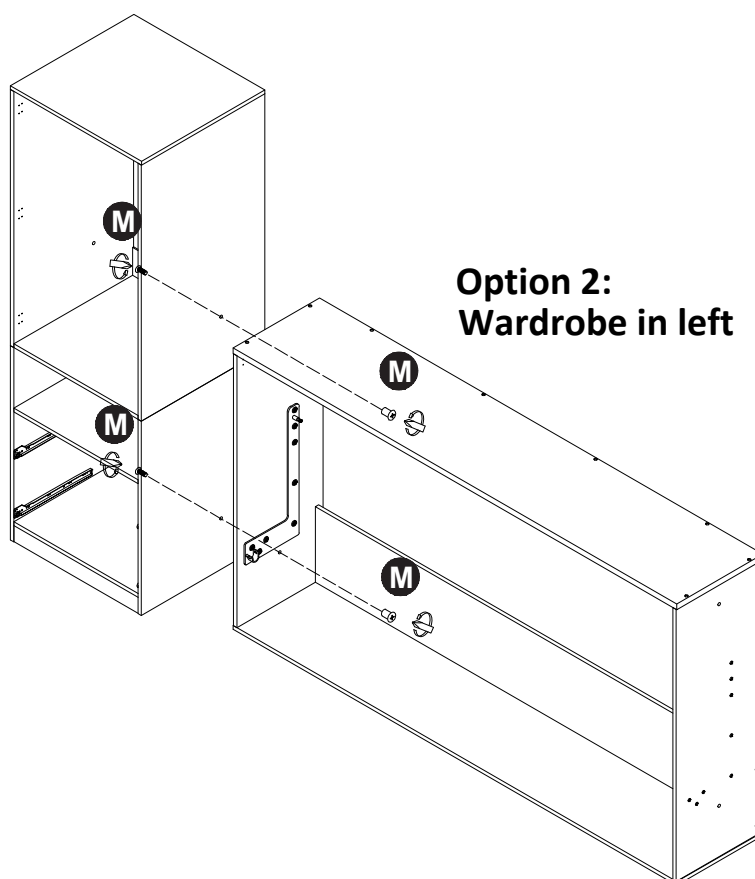


# Assembly Instructions

## Step 25

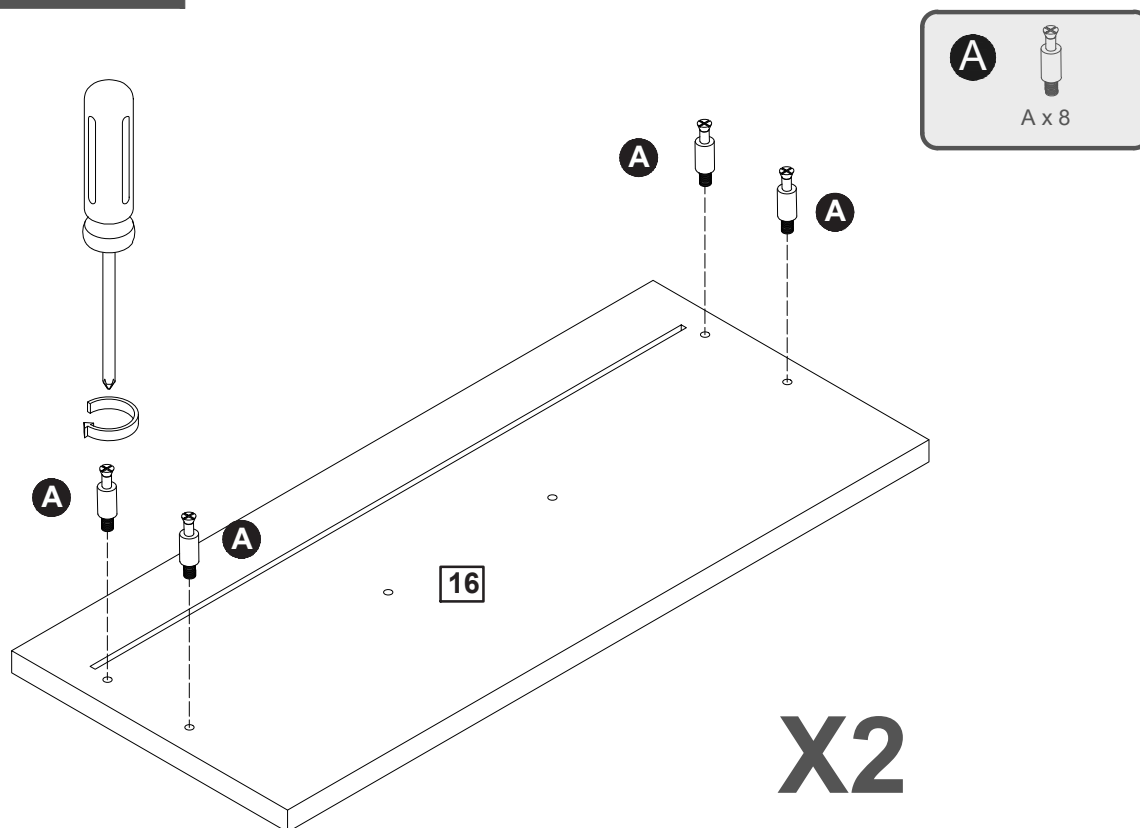


## Step 26

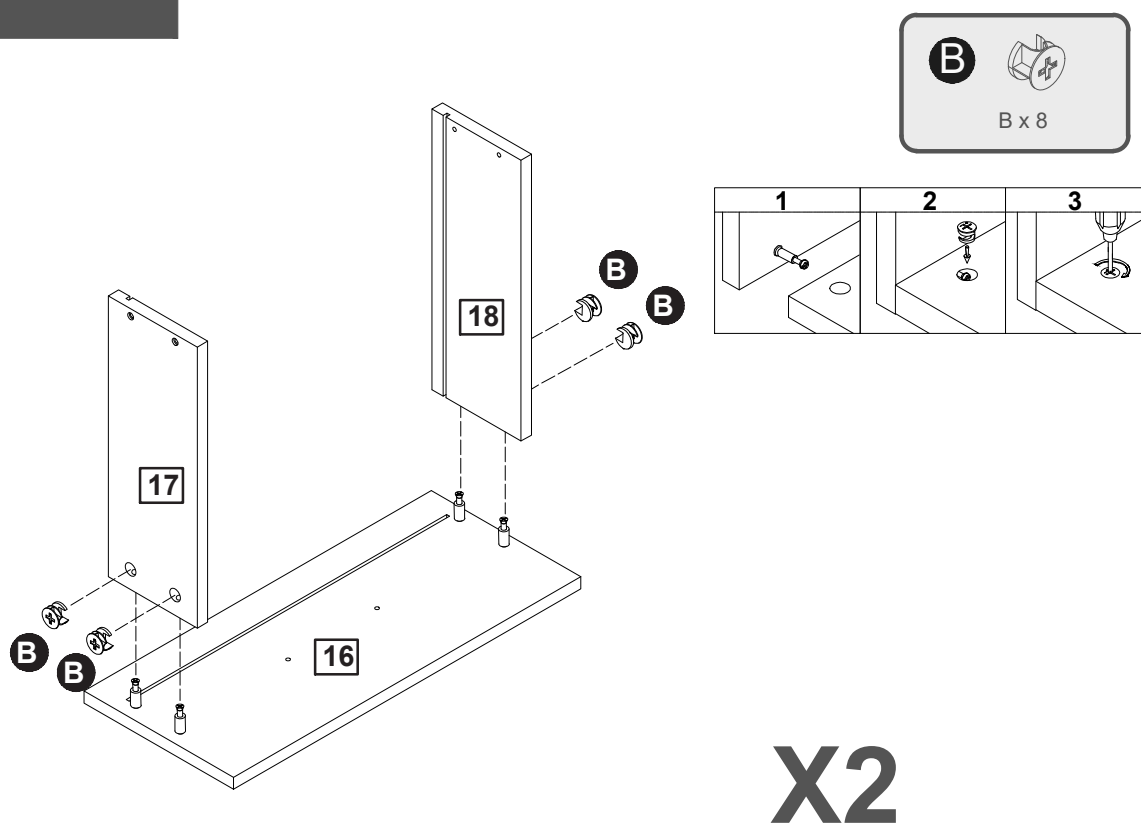


# Assembly Instructions

## Step 27

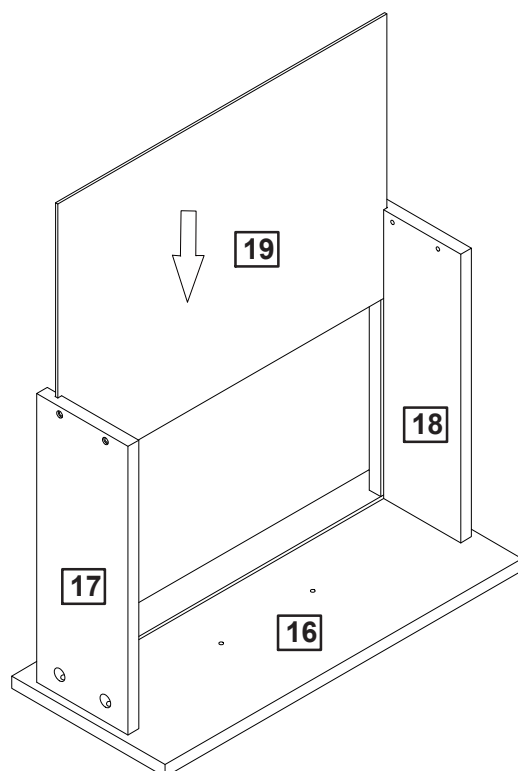

**X2**



## Step 28

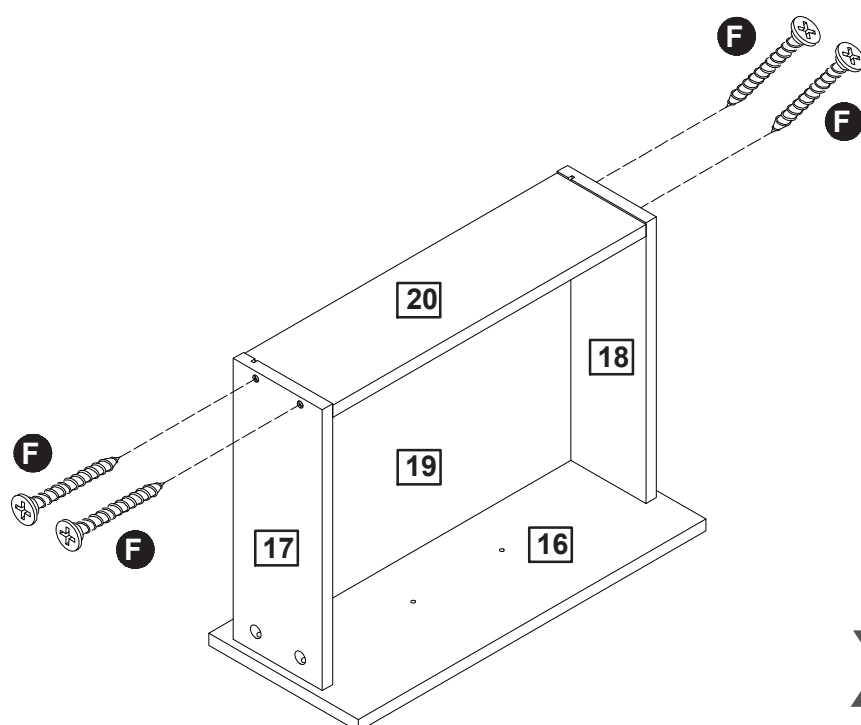


**X2**

# Assembly Instructions

## Step 29

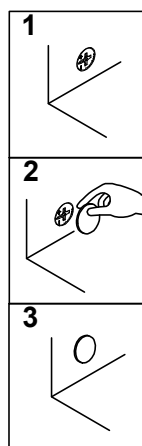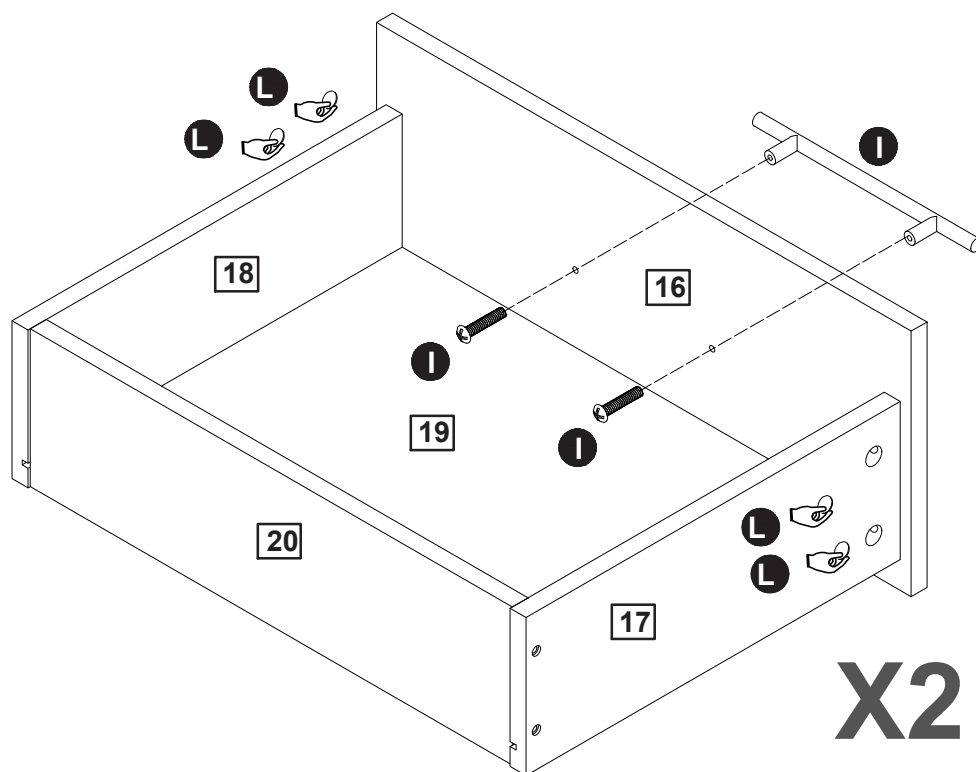


## Step 30

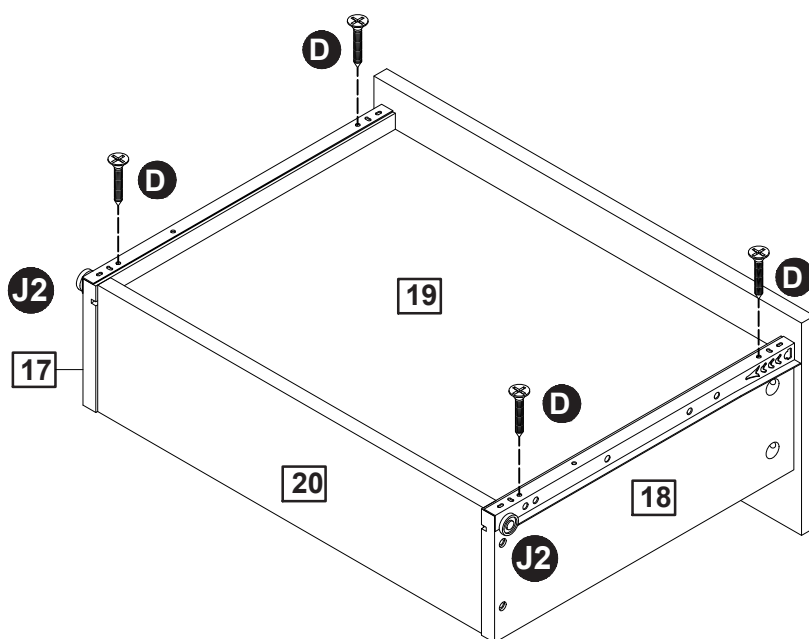


**X2**

# Assembly Instructions

## Step 31


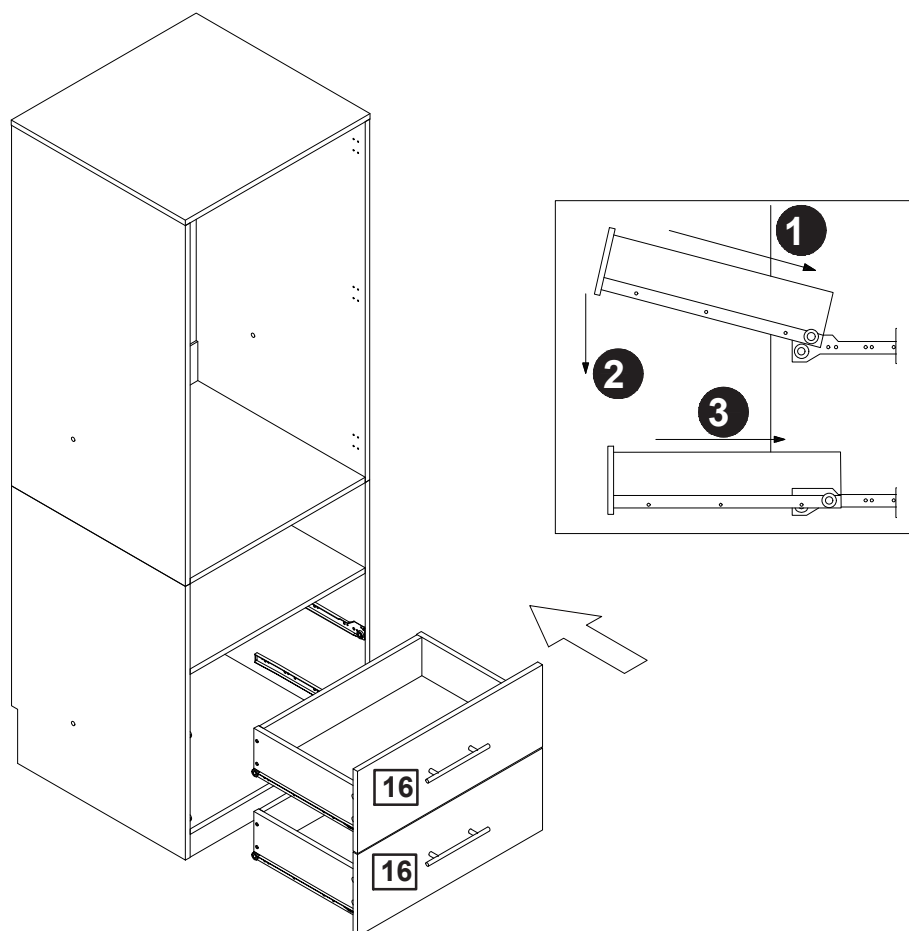


## Step 32


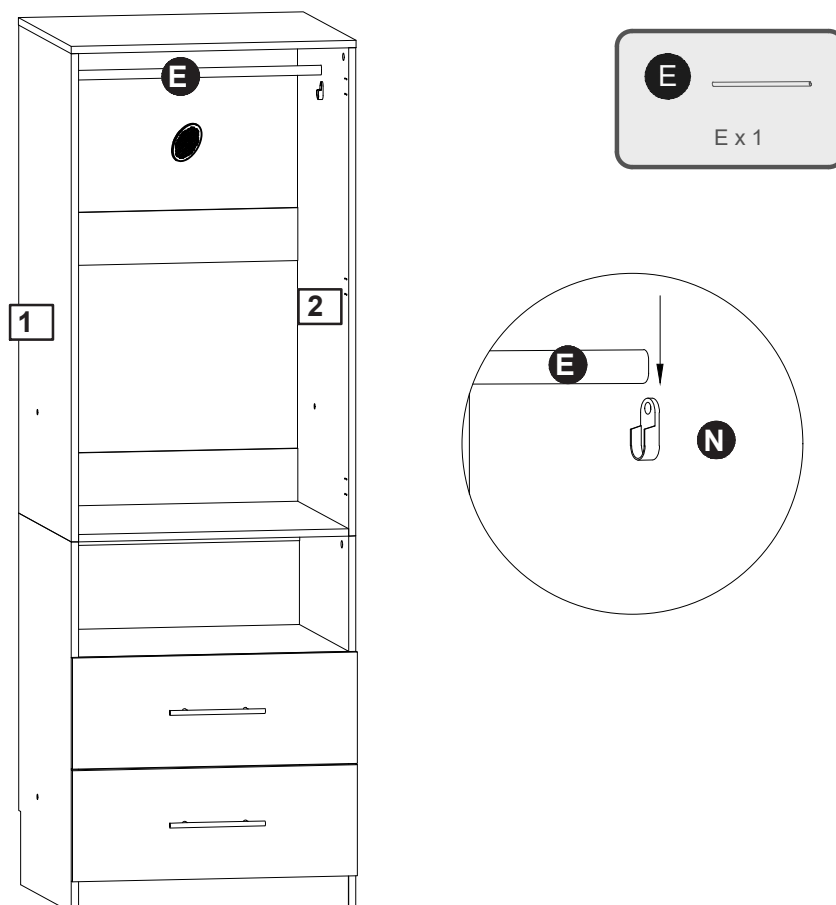


# Assembly Instructions

## Step 33

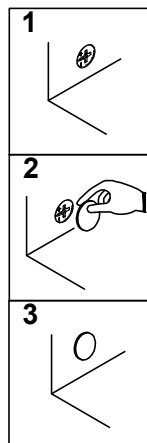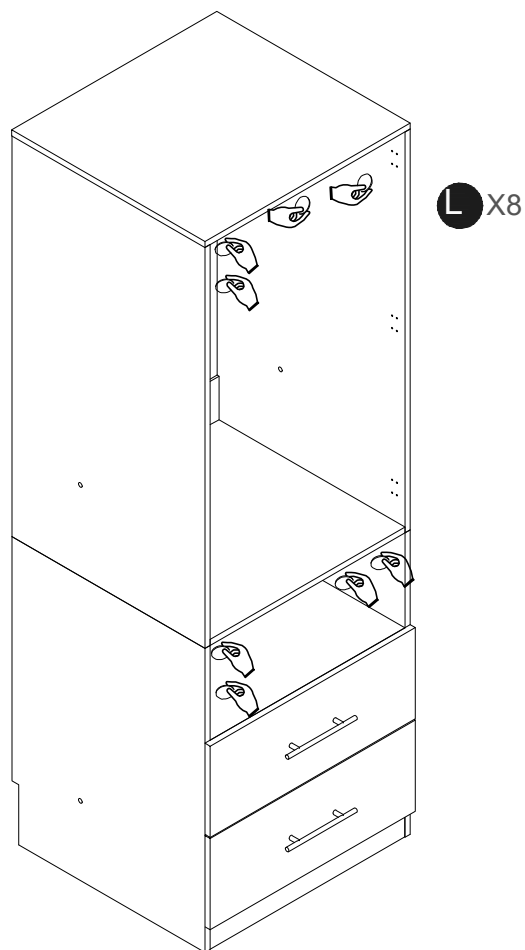




## Step 34

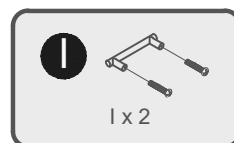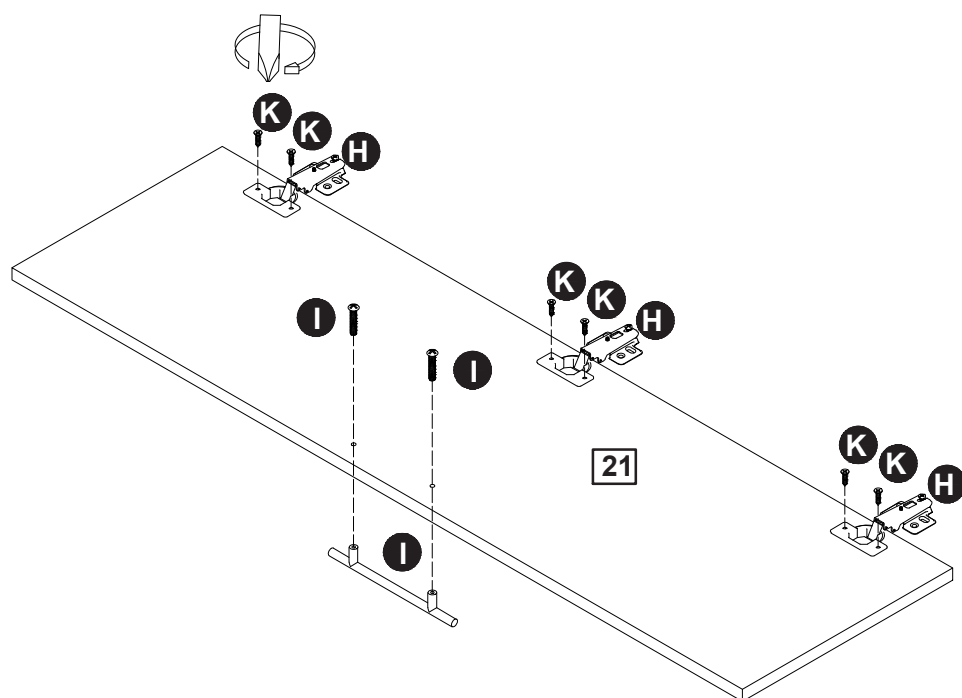






# Assembly Instructions

## Step 35



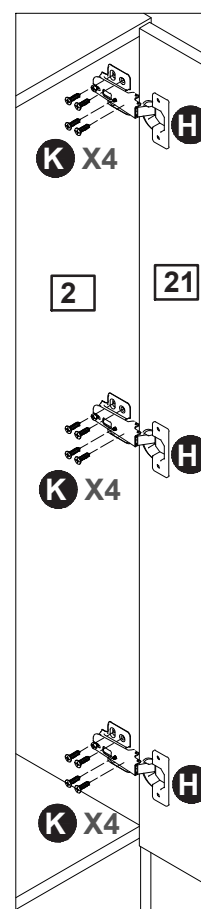
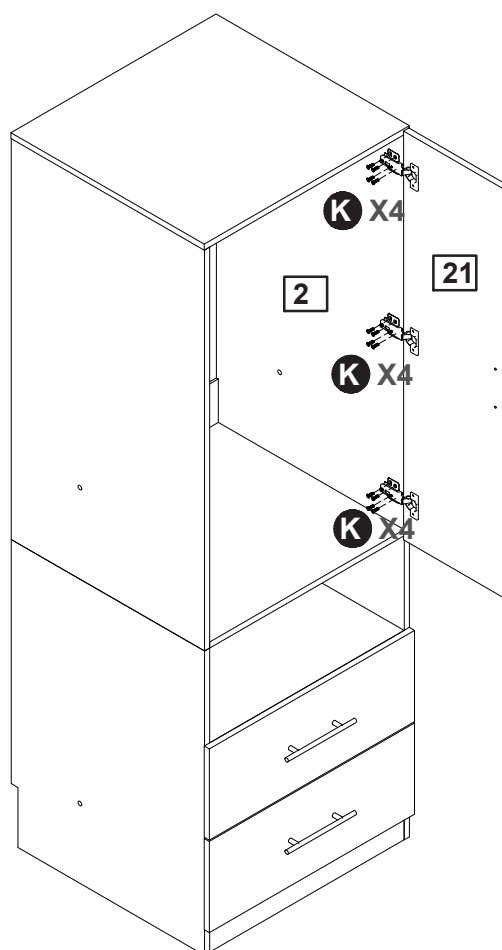
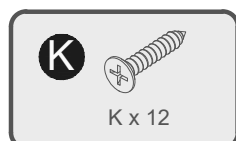


## Step 36

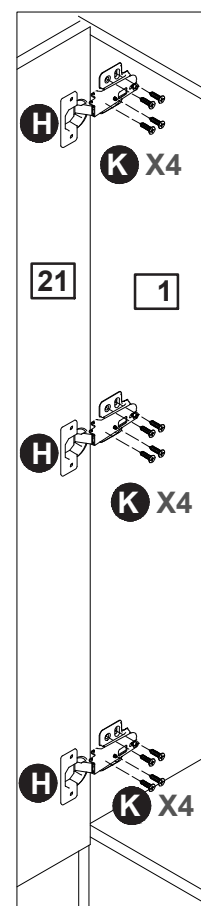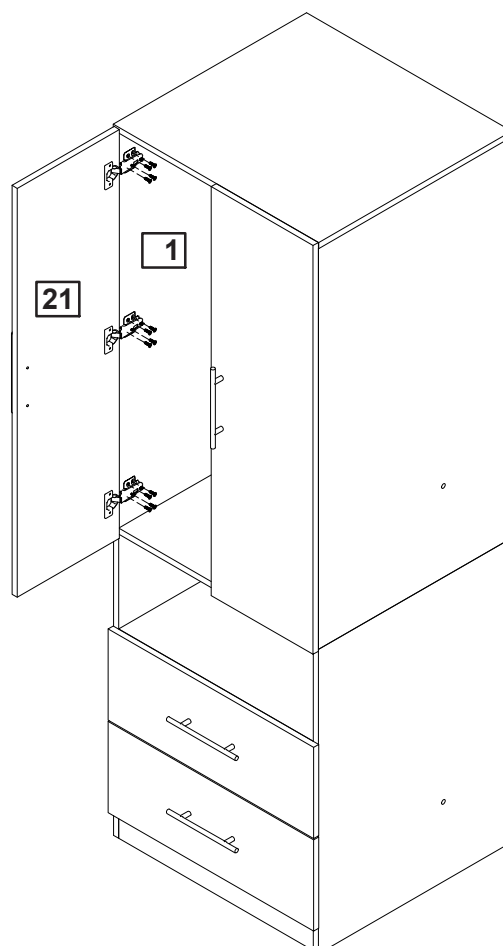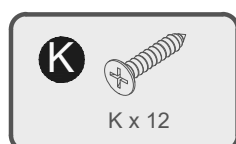


# Assembly Instructions

## Step 37

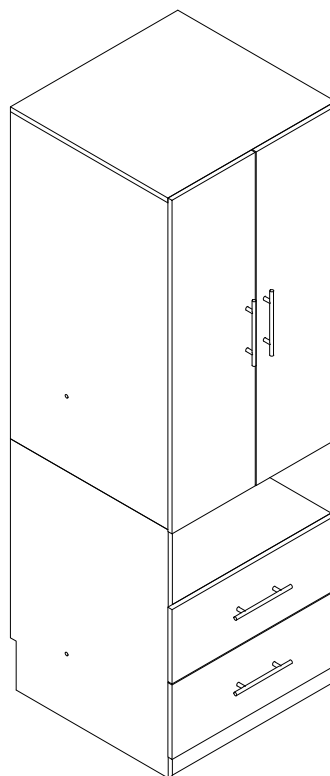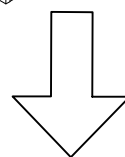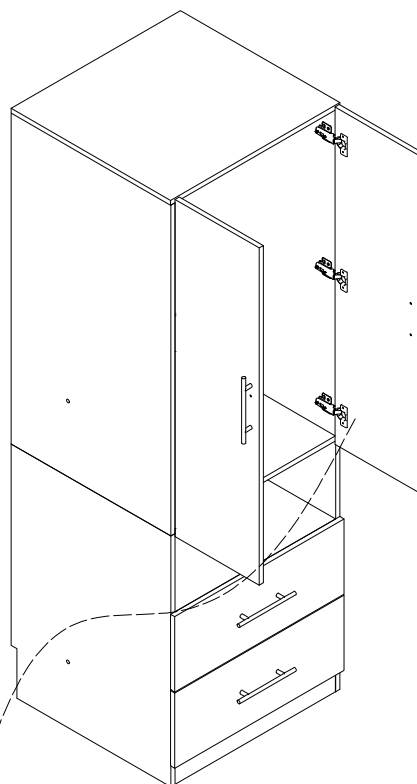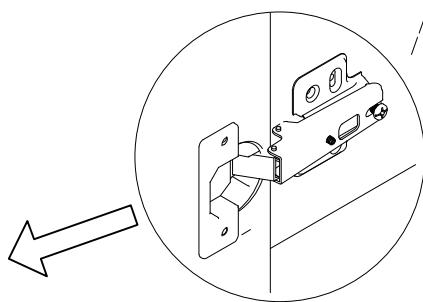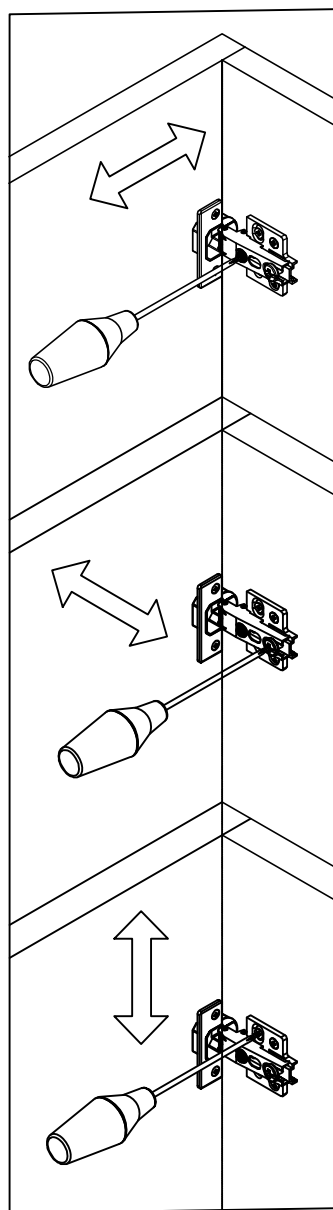


# Assembly Instructions

## Step 38

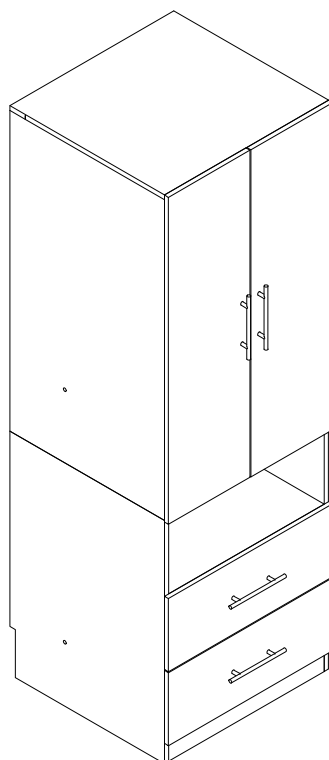

**Assembly is complete.**

## Step 39

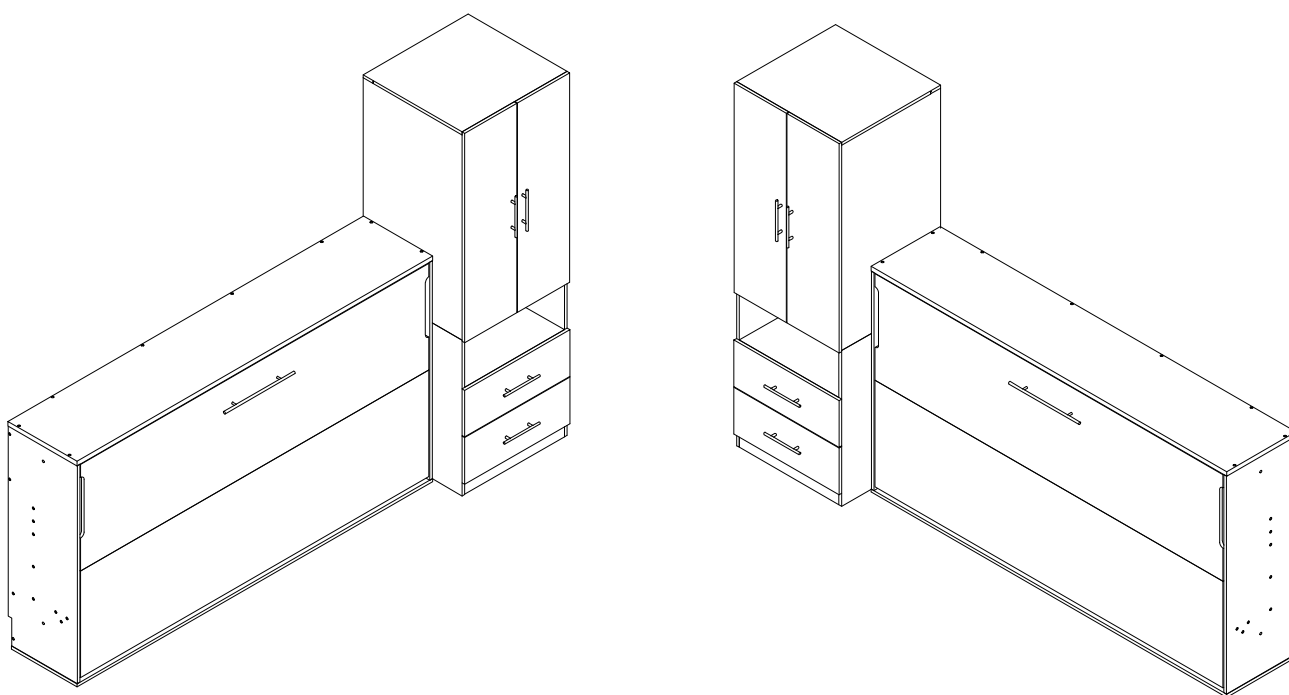

**Assembly is complete.**