

INSTALLATION GUIDE

Keyed Entry

Tools Needed:



Pencil




1/4" Drill Bit
& Drill




Phillips Head
Screw Driver



Allen Wrench
(Included)




Tape Measure

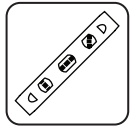

Level

Installation


1

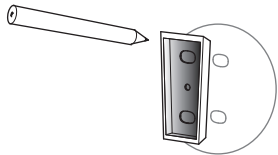


2




3

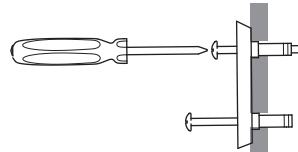


4

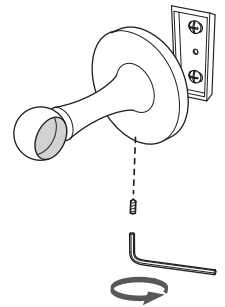


1. Determine the installation location and mark the wall through each of the mounting holes on the bracket with a pencil. If hardware has two mounting brackets, measure distance between the two brackets using the drawings below to mark placement of both brackets.
2. Use 1/4" drill bit to bore pilot holes for anchors. Install anchors using screwdriver.
3. Attach the mounting bracket(s) to the wall with the mounting hardware. Use your level and tape measure to ensure your bracket(s) are perfectly straight and in the desired position.
4. Using provided allen wrench, loosen the set screw located on the post escutcheon. Place escutcheon plate on mounting bracket. Place post on the mounting bracket(s). The set screw should be on the underside of post for proper installation. Hand tighten set screw to secure post to bracket.

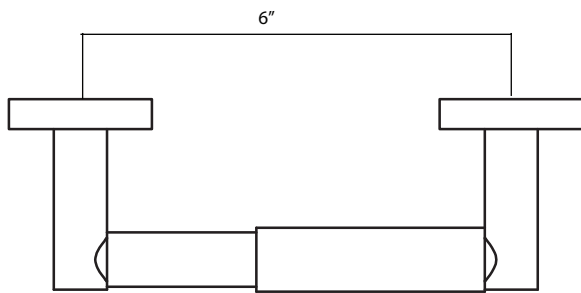


Paper Holder

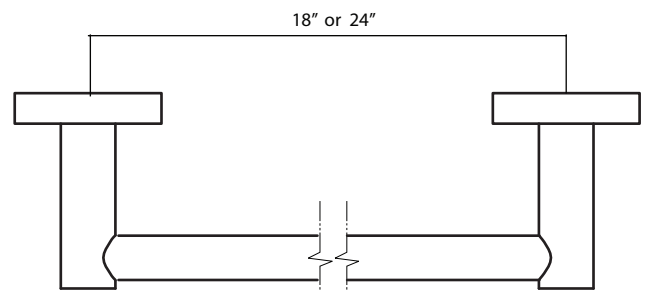


Towel Bar Set

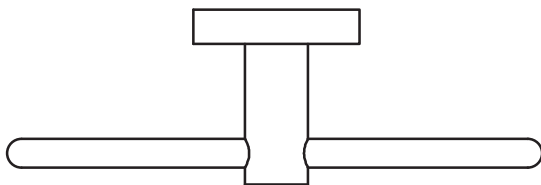

Towel Ring

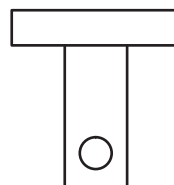

Robe Hook

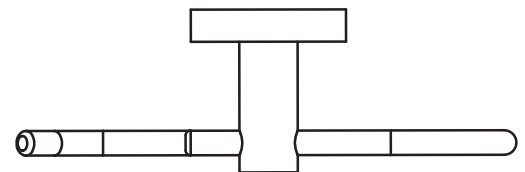

Euro Paper Holder

Care & Maintenance

To maintain optimal appearance, use only a soft damp cloth when cleaning. Never use any cleaning solvents.