

QUEEN SIZE BED

ASSEMBLY INSTRUCTIONS



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.









Warning !






1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION

B1 (BOX 1)



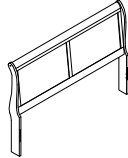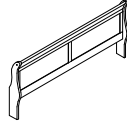


| | | | |
|----------|---|---------------------|-----|
| A |  | HEADBOARD PANEL | 1PC |
| B |  | LEFT HEADBOARD LEG | 1PC |
| C |  | RIGHT HEADBOARD LEG | 1PC |
| D |  | FOOTBOARD PANEL | 1PC |
| E |  | LEFT FOOTBOARD LEG | 1PC |
| F |  | RIGHT FOOTBOARD LEG | 1PC |

B2 (BOX 2)



| | | | |
|-----------|--|------------------------------------|------|
| G |  | BED SLAT | 4PCS |
| H |  | BED SLAT SUPPORT WITH LEVELER | 4PCS |
| I |  | BED RAIL | 2PCS |
| HB |  | * FROM BOX 1 HEADBOARD COMPLETE | 1PC |
| FB |  | * FROM BOX 1 FOOTBOARD COMPLETE | 1PC |

HARDWARE IDENTIFICATION

Z - B1 (BOX 1)

| | | | |
|----------|---|--------------|-------|
| 1 |  | BOLT | 12PCS |
| 2 |  | LOCK WASHER | 12PCS |
| 3 |  | FLAT WASHER | 12PCS |
| 4 |  | WOOD PLUG | 4PCS |
| 5 |  | ALLEN WRENCH | 1PC |

Z - B2 (BOX 2)

| | | | |
|----------|---|---------------------------|------|
| 6 |  | FLAT HEAD SCREW | 8PCS |
| 7 |  | PHILIPS HEAD SCREW DRIVER | 1PC |


NOTE : MANUFACTURER DOES NOT PROVIDE ITEM 7

ASSEMBLY INSTRUCTIONS

(B1) - BOX1


STEP 1

Align and fasten headboard legs to headboard panel using bolt, lock washer and flat washer and tighten with Allen wrench. Insert the wood plugs into legs

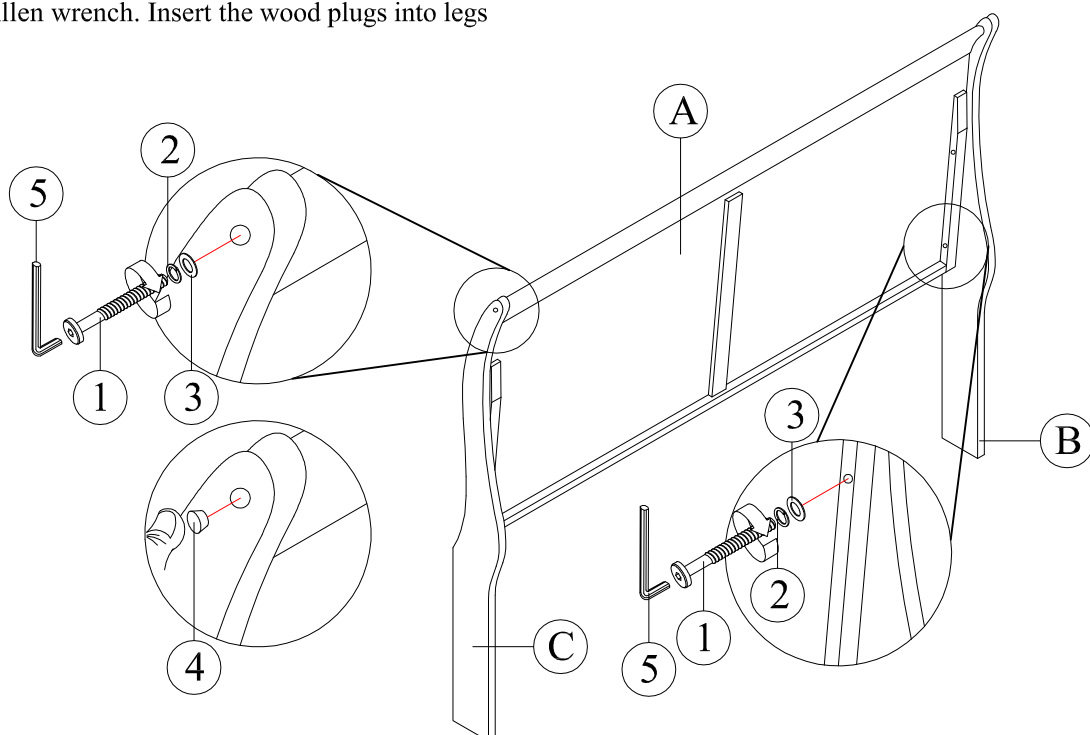


STEP 2

Align and fasten footboard legs to footboard panel using bolt, lock washer and flat washer and tighten with Allen wrench. Insert the wood plugs into legs

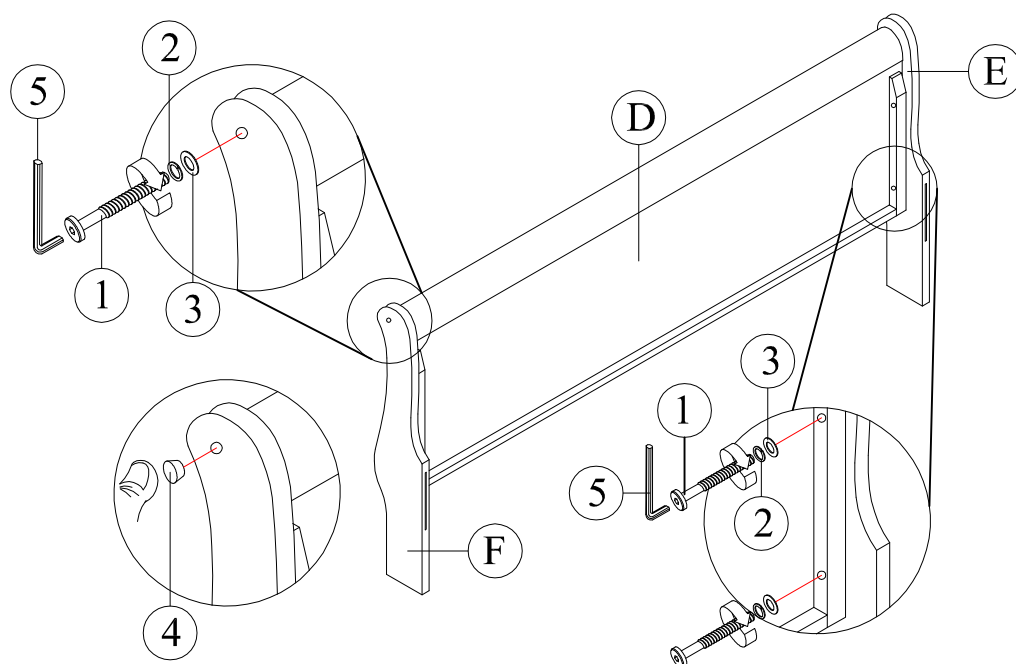

(B1 & B2) - BOX1 & BOX2**STEP 3**

Align and hook the bed rails to headboard and footboard

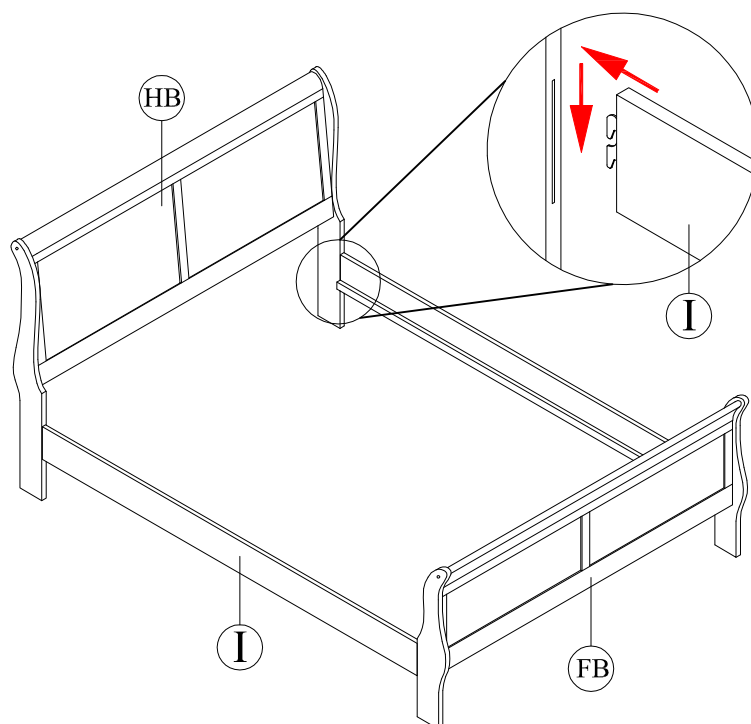**STEP 4**

Align and screw in bed slat support to bed rail.

Align and fasten bed slat to bed rails using screws and tighten with screw driver (not provided).

