

FSDL-V1


BC-7021
BC-7030

Notice:


1. Follow the installation instructions. Please confirm all accessories are present before installation.
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces are correctly assembled.
3. If you encounter any problems during installation, please contact our customer service.
4. Please unbox the item from the side with an open-label and put a carpet on the floor to avoid scratching it.



Recommended installers : 2





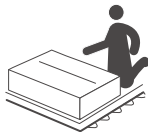



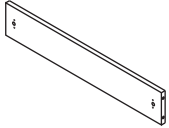






Put a carpet on the floor
before unpacking

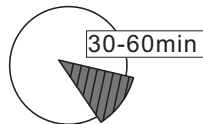





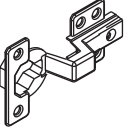







Estimate installation time:
30 minutes

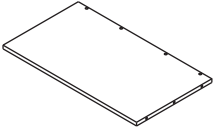ASSEMBLY INSTRUCTIONS

1		x1	8		x1
2		x1	9		x1
3		x1	10		x1
4		x1	11		x1
5		x1	12		x1
6		x1	13		x1
7		x1			

ASSEMBLY INSTRUCTIONS



<p>Ⓐ</p>	 Ø6x26mm	<p>x48</p>	<p>Ⓘ</p>		<p>x2</p>
<p>Ⓑ</p>	 Ø15x9mm	<p>x48</p>	<p>Ⓙ</p>		<p>x2</p>
<p>Ⓒ</p>	 Ø3.5x14mm	<p>x52</p>	<p>Ⓚ</p>		<p>x8</p>
<p>Ⓓ</p>		<p>x4</p>	<p>Ⓛ</p>		<p>x1</p>
<p>Ⓔ</p>		<p>x4</p>			
<p>Ⓕ</p>		<p>x4</p>			
<p>Ⓖ</p>		<p>x4</p>			
<p>Ⓗ</p>		<p>x1</p>			

ASSEMBLY INSTRUCTIONS



Use the Cam Lock and Eccentric Wheel

ECCENTRIC WHEEL


Tighten the bolt until the shoulder is aligned with the panel.
Be sure not to tighten too much or too little.

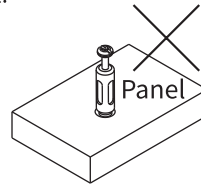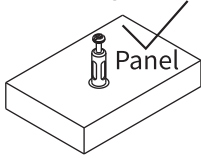

The pre-inserted nut should align with the center of the cam lock when joining two panels. The cam lock should be inserted before the eccentric wheel.

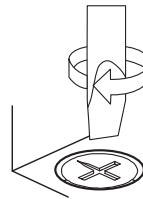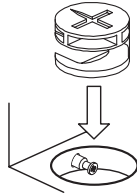

Turn the cam lock clockwise to tighten

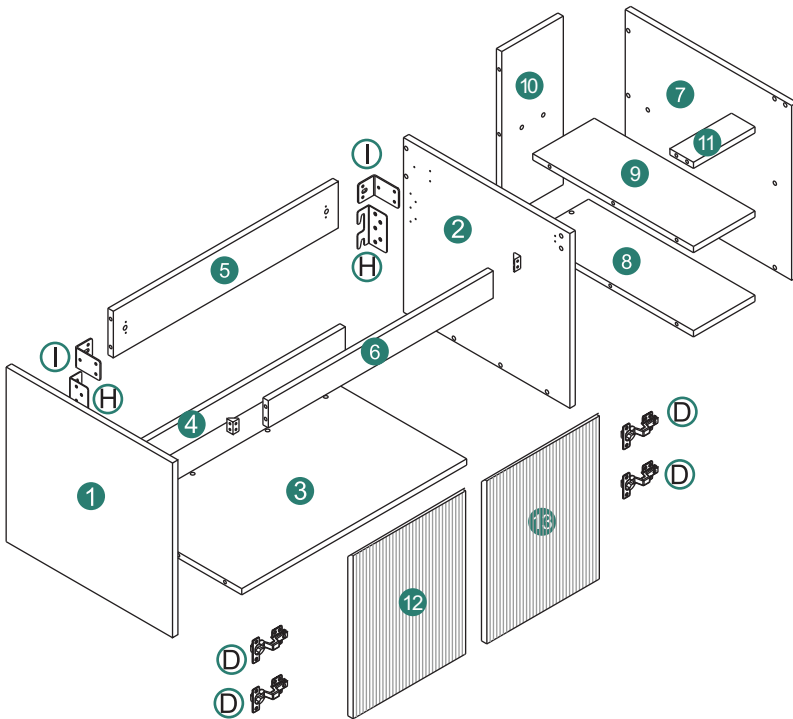


ASSEMBLY INSTRUCTIONS


1

① 1pc ② 1pc ③ 1pc ④ 1pc ⑦ 1pc ⑧ 1pc ⑩ 1pc

Ⓐ 48pcs Ⓑ 4pcs





The floor needs to be covered with paper or carpet protective material before installation!

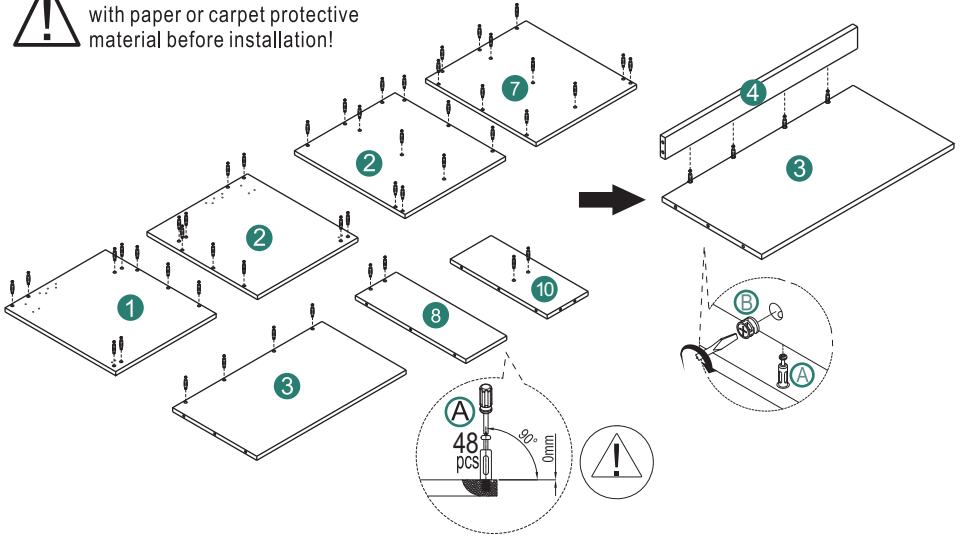

2

① 1pc ② 1pc ⑤ 1pc ⑥ 1pc ⑦ 1pc ⑧ 1pc ⑨ 1pc ⑩ 1pc ⑪ 1pc

Ⓑ 44 pcs

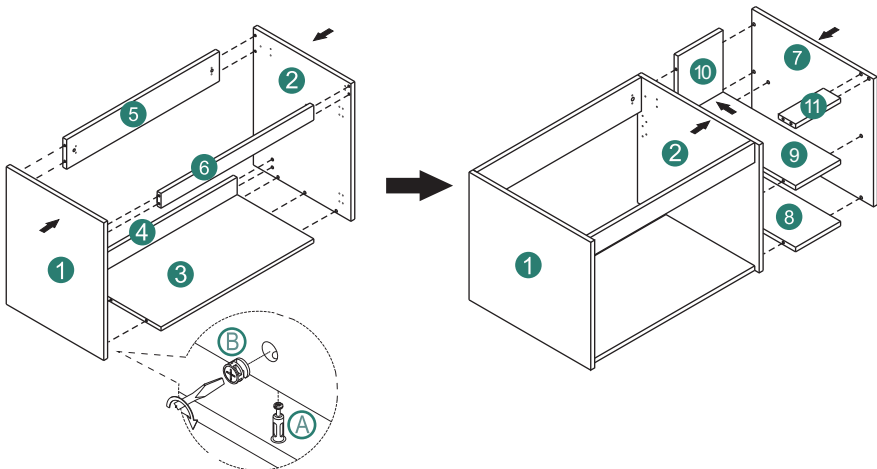

ASSEMBLY INSTRUCTIONS

3



● 28pcs




● 1pcs




● 2pcs



● 2pcs

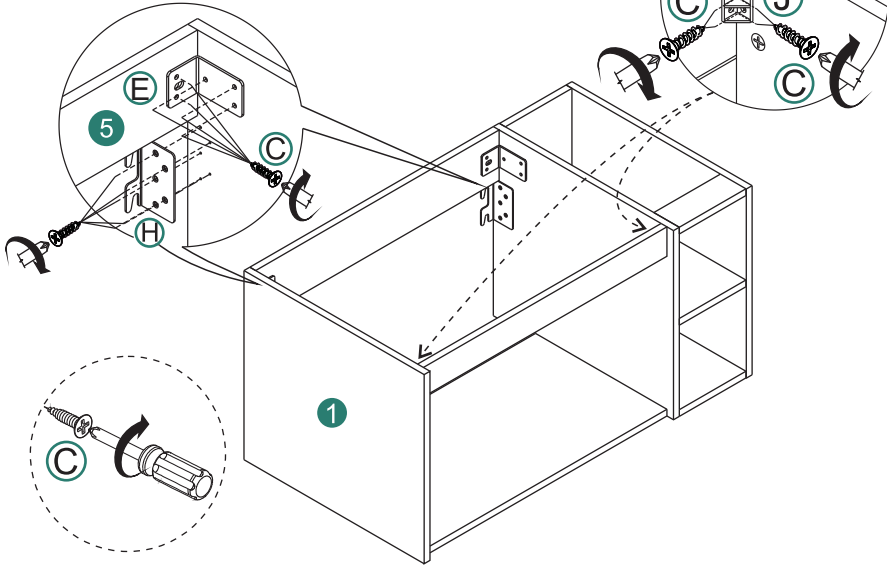

4



● 1pc




● 1pc



● 8pcs



● 4pcs

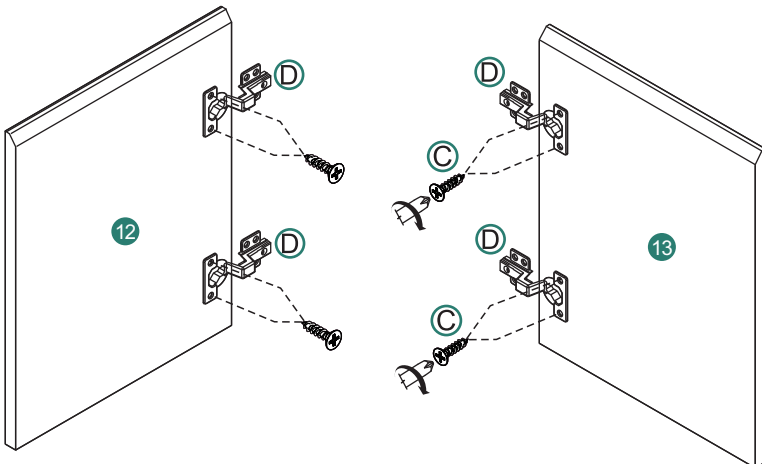


ASSEMBLY INSTRUCTIONS

5



C 16pcs

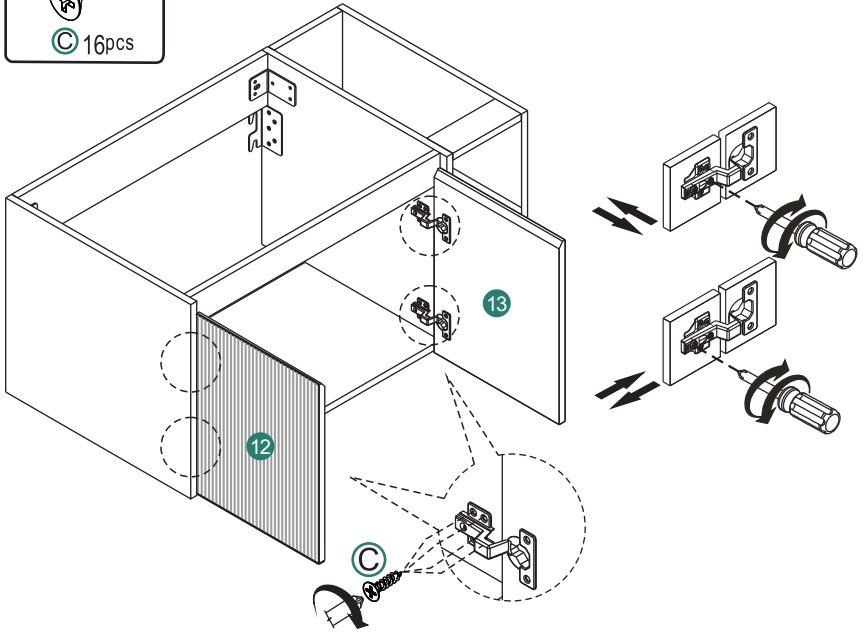


6



E 4pcs



Bring your own tools

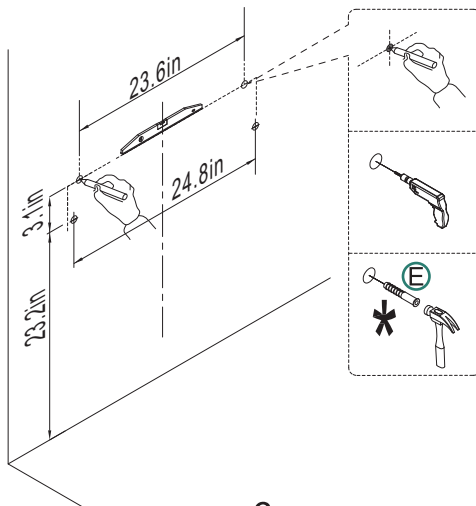

ASSEMBLY INSTRUCTIONS

7




F 4pcs




G 4pcs




K 8pcs

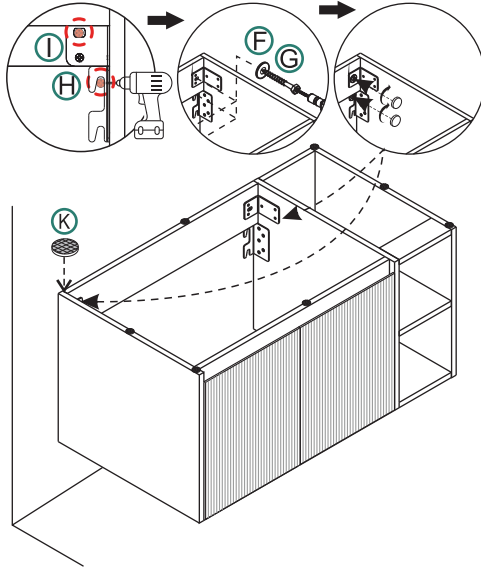

8



L 1pcs

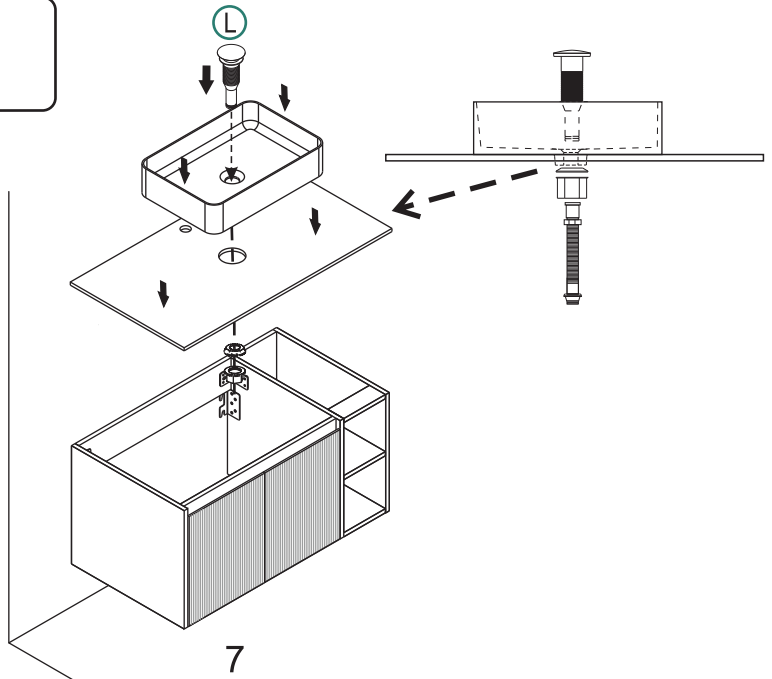

7