


ASSEMBLY INSTRUCTIONS

EEI-6309

V0.01.30.23

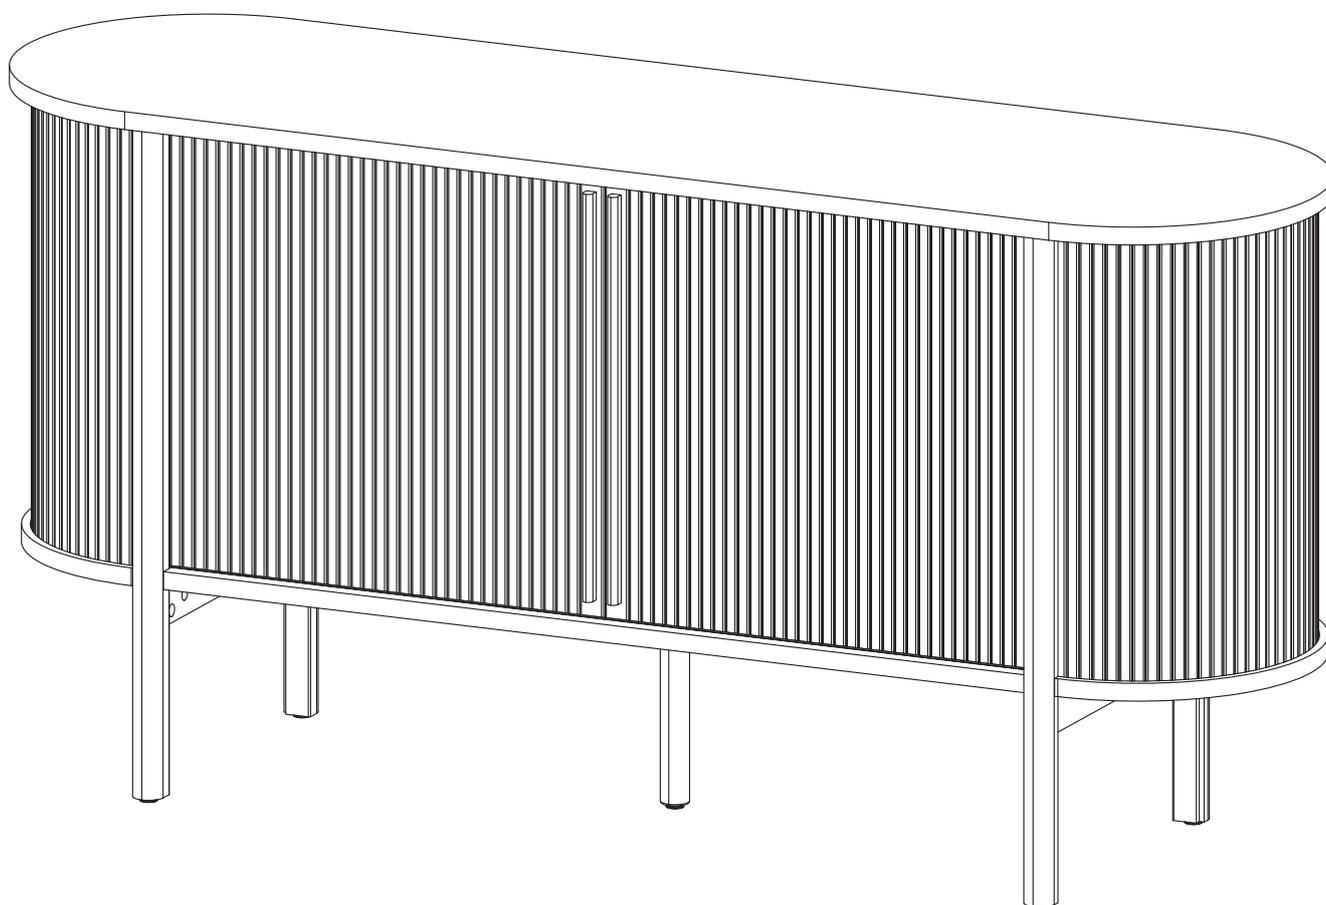

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

*modway

Let's get started!

*modway



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 90 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Top Board	x1	11	Bar Side	x2	LC18A1	Center Leg	x1
2	Bottom Board	x1	12	Front Leg Left	x1			
3	Center Board	x1	13	Front Leg Right	x1			
4	Fixed Shelf Left	x1	14	Pillar 1	x2			
5	Fixed Shelf Right	x1	15	Pillar 2	x2			
6	Bottom Skirt Left	x1	16	Sliding Door	x2			
7	Bottom Skirt Right	x1	17	Handle	x2			
8	Back Leg Left	x1	18	Back Board Left	x1			
9	Back Leg Right	x1	19	Back Board Center	x1			
10	Bottom Skirt Center	x1	20	Back Board Right	x1			

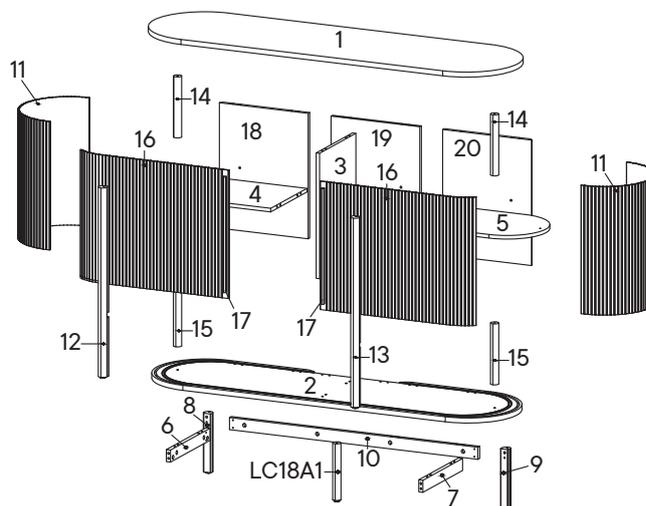

Provided hardware:

A		Cam Bolt $\varnothing 6 \times 35$ mm	x26	J		Bracket	x2
B		Cam Lock $\varnothing 15$ mm	x26	K		Stopper	x2
C		Screw Cap $\varnothing 15$ mm	x2	PM2		Mounting Plate	x1
D		Wood Dowel $\varnothing 8 \times 30$ mm	x32				
E		Screw M 7 x 50 mm	x14				
F		Allen Key	x2				
G		Screw M 6 x 30 mm	x2				
H		Screw M 4 x 16 mm	x8				
I		Screw M 4.5 x 12.5 mm	x12				

What you need:

Phillips Head Screwdriver

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com


Step 1

HARDWARE

- A** Cam Bolt $\varnothing 6 \times 35$ mm x12
- D** Wood Dowel $\varnothing 8 \times 30$ mm x4

COMPONENTS

- 1** Top Board x1
- 3** Center Board x1

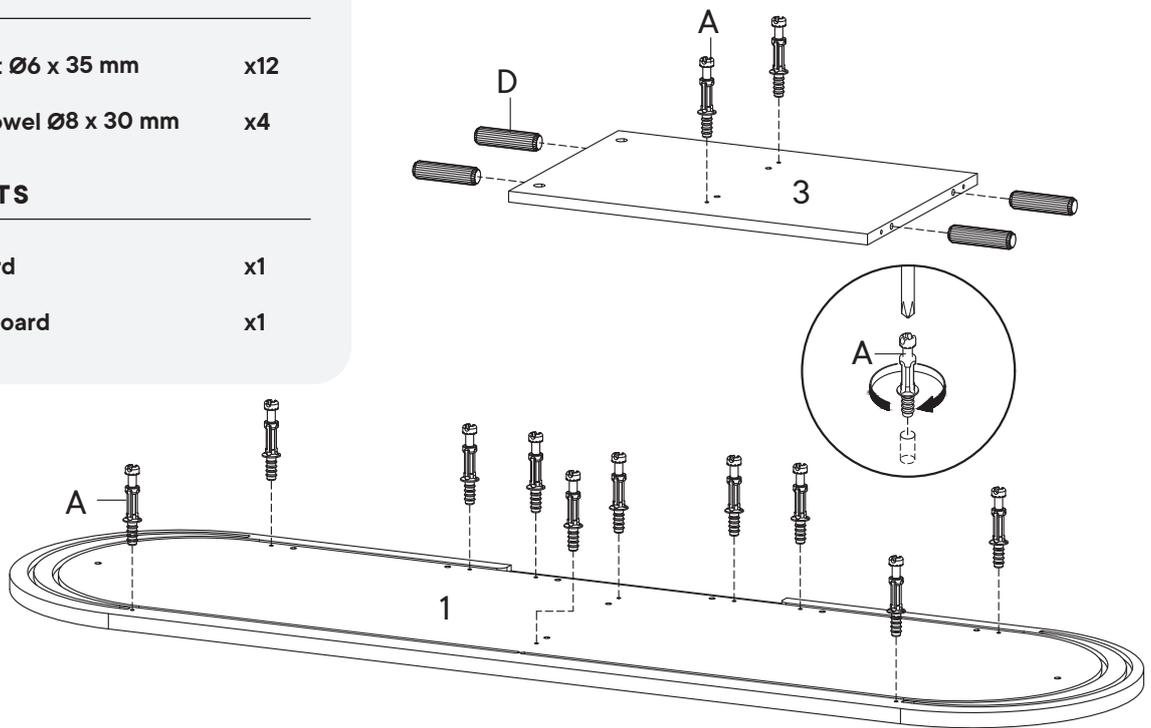


Step 2

HARDWARE

- D** Wood Dowel $\varnothing 8 \times 30$ mm x16

COMPONENTS

- 4** Fixed Shelf Left x1
- 5** Fixed Shelf Right x1
- 18** Back Board Left x1
- 19** Back Board Center x1
- 20** Back Board Right x1

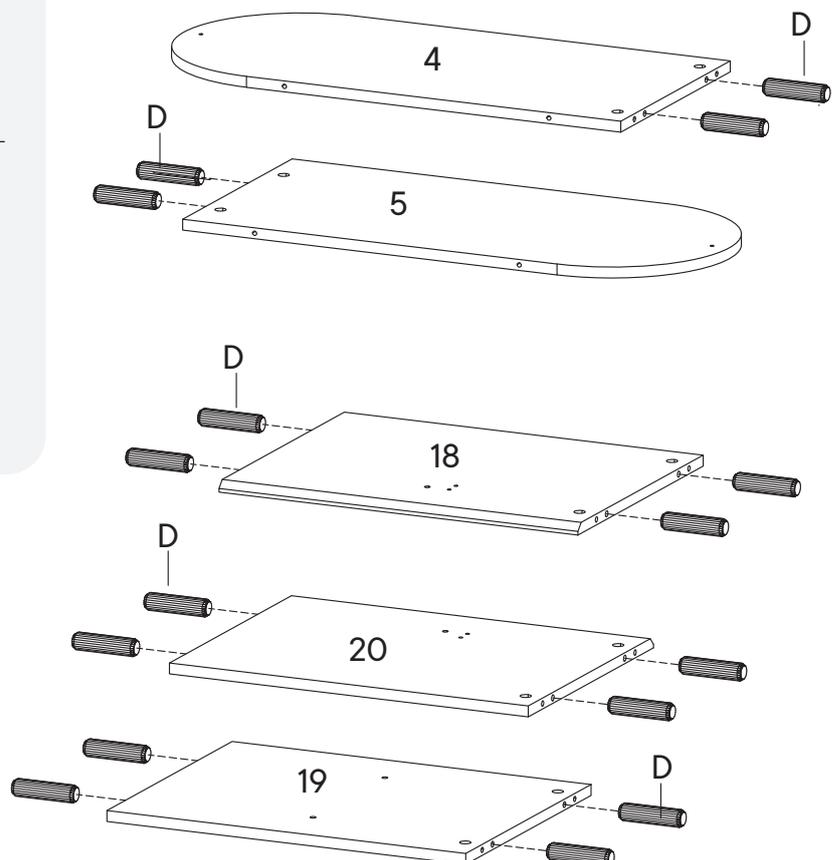




Step 3

HARDWARE

- B** Cam Lock Ø15 mm x2
- C** Screw Cap Ø15 mm x2

COMPONENTS



- 1** Top Board x1
- 3** Center Board x1
- 14** Pillar 1 x2

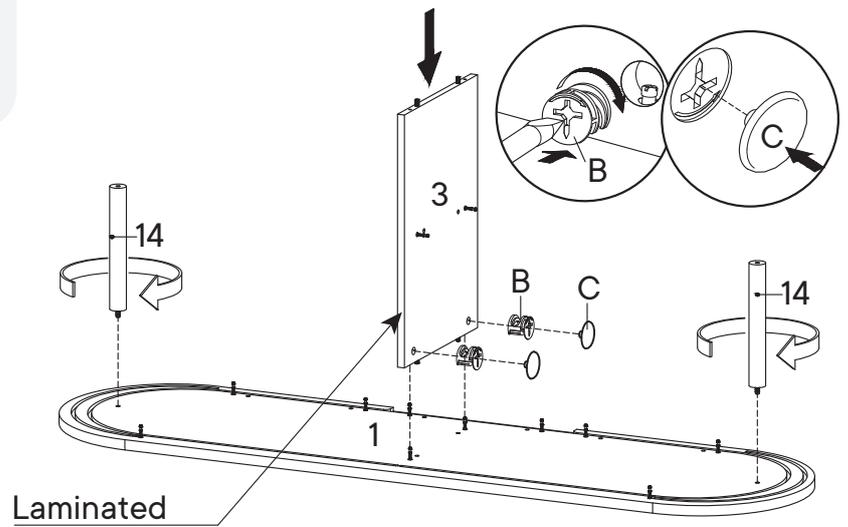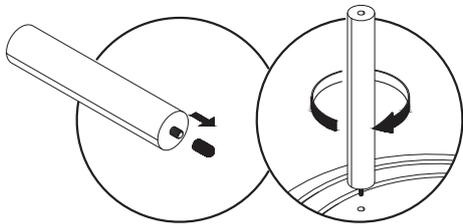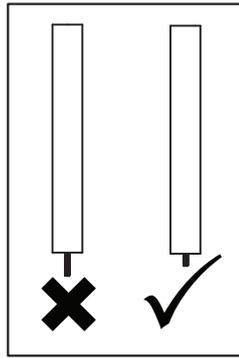

Step 4

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x2

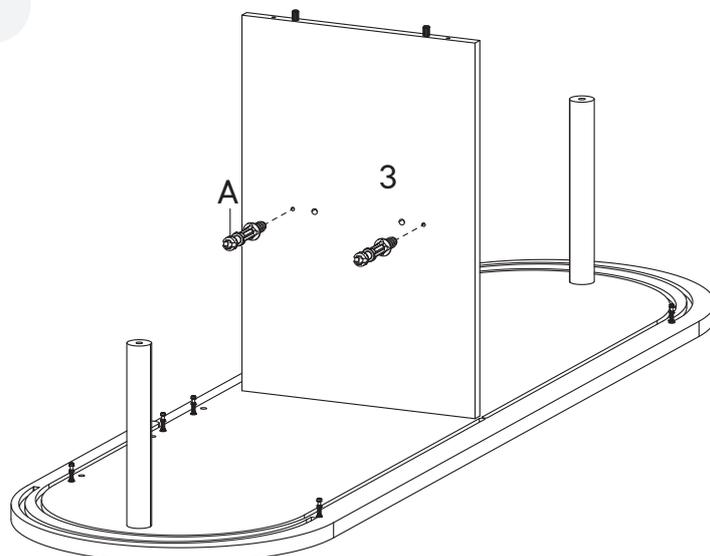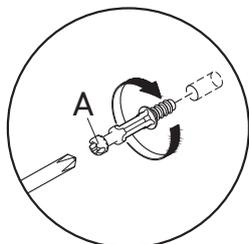

Step 5


HARDWARE

B Cam Lock Ø15 mm x4

COMPONENTS

4 Fixed Shelf Left x1

5 Fixed Shelf Right x1

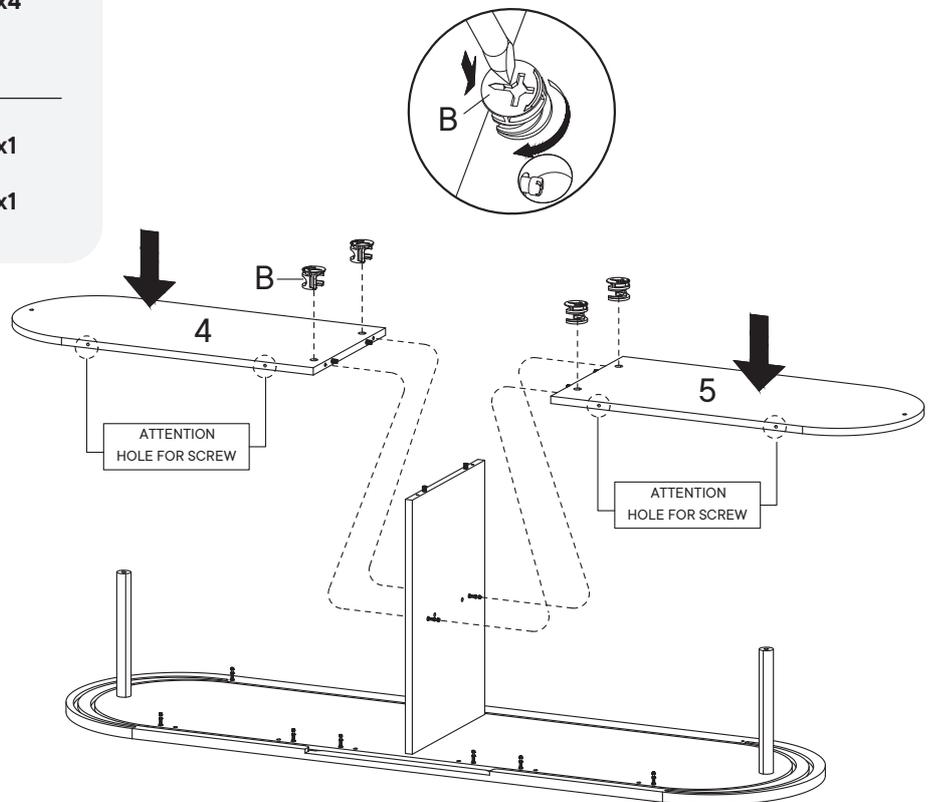

Step 6

HARDWARE


B Cam Lock Ø15 mm x6

COMPONENTS

18 Back Board Left x1

19 Back Board Center x1


20 Back Board Right x1

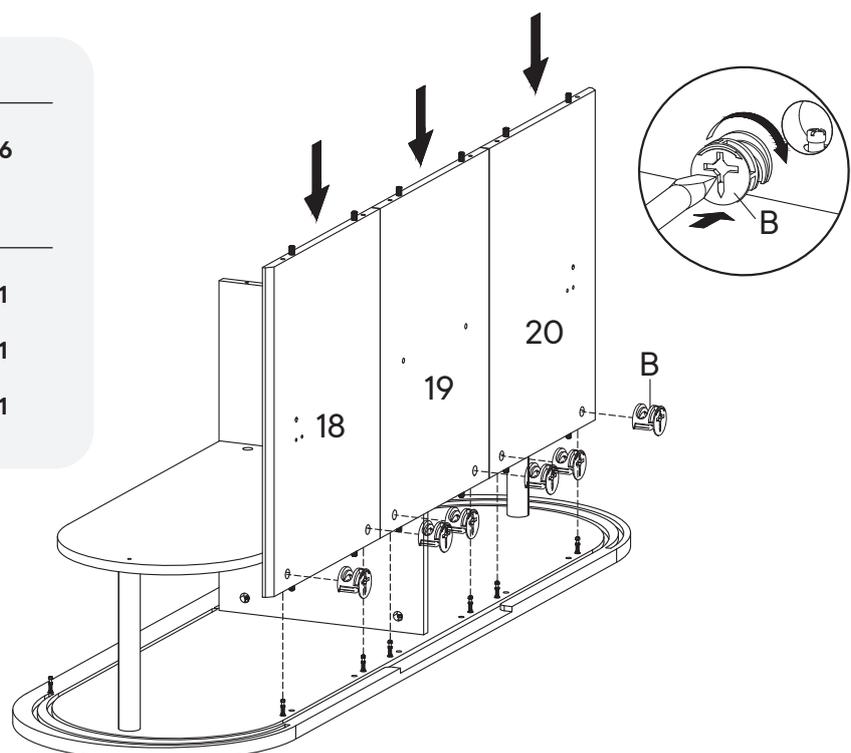

Step 7

HARDWARE


- E** Screw M 7 x 50 mm x4
- F** Allen Key x1

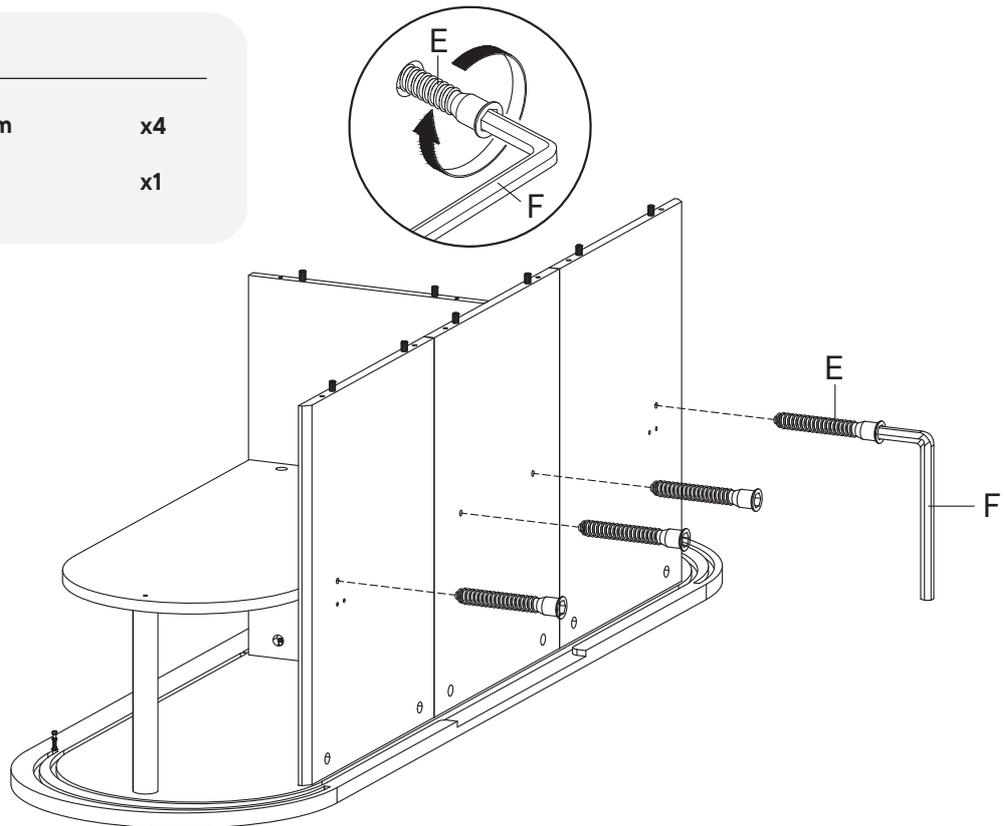

Step 8

COMPONENTS



- 15** Pillar 2 x2

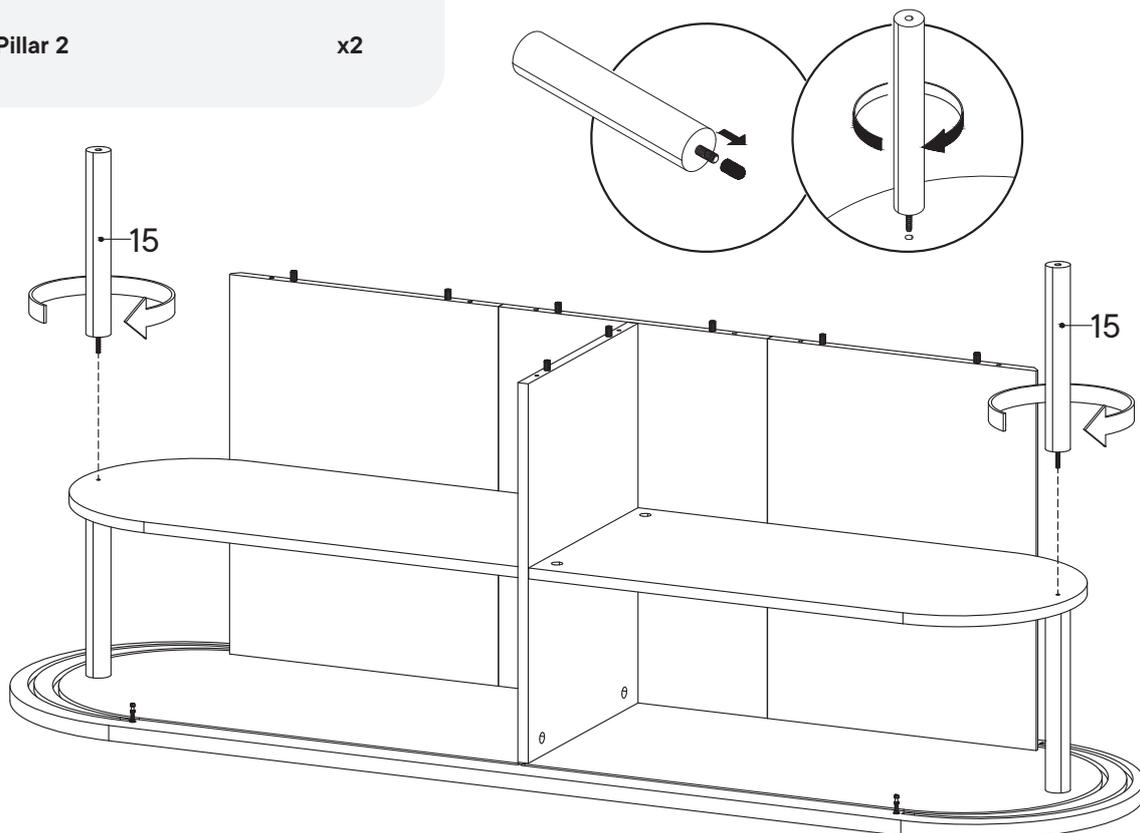

Step 9

COMPONENTS



11 Bar Side x1

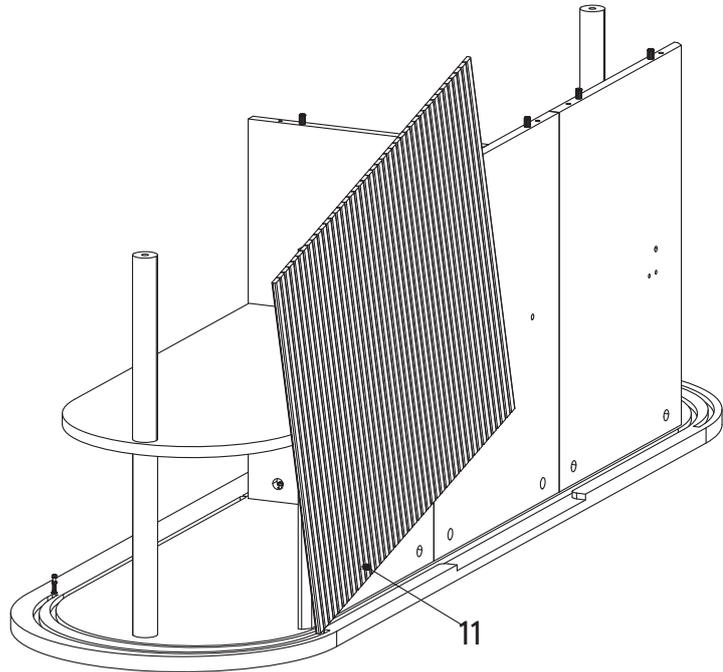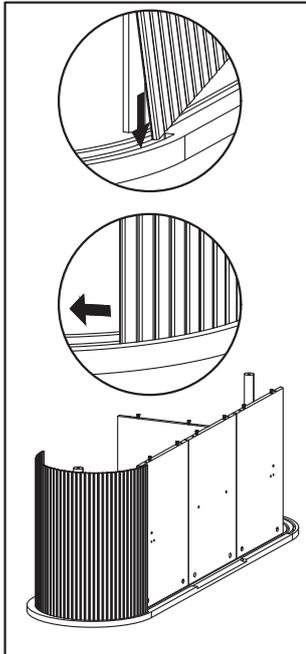

Step 10

COMPONENTS

11 Bar Side x1

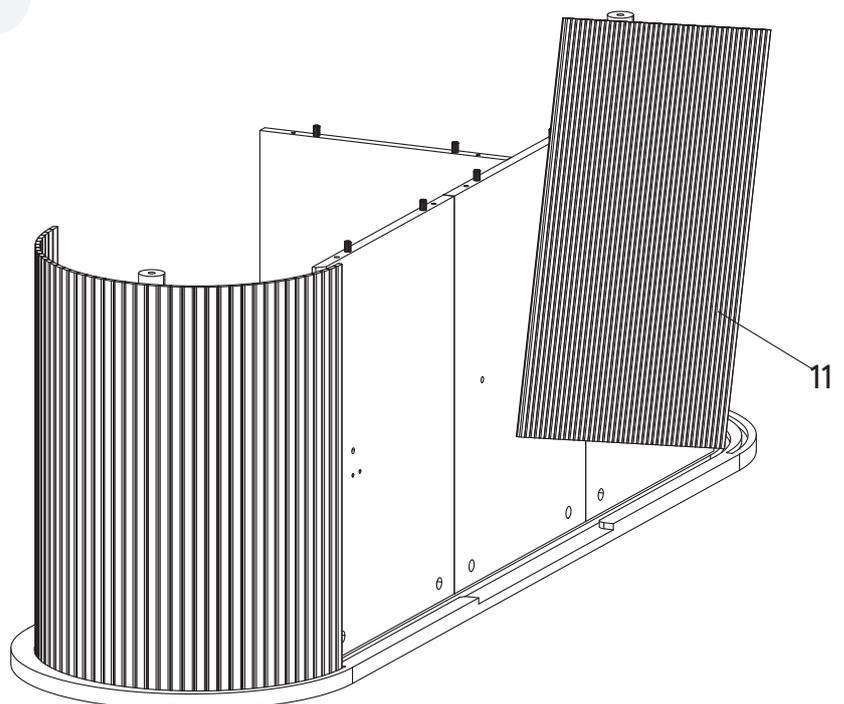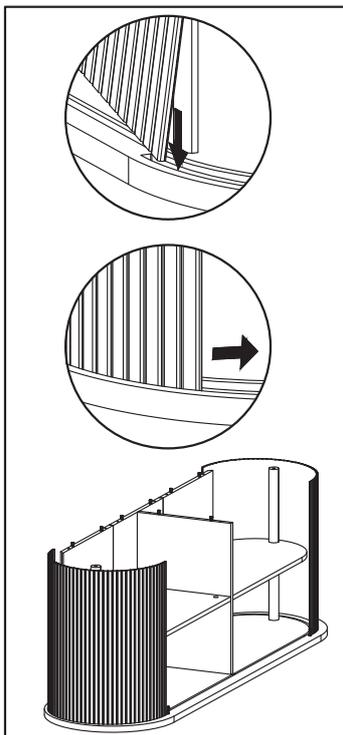



Step 11

HARDWARE

- E** Screw M 7 x 50 mm x8
- F** Allen Key x1
- G** Screw M 6 x 30 mm x2

COMPONENTS



- 2** Bottom Board x1

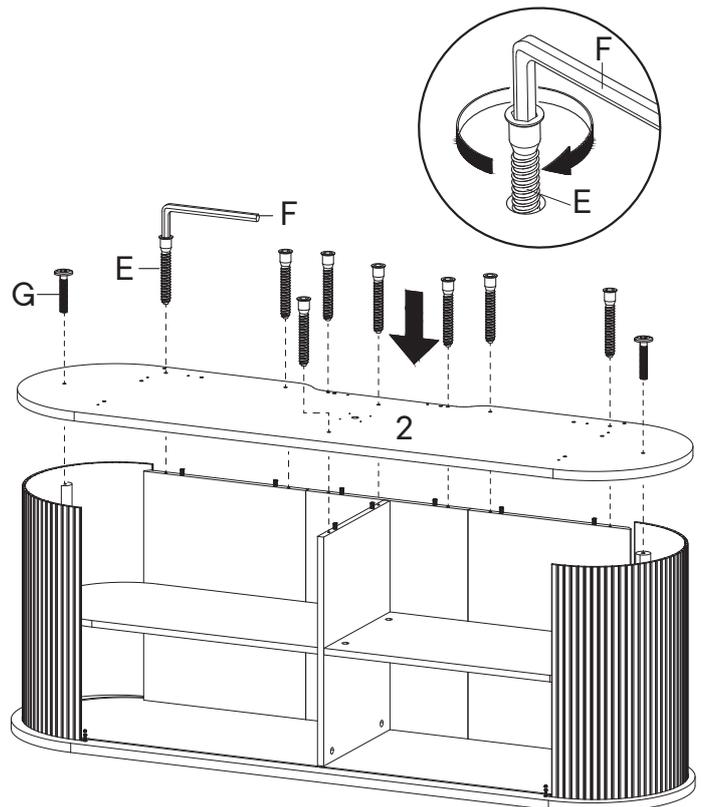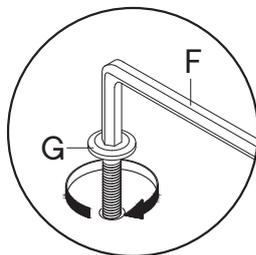

Step 12

HARDWARE


- A** Cam Bolt $\varnothing 6$ x 35 mm x8

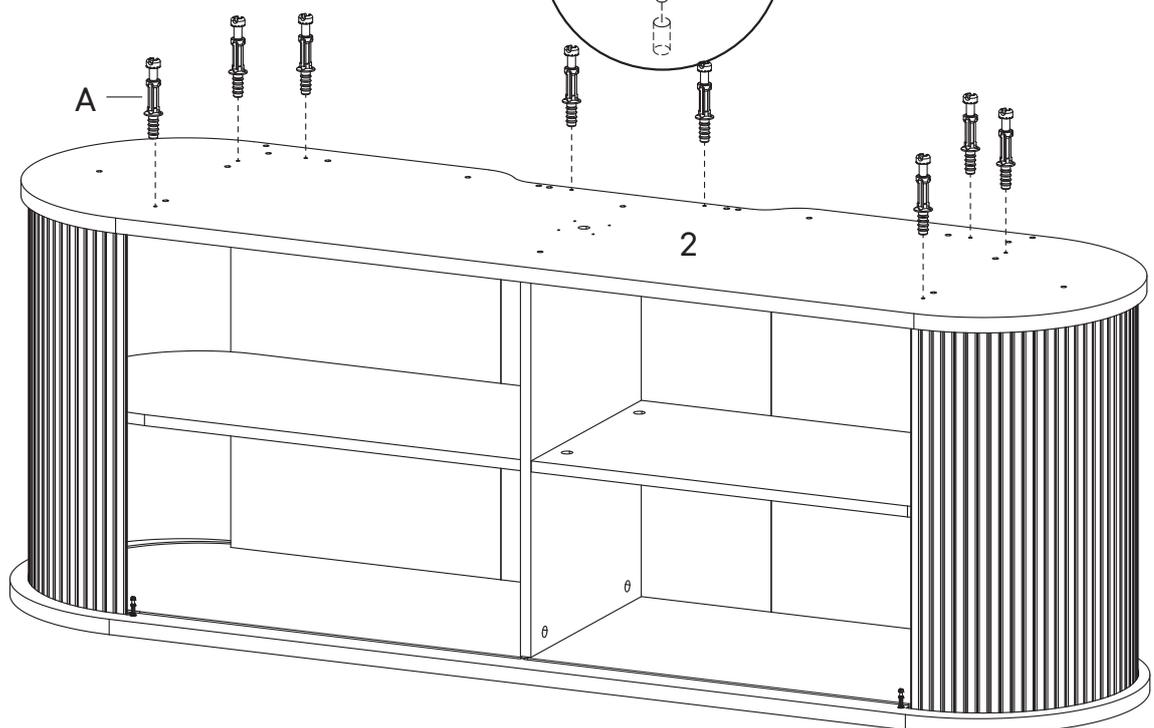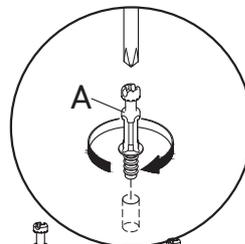

Step 13

HARDWARE

- I** Screw M 4.5 x 12.5 mm x4
- PM2** Mounting Plate x1

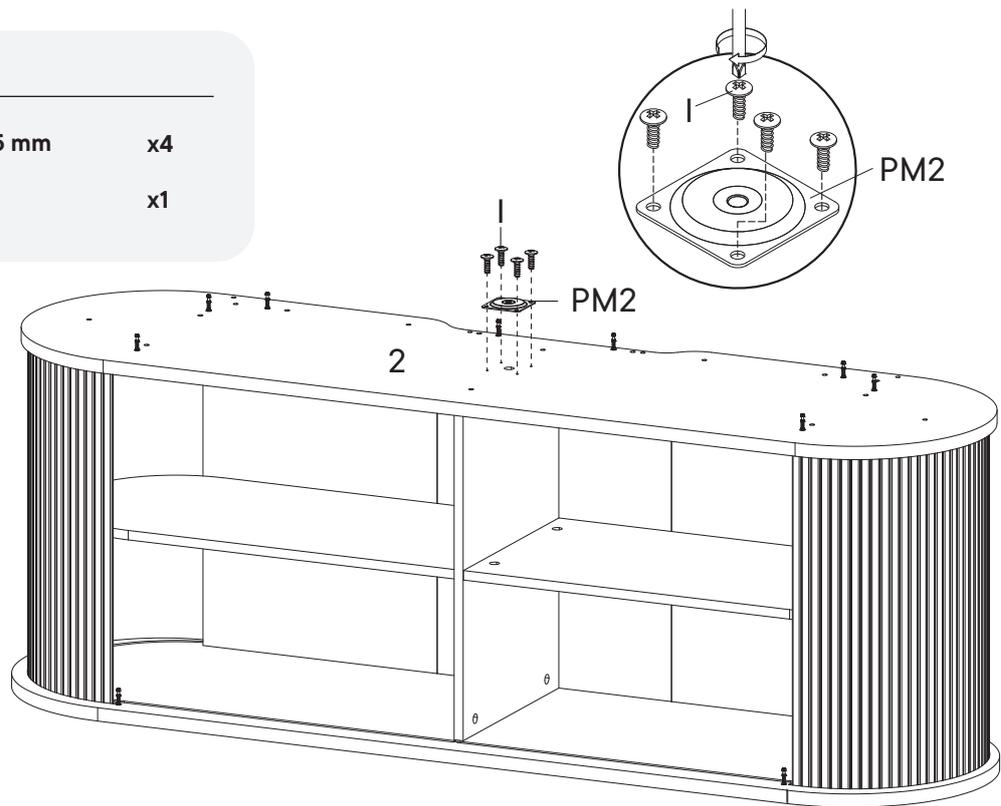


Step 14

HARDWARE

- D** Wood Dowel Ø8 x 30 mm x4
- I** Screw M 4.5 x 12.5 mm x4
- J** Bracket x2

COMPONENTS


- 10** Bottom Skirt Center x1

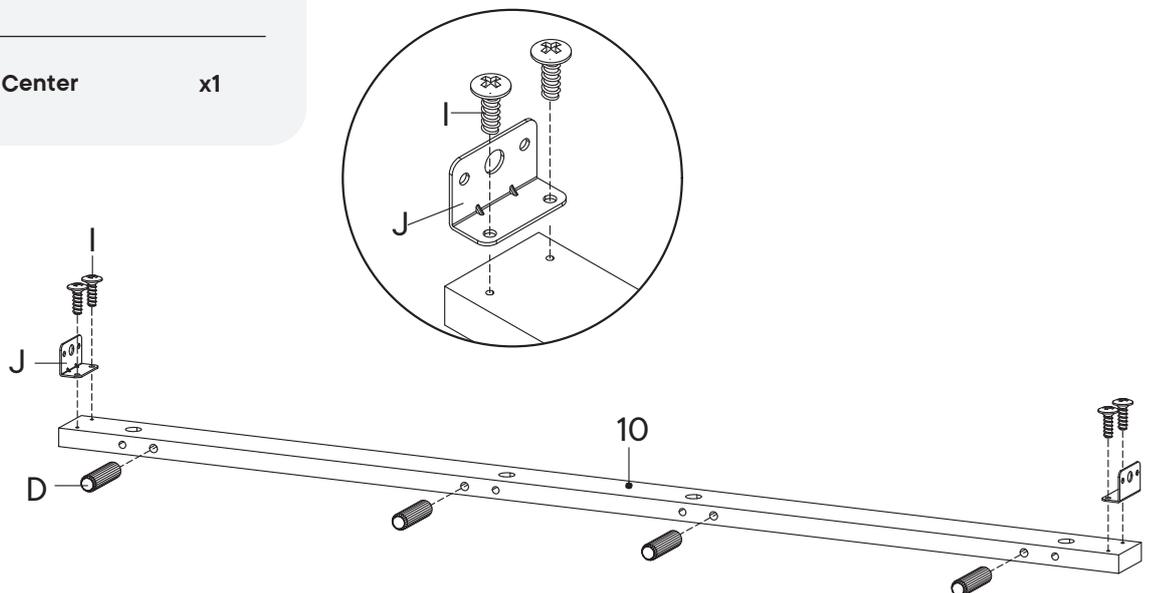

Step 15

COMPONENTS

- 10 Bottom Skirt Center x1

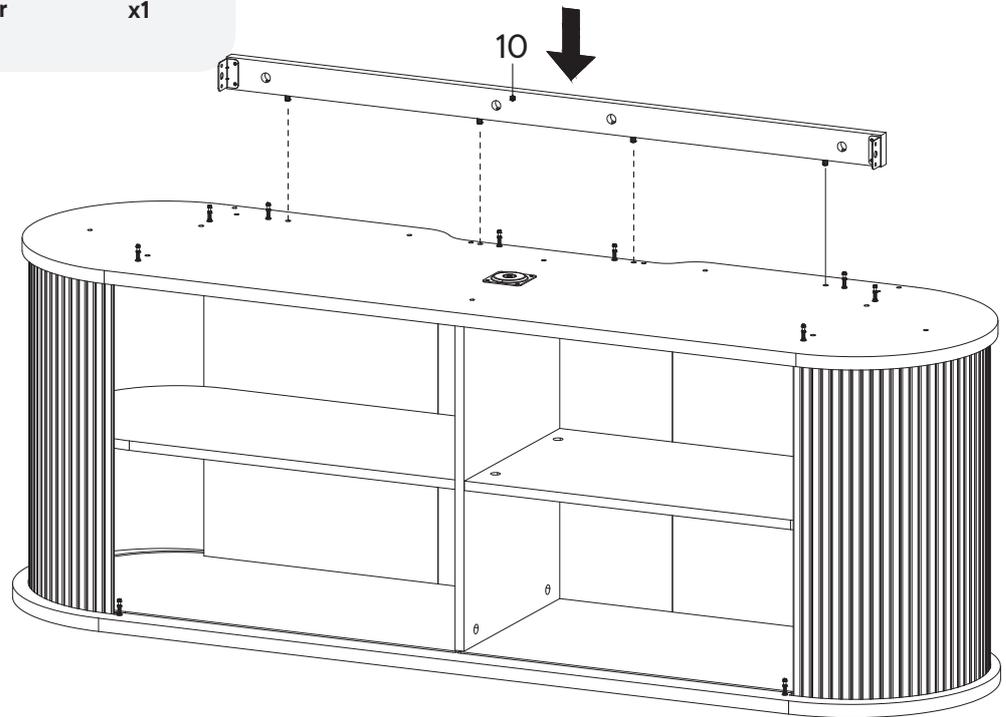







Step 16

HARDWARE

- A Cam Bolt $\varnothing 6 \times 35$ mm x2
- D Wood Dowel $\varnothing 8 \times 30$ mm x8

COMPONENTS

- 6 Bottom Skirt Left x1
- 7 Bottom Skirt Right x1
- 8 Back Leg Left x1
- 9 Back Leg Right x1

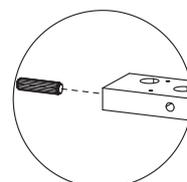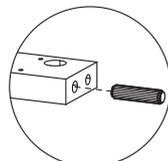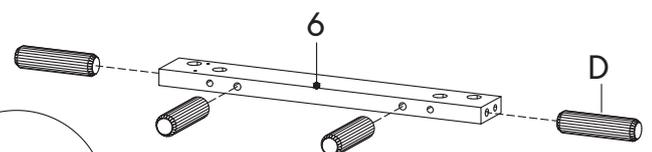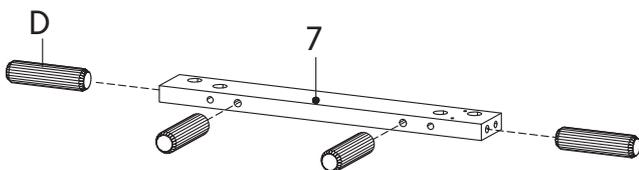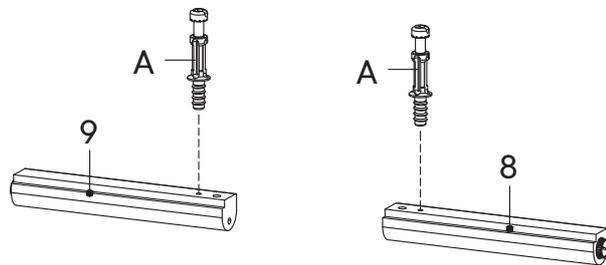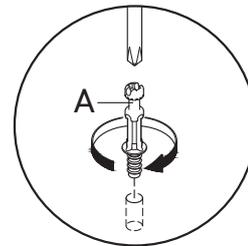

Step 17

HARDWARE

B Cam Lock Ø15 mm x2


COMPONENTS

6 Bottom Skirt Left x1

7 Bottom Skirt Right x1

8 Back Leg Left x1

9 Back Leg Right x1

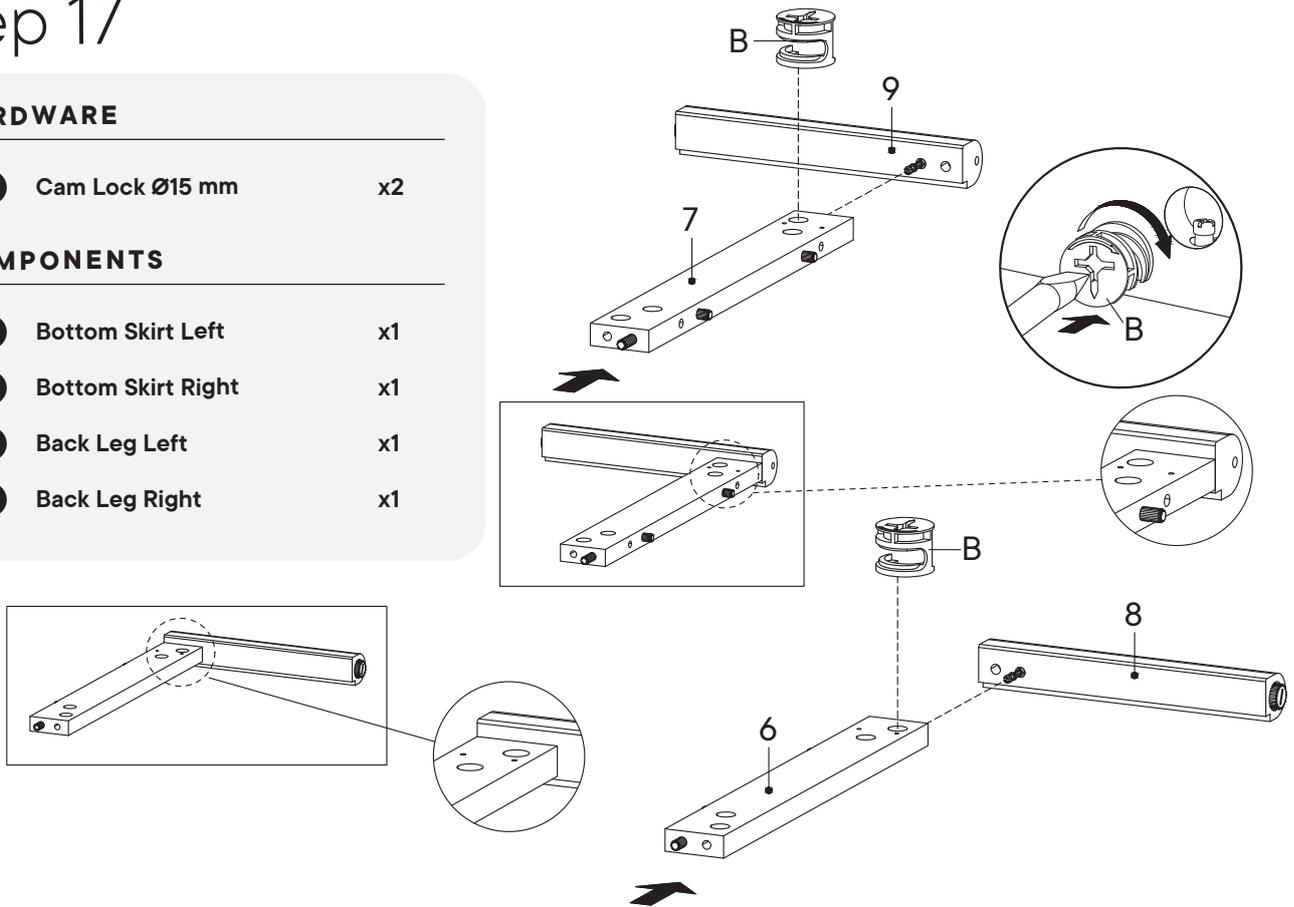

Step 18


COMPONENTS

6 Bottom Skirt Left x1

7 Bottom Skirt Right x1

8 Back Leg Left x1

9 Back Leg Right x1

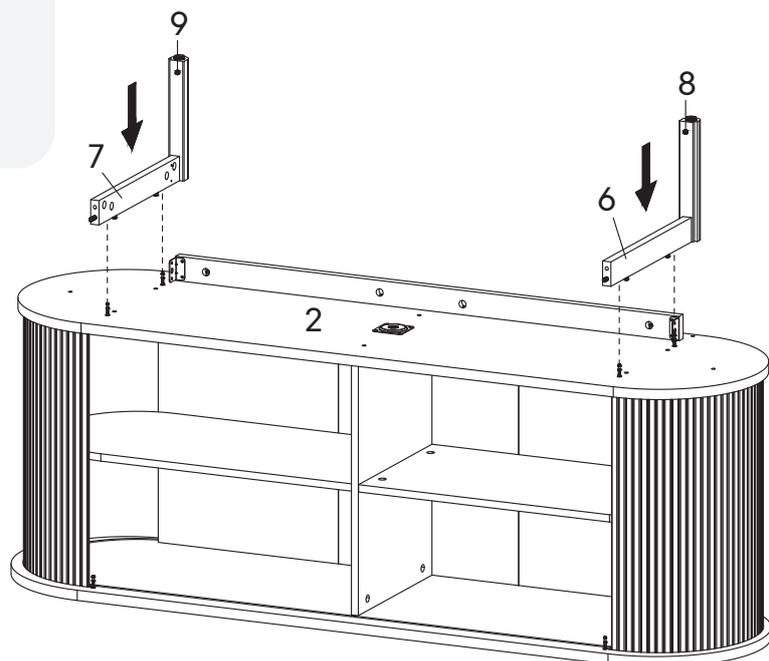

Step 19


HARDWARE

A Cam Bolt $\varnothing 6 \times 35$ mm x2

COMPONENTS

12 Front Leg Left x1

13 Front Leg Right x1

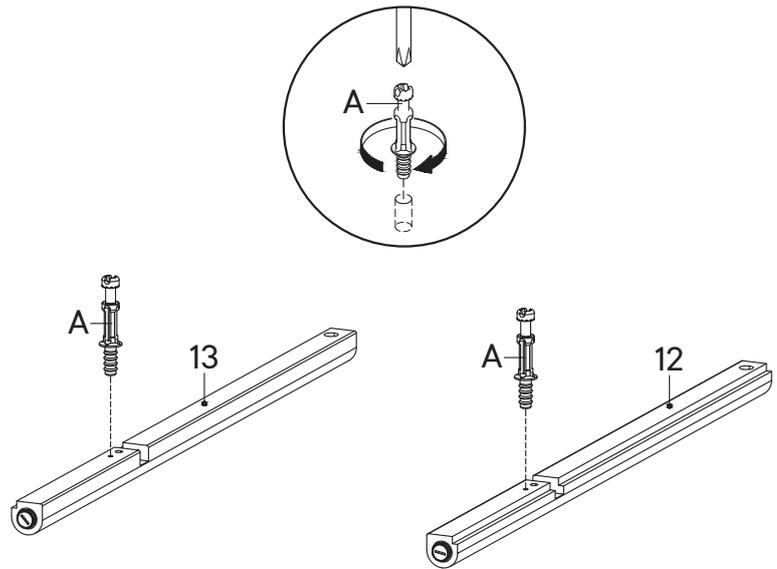

Step 20

HARDWARE



B Cam Lock $\varnothing 15$ mm x4

I Screw M 4.5 x 12.5 mm x4

COMPONENTS

12 Front Leg Left x1

13 Front Leg Right x1

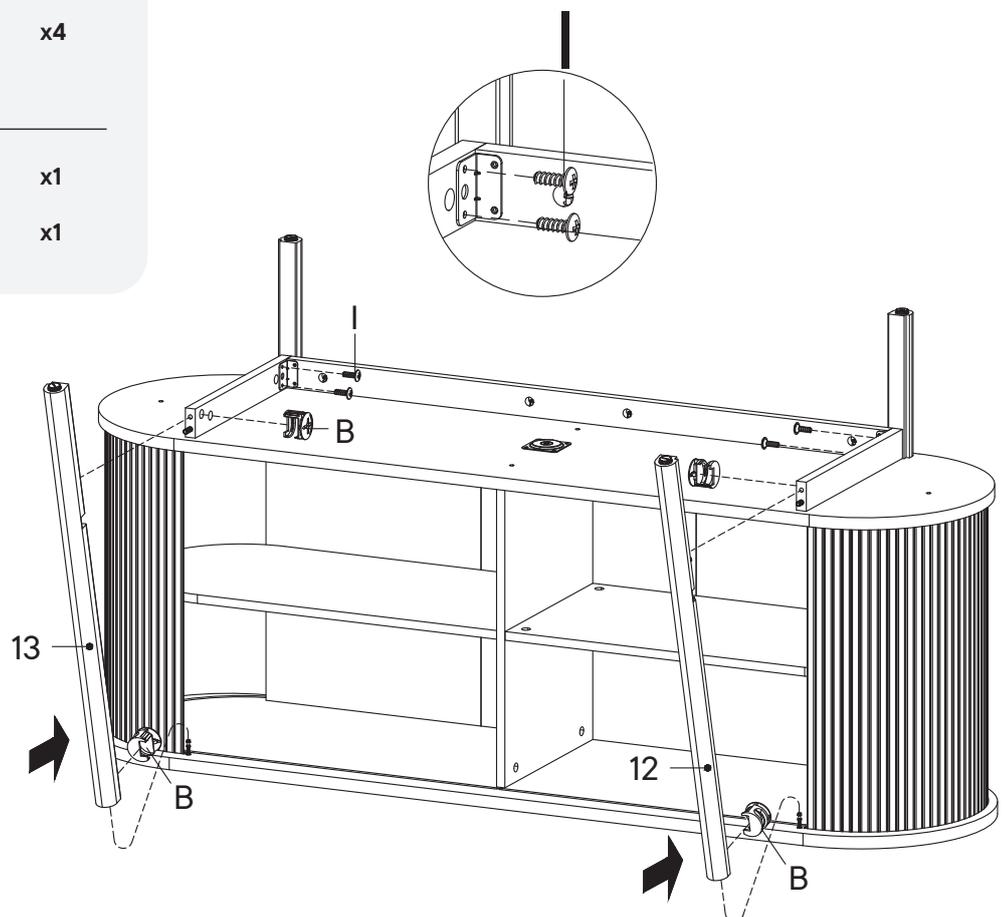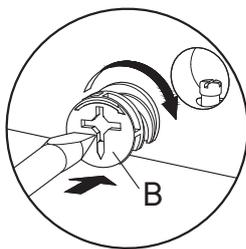



Step 21

HARDWARE

B Cam Lock Ø15 mm x8

COMPONENTS

LC18A1 Center Leg x1

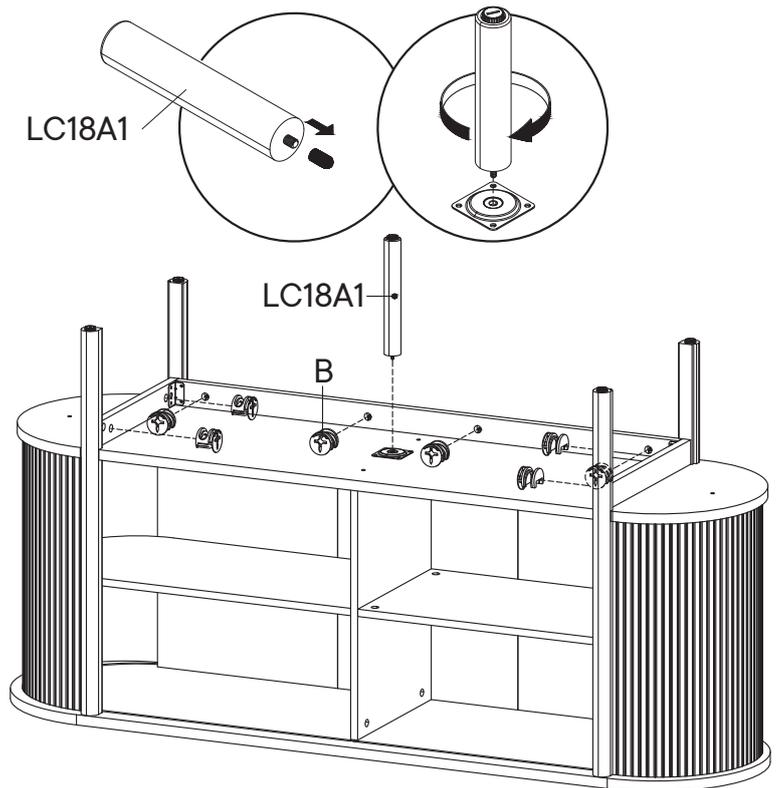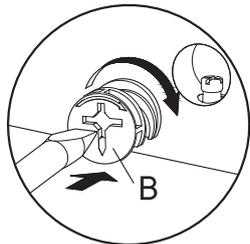


Step 22

HARDWARE

E Screw M 7 x 50 mm x2


F Allen Key x1

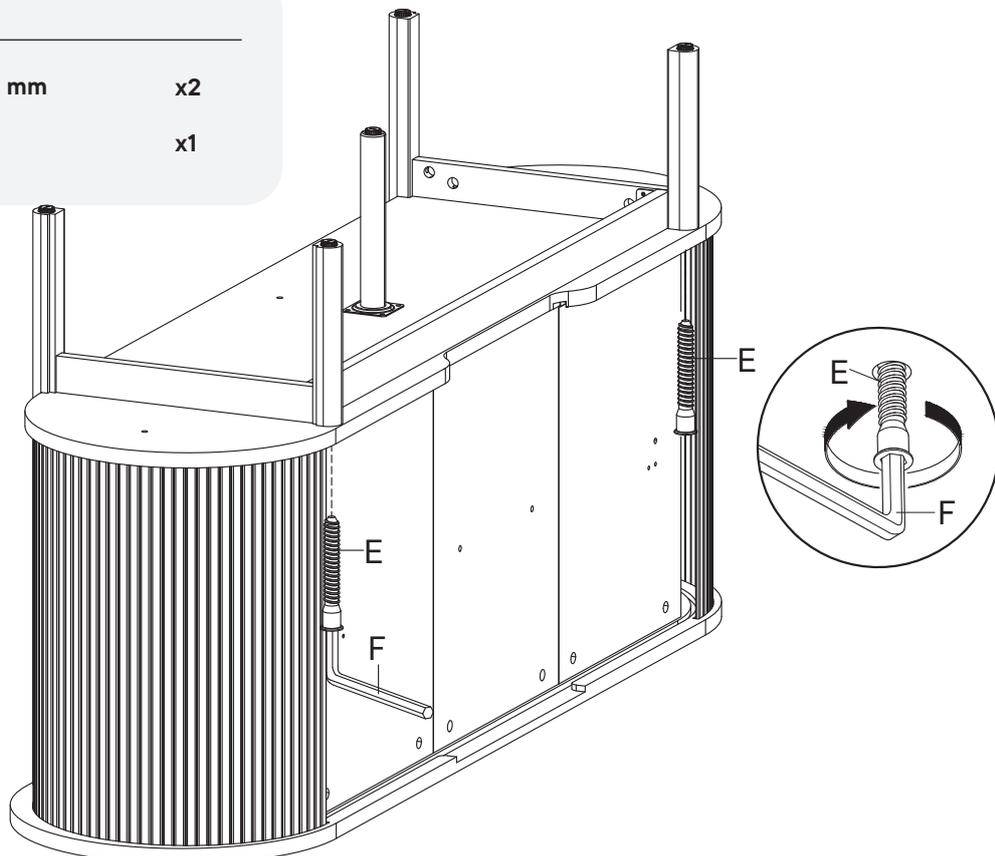

Step 23

COMPONENTS


16 Sliding Door x1

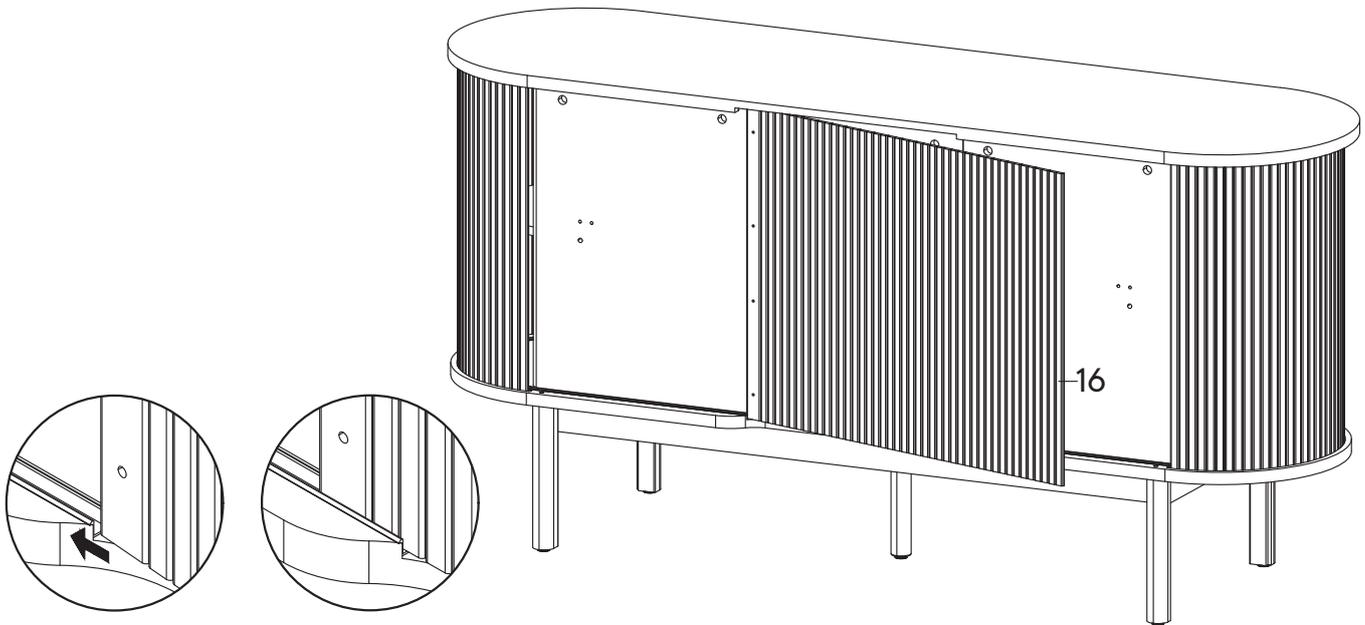

Step 24

COMPONENTS

16 Sliding Door x1

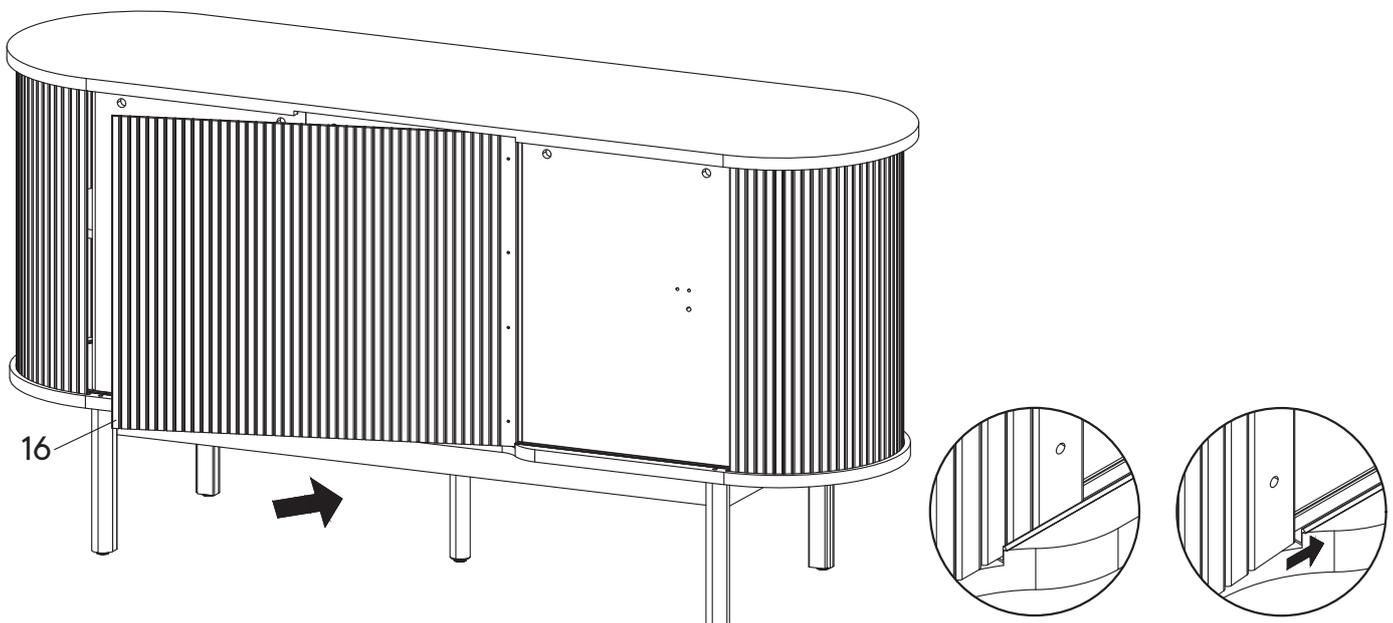




Step 25

HARDWARE

H Screw M 4 x 16 mm x8

COMPONENTS


17 Handle x2

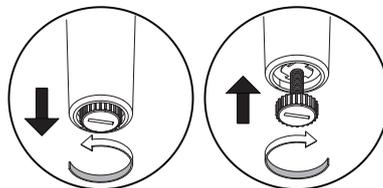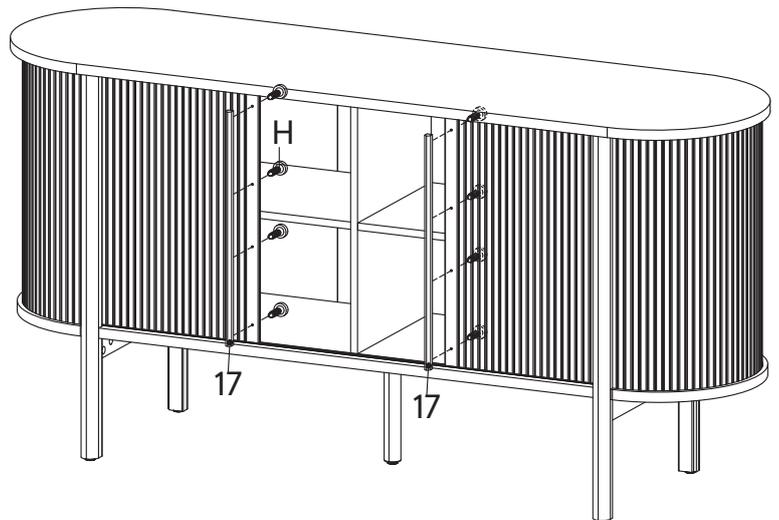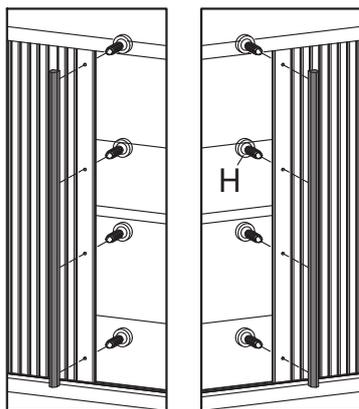

Step 26

HARDWARE

K Stopper x2

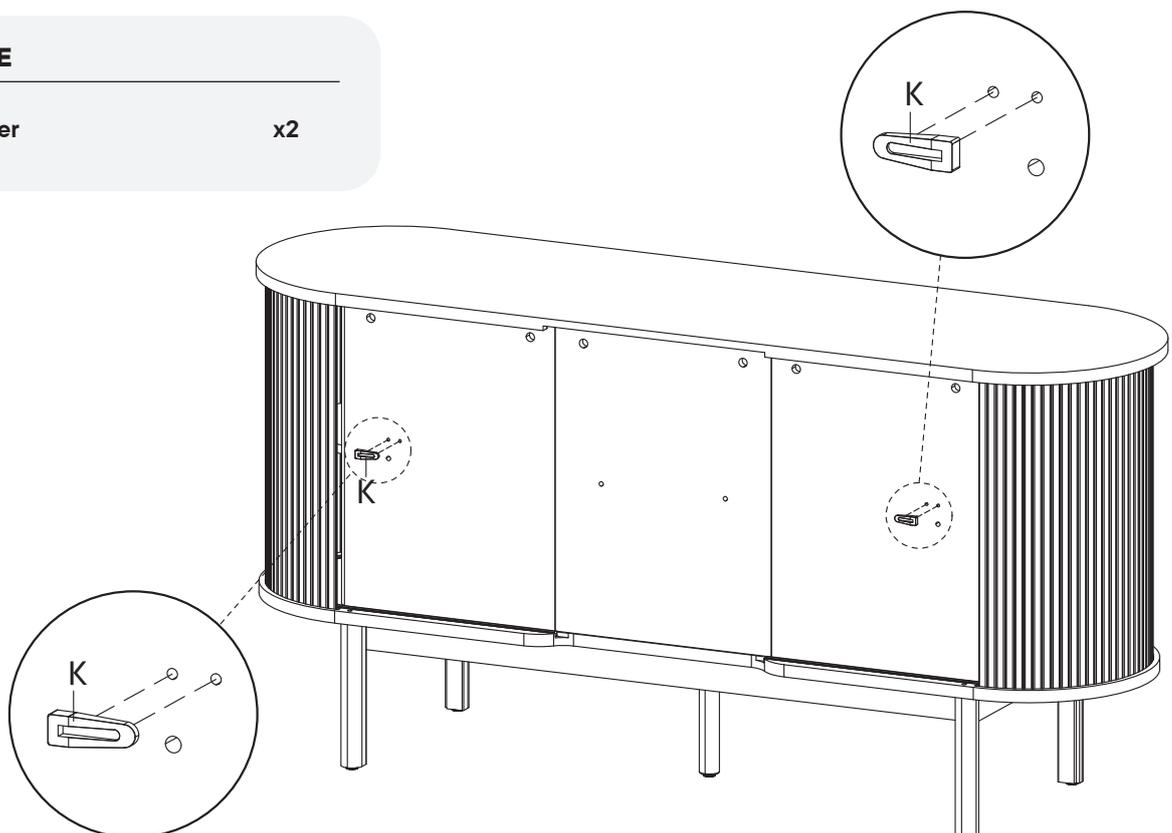

Great job!

Sideboard assembly is complete.


♥ CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

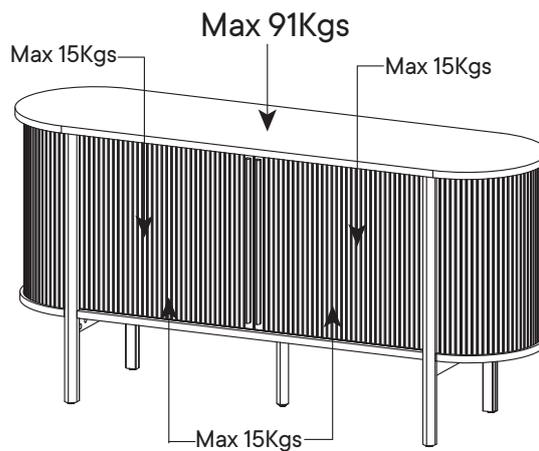

CONNECT WITH US!   








Tag us @modway_furniture and #modway for a chance to be featured.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for you wall type.

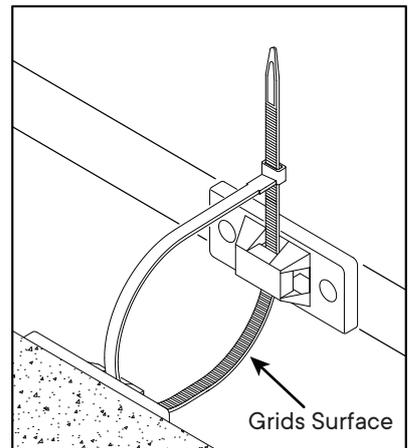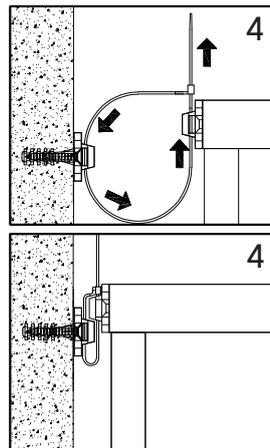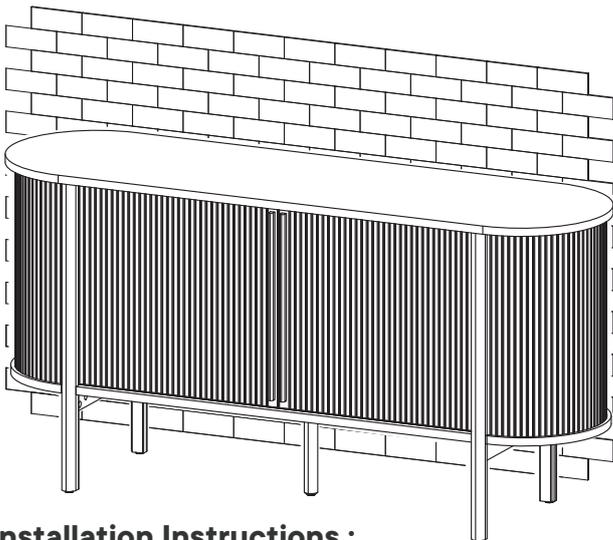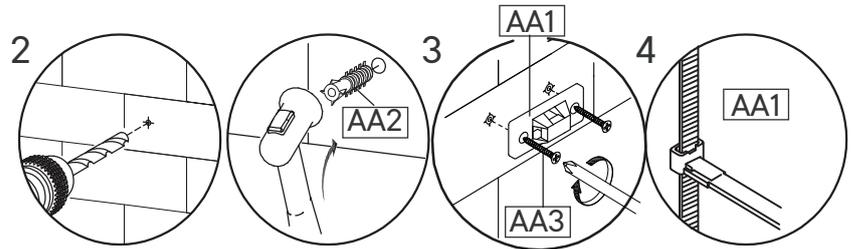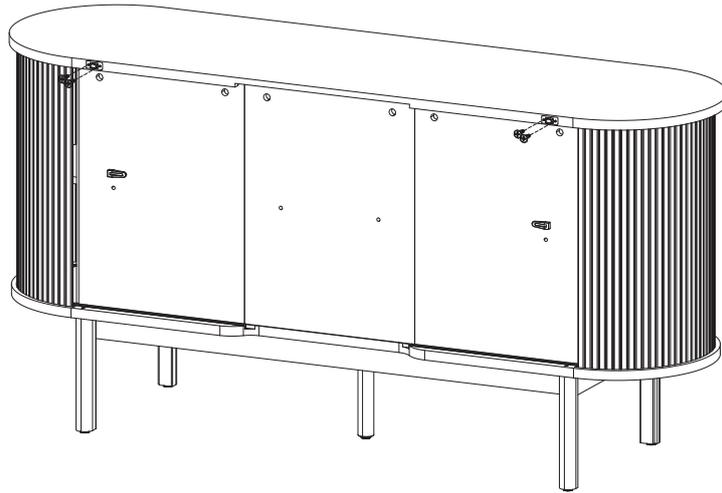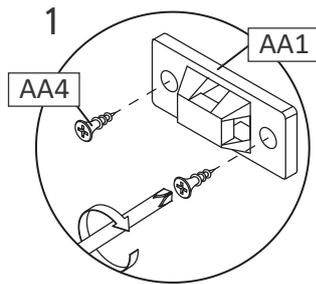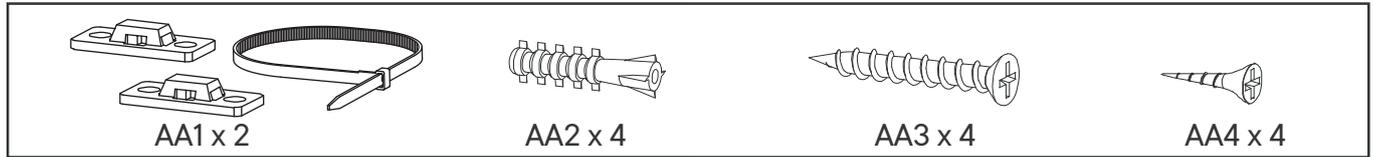

Installation Instructions :

1. Attach bracket (AA1) securely to the back top of the furniture using screw (AA4) provided. Allow 8 - 10 cm from each side.
2. Please make a hole for wall plugs position on the wall and minimum 15 mm below bracket secured to the back of unit attach the wall plugs (AA2).
3. Locate the other bracket (AA1) on the wall over wall plugs (AA2). Place furniture into position so both brackets (AA1) are vertically in the line.
4. Lace the end of the restrains strap through the larger hole in each bracket. Ensure the restrains strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.