




DESIGNED FOR LIFE

Assembly Instructions

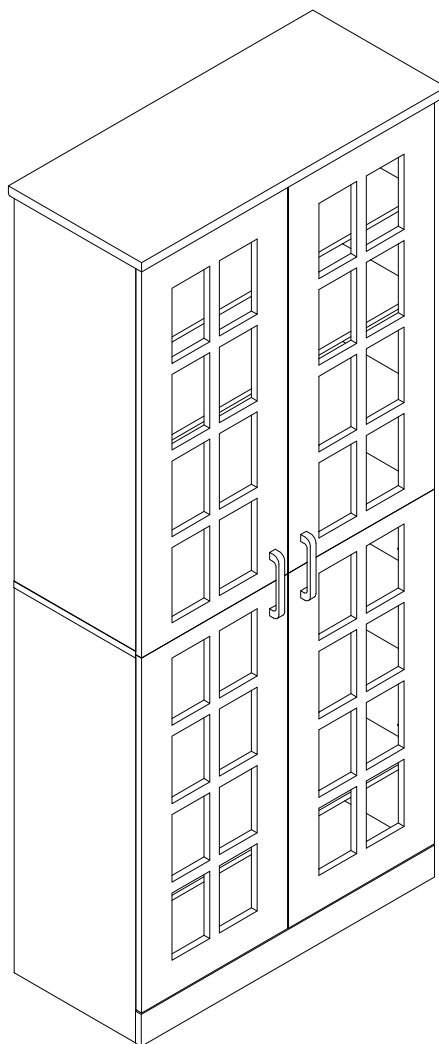

High shoe cabinet

Model No.
HOGA-J0331X
HOGA-J0364X



LITTLE TREE
Little Tree by Tribesigns

www.tribesign.com



Contact Us

We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.

Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.


How to Get the Assembly Video

Step 1 Scan the QR code.






Installation Video

Step 2 Search with the Model No.
(on the bottom left corner of the title page)

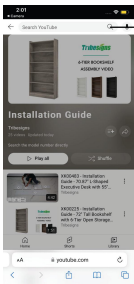


HOGA-J0331X

Note: If you can't find the assembly video, please contact us.

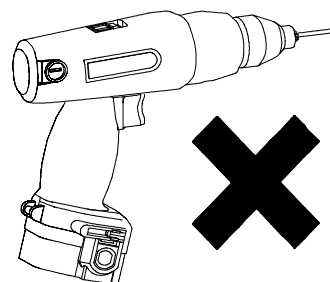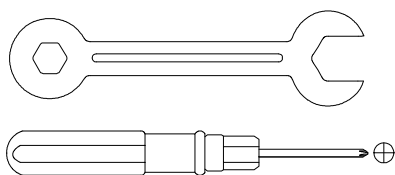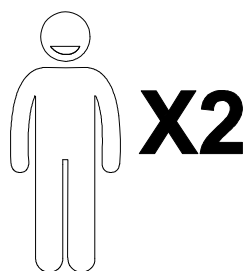


We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

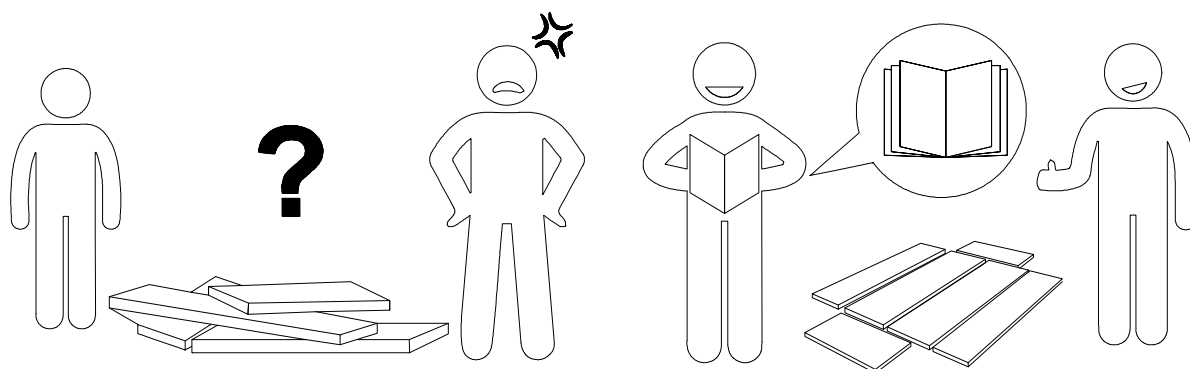

Install the Anti-Tip Straps

















Using the anti-tip straps can reduce the risk of tipping over, but can not eliminate it.

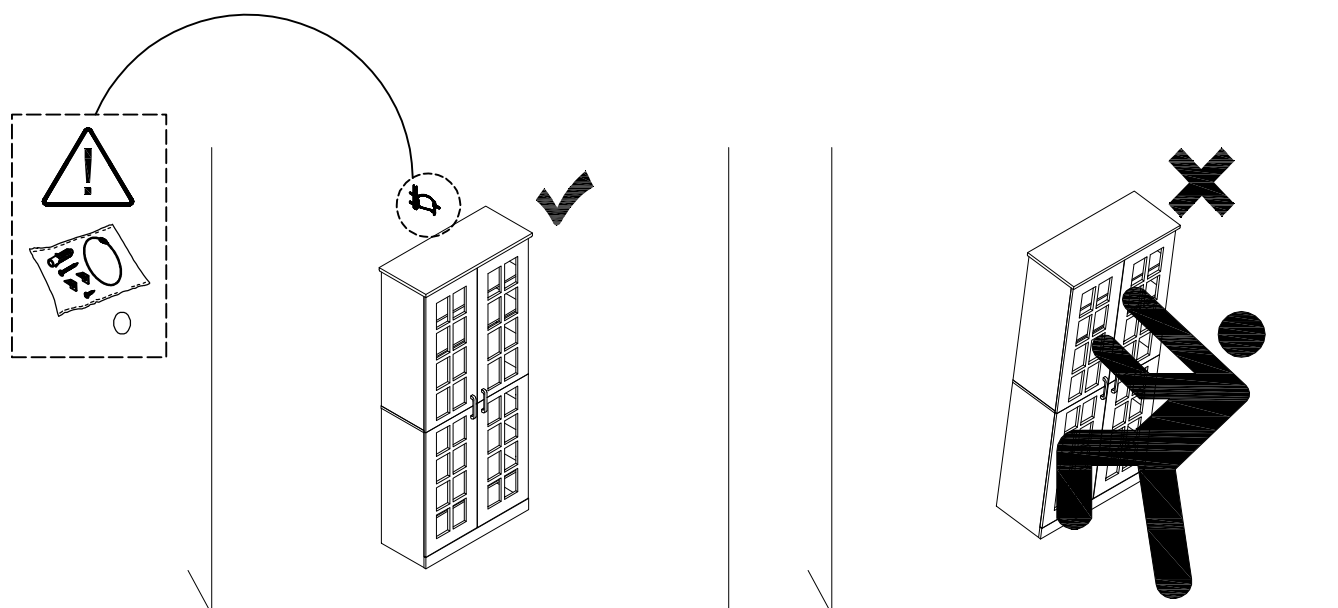

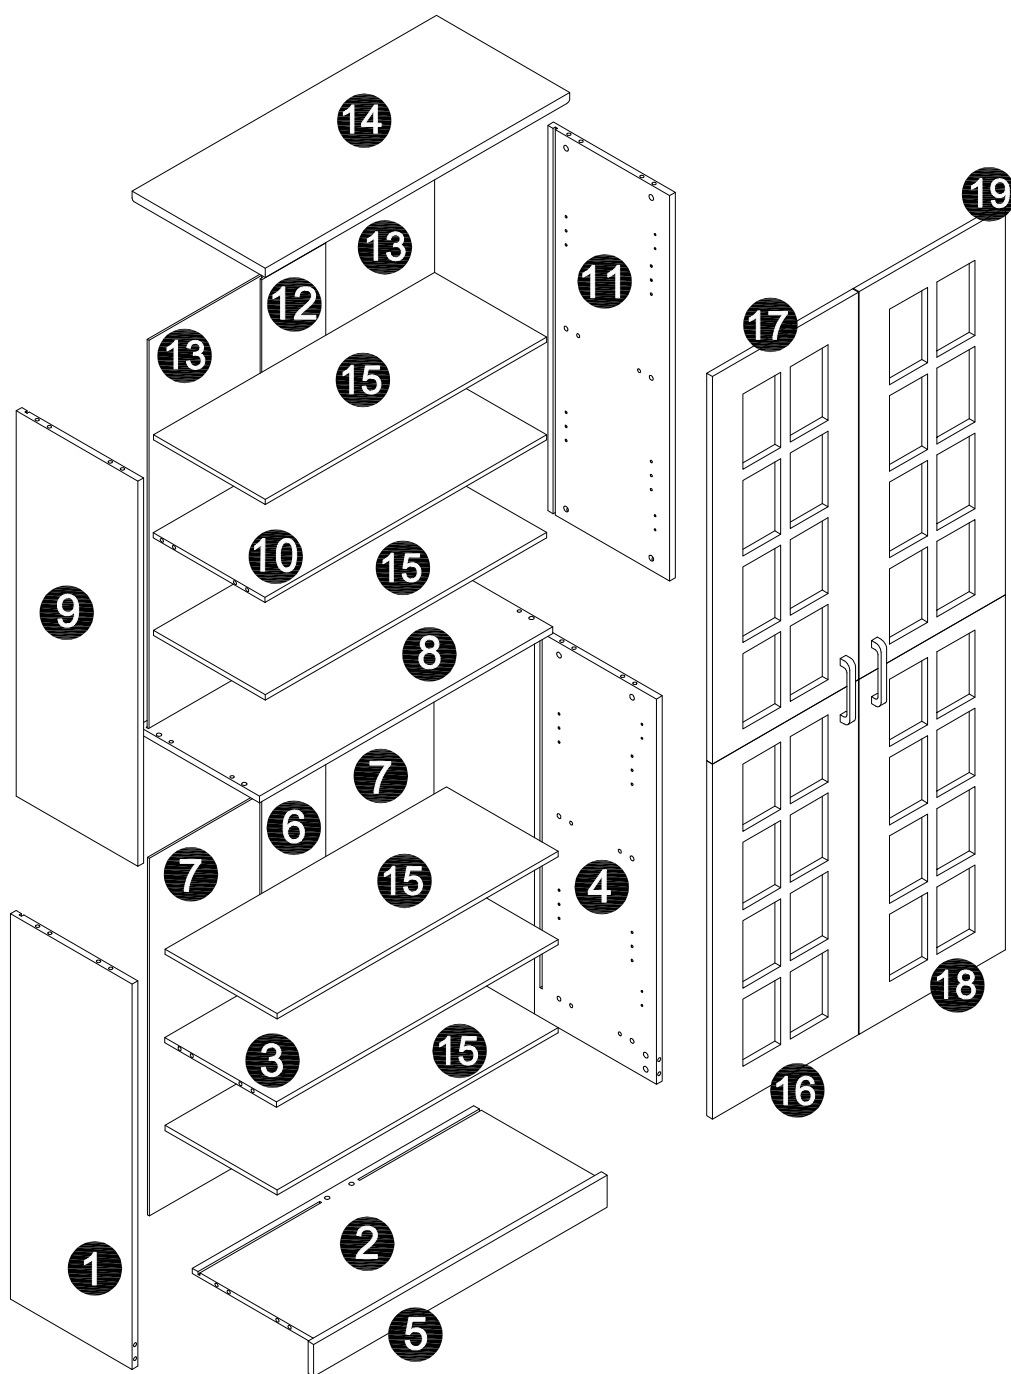



Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.


Parts List

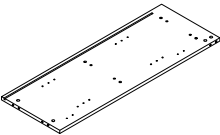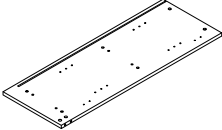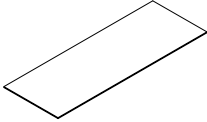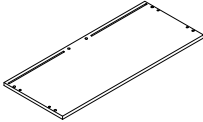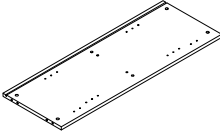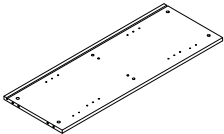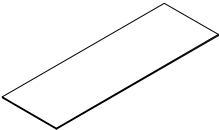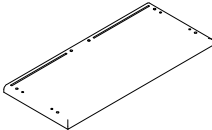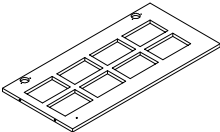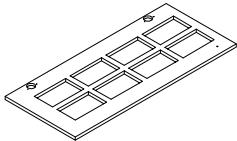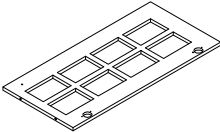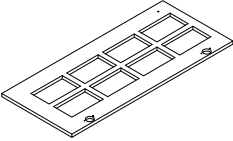1  1 pc	2  1 pc	3  1 pc	4  1 pc	5  1 pc
6  1 pc	7  2 pcs	8  1 pc	9  1 pc	10  1 pc
11  1 pc	12  1 pc	13  2 pcs	14  1 pc	15  4 pcs
16  1 pc	17  1 pc	18  1 pc	19  1 pc	



Hardware List

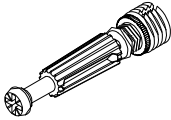A	B	C	D	E	F
					
M6x35mm	Ø12x10mm	Ø8x30mm	16X11X15MM	Ø4X18MM	
39+1 pcs	39+1 pcs	28+1 pcs	16+1 pcs	4 pcs	8 pcs



G	H	I	J	K	L
					
Ø3.5X14MM	14X12X10MM	96#			Screwdriver
56+2 pcs	8+1 pcs	2 pcs	5 pcs	1 pc	1 pc




Installation of Cams and Pins

Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

✓
No gap

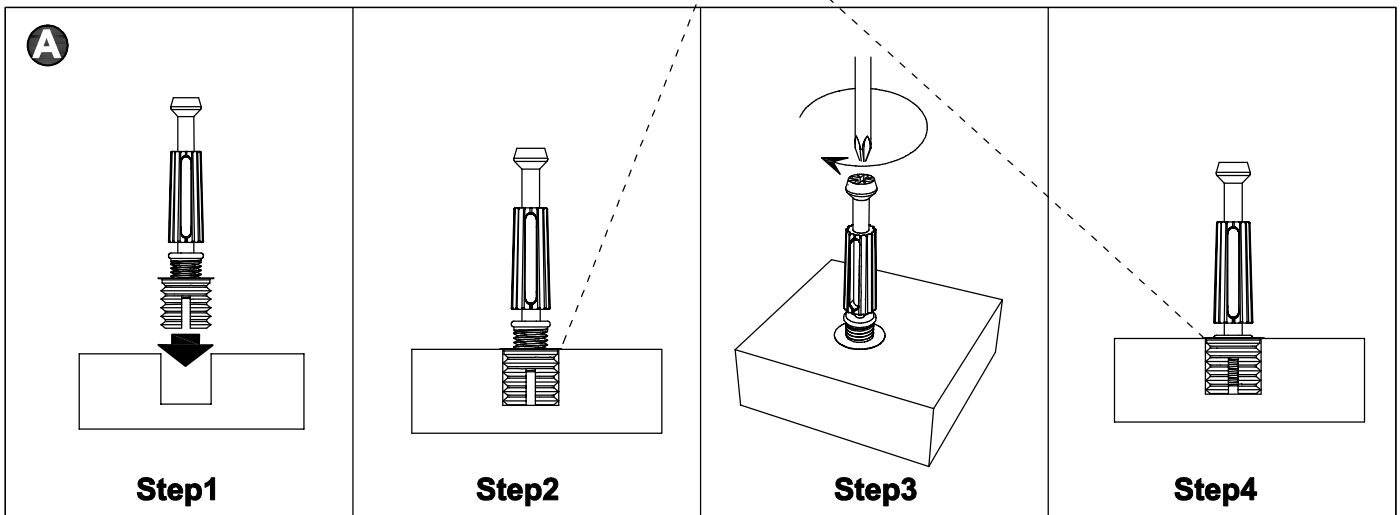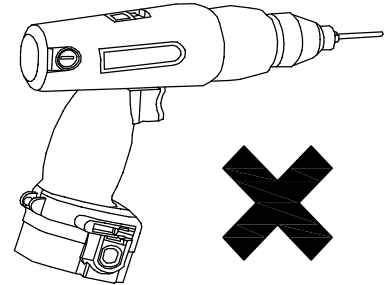





Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

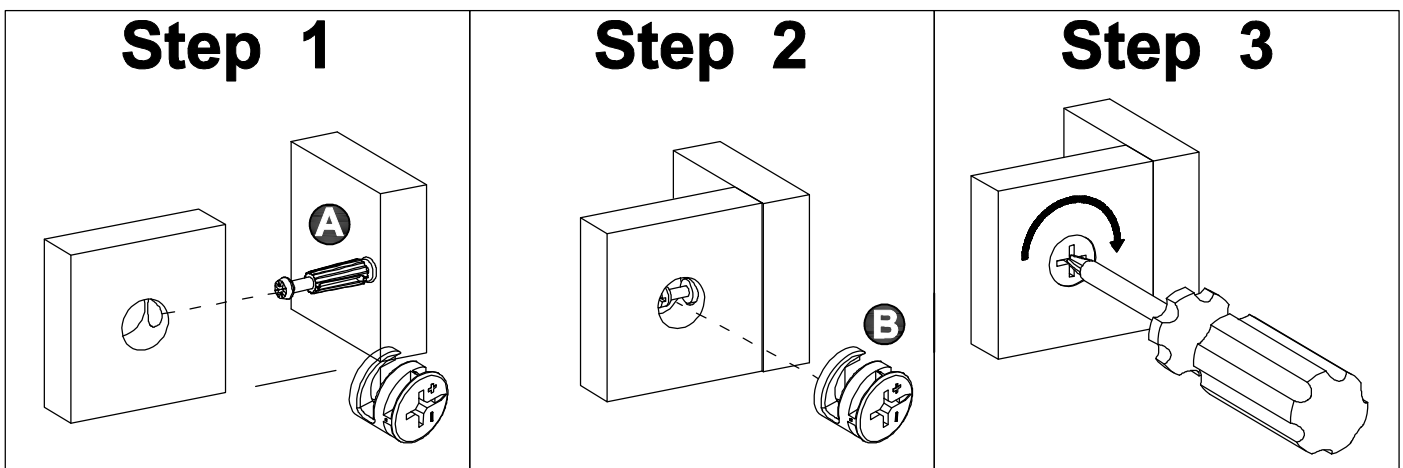



1



C	A
	
Ø8x30mm	M6x35mm
4 pcs	4 pcs

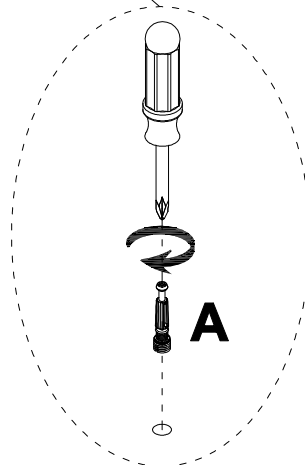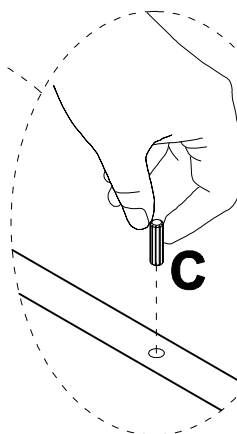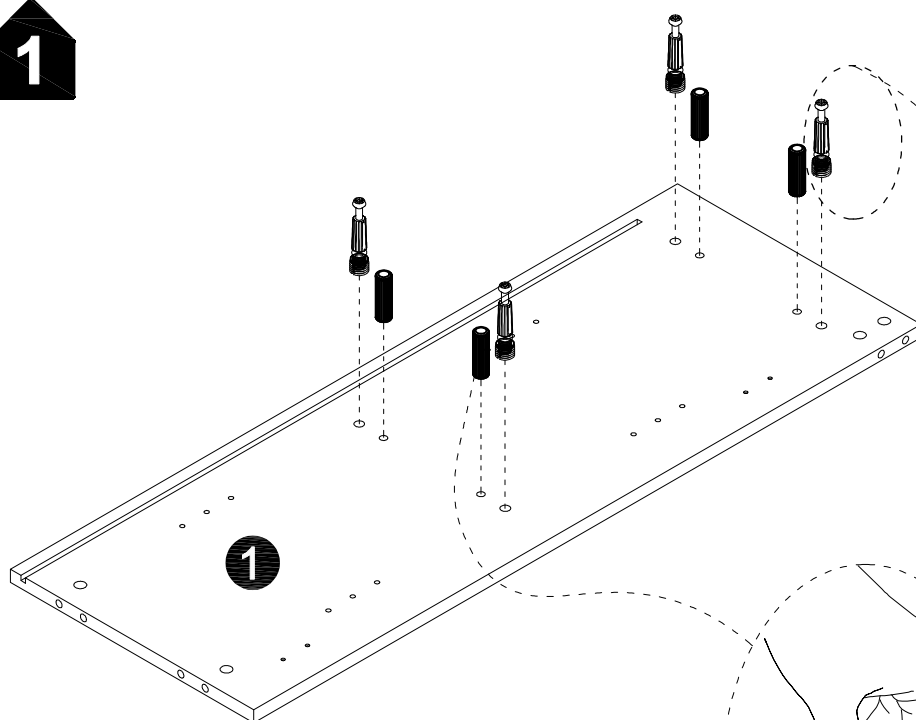

2


A

M6x35mm
2 pcs

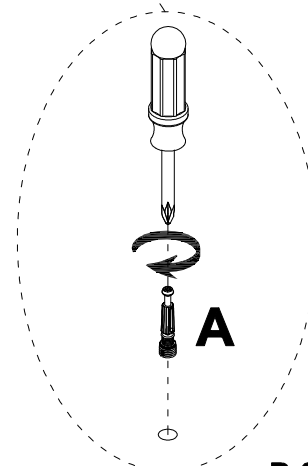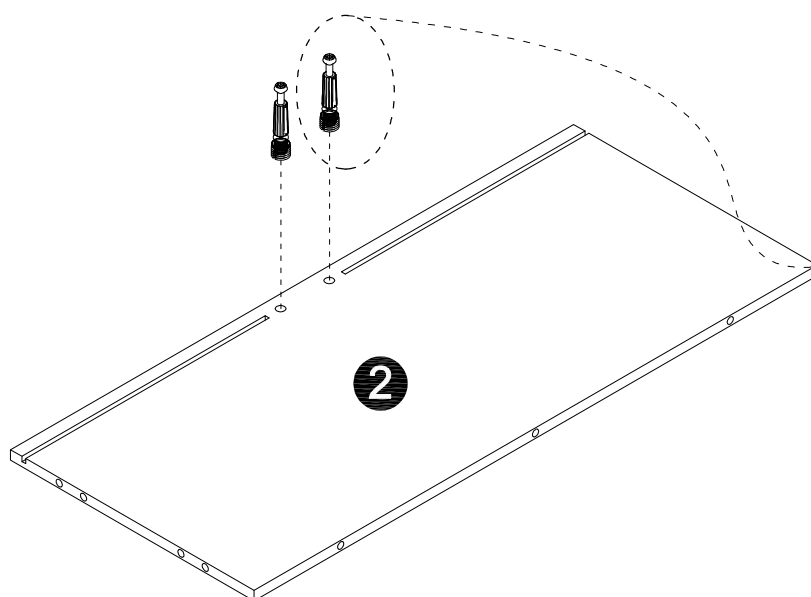




3

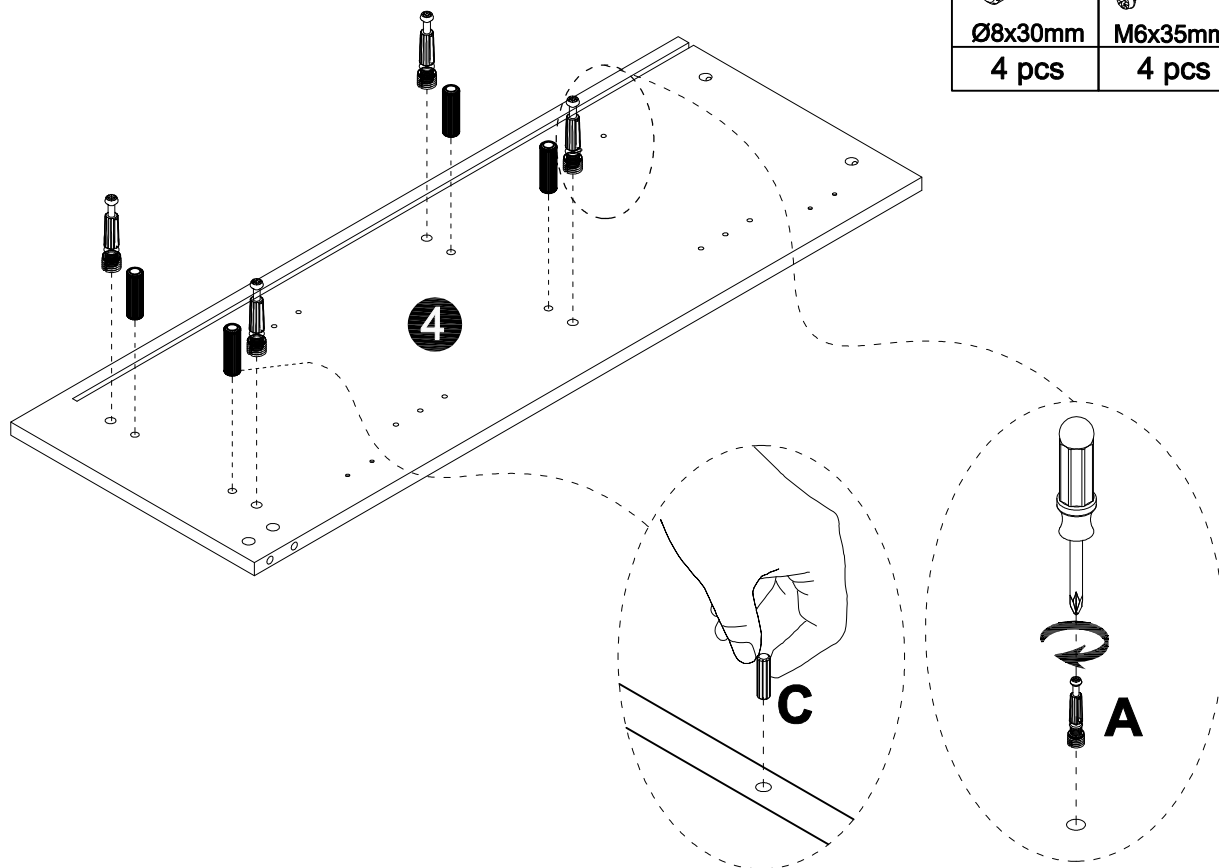


4

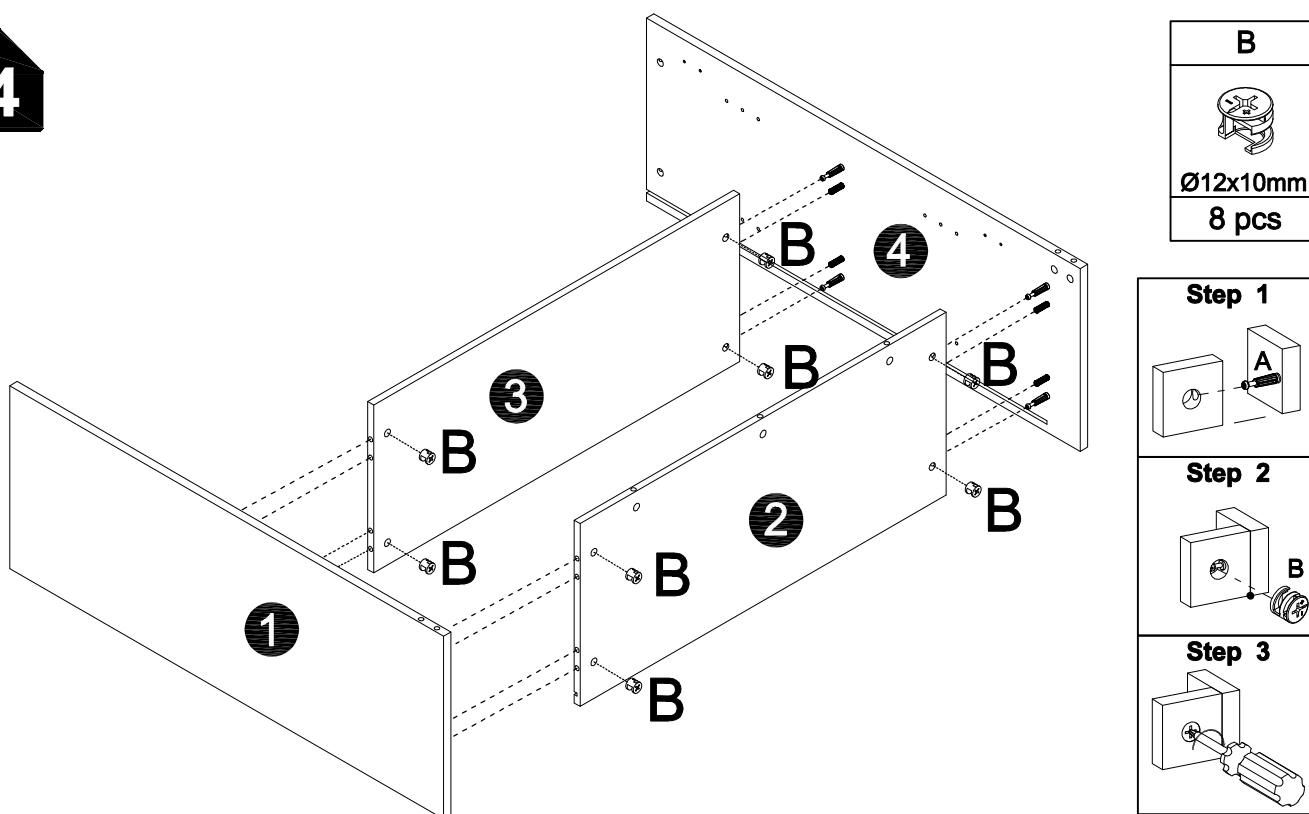




5

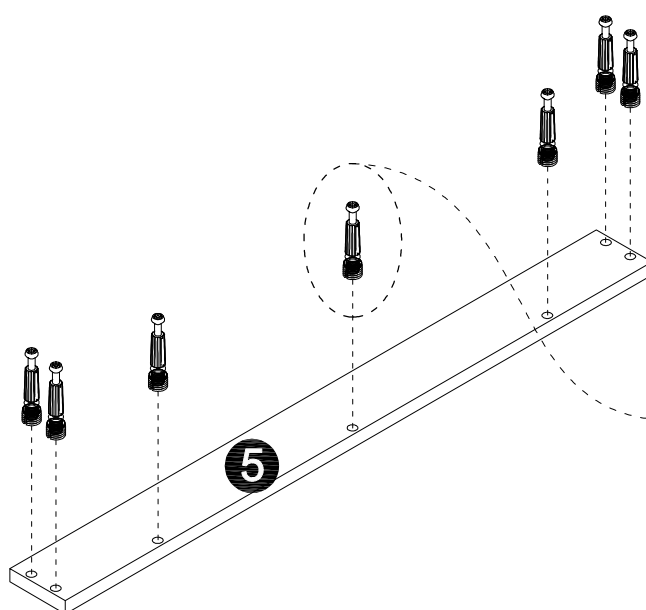


A

M6x35mm
7 pcs

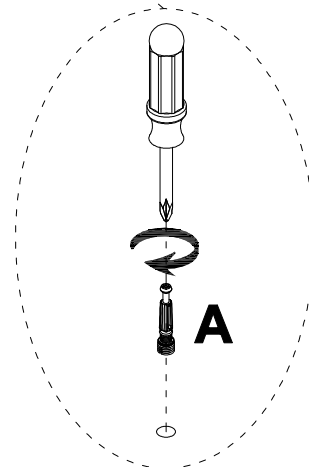


6

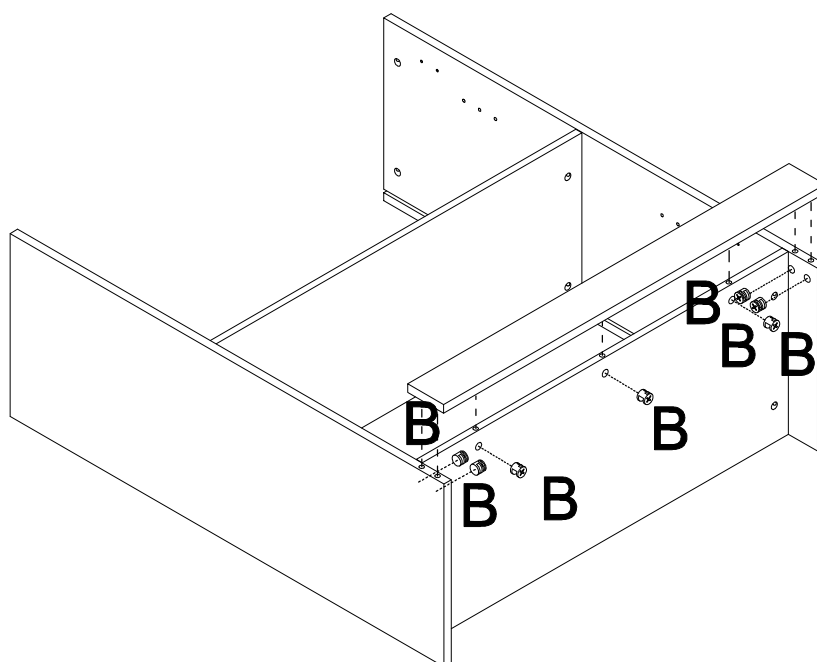


B

Ø12x10mm
7 pcs


Step 1



Step 2

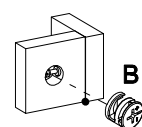


Step 3

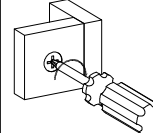



7

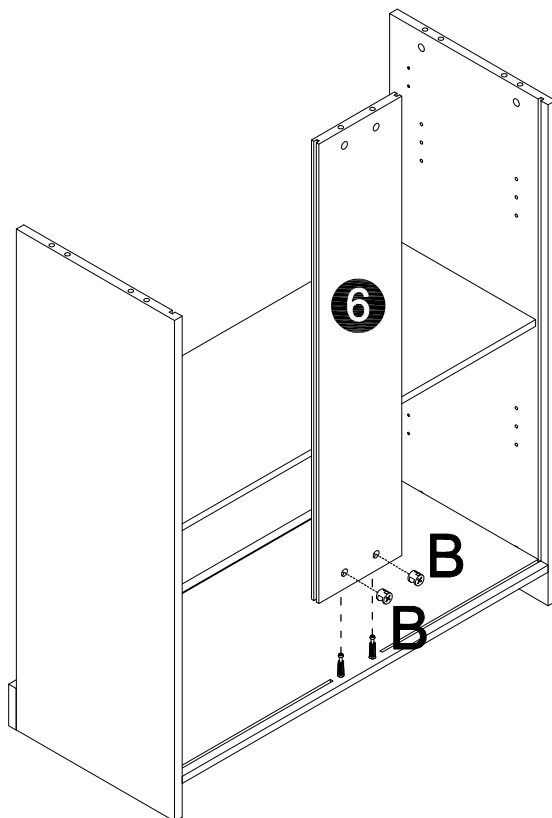


B




Ø12x10mm

2 pcs


Step 1




Step 2

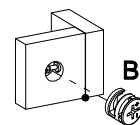

Step 3

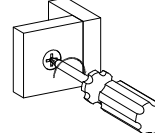


8

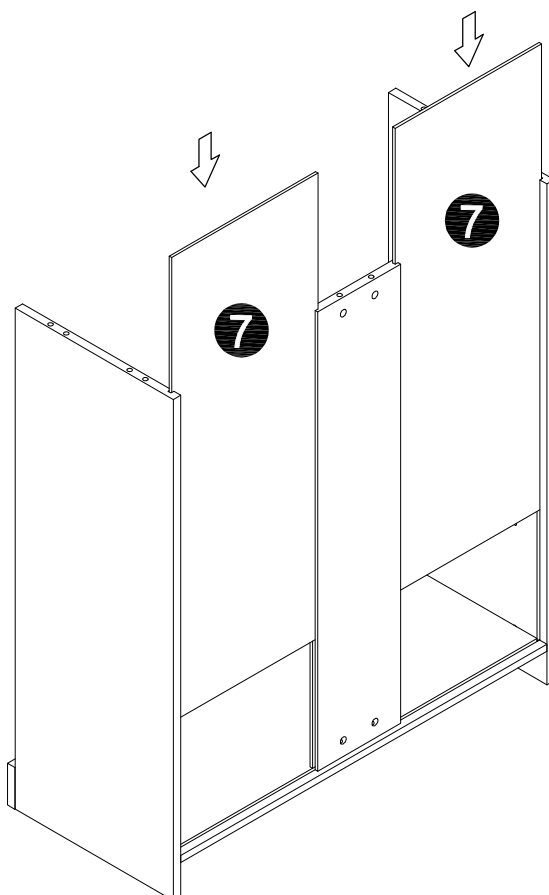




9

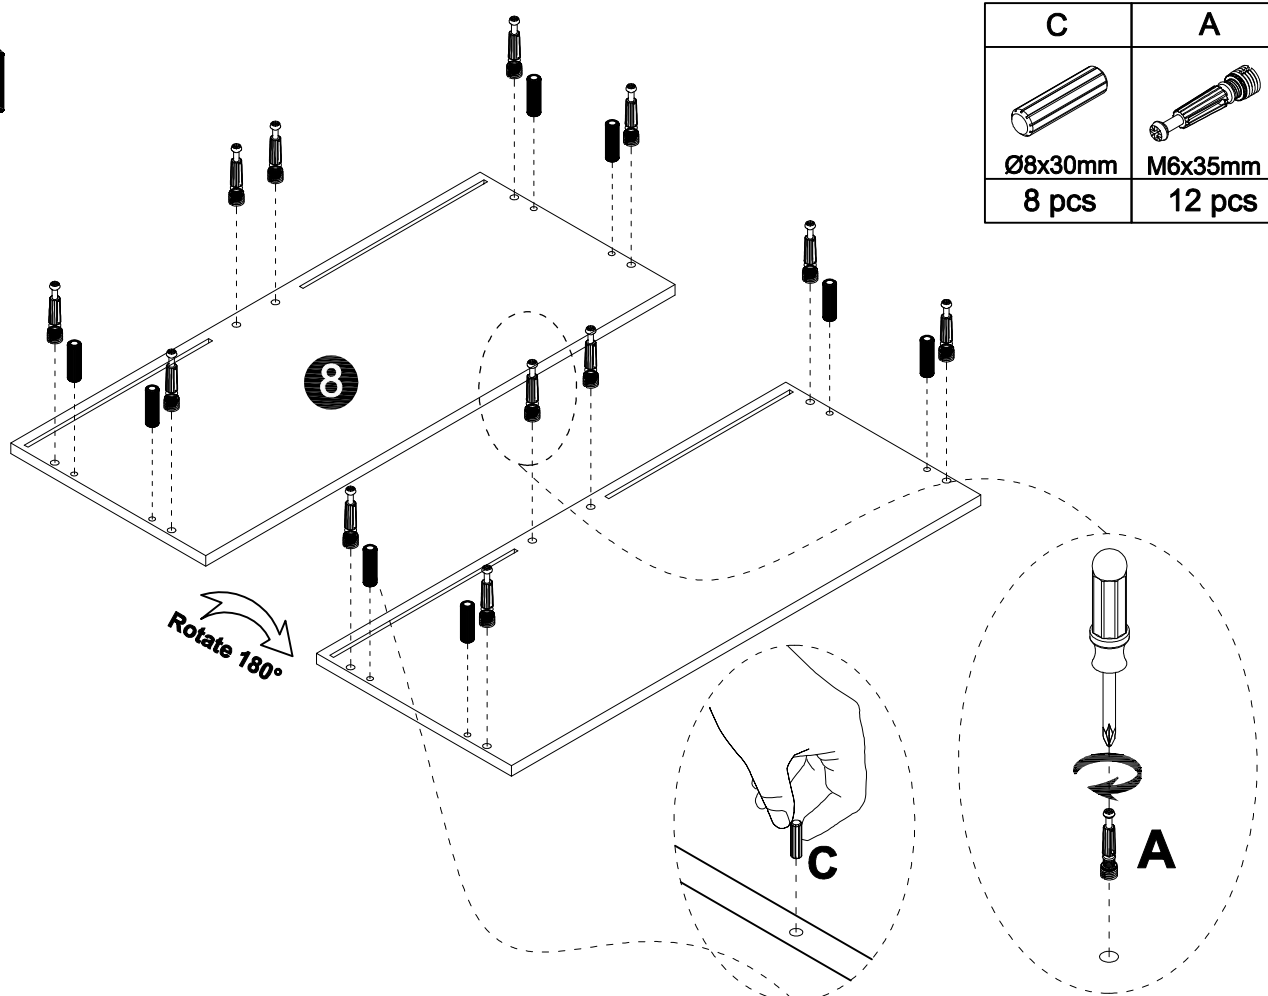


10

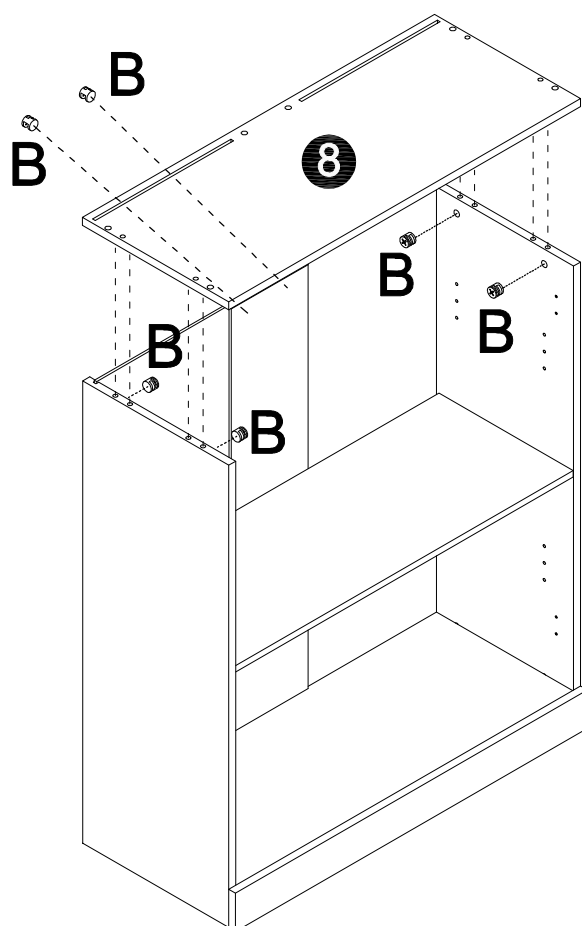


B

Ø12x10mm
6 pcs

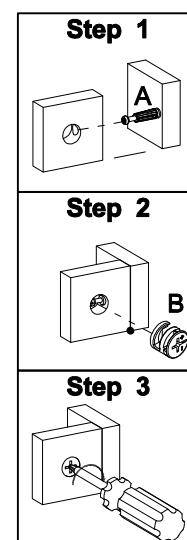





11

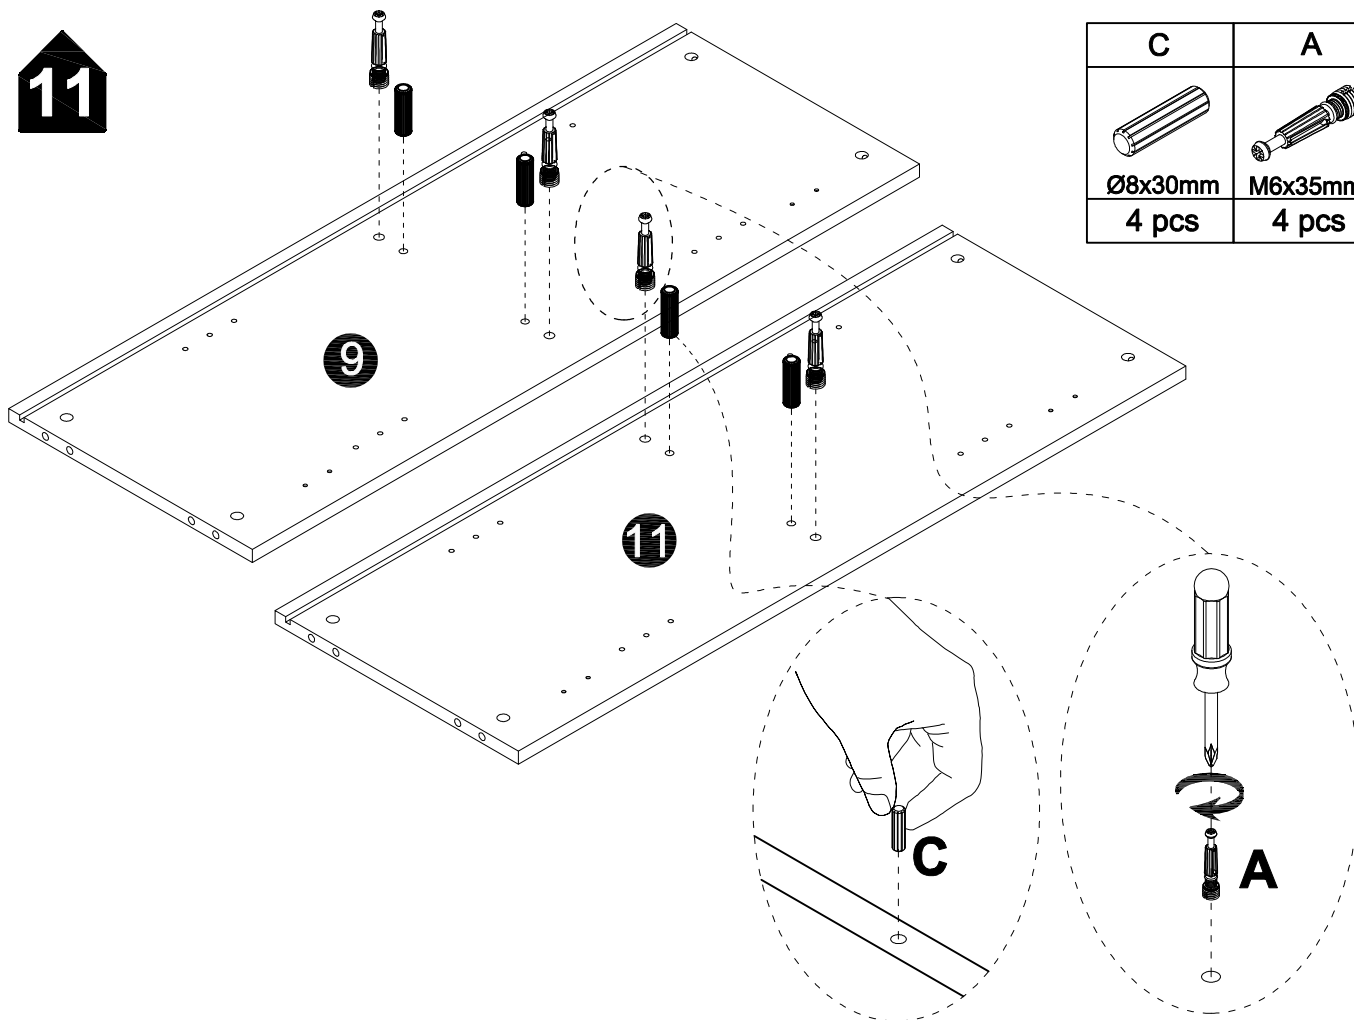


12

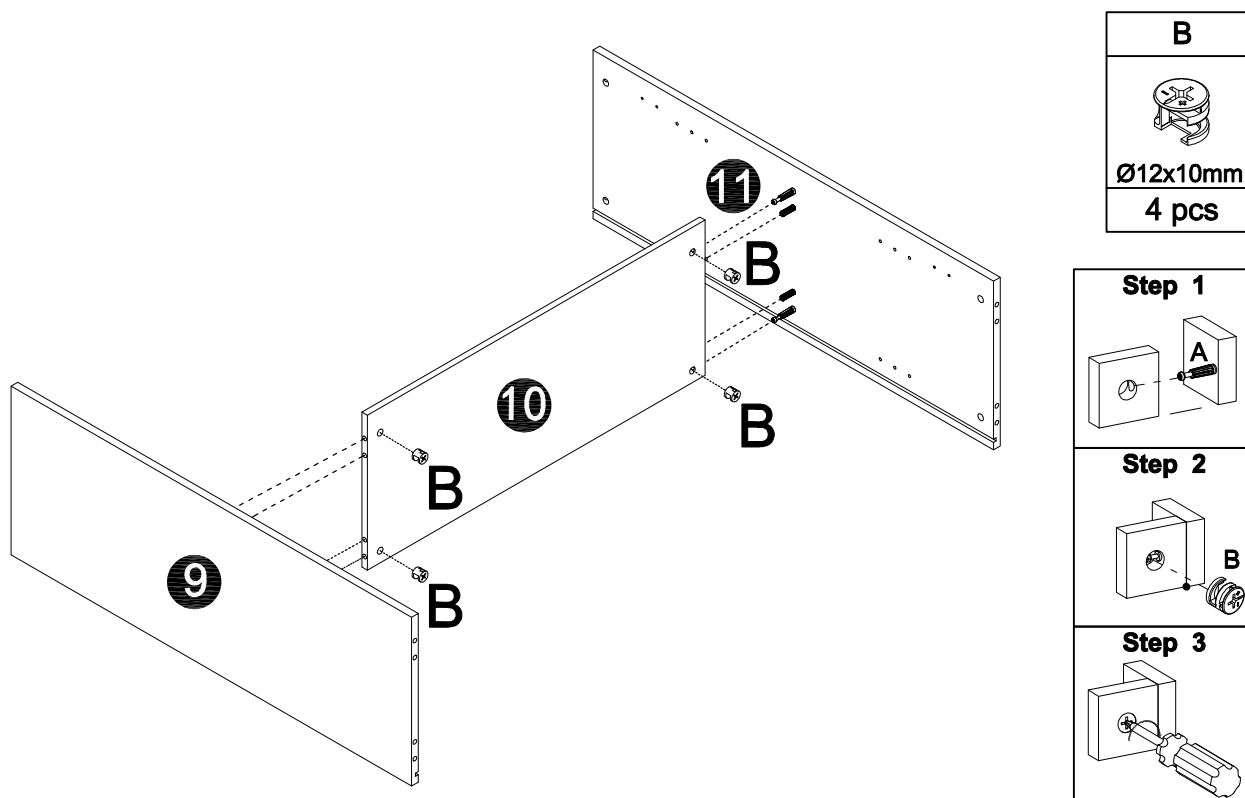


Step 1



Step 2

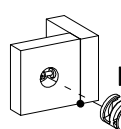


Step 3

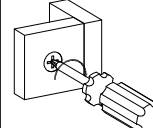




13

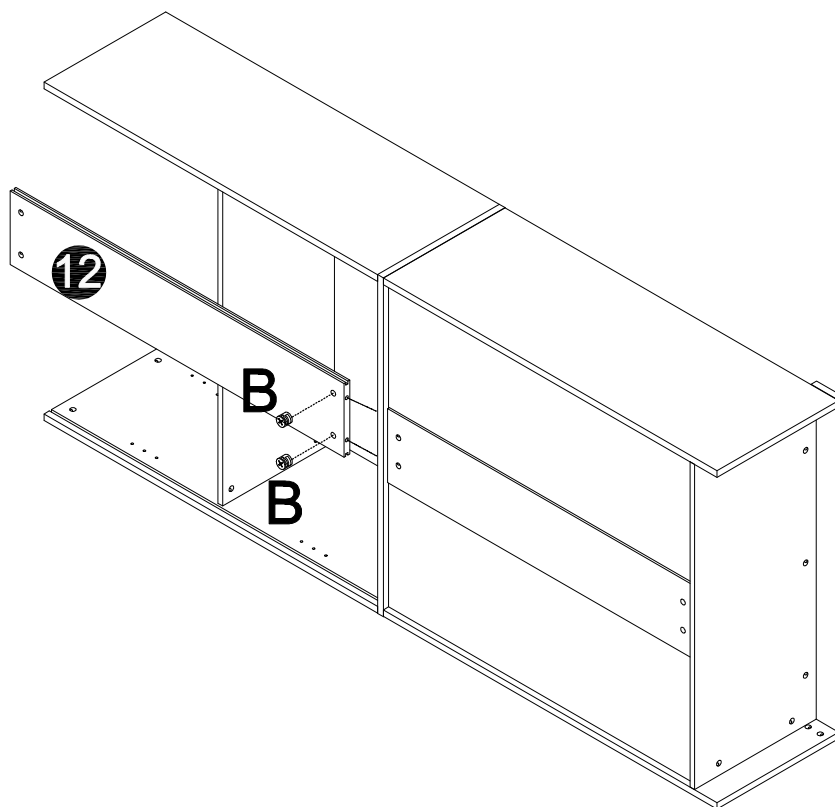


B

Ø12x10mm
2 pcs


Step 1




Step 2

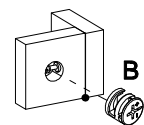

Step 3

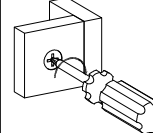

14

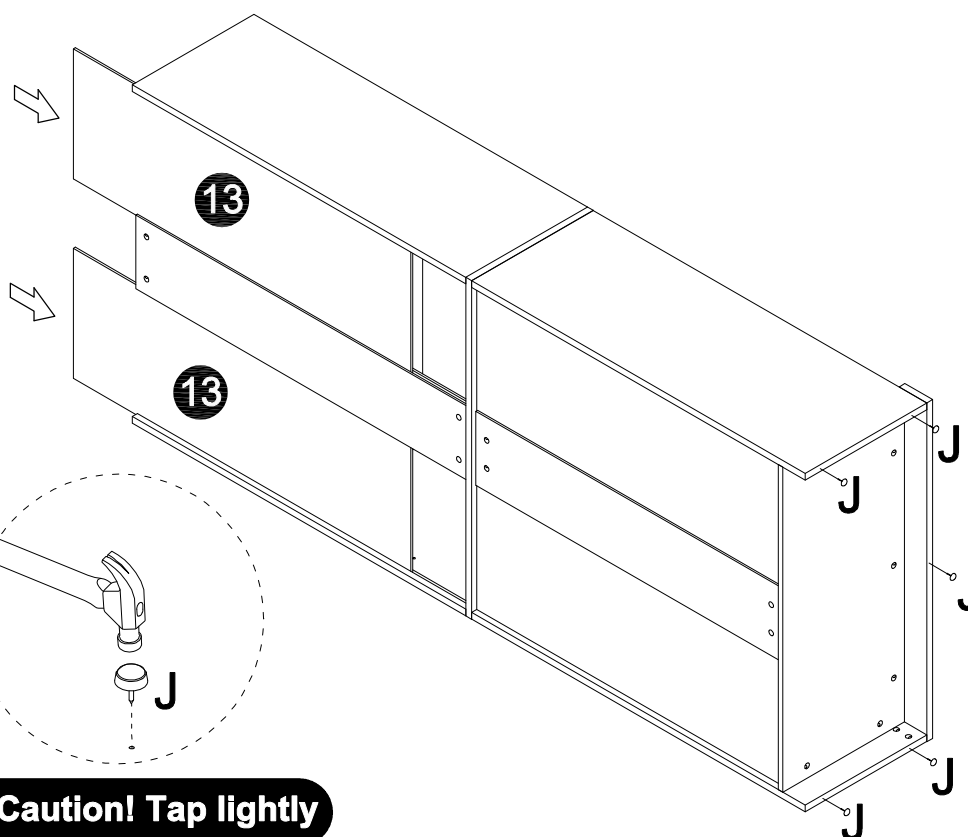


J


5 pcs

⚠ Caution! Tap lightly




15

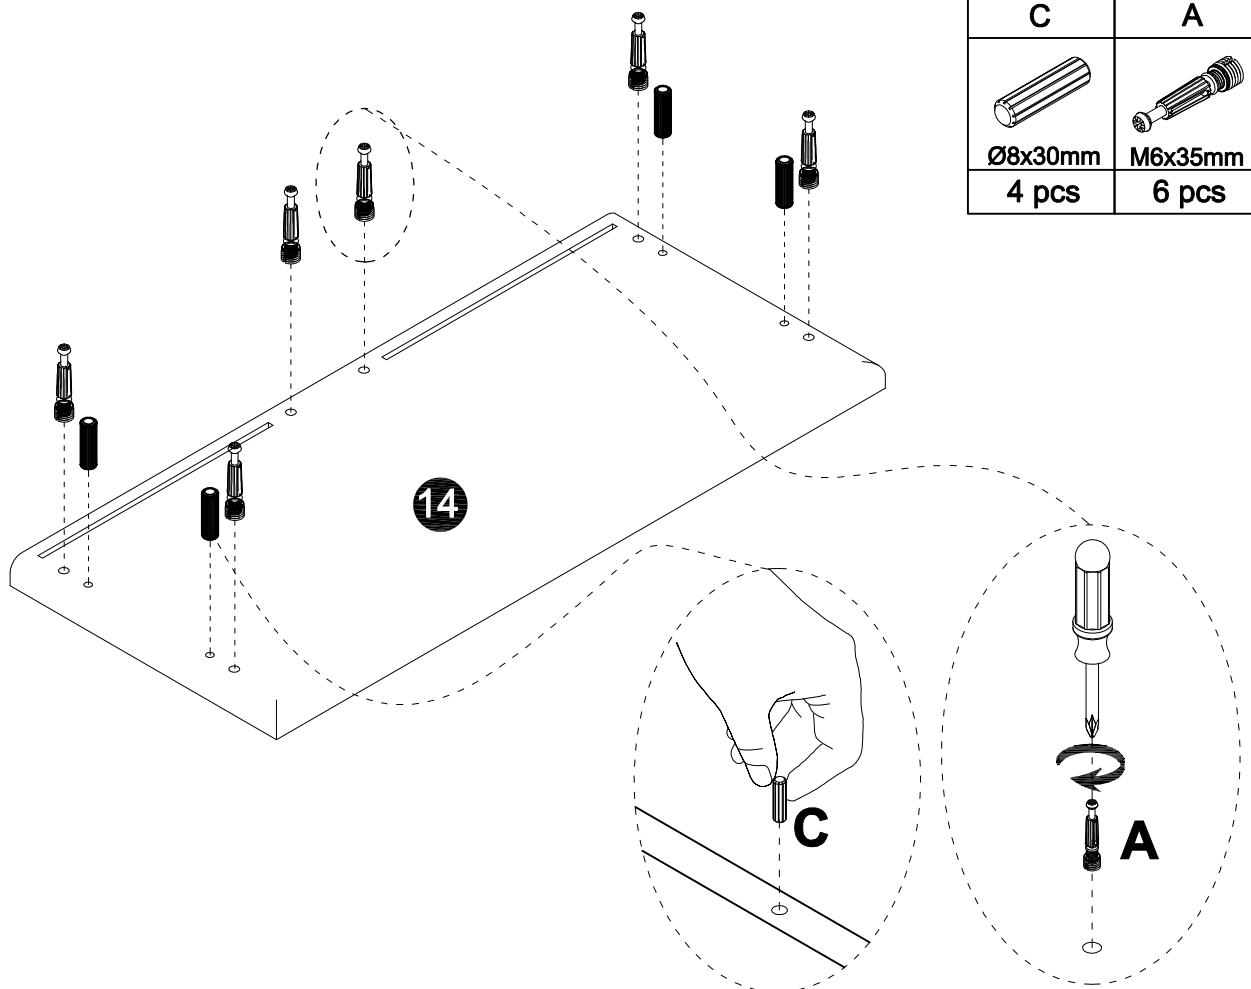

C	A
	
Ø8x30mm 4 pcs	M6x35mm 6 pcs


16

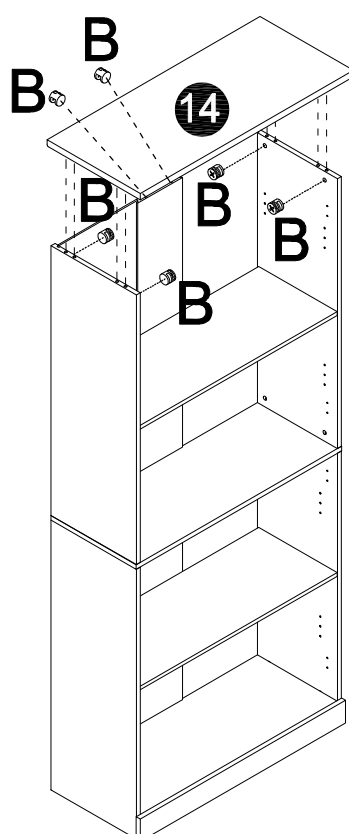


B

Ø12x10mm 6 pcs


Step 1



Step 2

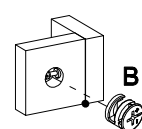


Step 3

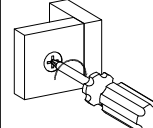




17

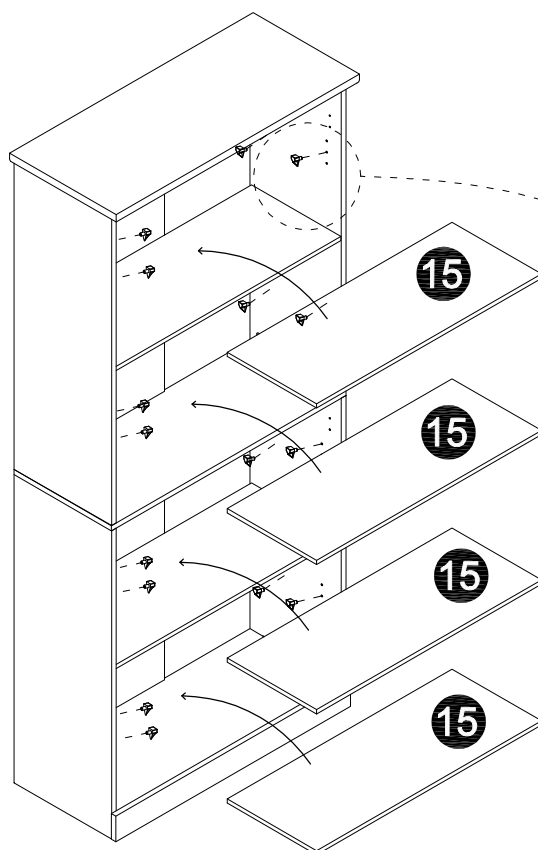


D


16X11X15MM
16 pcs



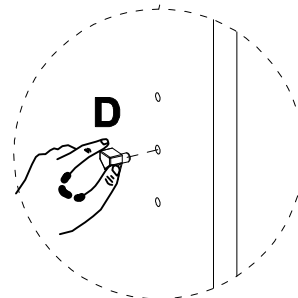


18

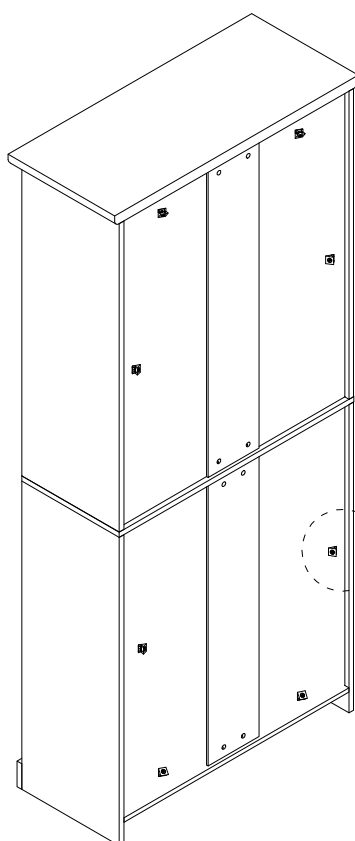

G	H
	
Ø3.5X14MM	14X12X10MM
8 pcs	8 pcs

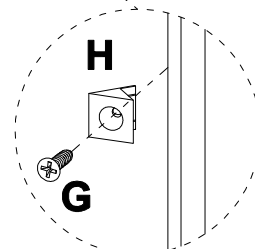


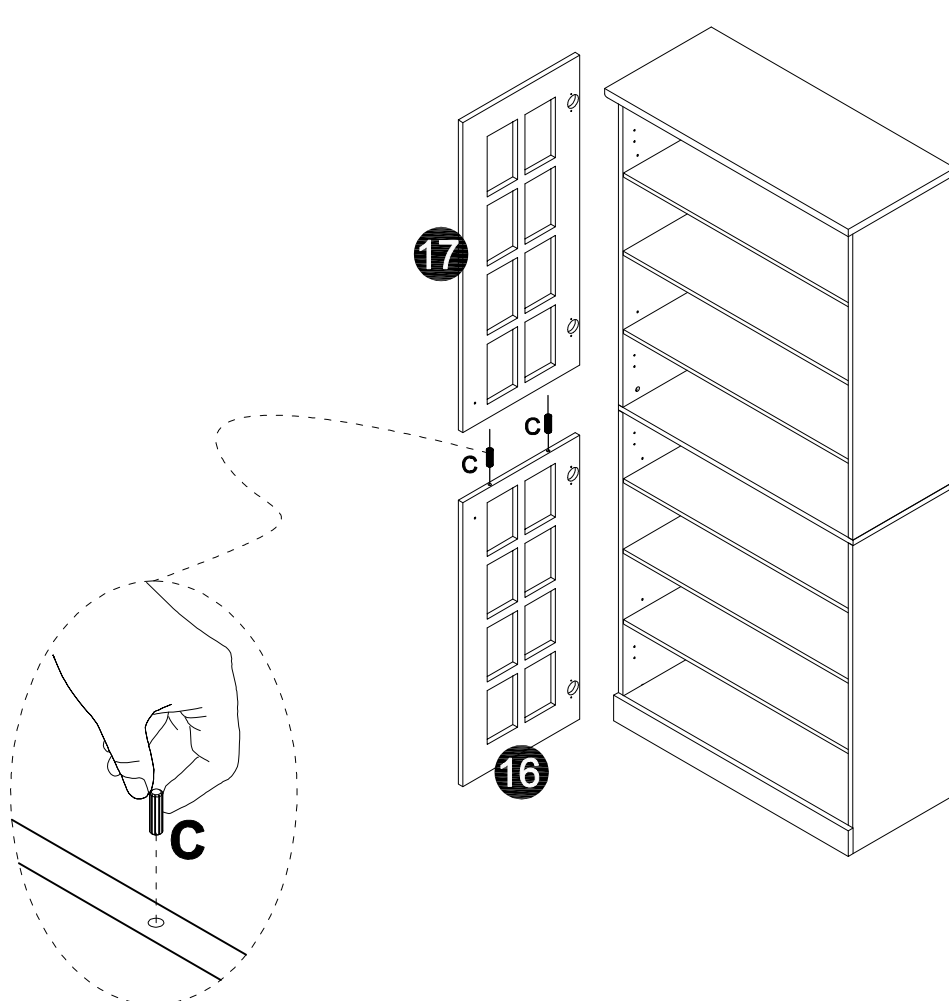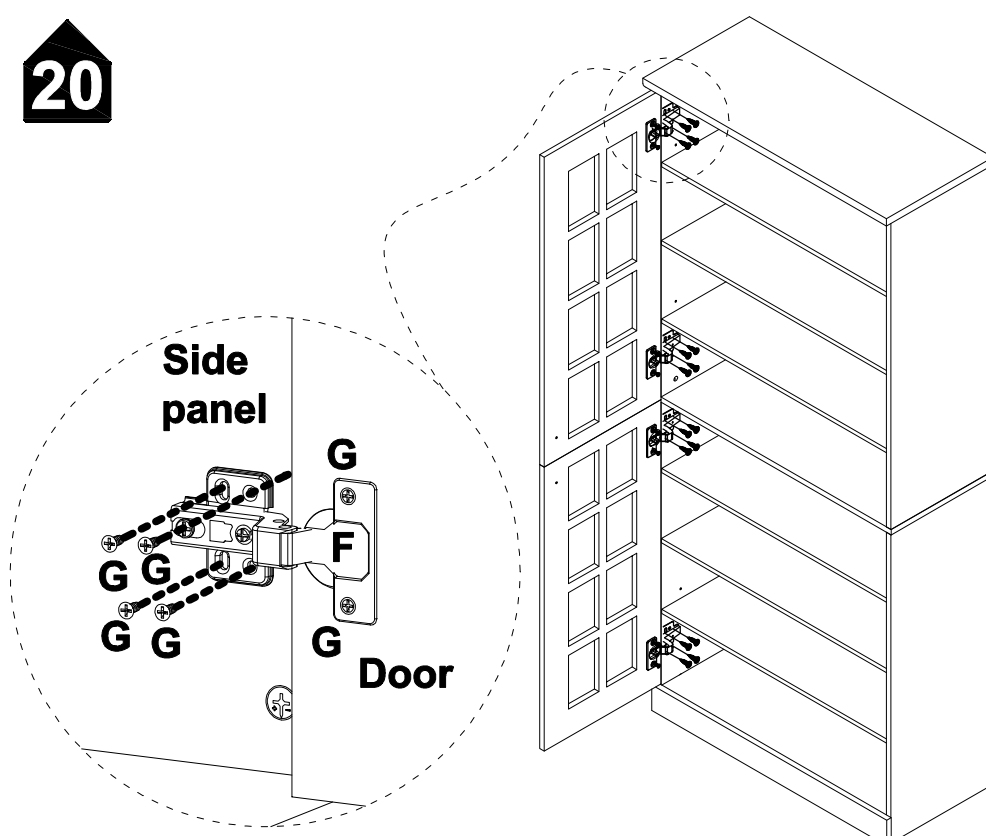
**19****C****Ø8x30mm****2 pcs****20****Side
panel****G****Door****G****G****Ø3.5X14MM****24 pcs****F****G****X6****4 pcs**

To prevent the door hinge from falling off, please install 4 screws





21

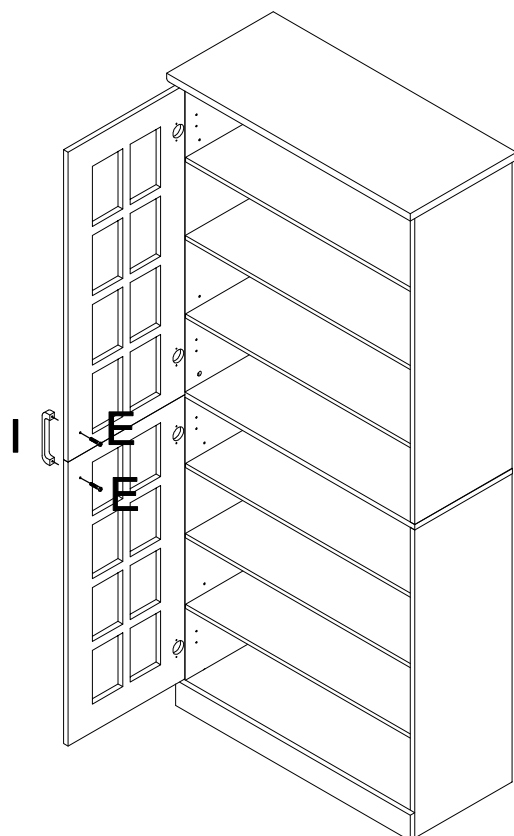


I	E
	
96# 1 pc	Ø4X18MM 2 pcs

22

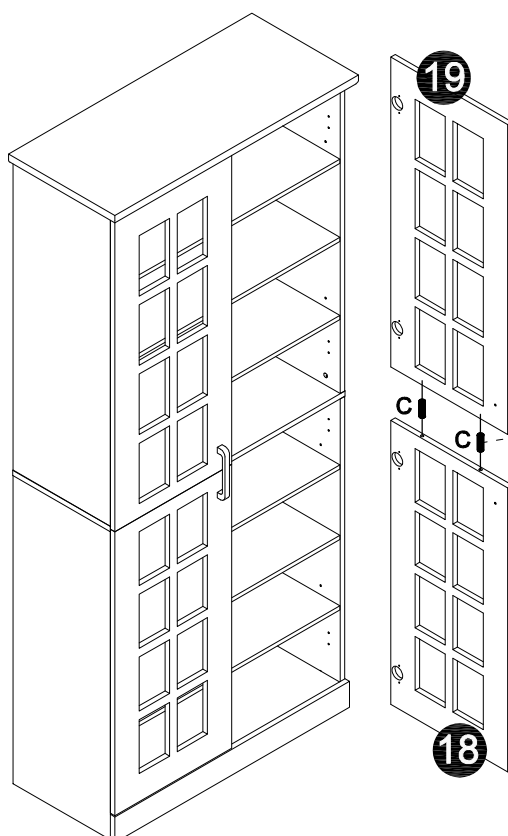


C

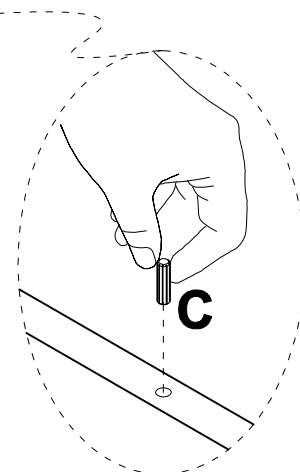Ø8x30mm 2 pcs




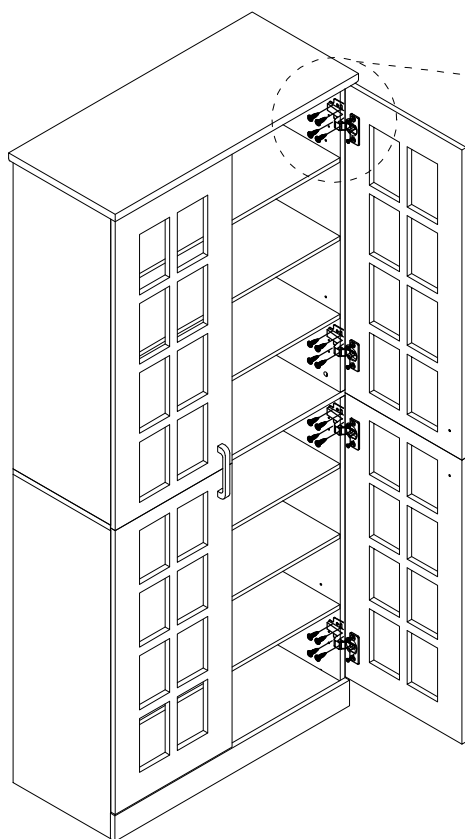

23





G	F
 Ø3.5X14MM 24 pcs	 G X6 4 pcs

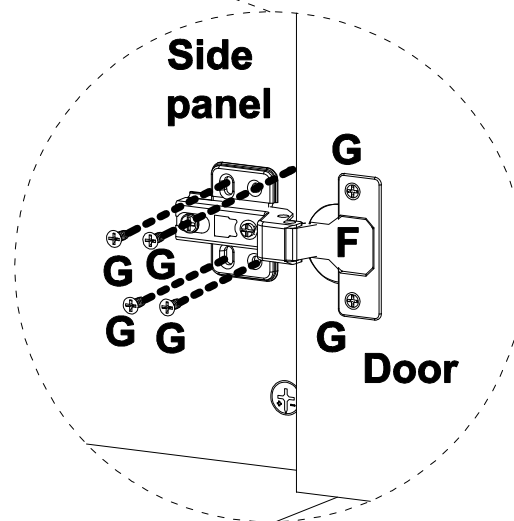

To prevent the door hinge from falling off, please install 4 screws

24

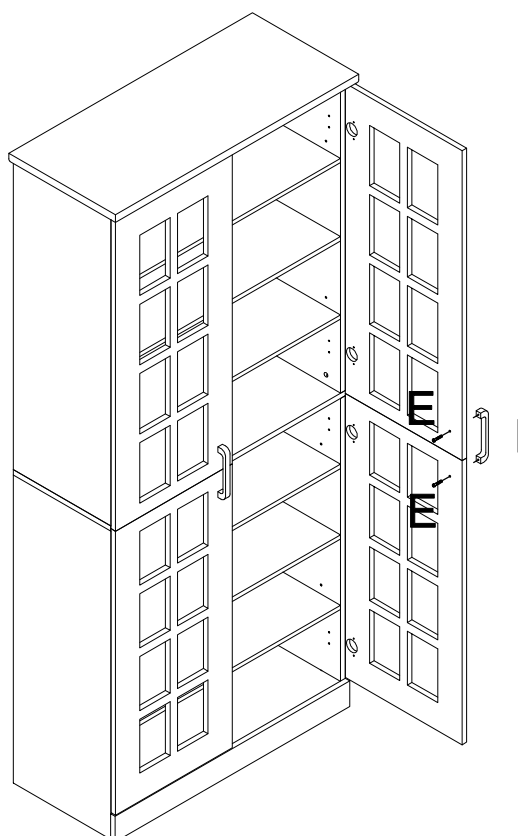


I	E
 96# 1 pc	 Ø4X18MM 2 pcs




25

Step 1
Open the door.

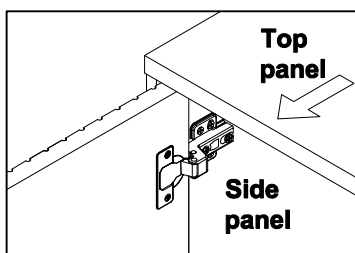



TO ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).

Step 2
Adjust the door panel to be flush with side panel and top panel edge.

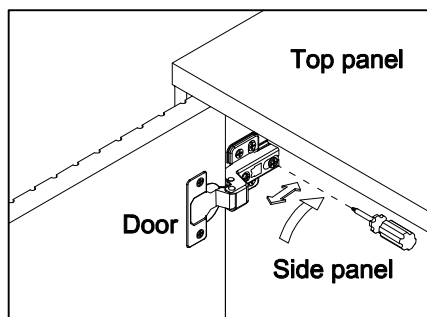



Loosen the screw indicated a little, adjust the hinge to right position (see step 2a & 2b), then tighten the screw.

Step 2a MOVE DOOR OUT

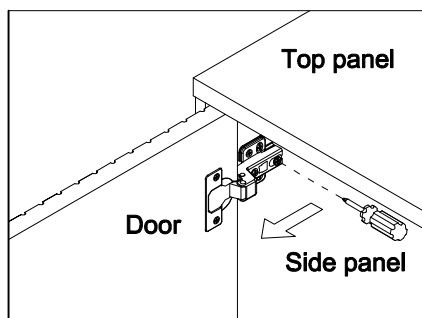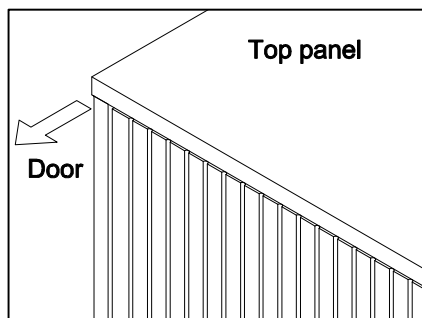


Pull the hinge forward a little.

Step 2b MOVE DOOR INSIDE

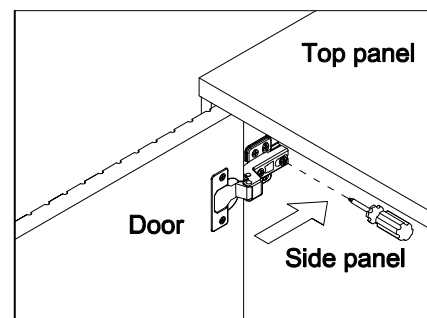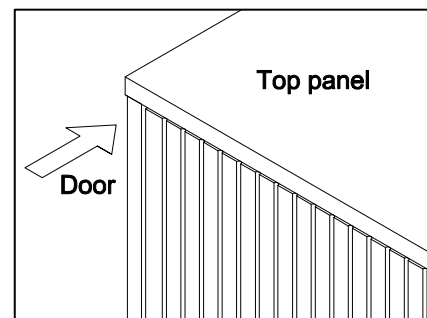



Pull the hinge back a little.

Step 3
Adjust the gap between door panel and side panel.

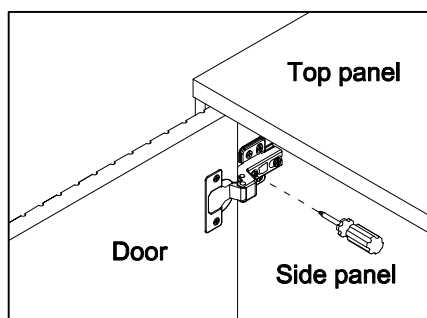



Loosen or tighten the screw indicated a little to adjust the gap between the door panels, adjust the hinge to right position (see step 3a & 3b).

Step 3a MOVE DOOR LEFT

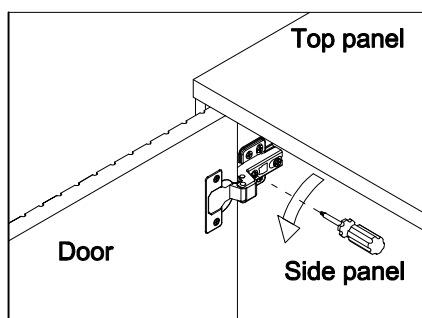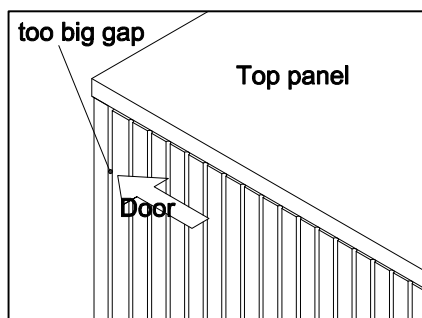

Turn the screw clockwise a little as shown to make the gap small.

Step 3b MOVE DOOR RIGHT

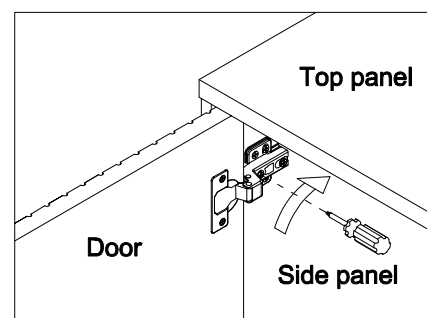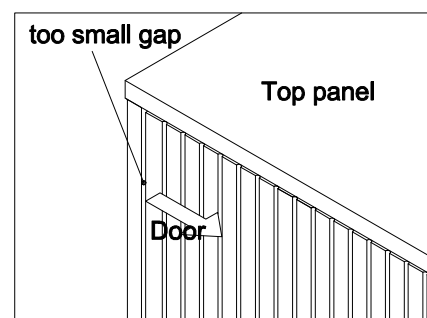



Turn the screw counterclockwise a little as shown to make the gap big.



26

K

1 pc

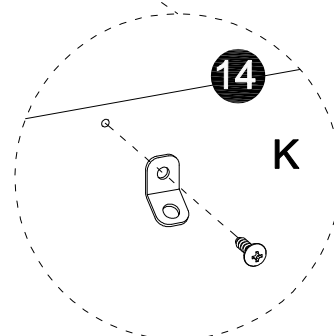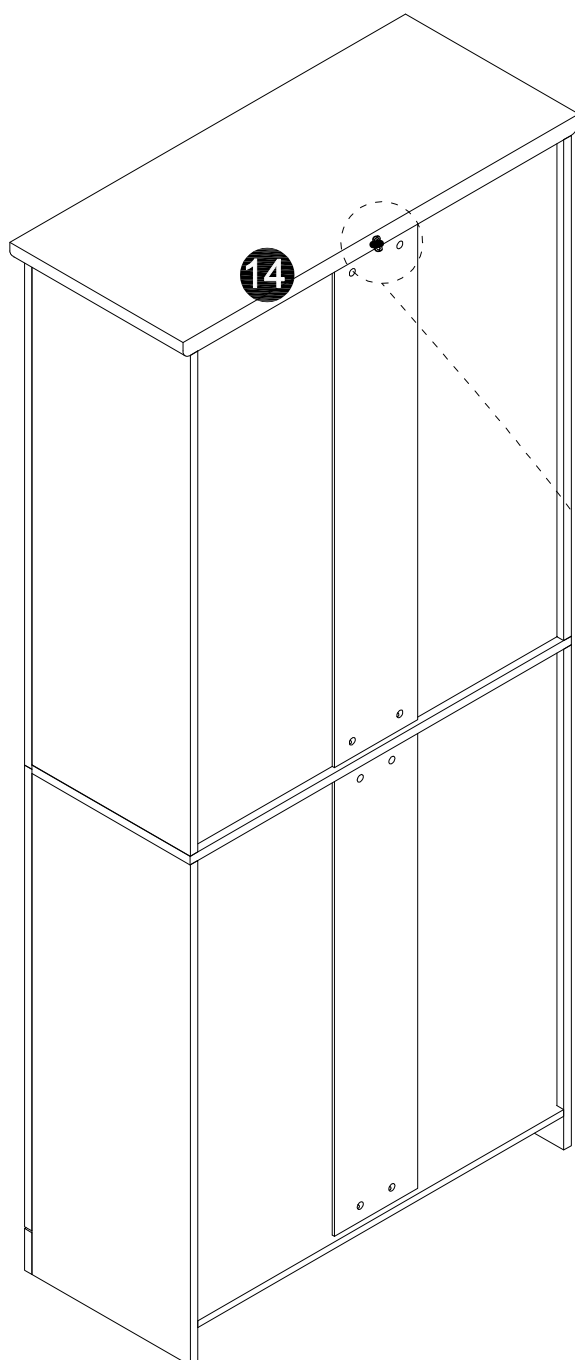





27

Wall


Step1



Step2

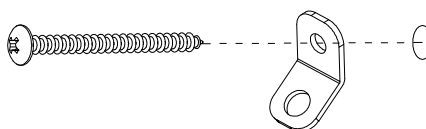


Step3

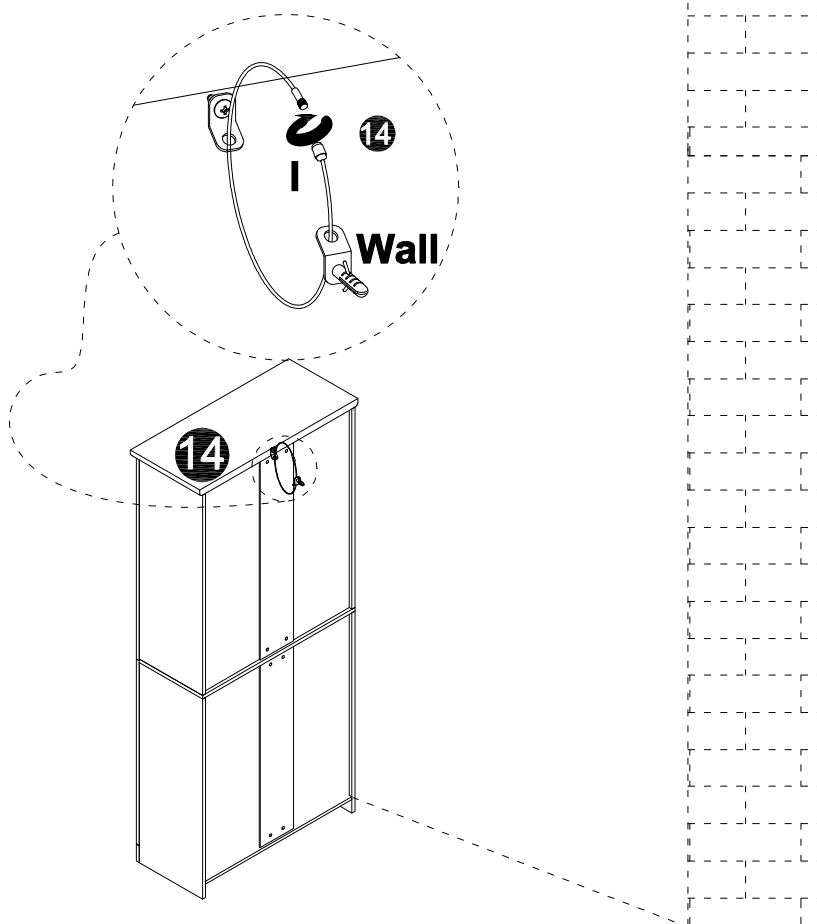



DESIGNED FOR LIFE

Thank you for your support!

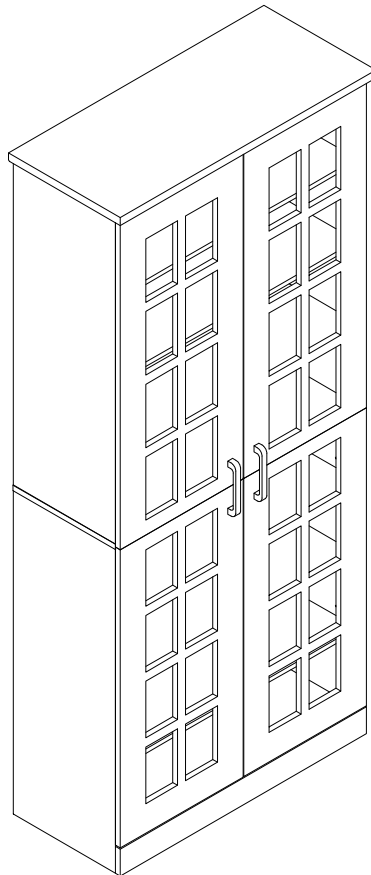

Contact our customer service team



support@tribesigns.com
www.tribesigns.com



1-424-220-6888
7 AM to 8 PM EST,
Monday to Friday

Follow Tribesigns



Facebook



Instagram




Pinterest



Twitter



YouTube

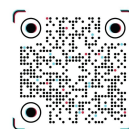

TikTok



WhatsApp