ASSEMBLY INSTRUCTIONS

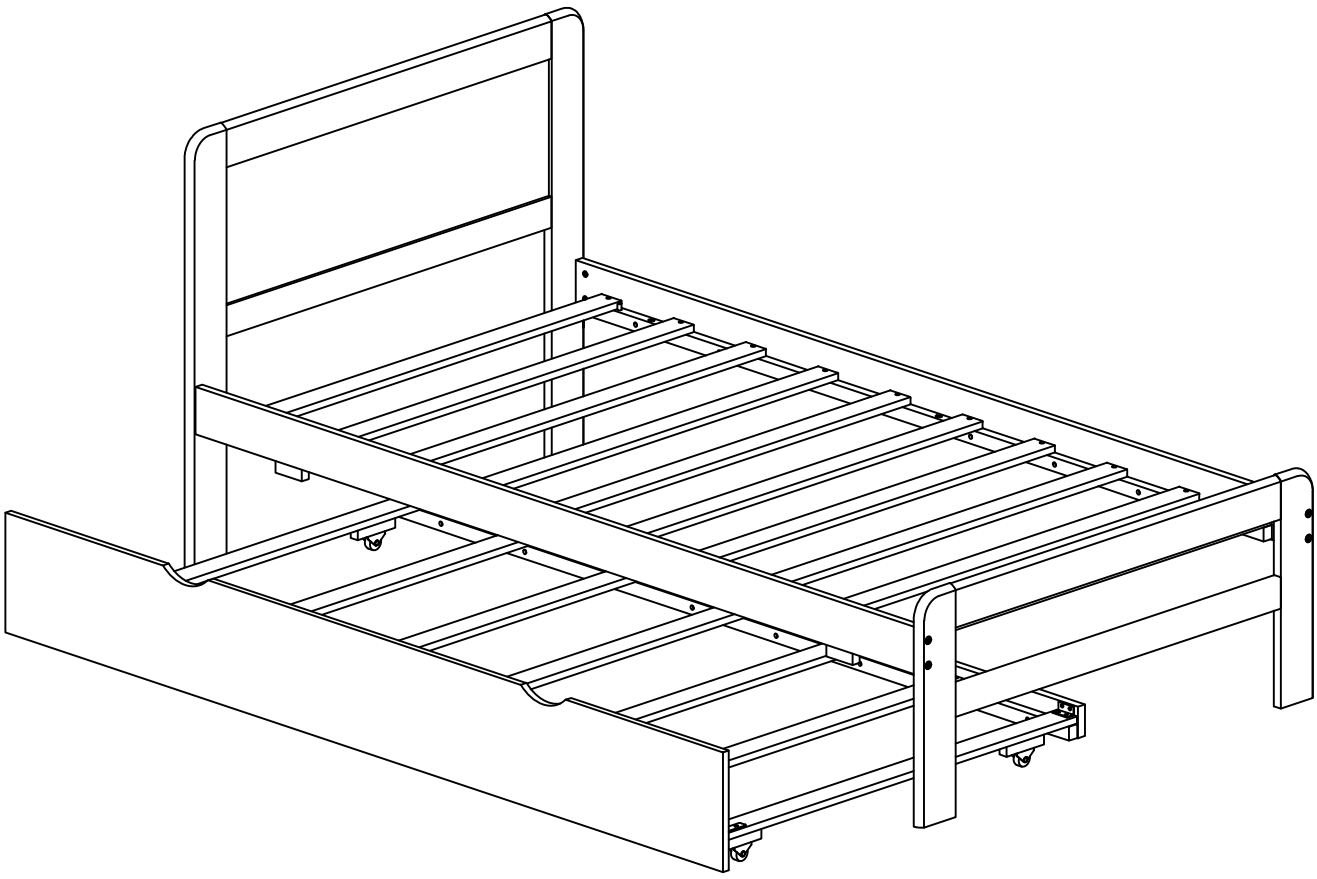

Detail View

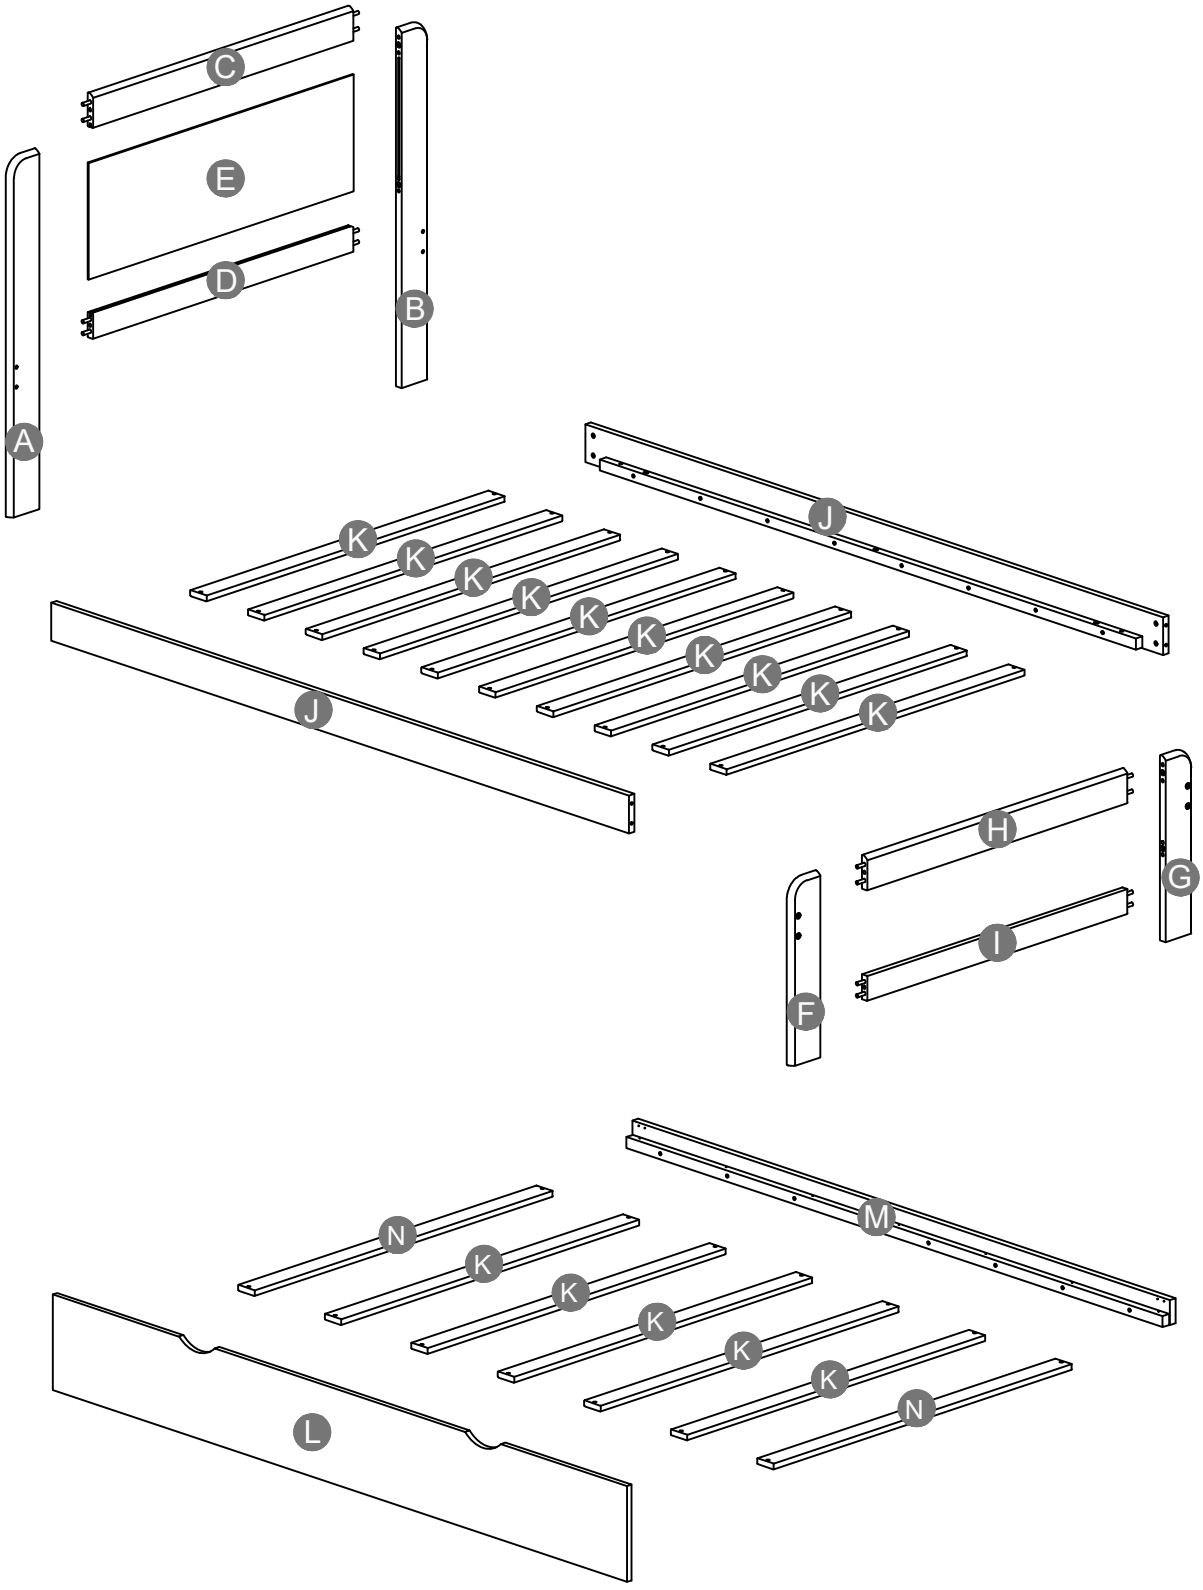

Part List

A Headboard leg (Left)-1pc	**B**  Headboard leg (Right)-1pc	**C**  Horizontal upper bar HB-1pc
D  Horizontal bottom bar HB-1pc	**E**  Headboard panel-1pc	**F** Footboard leg (Left)-1pc
G  Footboard leg (Right)-1pc	**H**  Horizontal upper bar FB-1pc	**I**  Horizontal bottom bar FB-1pc
J Side rail-2pcs	**K** Slat-10pcs + Trundle Slat-5pcs	**L**  Trundle front panel - 1pc
M Trundle back panel-1pc	**N** Trundle Slat-2pcs	

Hardware List

1 (Spare Hardware-1pc) 1/4"*9.8*5mm	**2** (Spare Hardware-1pc) 1/4"*89mm	**3** (Spare Hardware-1pc) Ø8-28*14*7mm
Hexagon Nut (9pcs)	All thread bolt(9pcs)	Curved washer(9pcs)
4 (Spare Hardware-1pc)  (Ø12)1/4"*55mm	**5** (Spare Hardware-1pc) 1/4"*15mm	**6** (Spare Hardware-4pcs) Ø4*25mm
Hex-Head bolts (11pcs)	Horizontal-Hole bolts(9pcs)	Wood screws (46 pcs)
7  Ø8*25mm	**8**  (1/4")4*60mm	**9**  88*22*2mm
Wood dowel (6pcs)	Allen key (1pc)	Wrench (1pc)
10  120*120*18*2mm	**11**  35*18*18*2mm	**12** (Spare Hardware-2pcs)  Ø4*12mm
Metal bracket (2pcs)	Metal bracket (2pcs)	Wood screws (18 pcs)
13 100*62*19mm	**14**  70*38*19mm	
Wheels (4pcs)	Stopper (2pcs)	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

 (Phillip head screwdriver)

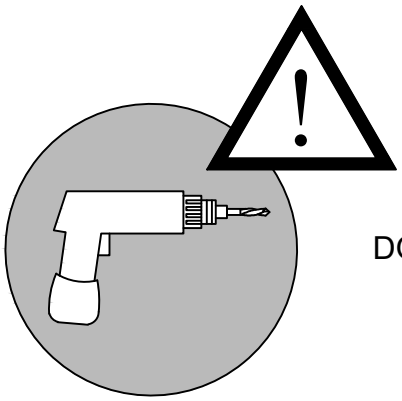

DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT !

Remark: We recommend you assemble your bed in the flat ground.

STEP 1:

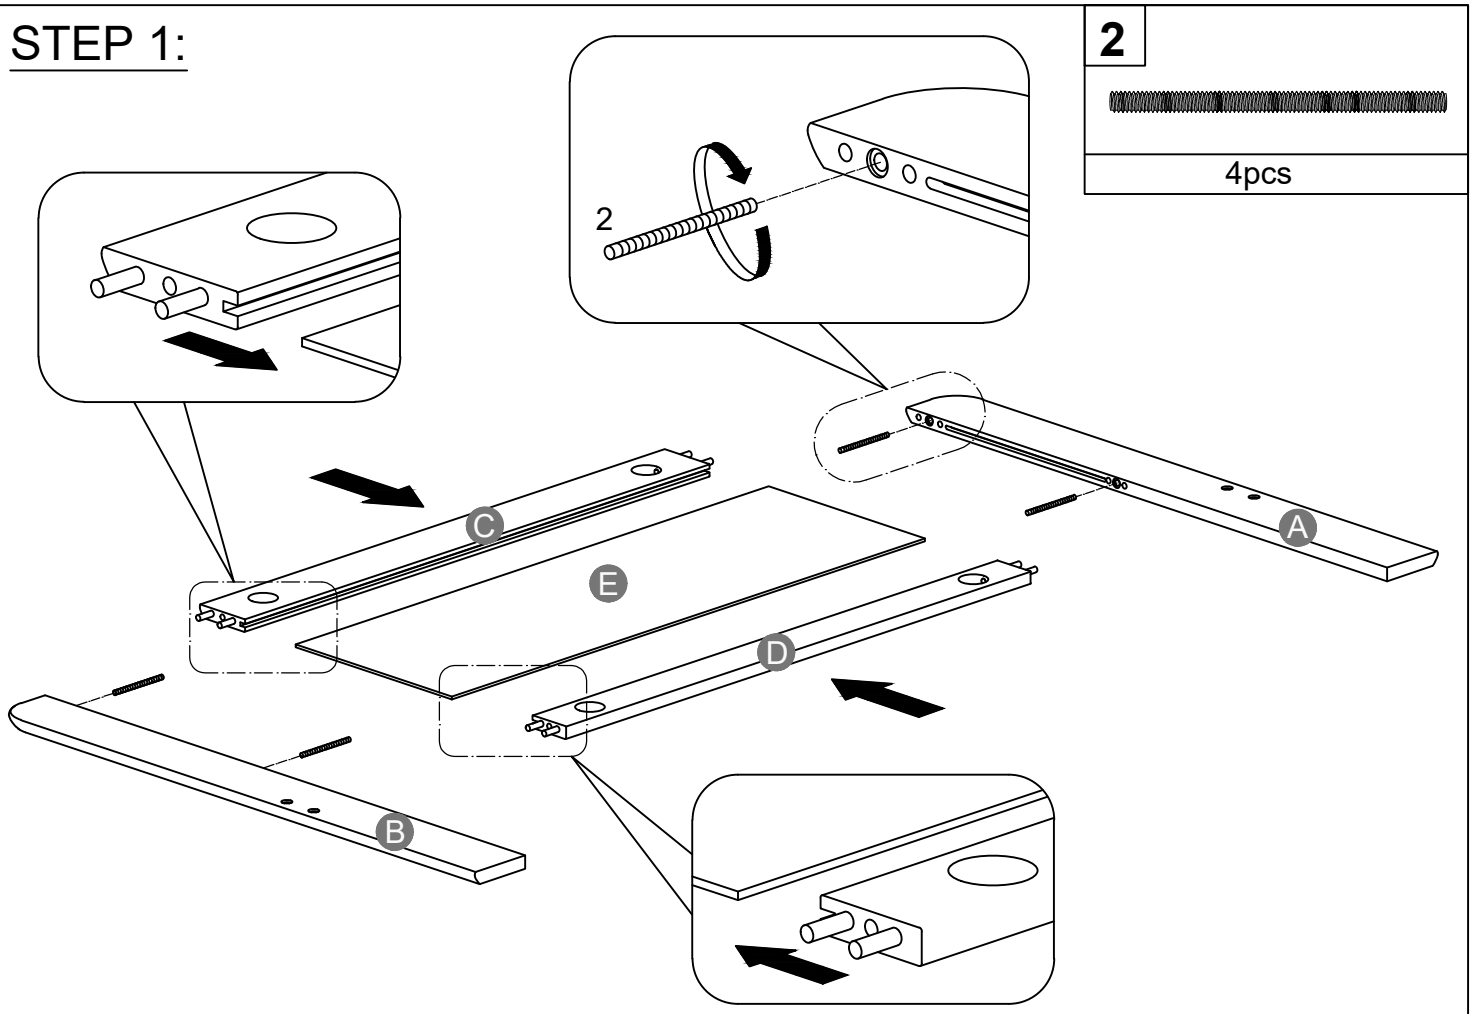

STEP 2:

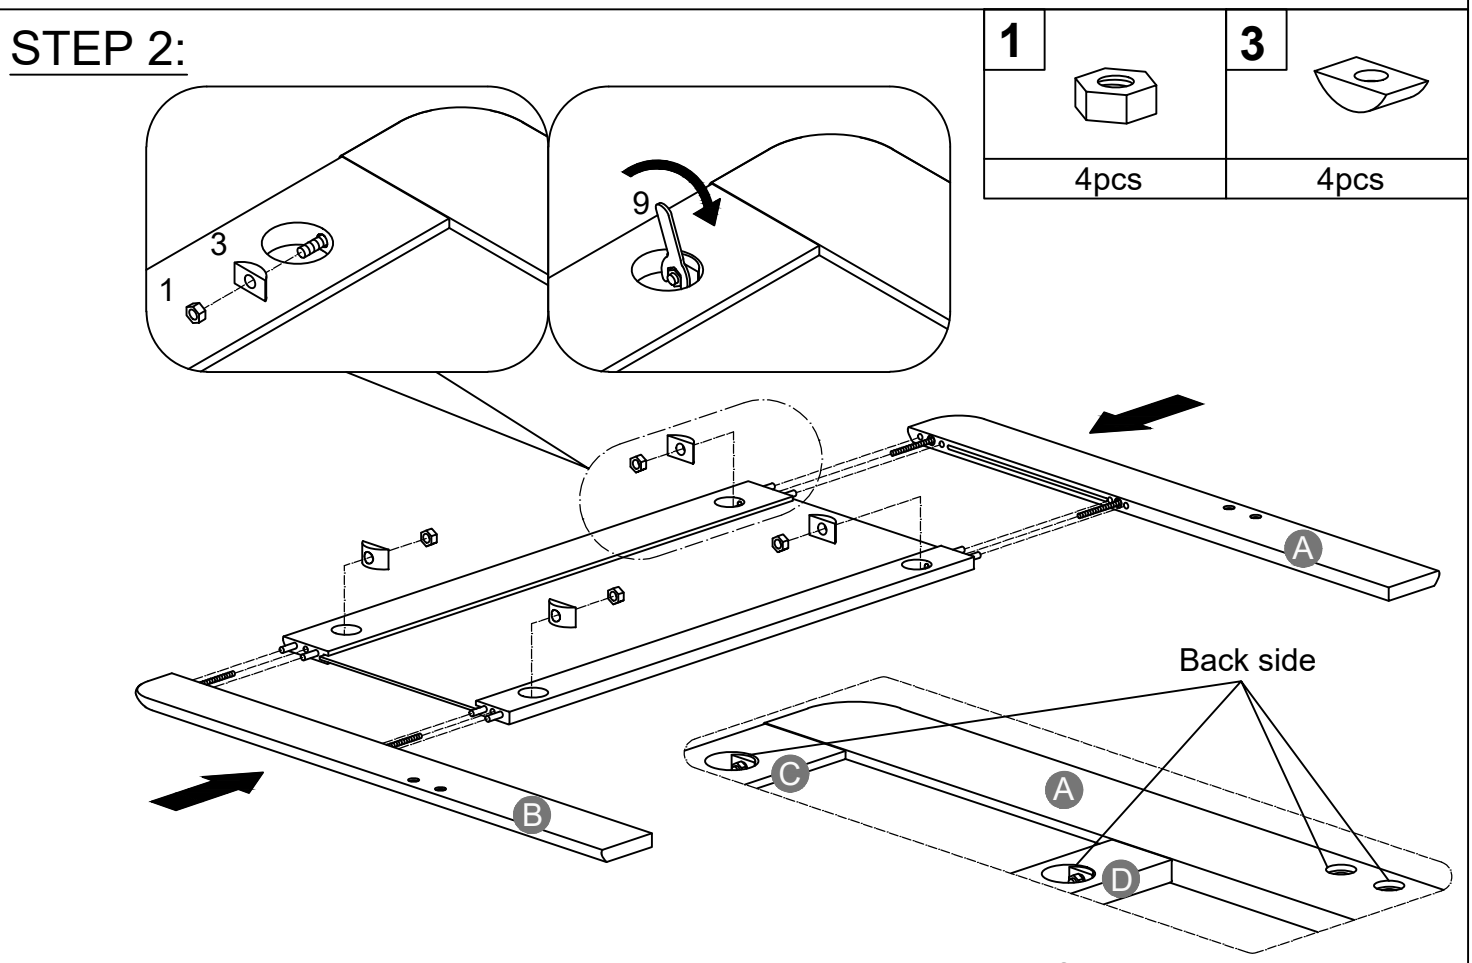

Make sure bars A,B,C,D are connected together on the same side (front-front, back-back)

STEP 3:

2
4pcs

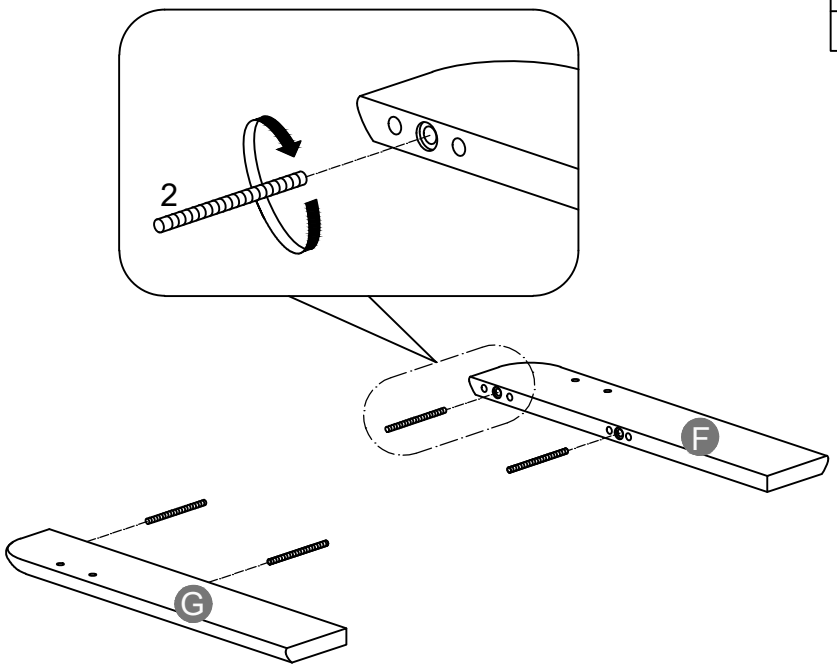

STEP 4:

1	3
4pcs	4pcs

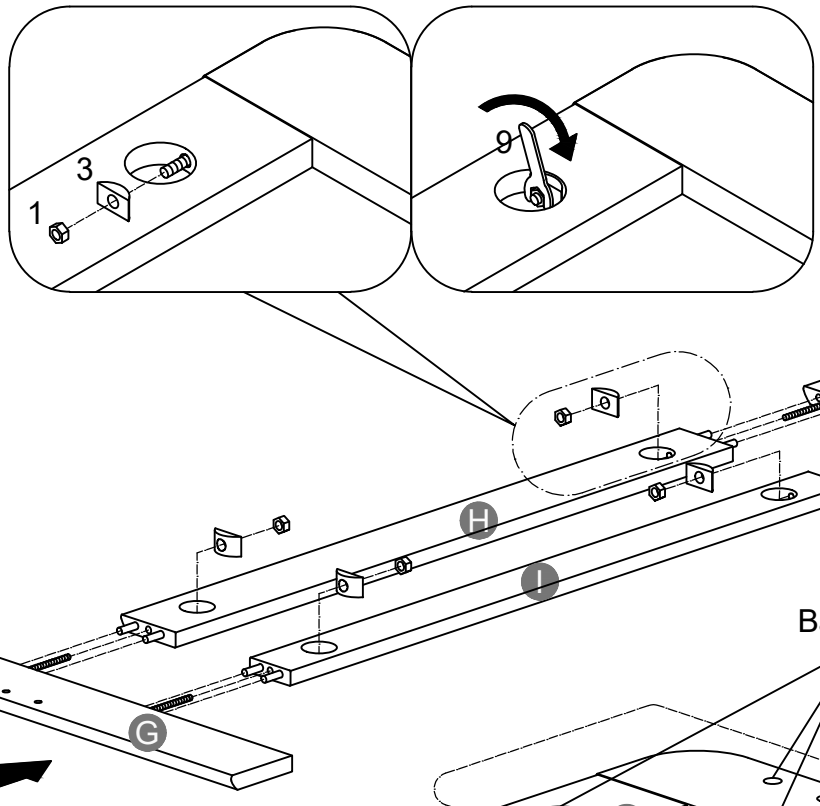

Back side

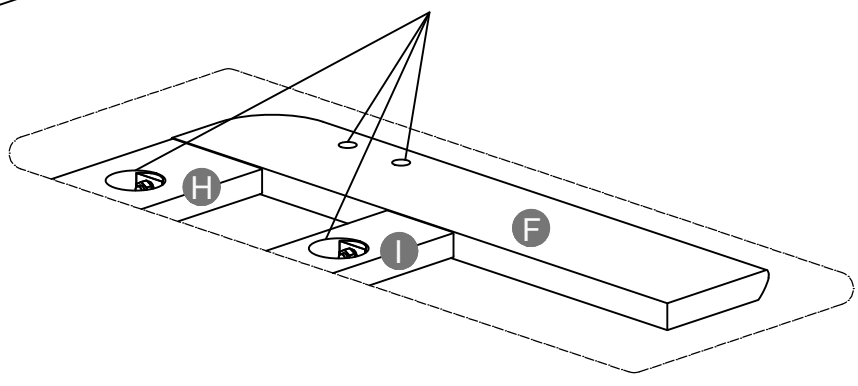

Make sure bars A,B,C,D are connected together on the same side (front-front, back-back)

STEP 5:

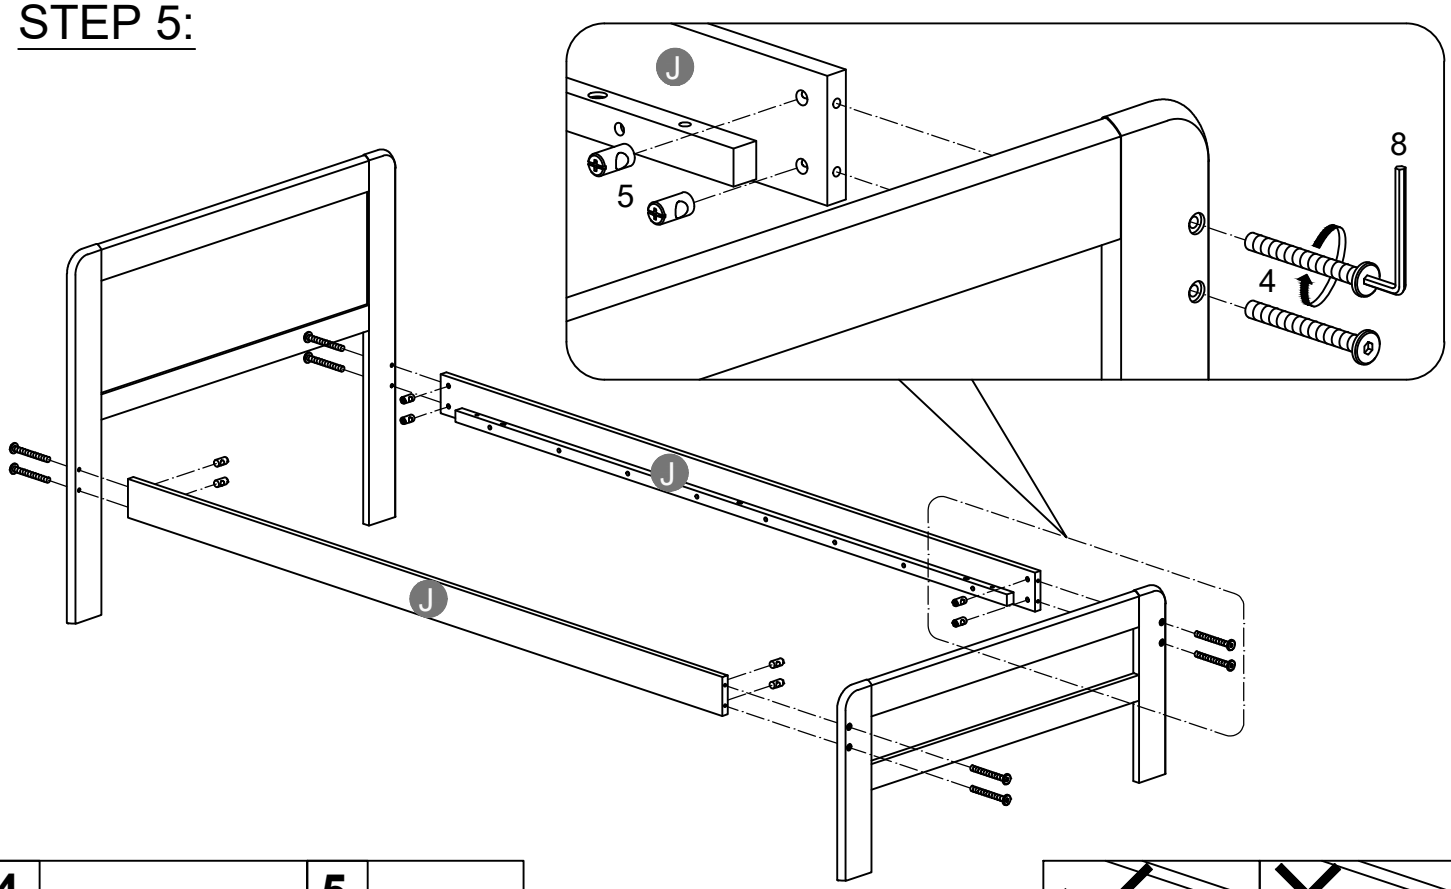

4	5
(Ø12)1/4"*55mm	
8pcs	8pcs

Note:Part 5 will face up with the "x" mark on it, otherwise it cannot be tightened

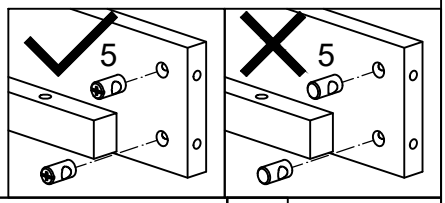

STEP 6:

6	7
20 pcs	4pcs

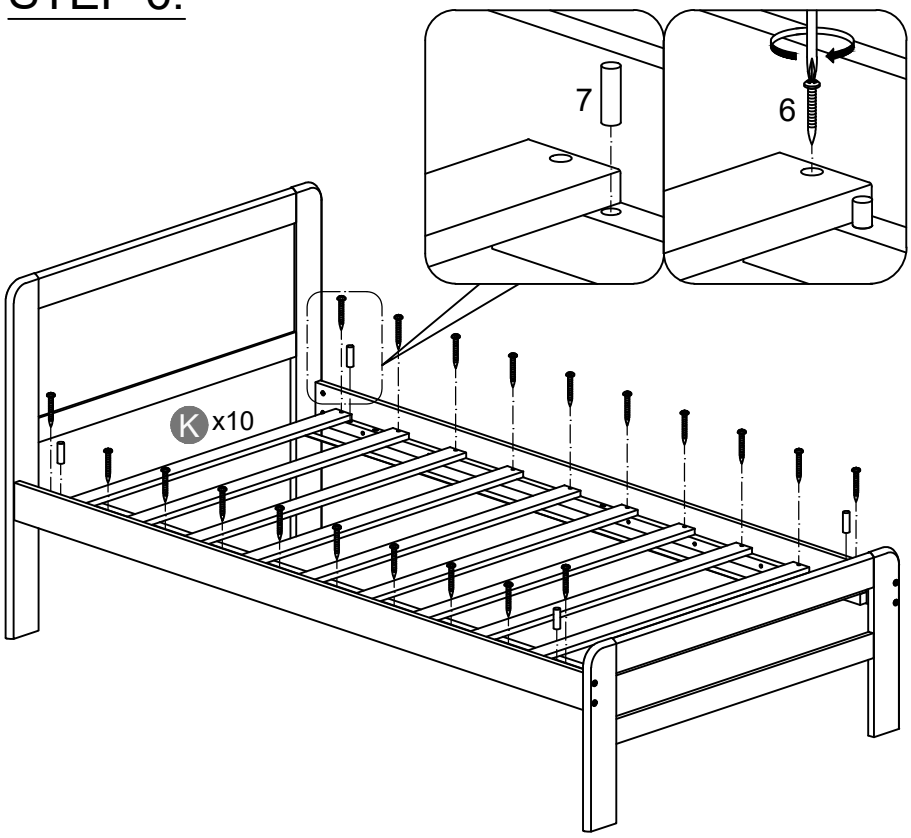

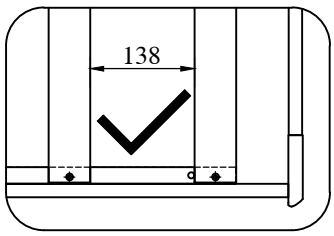

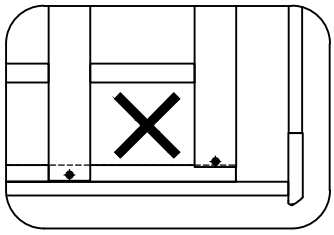

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

STEP 7:

6	13
8 pcs	4pcs

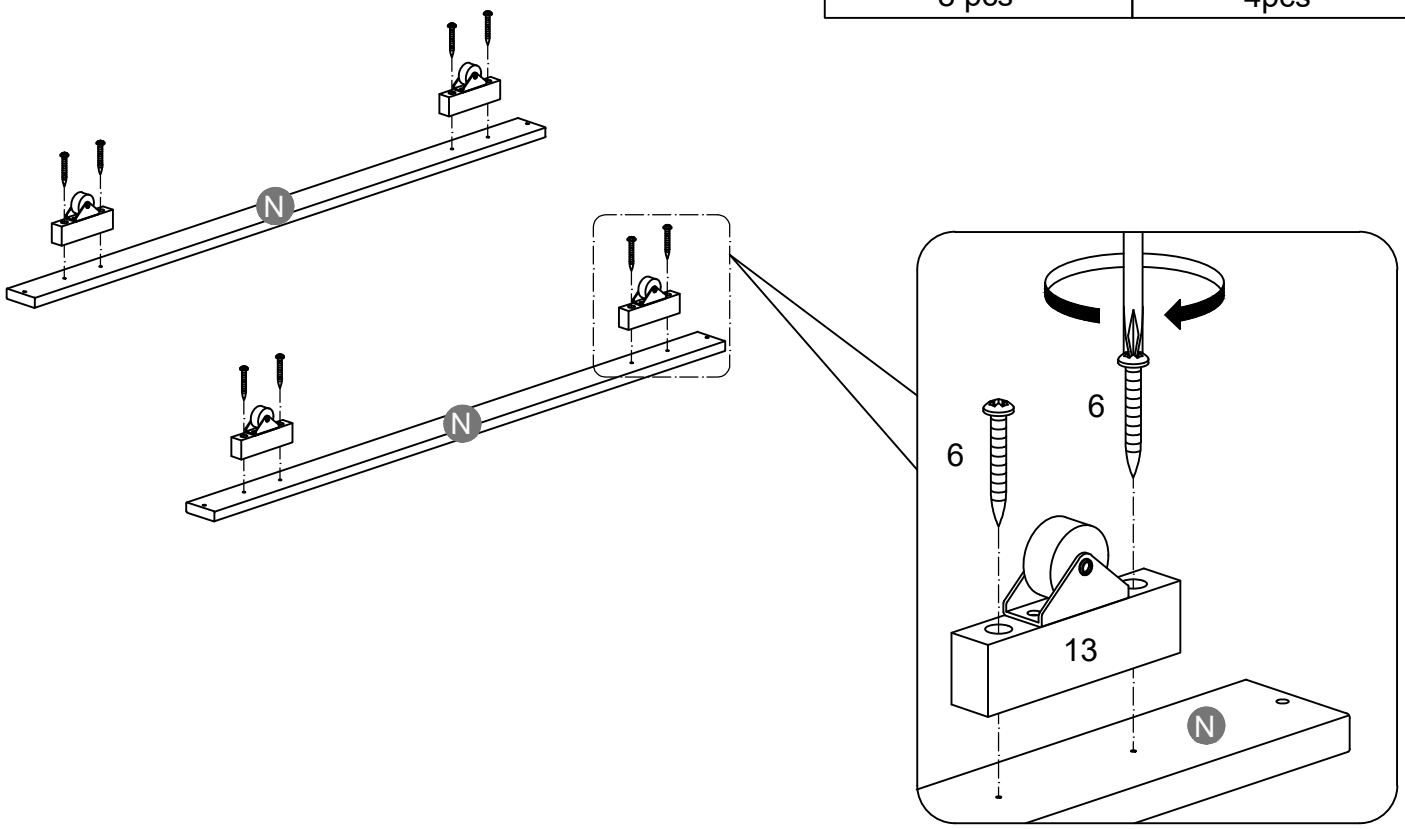

STEP 8:

6
14 pcs

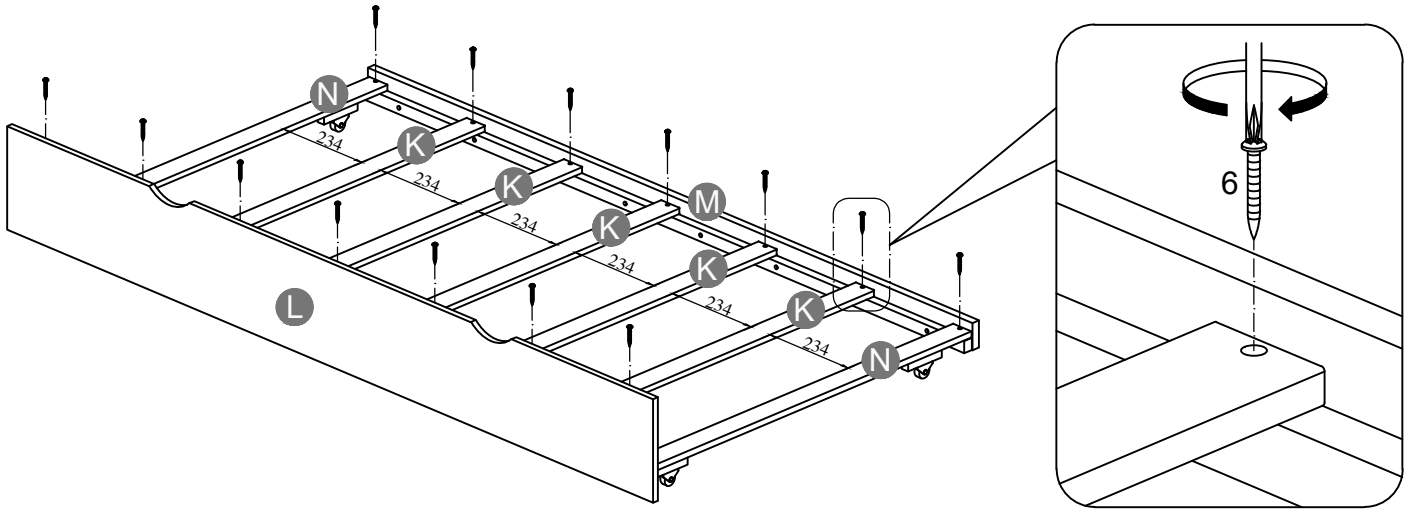

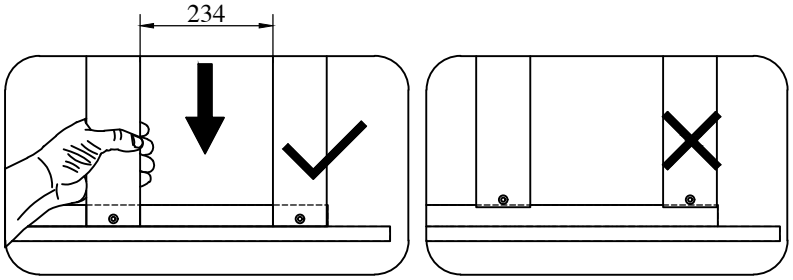

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw

STEP 9:

10	12
2pcs	8 pcs

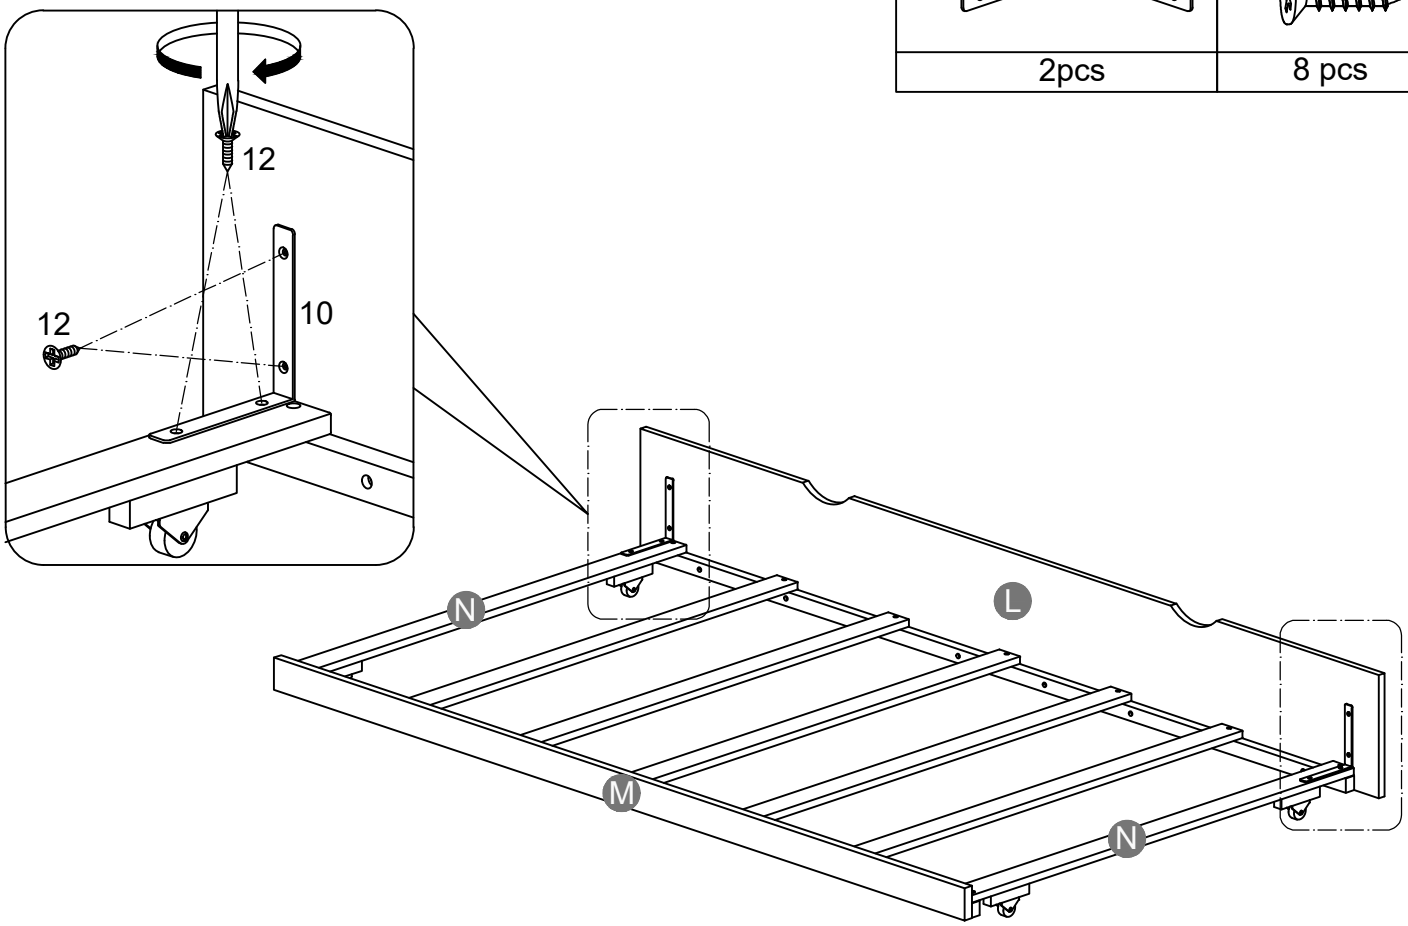

STEP 10:

11	12
2pcs	8 pcs

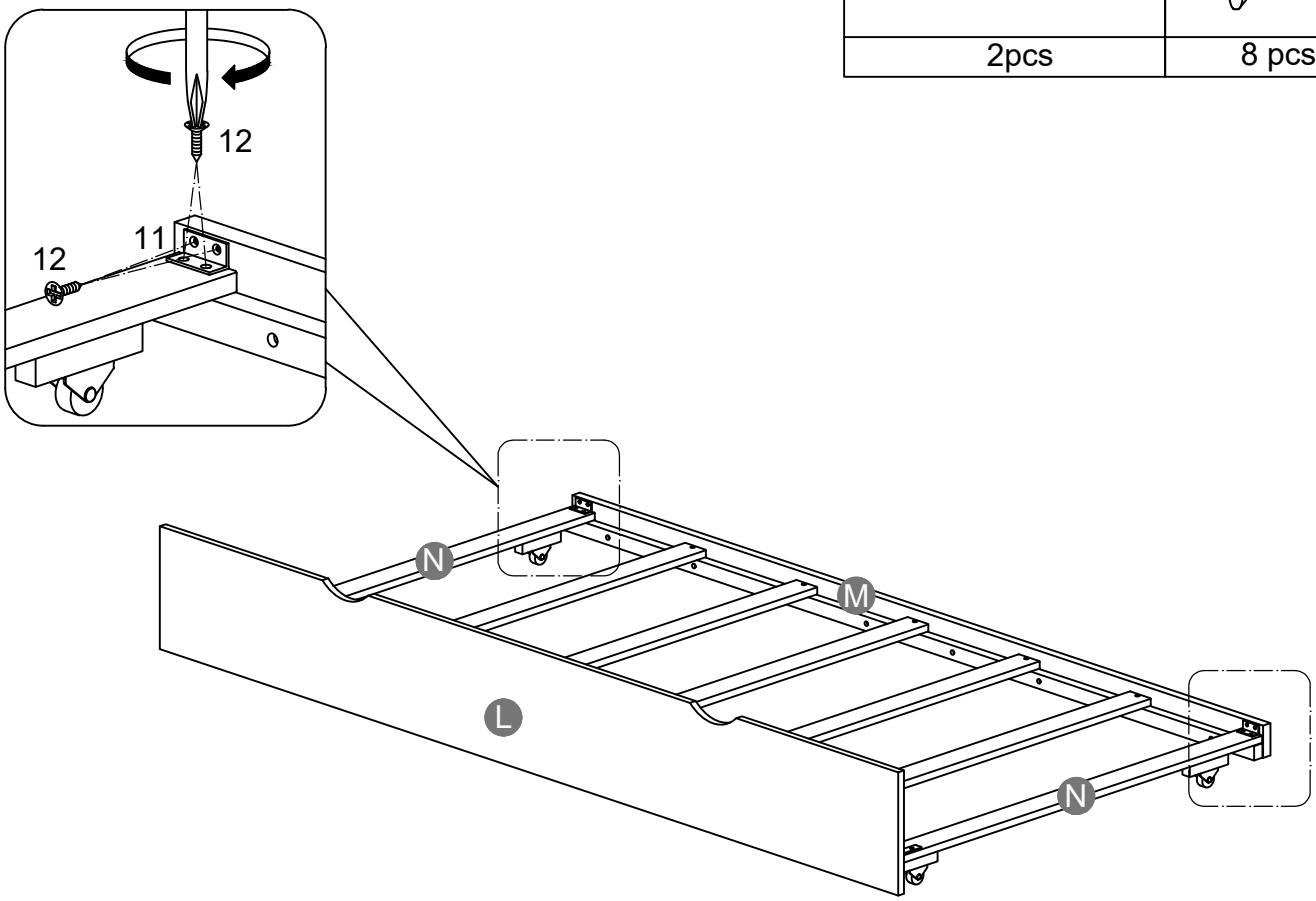

STEP 11:

4	
(Ø12)1/4"*55mm	
2pcs	
7	14
2pcs	2pcs

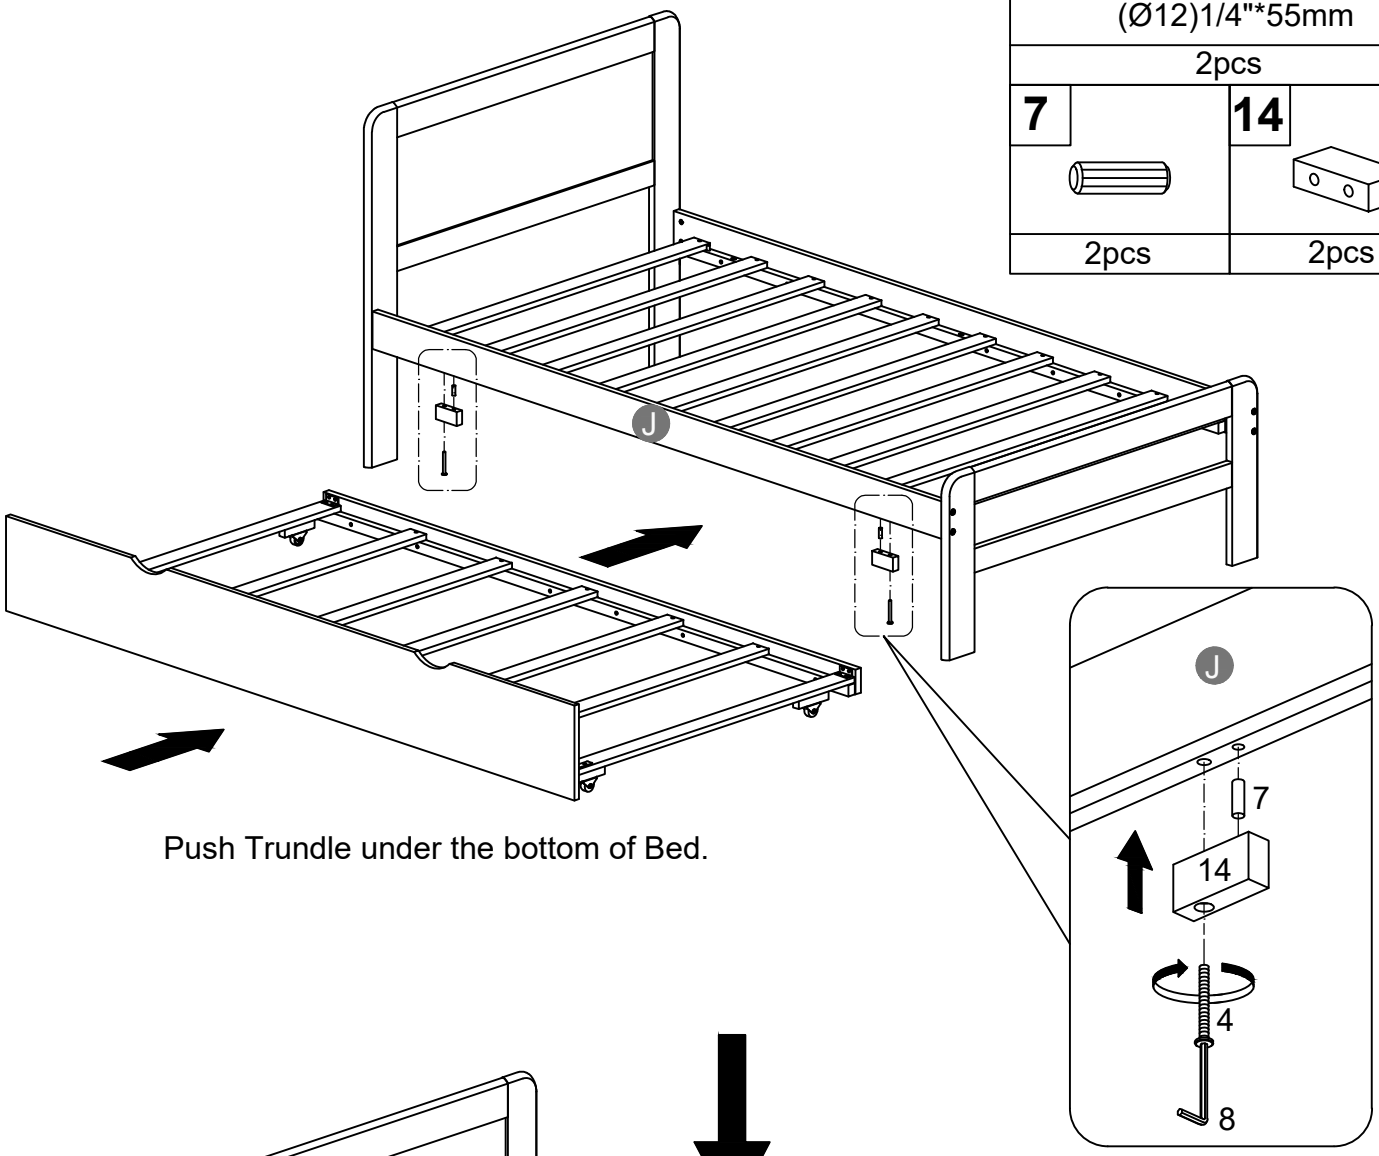

Push Trundle under the bottom of Bed.

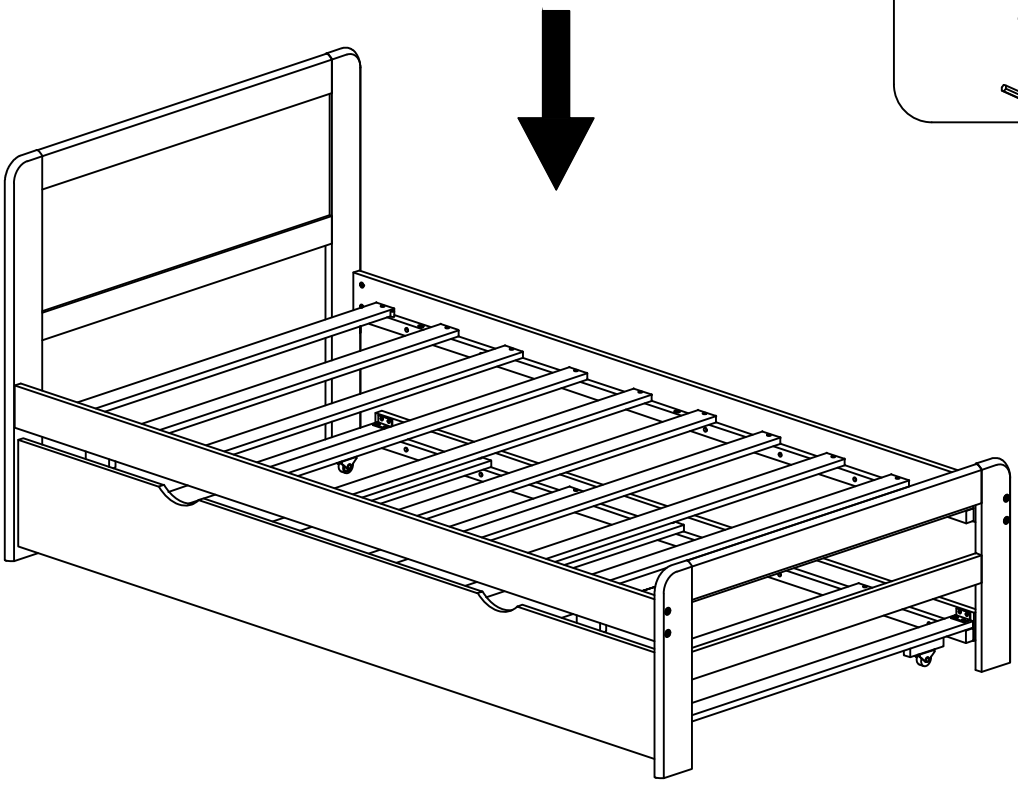

Make sure to tighten all the screws of the bed.