

Instruction Manual

33010

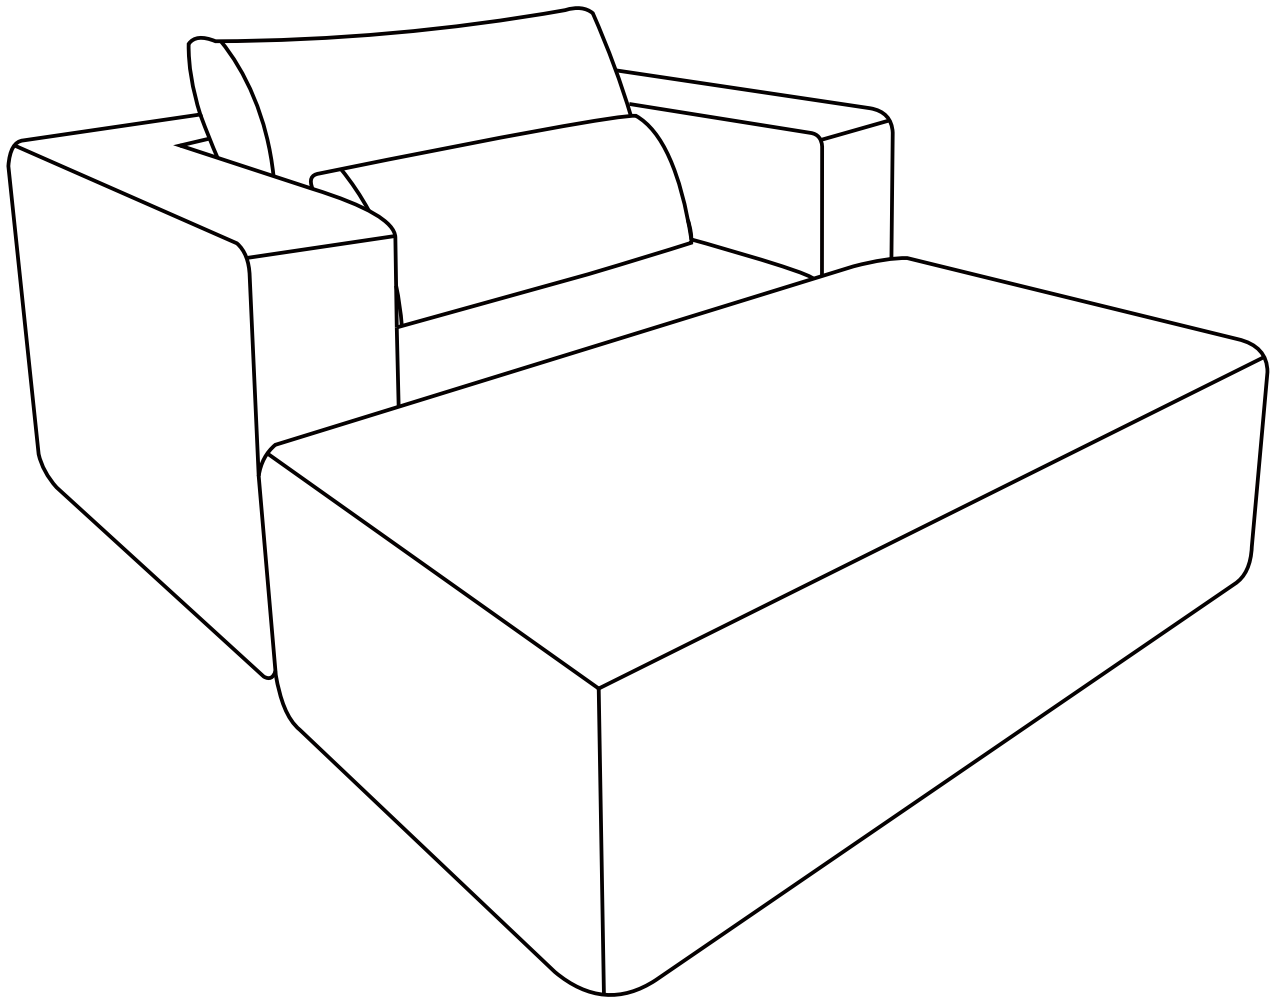

PART LIST:

①Compact sofa

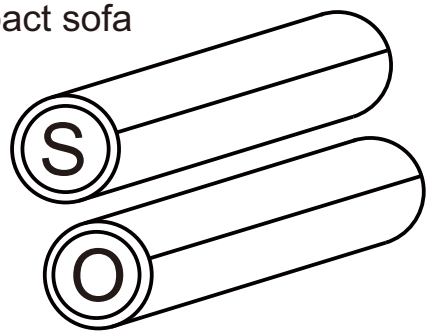


②Membrane-cutting knife




INSTALLATION STEPS:


Step 1:
Use the membrane-cutting knife ②
to cut through the first layer of the outer packaging film.

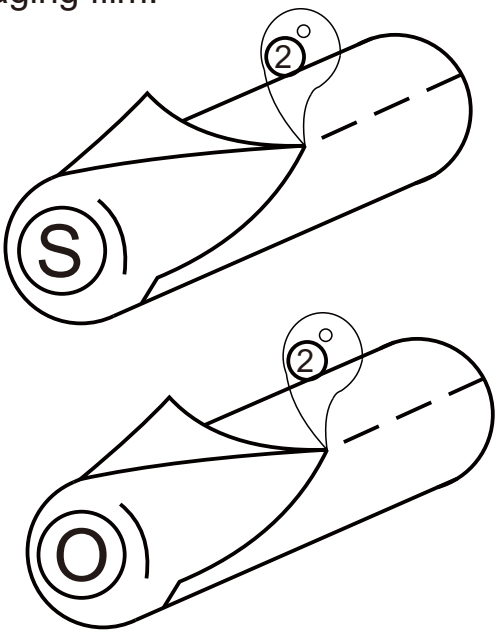

Step 2:
Lift the sofa flat and place it face up.

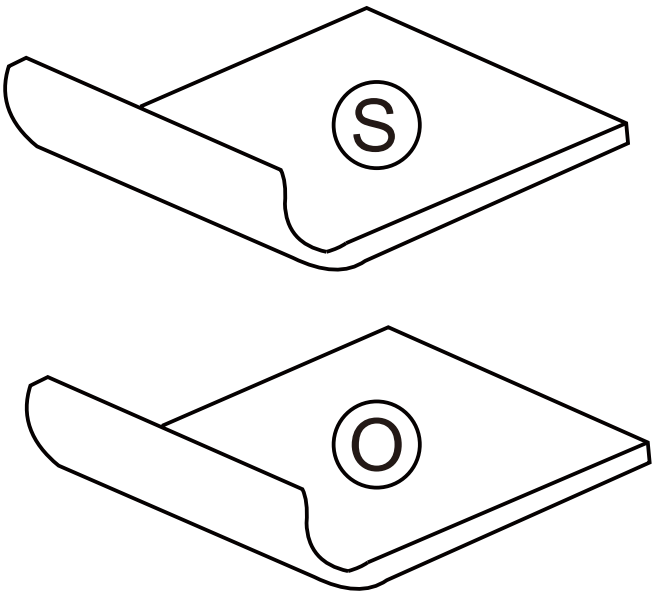

Step 3:
Use the membrane-cutting knife ②to cut through the vacuum compression membrane.

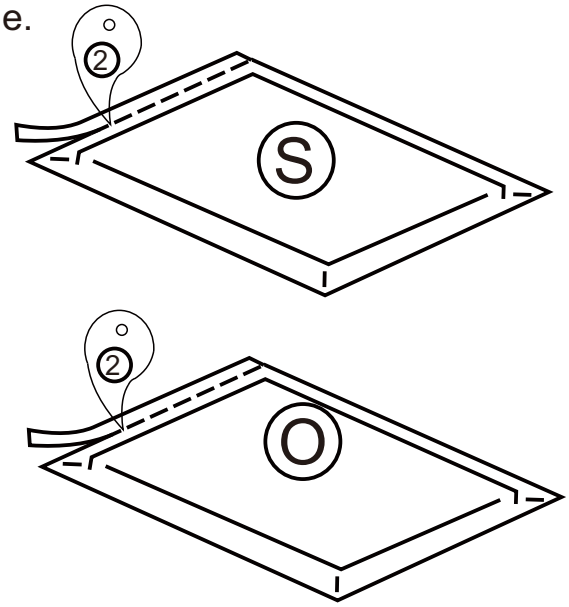

Step 4:
Wait for the sofa to fully rebound.

