



Drawer Installation Instructions

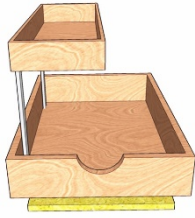


12 inch Width by 18 inches Depth. Designed as 2 layer drawer. The small upper box can be installed on the left or right sides.

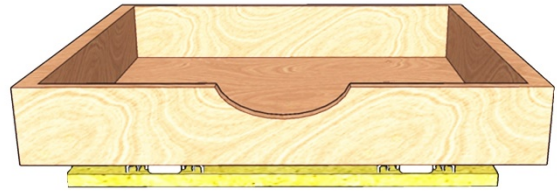

26 inches Width by 18 inches Depth. Designed as the base drawer. **Not including the small upper box.**


How to Install:

Press the black lever and then pull the rail to separate it from the drawer rail

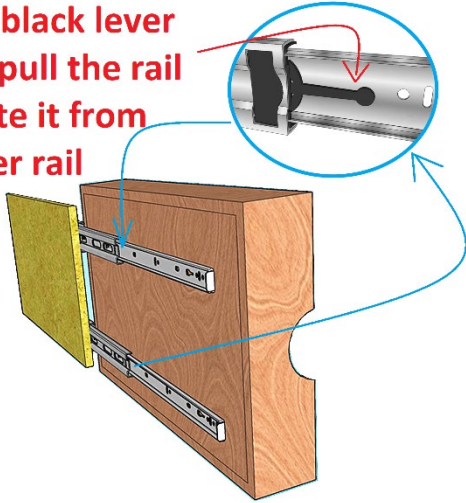

Step 1

Separate the Bottom support Plate from the Drawer assembly. (Pull the black lever down on both sides, then pull the rail to disassemble the rails, Please refer to the picture)

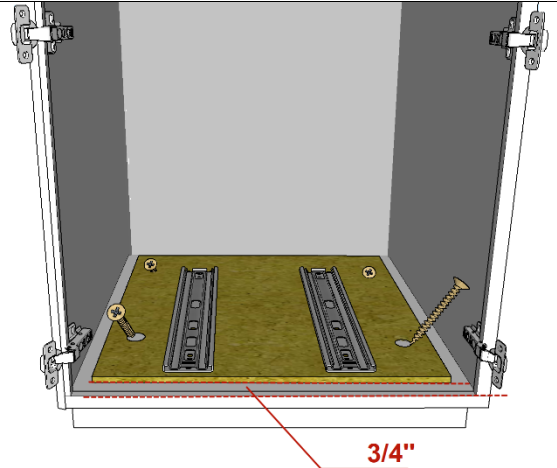


Step 2

Place the Bottom support Plate $\frac{3}{4}$ inches behind the front edge of the Cabinet. Fasten it to the cabinet with **1- $\frac{1}{4}$ inch screws** (Yellow color) through the pre-drilled holes.

Step 3


Insert Drawer onto Bottom support Plate and slide back until you hear a click noise.

Use 1/4" Long Screws (very short Nickel color Finish)

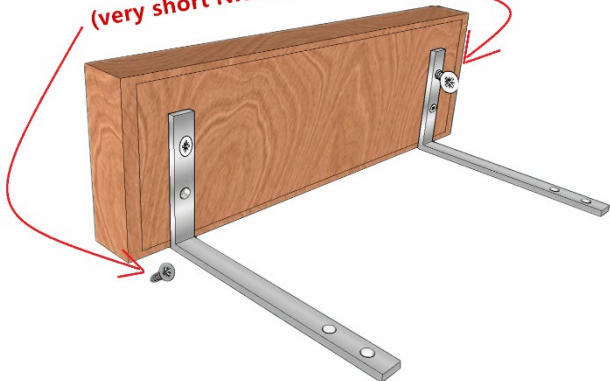

Optional a) Line up the metal L-brackets on the pre-drilled holes at the bottom of the small box. You need to screw it in using $\frac{1}{4}$ inch screws (very short Nickel color finish)
**** Please ensure to use the correct $\frac{1}{4}$ inch long screw here to prevent the screw from penetrating the box.**

Use 1/2" Long Screws (silver color)

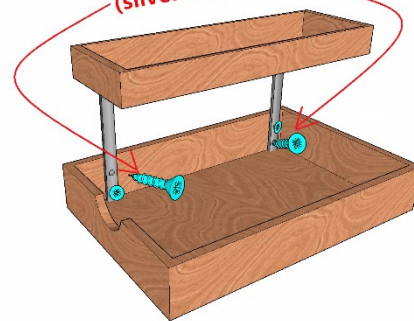

Optional b) Line up the Metal L-brackets on either left or right side of the bigger box. (Pre-drilled holes on both sides) depending on the obstructions in the cabinet.
**** Please ensure tighten with $\frac{1}{2}$ inch Long screws.**