

# ChooChoo

2-Drawr Console Table  
ST180005,ST180005-2,ST180005-3



[www.choochoofurniture.com](http://www.choochoofurniture.com)

## Assembly Instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.




Please do not return to the store  
Broken or missing Hardware?  
Need help with Assembly?  
If you have any questions just email us at  
[service@choochoofurniture.com](mailto:service@choochoofurniture.com)















Find more services please visit  
[www.choochoofurniture.com](http://www.choochoofurniture.com)

















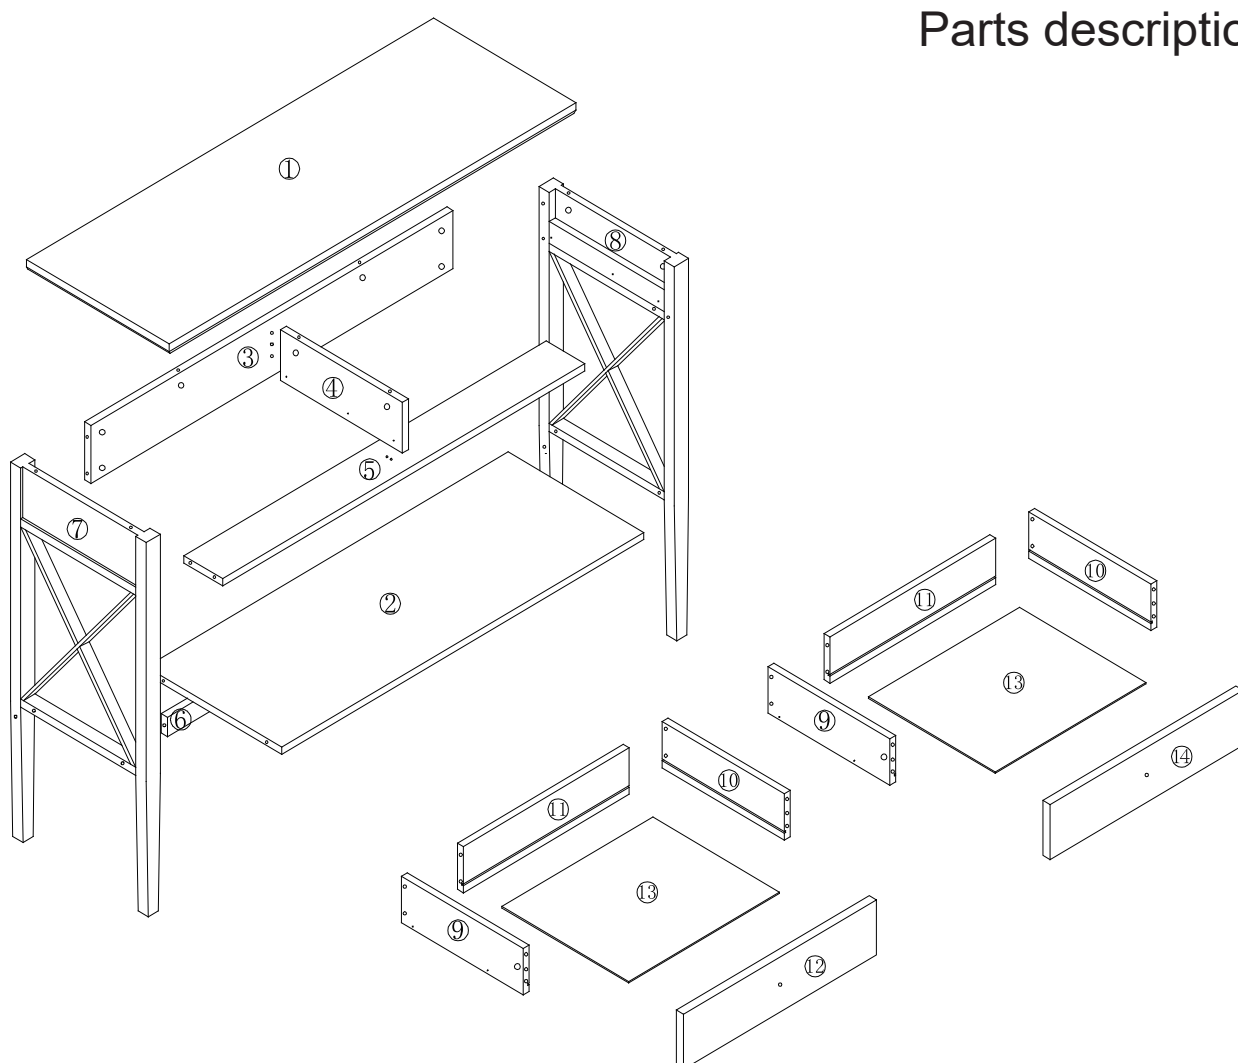


Completed assembly

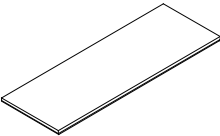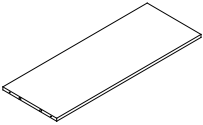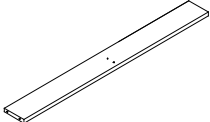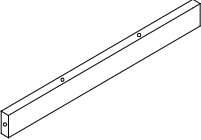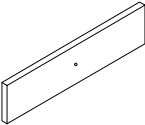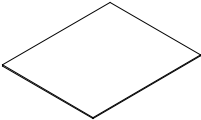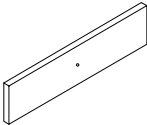



Parts description
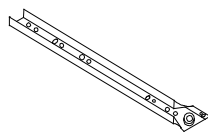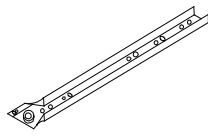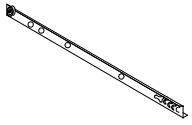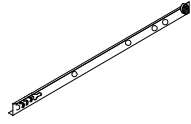
<p>①</p>  <p>Top Panel 1 pc</p>	<p>②</p>  <p>Bottom Panel 1 pc</p>	<p>③</p>  <p>Back Support Bar 1 pc</p>	<p>④</p>  <p>Support Bar 1 pc</p>	<p>⑤</p>  <p>Support Bar 1 pc</p>
<p>⑥</p>  <p>Bottom Support Bar 1 pc</p>	<p>⑦</p>  <p>Left Side Panel 1 pc</p>	<p>⑧</p>  <p>Right Side Panel 1 pc</p>	<p>⑨</p>  <p>Left Drawer Side Panel 2 pcs</p>	<p>⑩</p>  <p>Right Drawer Side Panel 2 pcs</p>
<p>⑪</p>  <p>Drawer Back Panel 2 pcs</p>	<p>⑫</p>  <p>Left Drawer Front 1pc</p>	<p>⑬</p>  <p>Drawer Bottom Panel 2 pcs</p>	<p>⑭</p>  <p>Right Drawer Front 1 pc</p>	


<p>A</p>  <p>Cam Bolt                      20 pcs</p>	<p>B</p>  <p>Cam Lock                      20 pcs</p>	<p>C</p>  <p>Wooden Dowel                      8 pcs</p>	<p>D</p>  <p>Screw                      24 pcs</p>	<p>E</p>  <p>Right Glider                      2 pcs</p>
<p>F</p>  <p>Left Glider                      2 pcs</p>	<p>G</p>  <p>Left Slider                      2 pcs</p>	<p>H</p>  <p>Right Slider                      2 pcs</p>	<p>I</p>  <p>Small Bolt                      2 pcs</p>	<p>J</p>  <p>Knob                      2 pcs</p>
<p>K</p>  <p>Screw                      14 pcs</p>	<p>L</p>  <p>Bolt                      6 pcs</p>	<p>N</p>  <p>Lock Nut                      6 pcs</p>	<p>M</p>  <p>Anchor                      1 pc</p>	<p>O</p>  <p>Screw                      1 pc</p>
<p>P</p>  <p>Anti-tip Bracket                      1 pc</p>	<p>Q</p>  <p>Wooden Dowel                      2 pcs</p>			

## Step 1

A  
Cam Bolt 8 pcs

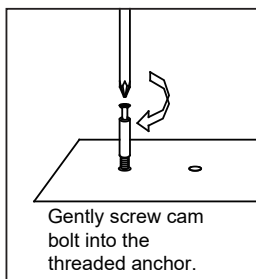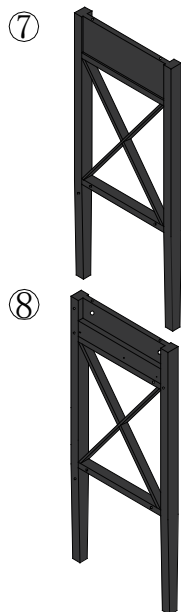

Screw Cam Bolt (A) into Left Panel (7) and Right Panel (8)

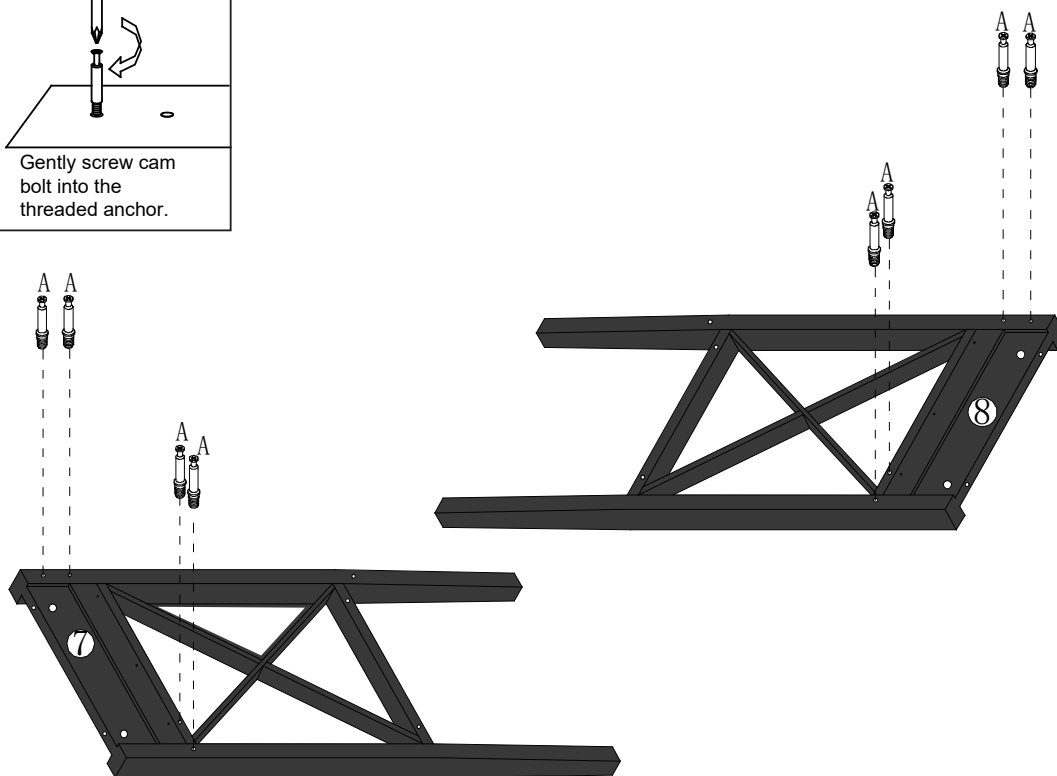



## Step 2

Note: Two gliders are respectively mounted on both sides of the Support Bar (4), take extra care to distinguish two gliders!

D  
Screw 6 pcs

E  
Right Glider 1 pc

F  
Left Glider 1 pc


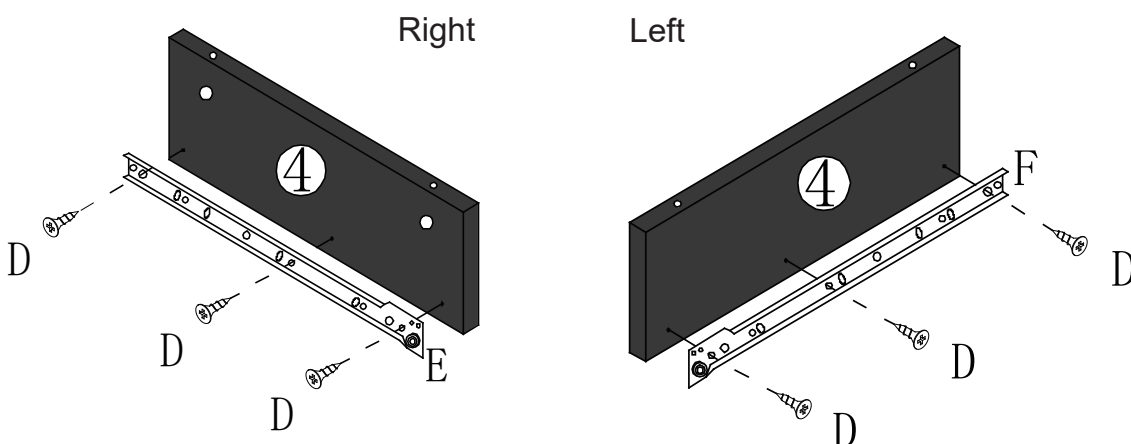
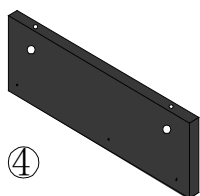


Attach Right Glider (E) and Left Glider (F) to the Support Bar (4) using Screw (D)

## Step 3

K  
Screw 2 pcs

Q  
Wooden Dowel 1 pc

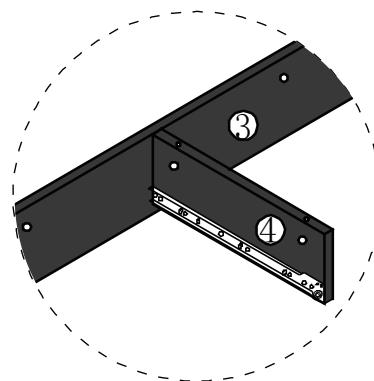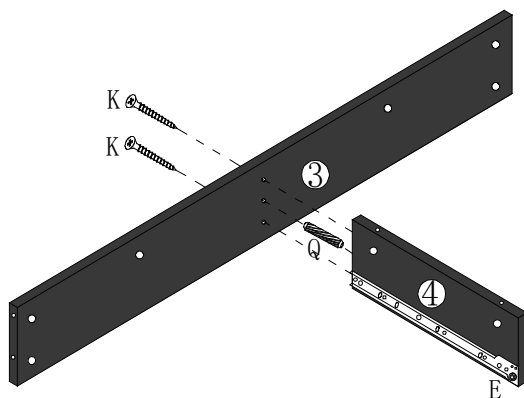
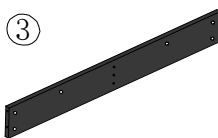


Attach Support Bar (4) to the Back Support Bar (3) using Screw (K) and Wooden Dowel (Q)

## Step 4

K  
Screw 1 pc



Q  
Wooden Dowel 1 pc

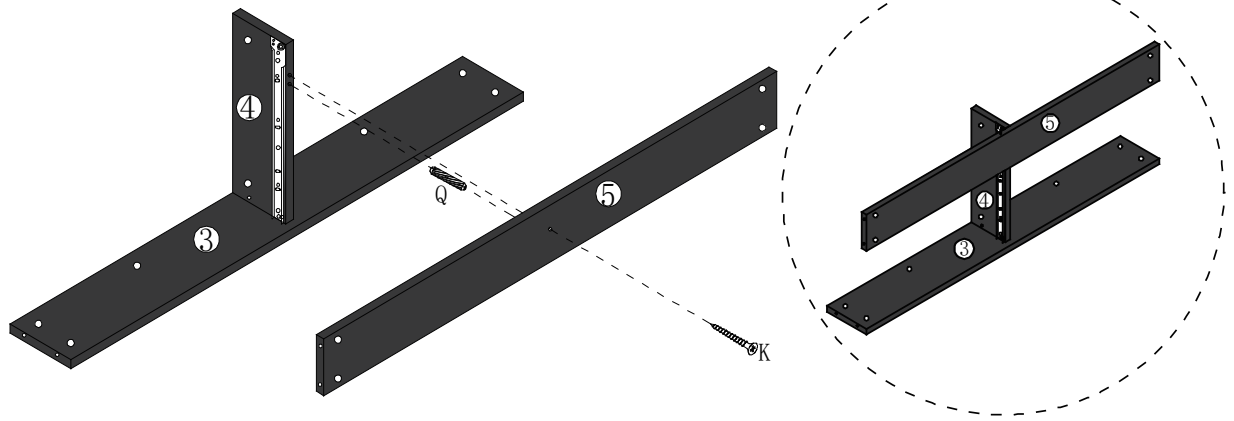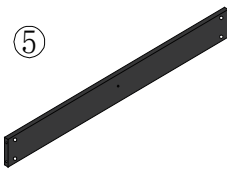

Attach Support Bar (5) to Support Bar (4) using Wooden Dowel (Q) and Screw (K)

## Step 5

K  
Screw 2 pcs

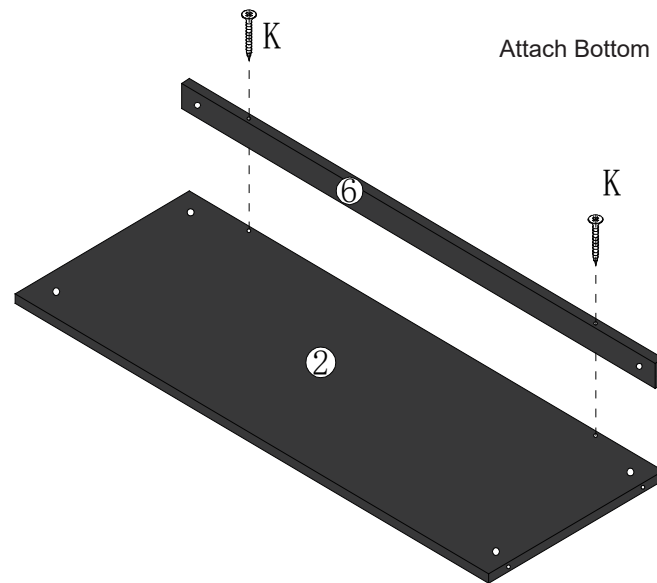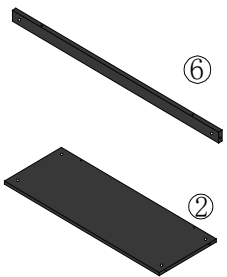



Attach Bottom Support Bar (6) to Bottom Panel (2) using Screw (K)

## Step 6

B  
Cam Lock 4 pcs

L  
Bolt 3 pcs

N  
Lock Nut 3 pcs

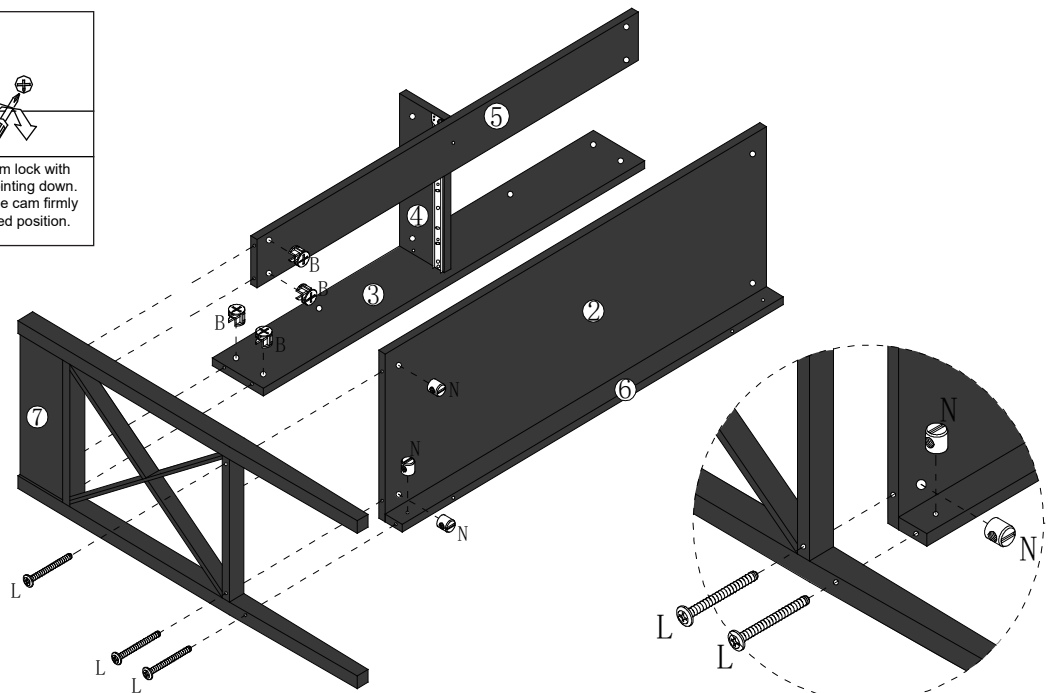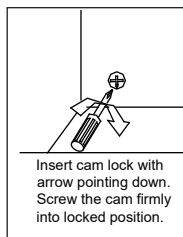

1. Attach Back Support Bar (3) and Support Bar (5) to Left Panel (7) using Cam Bolt (A) and Cam Lock (B)
2. Attach Bottom Panel (2) and Support Bar (6) to Left Panel (7) using Bolt (L) and Lock Nut (N)

## Step 7

B



Cam Lock 4 pcs

L




Bolt 3 pcs

N



Lock Nut 3 pcs

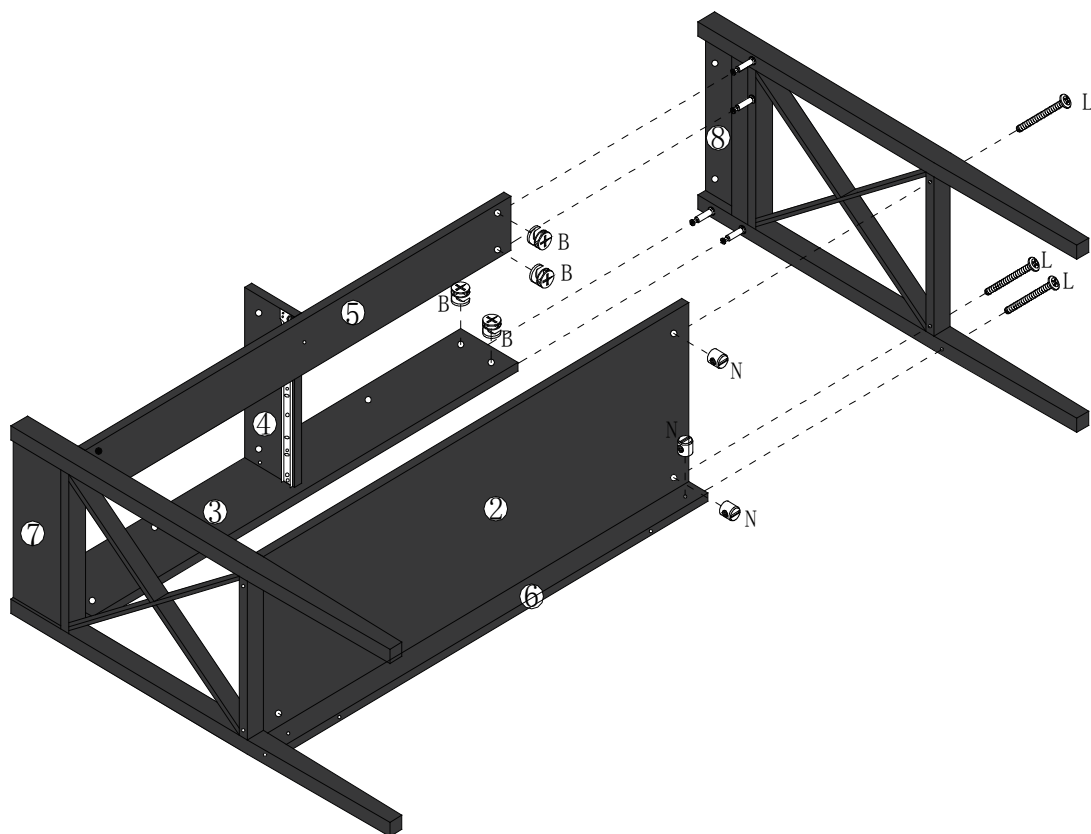

1. Attach Back Support Bar (3) and Support Bar (5) to Right Panel (8) using Cam Bolt (A) and Cam Lock (B)
2. Attach Bottom Panel (2) and Support Bar (6) to Left Panel (7) using Screw (L) and Lock Nut (N)


## Step 8

D




Screw 6 pcs

E




Right Glider 1 pc

F



Left Glider 1 pc

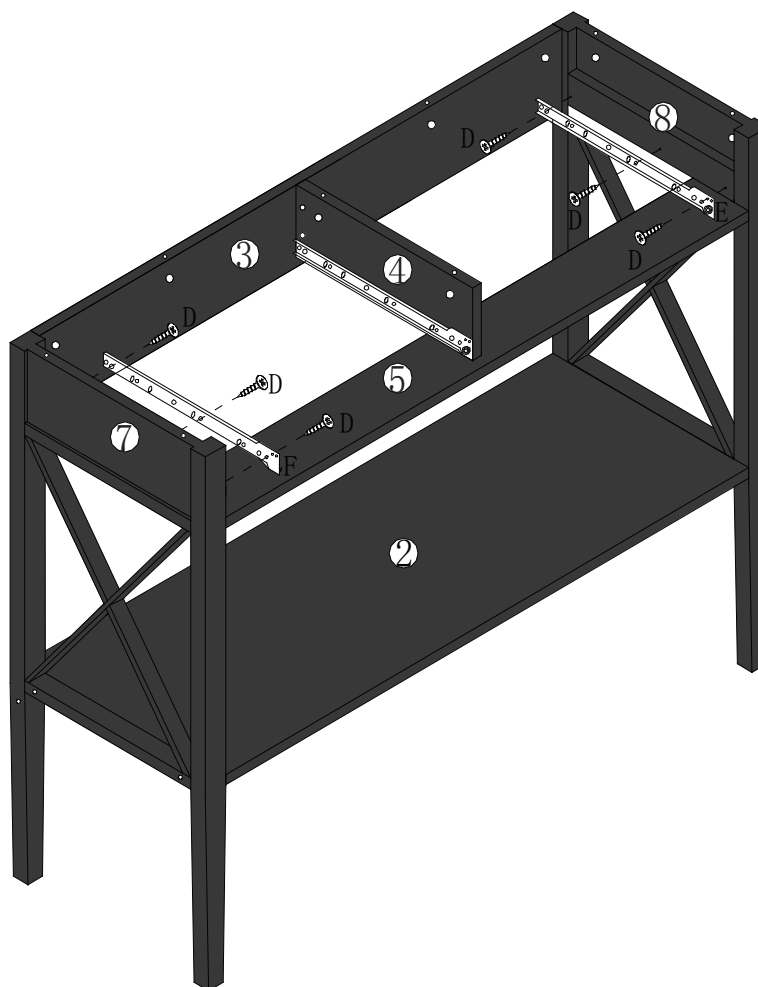


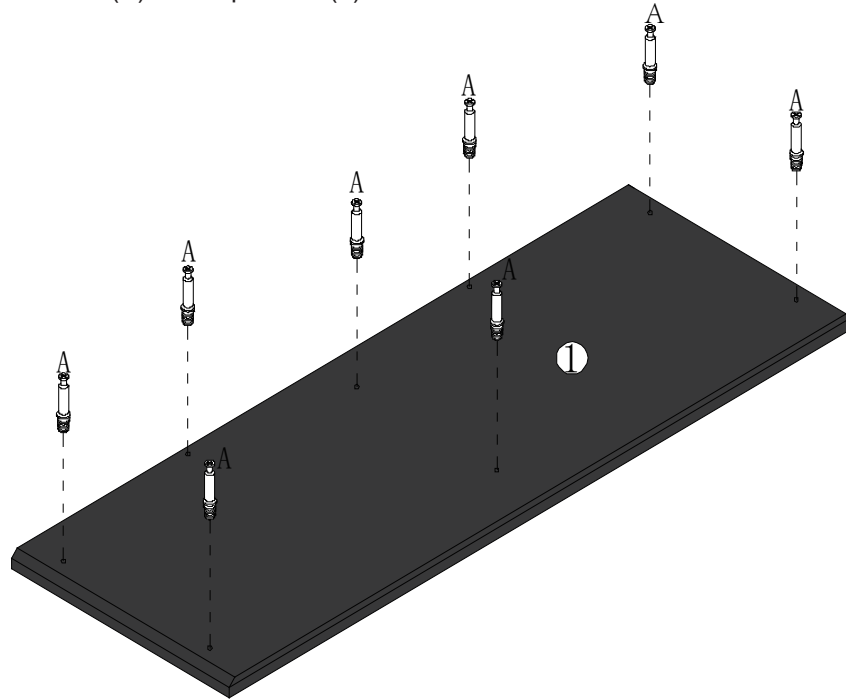
1. Attach Right Glider (D) to Right Panel (8) using Screw (D)
2. Attach Left Glider (E) to the Left Panel (7) using Screw (D)



## Step 9

Screw Cam Bolt (A) into Top Panel (1)


A  
  
Cam Bolt 8 pcs



## Step 10

Attach Top Panel (1) to the unit using Cam Bolt (A) and Cam Lock (B)

B  
  
Cam Lock 8 pcs


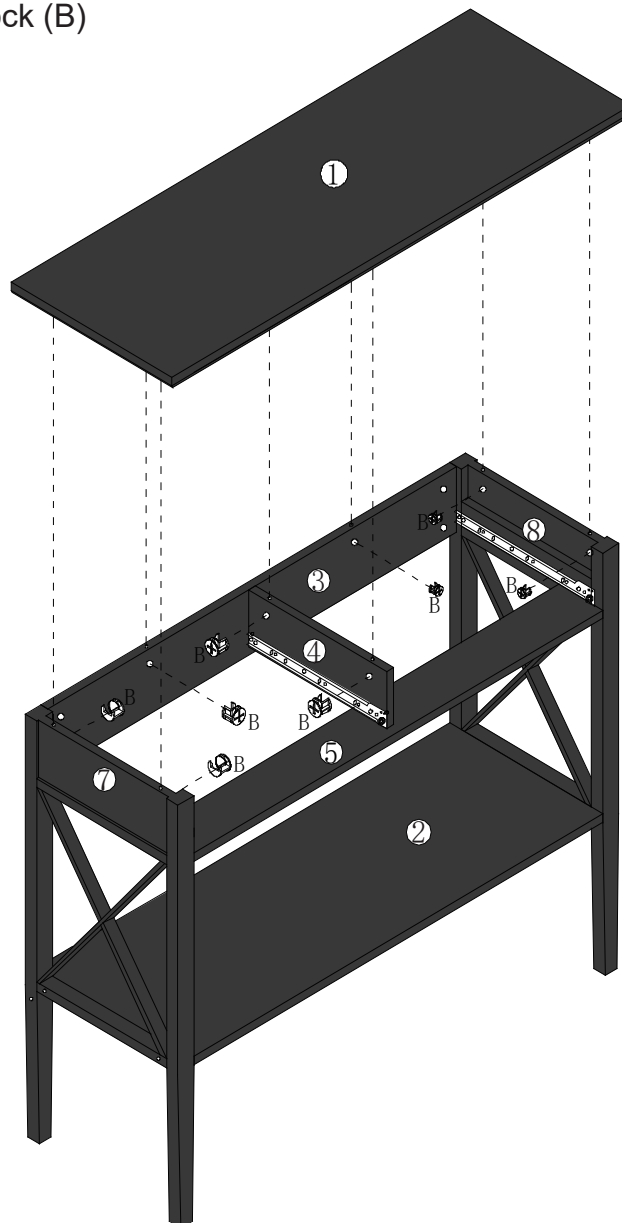


## Step 11

D  
Screw 6 pcs

G  
Left Slider 1 pc


H  
Right Slider 1 pc

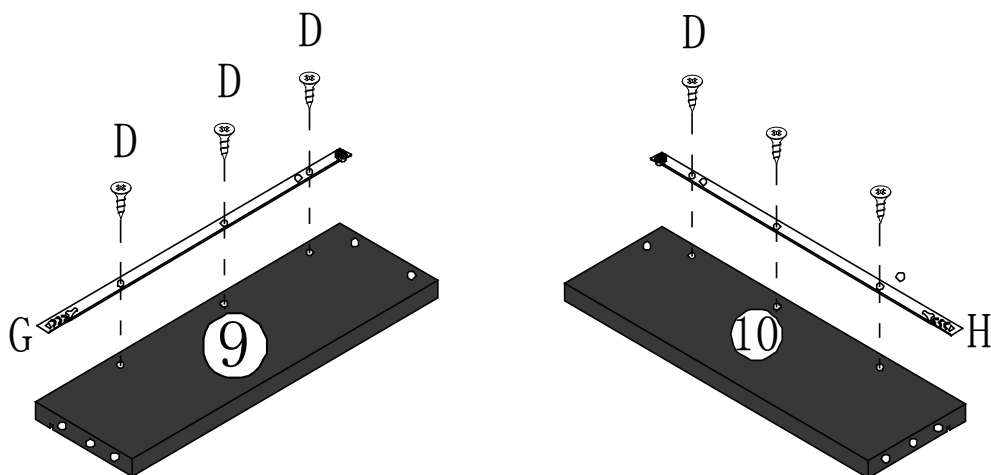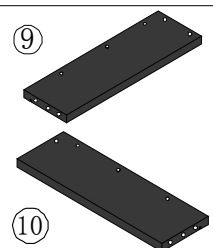


- 1 Attach left Slider (G) to Left Drawer Side Panel (9) using Screw (D)
- 2 Attach Right Slider (H) to Right Drawer Side Panel (10) using Screw (D)

## Step 12

K  
Screw 4 pcs

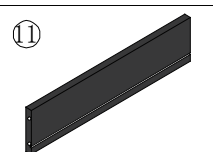

Attach Left Drawer Side Panel (9) and Right Drawer Side Panel (10) to Drawer Back Panel (11) using Screw (K)

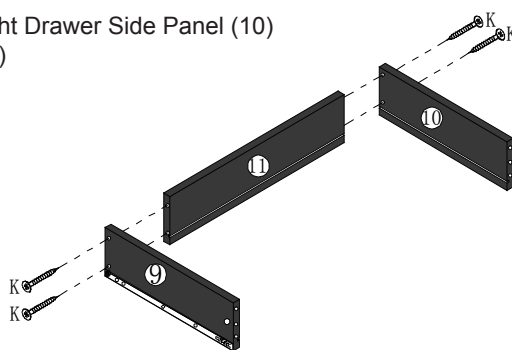

## Step 13


A  
Cam Bolt 2 pcs

B  
Cam Lock 2 pcs


C  
Wooden Dowel 4 pcs

I  
Small Bolt 1 pc

J  
Knob 1 pc

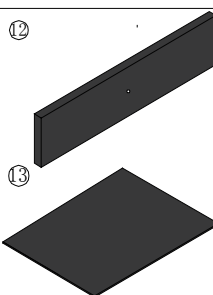

1. Insert Drawer Bottom Panel (13) between Left Drawer Side Panel (9) and Right Drawer Side Panel (10)
2. Attach Knob (J) to Drawer Front (12) using Small Bolt (I)
3. Attach Drawer Front (12) to assembly using Wooden Dowel (C), Cam Bolt (A) and Cam Lock (B)

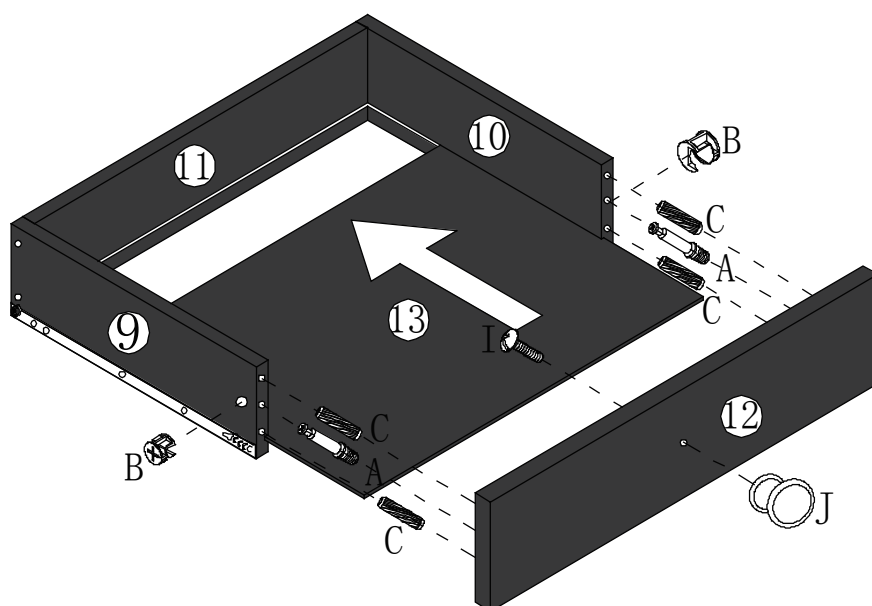



**Note: This is Left Drawer!**

## Step 14

D  
Screw 6 pcs

G  
Left Slider 1 pc


H  
Right Slider 1 pc

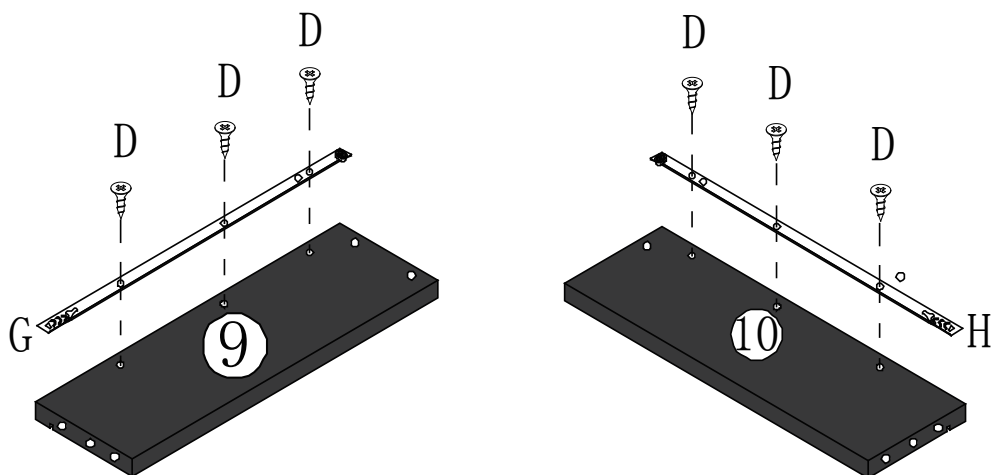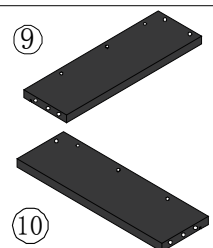


- 1 Attach left Slider (G) to Left Drawer Side Panel (9) using Screw (D)
- 2 Attach Right Slider (H) to Right Drawer Side Panel (10) using Screw (D)

## Step 15

K  
Screw 4 pcs

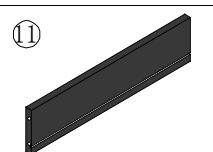

Attach Left Drawer Side Panel (9) and Right Drawer Side Panel (10) to Drawer Back Panel (11) using Screw (K)

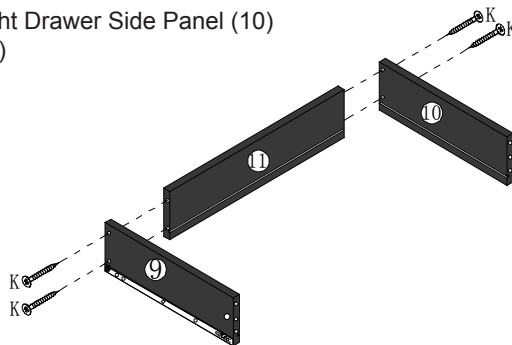

## Step 16


A  
Cam Bolt 2 pcs

B  
Cam Lock 2 pcs


C  
Wooden Dowel 4 pcs

I  
Small Bolt 1 pc

J  
Knob 1 pc

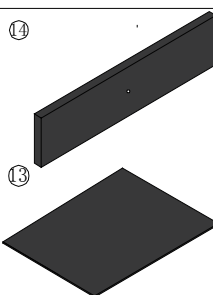


1. Insert Drawer Bottom Panel (13) between Left Drawer Side Panel (9) and Right Drawer Side Panel (10)
2. Attach Knob (J) to Drawer Front (14) using Small Bolt (I)
3. Attach Drawer Front (14) to assembly using Wooden Dowel (C), Cam Bolt (A) and Cam Lock (B)

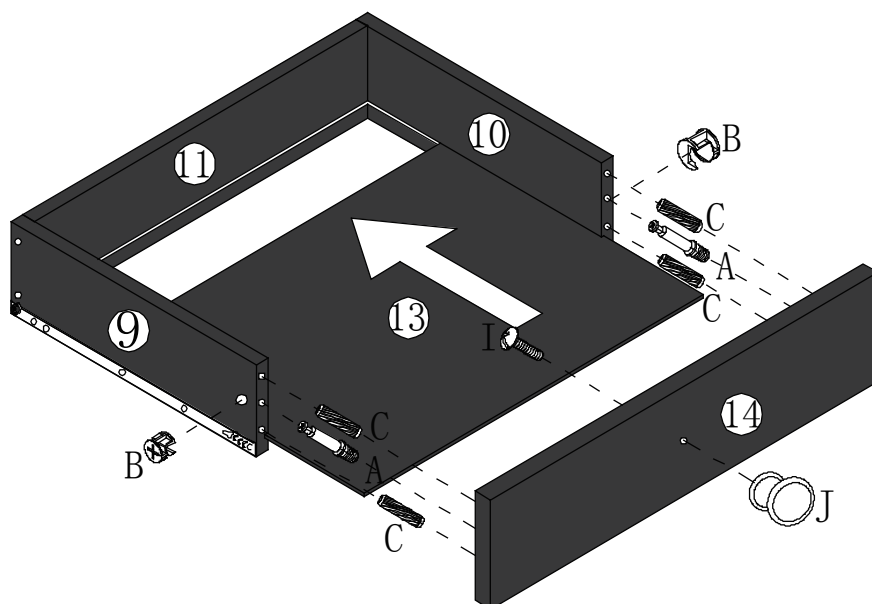

**Note: This is Right Drawer!**

## Step 17

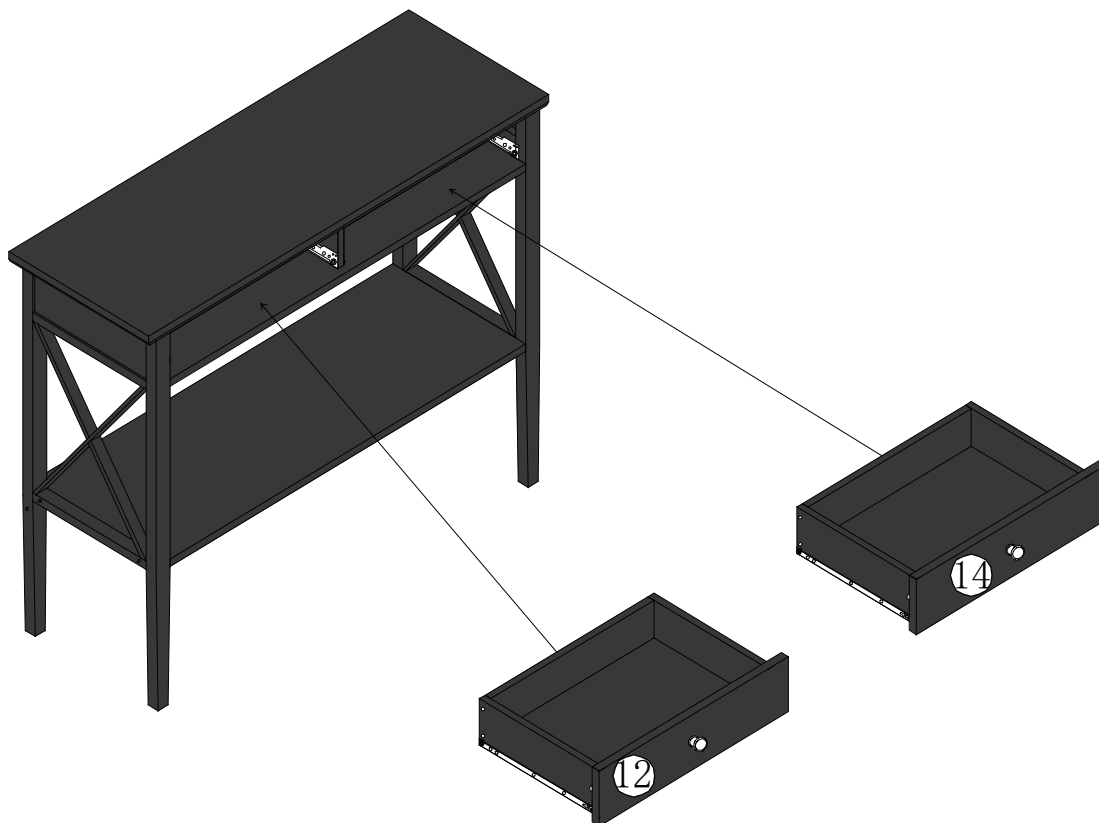

Attach drawers to the unit

## Step 18

M



Anchor 1pc

O



Screw 1pc

P




Anti-tip Bracket 1pc

K



Screw 1pc

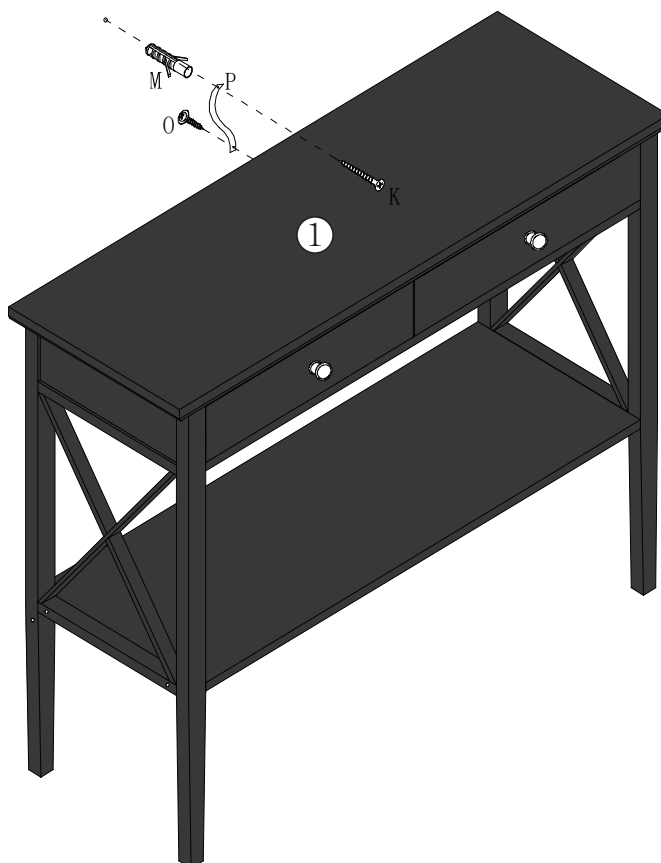

1. Attach Anti-Tip brackets (P) to Top Panel (1) using Screw (O)
2. Drill holes into wall slightly smaller than Anchor (M)
3. Gently tap Anchor (M) into the wall
4. Fasten Anti-tip Brackets (P) to the wall using Screws (K)