


ASSEMBLY INSTRUCTIONS

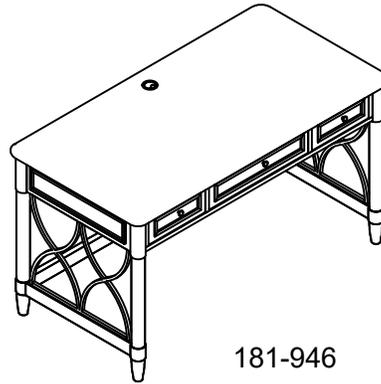

TOOLS REQUIRED:


Allen Wrench (Provided, Part E)

BEFORE YOU START:

1. Check the hardware against the hardware list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:


1. Attach the back stretcher and two side stretchers with Bolt (B) + Lock Washer (C) + Flat Washer (D) by Allen Wrench (E) as shown in Figure 1.

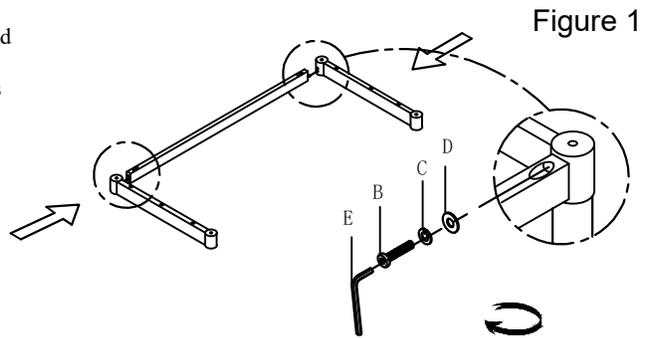

2. Turn the table top upside down on a clean soft surface and screw 4 legs up to the table top tightly as shown in Figure 2.

Figure 2


2. Attach the stretcher frame to the legs and screw 4 feet up to the stretcher tightly as shown in Figure 3.

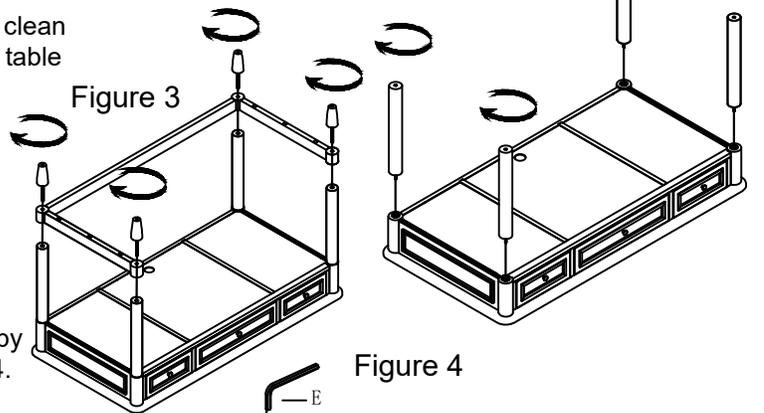

3. Insert the metal frame between the legs and tighten Bolt (B) with Lock Washer (C) and Flat Washer (D) by Allen Wrench (E) as shown in Figure 4.

Figure 4

4. Tighten Bolt (A) by Allen Wrench (E) as shown in Figure 5

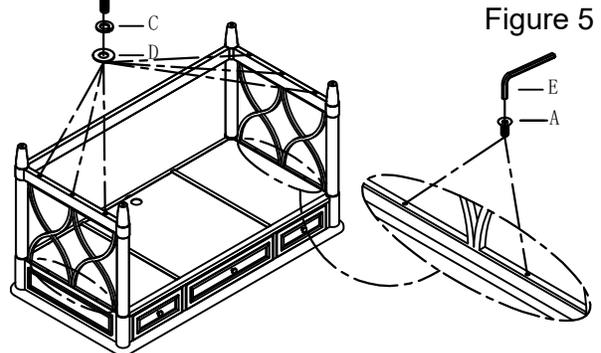

No.	HARDWARE LIST		Q'ty
A		Bolt (Ø1/4"x1")	4pcs
B		Bolt (Ø1/4"x1-3/4")	8pcs
C		Lock Washer (Ø1/4")	8pcs
D		Flat Washer (Ø1/4"*16*1.5mm)	8pcs
E		Allen Wrench (100*50*4mm)	1pc