

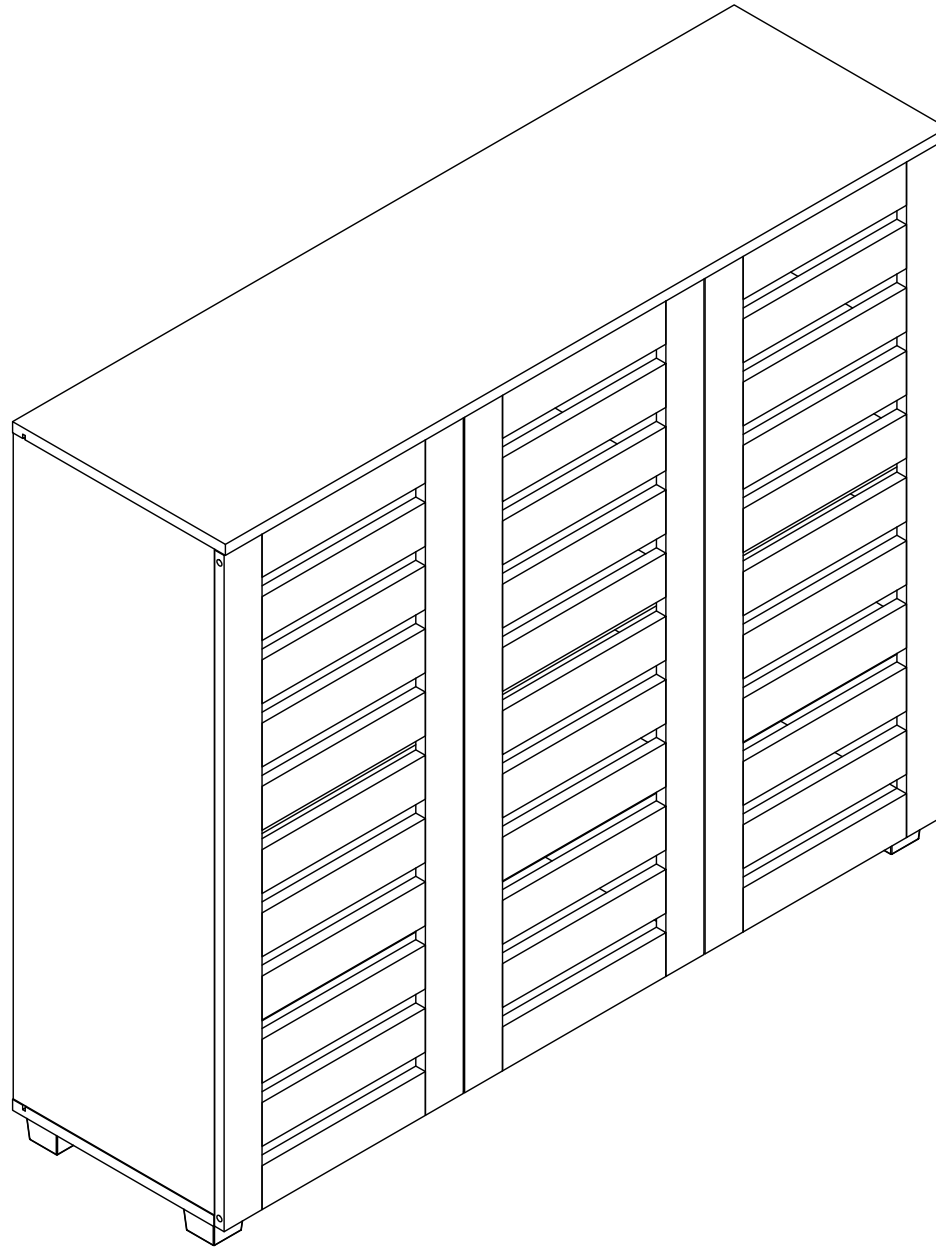
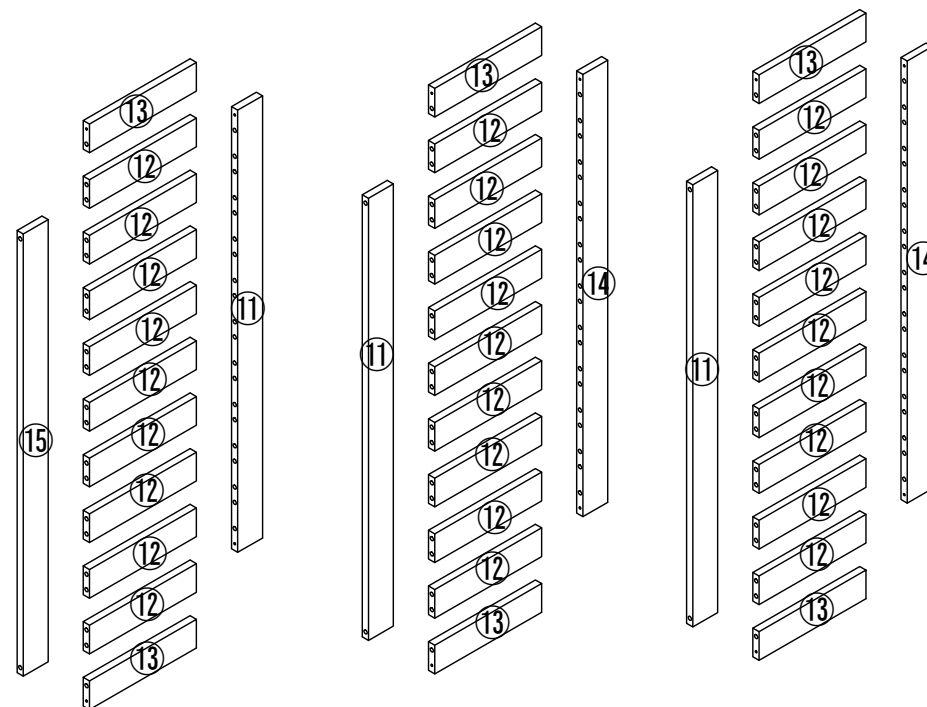
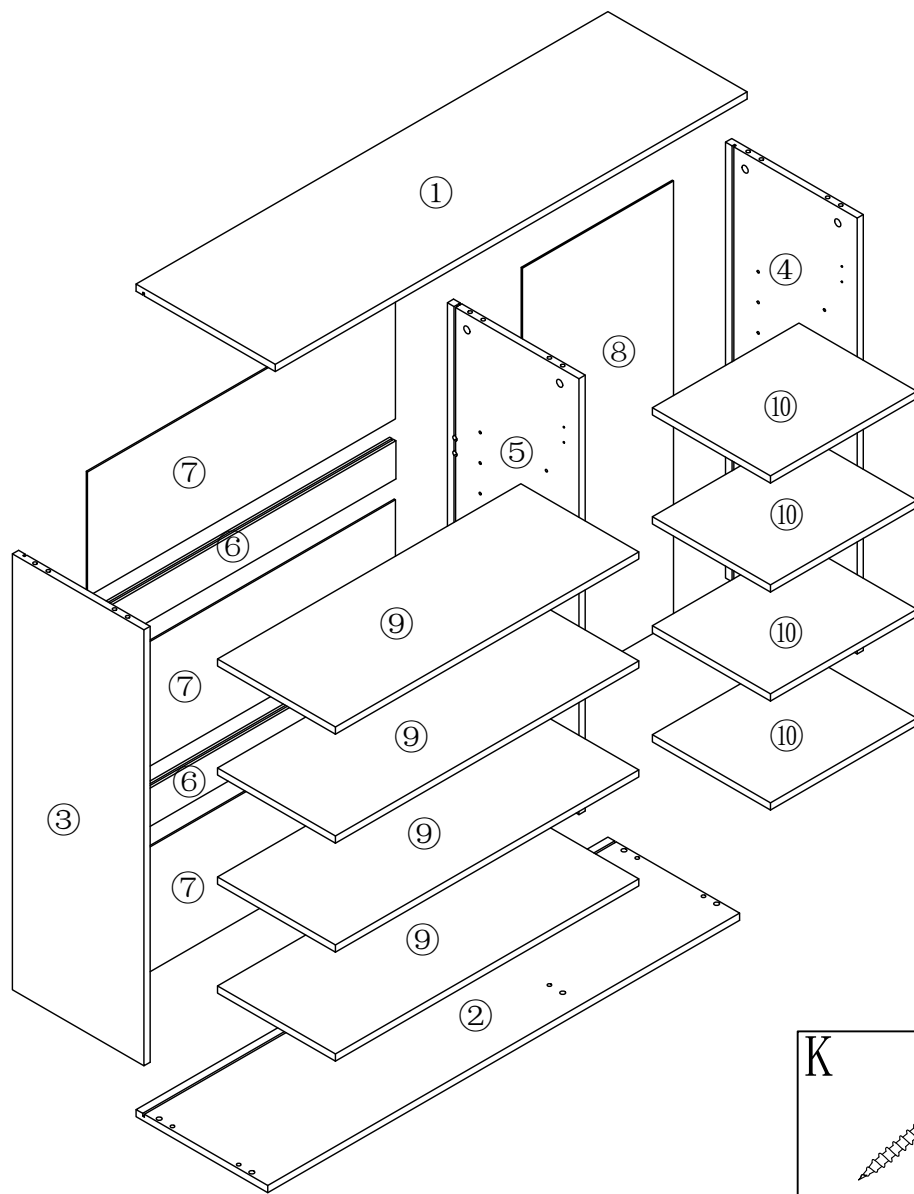







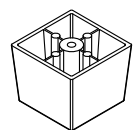
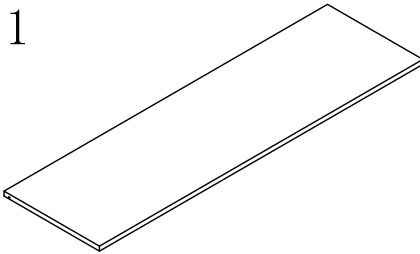
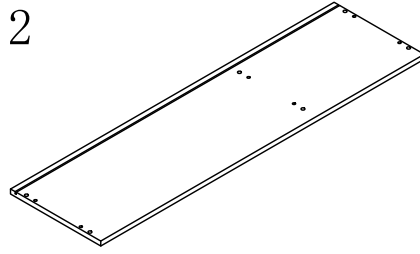
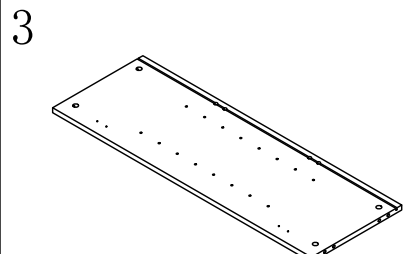
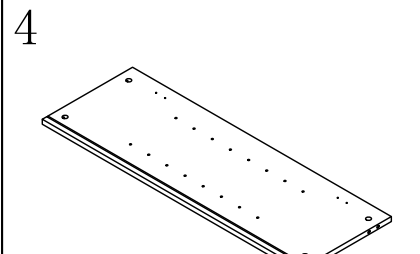
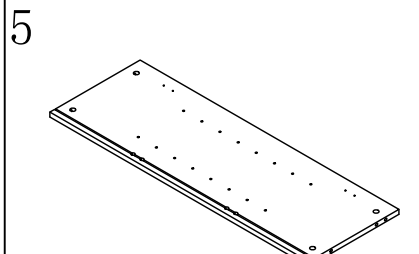
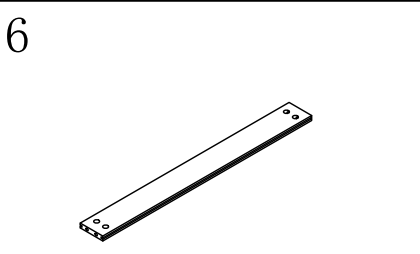
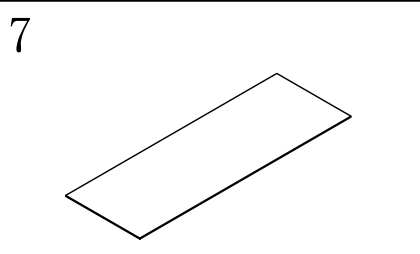
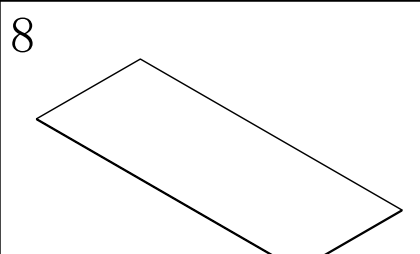
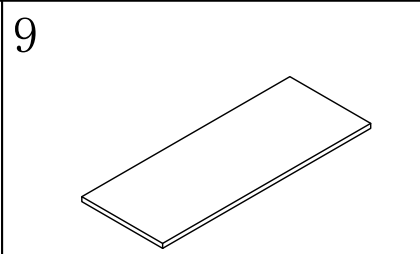
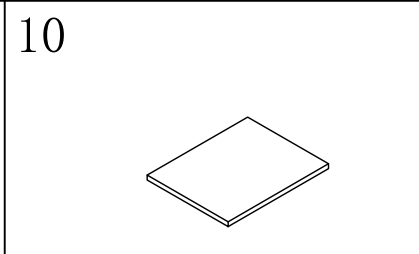
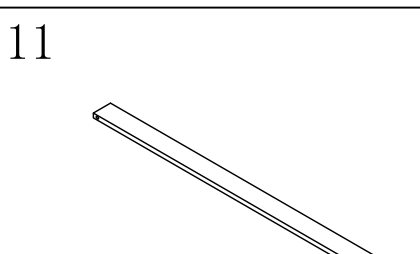
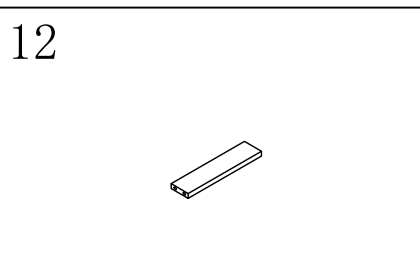
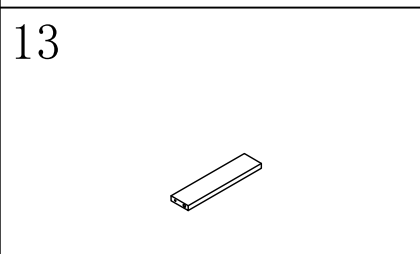


INSTALLATION & ASSEMBLY

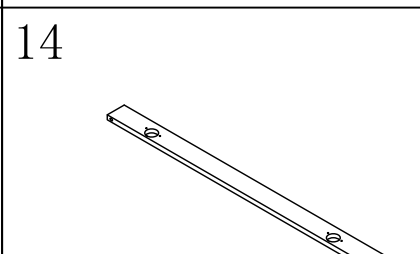

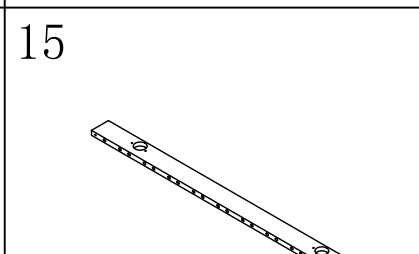

				K 4*50  12PCS	L  2PCS	M  1PCS	N  12PCS	O  24PCS	P  2PCS
A  20PCS	B  20PCS	C 8*40  132PCS	D  4PCS	E  2PCS	F  32PCS	G  6PCS	H 3*12  24PCS	I 3.5*14  38PCS	J 3.5*35  6PCS


1  1140*336 (mm) 44.88*13.23 (inch) 1PC	2  1140*318 (mm) 44.88*12.52 (inch) 1PC	3  912*318 (mm) 35.91*12.52 (inch) 2PCS	4  912*318 (mm) 35.91*12.52 (inch) 2PCS	5  912*318 (mm) 35.91*12.52 (inch) 1PC
6  736*80 (mm) 28.98*3.15 (inch) 2PCS	7  261*744 (mm) 10.28*29.29 (inch) 3PCS	8  922*365 (mm) 36.3*14.37 (inch) 1PC	9  733*285 (mm) 28.86*11.22 (inch) 4PCS	10  354*285 (mm) 13.94*11.22 (inch) 4PCS
11  925*60 (mm) 36.42*2.36 (inch) 3PCS	12  258*60 (mm) 10.16*2.36 (inch) 27PCS	13  258*60 (mm) 10.16*2.36 (inch) 6PCS	14  925*60 (mm) 36.42*2.36 (inch) 2PCS	15  925*60 (mm) 36.42*2.36 (inch) 1PC




Hardware installation demonstration

NOTE: Please make sure "A" hardware tightened and can't be pulled out!


I

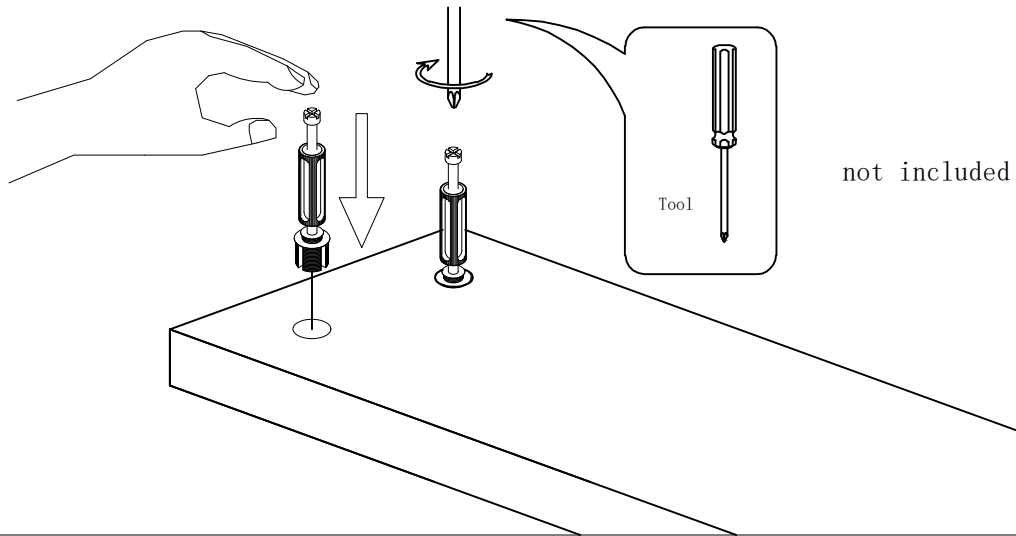


II

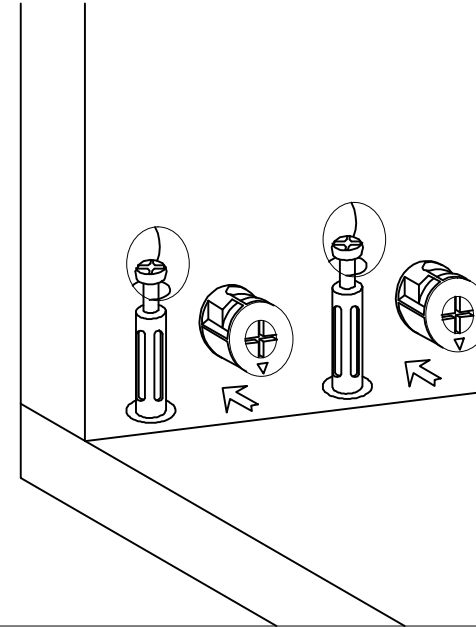


III

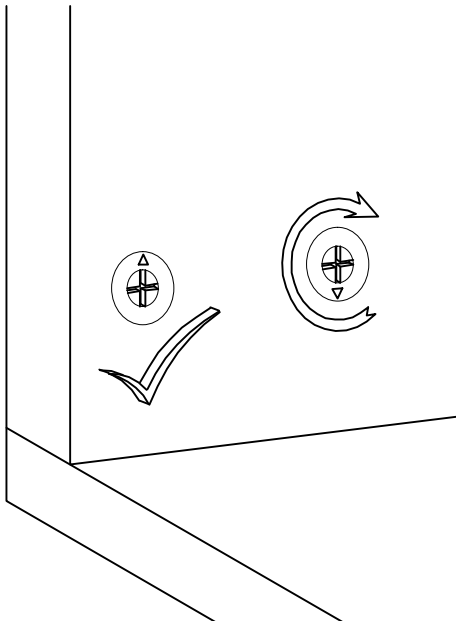

1

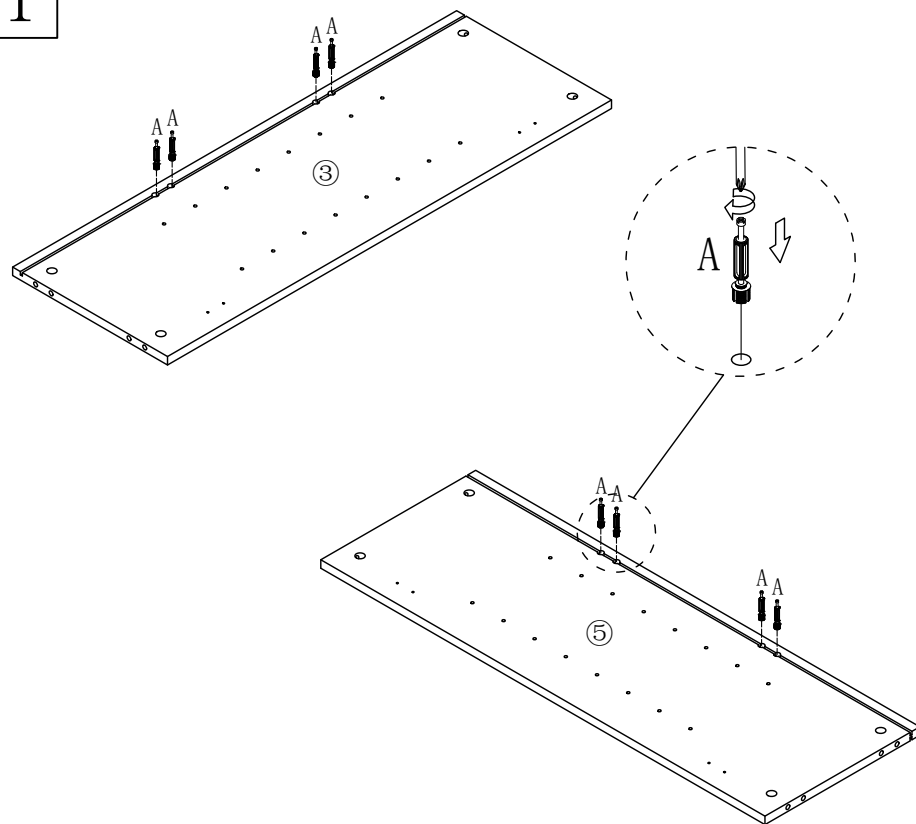


Put A on board ③ ⑤

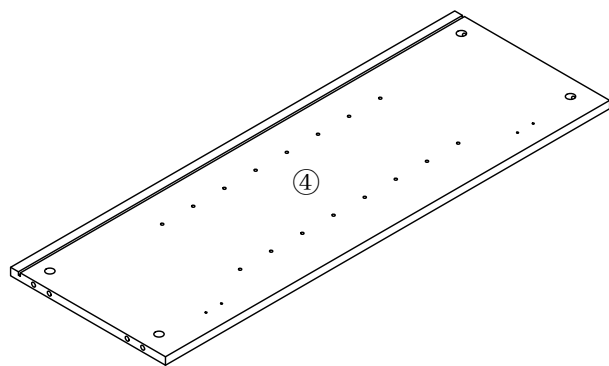

A*8

2

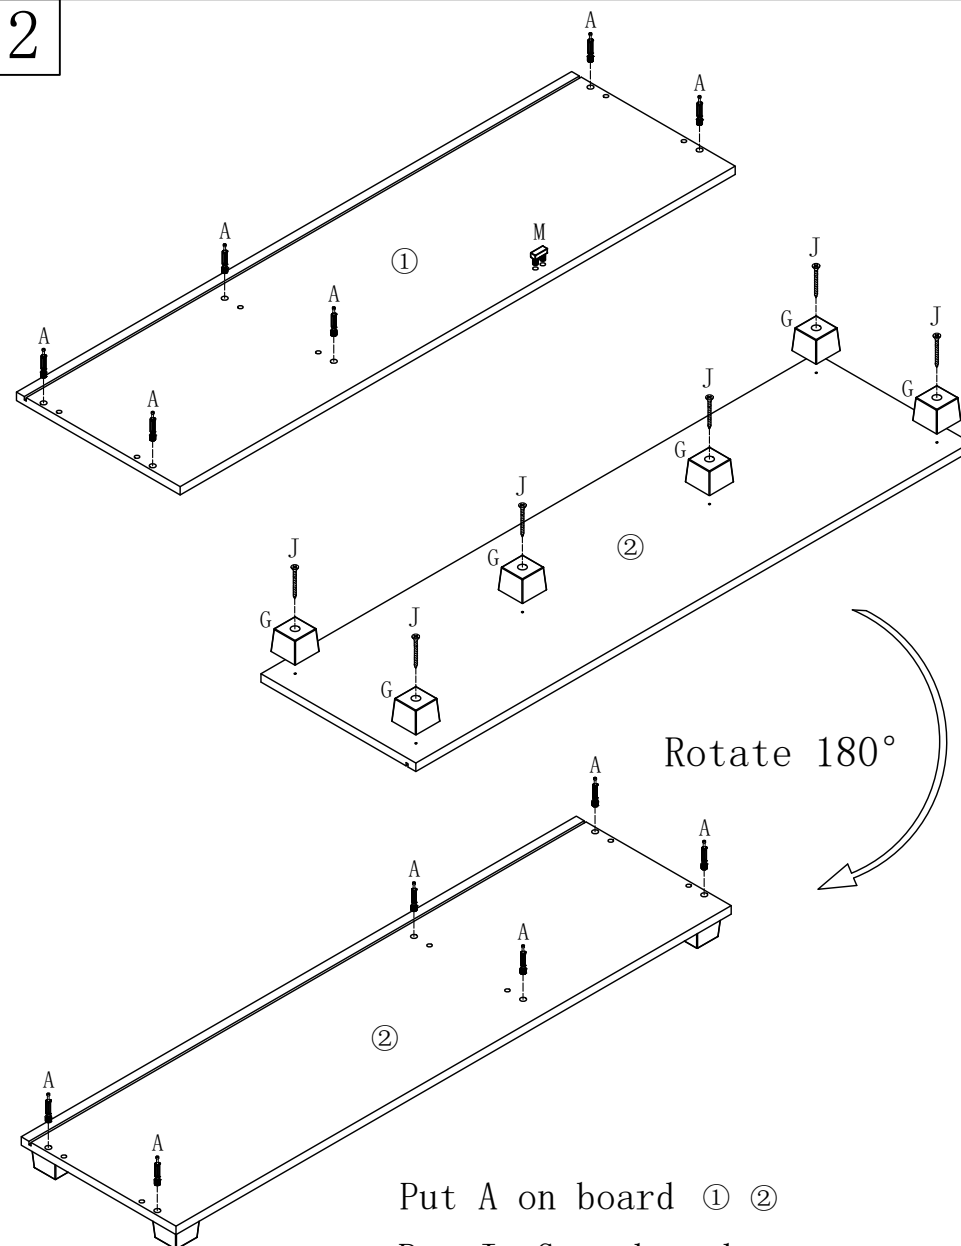


Rotate 180°

Put A on board ① ②

Put J, G on board ②

A*12 G*6 J*6 M*1

3

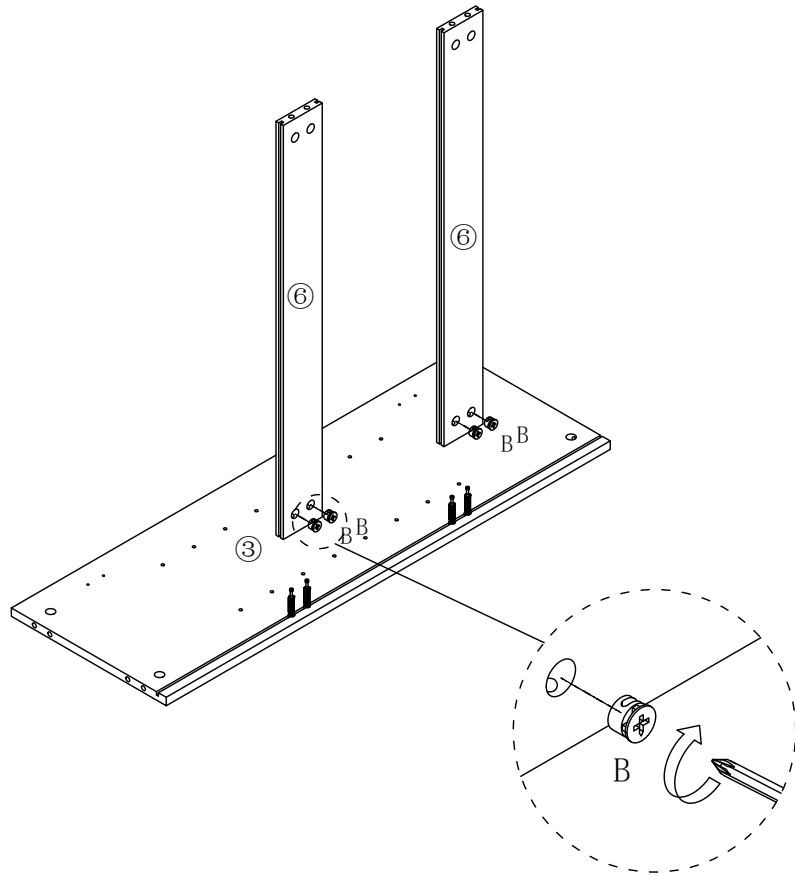


Make sure the arrow on the screw align to the hole on the side.

Put B on board ⑥


B*4

4

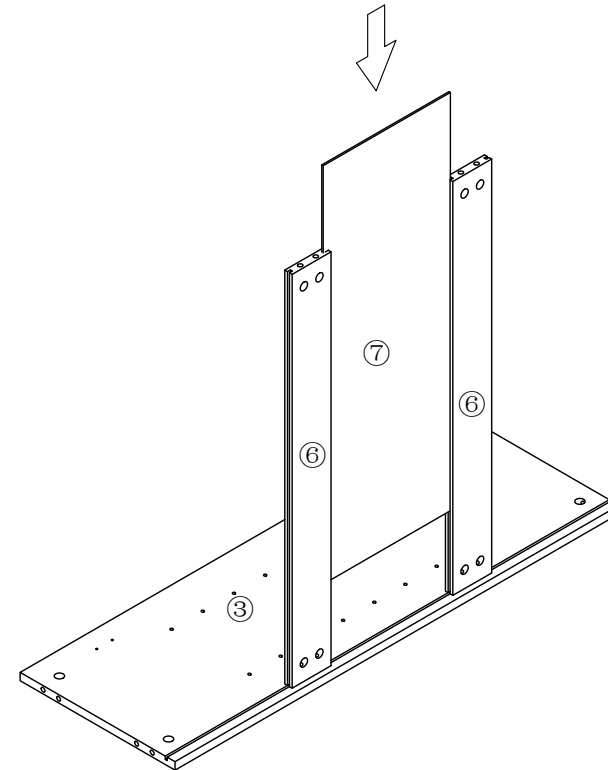

5


Put B on board ⑥

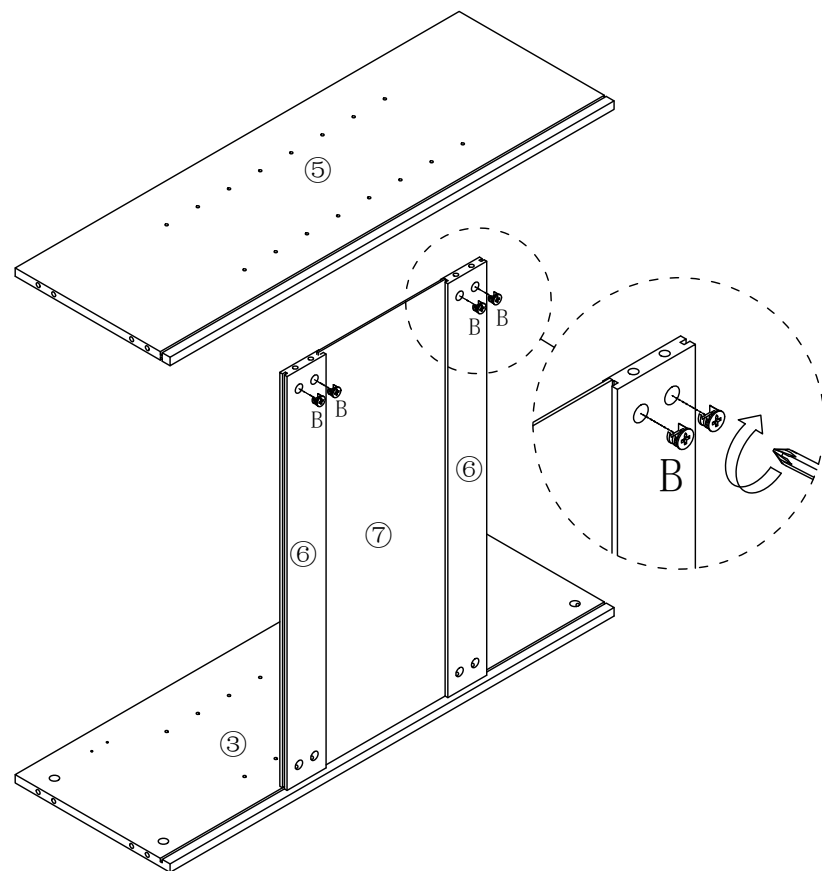

Make sure the arrow on the screw align to the hole on the side.


B*4

6

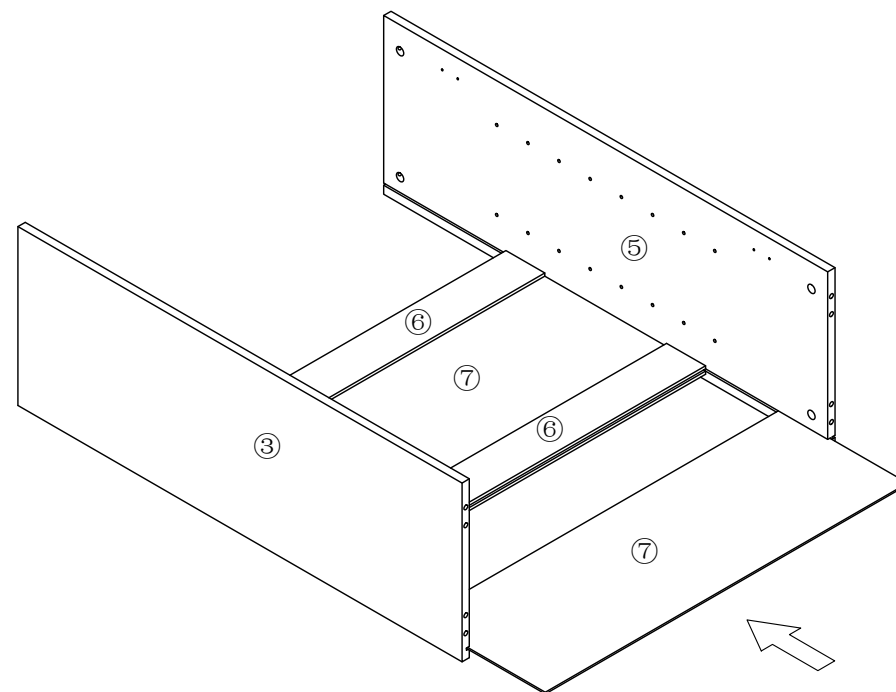


7

Make sure the arrow on the screw align to the hole on the side.

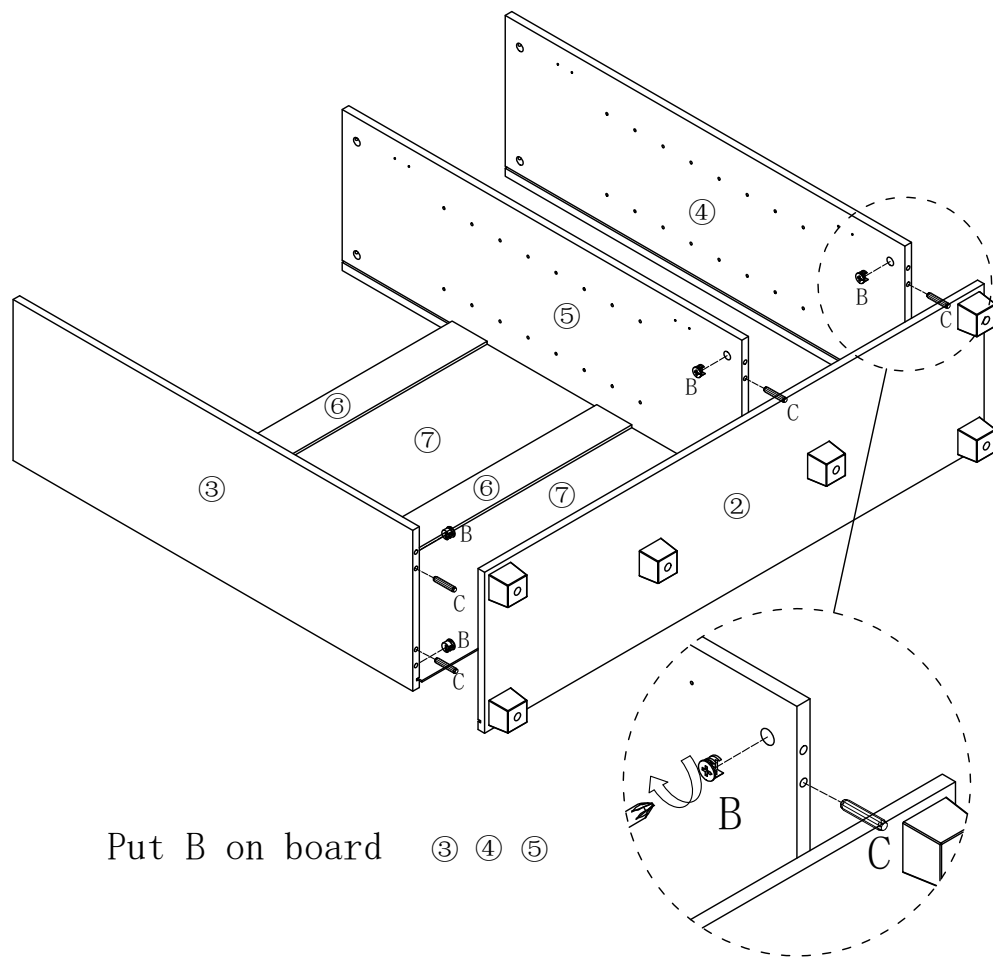


B*6 C*6

8

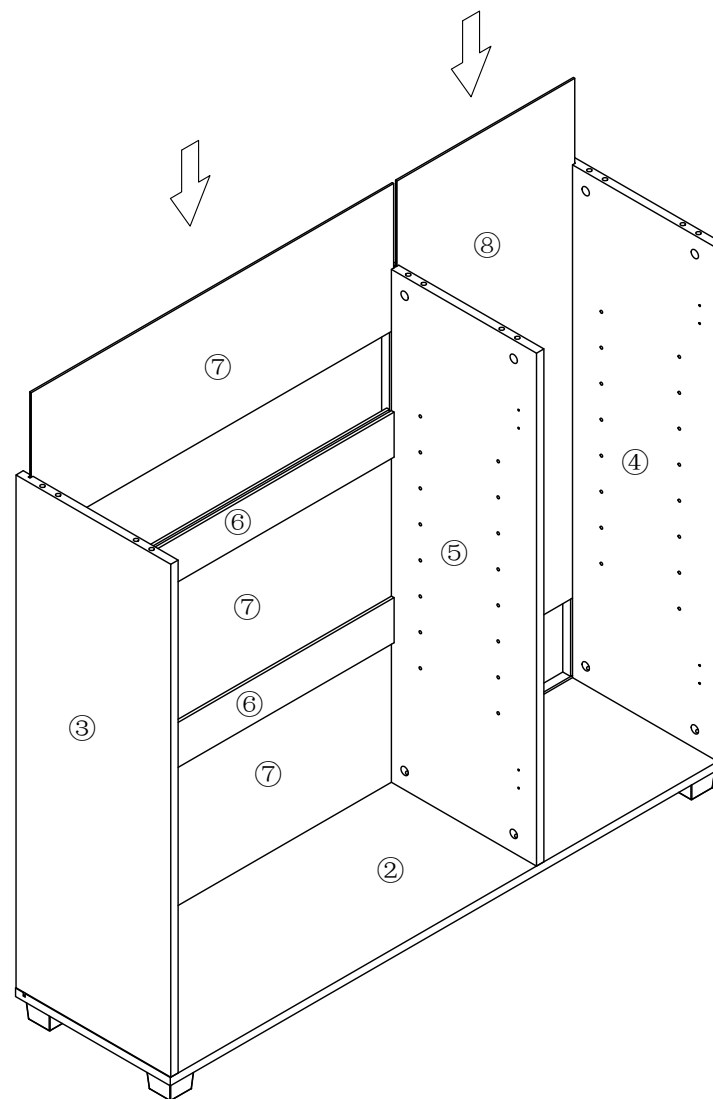

9



Put B on board ③ ④ ⑤

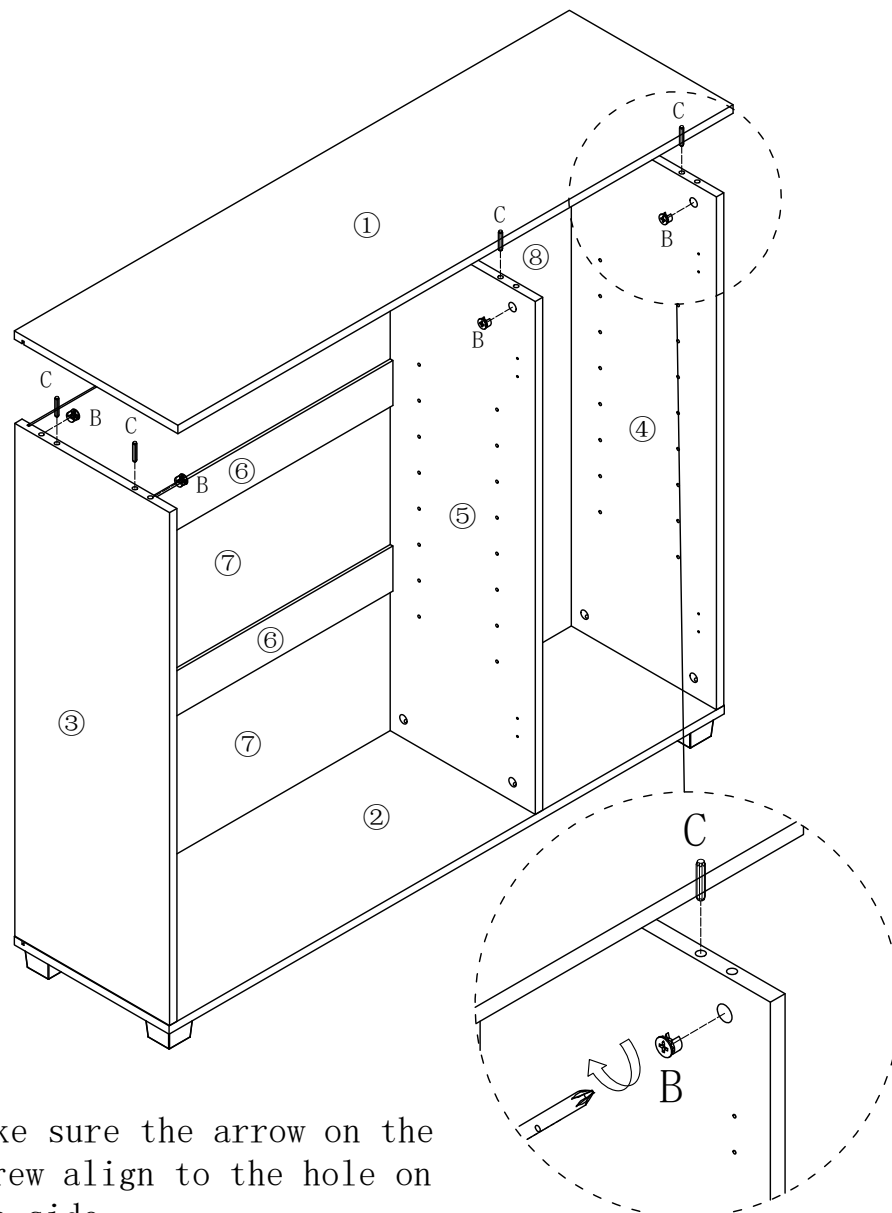

Make sure the arrow on the screw align to the hole on the side.


B*6 C*6

10

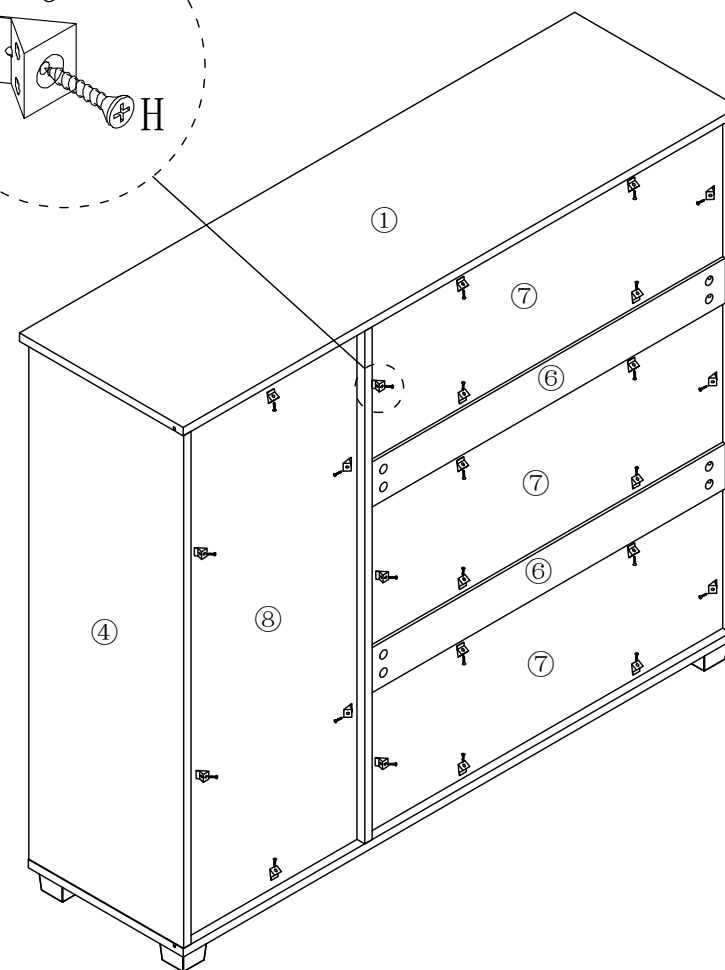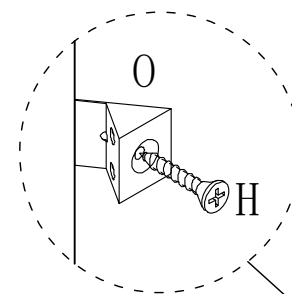

H*24 O*24


11

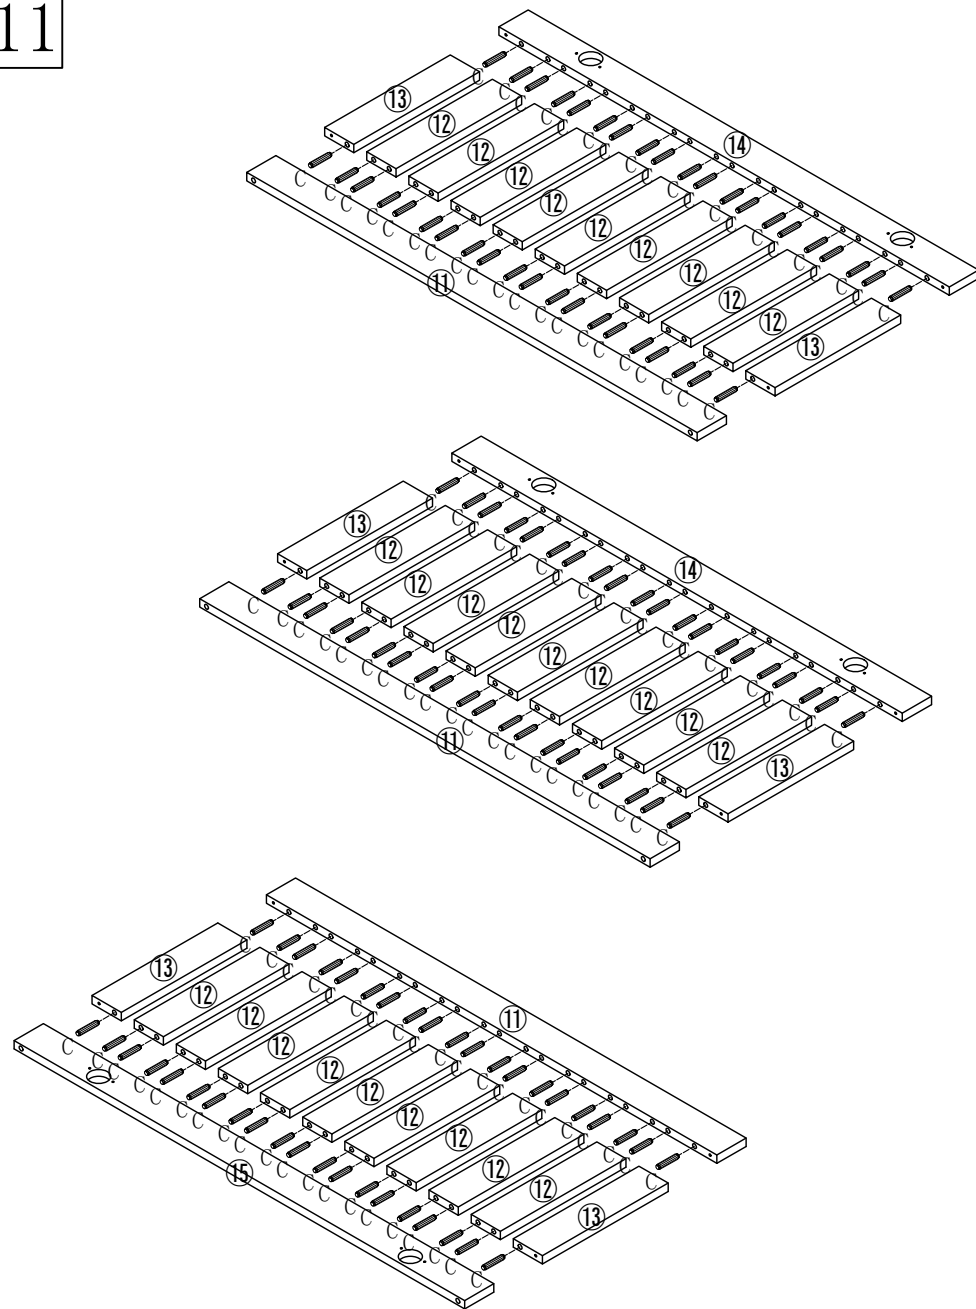

Put C on board ⑪ ⑫ ⑬ ⑭ ⑮

C*120


12

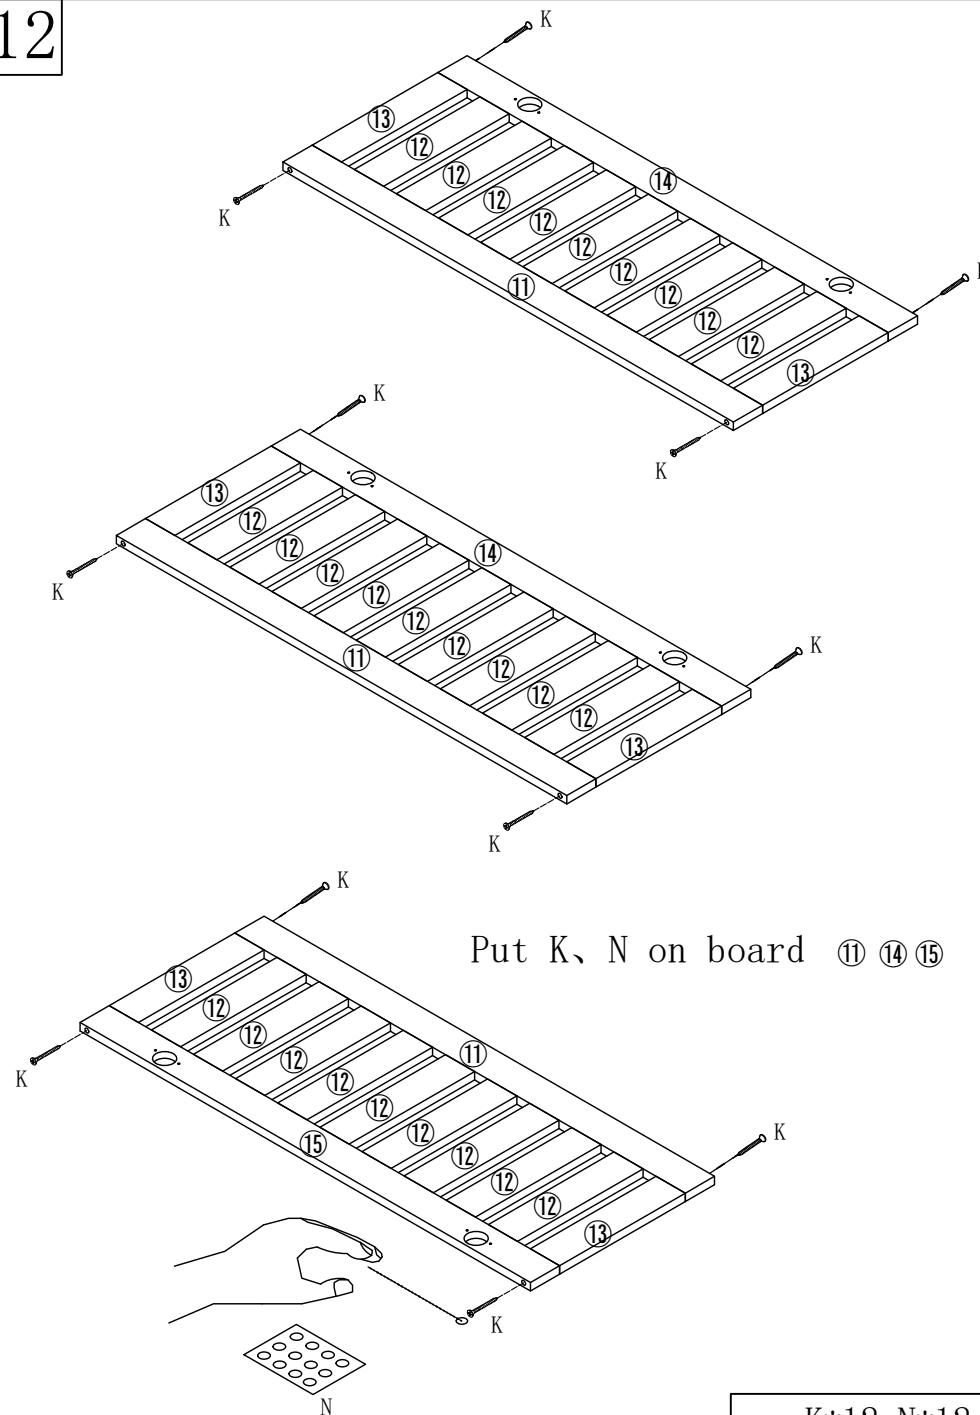

Put K, N on board ⑪ ⑭ ⑮

K*12 N*12

13

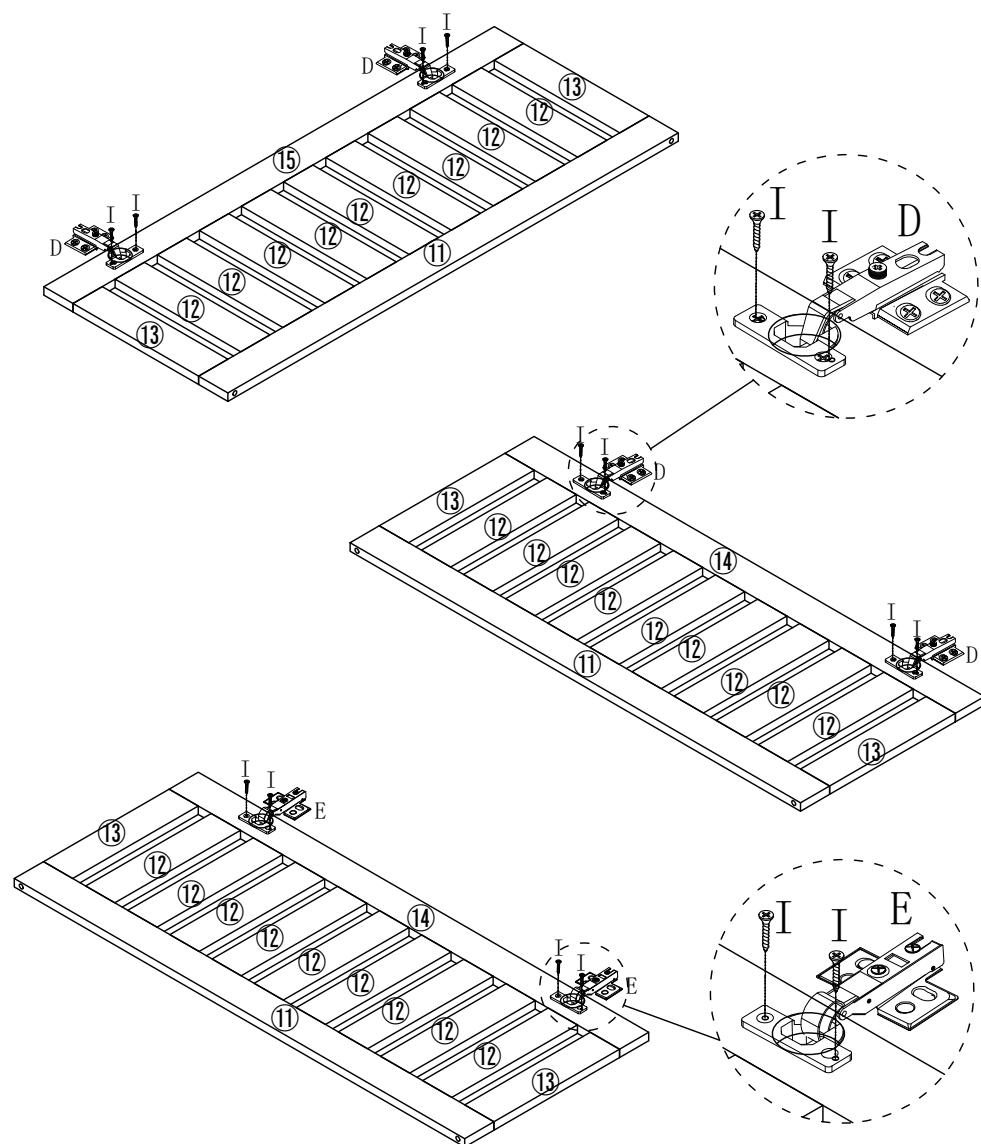


Put I、D on board ⑭ ⑮

Put I、E on board ⑭

D*4 E*2 I*12


14

Put I、D on board ③

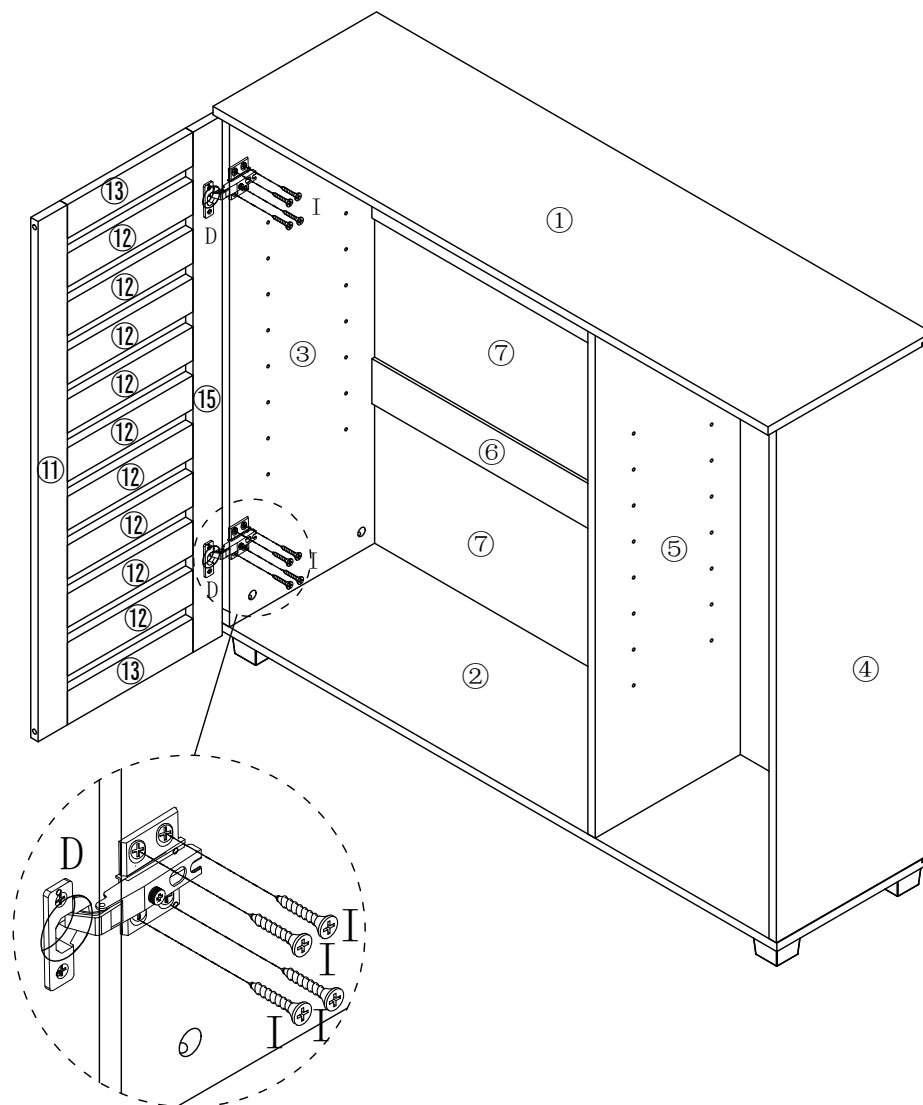

I*8


15

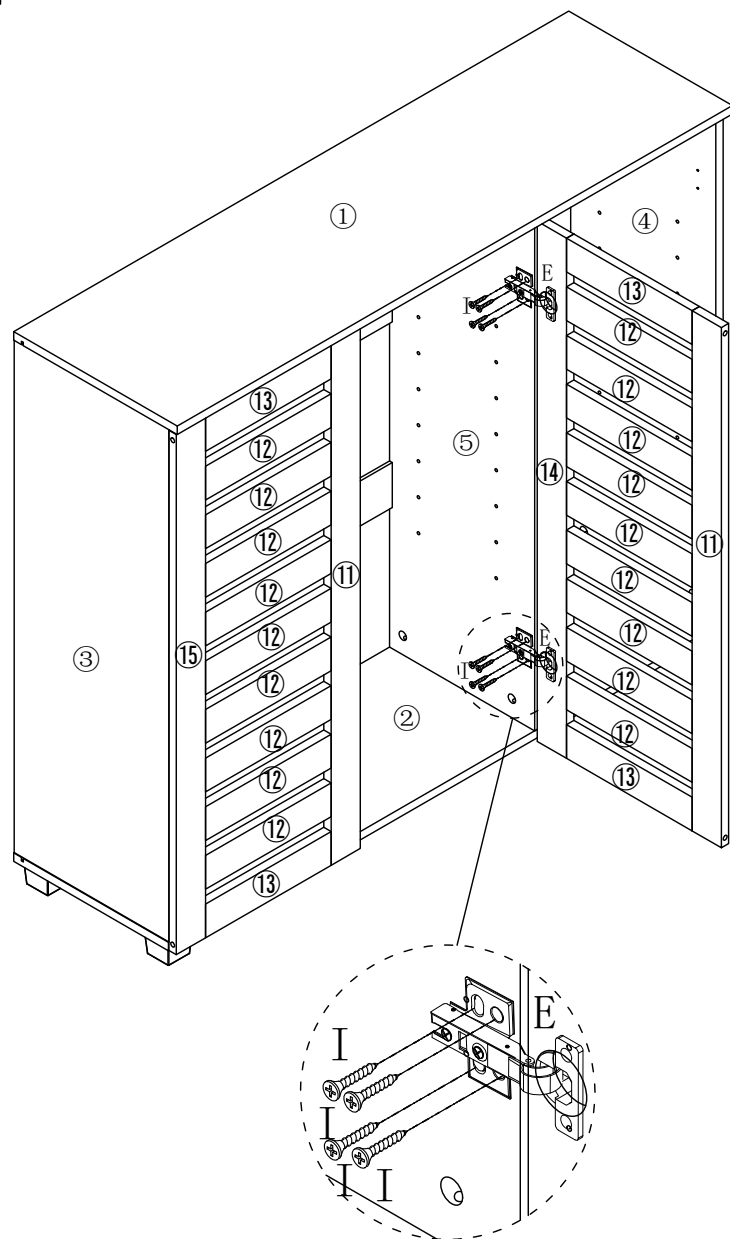

Put I、E on board ⑤

I*8

16

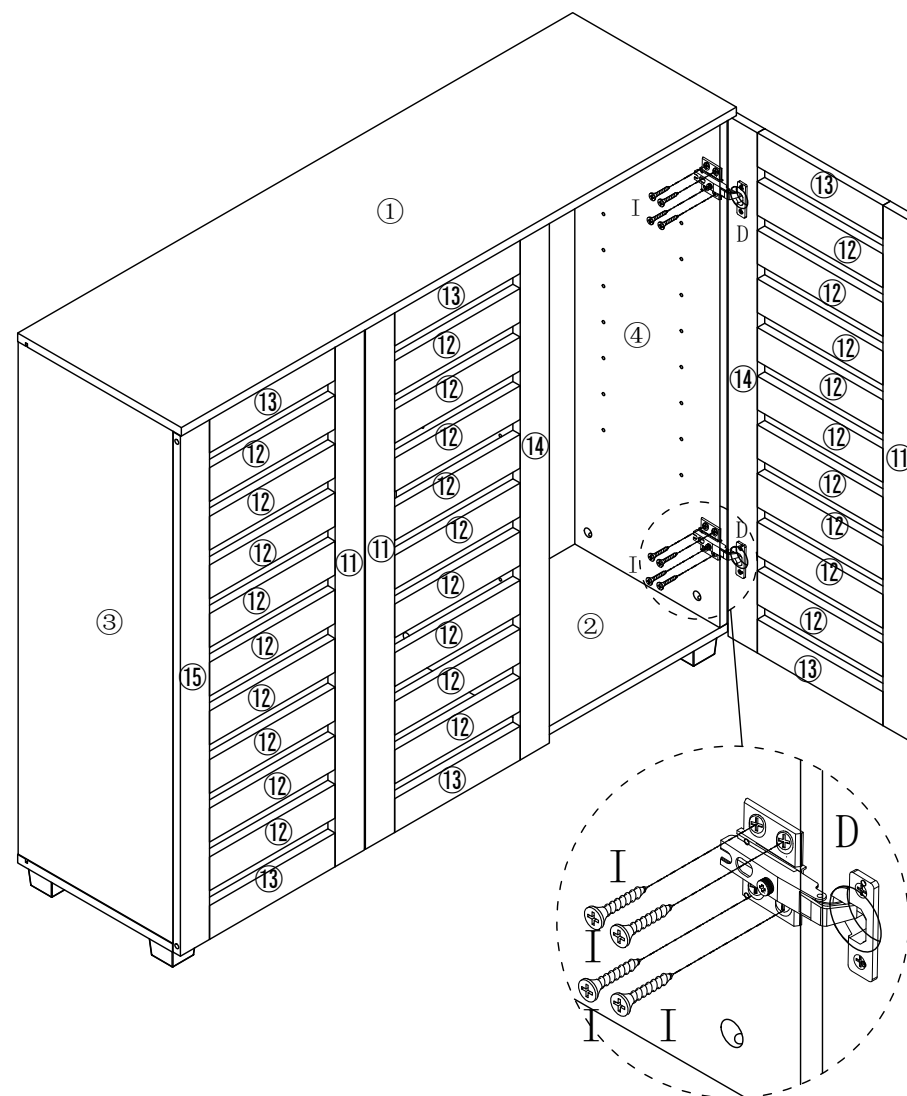


Put I、D on board ④

I*8


17

Put F on board ③ ④ ⑤

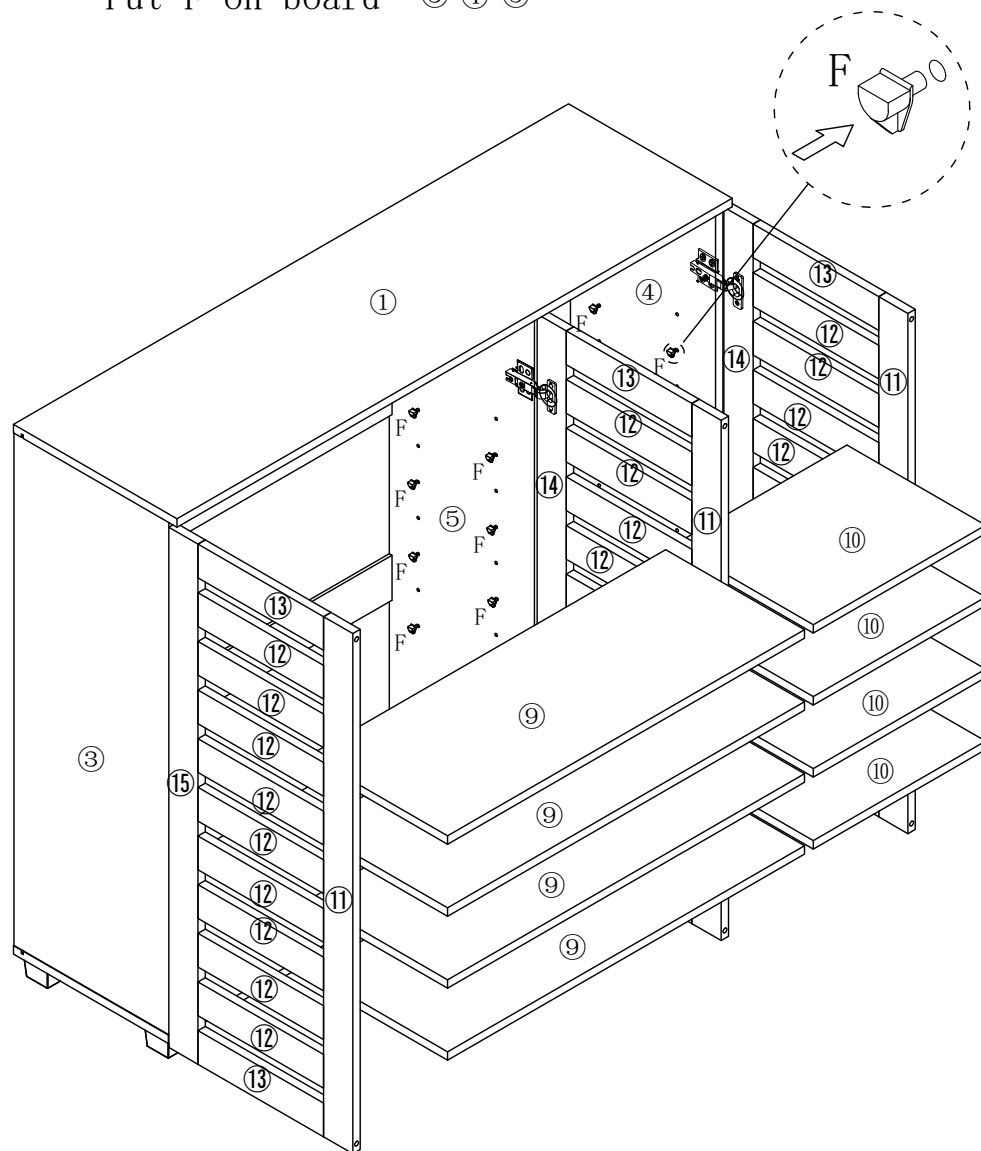

F*32

18

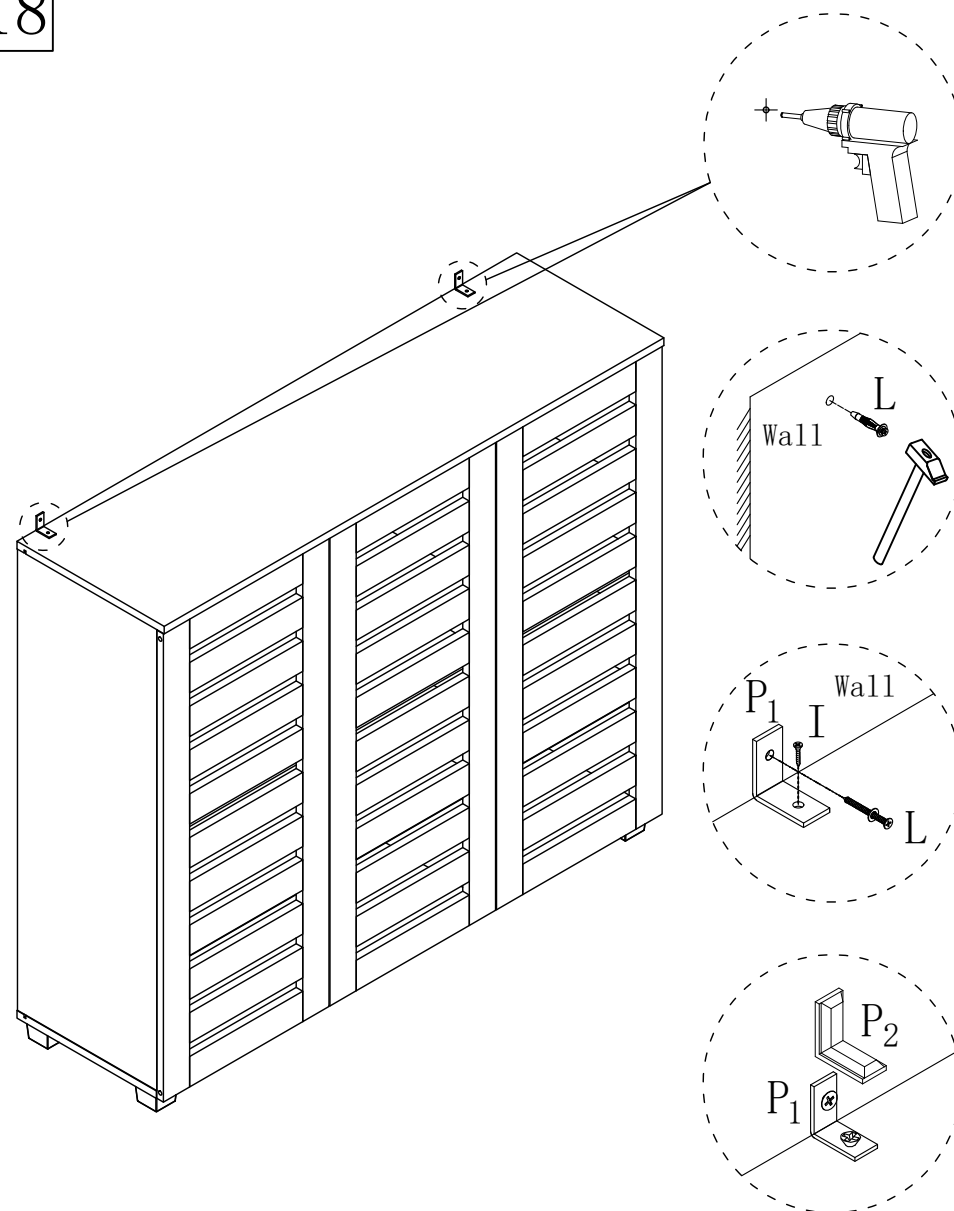

I*2 L*2 P1*2 P2*2