




POLYESTER

Acoustic panels absorb sound, reduce noise, decrease reverberation, eliminate sound pollution, improve sound effects and language clarity

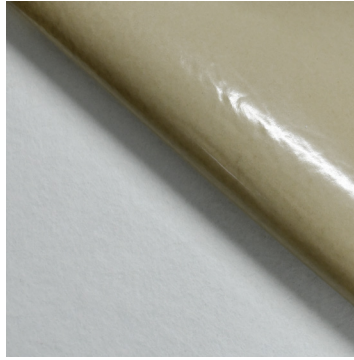

I. Preparation before Installation

- 1、Clean the surface to ensure it is free of dust, oil, and water stains, and use it after it is completely dry.
- 2、Check if the adhesive is in good condition and if the release paper is intact.
- 3、Mark the paste position. For larger products, it is recommended to have two people cooperate.

II. Installation Steps

- 1、Tear off a corner of the adhesive (about 2-3cm), align it with the marked position and fix it to avoid deflection. Slowly tear off the remaining release paper.
- 2、Press the entire surface, with emphasis on reinforcing the edges and corners.

III. Precautions after Installation

- 1、Let it stand for 24 hours before applying force to allow the adhesive to fully adhere.
- 2、After the adhesive has fully adhered, let it stand for 24 hours to ensure better bonding.

IV. Special Scenarios

- 1、Rough surfaces: Apply primer or putty first, polish it smooth before pasting.
- 2、Curved surfaces: Press from the middle to both sides to avoid stretching the product.




Audiovisual satisfaction

Powerful acoustic system, my presence is everywhere



POLYESTER

Acoustic panels absorb sound, reduce noise, decrease reverberation, eliminate sound pollution, improve sound effects and language clarity

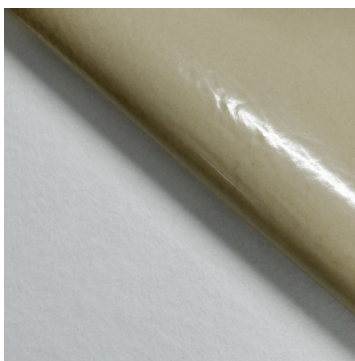

I. Preparation before Installation

- 1、Clean the surface to ensure it is free of dust, oil, and water stains, and use it after it is completely dry.
- 2、Check if the adhesive is in good condition and if the release paper is intact.
- 3、Mark the paste position. For larger products, it is recommended to have two people cooperate.

II. Installation Steps

- 1、Tear off a corner of the adhesive (about 2-3cm), align it with the marked position and fix it to avoid deflection. Slowly tear off the remaining release paper.
- 2、Press the entire surface, with emphasis on reinforcing the edges and corners.

III. Precautions after Installation

- 1、Let it stand for 24 hours before applying force to allow the adhesive to fully adhere.
- 2、After the adhesive has fully adhered, let it stand for 24 hours to ensure better bonding.

IV. Special Scenarios

- 1、Rough surfaces: Apply primer or putty first, polish it smooth before pasting.
- 2、Curved surfaces: Press from the middle to both sides to avoid stretching the product.



Audiovisual satisfaction

Powerful acoustic system, my presence is everywhere