

WRITING DESK

ASSEMBLY INSTRUCTION



ASSEMBLY INSTRUCTION


ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning!!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.

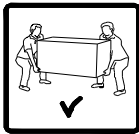


ASSEMBLY TIME PER UNIT: 50 MINUTES

PARTS IDENTIFICATION

A


TOP PANEL

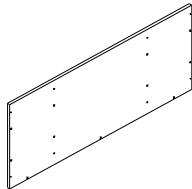

1PC

B


BOTTOM PANEL

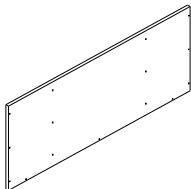

1PC

C


SIDE PANEL

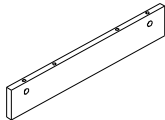

2PCS

D


LEFT PANEL



1PC

E


RIGHT FRAME



1PC

F


BACK PANEL



1PC

G

DRAWER FRONT PANEL



1PC

H


DRAWER LEFT PANEL



1PC

I


DRAWER RIGHT PANEL



1PC

J

**DRAWER
BOTTOM PANEL**

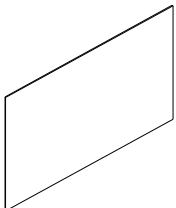


1PC

ASSEMBLY INSTRUCTION

K


DRAWER BACK PANEL

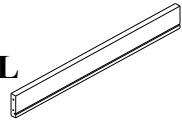

1PC

M


LEFT RAIL

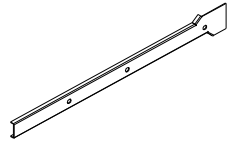

1PC

O


**DRAWER LEFT
KEYBOARD RAIL**

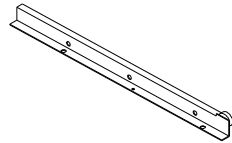

1PC

Q


LEG

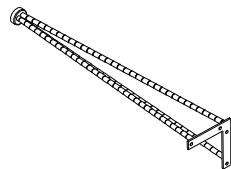

4PCS

L


**DRAWER RIGHT
KEYBOARD RAIL**

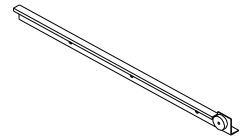

1PC

N


RIGHT RAIL

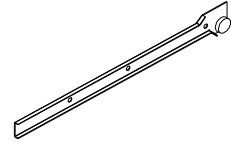

1PC

P

FRAME

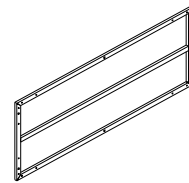


1PC


HARDWARE PACKAGE

Z	DESCRIPTION	FIGURE	Q'TY
1	CAM BOLT (38mm)		10PCS
2	CAM LOCK (φ 15mm)		10PCS
3	LARGE WOOD DOWEL (8x30mm)		11PCS
4	SMALL WOOD DOWEL (6x30mm)		2PCS
5	LONG BOLT (1/4"x22mm)		6PCS
6	SHORT BOLT (1/4"x12mm)		16PCS
7	LONG SCREW (φ 8x38mm)		19PCS
8	SHORT SCREW (φ 6x38mm)		12PCS
9	GLUE		1PC
10	ALLEN WRENCH (4mm)		1PC


STEP 1

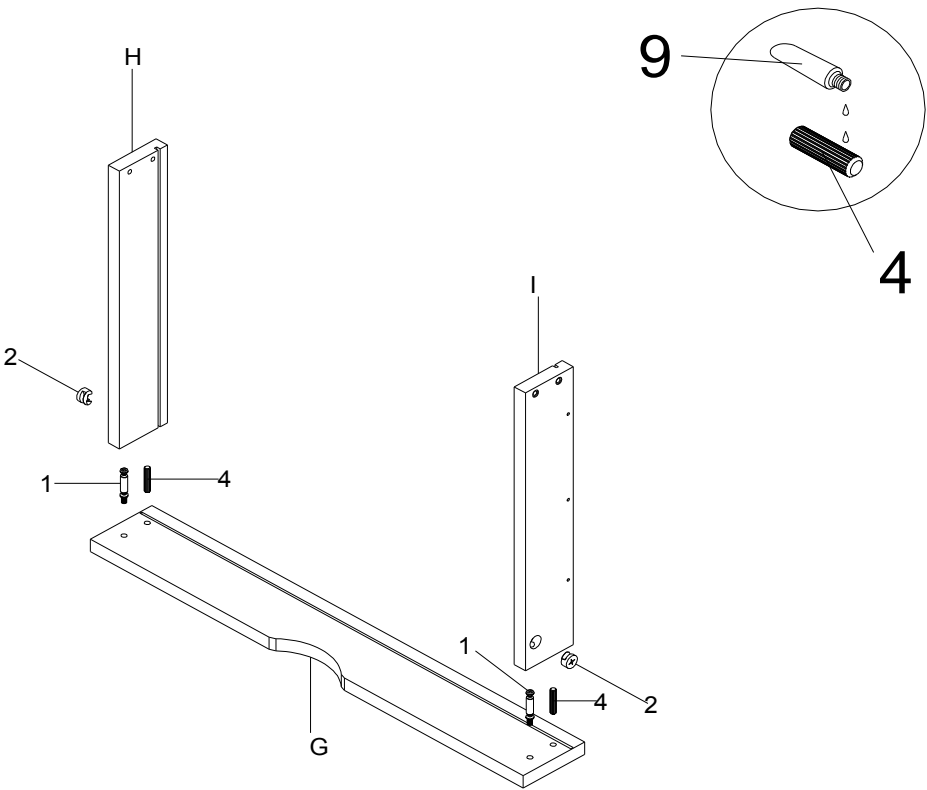


STEP 2

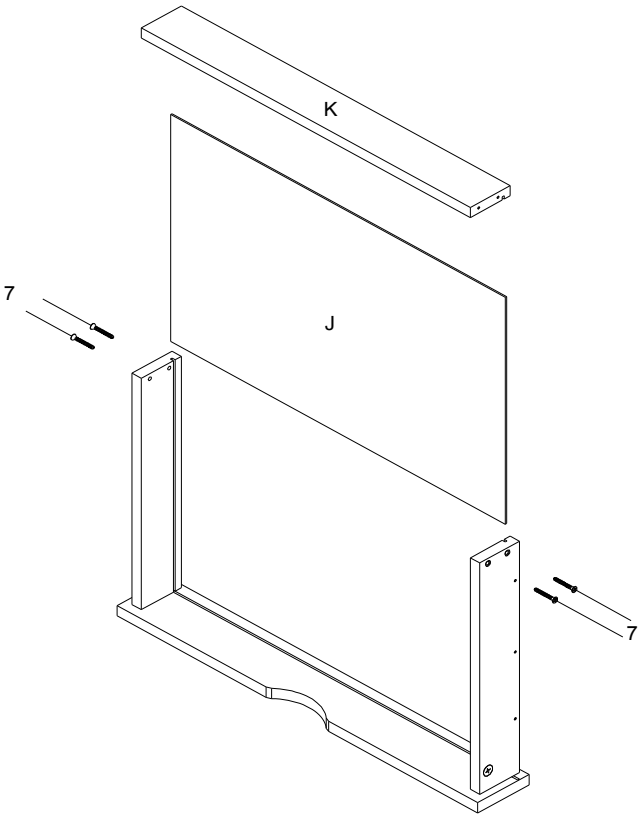


STEP 3

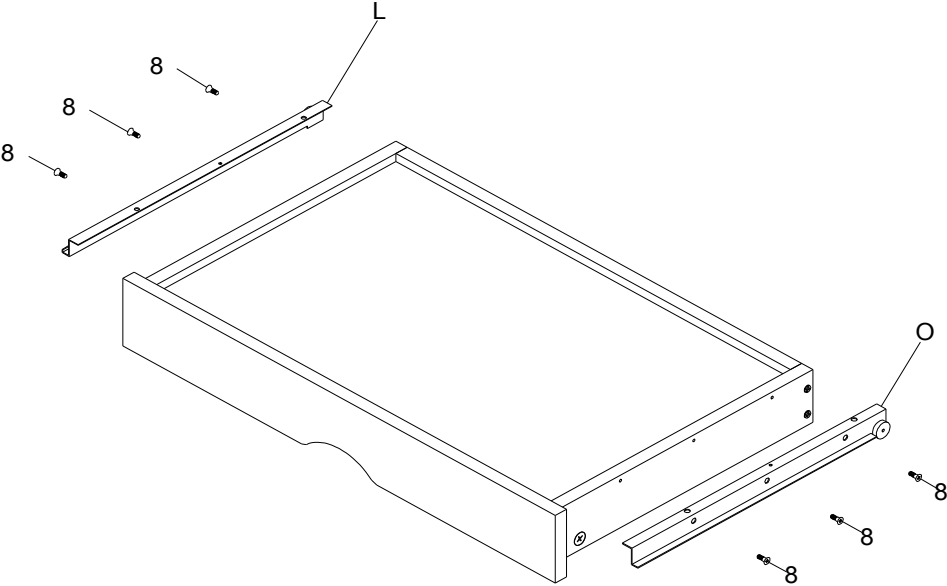


STEP 4

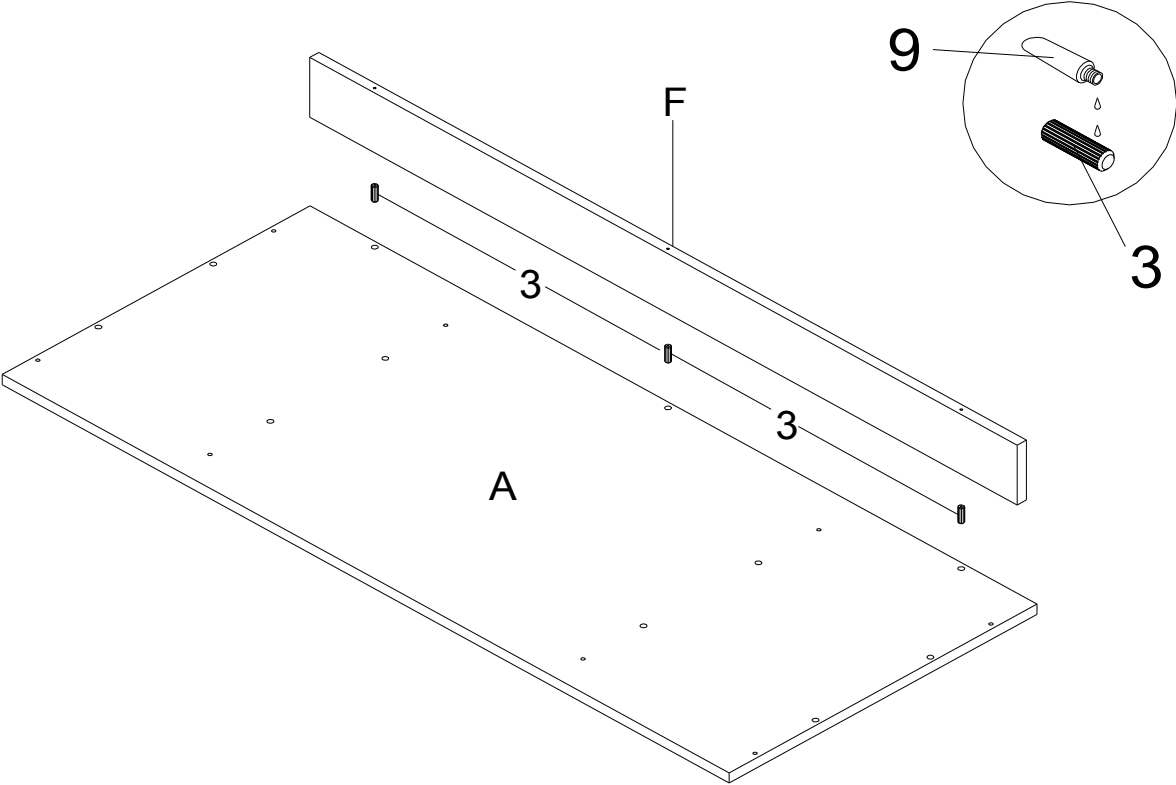


STEP 5

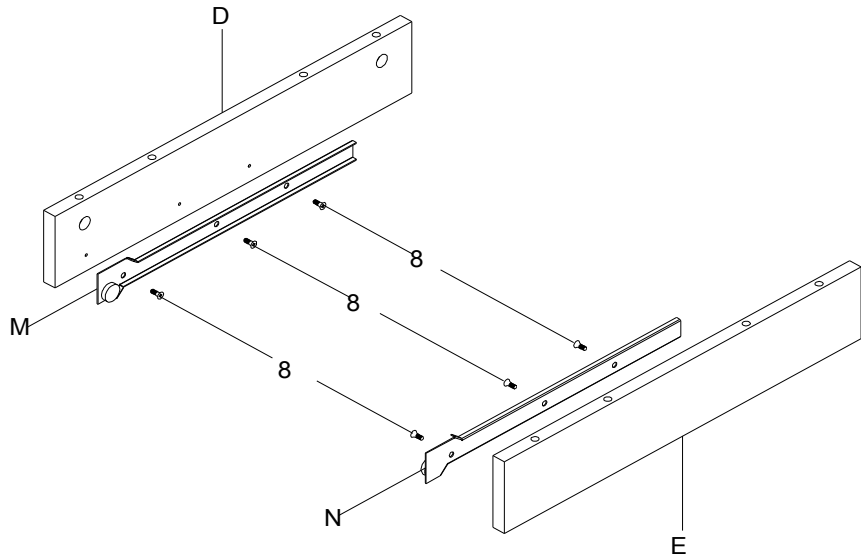


STEP 6

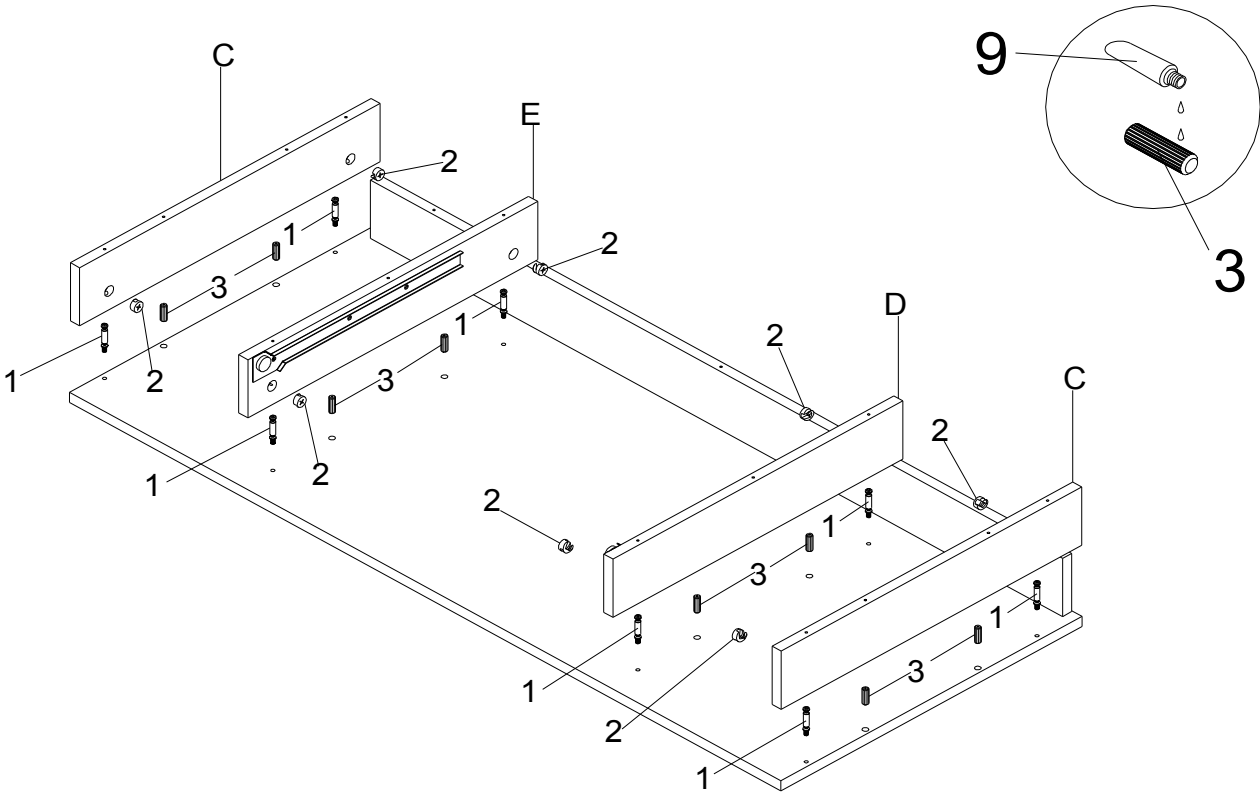


STEP 7

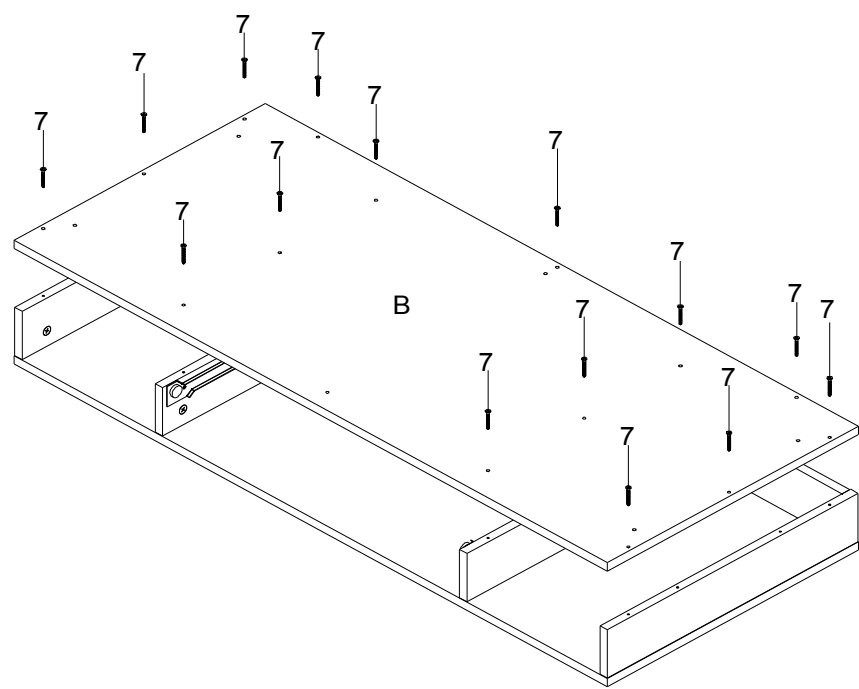

STEP 8

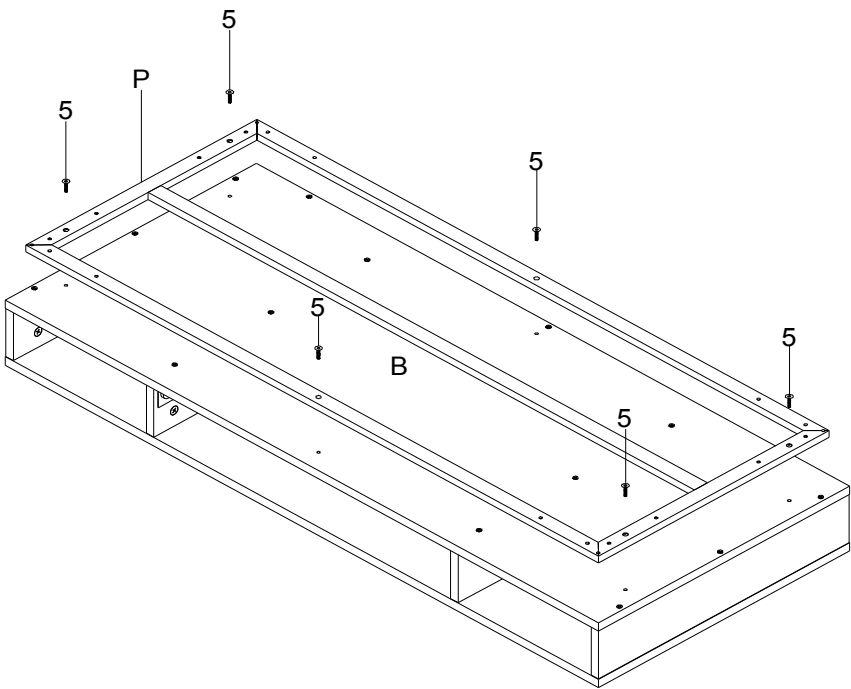

STEP 9

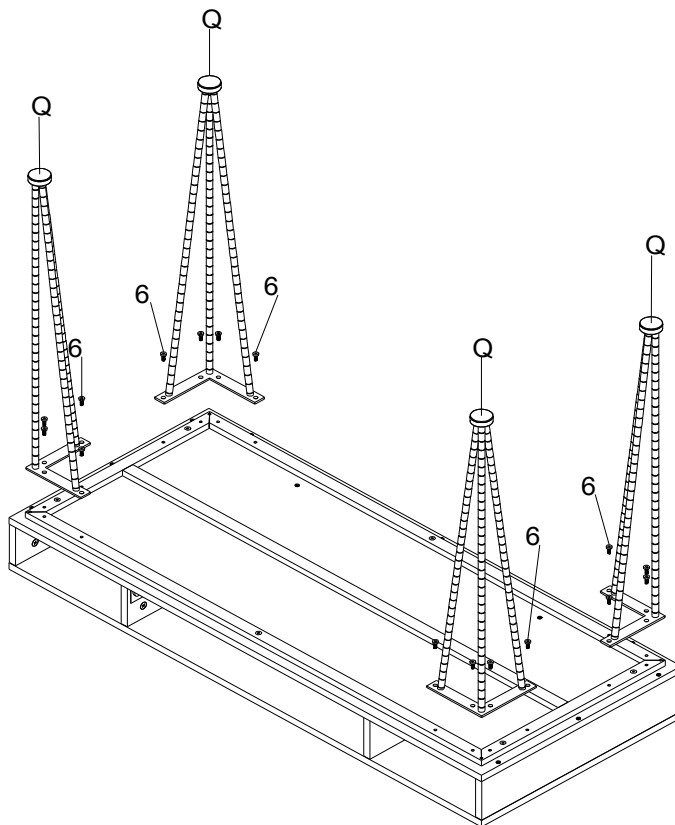

FINISH

