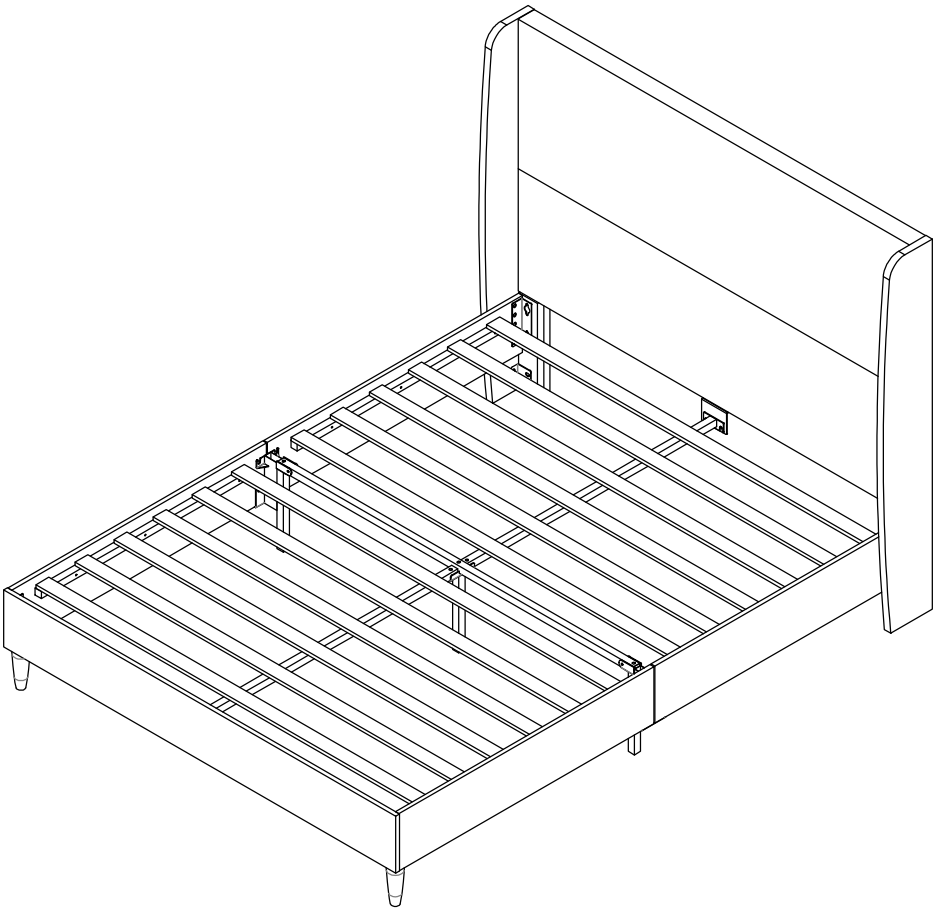
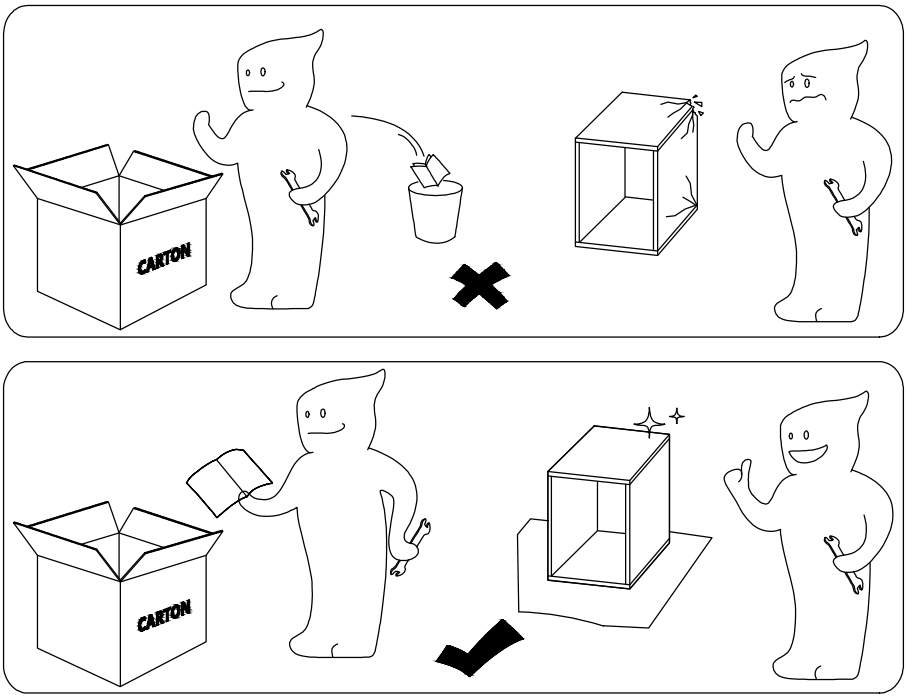
Upholstered Platform Bed with Tufted Wingback Headboard.



Dear Customers,
Thank you for purchasing our product. Please read this instruction manual carefully after receiving this product. It will help you assemble this product quickly, safely and correctly. You can keep this manual for future reference.

IMPORTANT

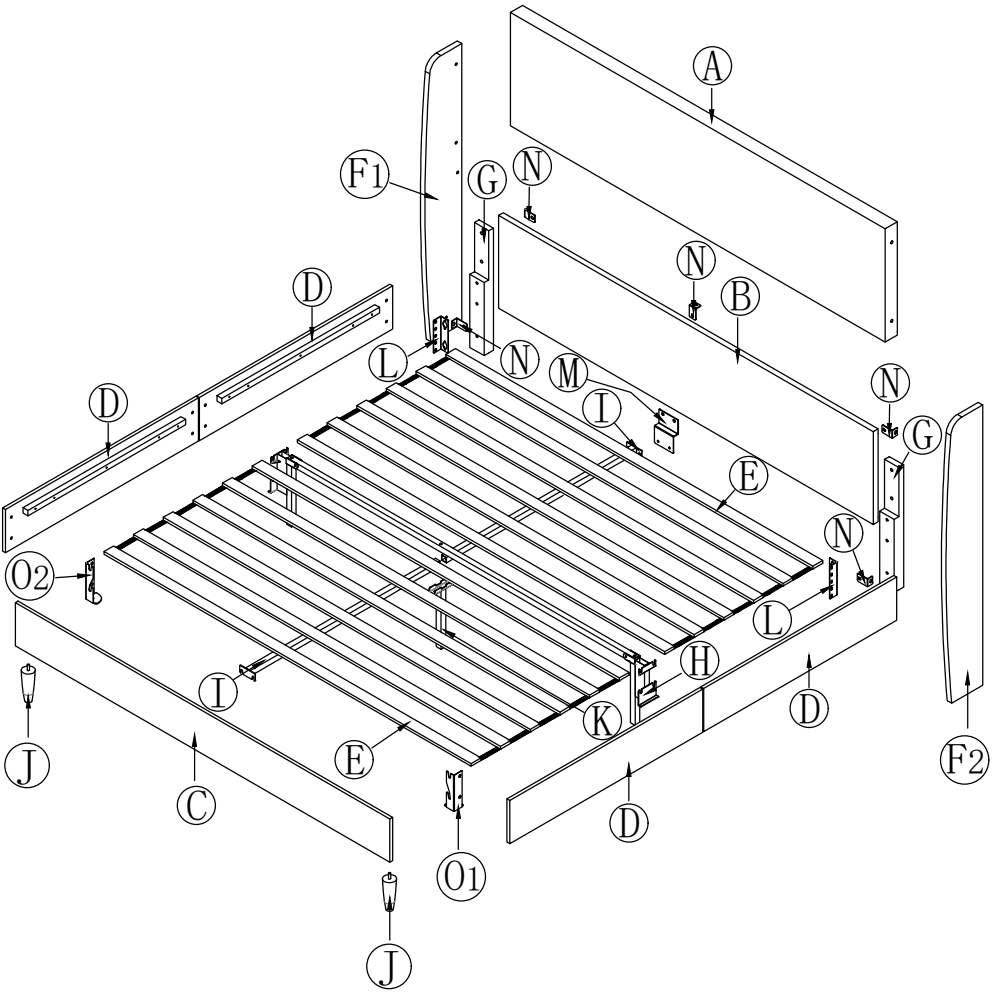
Please follow the instruction manuals and use a pad to protect the product during your assembly.



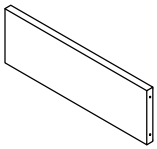
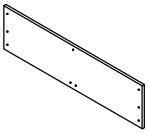


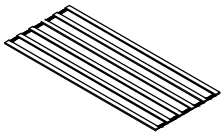
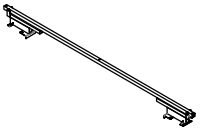






Note:
1.Should be assembled on flat ground to keep balance.
2.Before completing the installation,do not tighten the screws.




For easier and better assembly, 2 or more adults are required.


A
F1
G
N
N
B
D
L
N
M
I
N
G
D
E
O2
N
L
H
I
K
D
J
E
F2
C
O1
D
J

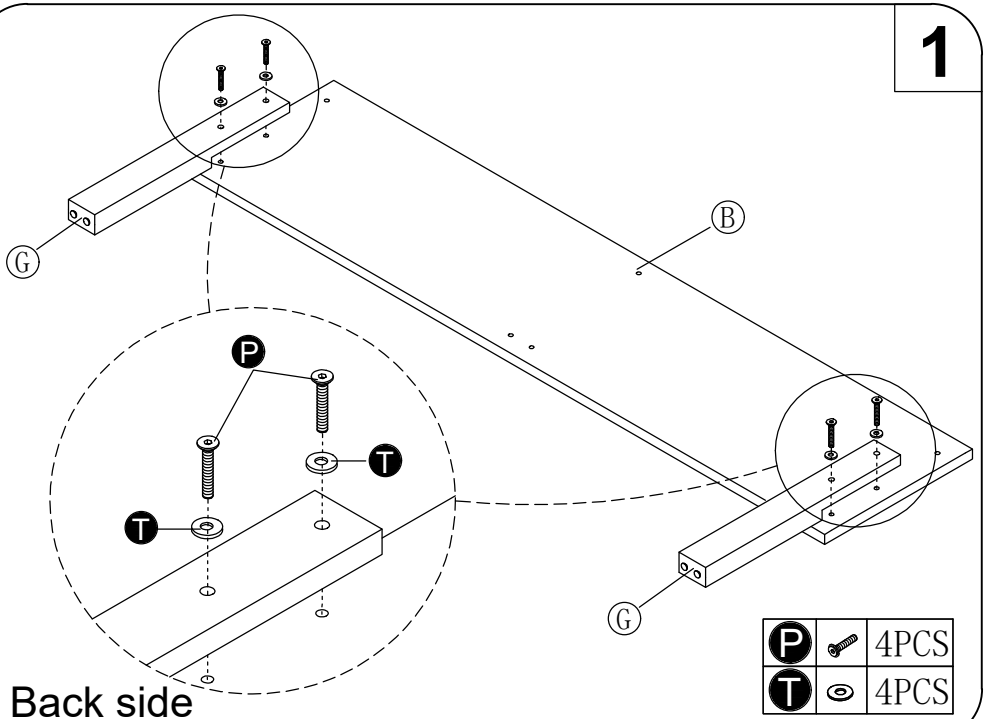
Part list

A 1PC	B 1PC	C 1PC	D 4PCS
			
Top headboard	Bottom headboard	Footboard	side rail
E 2PCS	F1 1PC	F2 1PC	G 2PCS
			
Slat	Left wing	Right wing	Bedside foot
H 1PC	I 2PCS	J 2PCS	K 1PC
			
Cross bar	Middle support bar	Wooden leg	Support leg
L 2PCS	M 1PC	N 5PCS	01 1PC	02 1PC
				
Connector	Bedside iron sheet	Connector	Right Corner Code	Left Corner Code

Hardware list

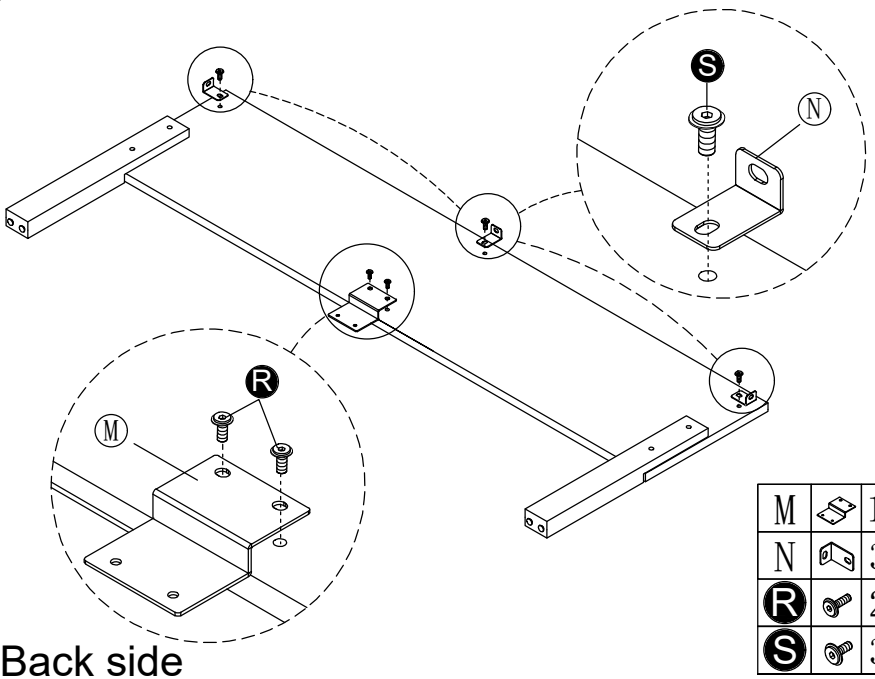
P	Q	R	S	T	U
					
M8*50 5PCS	M8*40 8PCS	M8*25 6PCS	M8*18 28PCS	ϕ22*ϕ8.5 8PCS	M8 Spanner 1PC

1

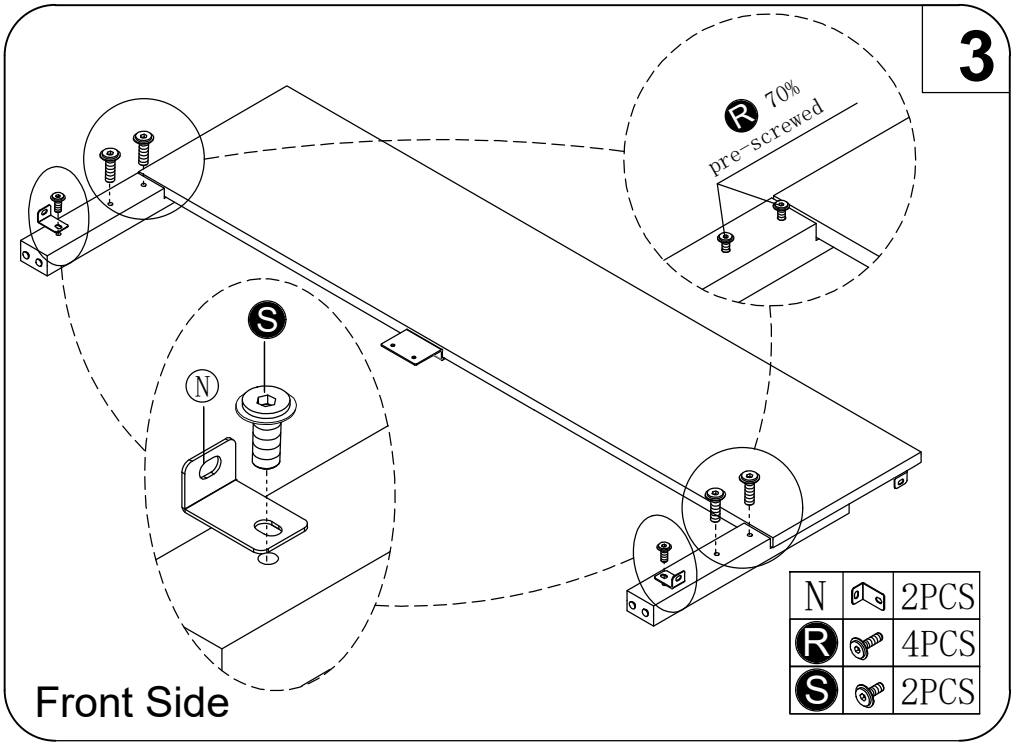


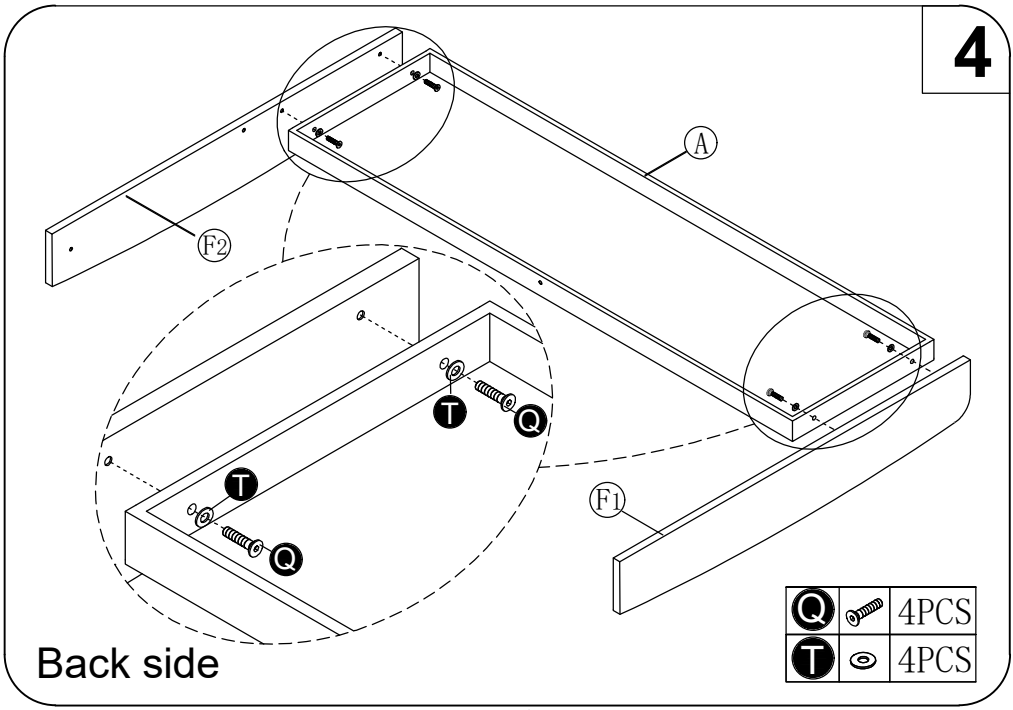
P		4PCS
T		4PCS

2

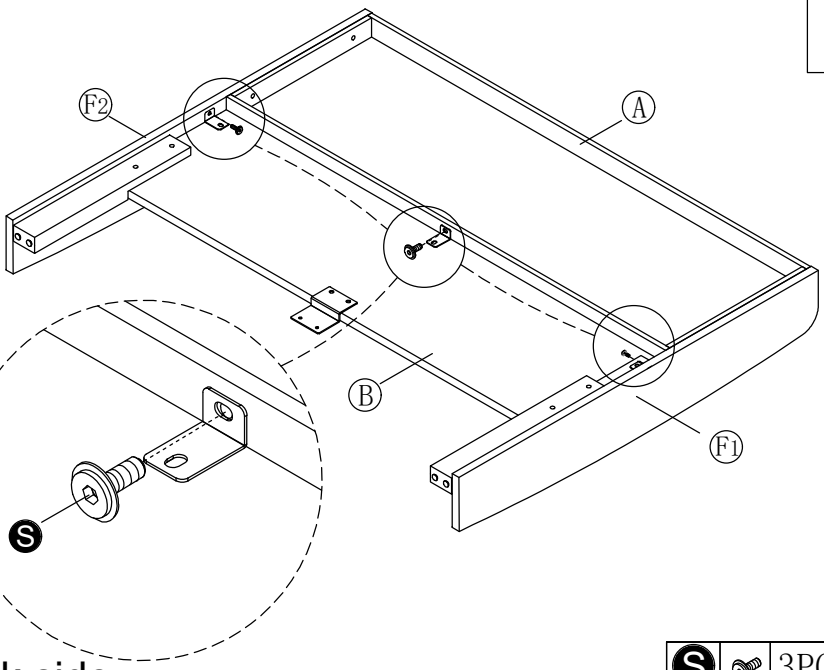


M		1PC
N		3PCS
R		2PCS
S		3PCS


3
R 70% pre-screwed
S
N
N 2PCS
R 4PCS
S 2PCS
Front Side


4
A
F2
F1
T
Q
T
Q
Q 4PCS
T 4PCS
Back side

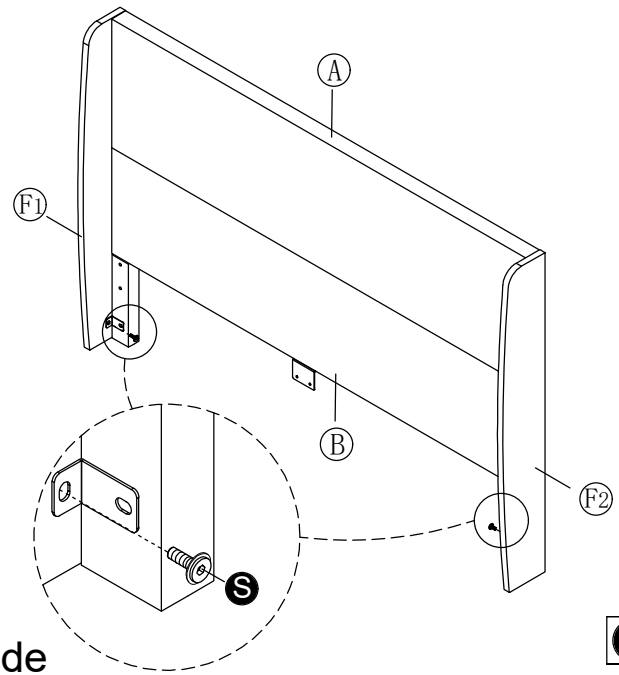
5



Back side

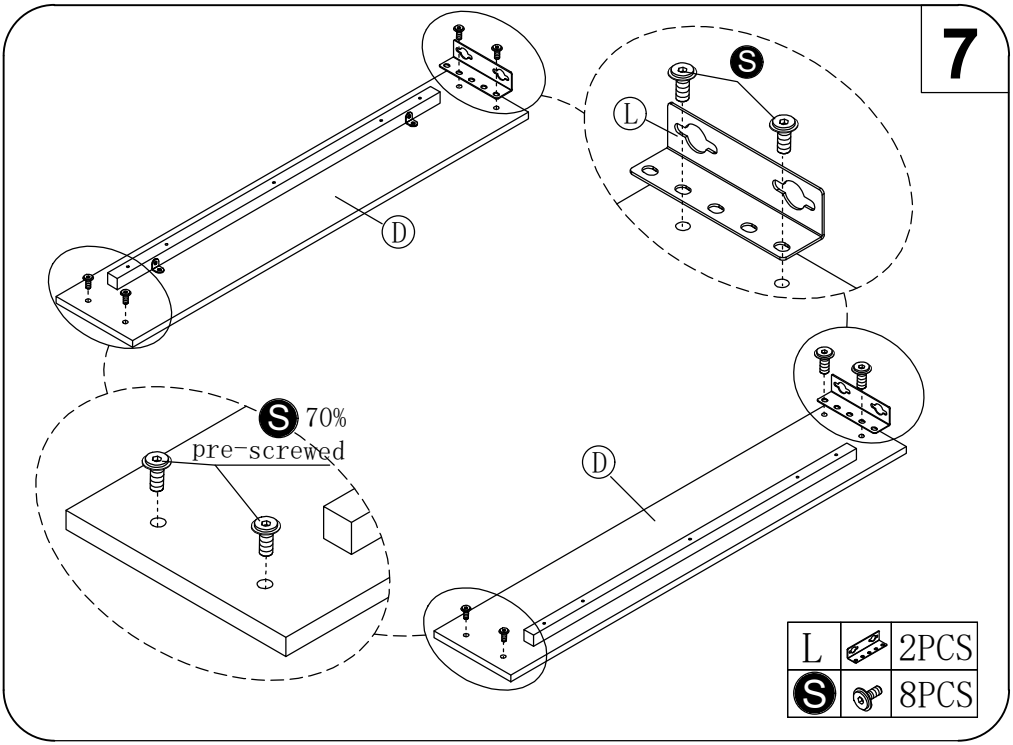
S 3PCS

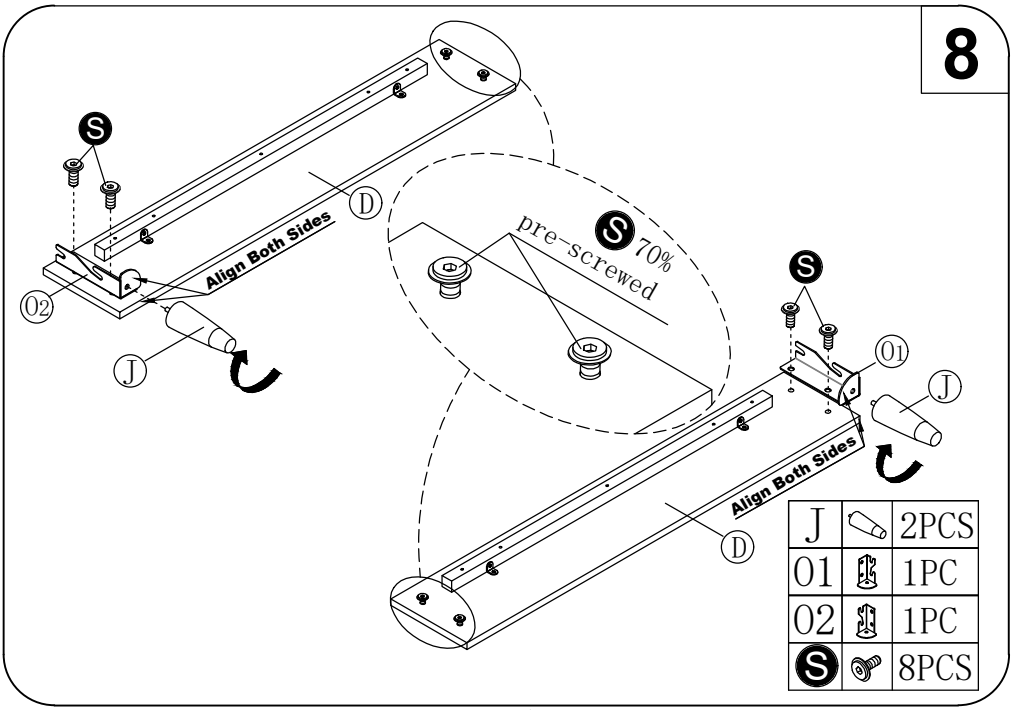
6



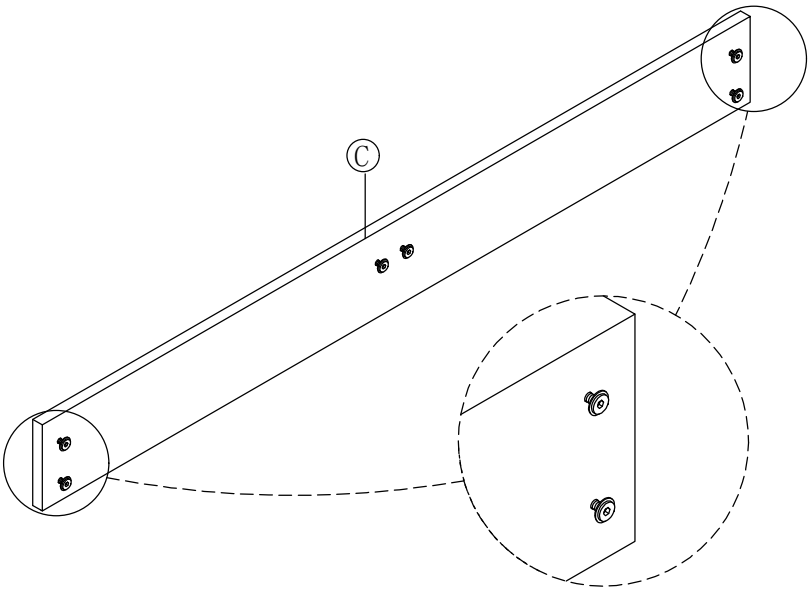
Front Side

S 2PCS


7
S
L
D
S 70%
pre-screwed
D
L 2PCS
S 8PCS

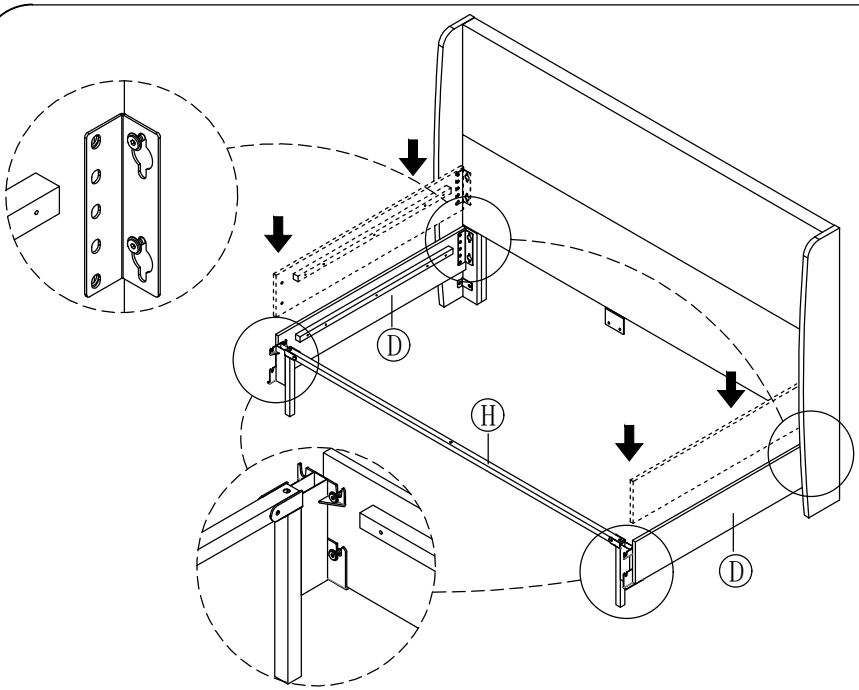

8
S
D
Align Both Sides
02
J
S 70%
pre-screwed
S
01
J
Align Both Sides
D
J 2PCS
01 1PC
02 1PC
S 8PCS

9

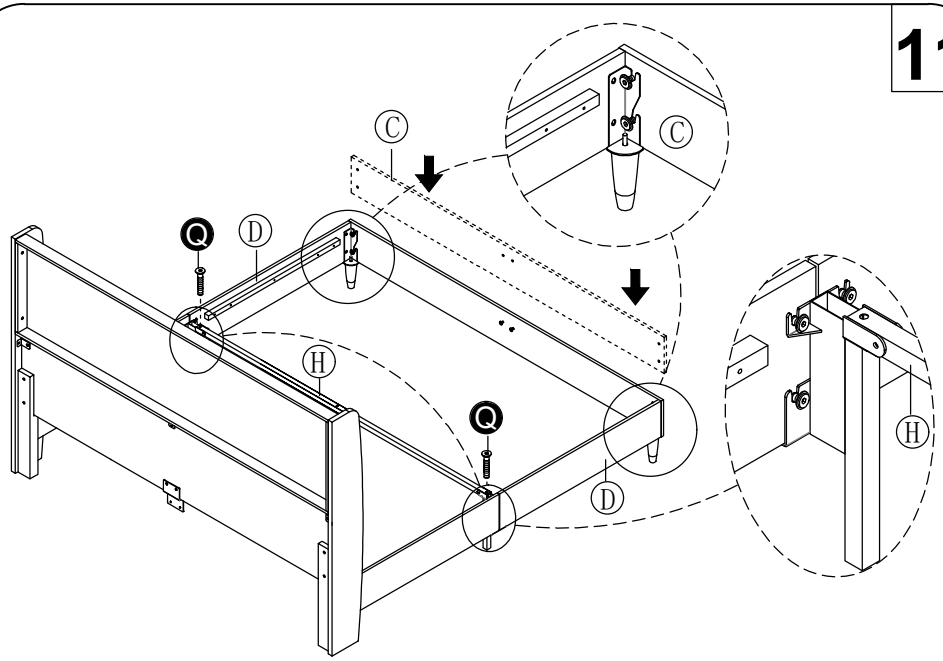


Loosen but don't remove the pre-installed screws.

10

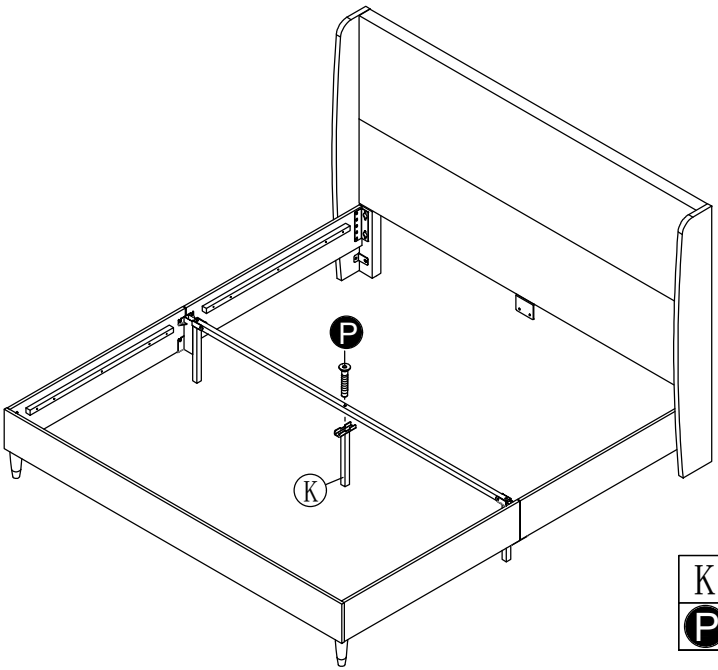


11



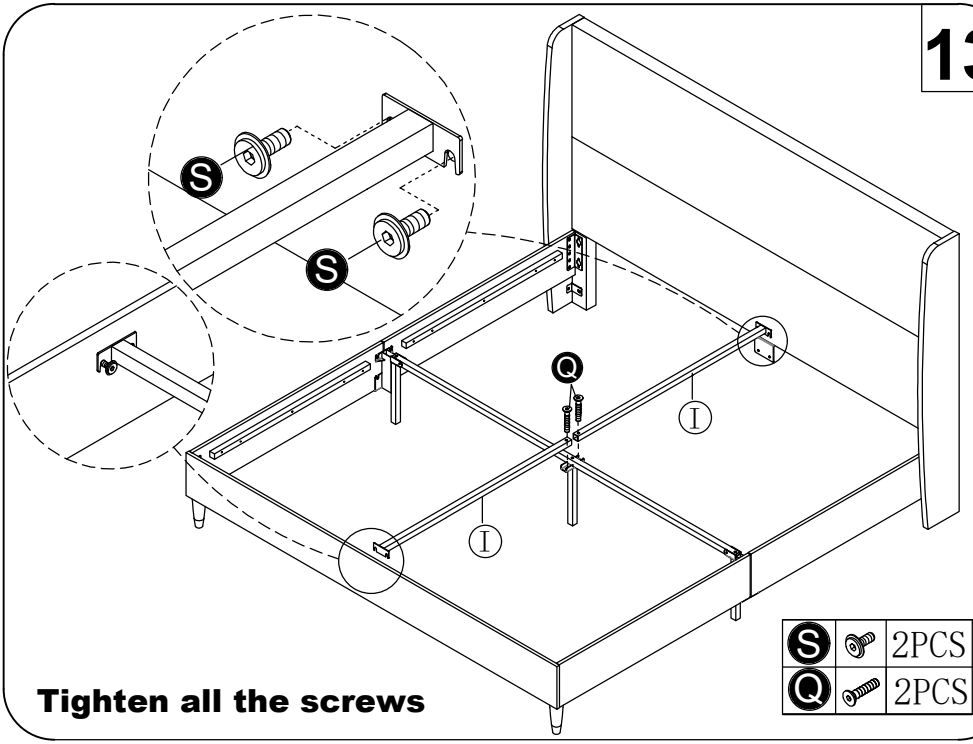
Q		2PCS

12



K		1PC
P		1PC

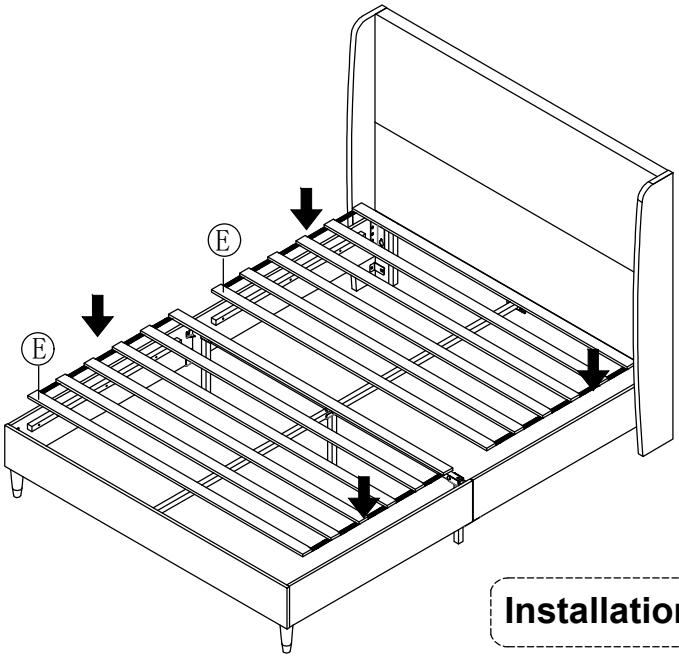
13



S		2PCS
Q		2PCS

Tighten all the screws

14



Installation Complete